



Engine Room Main Wire
Engine Wire
Sensor Wire
C2
C1
A1
A3
Engine No.2 Wire
A4
A2
Skid Control Sensor Wire
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine Room No.4 Wire
Winch Control Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable



(*6)
(*5)
C8
C18
C10
C20
C39
C24
C31
C20
C36
C17
C35
C37
C38
C21
C34
C12
C23
C11
C19
C45
C43
C42
C44
C9
C6
C22
C4
C2
C14
C13
C15
C30
C29
C7
C32
C5
C27
C26
C25
C3
C28
C1
C16
C33
* 5:A/T
* 6:M/T

C 1 Crankshaft Position Sensor
C 2 Mass Air Flow Meter
C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 5 Fuel Injector Assembly No.1
C 6 Ignition Coil Assembly No.3
C 7 Fuel Injector Assembly No.3
C 8 Ignition Coil Assembly No.5
C 9 Fuel Injector Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 12 Fuel Injector Assembly No.6
C 13 Ignition Coil Assembly No.4
C 14 Fuel Injector Assembly No.4
C 15 Ignition Coil Assembly No.2
C 16 Fuel Injector Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 19 Purge VSV
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 21 Oxygen Sensor (Bank 2 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 25 VVT Sensor (Bank 2)
C 26 VVT Sensor (Bank 1)
C 27 Camshaft Timing Oil Control Valve (Bank 1)
C 28 Camshaft Timing Oil Control Valve (Bank 2)
C 29 Power Steering Oil Pressure Switch
C 30 Cooler Compressor Assembly
C 31 VSV (ACIS)
C 32 Engine Oil Level Sensor
C 33 Oil Pressure Sender Gage Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 39 Back-Up Light Switch Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 45 ECM


C 1
Black

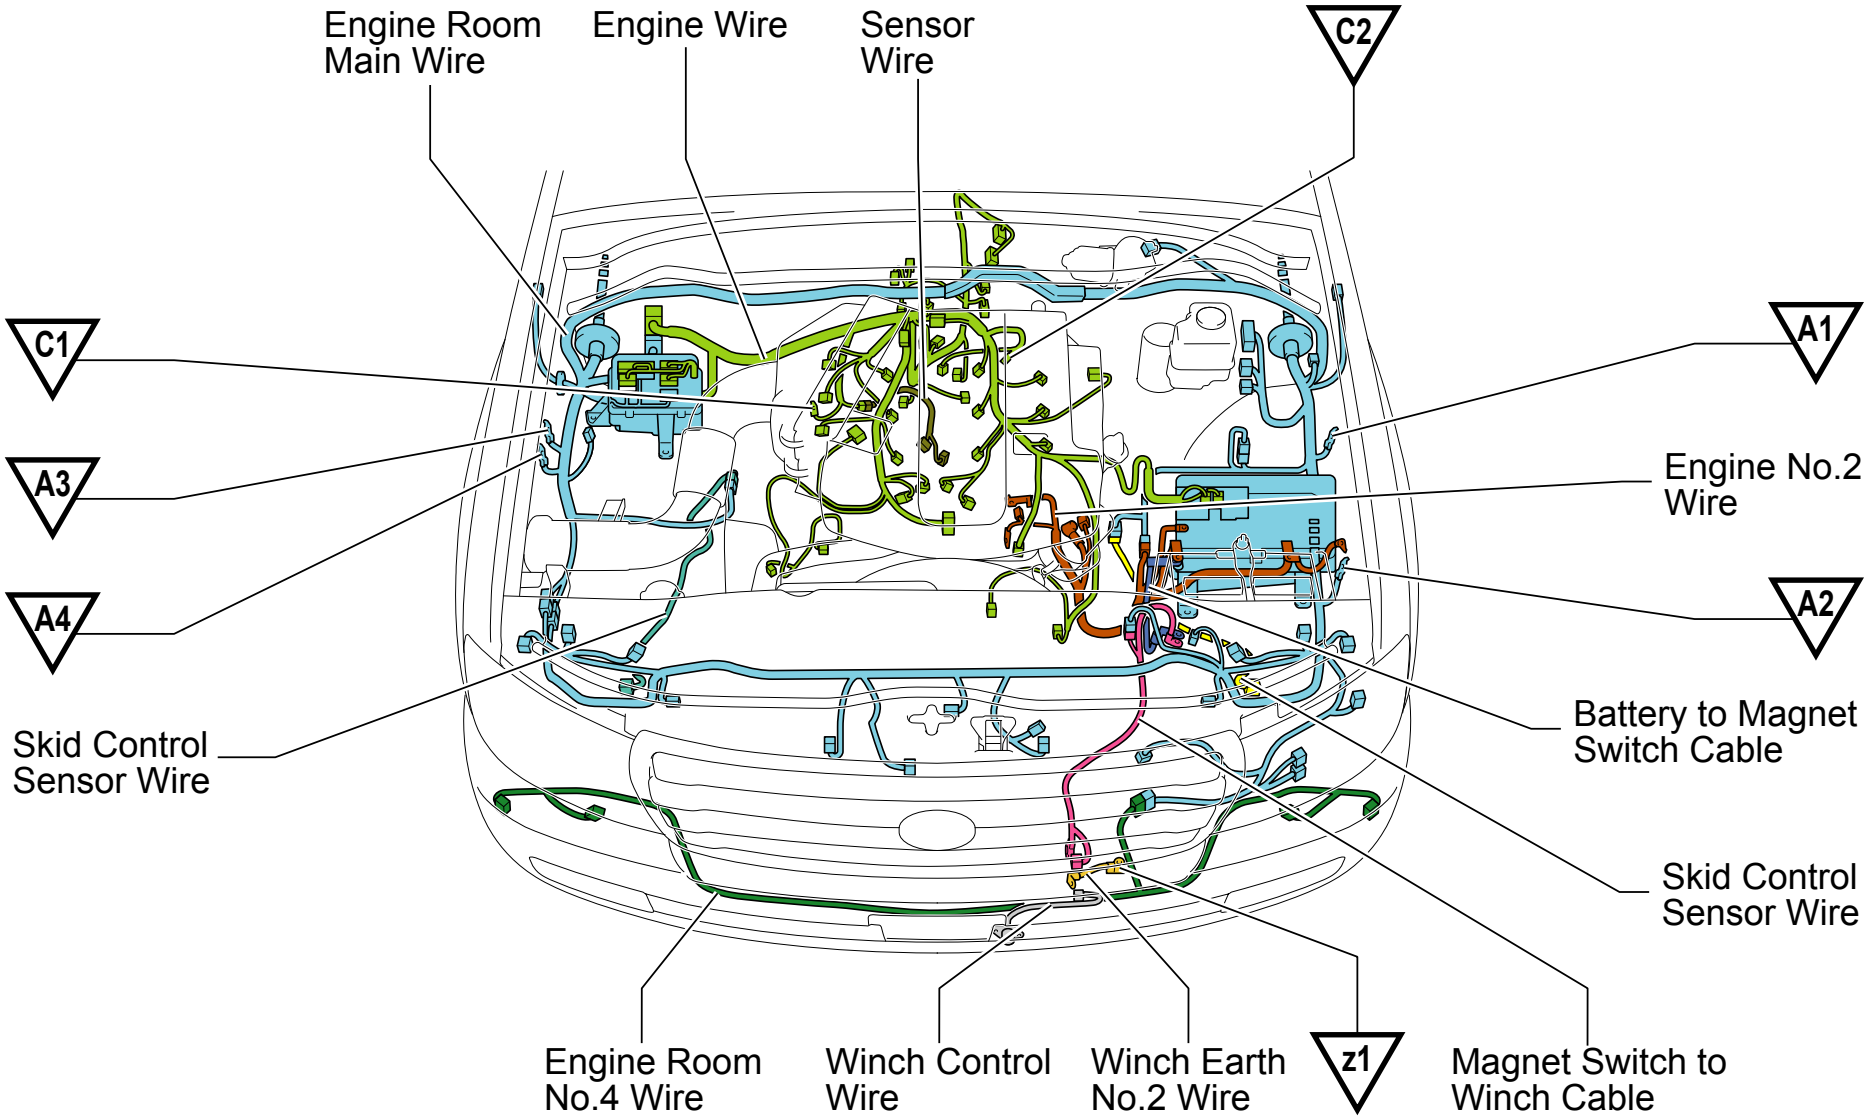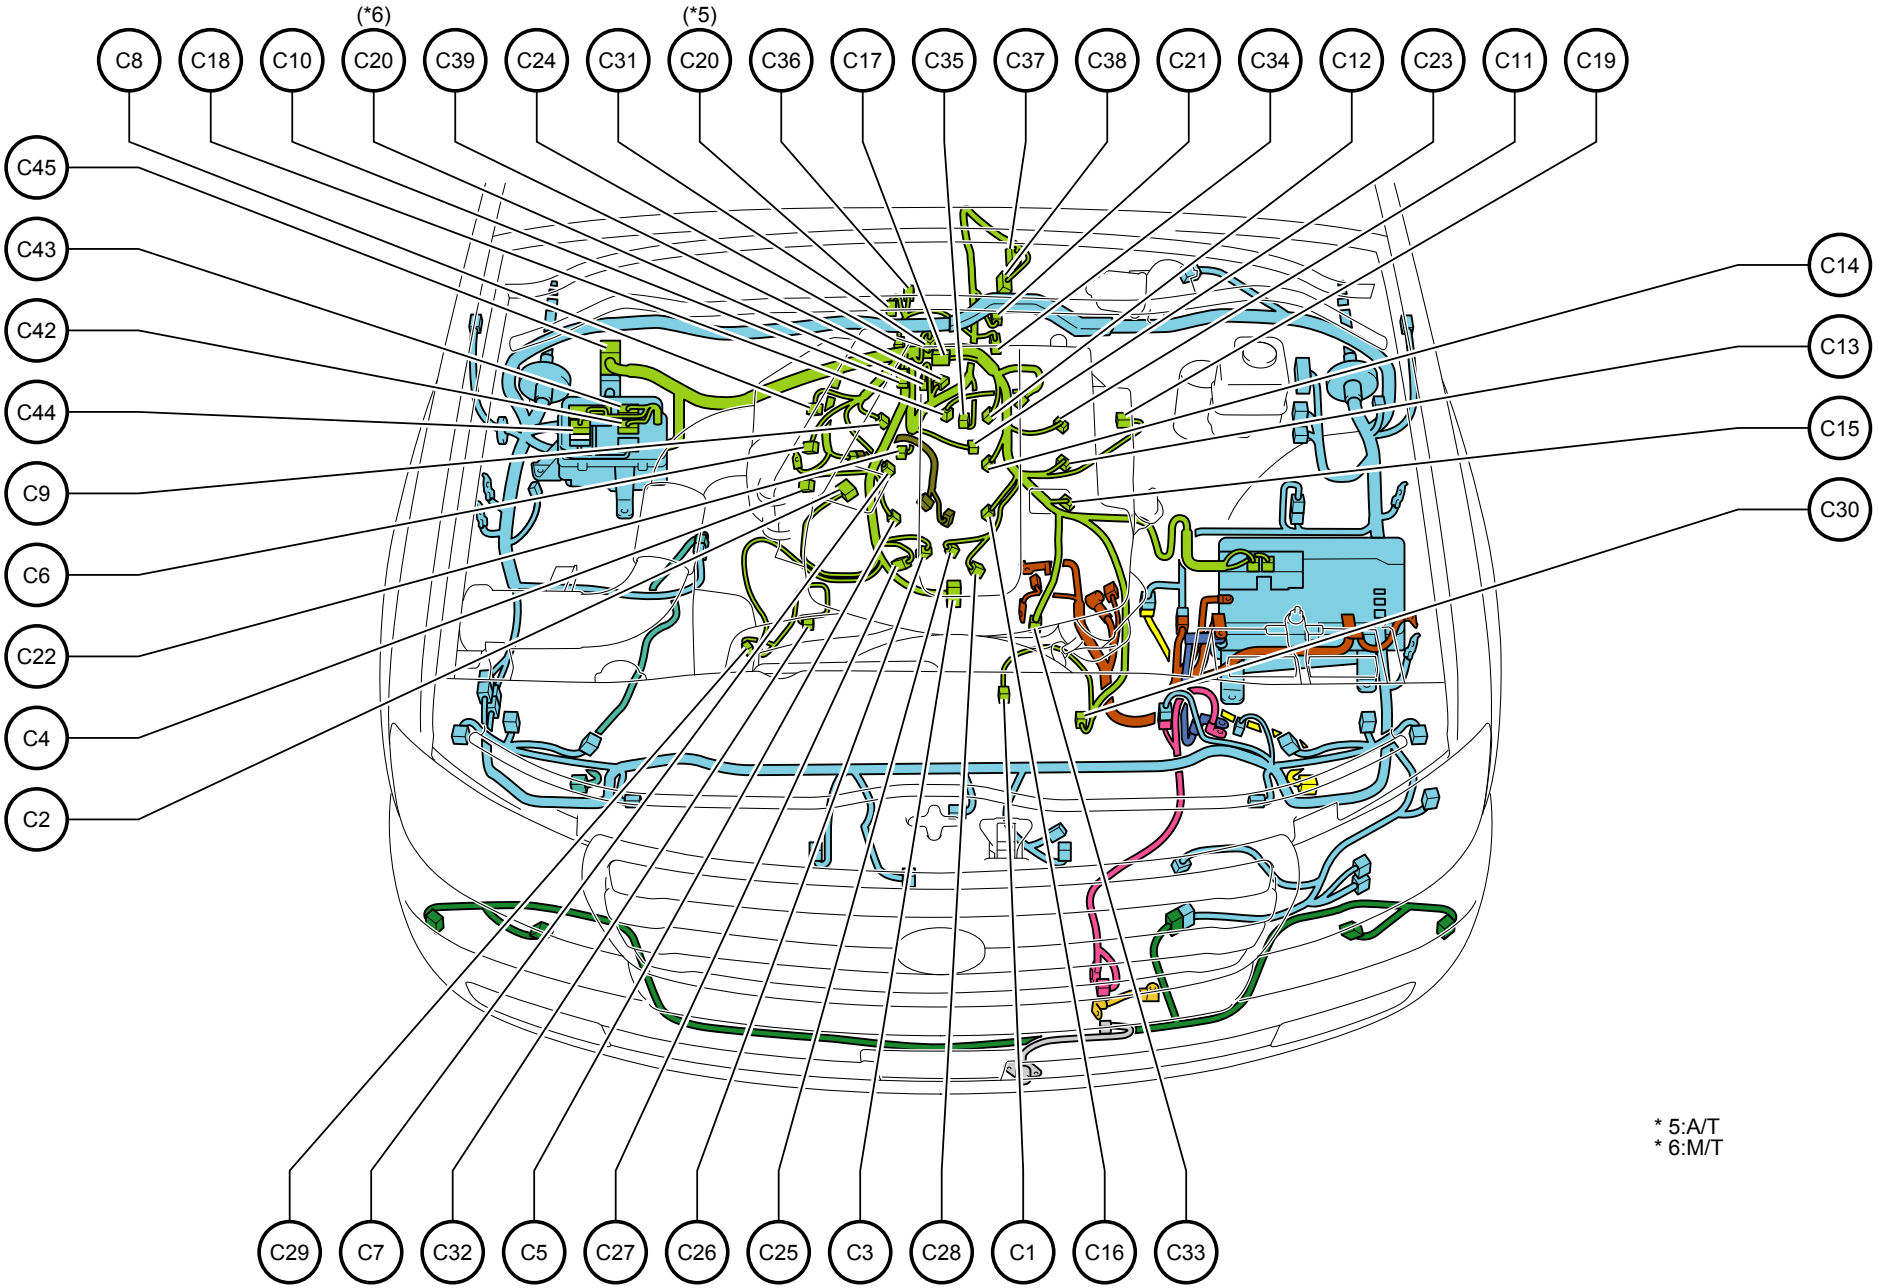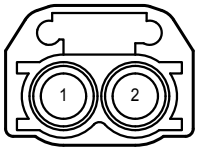


C 2
Black

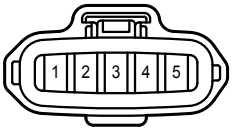


C 3
Black

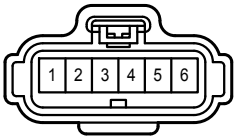


C 4
Black




C 5
Gray

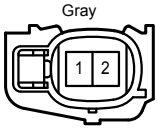


C 6
Black




C 7
Gray

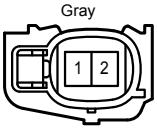

C 8
Black




C 9
Gray




C 10
Gray




C 11
Black




C 12
Gray




C 13
Black




C 14
Gray

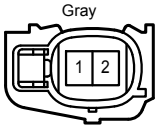

C 15
Black



C 16
Gray

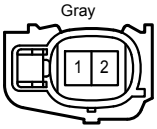


C 17
Gray



C 18
Dark Gray



C 19
Gray

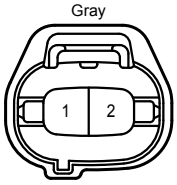

C 20
Dark Gray



C 21
Dark Gray




C 22
Dark Gray




C 23
Dark Gray




C 24
Gray

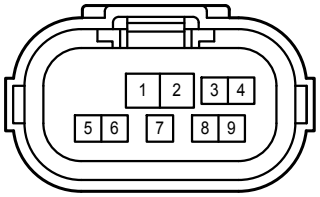

C 25
Black

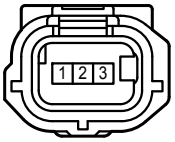

C 26
Black

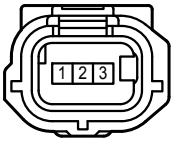

C 27
Black



C 28
Black




C 29
Black



C 30
Gray




C 31
Brown

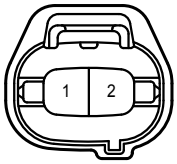


C 32
Gray




C 33
Black

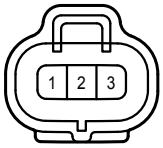


C 34
Gray

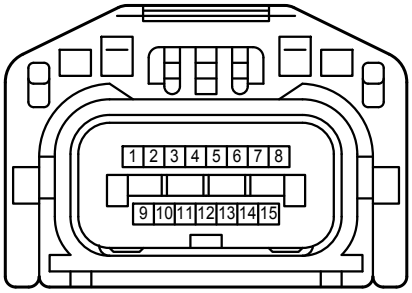


C 35
Black

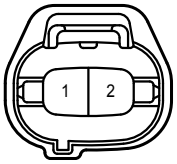


C 36
Black

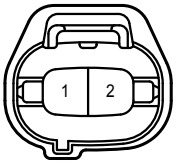


C 37
Black

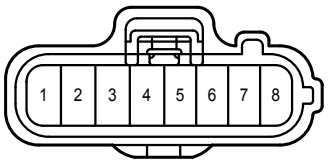


C 38
Dark Gray

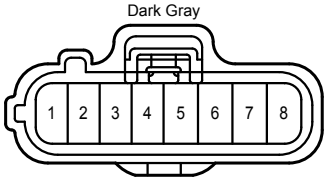


C 39
Gray

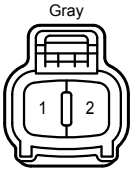


C 42
White

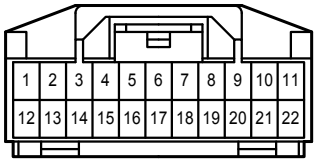


C 43
White

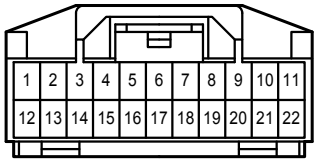


C 44
Blue

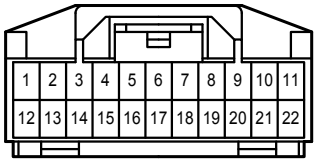

C 45
Black

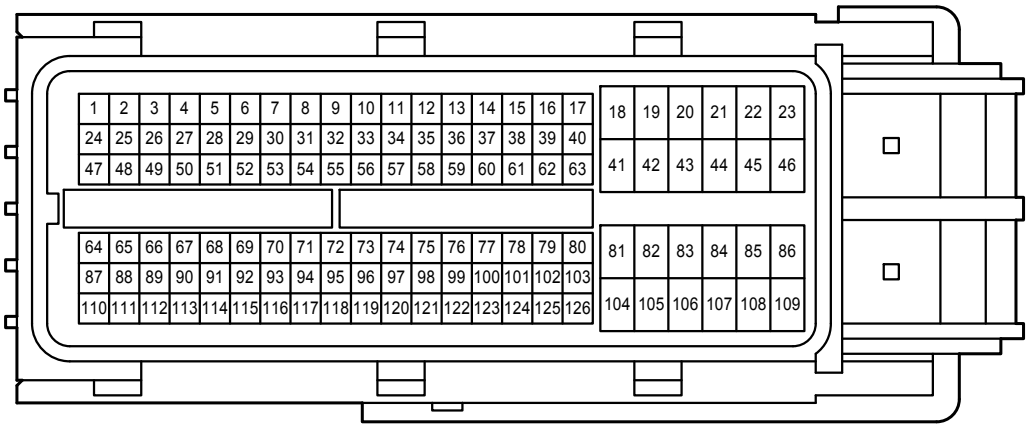

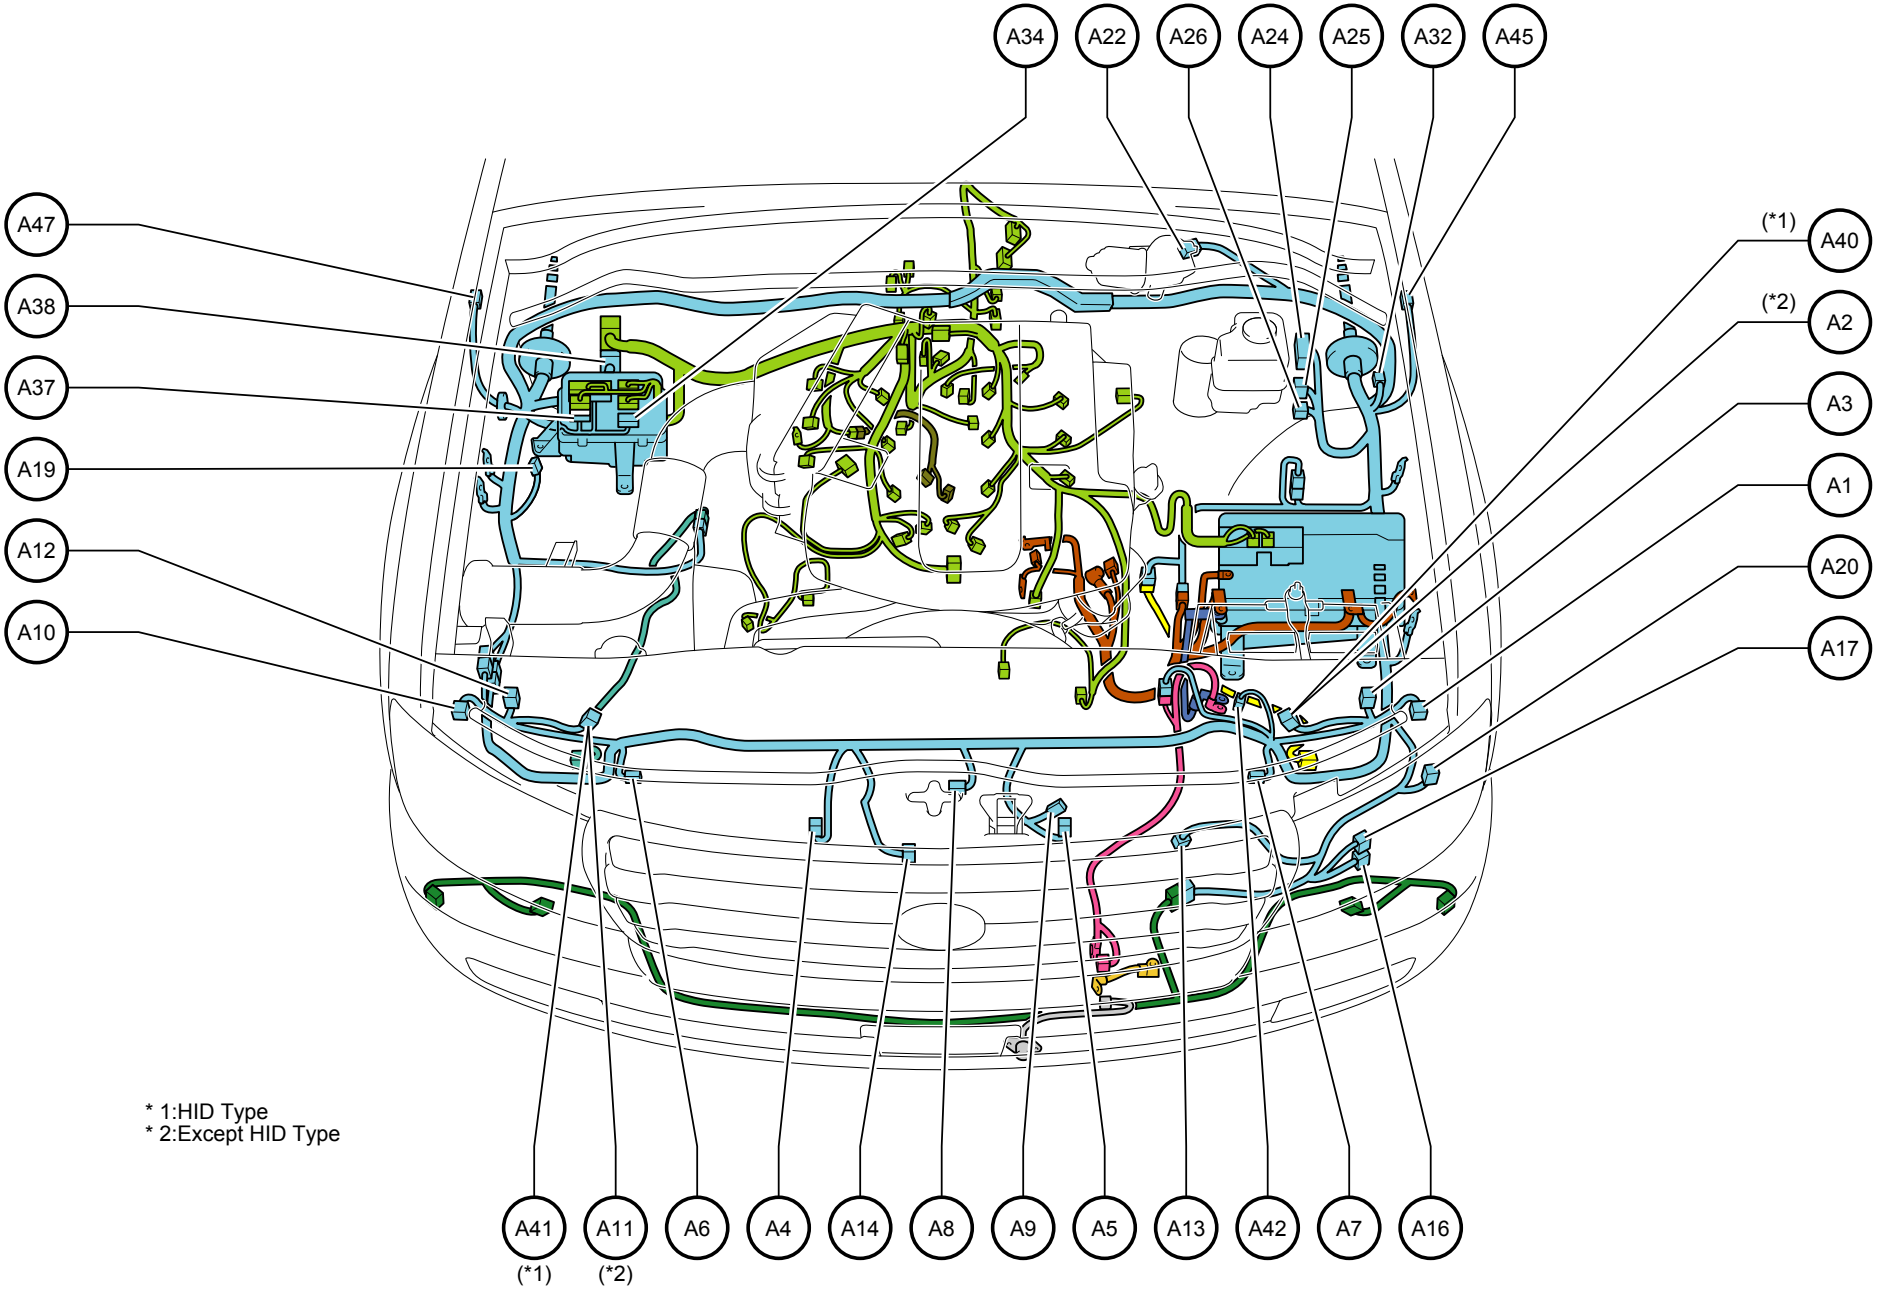


* 1:HID Type
* 2:Except HID Type

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 17 Headlight Cleaner Control Relay and Motor
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 38 ECM
A 40 Headlight Assembly LH
A 41 Headlight Assembly RH
A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH


A 1
Gray



A 2
Black

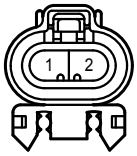

A 3
Black

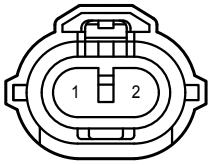

A 4
Black



A 5
Black



A 6
Yellow



A 7
Yellow



A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

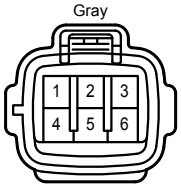


A 11
Black

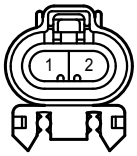

A 12
Black

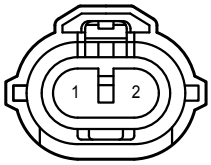


A 13
Black

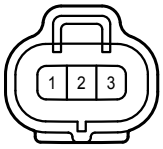

A 14
Black




A 16
Gray

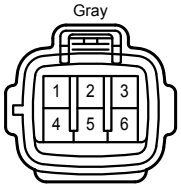

A 17
Black



A 19
Black




A 20
Black




A 22
Black




A 24
Black

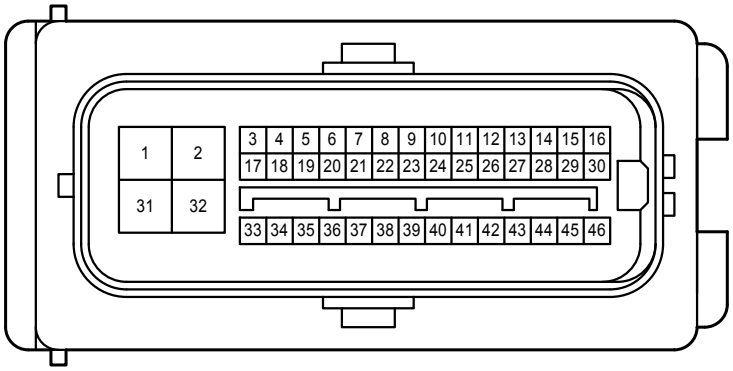


A 25
Black

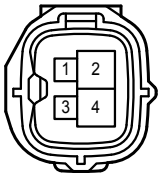


A 26
Gray

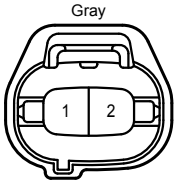


A 32
Black

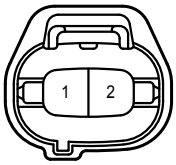


A 34
White

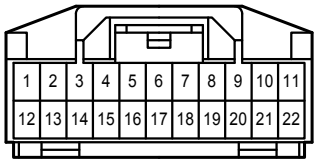

A 37
Blue

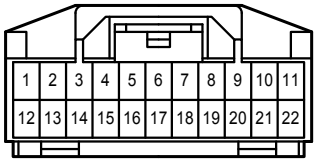

A 38
Black

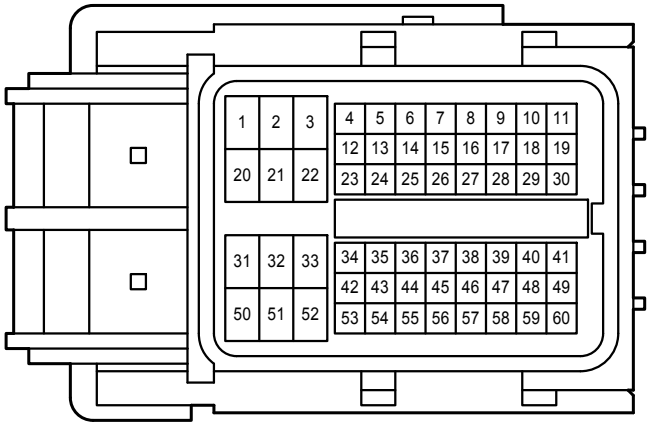


A 40
Gray



A 41
Gray



A 42
Black

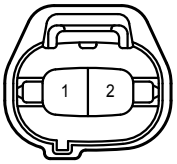


A 45
Gray



A 47
Gray

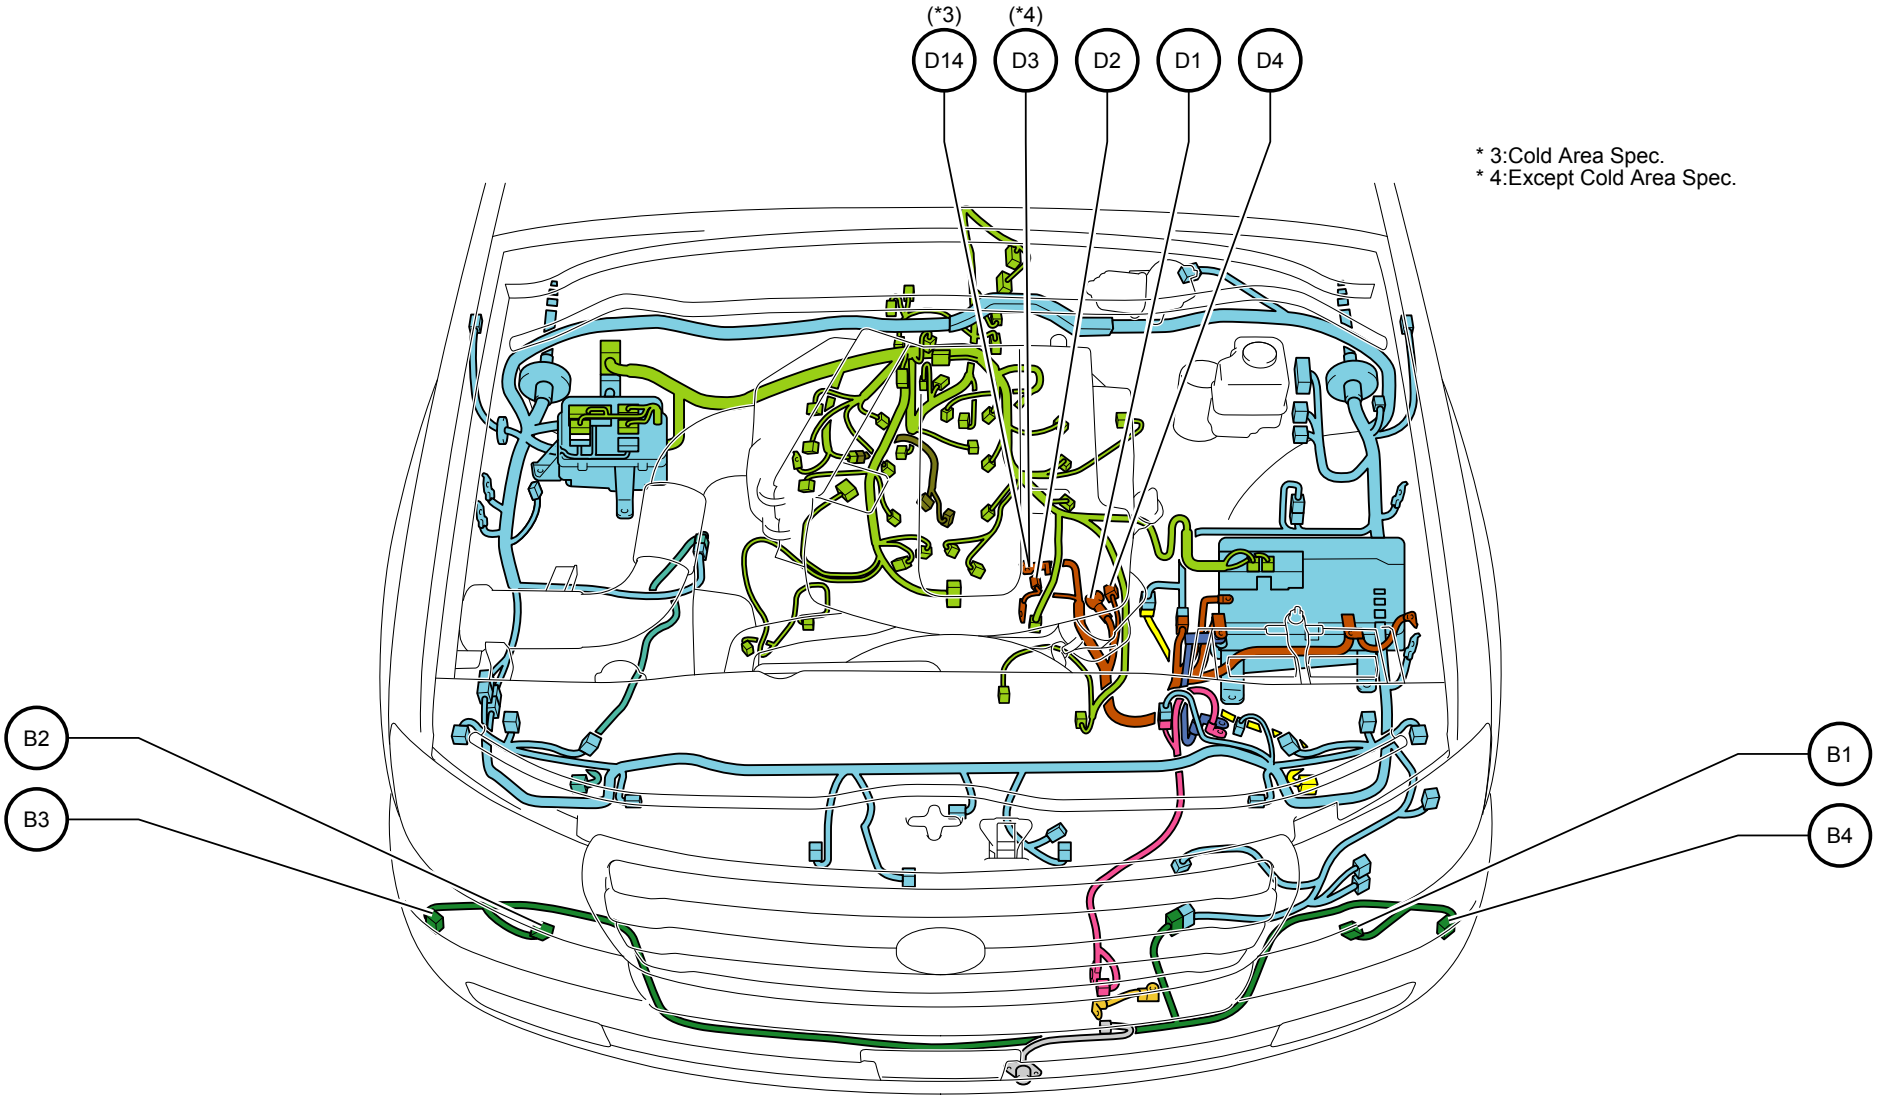



(*3)
(*4)
D14
D3
D2
D1
D4
* 3:Cold Area Spec.
* 4:Except Cold Area Spec.
B2
B3
B1
B4


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH

D 1 Generator Assembly
D 2 Starter Assembly
D 3 Starter Assembly
D 4 Generator Assembly
D 14 Starter Assembly


B 1
Brown

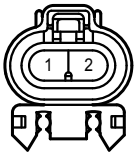


B 2
Brown

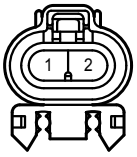


B 3
Black

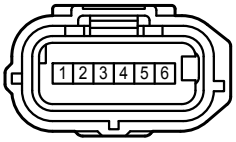

B 4
Black

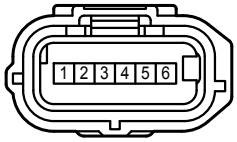


D 1



D 2
Black




D 3




D 4
Black



D 14




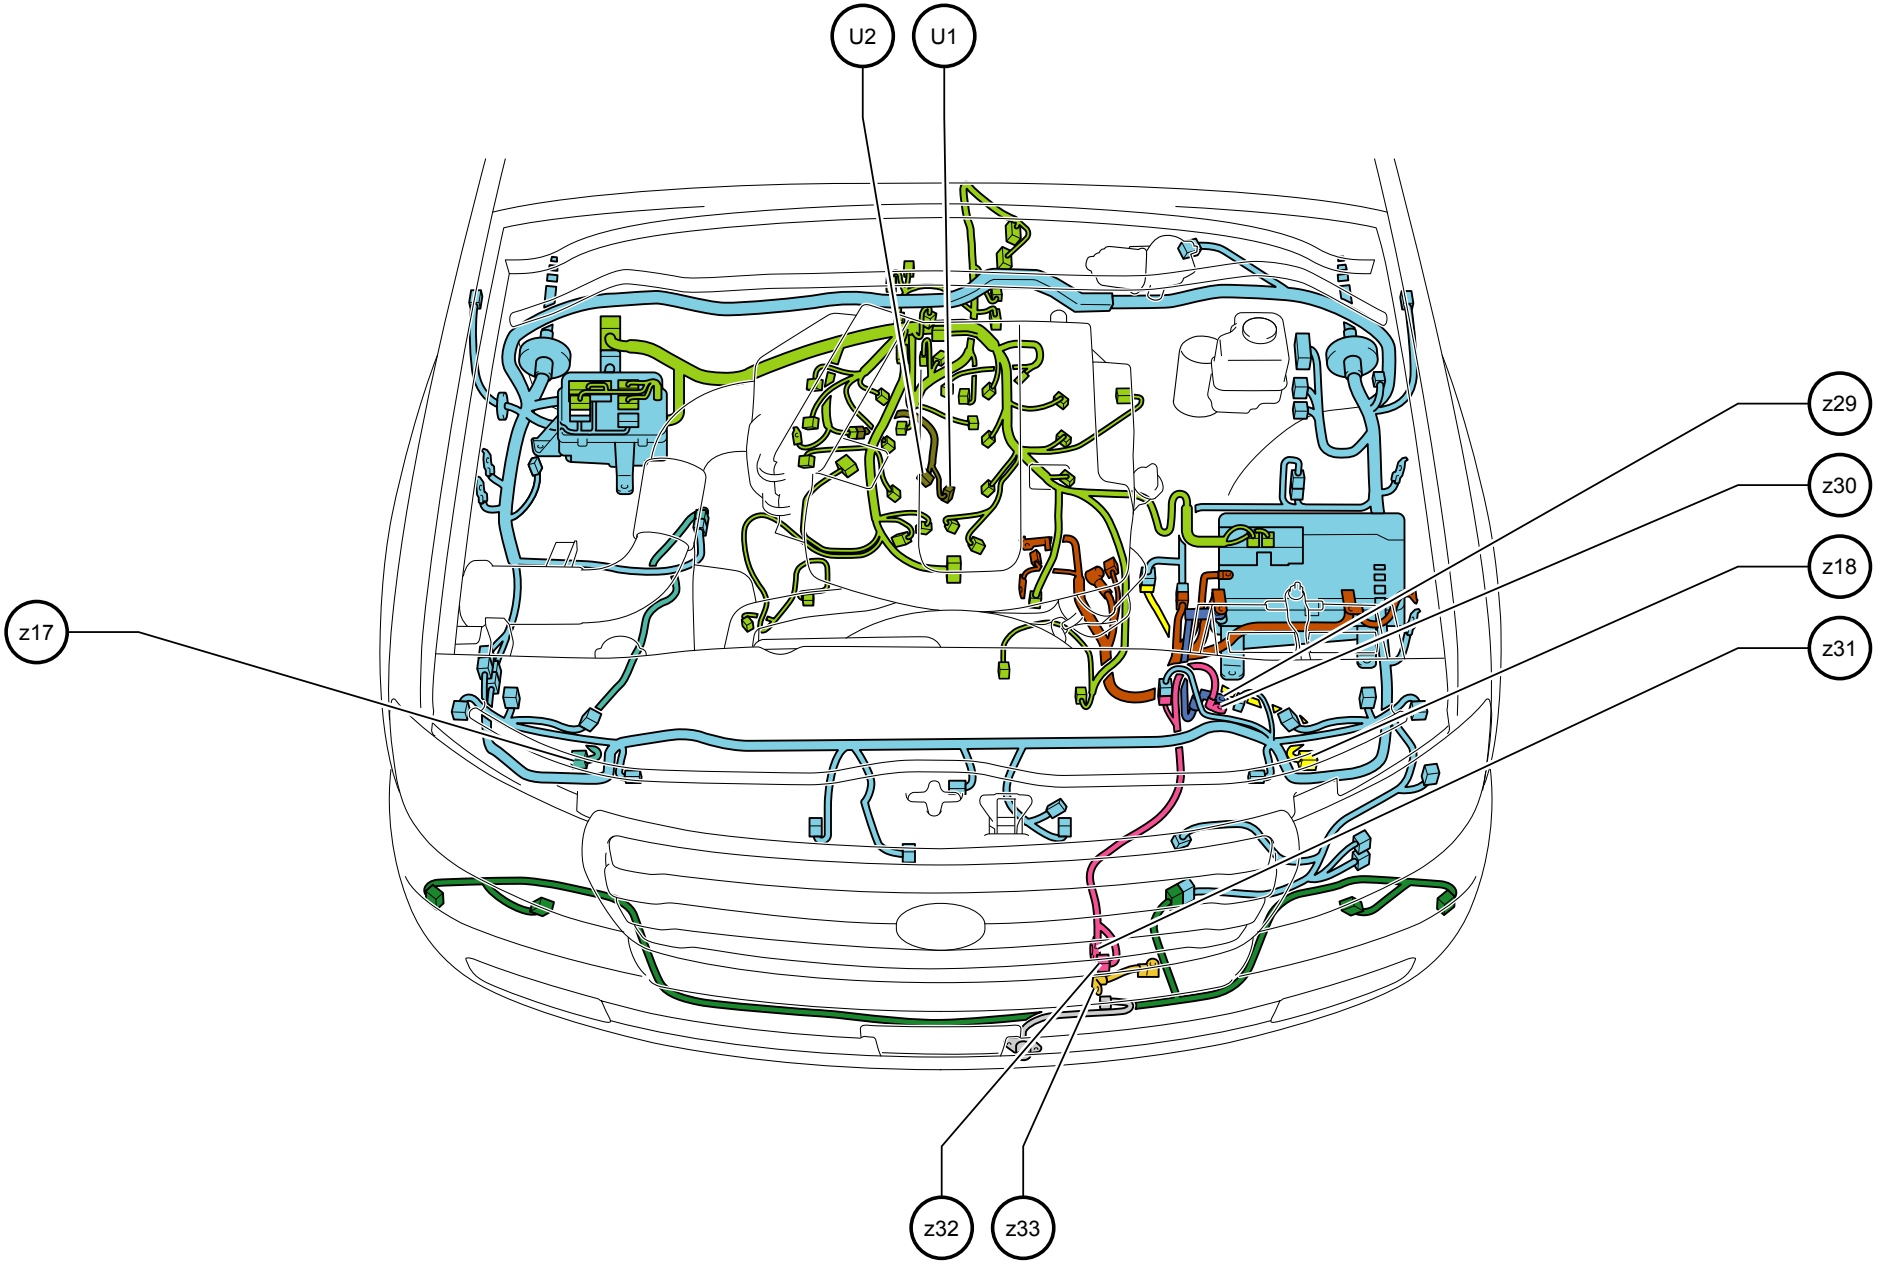
U2
U1
z29
z30
z18
z31
z17
z32
z33


U 1 Knock Control Sensor (Bank 2)
U 2 Knock Control Sensor (Bank 1)

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
z 31 With Magnet Switch Winch Motor Assembly
z 32 With Magnet Switch Winch Motor Assembly
z 33 With Magnet Switch Winch Motor Assembly

U 1
Black



U 2
Black




z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

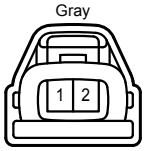



z 33





* 1:Liftgate Type Body
* 2:Swing Type Body

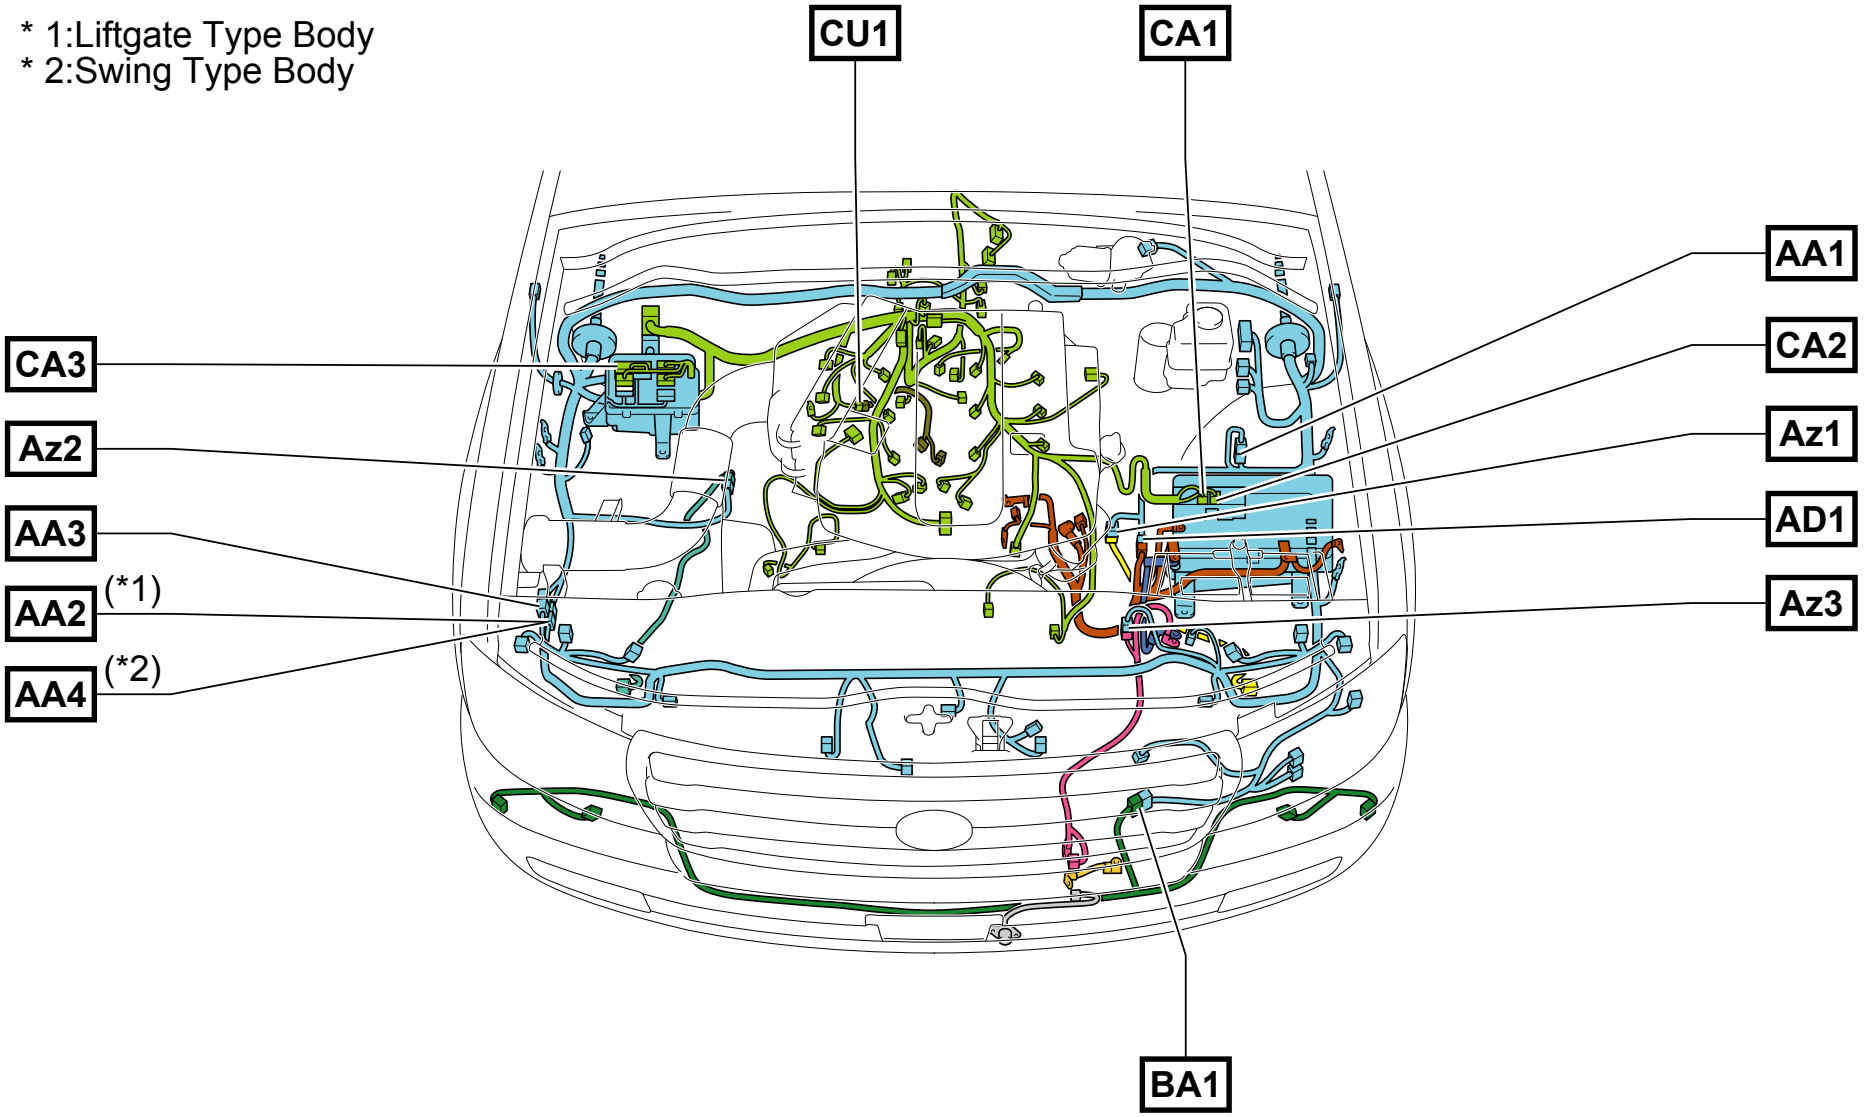


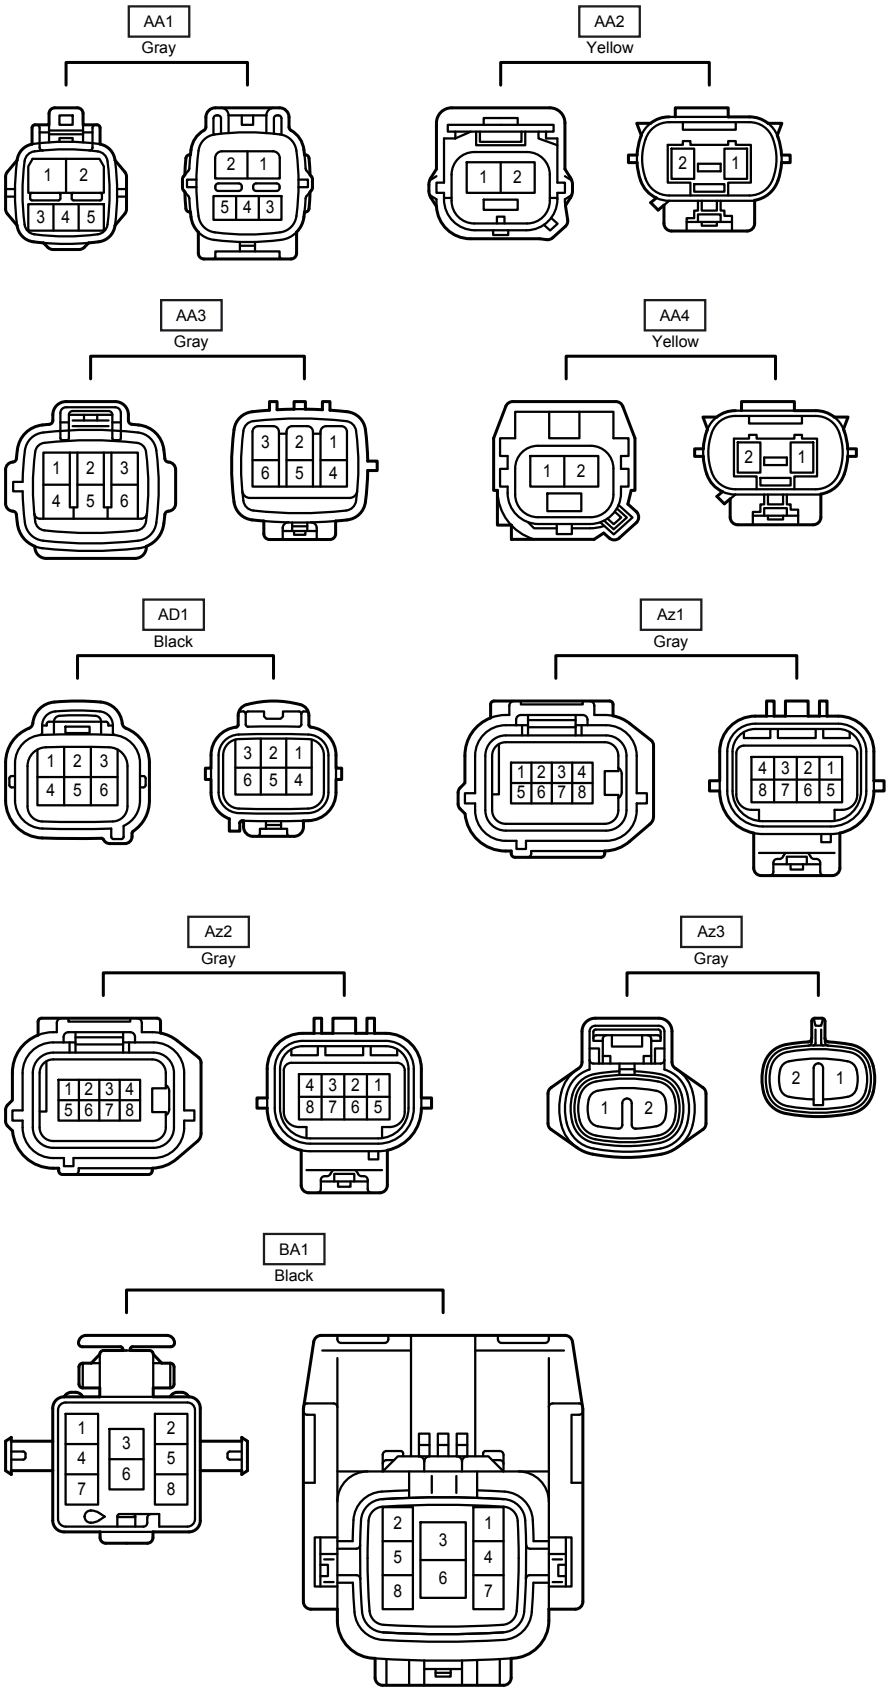

AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1
AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AA4
Yellow
1 2
2 1
AD1
Black
1 2 3
4 5 6
3 2 1
6 5 4
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az3
Gray
1 2
2 1
BA1
Black
1 2
4 3 5
7 6 8
2 1
5 3 4
8 6 7

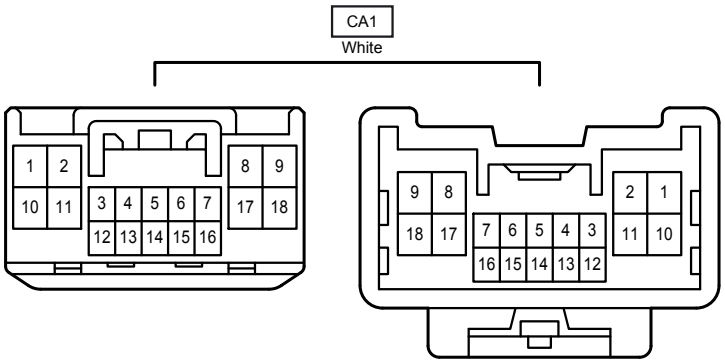

CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

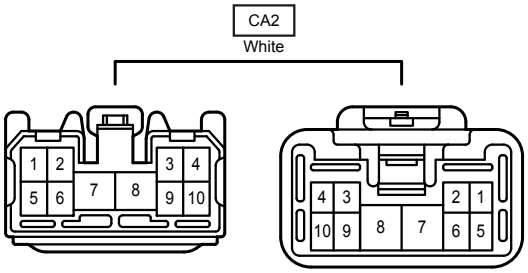
CA2
White
1 2
5 6
7
8
3 4
9 10
4 3
10 9
8
7
2 1
6 5

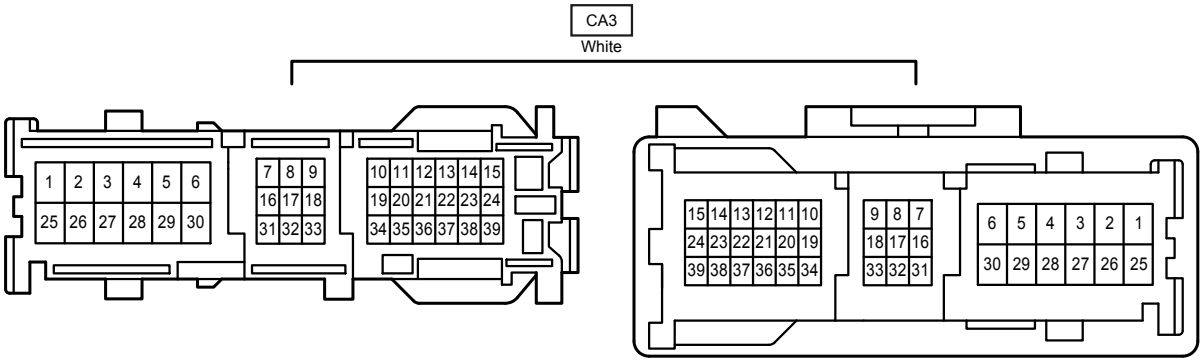
CA3
White
1 2 3 4 5 6
25 26 27 28 29 30
7 8 9
16 17 18
31 32 33
10 11 12 13 14 15
19 20 21 22 23 24
34 35 36 37 38 39
15 14 13 12 11 10
24 23 22 21 20 19
39 38 37 36 35 34
9 8 7
18 17 16
33 32 31
6 5 4 3 2 1
30 29 28 27 26 25

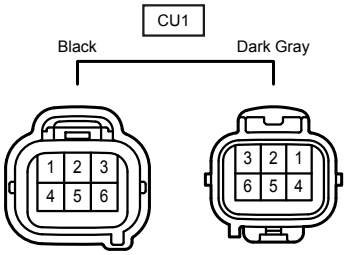

CU1
Black
Dark Gray
1 2 3
4 5 6
3 2 1
6 5 4

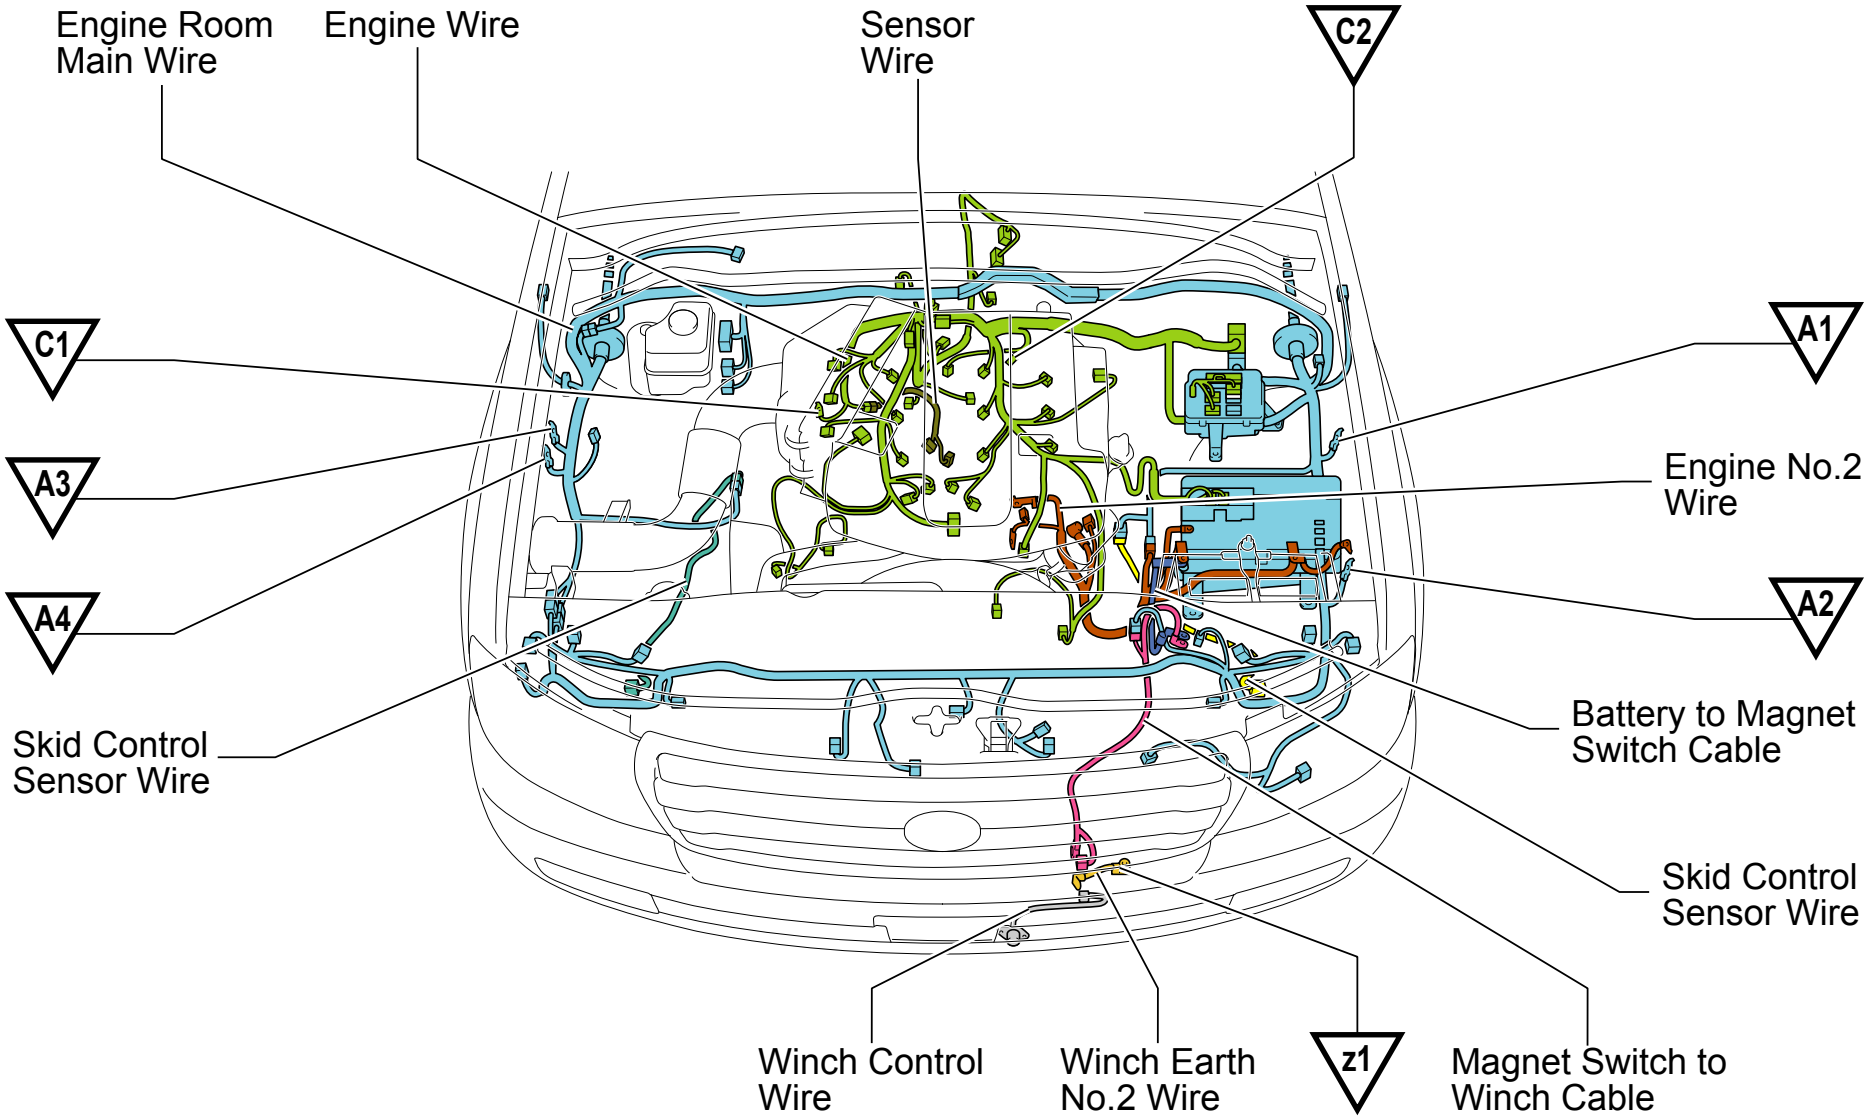
Engine Room Main Wire
Engine Wire
Sensor Wire
C2
C1
A1
A3
Engine No.2 Wire
A4
A2
Skid Control Sensor Wire
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Winch Control Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable

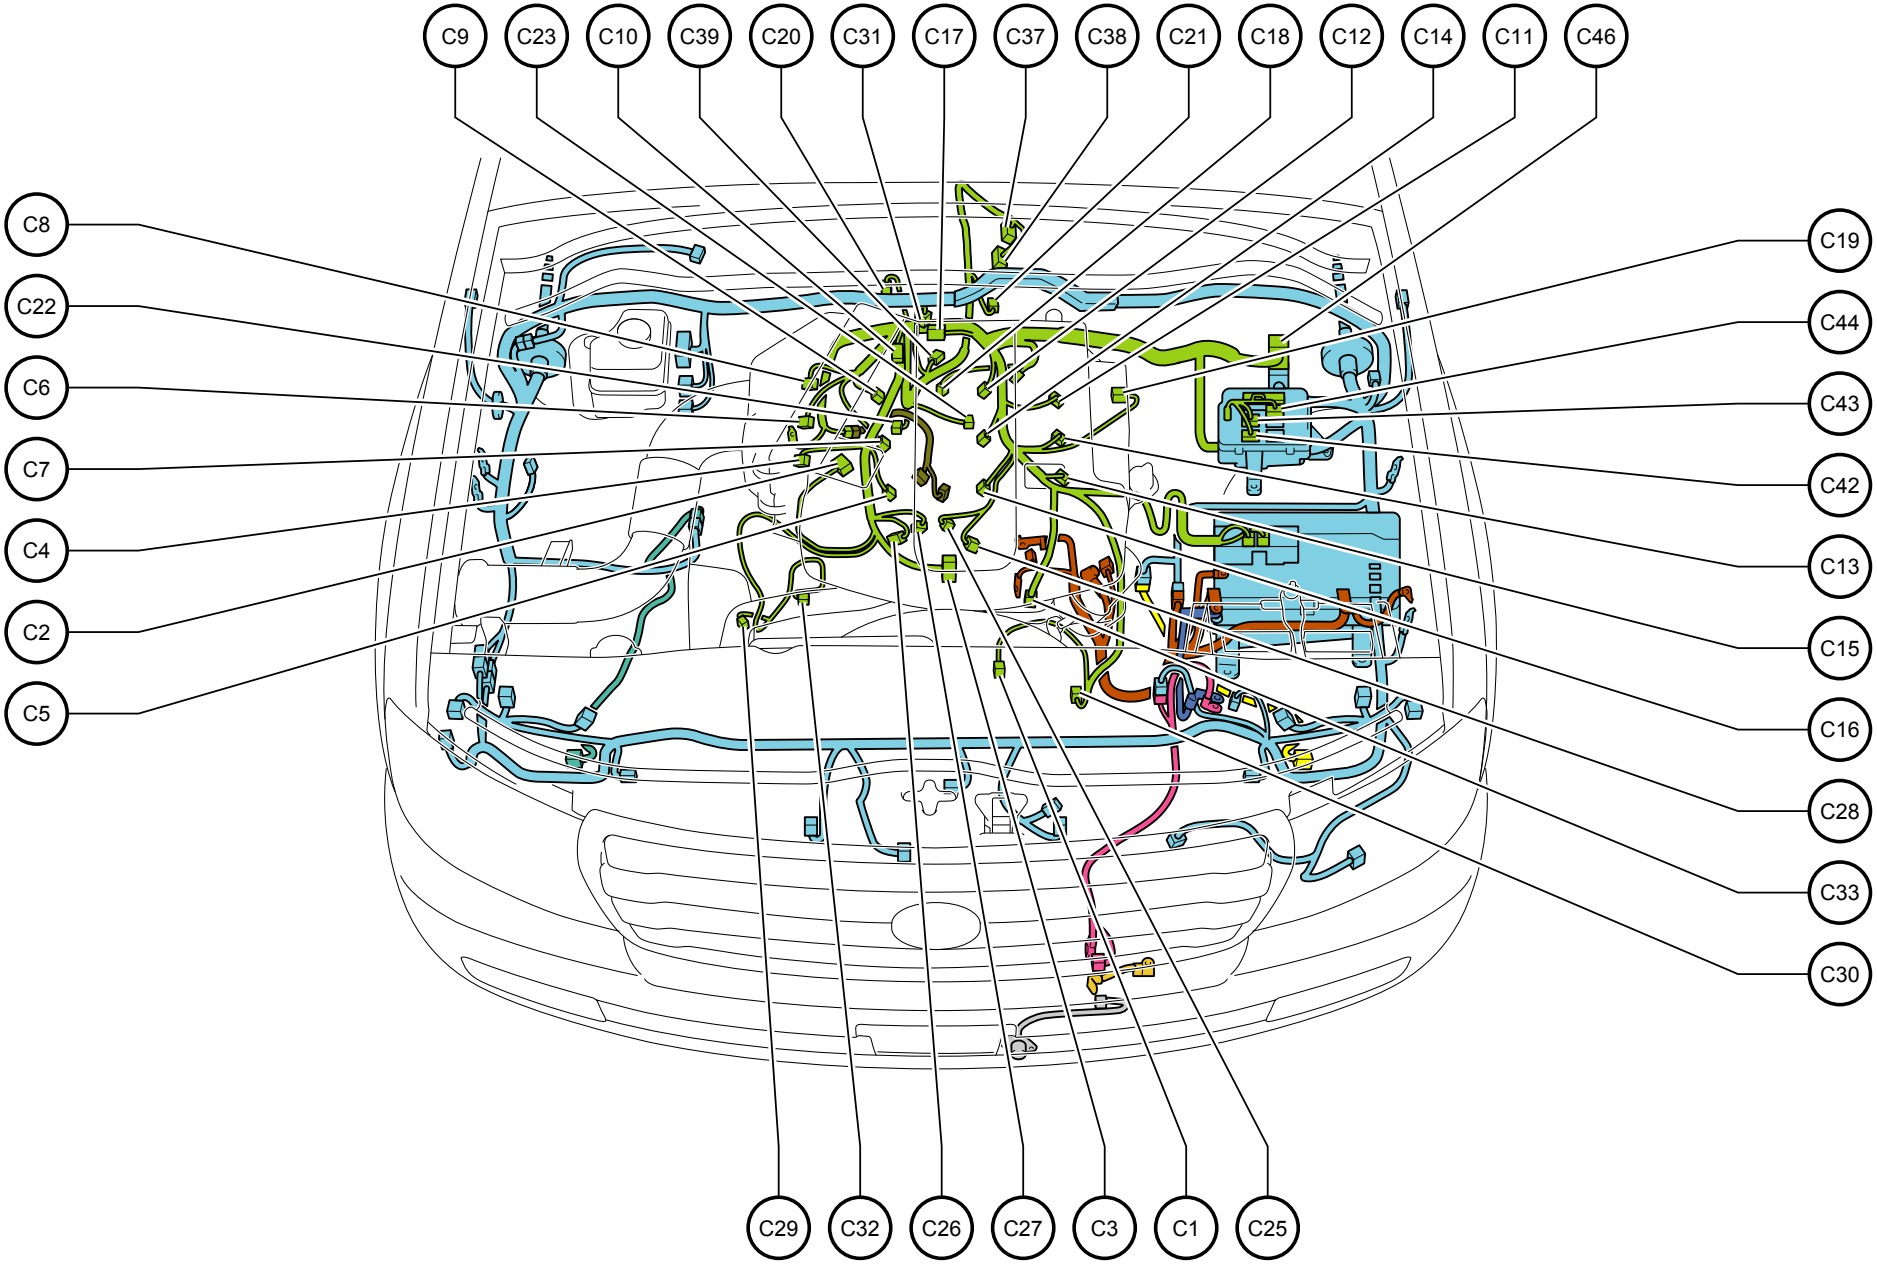

C9
C23
C10
C39
C20
C31
C17
C37
C38
C21
C18
C12
C14
C11
C46
C8
C22
C6
C7
C4
C2
C5
C19
C44
C43
C42
C13
C15
C16
C28
C33
C30
C29
C32
C26
C27
C3
C1
C25

C 1 Crankshaft Position Sensor
C 2 Mass Air Flow Meter
C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 5 Fuel Injector Assembly No.1
C 6 Ignition Coil Assembly No.3
C 7 Fuel Injector Assembly No.3
C 8 Ignition Coil Assembly No.5
C 9 Fuel Injector Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 12 Fuel Injector Assembly No.6
C 13 Ignition Coil Assembly No.4
C 14 Fuel Injector Assembly No.4
C 15 Ignition Coil Assembly No.2
C 16 Fuel Injector Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 19 Purge VSV
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 21 Oxygen Sensor (Bank 2 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 25 VVT Sensor (Bank 2)
C 26 VVT Sensor (Bank 1)
C 27 Camshaft Timing Oil Control Valve (Bank 1)
C 28 Camshaft Timing Oil Control Valve (Bank 2)
C 29 Power Steering Oil Pressure Switch
C 30 Cooler Compressor Assembly
C 31 VSV (ACIS)
C 32 Engine Oil Level Sensor
C 33 Oil Pressure Sender Gage Assembly
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 39 Back-Up Light Switch Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 46 ECM


C 1
Black

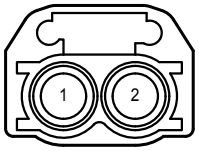


C 2
Black

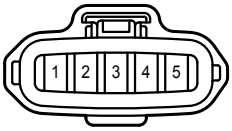


C 3
Black

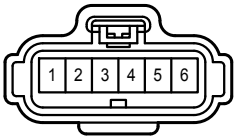


C 4
Black




C 5
Gray

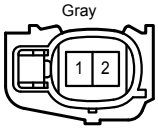


C 6
Black




C 7
Gray

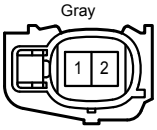

C 8
Black




C 9
Gray




C 10
Gray




C 11
Black




C 12
Gray




C 13
Black




C 14
Gray

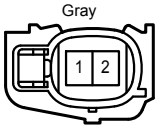

C 15
Black



C 16
Gray

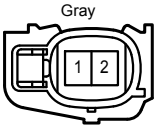


C 17
Gray



C 18
Dark Gray



C 19
Gray

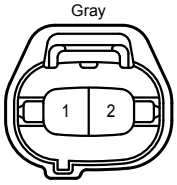

C 20
Dark Gray



C 21
Dark Gray




C 22
Dark Gray




C 23
Dark Gray



C 25
Black

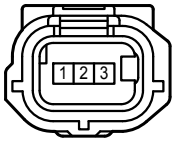

C 26
Black

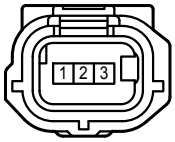

C 27
Black



C 28
Black




C 29
Black



C 30
Gray




C 31
Brown

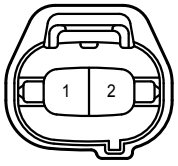


C 32
Gray




C 33
Black

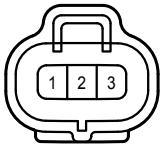


C 37
Black

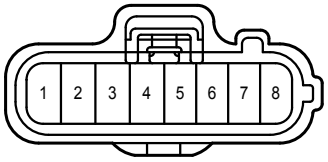


C 38
Dark Gray

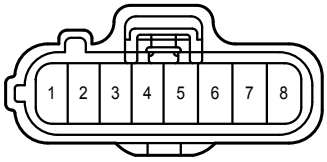


C 39
Gray

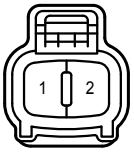


C 42
White

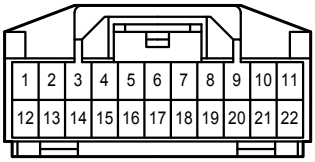


C 43
White

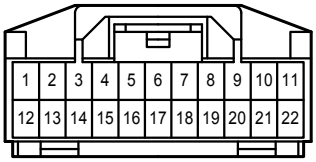


C 44
Blue

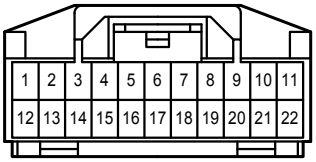

C 46
Black

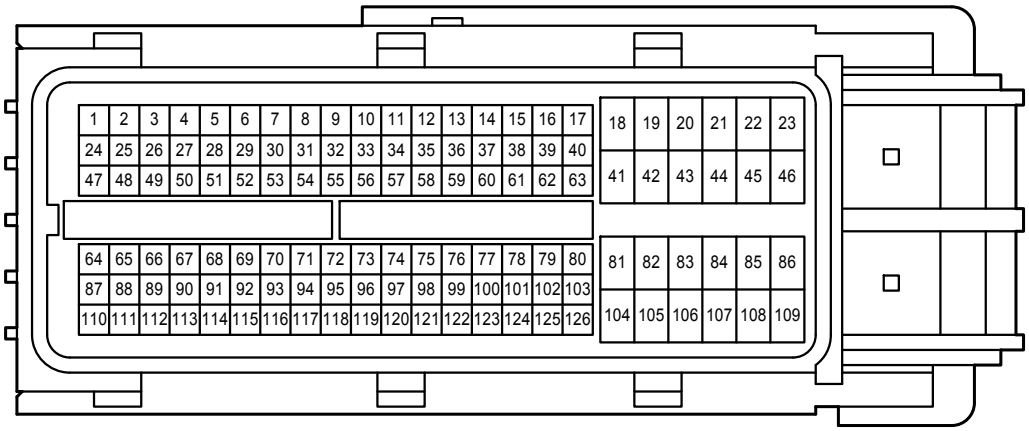

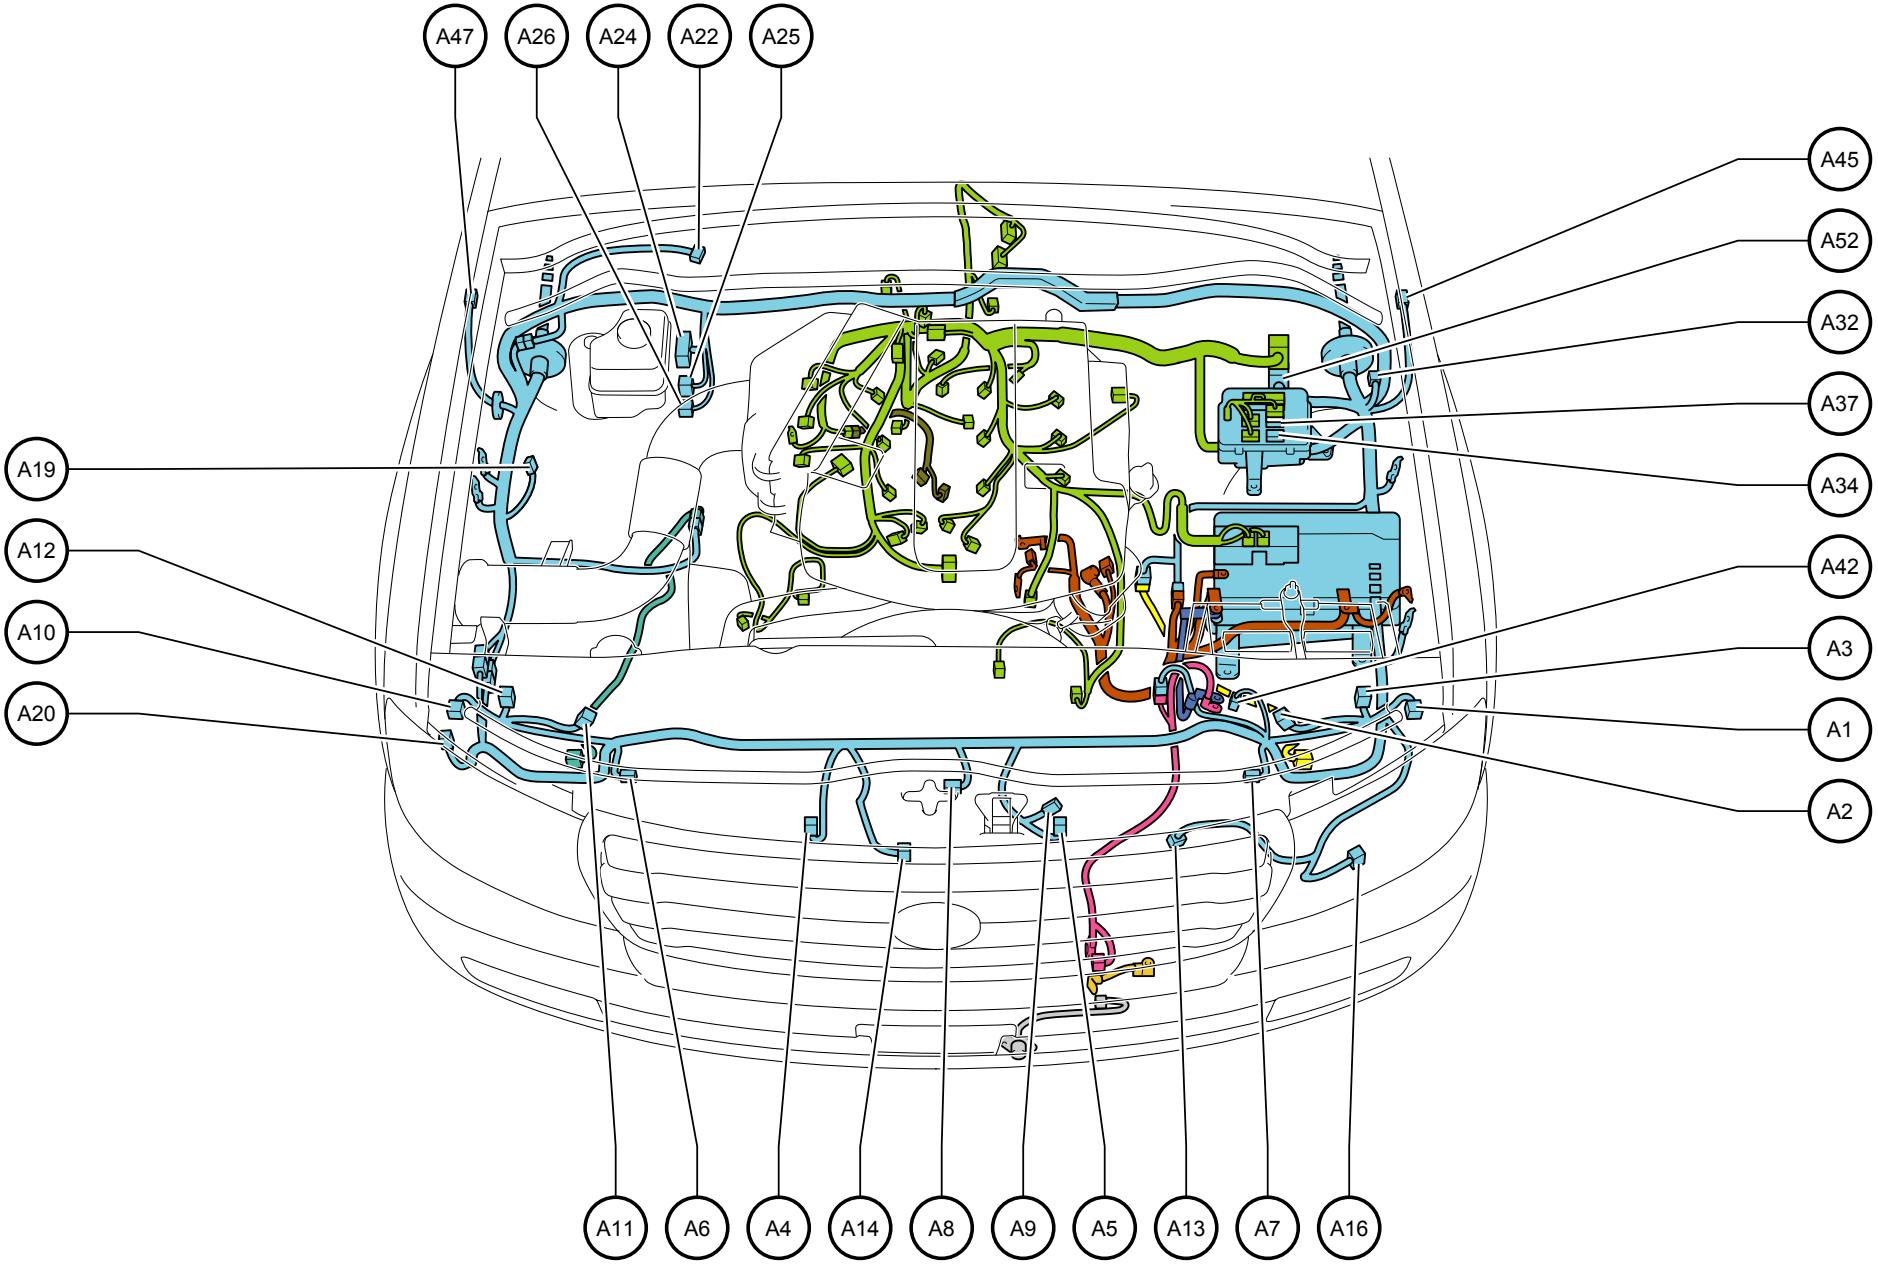

A47
A26
A24
A22
A25
A45
A52
A32
A37
A34
A19
A12
A10
A20
A42
A3
A1
A2
A11
A6
A4
A14
A8
A9
A5
A13
A7
A16

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH
A 52 ECM


A 1
Gray



A 2
Black

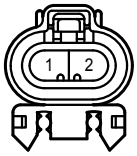

A 3
Black

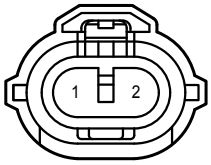

A 4
Black



A 5
Black



A 6
Yellow



A 7
Yellow



A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

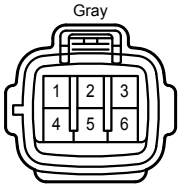


A 11
Black

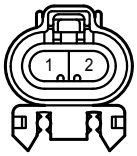

A 12
Black

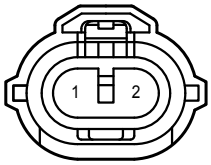


A 13
Black

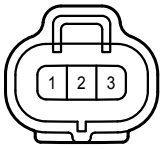


A 14
Black



A 16
Gray

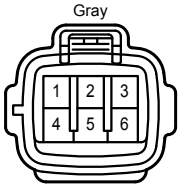

A 19
Black




A 20
Black




A 22
Black




A 24
Black

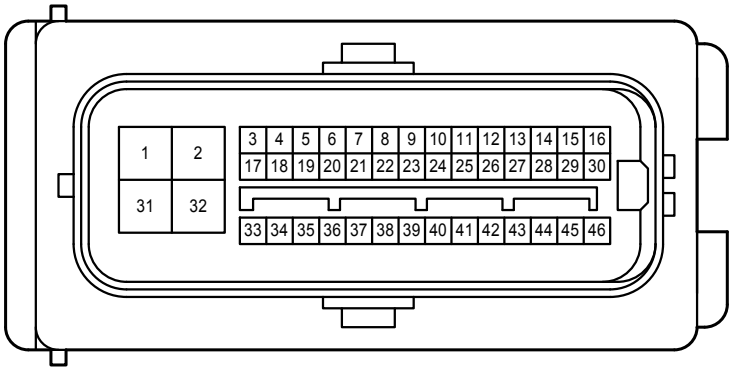


A 25
Black

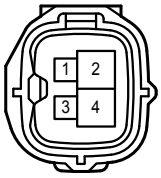


A 26
Gray

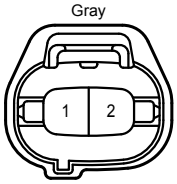


A 32
Black

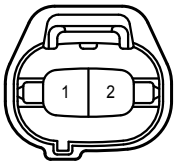


A 34
White

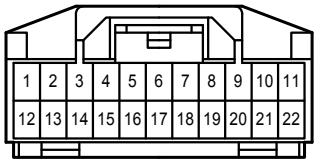

A 37
Blue

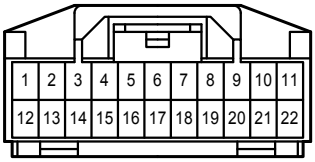

A 42
Black

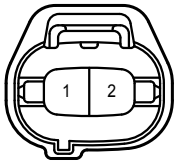


A 45
Gray




A 47
Gray



A 52
Black

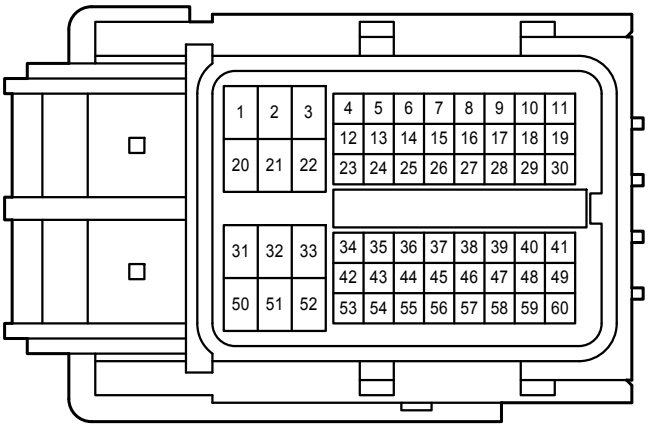

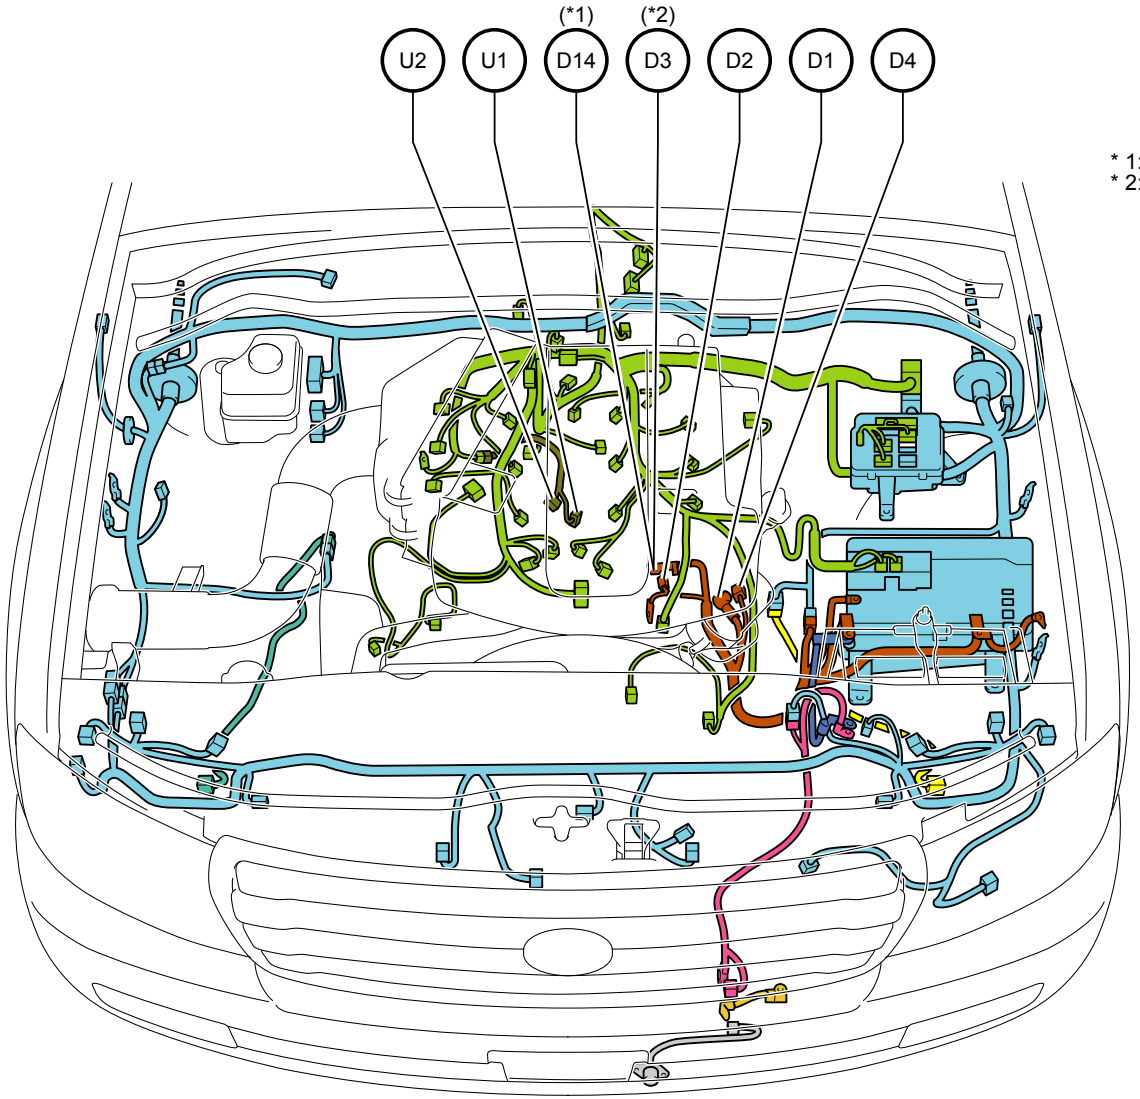


* 1:Cold Area Spec.
* 2:Except Cold Area Spec.

D 1 Generator Assembly
D 2 Starter Assembly
D 3 Starter Assembly
D 4 Generator Assembly
D 14 Starter Assembly

U 1 Knock Control Sensor (Bank 2)
U 2 Knock Control Sensor (Bank 1)

D 1




D 2

Black



D 3




D 4

Black




D 14




U 1


Black



U 2

Black



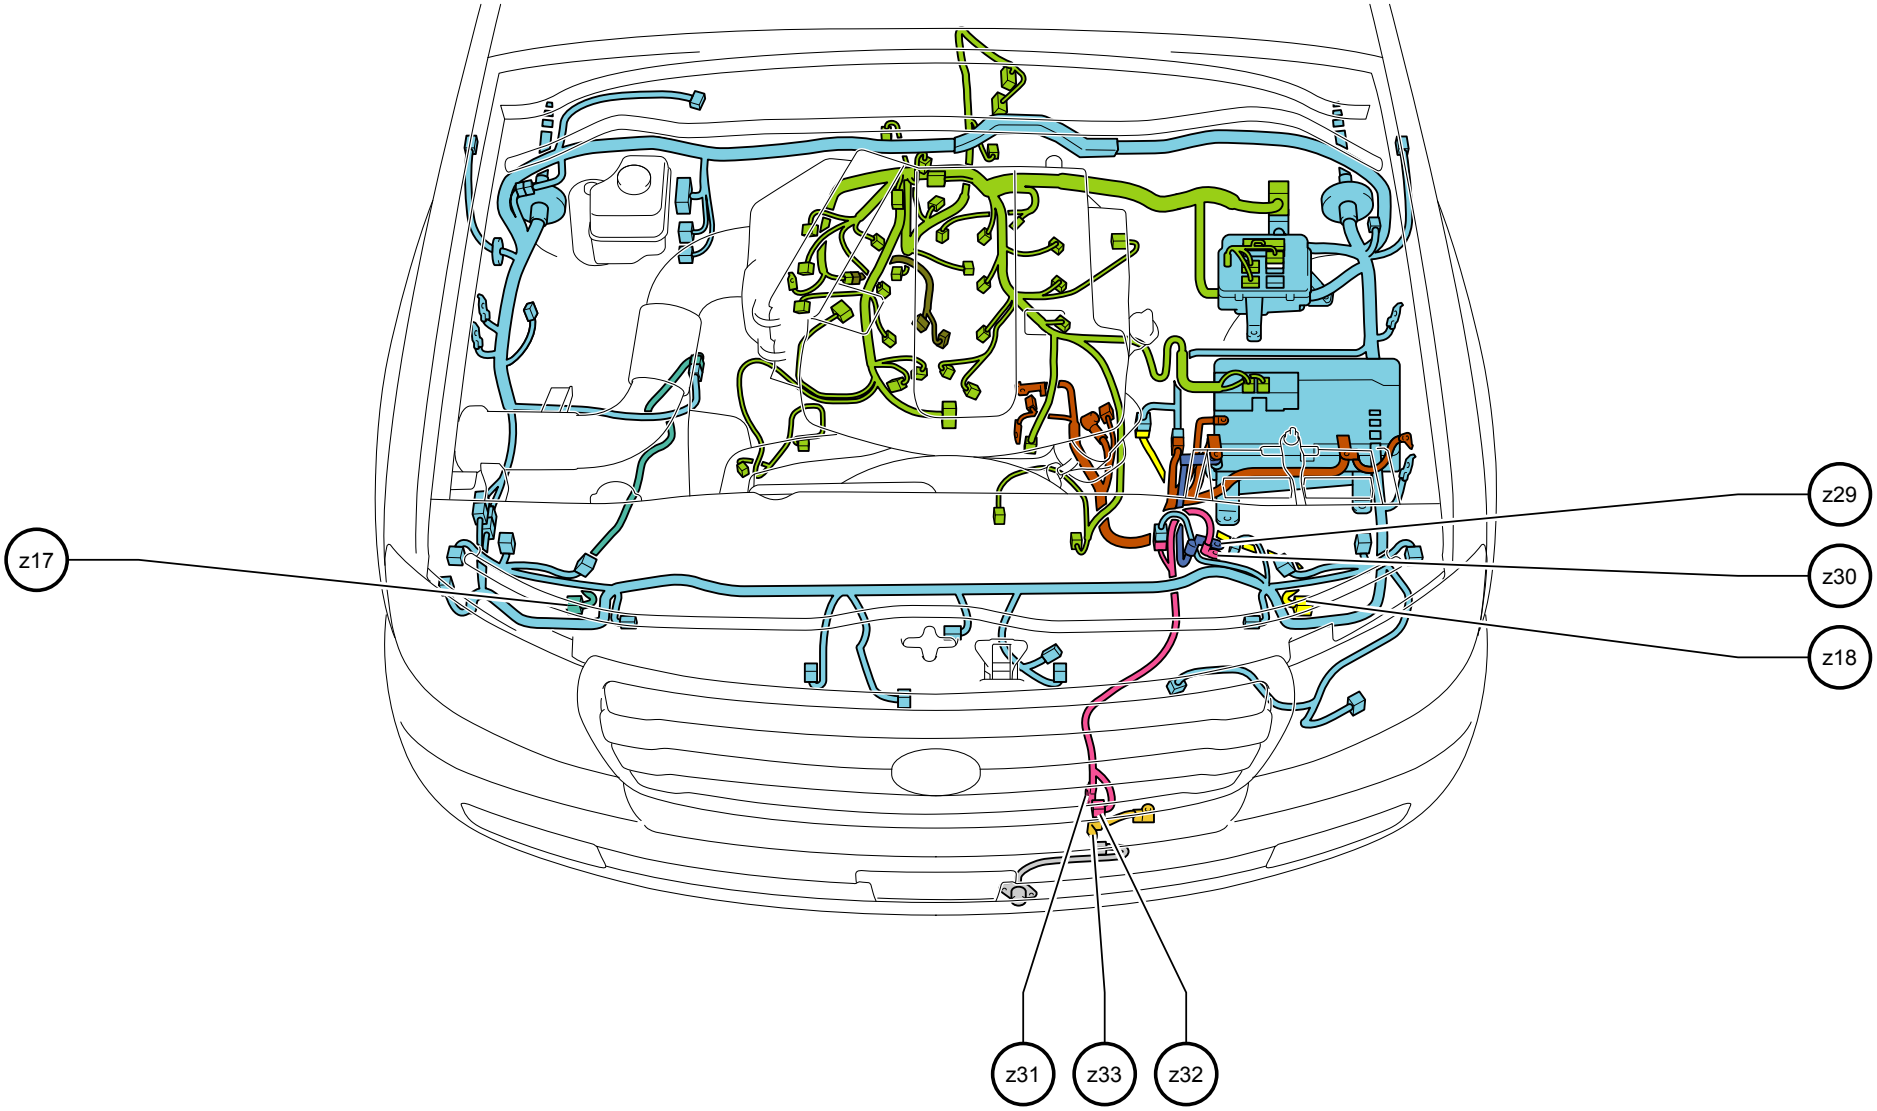
z17
z29
z30
z18
z31
z33
z32

- 17 Front Speed Sensor RH
- 18 Front Speed Sensor LH
- 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- 31 With Magnet Switch Winch Motor Assembly
- 32 With Magnet Switch Winch Motor Assembly
- 33 With Magnet Switch Winch Motor Assembly


z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

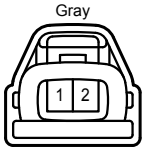



z 33





* 1:Liftgate Type Body
* 2:Swing Type Body

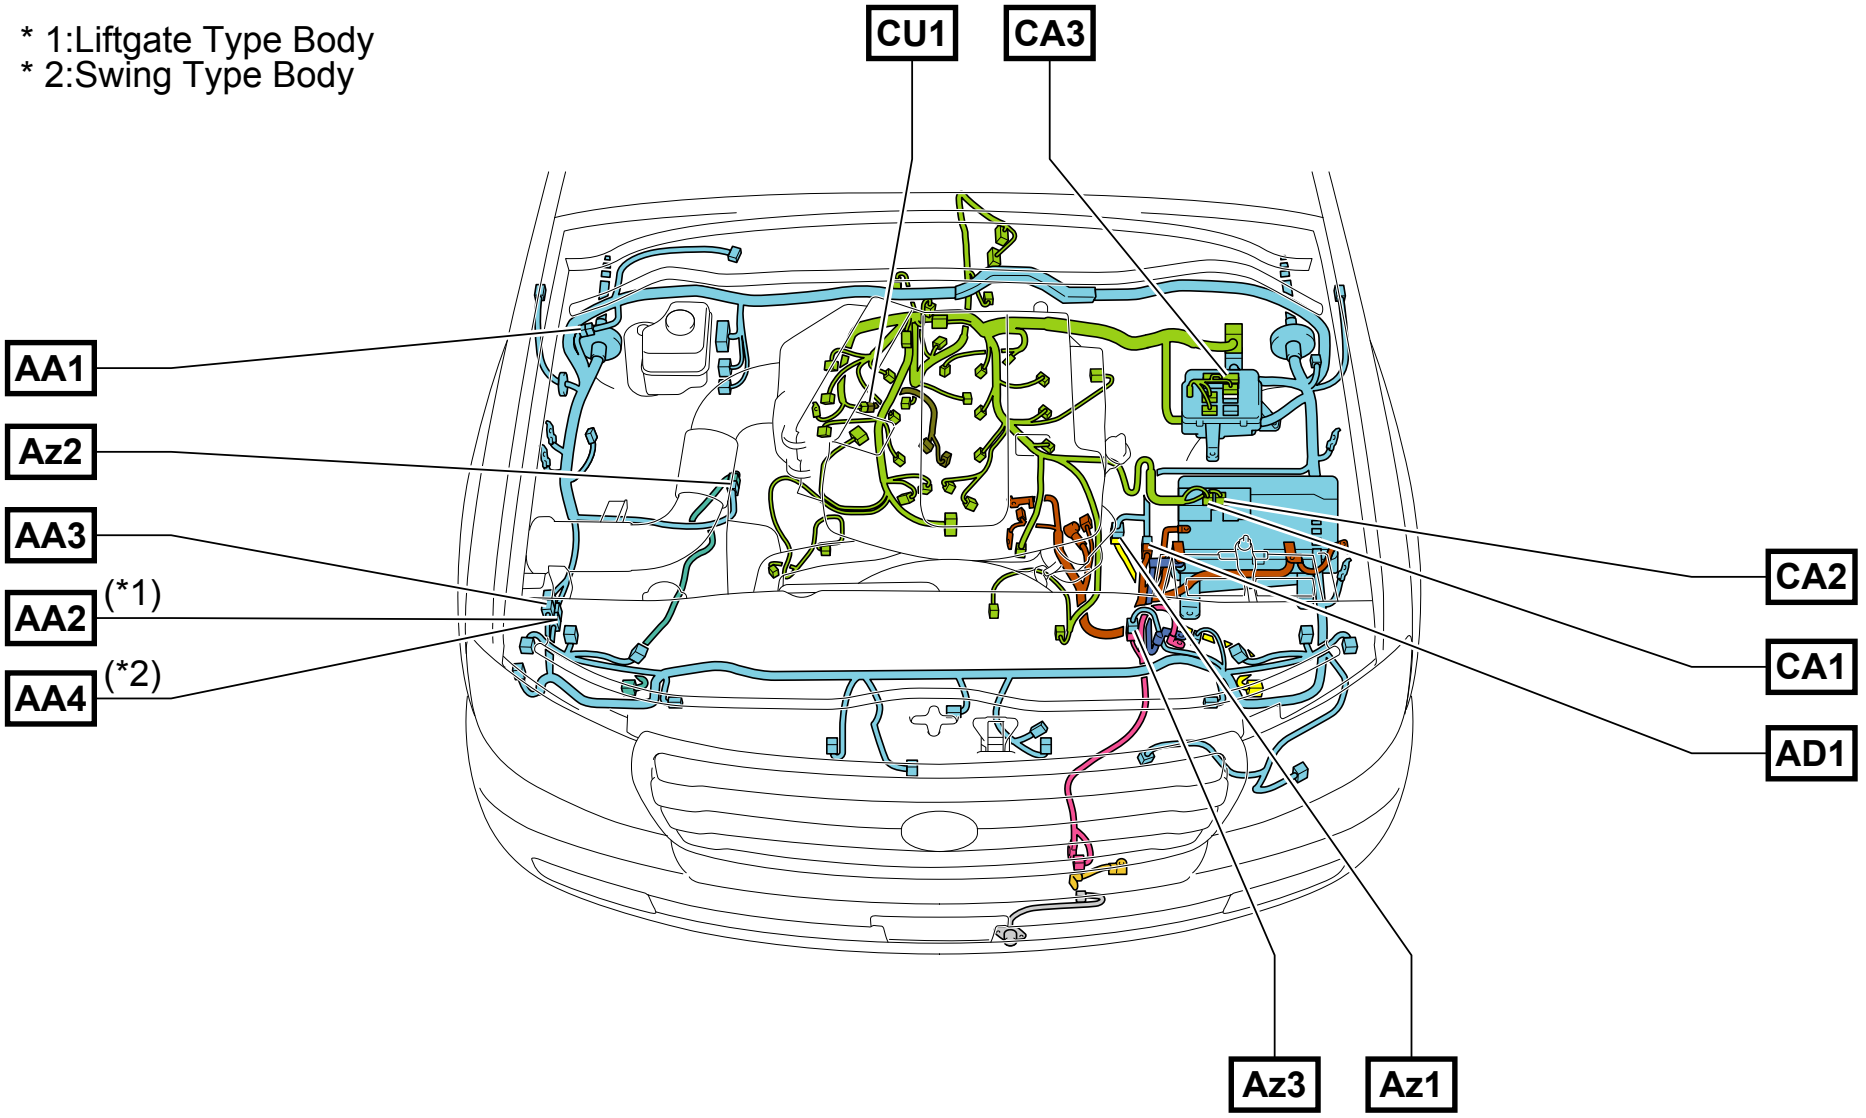


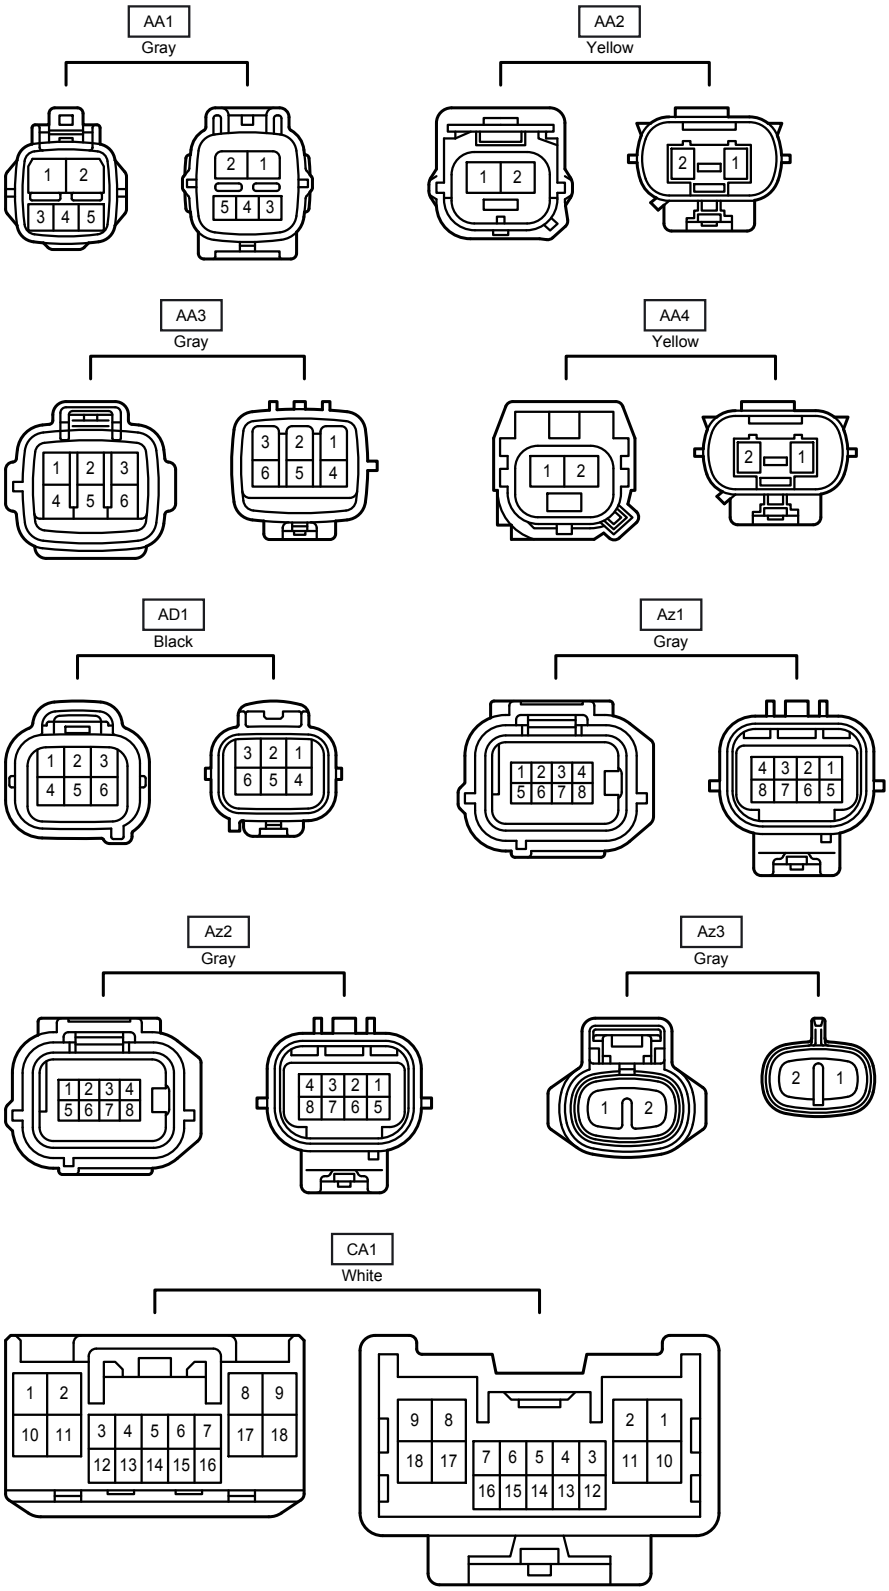

AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1
AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AA4
Yellow
1 2
2 1
AD1
Black
1 2 3
4 5 6
3 2 1
6 5 4
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az3
Gray
1 2
2 1
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

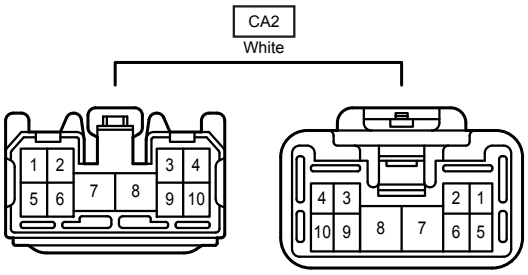
CA2
White
1 2 3 4
5 6 7 8 9 10
4 3 2 1
10 9 8 7 6 5

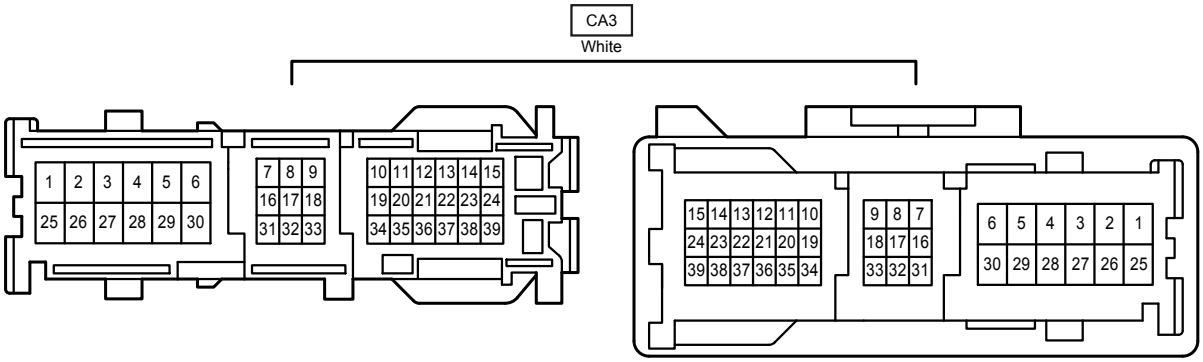
CA3
White
1 2 3 4 5 6
25 26 27 28 29 30
7 8 9
16 17 18
31 32 33
10 11 12 13 14 15
19 20 21 22 23 24
34 35 36 37 38 39
15 14 13 12 11 10
24 23 22 21 20 19
39 38 37 36 35 34
9 8 7
18 17 16
33 32 31
6 5 4 3 2 1
30 29 28 27 26 25

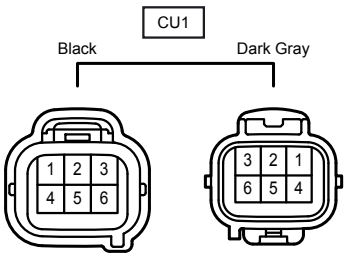

CU1
Black
Dark Gray
1 2 3
4 5 6
3 2 1
6 5 4

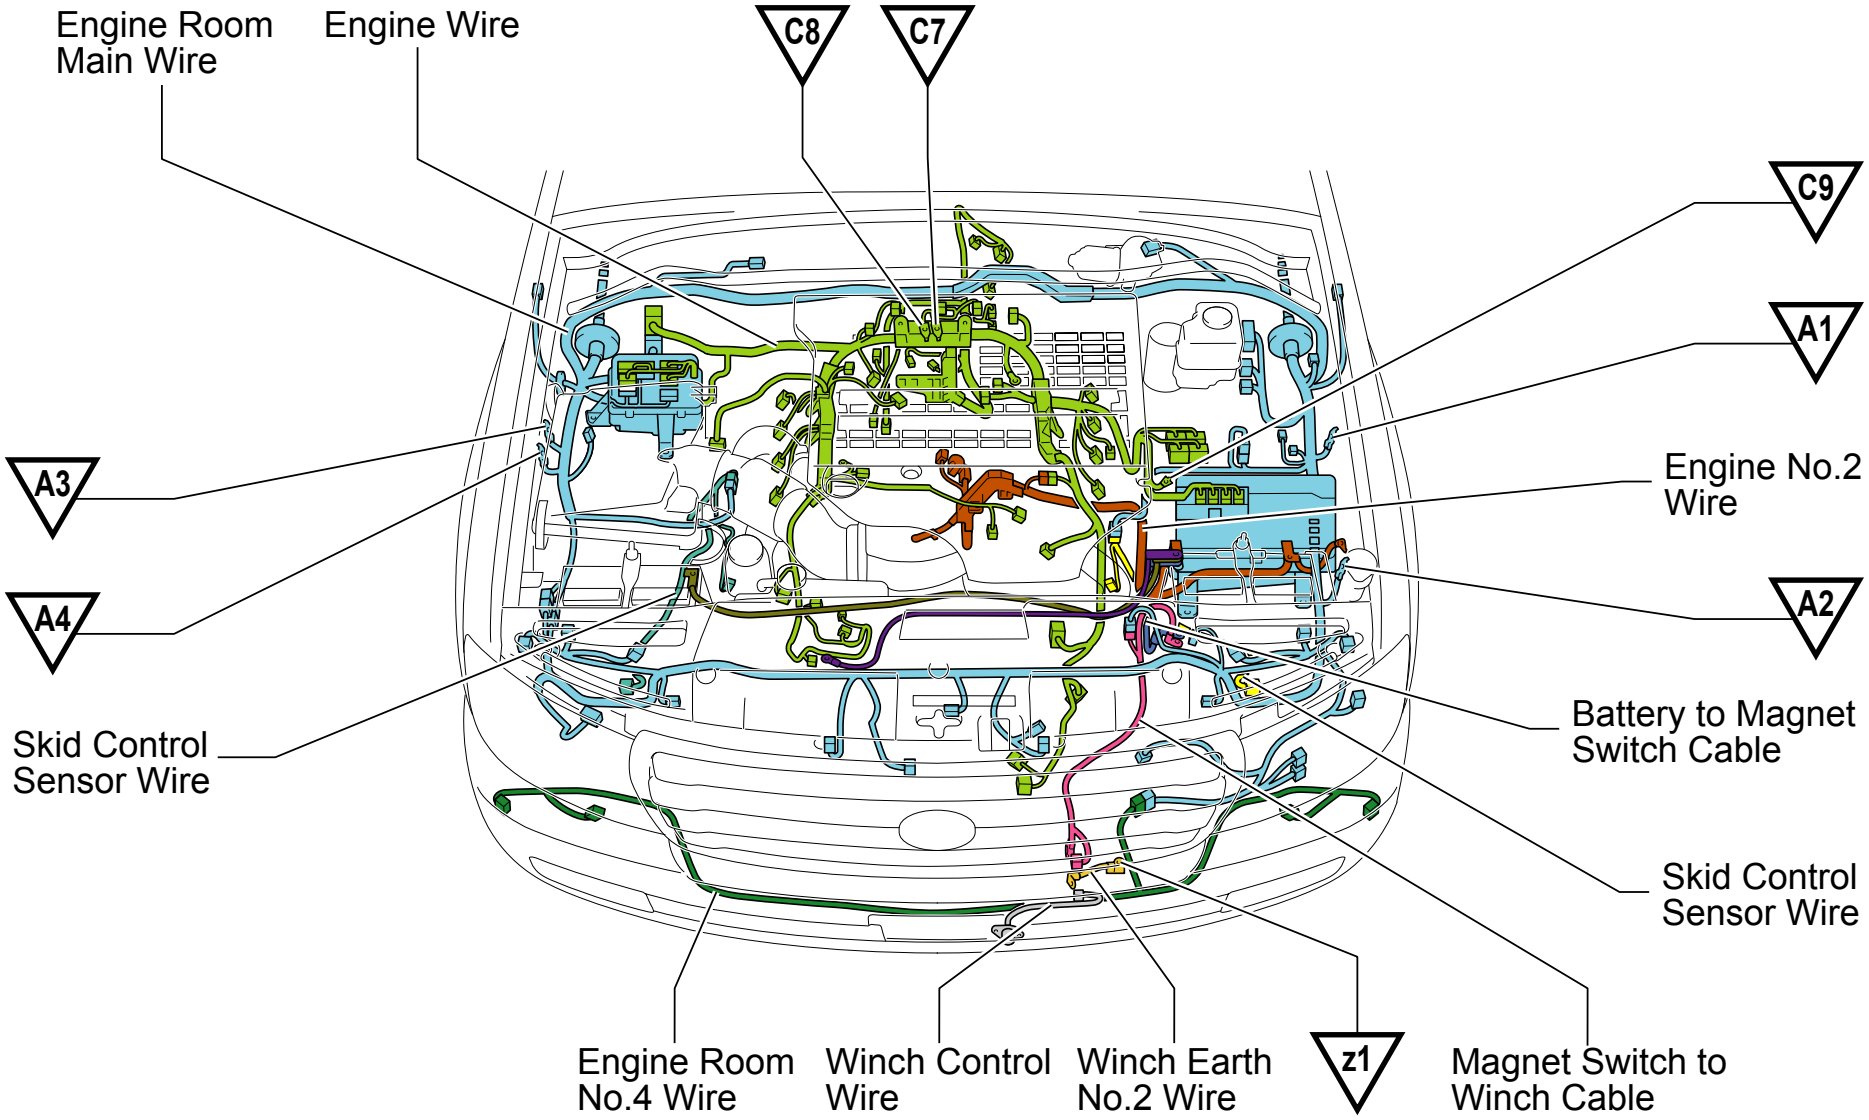
Engine Room Main Wire
Engine Wire
C8
C7
C9
A1
A3
A4
Engine No.2 Wire
A2
Skid Control Sensor Wire
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine Room No.4 Wire
Winch Control Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable

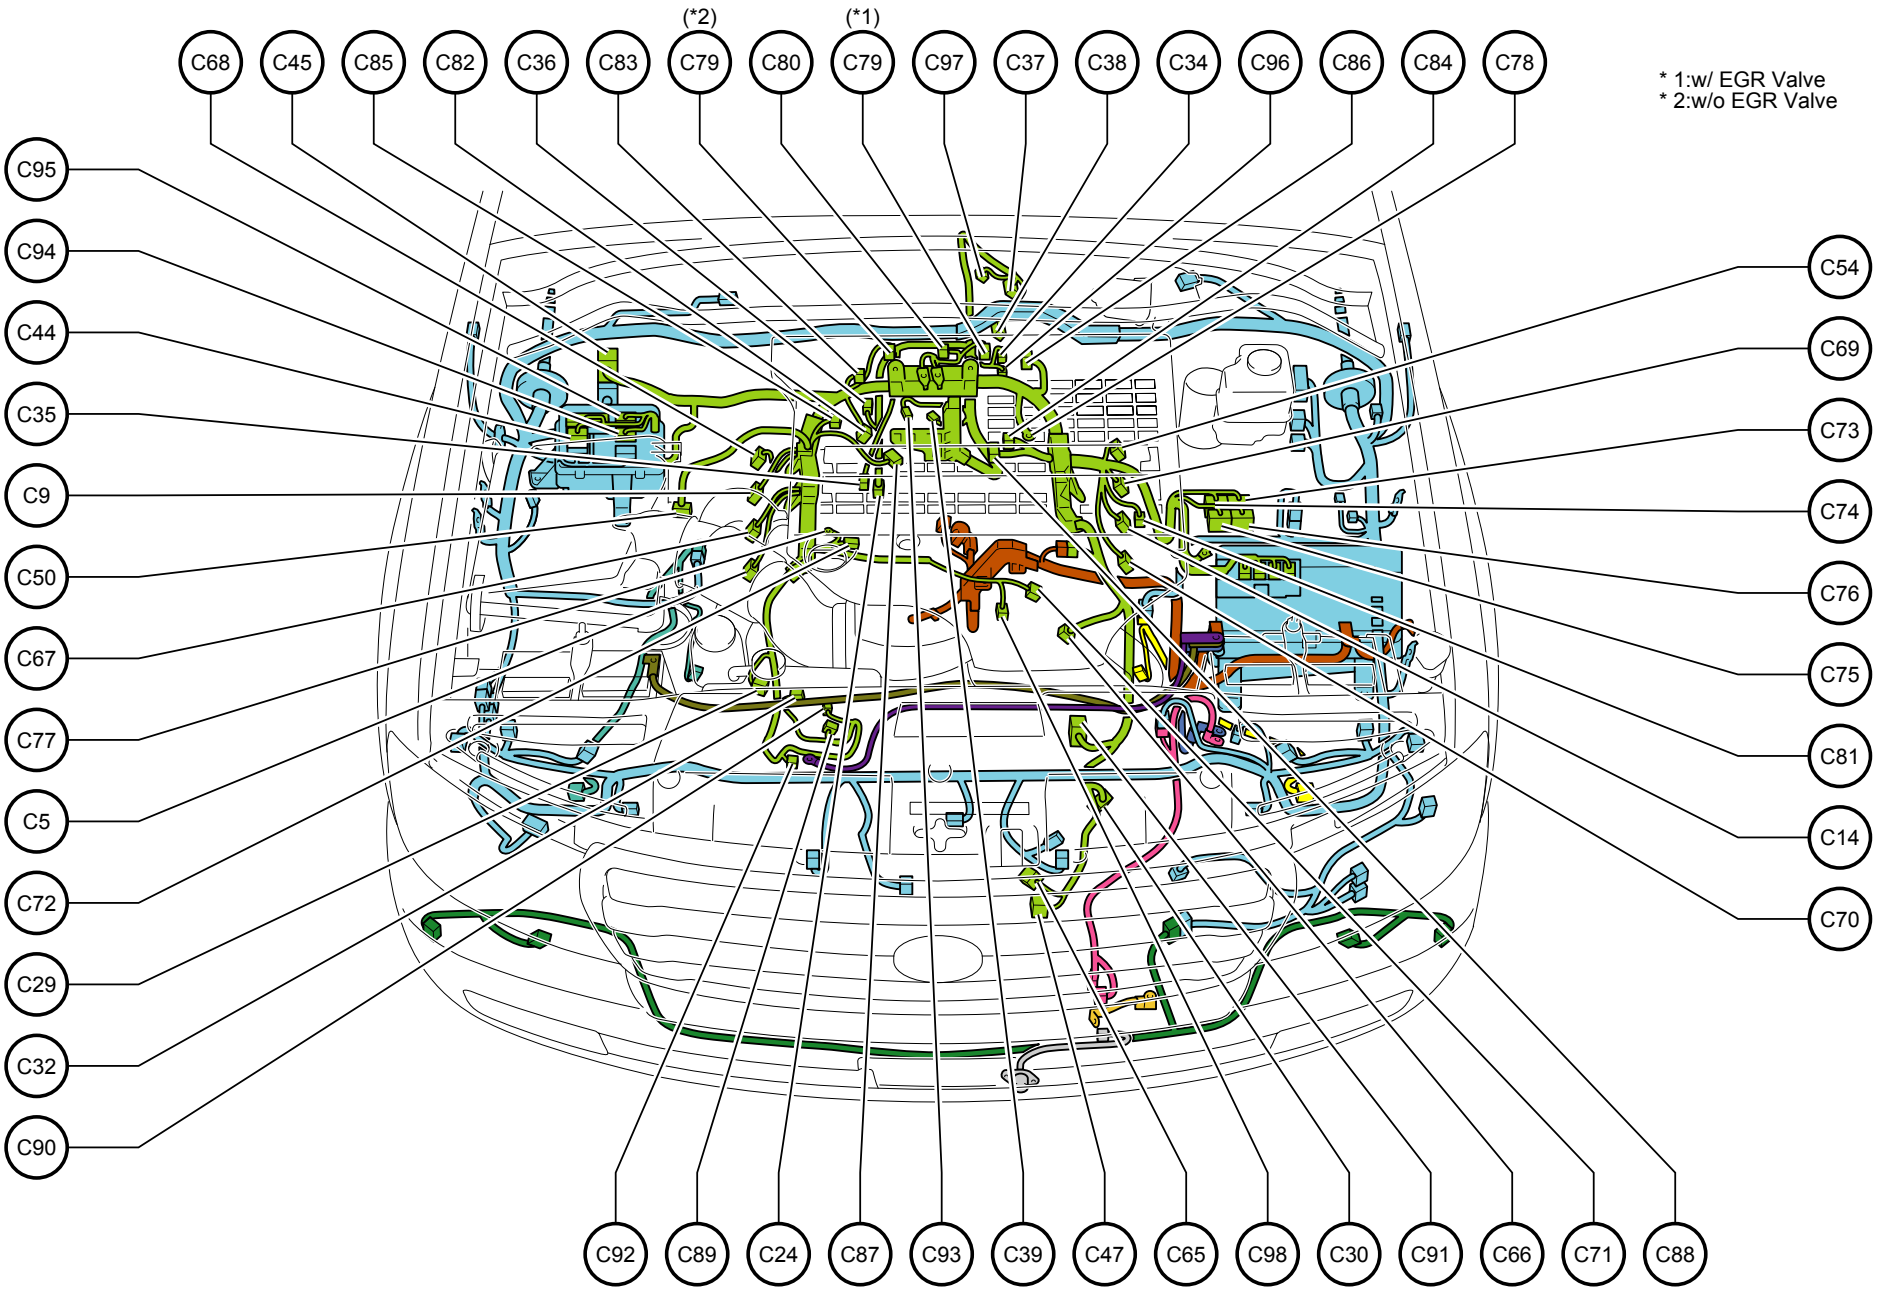

(*2)
(*1)
C68
C45
C85
C82
C36
C83
C79
C80
C79
C97
C37
C38
C34
C96
C86
C84
C78
* 1:w/ EGR Valve
* 2:w/o EGR Valve
C95
C94
C44
C35
C9
C50
C67
C77
C5
C72
C29
C32
C90
C54
C69
C73
C74
C76
C75
C81
C14
C70
C92
C89
C24
C87
C93
C39
C47
C65
C98
C30
C91
C66
C71
C88

C 5 Fuel Injector Assembly No.1
C 9 Fuel Injector Assembly No.5
C 14 Fuel Injector Assembly No.4
C 24 Park/Neutral Position Switch
C 29 Power Steering Oil Pressure Switch
C 30 Cooler Compressor Assembly
C 32 Engine Oil Level Sensor
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 39 Back-Up Light Switch Assembly
C 44 Junction Connector
C 45 ECM
C 47 Oil Pressure Sender Gage Assembly
C 50 Mass Air Flow Meter
C 54 Fuel Injector Assembly No.8
C 65 Crankshaft Position Sensor
C 66 Camshaft Position Sensor
C 67 Fuel Injector Assembly No.3
C 68 Fuel Injector Assembly No.7
C 69 Fuel Injector Assembly No.6
C 70 Fuel Injector Assembly No.2
C 71 E.F.I. Engine Coolant Temperature Sensor
C 72 Injection or Supply Pump Assembly
C 73 Injector Driver (No.1)
C 74 Injector Driver (No.1)
C 75 Injector Driver (No.2)
C 76 Injector Driver (No.2)
C 77 Glow Plug Assembly
C 78 Glow Plug Assembly
C 79 Intake Air Temperature Sensor
C 80 Diesel Turbo Pressure Sensor
C 81 VSV (ACM)
C 82 Fuel Pressure Sensor
C 83 Diesel Throttle Body Assembly RH
C 84 Diesel Throttle Body Assembly LH
C 85 Diesel Throttle Body Assembly RH
C 86 Diesel Throttle Body Assembly LH
C 87 No.1 EGR Valve Assembly
C 88 No.2 EGR Valve Assembly
C 89 DC Motor and Nozzle Vane Position Sensor RH
C 90 DC Motor and Nozzle Vane Position Sensor RH
C 91 DC Motor and Nozzle Vane Position Sensor LH
C 92 Generator Assembly
C 93 Shift Position Switch
C 94 Junction Connector
C 95 Junction Connector
C 96 Electronically Controlled Transmission Solenoid
C 97 Transfer Shift Actuator Assembly
C 98 Viscous with Magnet Clutch Heater Assembly


C 5
Gray

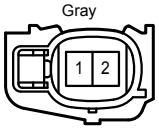


C 9
Gray

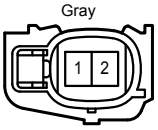

C 14
Gray

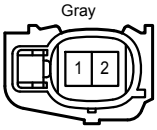

C 24
Gray

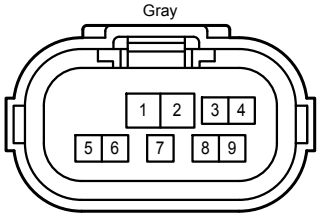

C 29
Black




C 30
Gray




C 32
Gray




C 34
Gray

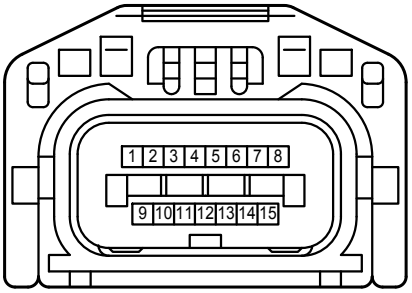


C 35
Black

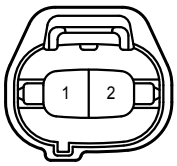


C 36
Black

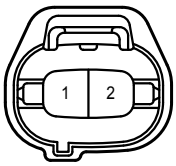


C 37
Black

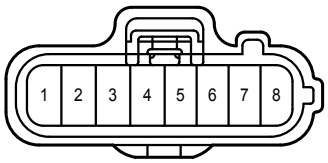


C 38
Dark Gray

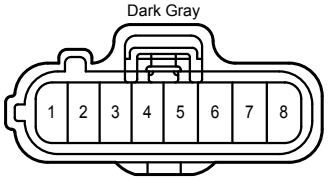


C 39
Gray

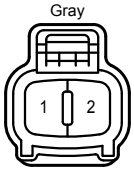

C 44
Blue

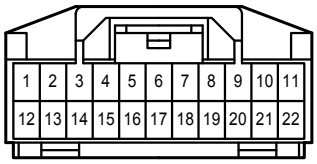


C 45
Black

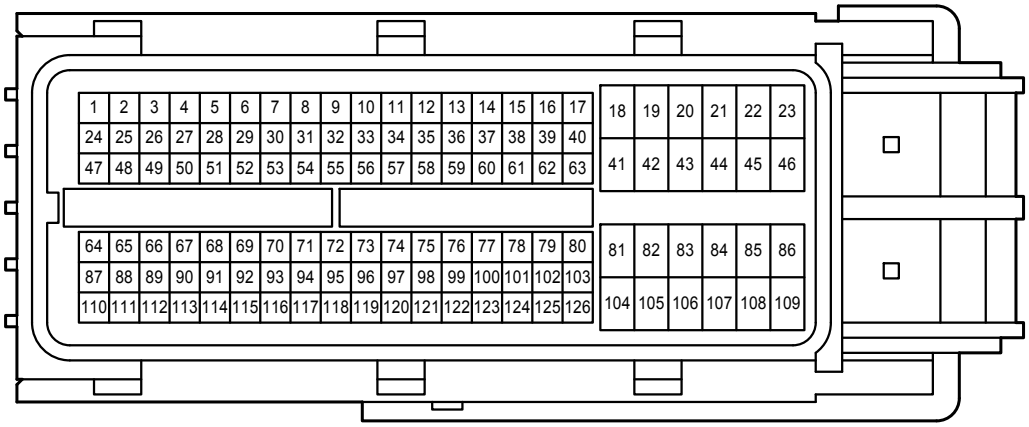


C 47
Black




C 50
Black

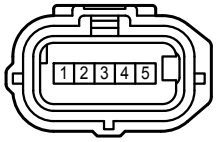

C 54
Gray




C 65
Black

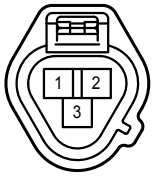


C 66
Black




C 67
Black




C 68
Black



C 69
Black



C 70
Black




C 71
Gray




C 72
Gray




C 73
Dark Gray

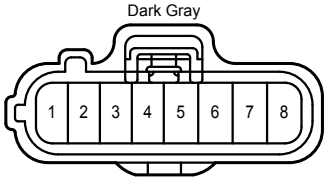


C 74
Black

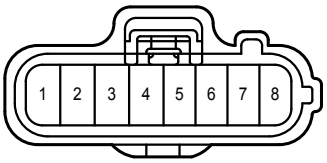


C 75
Dark Gray

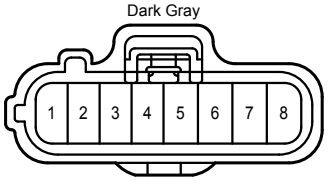


C 76
Black

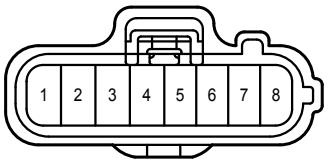

C 77




C 78




C 79
Gray




C 80
Black

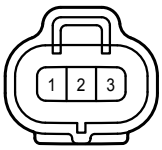

C 81
Black

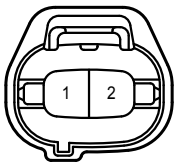

C 82
Black

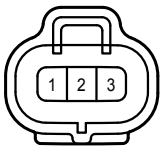


C 83
Black




C 84
Black




C 85
Black

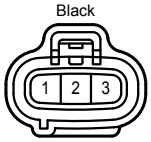


C 86
Black

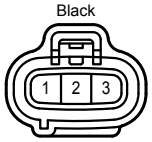


C 87
Black

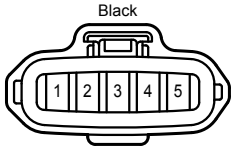


C 88
Black

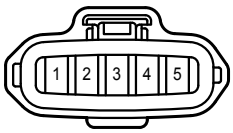


C 89
Black

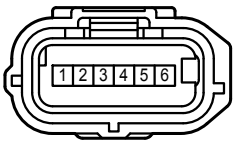

C 90
Black

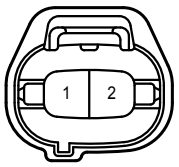


C 91
Gray

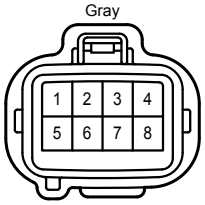


C 92
Black




C 93
Gray

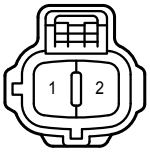


C 94
Gray

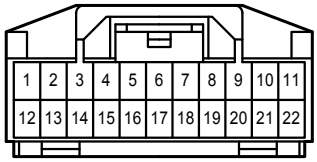

C 95
Black

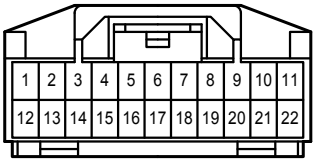

C 96
Gray

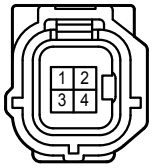


C 97
Black



C 98
Gray



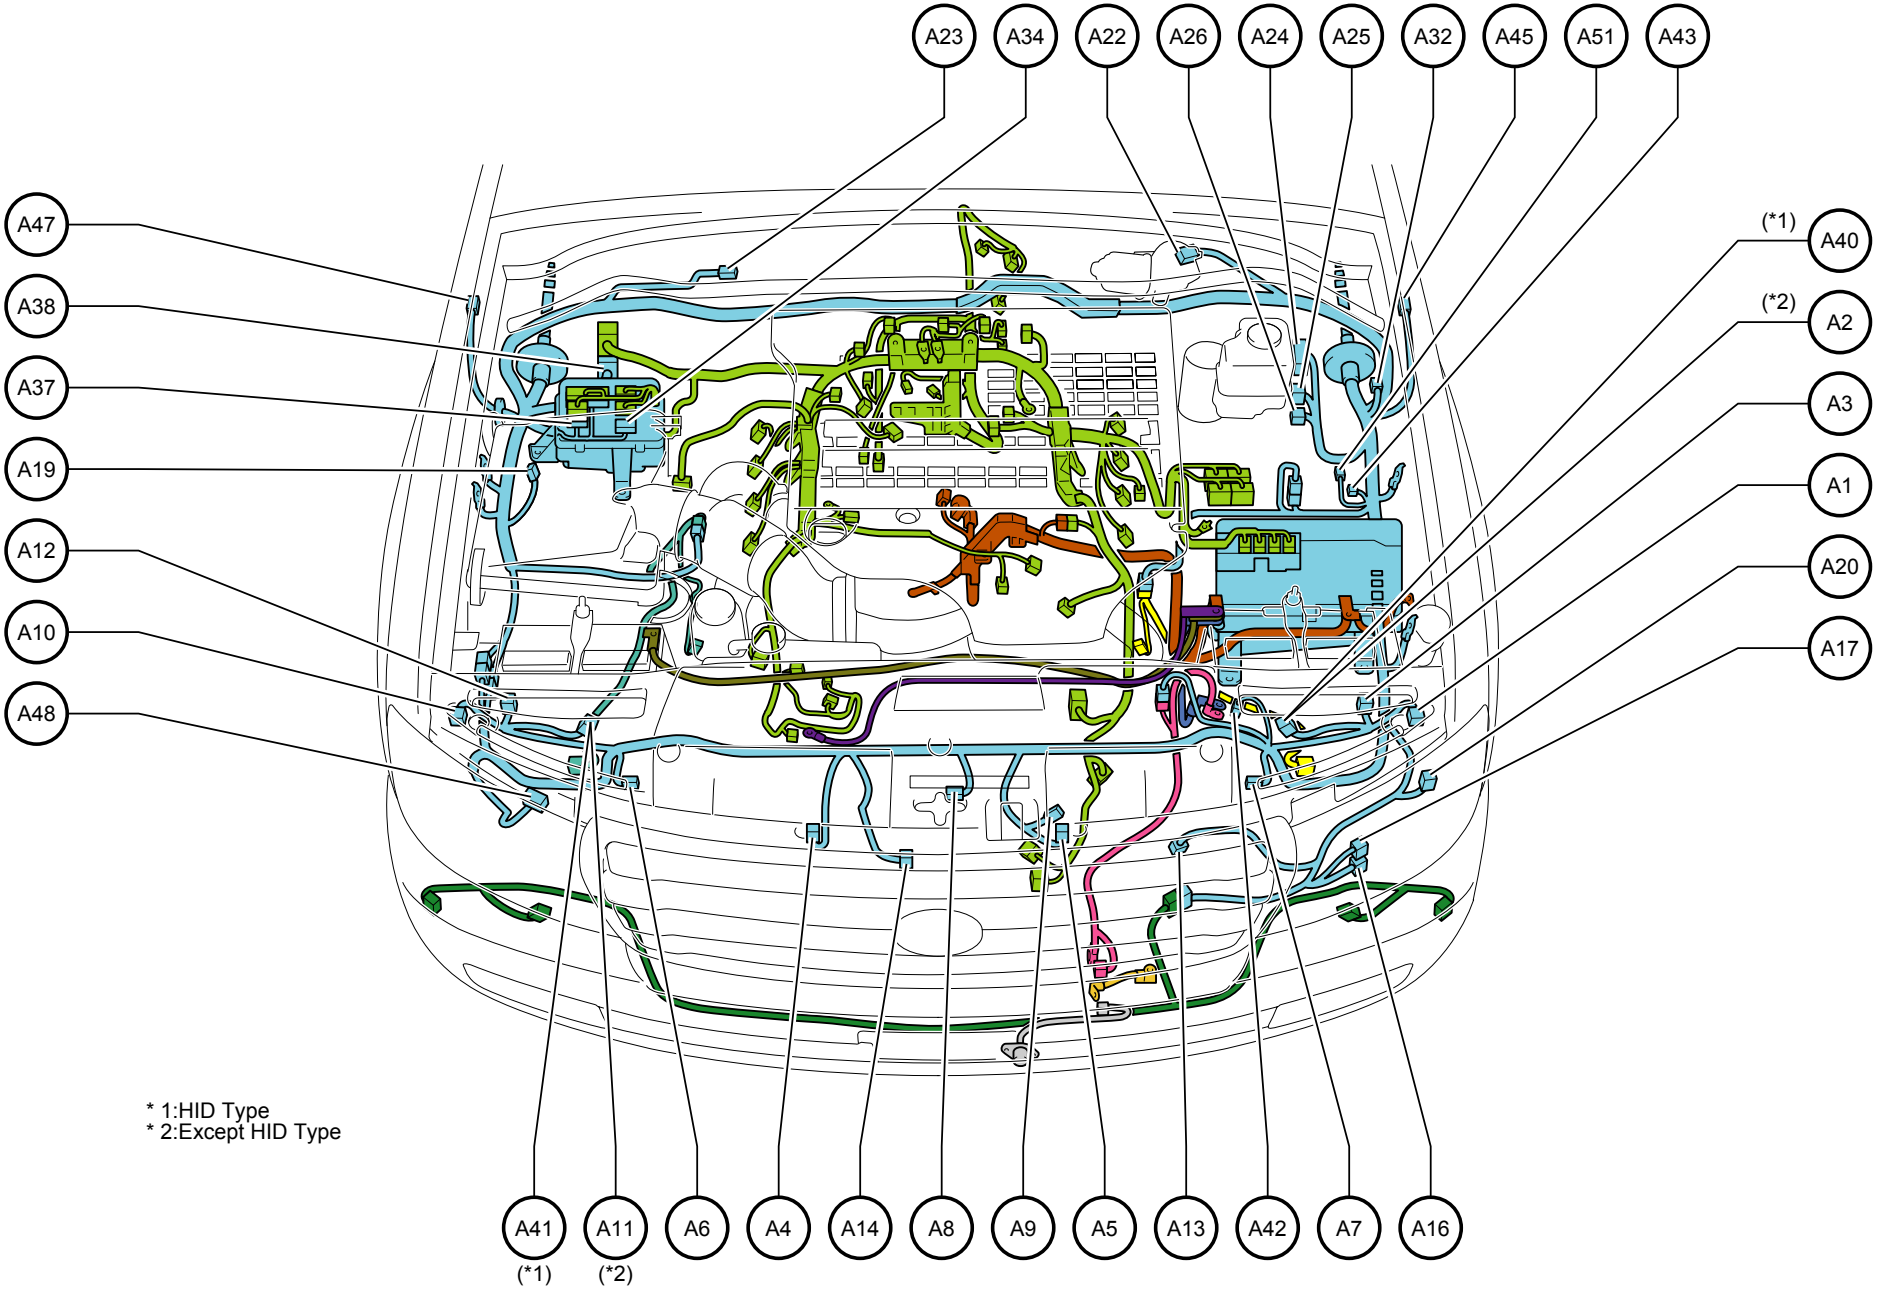


* 1:HID Type
* 2:Except HID Type

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 17 Headlight Cleaner Control Relay and Motor
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 23 Front Wiper Deicer (Windshield Glass)
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 38 ECM
A 40 Headlight Assembly LH
A 41 Headlight Assembly RH
A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
A 43 Level Warning Switch (Fuel Filter Assembly)
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH
A 48 Turbo Motor Driver
A 51 Clogging Switch (Fuel Filter Assembly)


A 1
Gray



A 2
Black

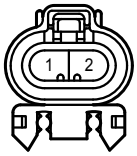

A 3
Black

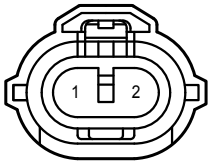

A 4
Black



A 5
Black



A 6
Yellow



A 7
Yellow



A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

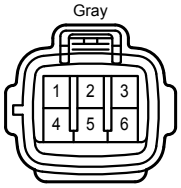


A 11
Black

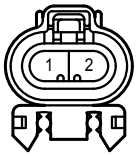

A 12
Black

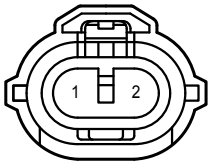


A 13
Black

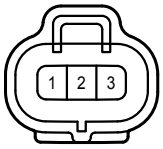

A 14
Black




A 16
Gray

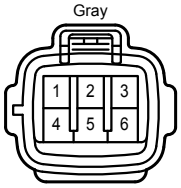

A 17
Black



A 19
Black



A 20
Black




A 22
Black




A 23
Gray




A 24
Black

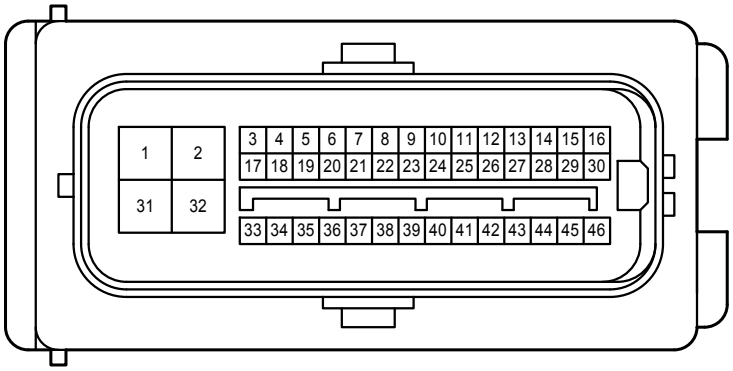


A 25
Black

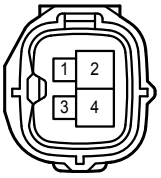


A 26
Gray

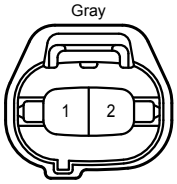


A 32
Black

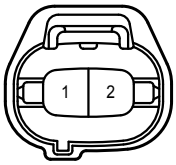


A 34
White

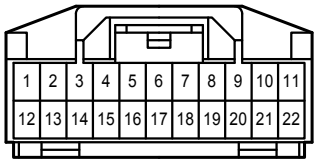

A 37
Blue

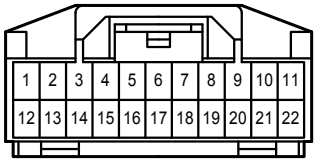

A 38
Black

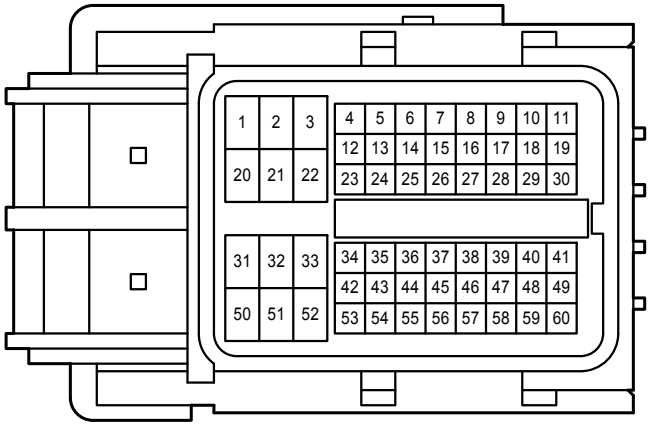


A 40
Gray



A 41
Gray



A 42
Black

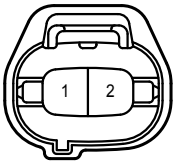

A 43
Gray




A 45
Gray




A 47
Gray




A 48
Black

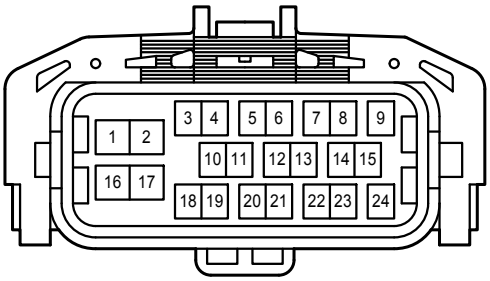

A 51
Black

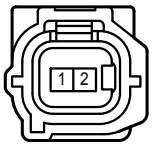


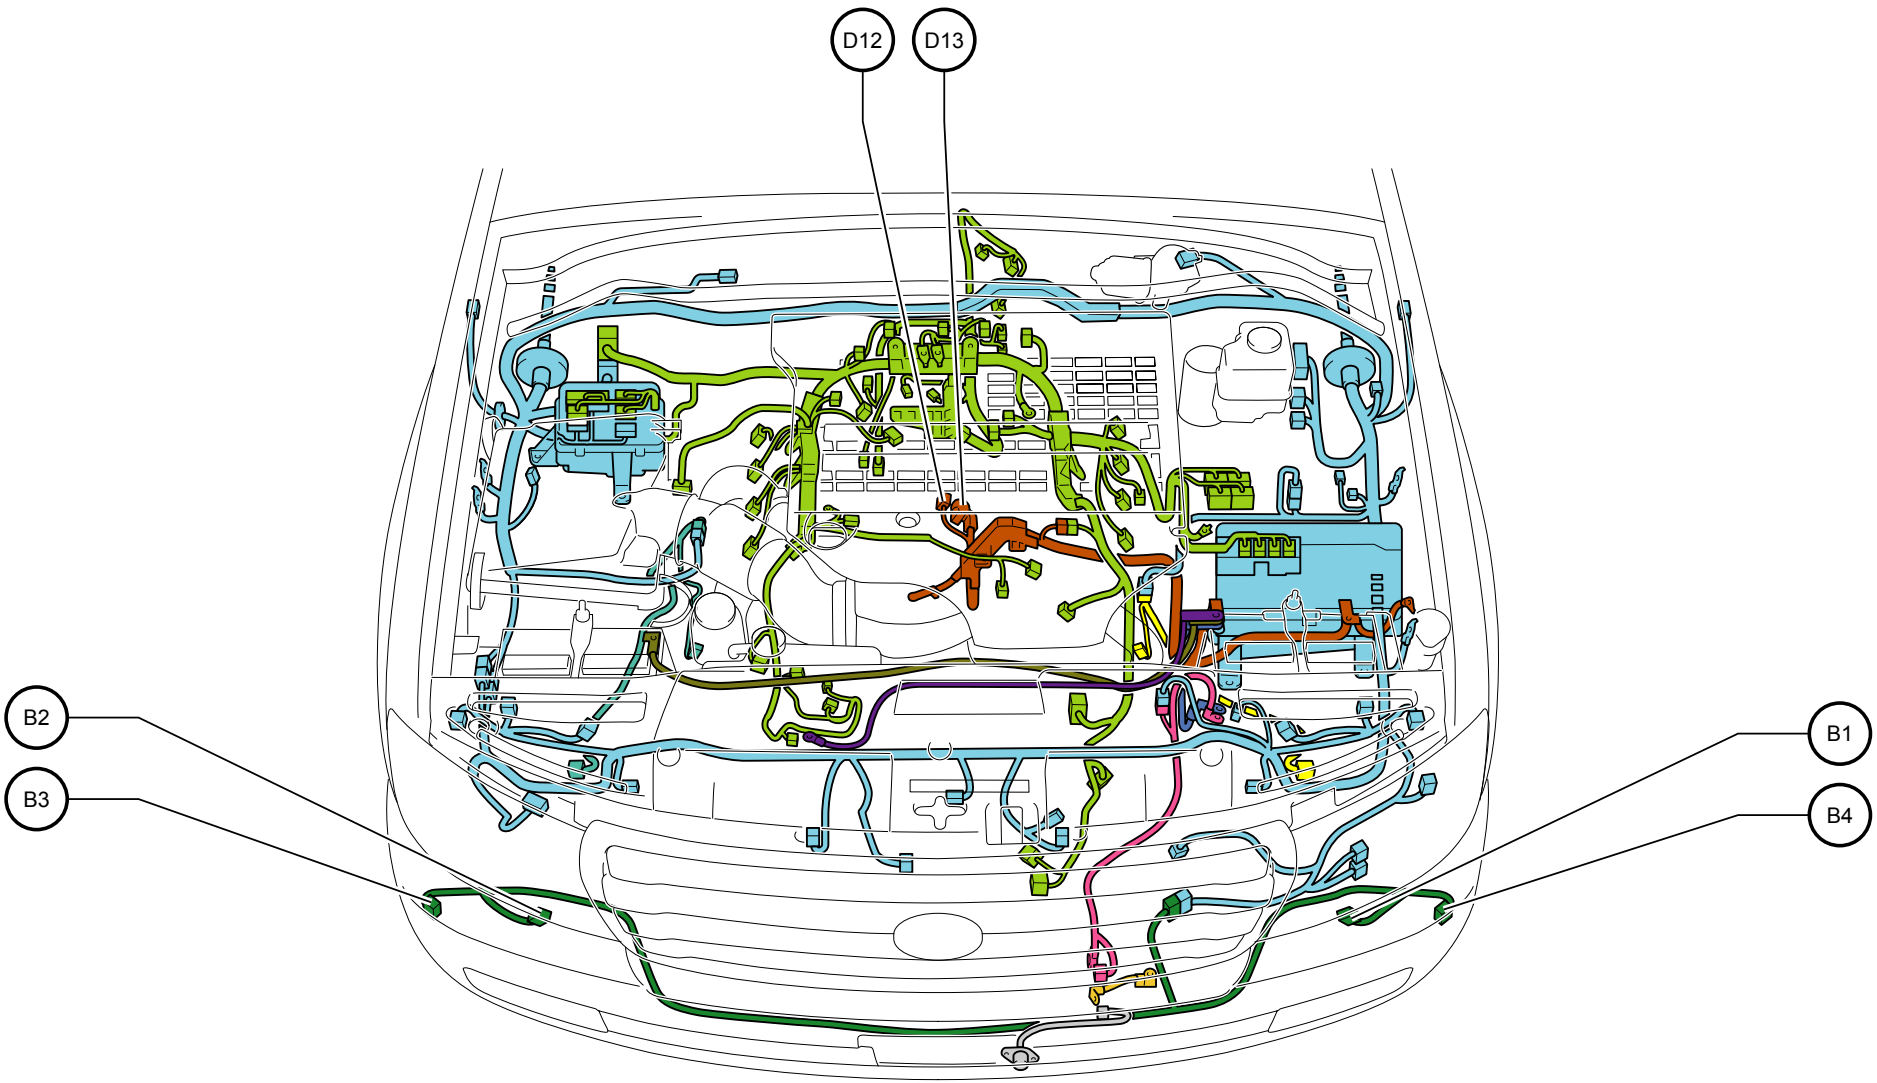
D12
D13
B2
B3
B1
B4


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH

D 12 Starter Assembly
D 13 Starter Assembly


B 1
Brown

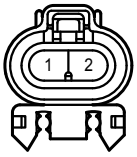


B 2
Brown

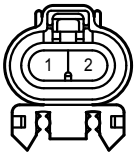

B 3
Black

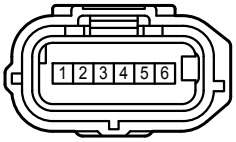


B 4
Black

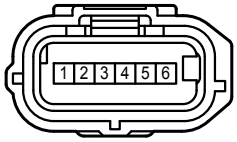


D 12
Black



D 13




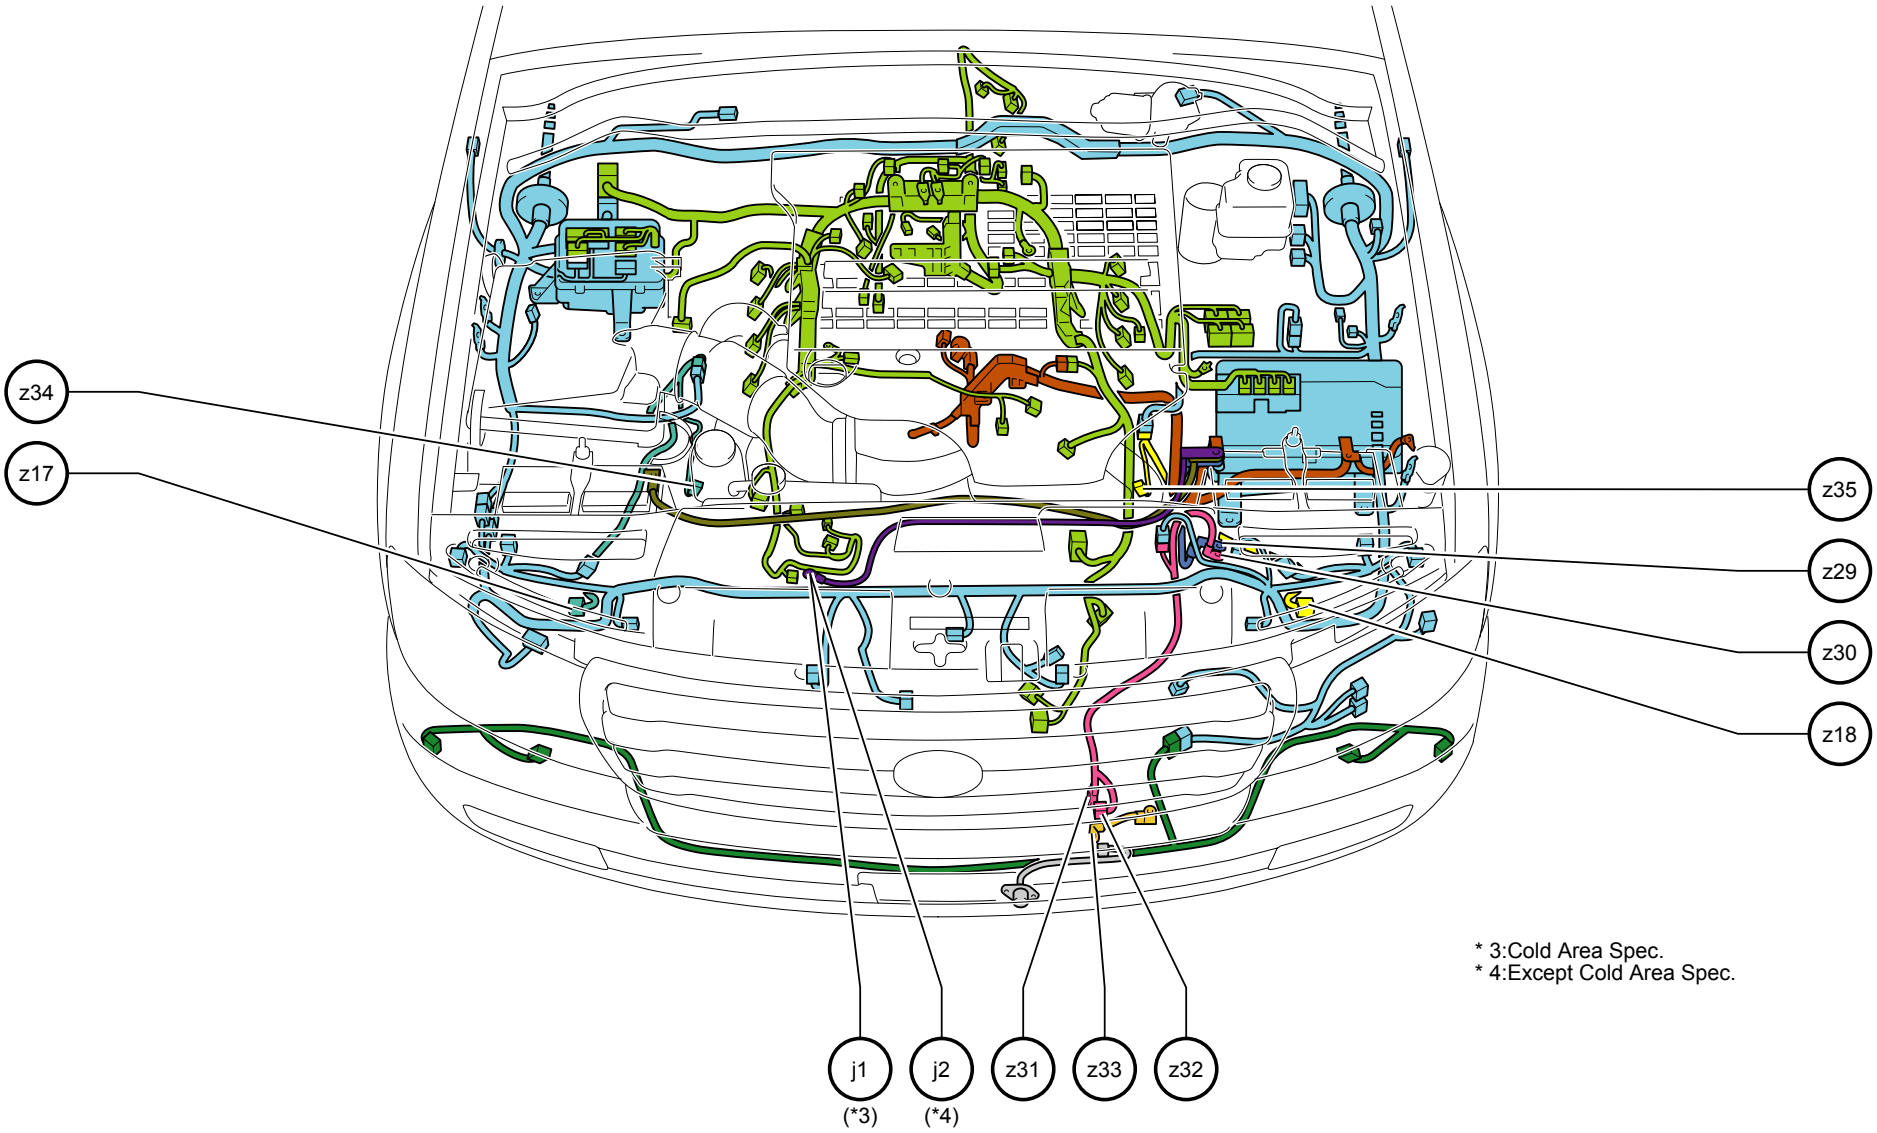
z34
z17
z35
z29
z30
z18
j1
(*3)
j2
(*4)
z31
z33
z32
* 3:Cold Area Spec.
* 4:Except Cold Area Spec.


j 1 Generator Assembly
j 2 Generator Assembly

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
z 31 With Magnet Switch Winch Motor Assembly
z 32 With Magnet Switch Winch Motor Assembly
z 33 With Magnet Switch Winch Motor Assembly
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH

j 1



j 2




z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

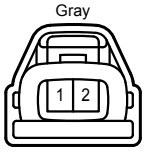


z 33




z 34
Black

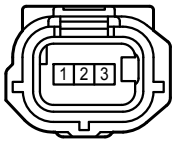



z 35
Black

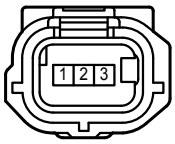



* 1:Liftgate Type Body
* 2:Swing Type Body

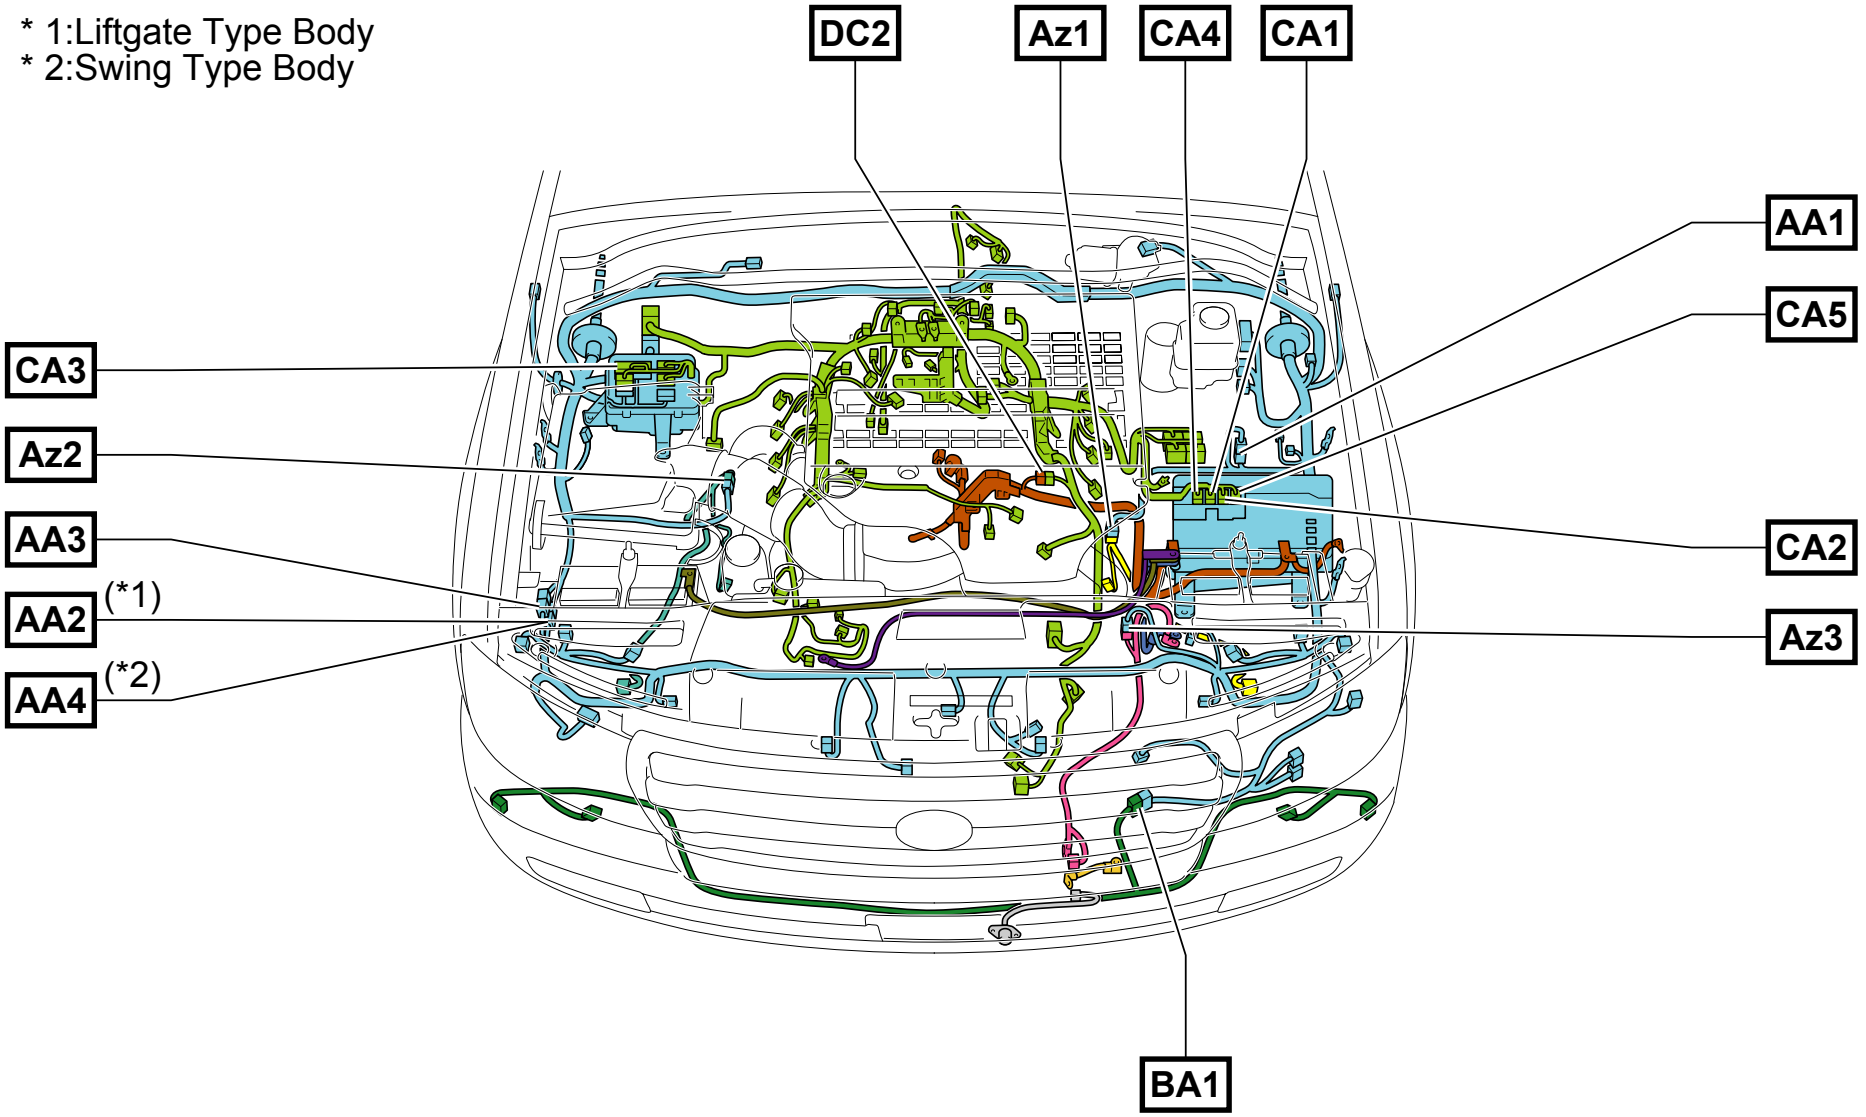


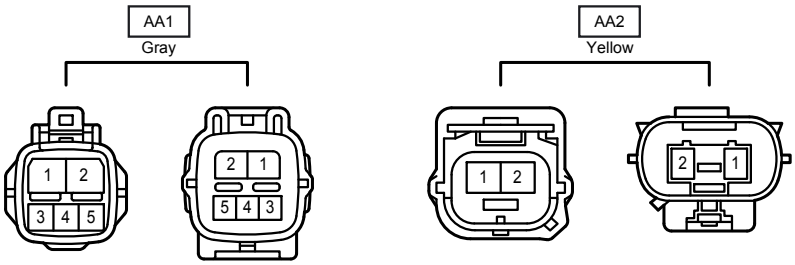
AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1

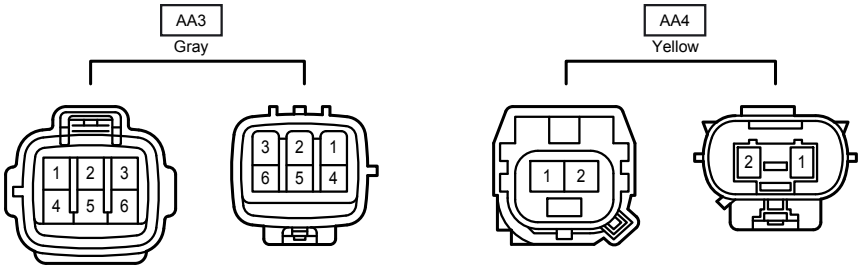

AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AA4
Yellow
1 2
2 1

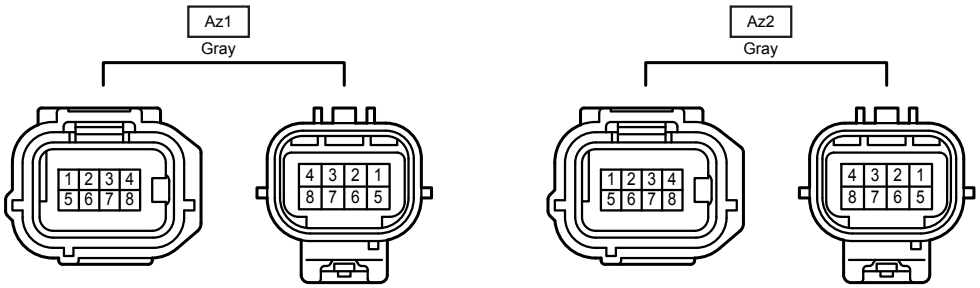
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

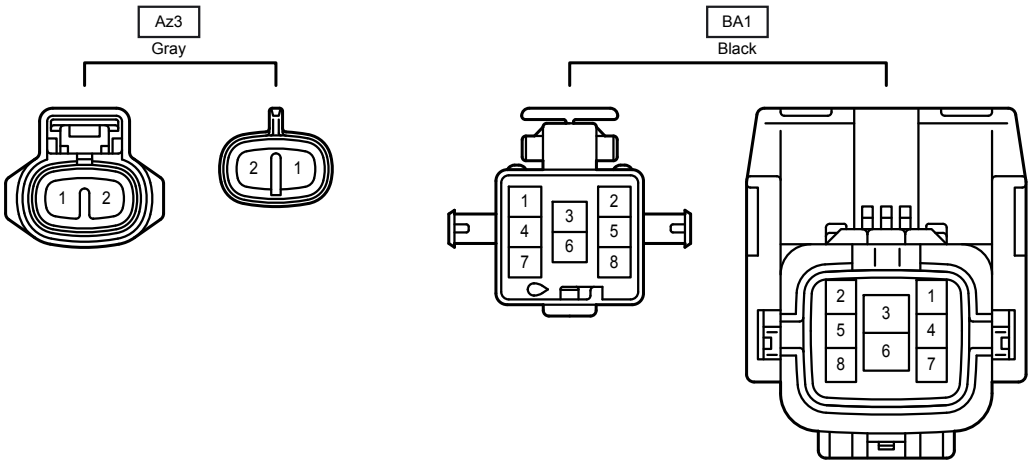

Az3
Gray
1 2
2 1
BA1
Black
1 4 7
3 6
2 5 8
2 5 8
3 6
1 4 7

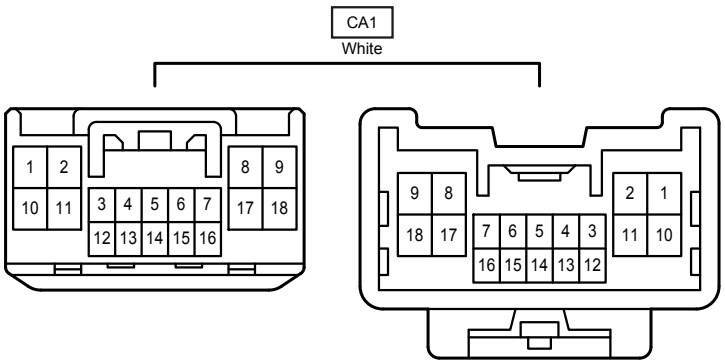
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10


CA2
White

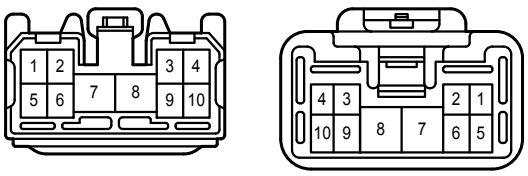


CA3
White

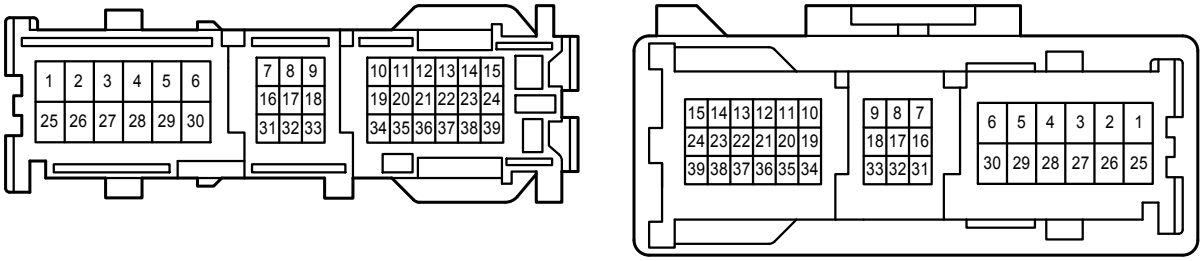


CA4
White

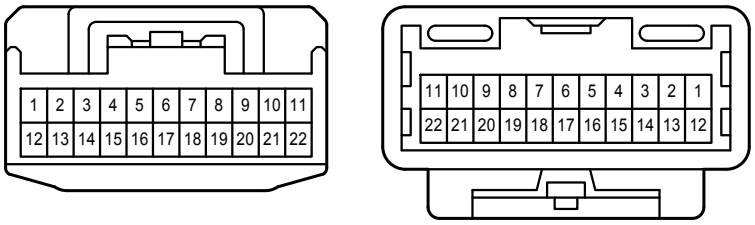



CA5
White

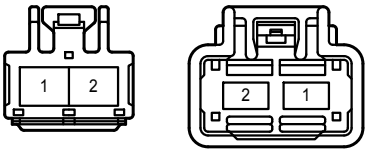

DC2
Gray

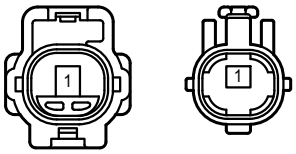


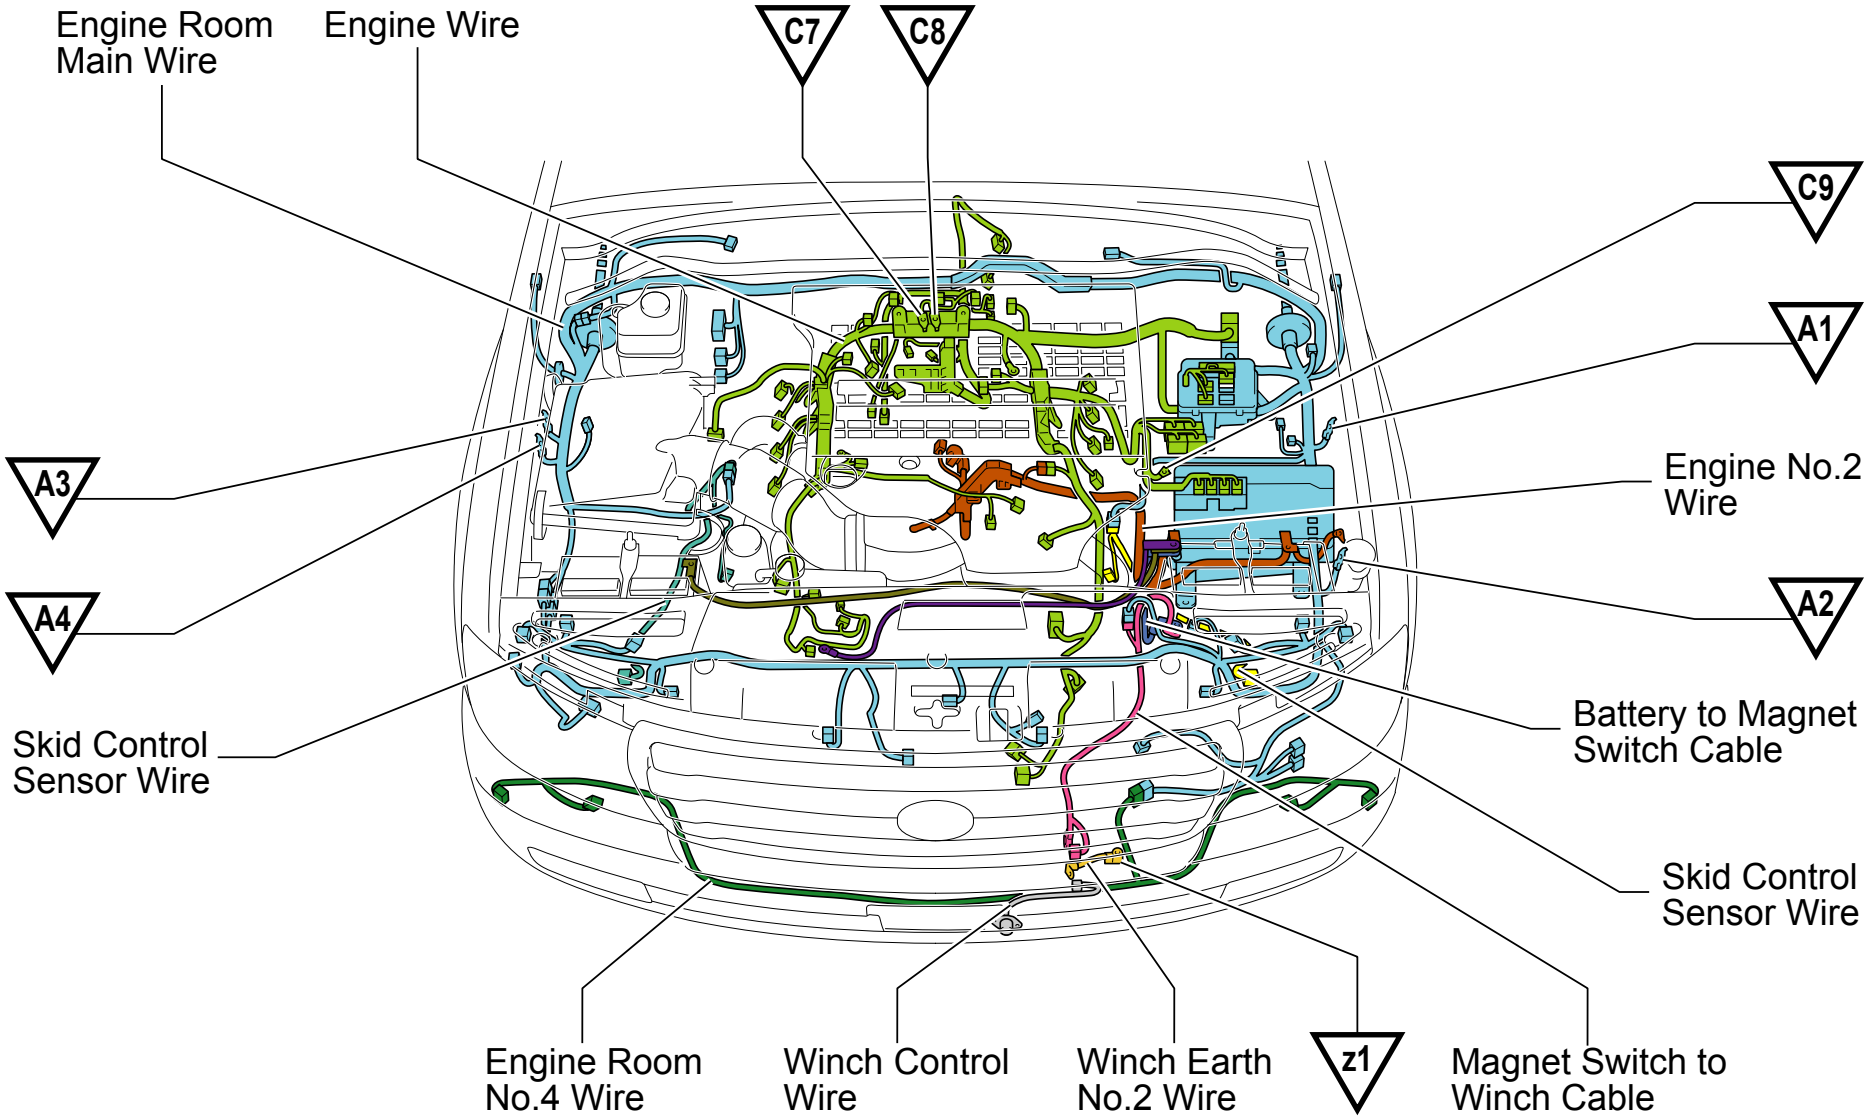
Engine Room Main Wire
Engine Wire
C7
C8
C9
A1
A3
A4
Engine No.2 Wire
A2
Skid Control Sensor Wire
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine Room No.4 Wire
Winch Control Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable

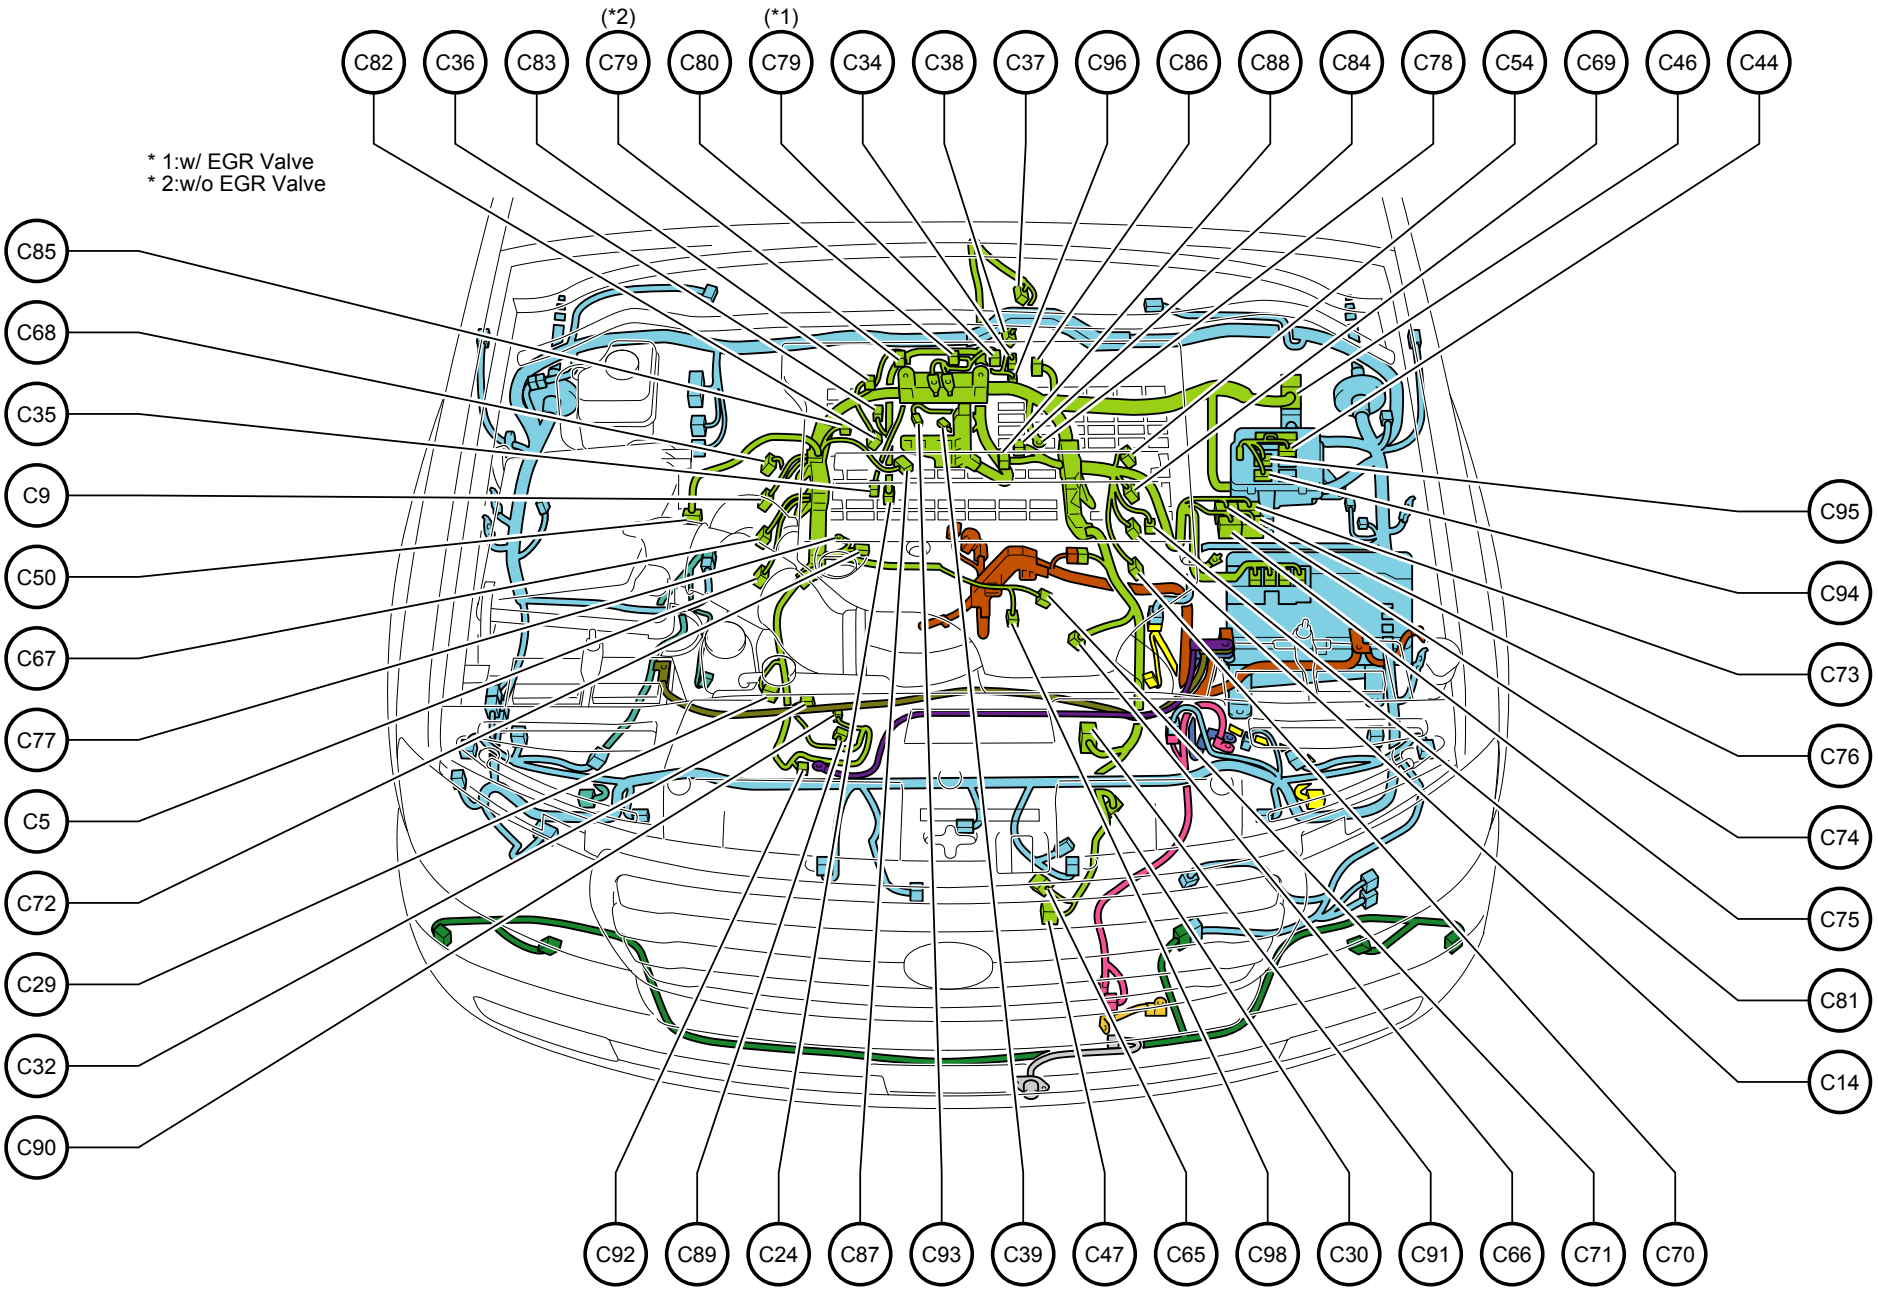

* 1:w/ EGR Valve
* 2:w/o EGR Valve
(*2)
(*1)
C82
C36
C83
C79
C80
C79
C34
C38
C37
C96
C86
C88
C84
C78
C54
C69
C46
C44
C85
C68
C35
C9
C50
C67
C77
C5
C72
C29
C32
C90
C95
C94
C73
C76
C74
C75
C81
C14
C92
C89
C24
C87
C93
C39
C47
C65
C98
C30
C91
C66
C71
C70

C 5 Fuel Injector Assembly No.1
C 9 Fuel Injector Assembly No.5
C 14 Fuel Injector Assembly No.4
C 24 Park/Neutral Position Switch
C 29 Power Steering Oil Pressure Switch
C 30 Cooler Compressor Assembly
C 32 Engine Oil Level Sensor
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 39 Back-Up Light Switch Assembly
C 44 Junction Connector
C 46 ECM
C 47 Oil Pressure Sender Gage Assembly
C 50 Mass Air Flow Meter
C 54 Fuel Injector Assembly No.8
C 65 Crankshaft Position Sensor
C 66 Camshaft Position Sensor
C 67 Fuel Injector Assembly No.3
C 68 Fuel Injector Assembly No.7
C 69 Fuel Injector Assembly No.6
C 70 Fuel Injector Assembly No.2
C 71 E.F.I. Engine Coolant Temperature Sensor
C 72 Injection or Supply Pump Assembly
C 73 Injector Driver (No.1)
C 74 Injector Driver (No.1)
C 75 Injector Driver (No.2)
C 76 Injector Driver (No.2)
C 77 Glow Plug Assembly
C 78 Glow Plug Assembly
C 79 Intake Air Temperature Sensor
C 80 Diesel Turbo Pressure Sensor
C 81 VSV (ACM)
C 82 Fuel Pressure Sensor
C 83 Diesel Throttle Body Assembly RH
C 84 Diesel Throttle Body Assembly LH
C 85 Diesel Throttle Body Assembly RH
C 86 Diesel Throttle Body Assembly LH
C 87 No.1 EGR Valve Assembly
C 88 No.2 EGR Valve Assembly
C 89 DC Motor and Nozzle Vane Position Sensor RH
C 90 DC Motor and Nozzle Vane Position Sensor RH
C 91 DC Motor and Nozzle Vane Position Sensor LH
C 92 Generator Assembly
C 93 Shift Position Switch
C 94 Junction Connector
C 95 Junction Connector
C 96 Electronically Controlled Transmission Solenoid
C 98 Viscous with Magnet Clutch Heater Assembly


C 5
Gray

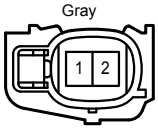


C 9
Gray

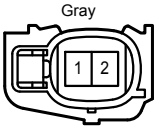

C 14
Gray

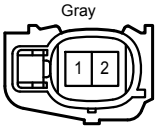

C 24
Gray

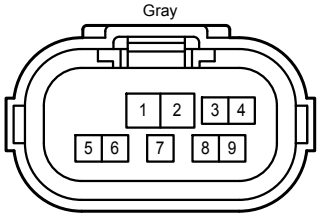

C 29
Black




C 30
Gray




C 32
Gray




C 34
Gray

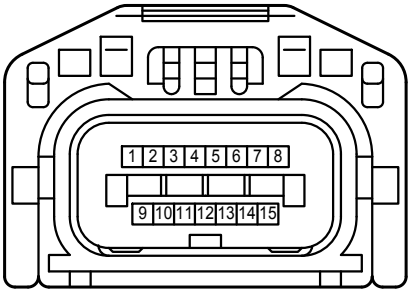


C 35
Black

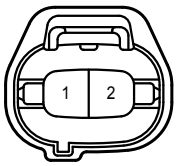


C 36
Black

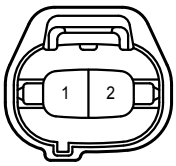


C 37
Black

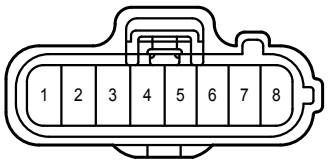


C 38
Dark Gray

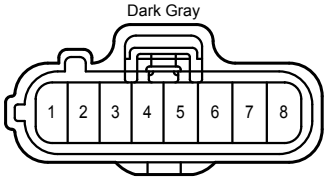


C 39
Gray

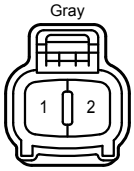

C 44
Blue

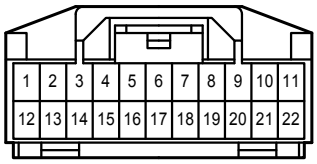


C 46
Black

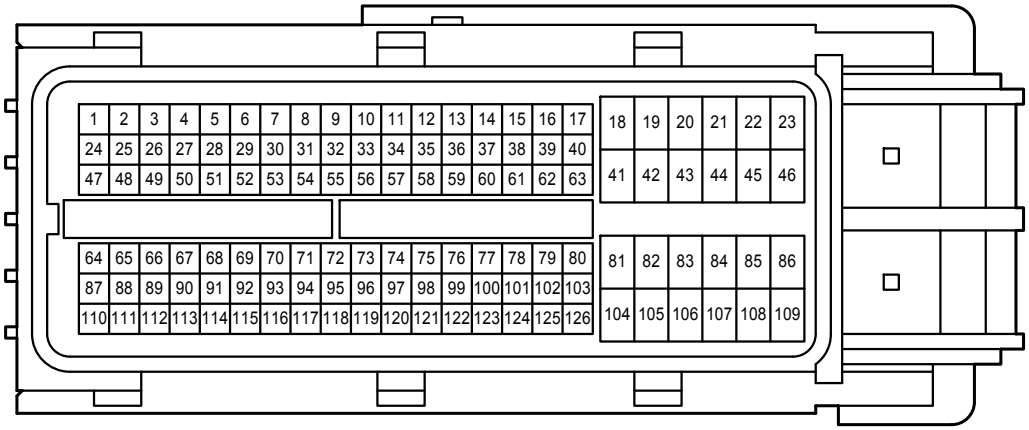


C 47
Black




C 50
Black

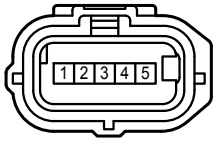

C 54
Gray




C 65
Black

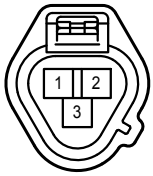


C 66
Black




C 67
Black




C 68
Black



C 69
Black



C 70
Black




C 71
Gray




C 72
Gray




C 73
Dark Gray

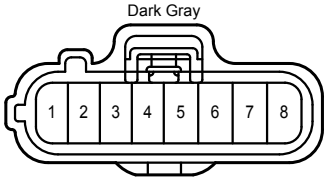


C 74
Black

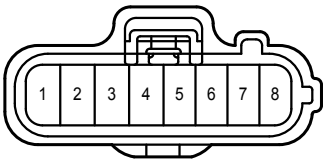


C 75
Dark Gray

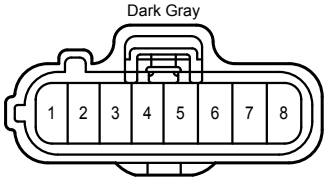


C 76
Black

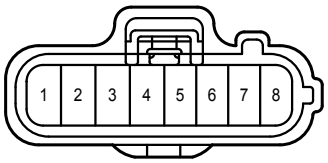

C 77




C 78




C 79
Gray




C 80
Black

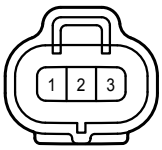

C 81
Black

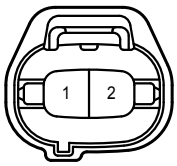

C 82
Black

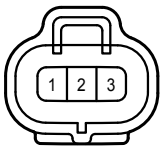


C 83
Black




C 84
Black




C 85
Black

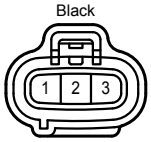


C 86
Black

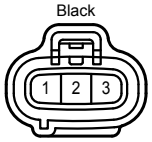


C 87
Black

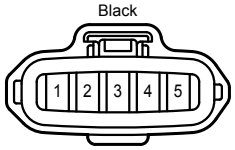


C 88
Black

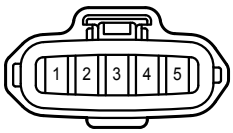


C 89
Black

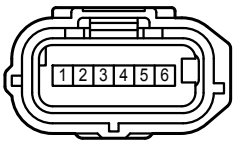

C 90
Black

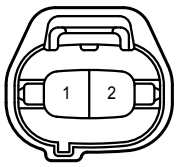


C 91
Gray

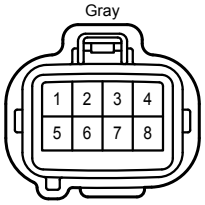


C 92
Black




C 93
Gray

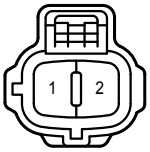


C 94
Gray

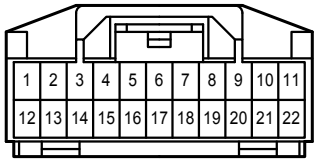

C 95
Black

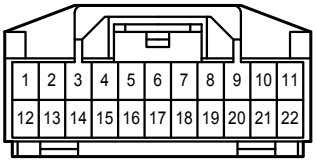


C 96
Gray

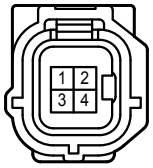

C 98
Gray

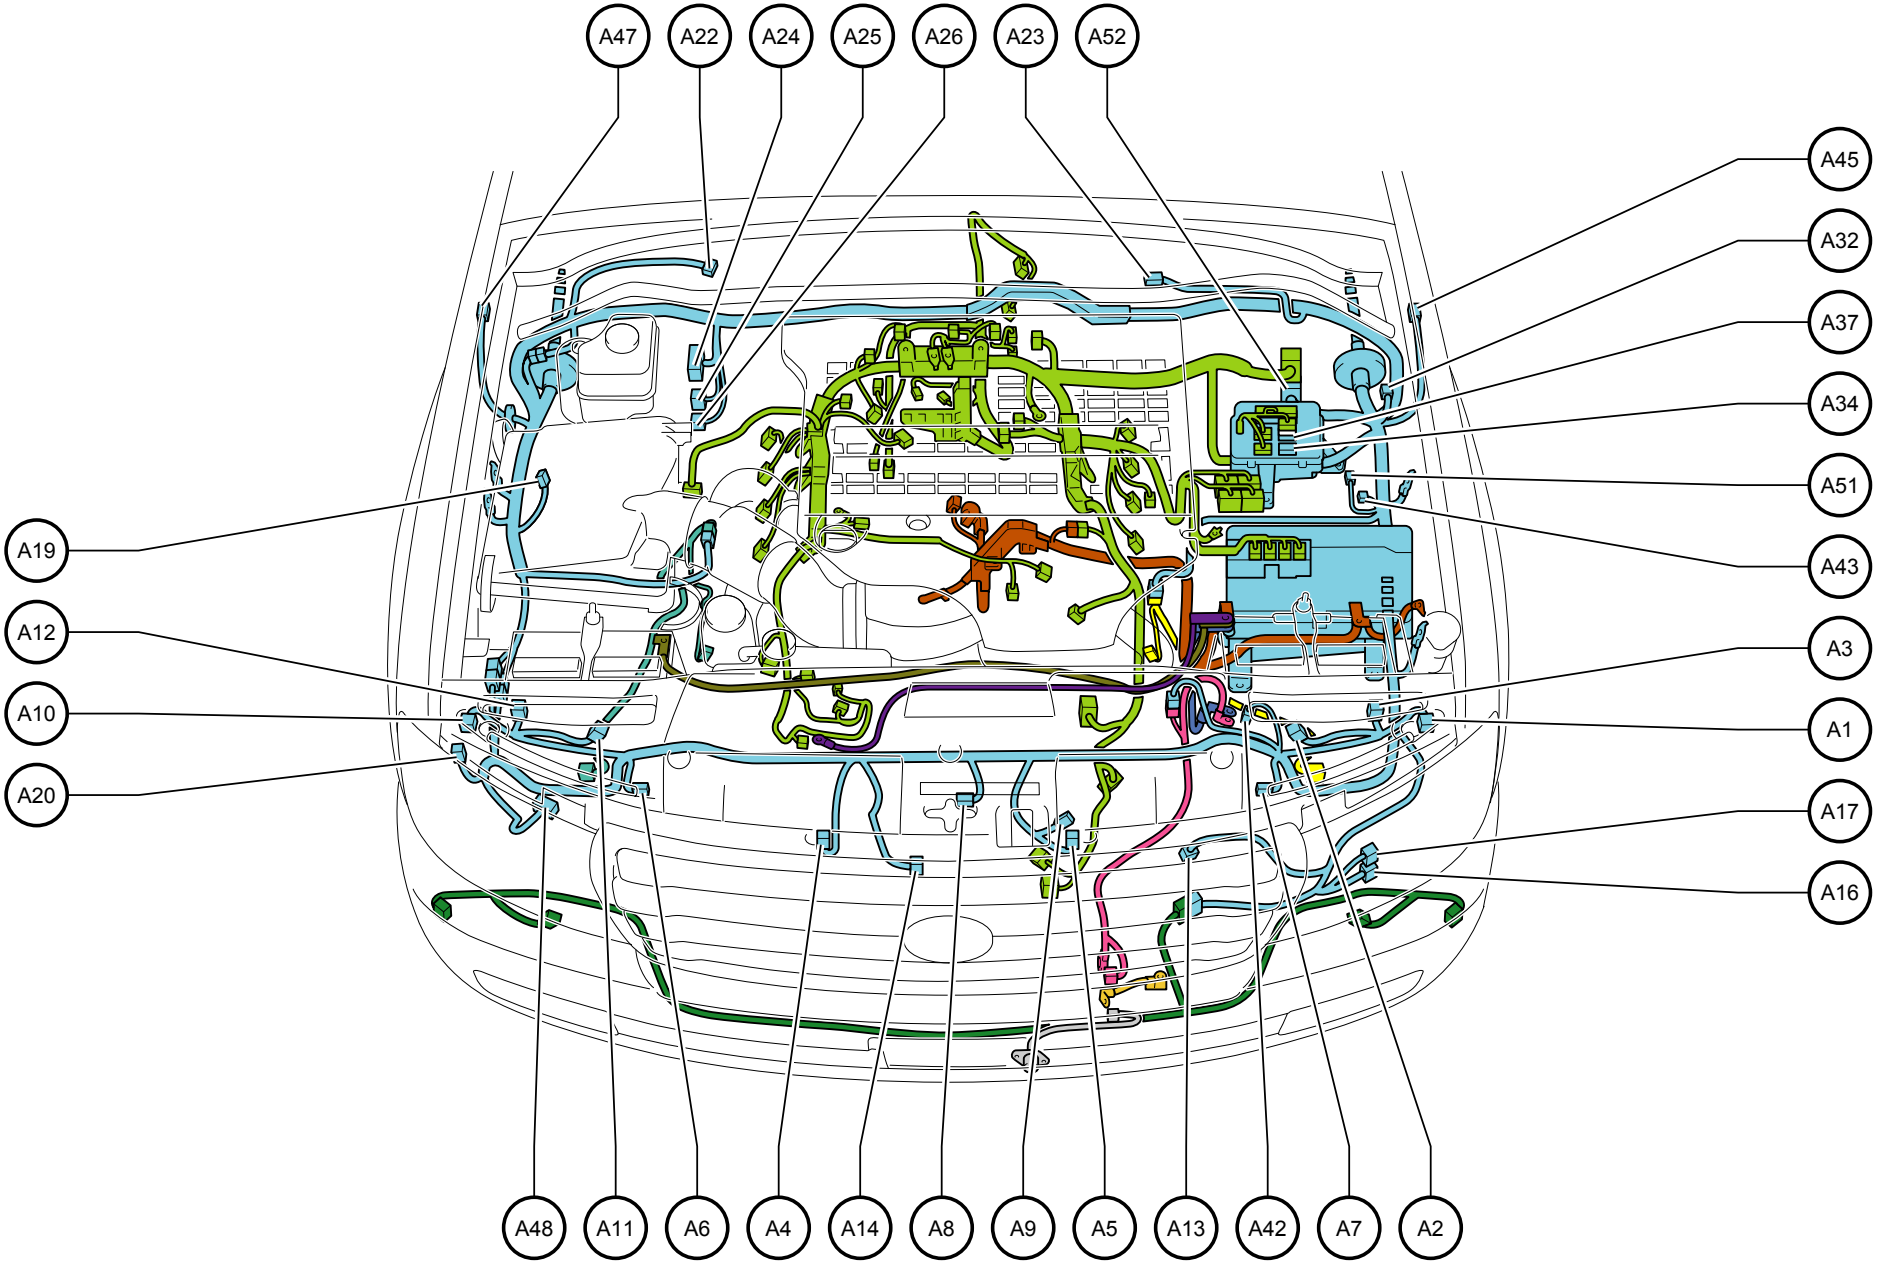



A47
A22
A24
A25
A26
A23
A52
A45
A32
A37
A34
A51
A43
A19
A12
A3
A10
A1
A20
A17
A16
A48
A11
A6
A4
A14
A8
A9
A5
A13
A42
A7
A2

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 17 Headlight Cleaner Control Relay and Motor
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 23 Front Wiper Deicer (Windshield Glass)
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
A 43 Level Warning Switch (Fuel Filter Assembly)
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH
A 48 Turbo Motor Driver
A 51 Clogging Switch (Fuel Filter Assembly)
A 52 ECM


A 1
Gray




A 2
Black

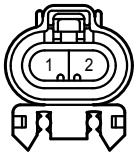

A 3
Black

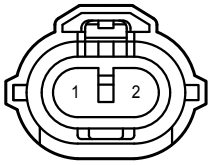

A 4
Black



A 5
Black



A 6
Yellow



A 7
Yellow



A 8
Dark Gray



(U.K.)

A 8
Black




(Except U.K.)


A 9
Black




A 10
Gray

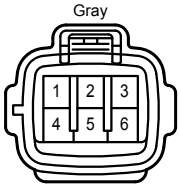


A 11
Black

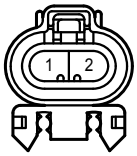

A 12
Black

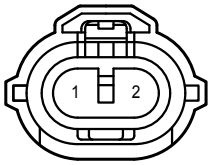


A 13
Black

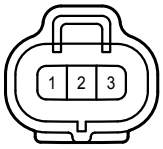

A 14
Black




A 16
Gray

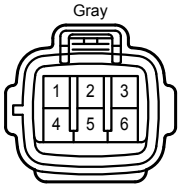

A 17
Black



A 19
Black



A 20
Black




A 22
Black




A 23
Gray




A 24
Black

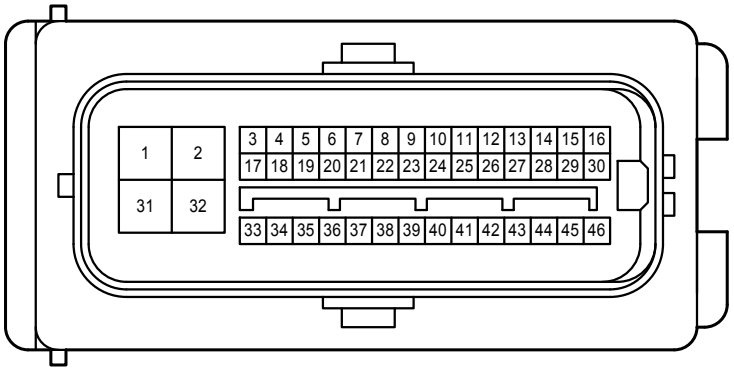


A 25
Black

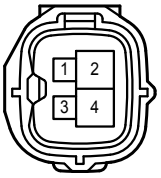


A 26
Gray

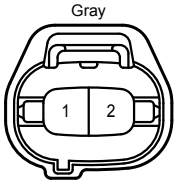


A 32
Black

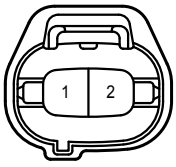


A 34
White

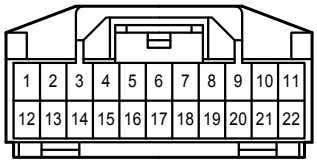

A 37
Blue

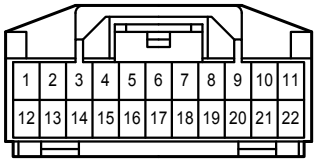

A 42
Black

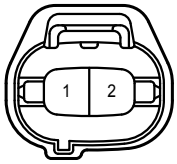

A 43
Gray




A 45
Gray




A 47
Gray




A 48
Black

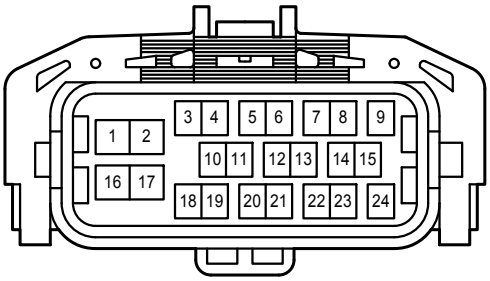


A 51
Black

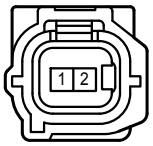

A 52
Black

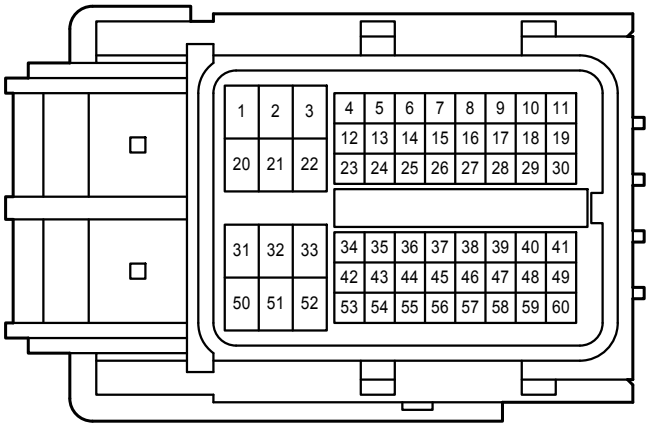


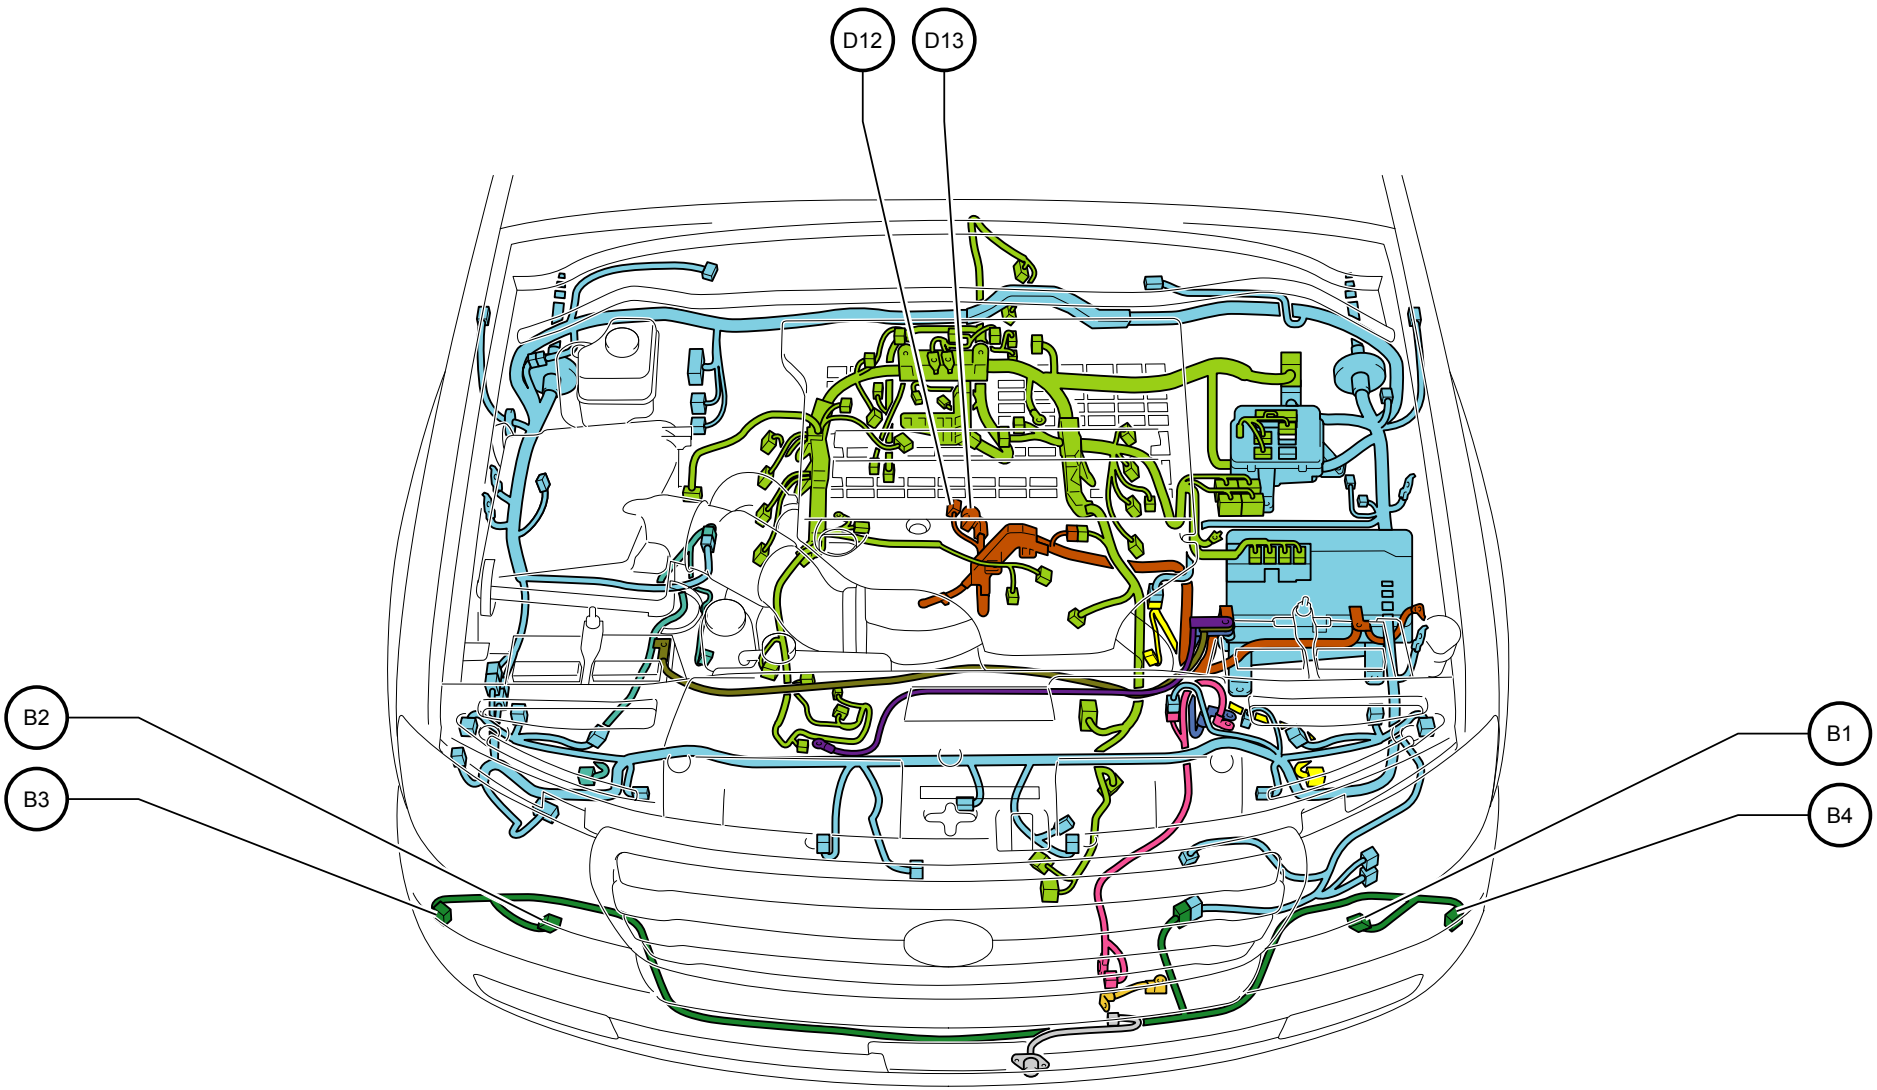
D12
D13
B2
B3
B1
B4


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH

D 12 Starter Assembly
D 13 Starter Assembly


B 1
Brown

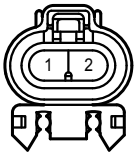


B 2
Brown

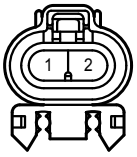

B 3
Black

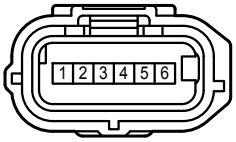


B 4
Black

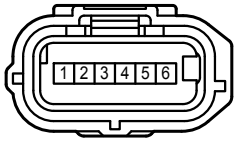


D 12
Black



D 13




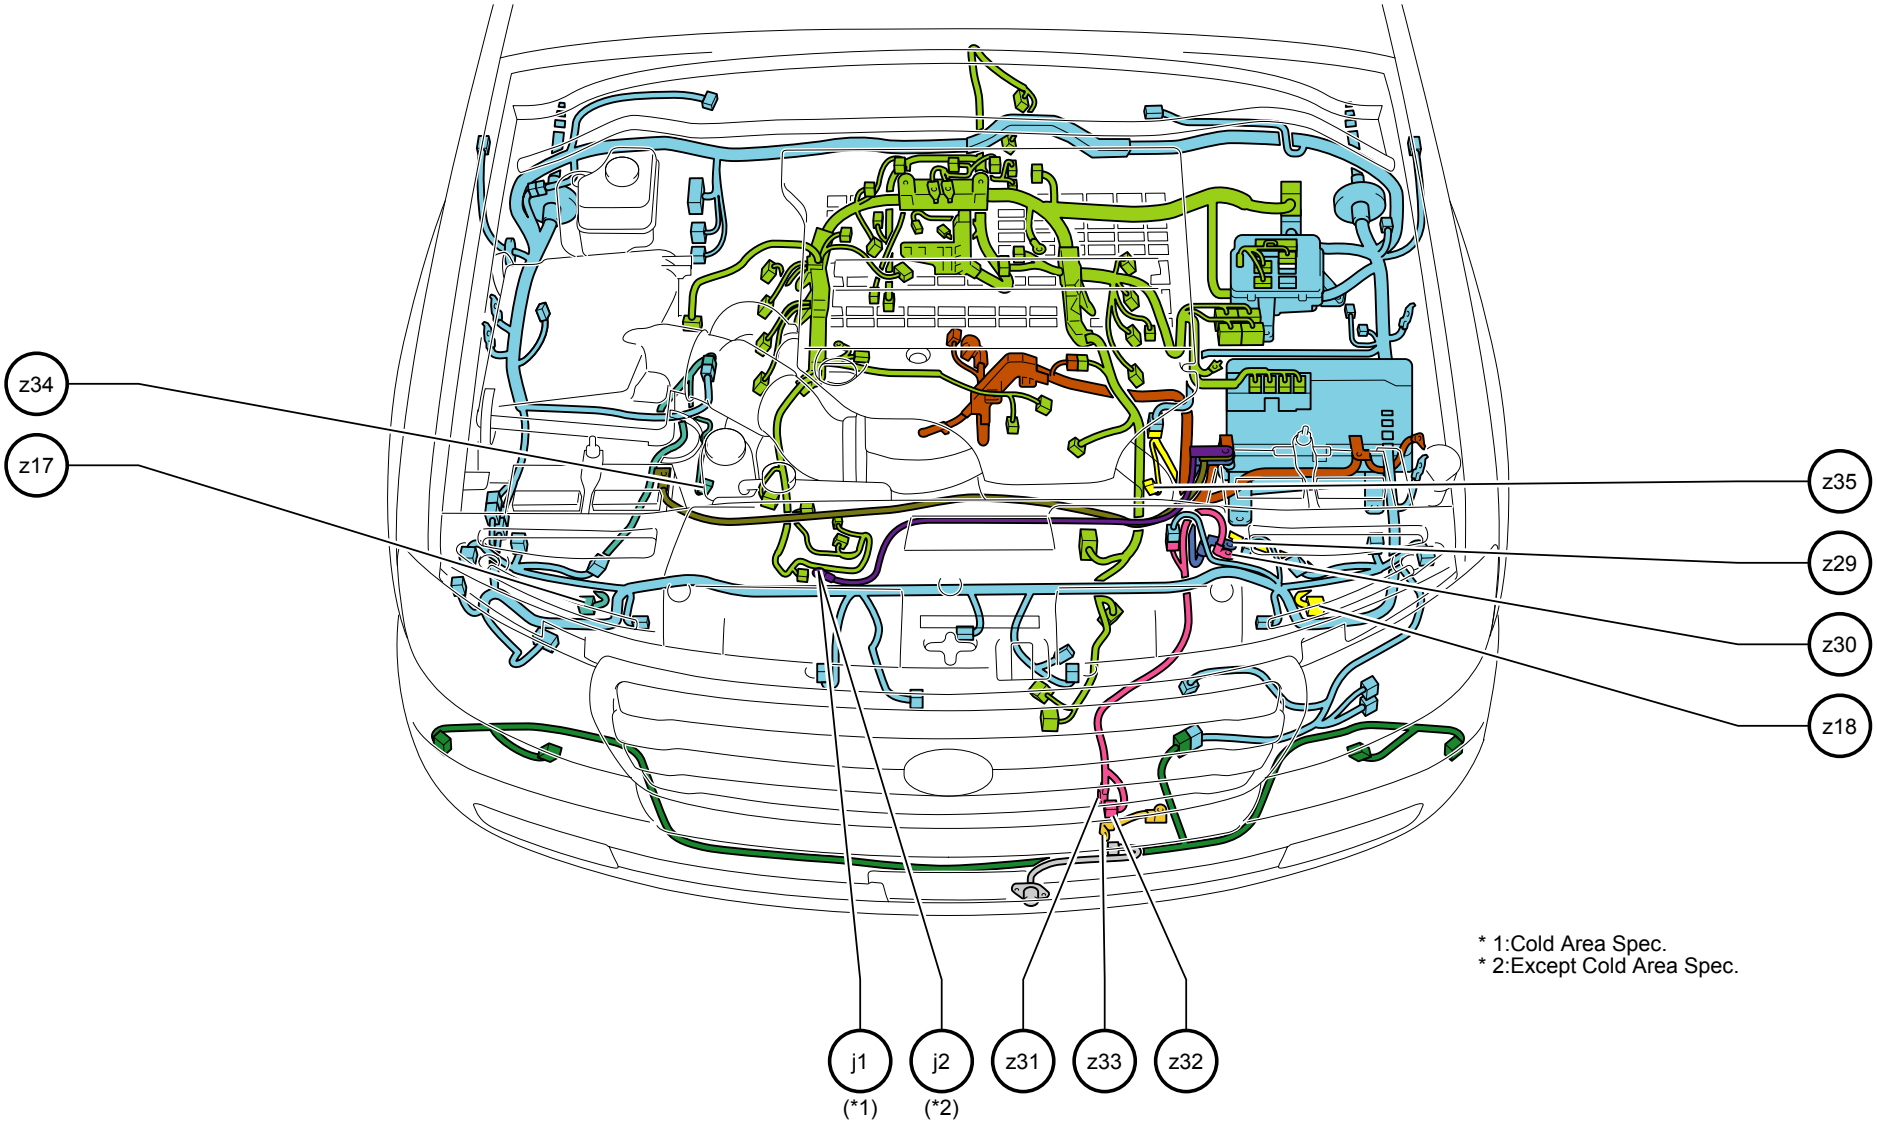
z34
z17
z35
z29
z30
z18
j1
(*1)
j2
(*2)
z31
z33
z32
* 1:Cold Area Spec.
* 2:Except Cold Area Spec.


j 1 Generator Assembly
j 2 Generator Assembly

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
z 31 With Magnet Switch Winch Motor Assembly
z 32 With Magnet Switch Winch Motor Assembly
z 33 With Magnet Switch Winch Motor Assembly
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH

j 1



j 2




z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

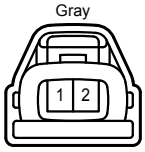


z 33




z 34
Black

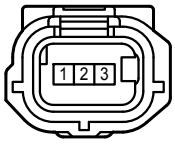



z 35
Black

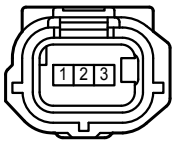



* 1:Liftgate Type Body
* 2:Swing Type Body

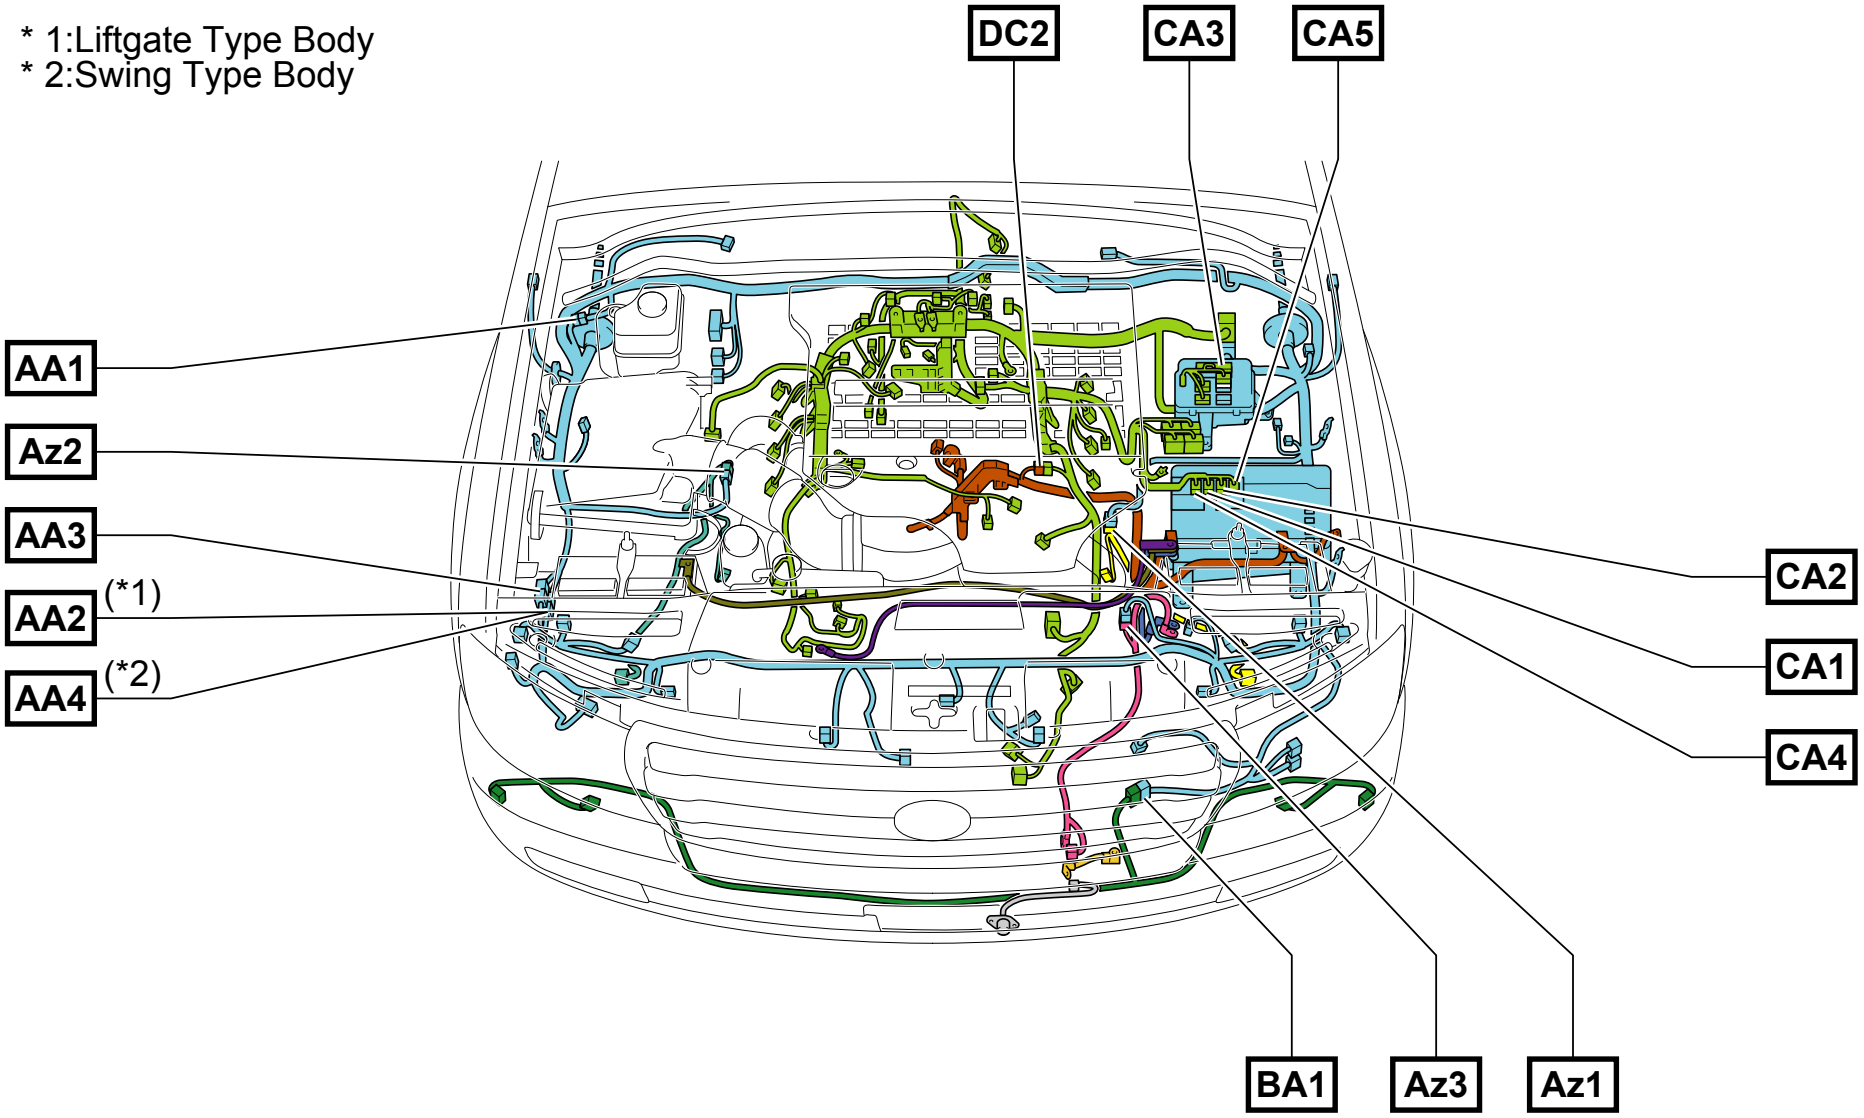


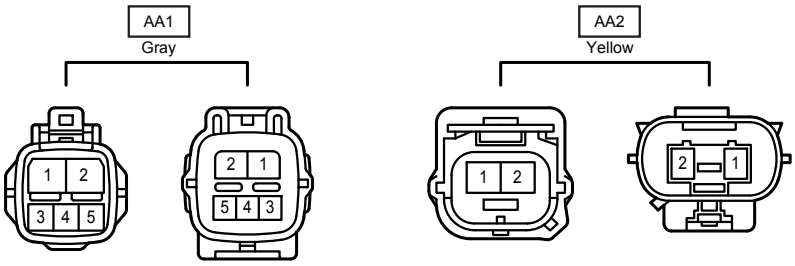
AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1

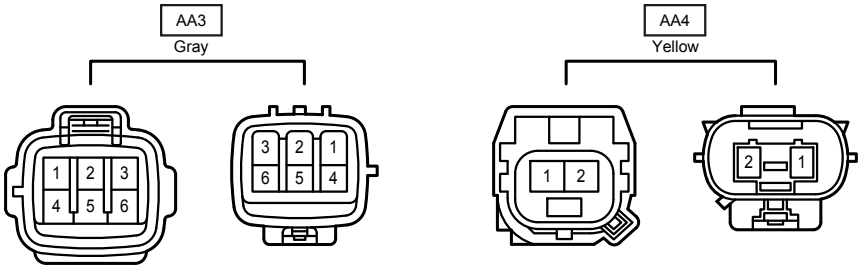

AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AA4
Yellow
1 2
2 1

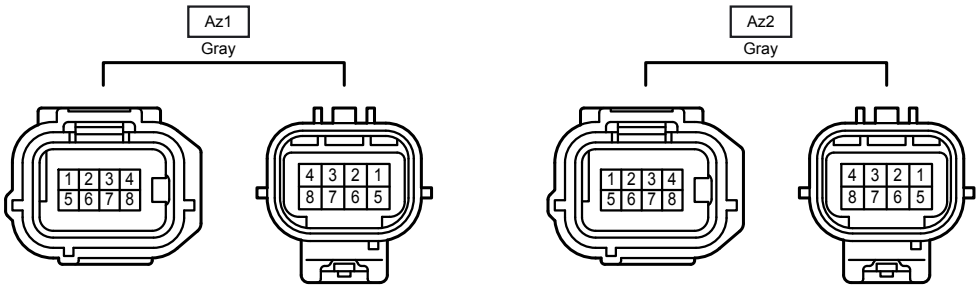
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

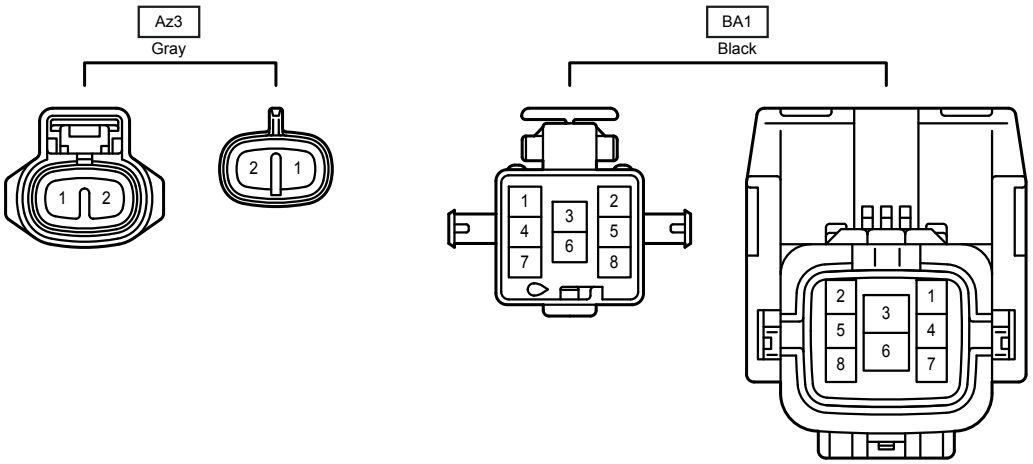

Az3
Gray
1 2
2 1
BA1
Black
1 4 7
3 6
2 5 8
2 5 8
3 6
1 4 7

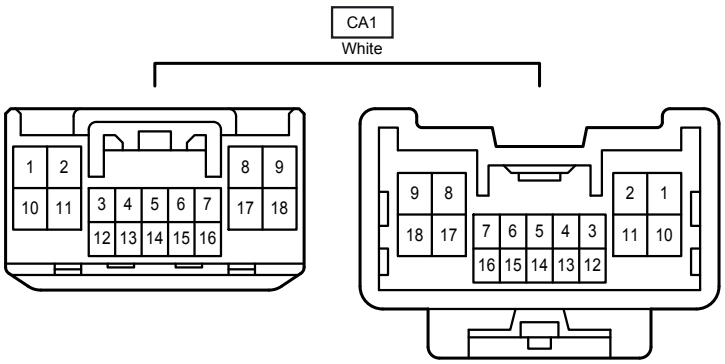
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10


CA2
White

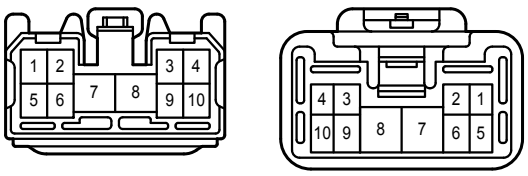


CA3
White

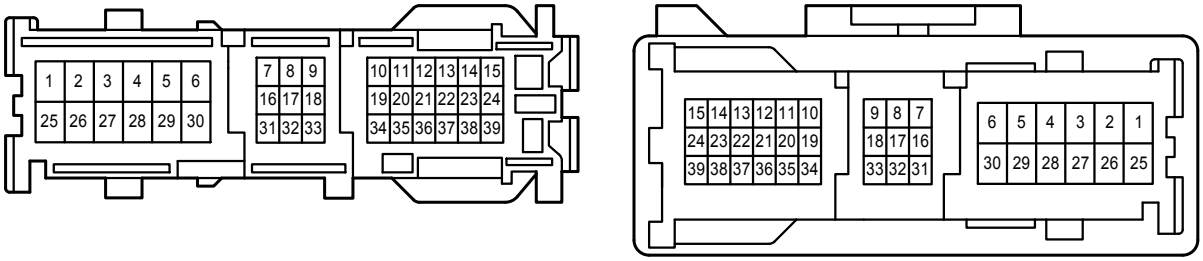


CA4
White

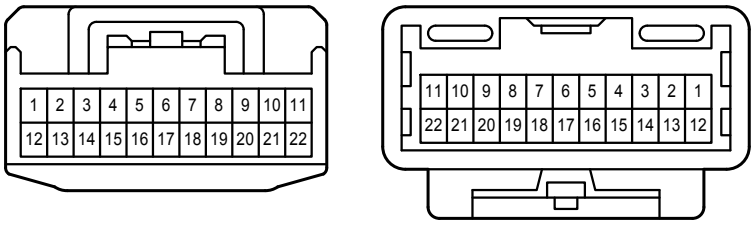



CA5
White

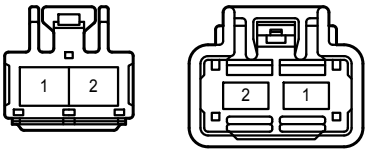

DC2
Gray

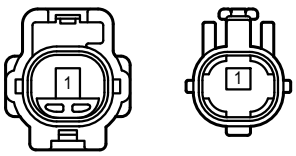


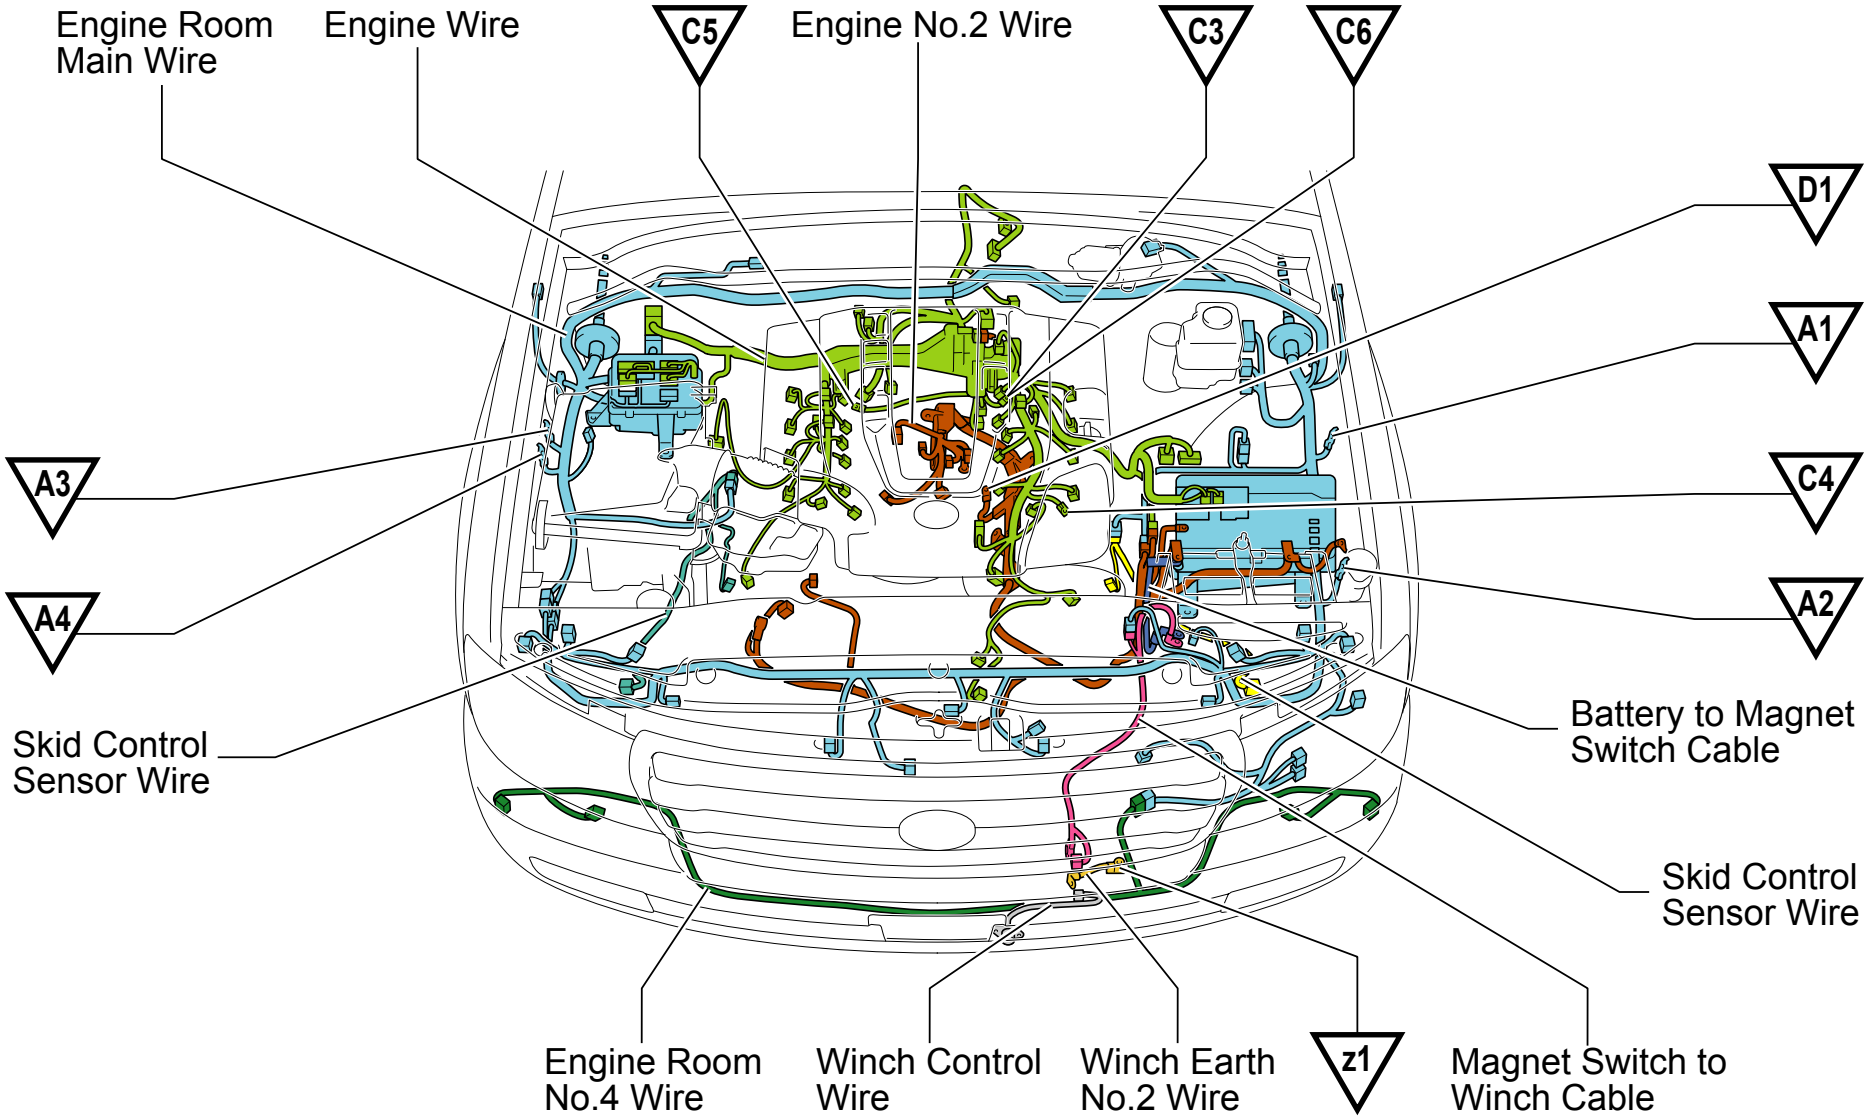
Engine Room Main Wire
Engine Wire
C5
Engine No.2 Wire
C3
C6
D1
A1
A3
C4
A4
A2
Skid Control Sensor Wire
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine Room No.4 Wire
Winch Control Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable

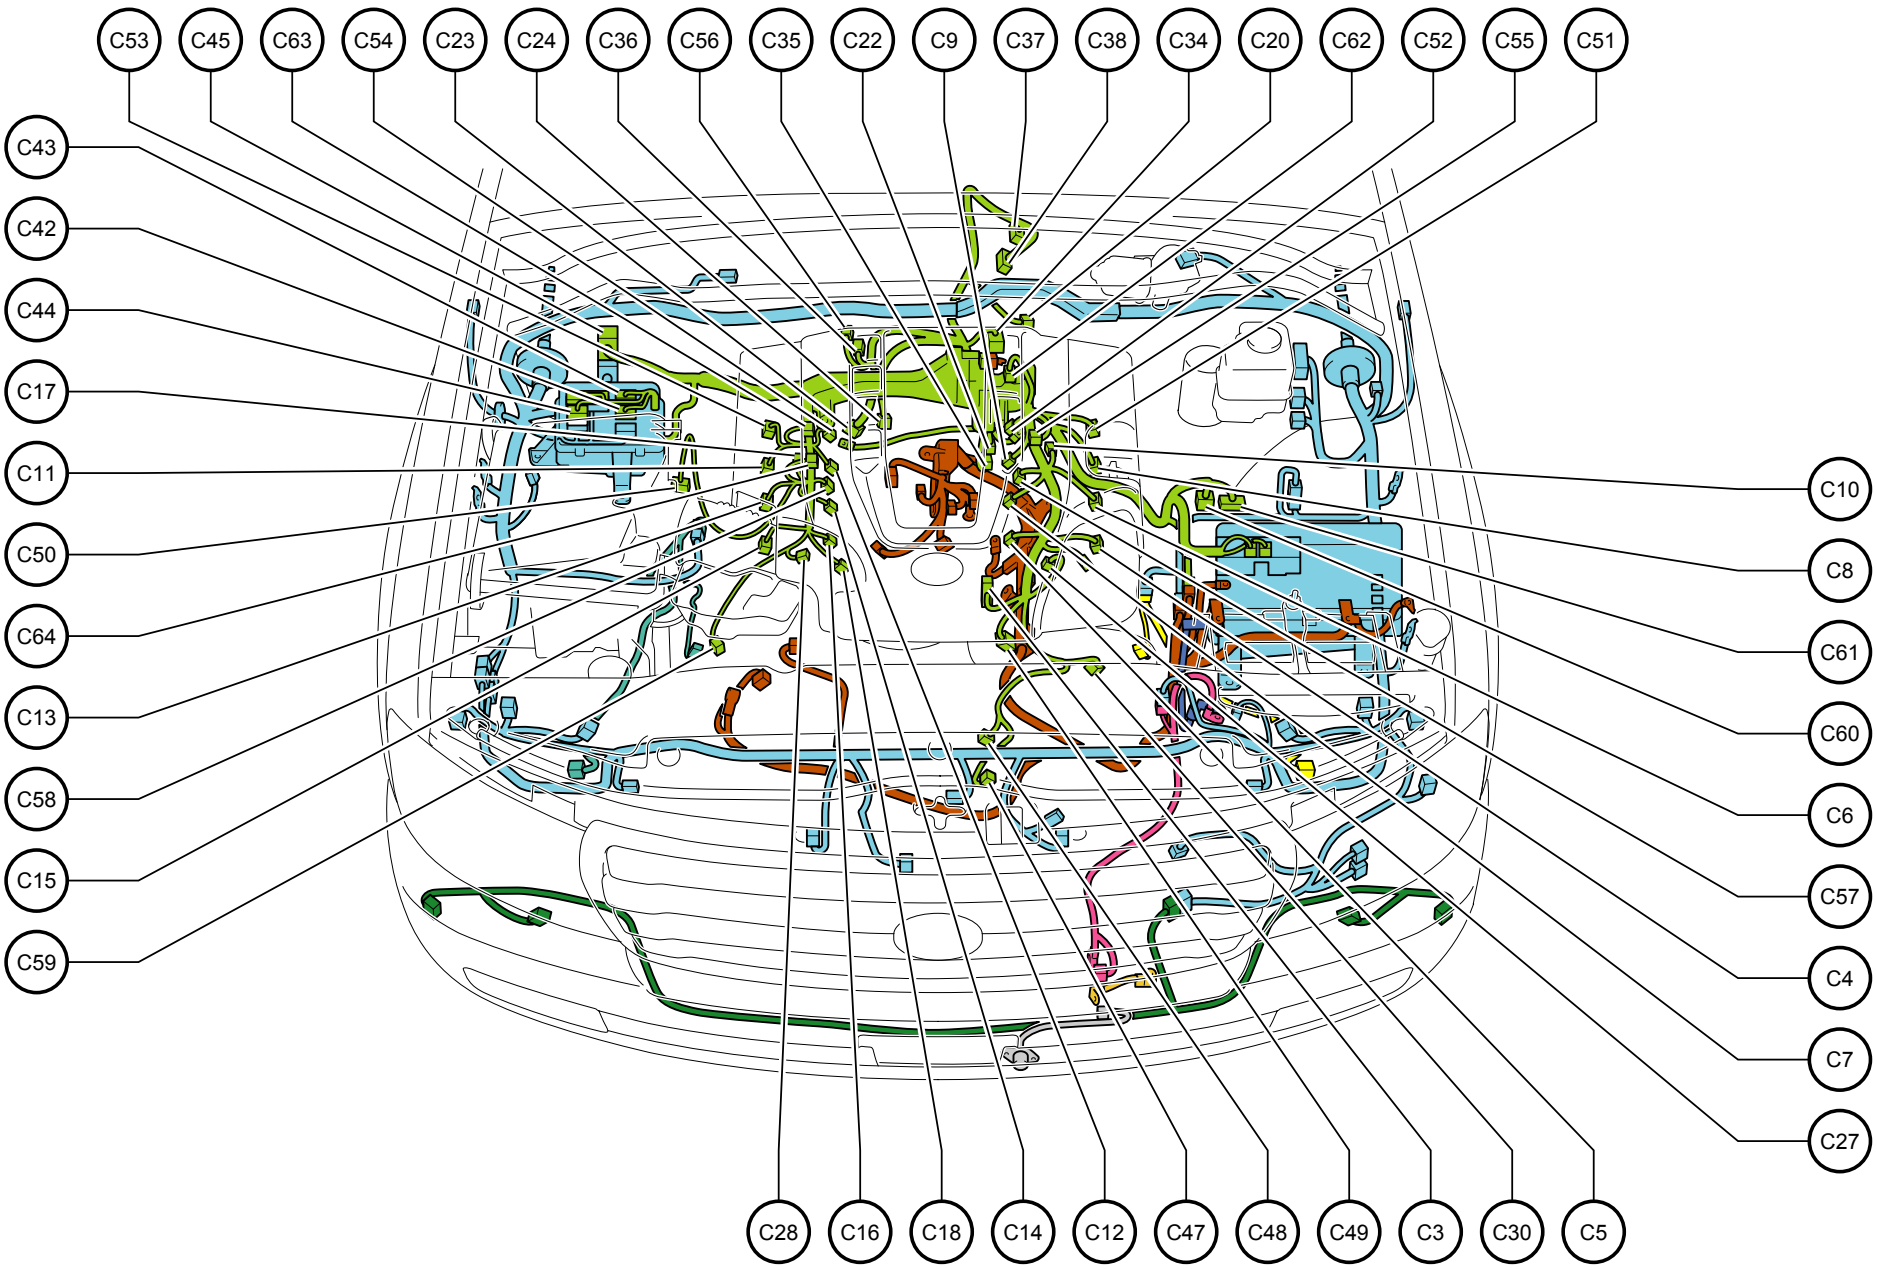

C53
C45
C63
C54
C23
C24
C36
C56
C35
C22
C9
C37
C38
C34
C20
C62
C52
C55
C51
C43
C42
C44
C17
C11
C50
C64
C13
C58
C15
C59
C10
C8
C61
C60
C6
C57
C4
C7
C27
C28
C16
C18
C14
C12
C47
C48
C49
C3
C30
C5

C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 5 Fuel Injector Assembly No.1
C 6 Ignition Coil Assembly No.3
C 7 Fuel Injector Assembly No.3
C 8 Ignition Coil Assembly No.5
C 9 Fuel Injector Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 12 Fuel Injector Assembly No.6
C 13 Ignition Coil Assembly No.4
C 14 Fuel Injector Assembly No.4
C 15 Ignition Coil Assembly No.2
C 16 Fuel Injector Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 27 Camshaft Timing Oil Control Valve (Bank 1)
C 28 Camshaft Timing Oil Control Valve (Bank 2)
C 30 Cooler Compressor Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 45 ECM
C 47 Oil Pressure Sender Gage Assembly
C 48 Crankshaft Position Sensor
C 49 Camshaft Position Sensor
C 50 Mass Air Flow Meter
C 51 Ignition Coil Assembly No.7
C 52 Fuel Injector Assembly No.7
C 53 Ignition Coil Assembly No.8
C 54 Fuel Injector Assembly No.8
C 55 Purge VSV
C 56 Oxygen Sensor (Bank 2 Sensor 2)
C 57 VVT Sensor (Bank 1)
C 58 VVT Sensor (Bank 2)
C 59 Power Steering Oil Pressure Sensor
C 60 Air Injection Control Driver
C 61 Air Injection Control Driver
C 62 VSV (ACIS)
C 63 VSV (for No.1 Air Switching Valve)
C 64 VSV (for No.2 Air Switching Valve)


C 3
Black

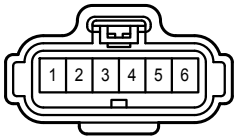


C 4
Black




C 5
Gray




C 6
Black




C 7
Gray

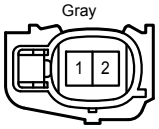

C 8
Black




C 9
Gray

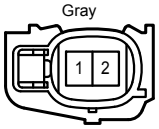


C 10
Gray




C 11
Black




C 12
Gray

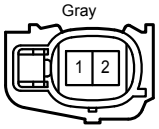


C 13
Black




C 14
Gray

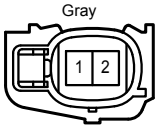

C 15
Black



C 16
Gray

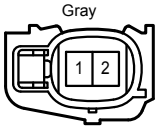

C 17
Gray



C 18
Dark Gray



C 20
Dark Gray




C 22
Dark Gray



C 23
Dark Gray



C 24
Gray

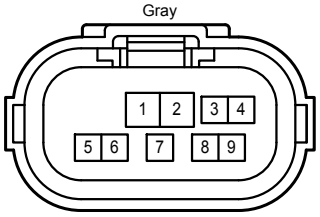

C 27
Black




C 28
Black




C 30
Gray




C 34
Gray

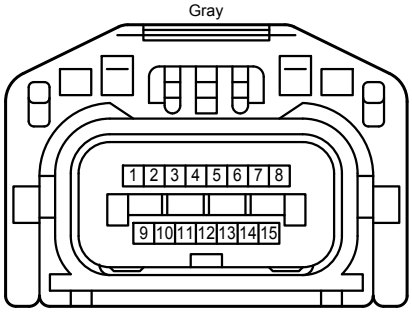


C 35
Black

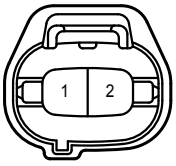


C 36
Black

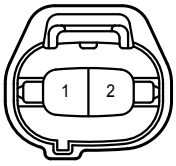


C 37
Black

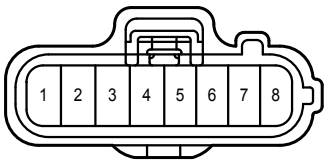


C 38
Dark Gray

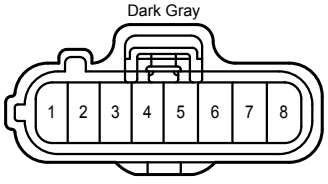


C 42
White

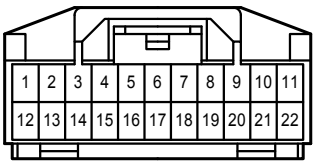


C 43
White

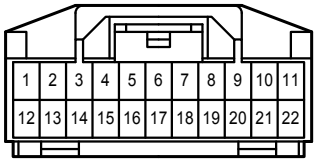

C 44
Blue

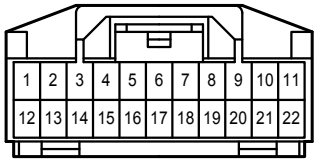

C 45
Black

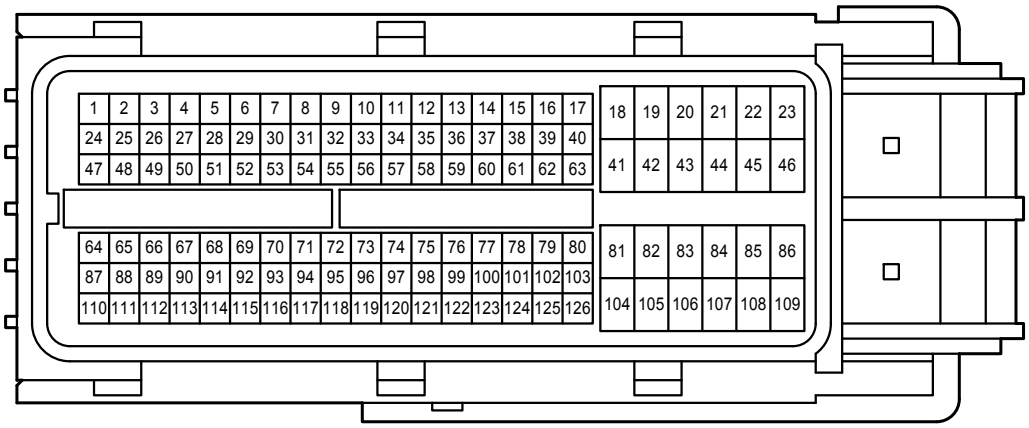

C 47
Black



C 48
Dark Gray




C 49
Gray




C 50
Black




C 51
Black




C 52
Gray

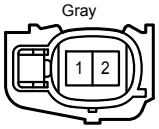


C 53
Black



C 54
Gray

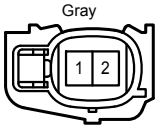

C 55
Black

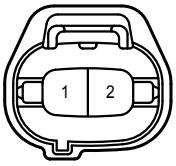

C 56
Dark Gray




C 57
Dark Gray




C 58
Dark Gray




C 59
Gray

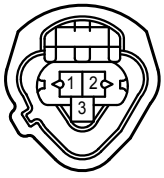


C 60
Black

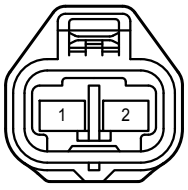


C 61
Black

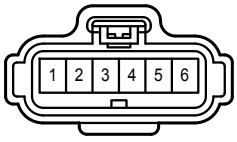


C 62
Black

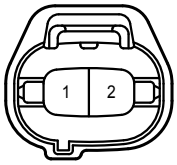


C 63
Brown

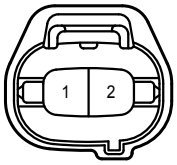

C 64
Brown

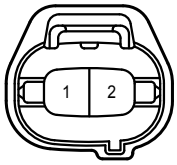

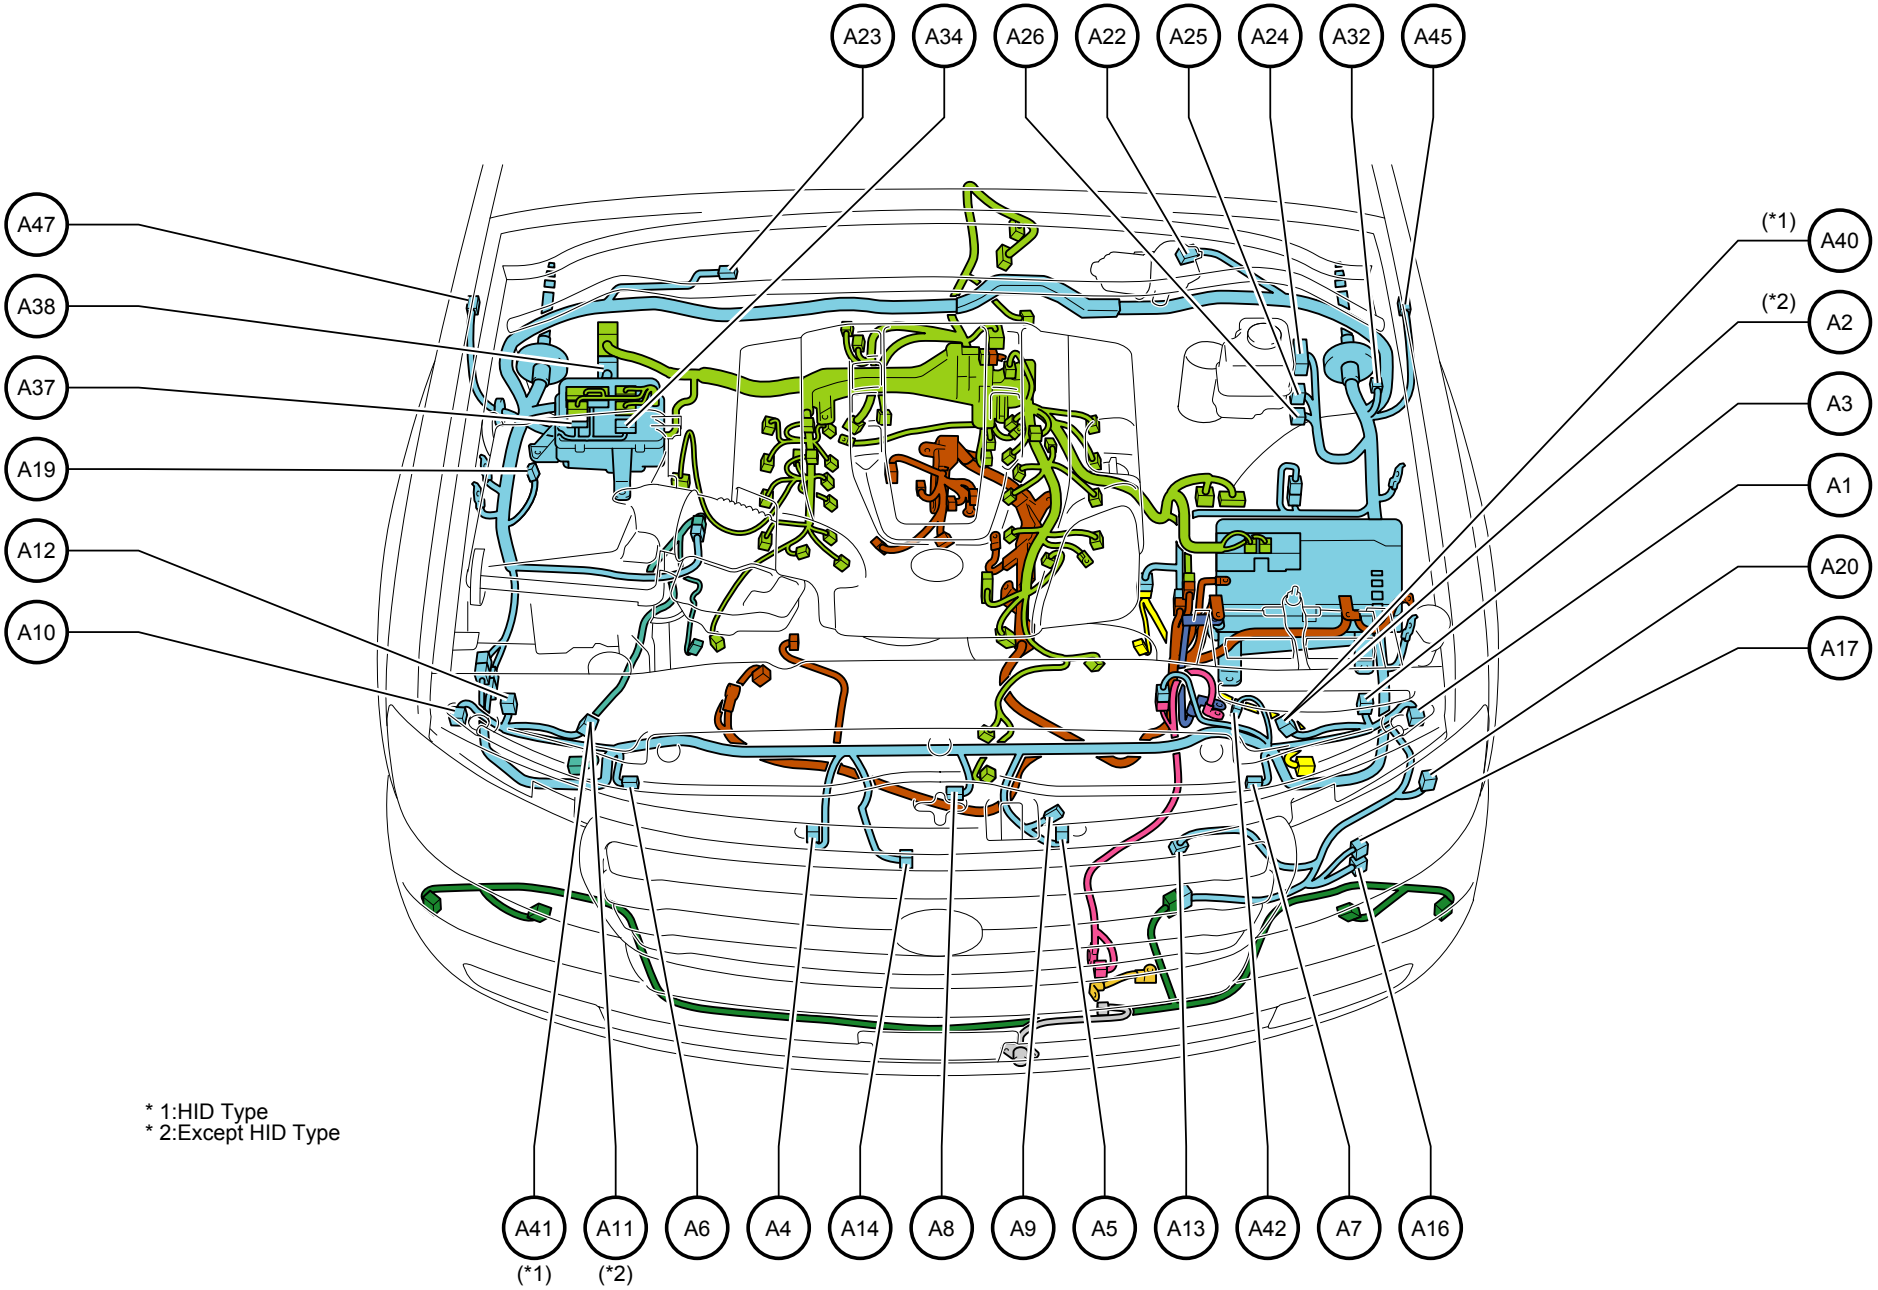


* 1:HID Type
* 2:Except HID Type

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 17 Headlight Cleaner Control Relay and Motor
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 23 Front Wiper Deicer (Windshield Glass)
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 38 ECM
A 40 Headlight Assembly LH
A 41 Headlight Assembly RH
A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH


A 1
Gray




A 2
Black

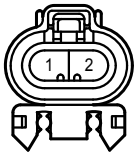

A 3
Black

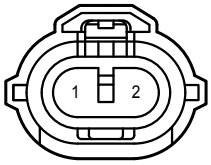

A 4
Black



A 5
Black



A 6
Yellow



A 7
Yellow



A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

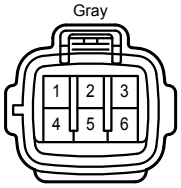


A 11
Black

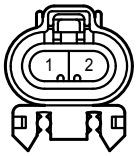

A 12
Black

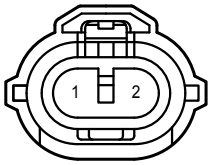


A 13
Black

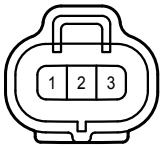

A 14
Black




A 16
Gray

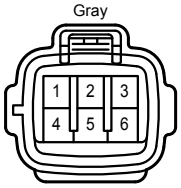

A 17
Black



A 19
Black



A 20
Black




A 22
Black




A 23
Gray




A 24
Black

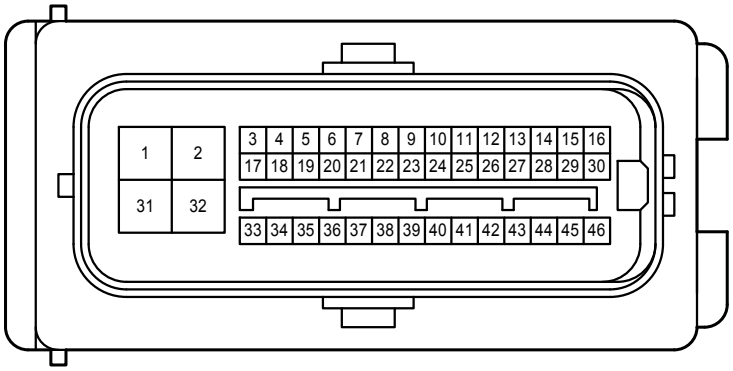


A 25
Black

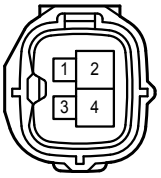


A 26
Gray

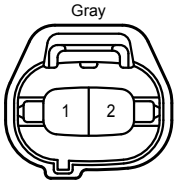


A 32
Black

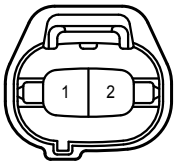


A 34
White

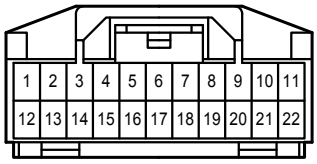

A 37
Blue

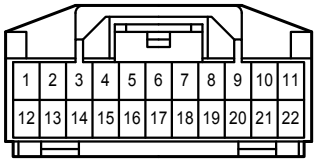

A 38
Black

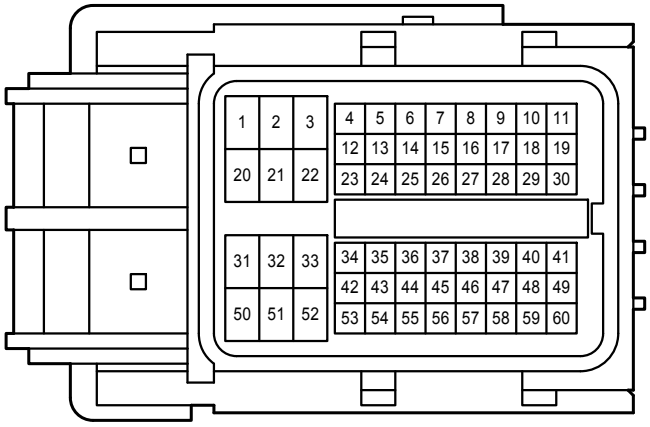


A 40
Gray



A 41
Gray



A 42
Black

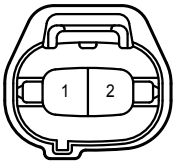


A 45
Gray



A 47
Gray

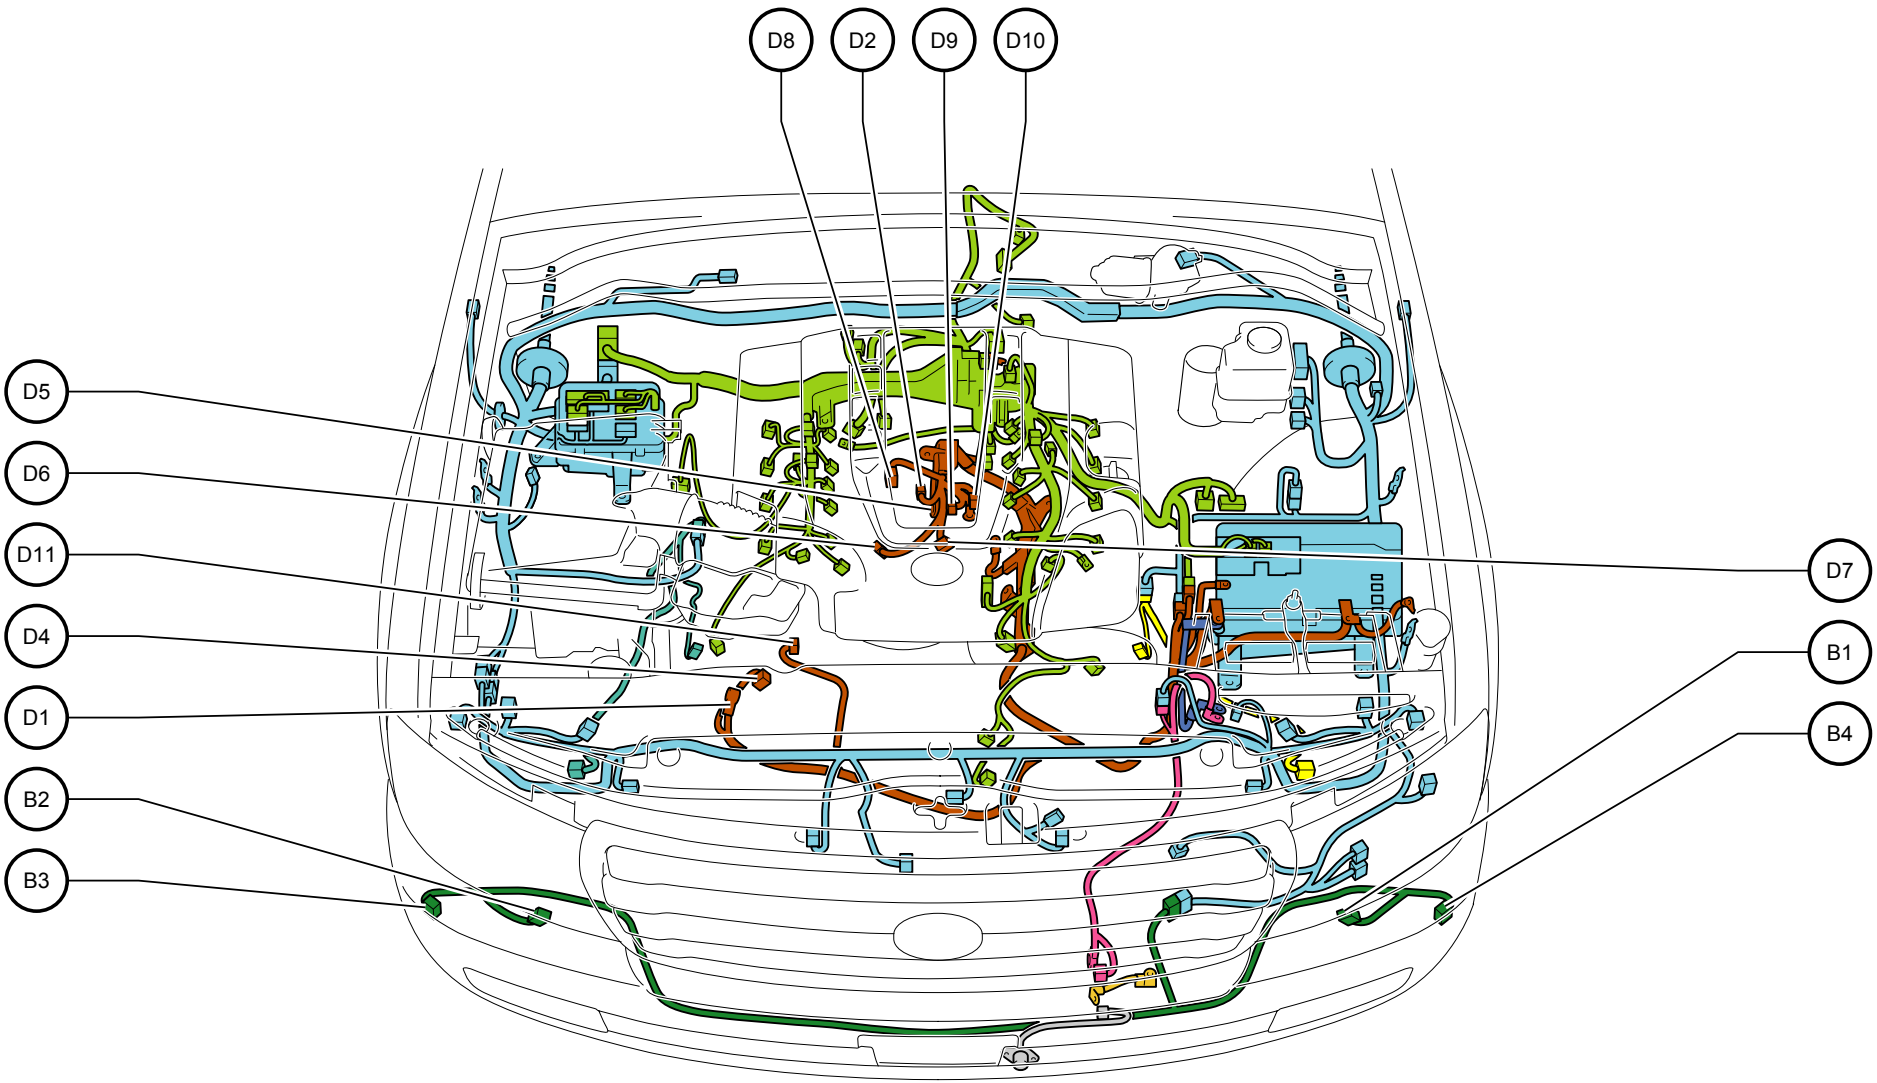



D8
D2
D9
D10
D5
D6
D11
D4
D1
B2
B3
D7
B1
B4


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH

D 1 Generator Assembly
D 2 Starter Assembly
D 4 Generator Assembly
D 5 Starter Assembly
D 6 Knock Control Sensor (Bank 2)
D 7 Knock Control Sensor (Bank 1)
D 8 Air Pump Assembly
D 9 Air Pressure Sensor
D 10 Air Switching Valve
D 11 Engine Oil Level Sensor


B 1
Brown

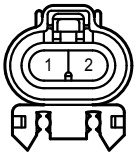


B 2
Brown

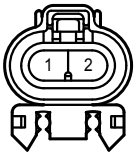


B 3
Black

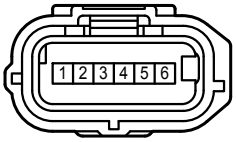

B 4
Black

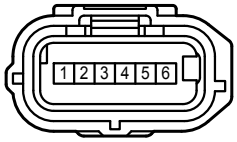

D 1




D 2
Black




D 4
Black




D 5




D 6
Gray

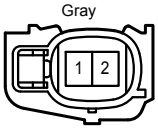


D 7
Black




D 8
Gray

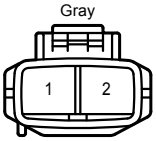


D 9
Black

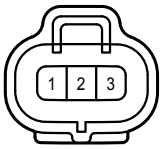


D 10
Black

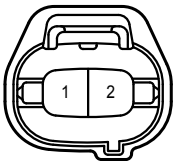

D 11
Gray

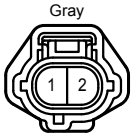

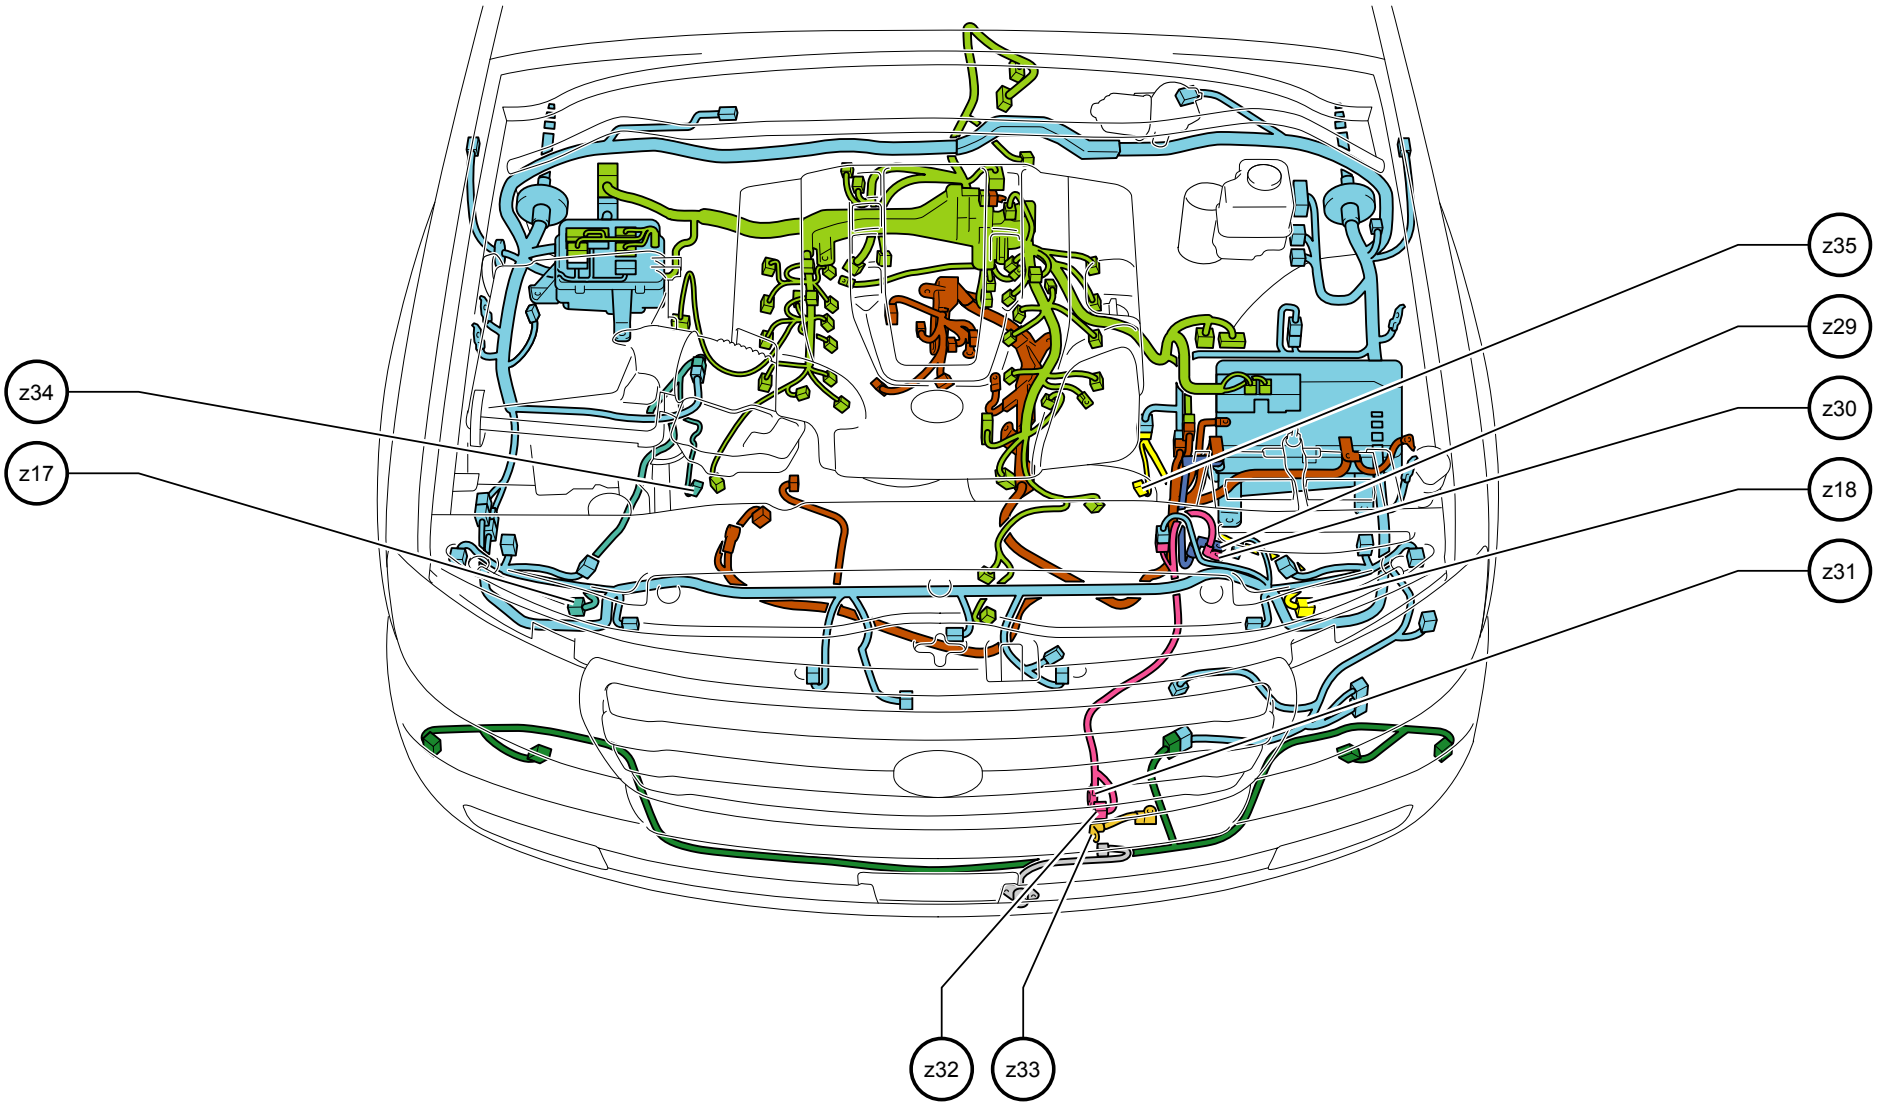
z34
z17
z35
z29
z30
z18
z31
z32
z33

- z 17 Front Speed Sensor RH
- z 18 Front Speed Sensor LH
- z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 31 With Magnet Switch Winch Motor Assembly
- z 32 With Magnet Switch Winch Motor Assembly
- z 33 With Magnet Switch Winch Motor Assembly
- z 34 Front Height Control Sensor Sub-Assembly RH
- z 35 Front Height Control Sensor Sub-Assembly LH


z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

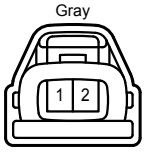


z 33





z 34
Black

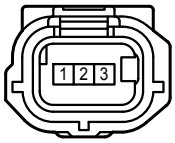



z 35
Black

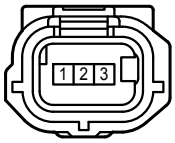


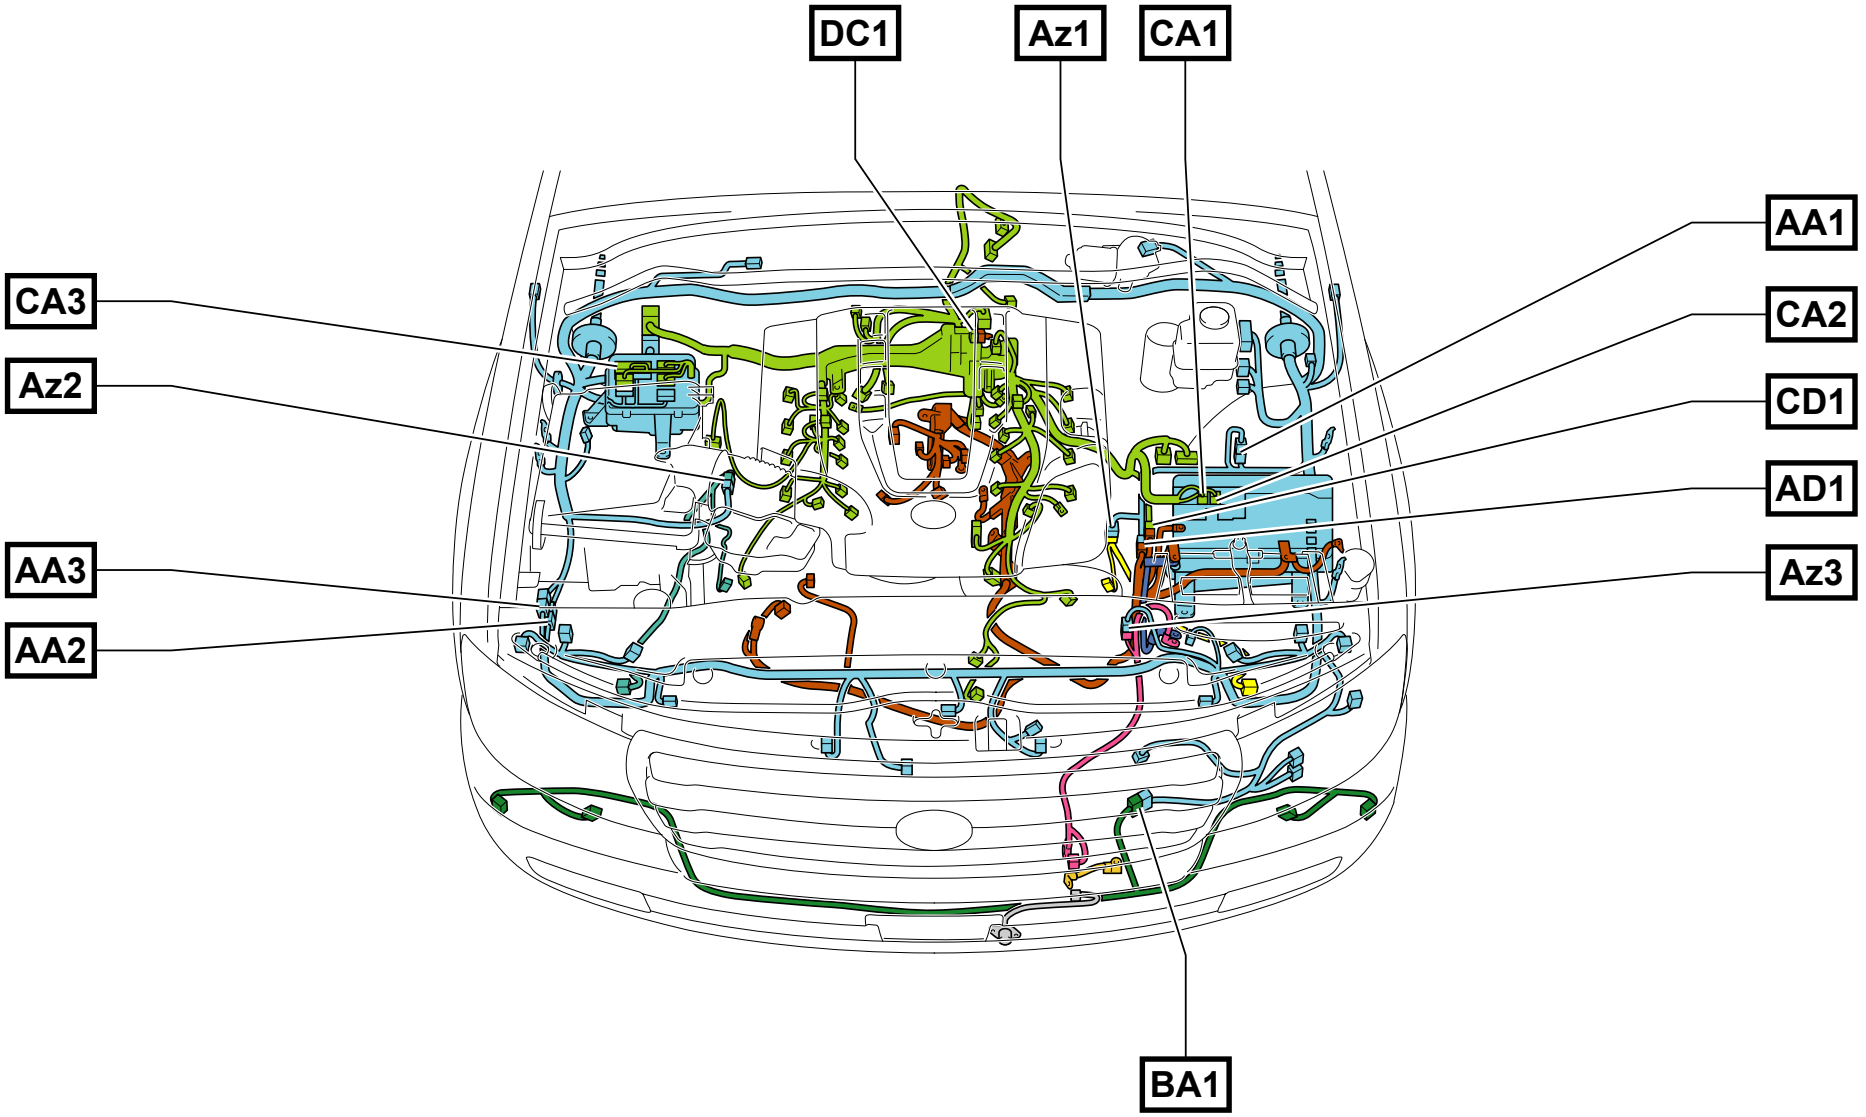

DC1
Az1
CA1
AA1
CA3
CA2
Az2
CD1
AD1
AA3
Az3
AA2
BA1

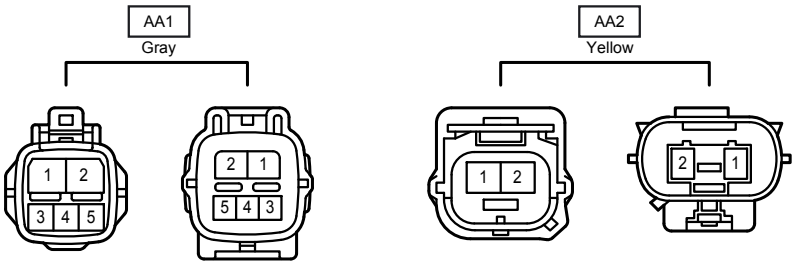

AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1

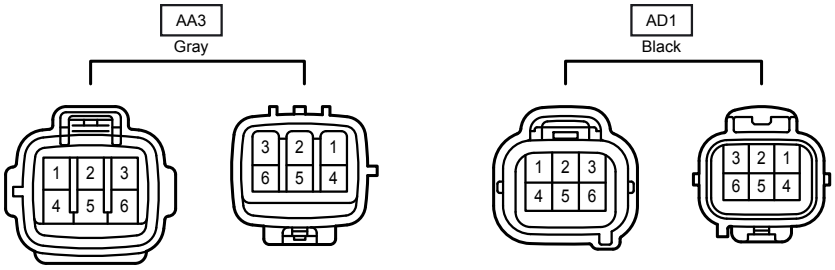

AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AD1
Black
1 2 3
4 5 6
3 2 1
6 5 4

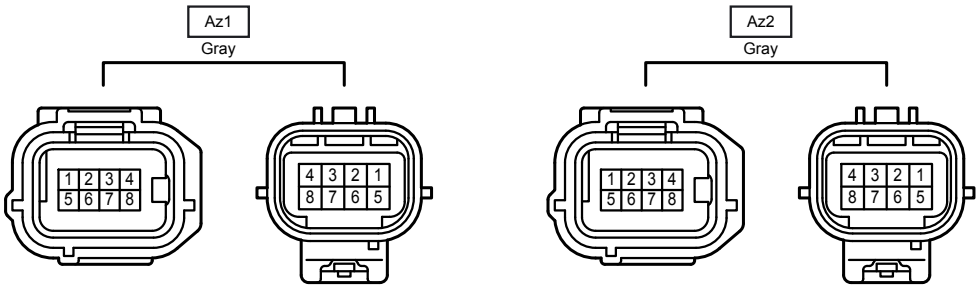

Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

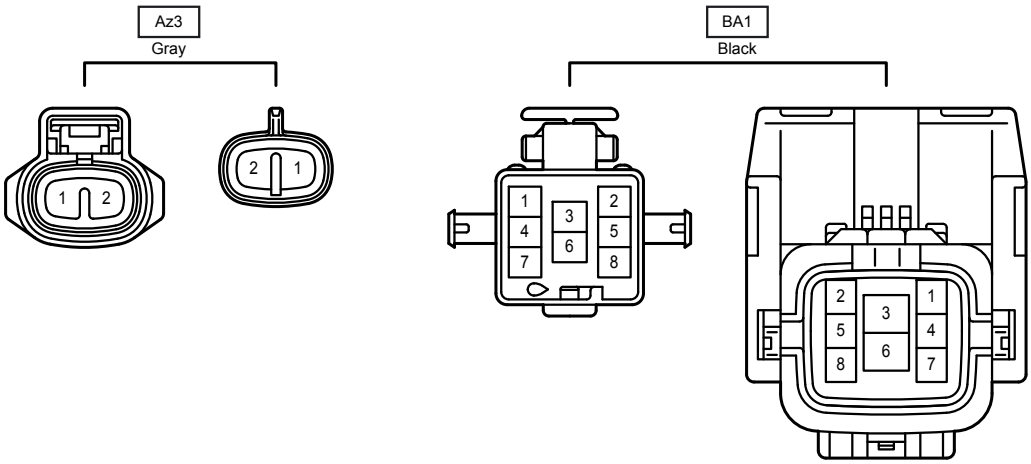
Az3
Gray
1 2
2 1
BA1
Black
1 4 7
3 6
2 5 8
2 5 8
3 6
1 4 7

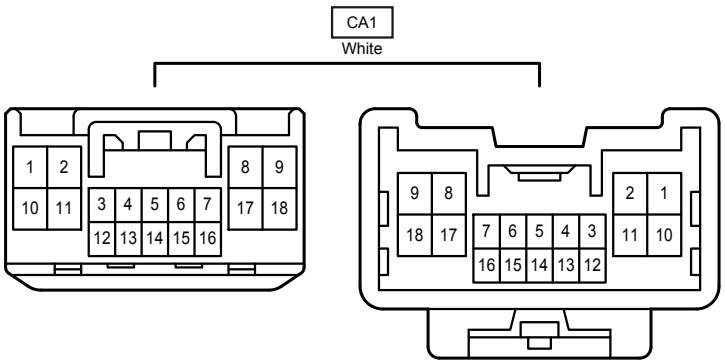
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

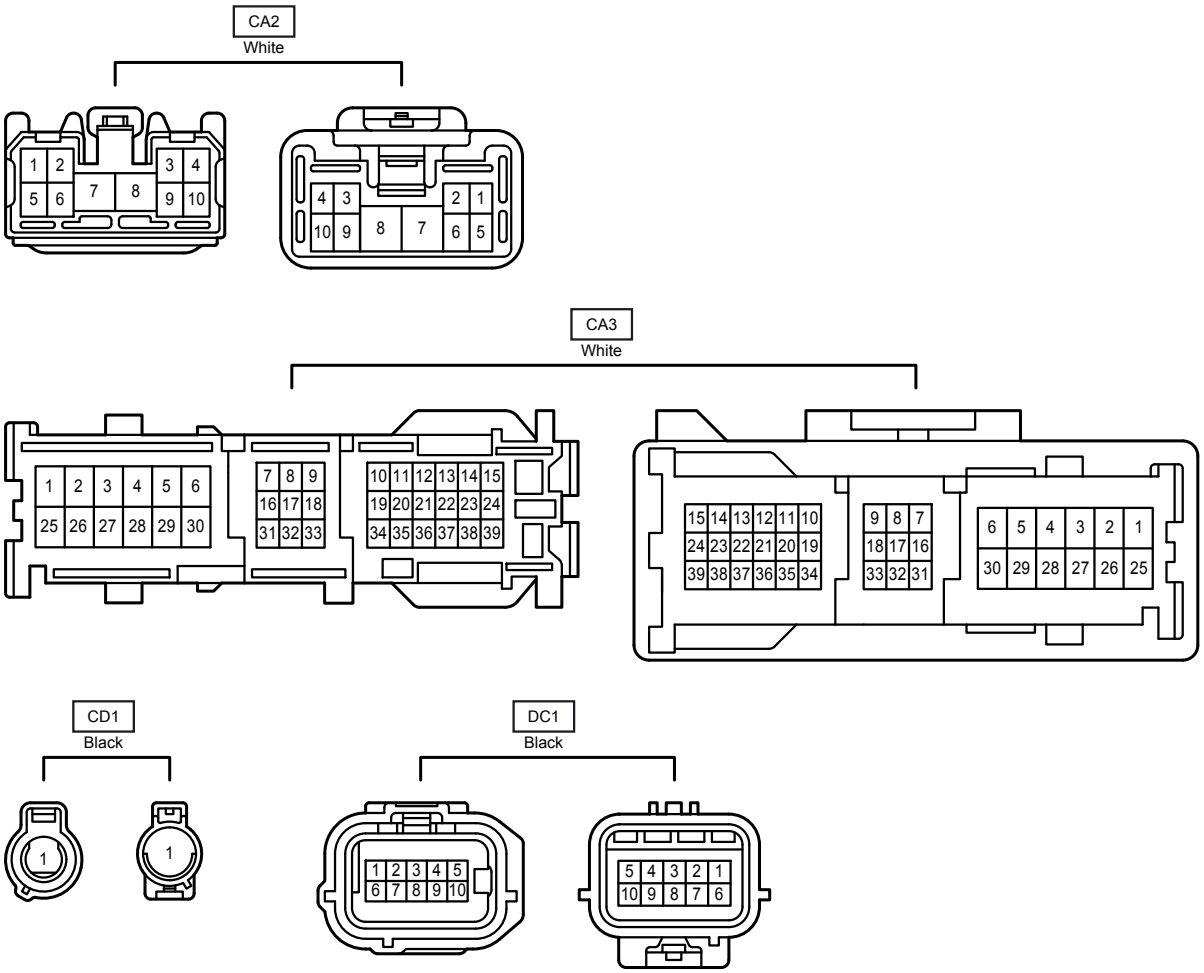

CA2
White
1 2 3 4
5 6 7 8 9 10
4 3 2 1
10 9 8 7 6 5
CA3
White
1 2 3 4 5 6
25 26 27 28 29 30
7 8 9
16 17 18
31 32 33
10 11 12 13 14 15
19 20 21 22 23 24
34 35 36 37 38 39
15 14 13 12 11 10
24 23 22 21 20 19
39 38 37 36 35 34
9 8 7
18 17 16
33 32 31
6 5 4 3 2 1
30 29 28 27 26 25
CD1
Black
1
1
DC1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

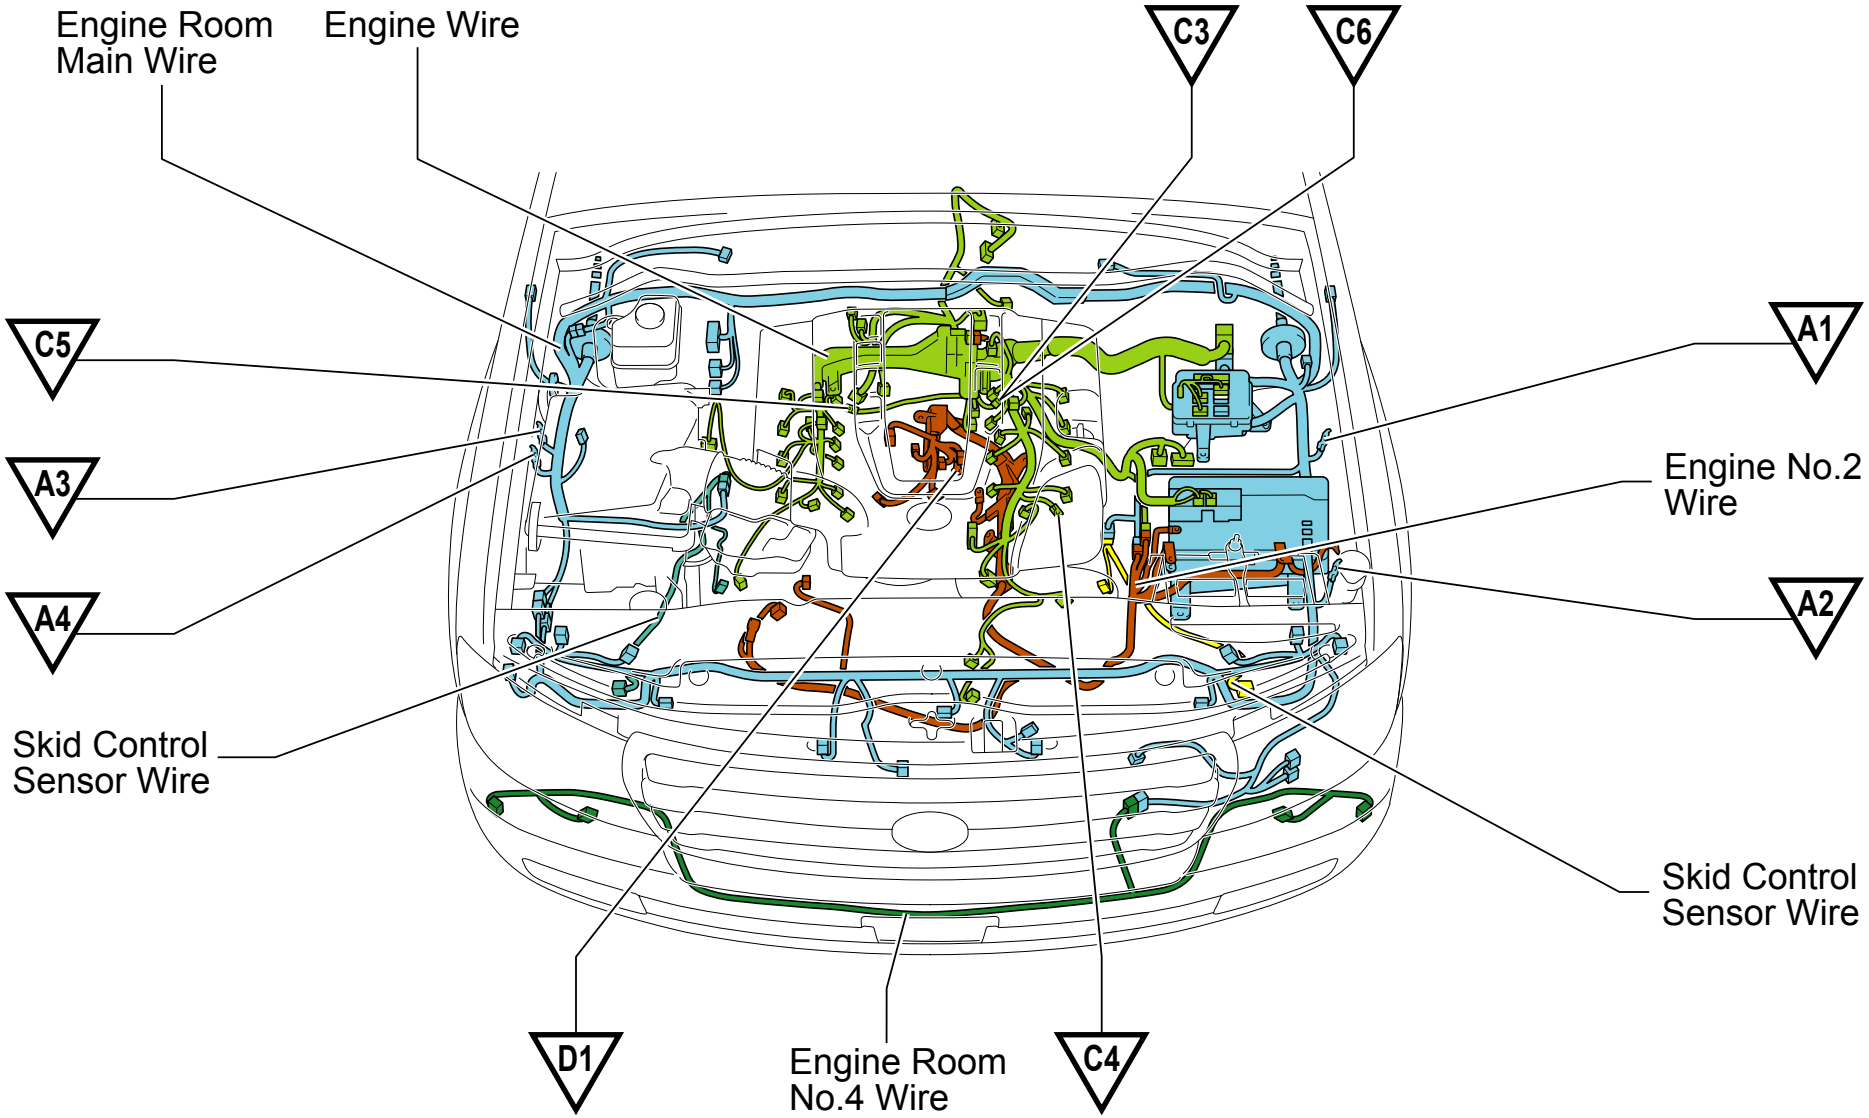
Engine Room
Main Wire
Engine Wire
C3
C6
C5
A3
A4
Skid Control
Sensor Wire
A1
Engine No.2
Wire
A2
Skid Control
Sensor Wire
D1
Engine Room
No.4 Wire
C4

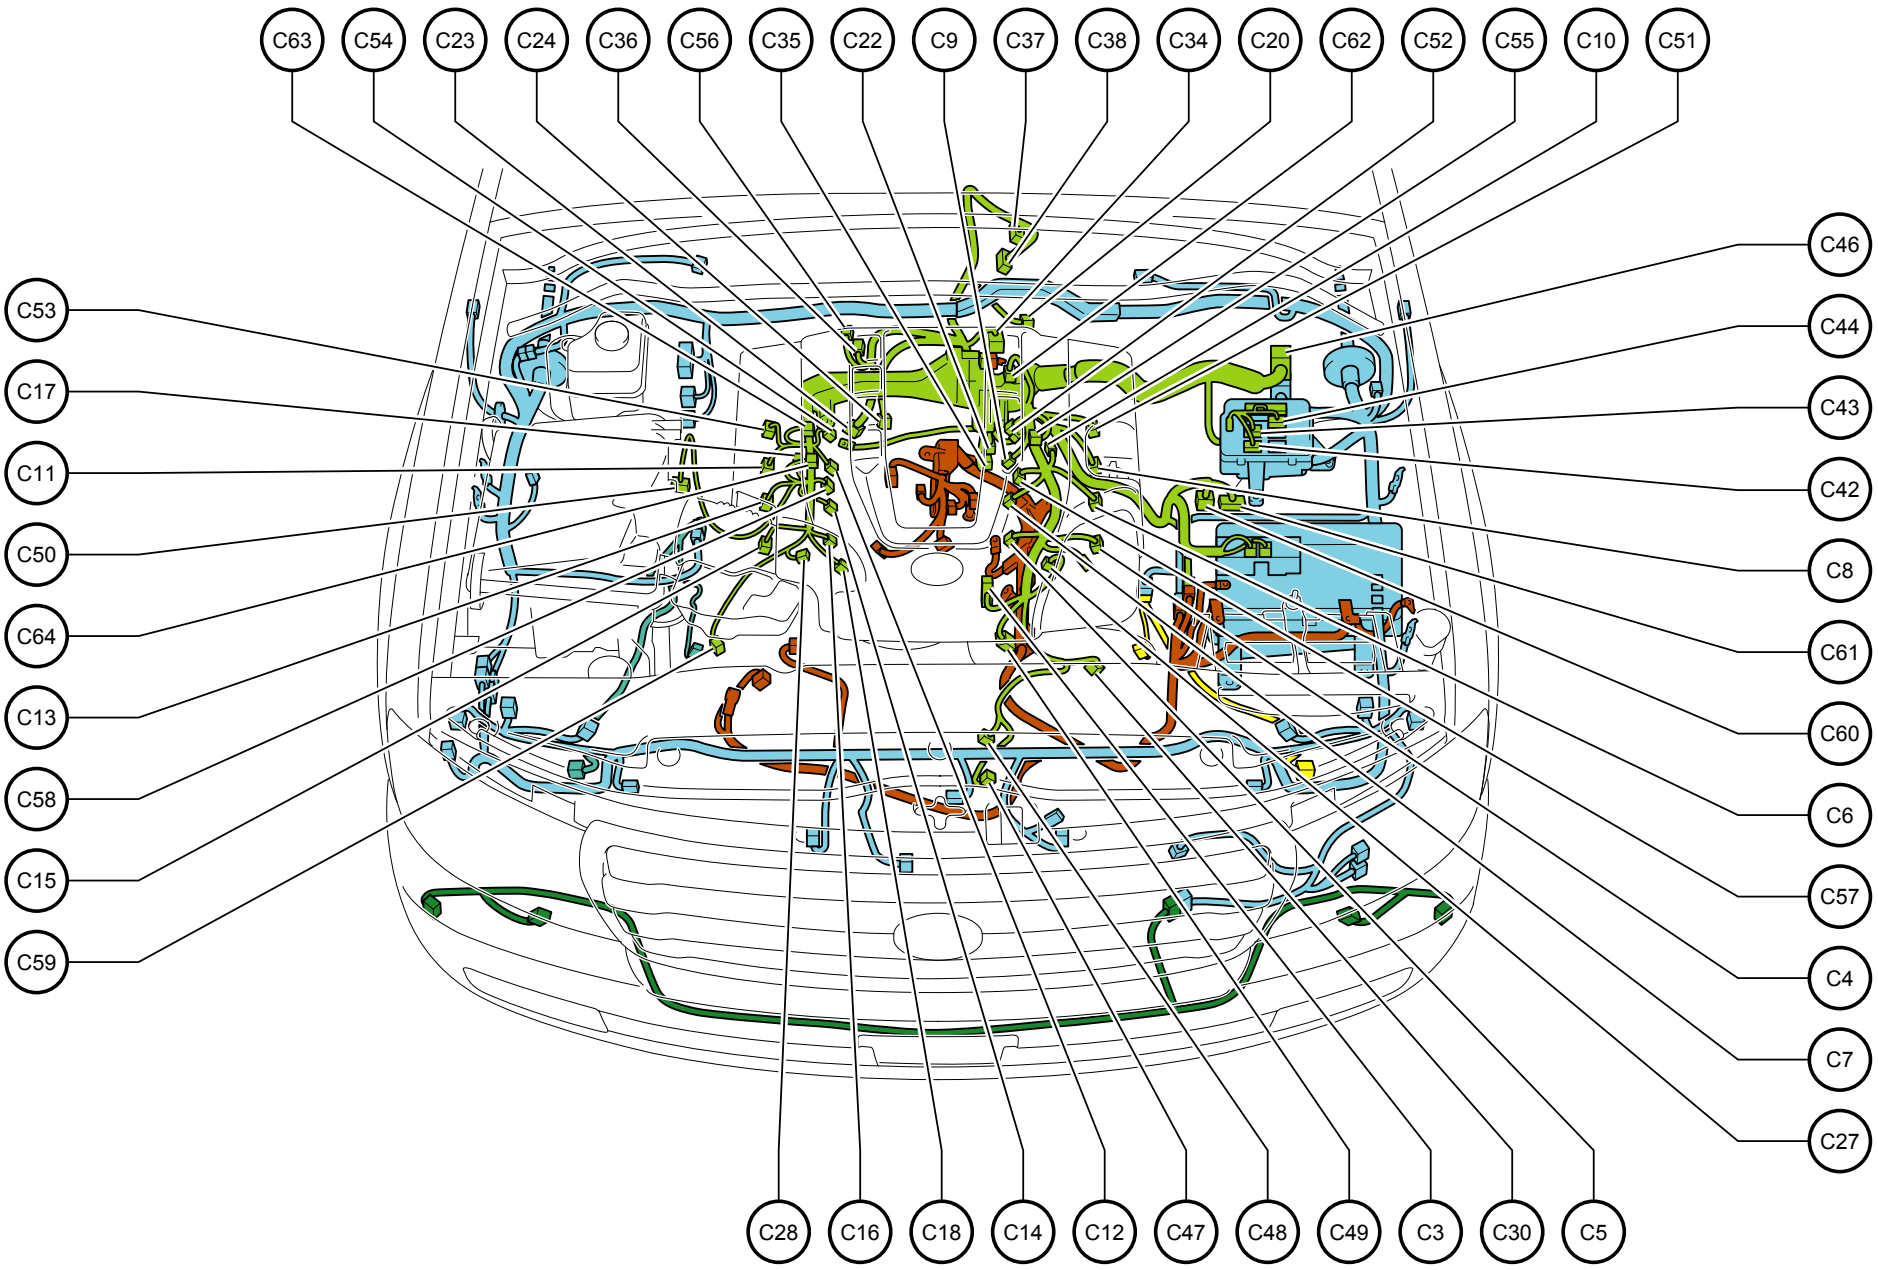

C63
C54
C23
C24
C36
C56
C35
C22
C9
C37
C38
C34
C20
C62
C52
C55
C10
C51
C53
C17
C11
C50
C64
C13
C58
C15
C59
C46
C44
C43
C42
C8
C61
C60
C6
C57
C4
C7
C27
C28
C16
C18
C14
C12
C47
C48
C49
C3
C30
C5

C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 5 Fuel Injector Assembly No.1
C 6 Ignition Coil Assembly No.3
C 7 Fuel Injector Assembly No.3
C 8 Ignition Coil Assembly No.5
C 9 Fuel Injector Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 12 Fuel Injector Assembly No.6
C 13 Ignition Coil Assembly No.4
C 14 Fuel Injector Assembly No.4
C 15 Ignition Coil Assembly No.2
C 16 Fuel Injector Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 27 Camshaft Timing Oil Control Valve (Bank 1)
C 28 Camshaft Timing Oil Control Valve (Bank 2)
C 30 Cooler Compressor Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 46 ECM
C 47 Oil Pressure Sender Gage Assembly
C 48 Crankshaft Position Sensor
C 49 Camshaft Position Sensor
C 50 Mass Air Flow Meter
C 51 Ignition Coil Assembly No.7
C 52 Fuel Injector Assembly No.7
C 53 Ignition Coil Assembly No.8
C 54 Fuel Injector Assembly No.8
C 55 Purge VSV
C 56 Oxygen Sensor (Bank 2 Sensor 2)
C 57 VVT Sensor (Bank 1)
C 58 VVT Sensor (Bank 2)
C 59 Power Steering Oil Pressure Sensor
C 60 Air Injection Control Driver
C 61 Air Injection Control Driver
C 62 VSV (ACIS)
C 63 VSV (for No.1 Air Switching Valve)
C 64 VSV (for No.2 Air Switching Valve)


C 3
Black

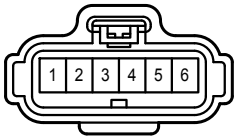


C 4
Black




C 5
Gray




C 6
Black




C 7
Gray

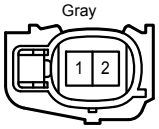

C 8
Black




C 9
Gray

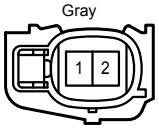


C 10
Gray




C 11
Black




C 12
Gray

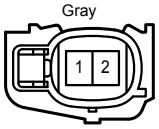


C 13
Black




C 14
Gray

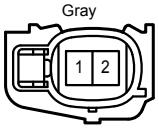

C 15
Black



C 16
Gray

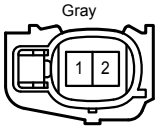

C 17
Gray



C 18
Dark Gray



C 20
Dark Gray




C 22
Dark Gray



C 23
Dark Gray



C 24
Gray

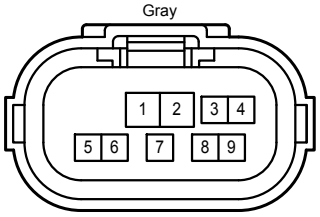

C 27
Black




C 28
Black




C 30
Gray




C 34
Gray

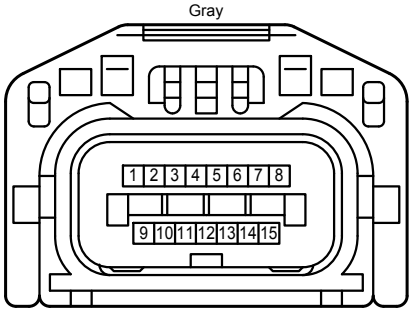


C 35
Black

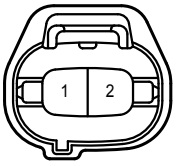


C 36
Black

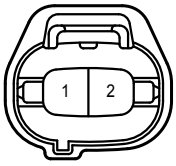


C 37
Black

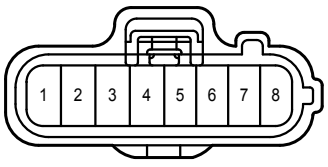


C 38
Dark Gray

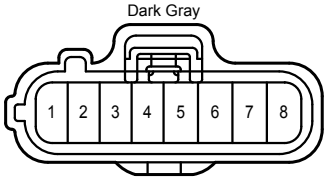


C 42
White

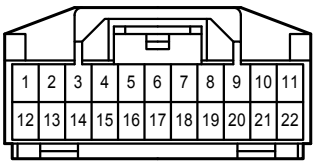


C 43
White

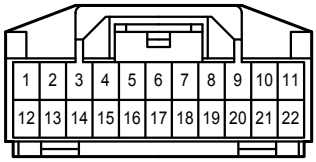

C 44
Blue

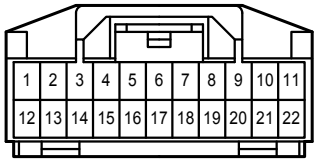

C 46
Black

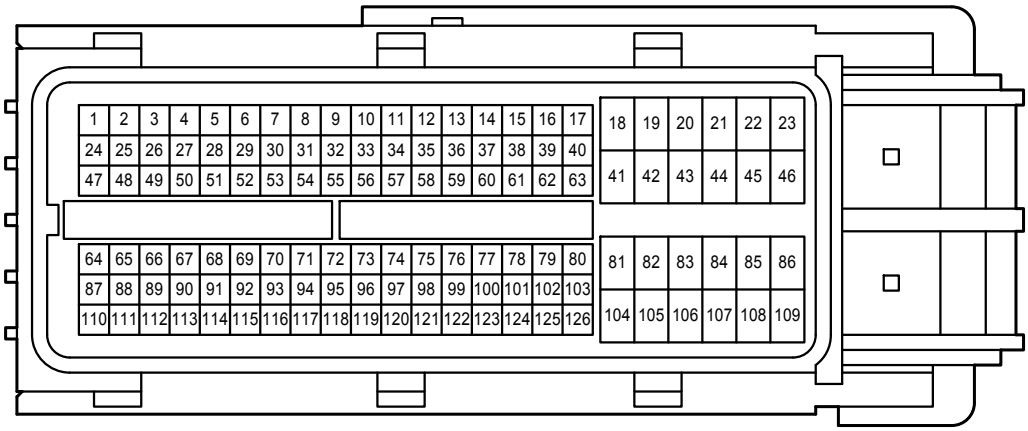

C 47
Black



C 48
Dark Gray




C 49
Gray




C 50
Black




C 51
Black




C 52
Gray

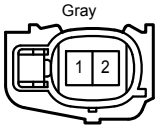


C 53
Black



C 54
Gray

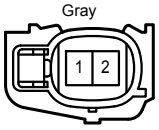

C 55
Black

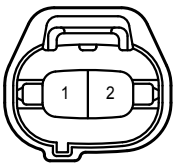

C 56
Dark Gray




C 57
Dark Gray




C 58
Dark Gray




C 59
Gray

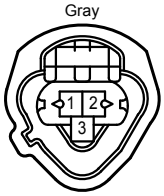


C 60
Black

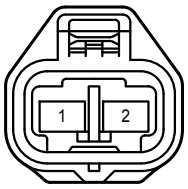


C 61
Black

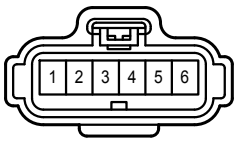


C 62
Black

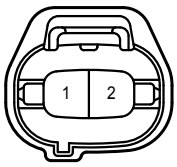


C 63
Brown

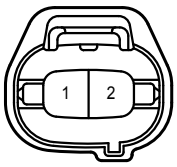

C 64
Brown

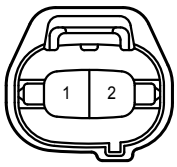

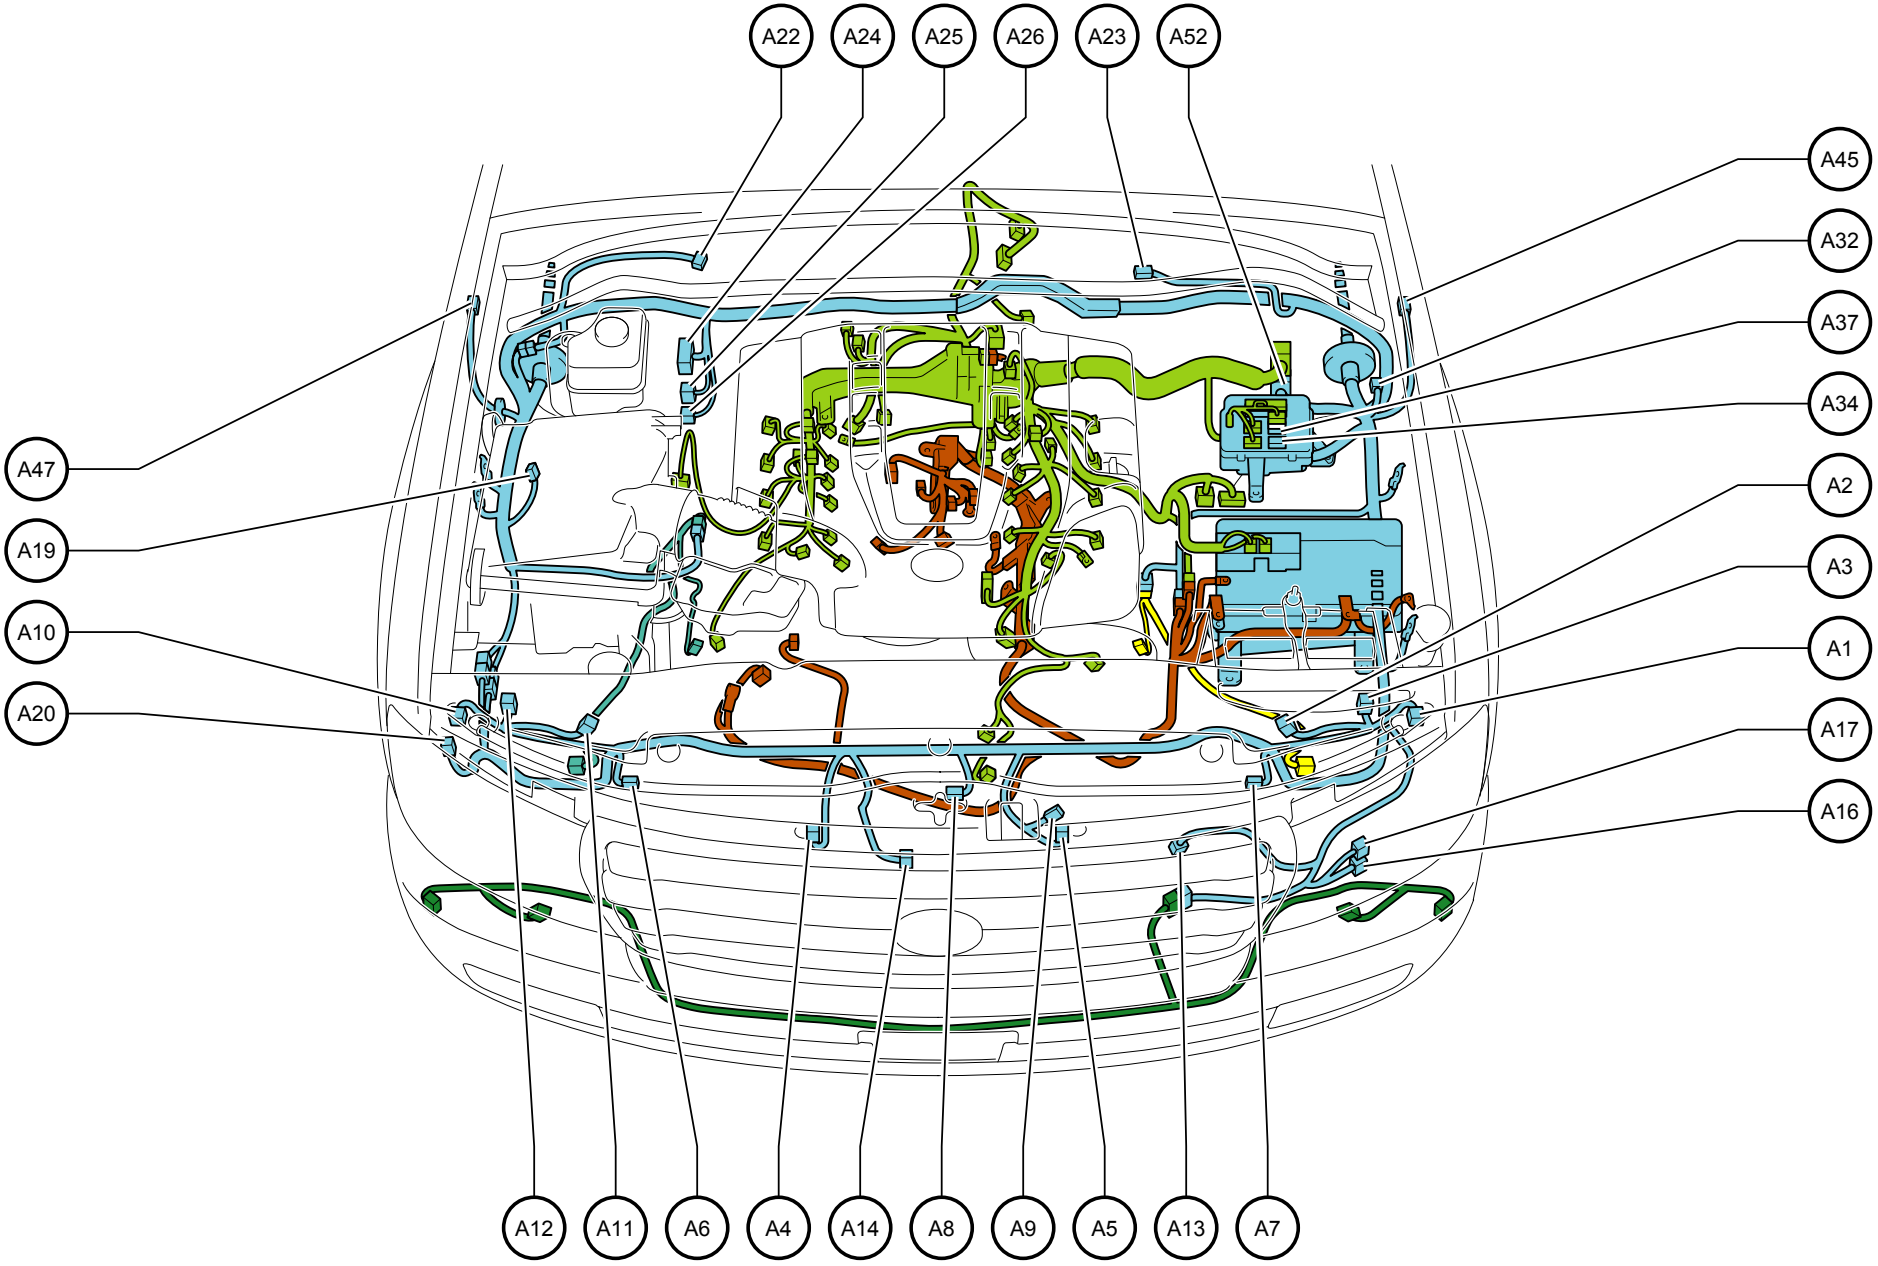

A22
A24
A25
A26
A23
A52
A45
A32
A37
A34
A47
A2
A19
A3
A10
A1
A20
A17
A16
A12
A11
A6
A4
A14
A8
A9
A5
A13
A7

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 17 Headlight Cleaner Control Relay and Motor
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 23 Front Wiper Deicer (Windshield Glass)
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH
A 52 ECM


A 1
Gray



A 2
Black

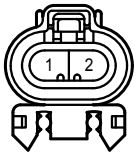

A 3
Black

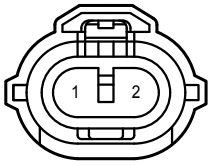

A 4
Black



A 5
Black



A 6
Yellow



A 7
Yellow



A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

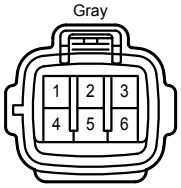


A 11
Black

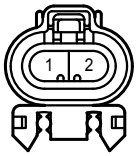

A 12
Black

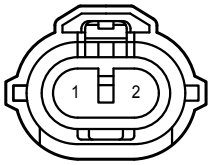


A 13
Black

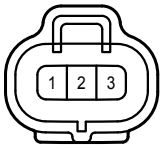

A 14
Black




A 16
Gray

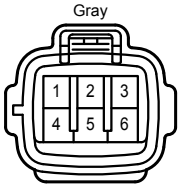

A 17
Black



A 19
Black



A 20
Black




A 22
Black




A 23
Gray




A 24
Black

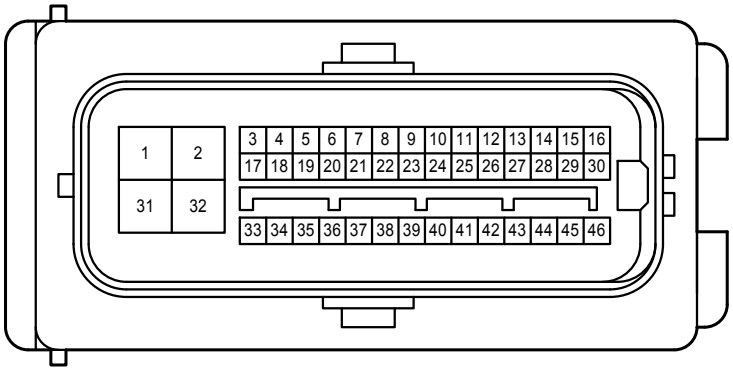


A 25
Black

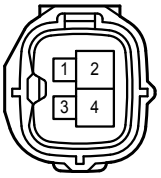


A 26
Gray

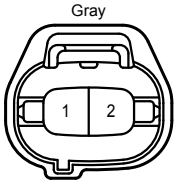


A 32
Black

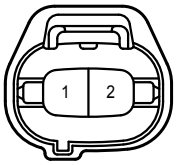

A 34
White

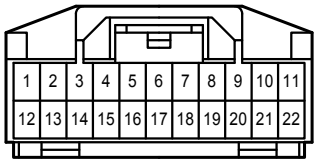

A 37
Blue

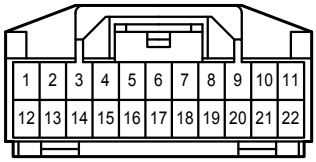


A 45
Gray




A 47
Gray




A 52
Black

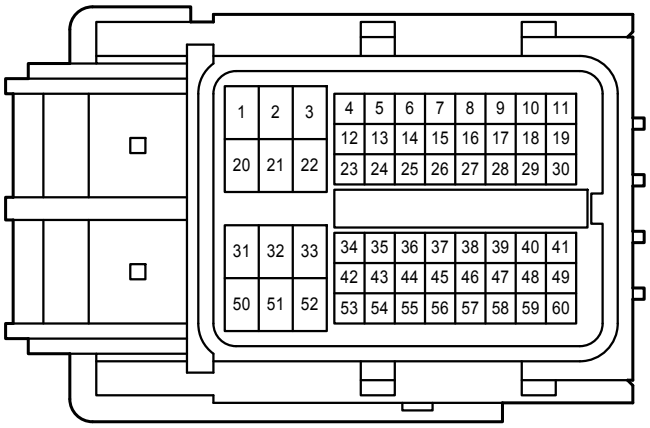

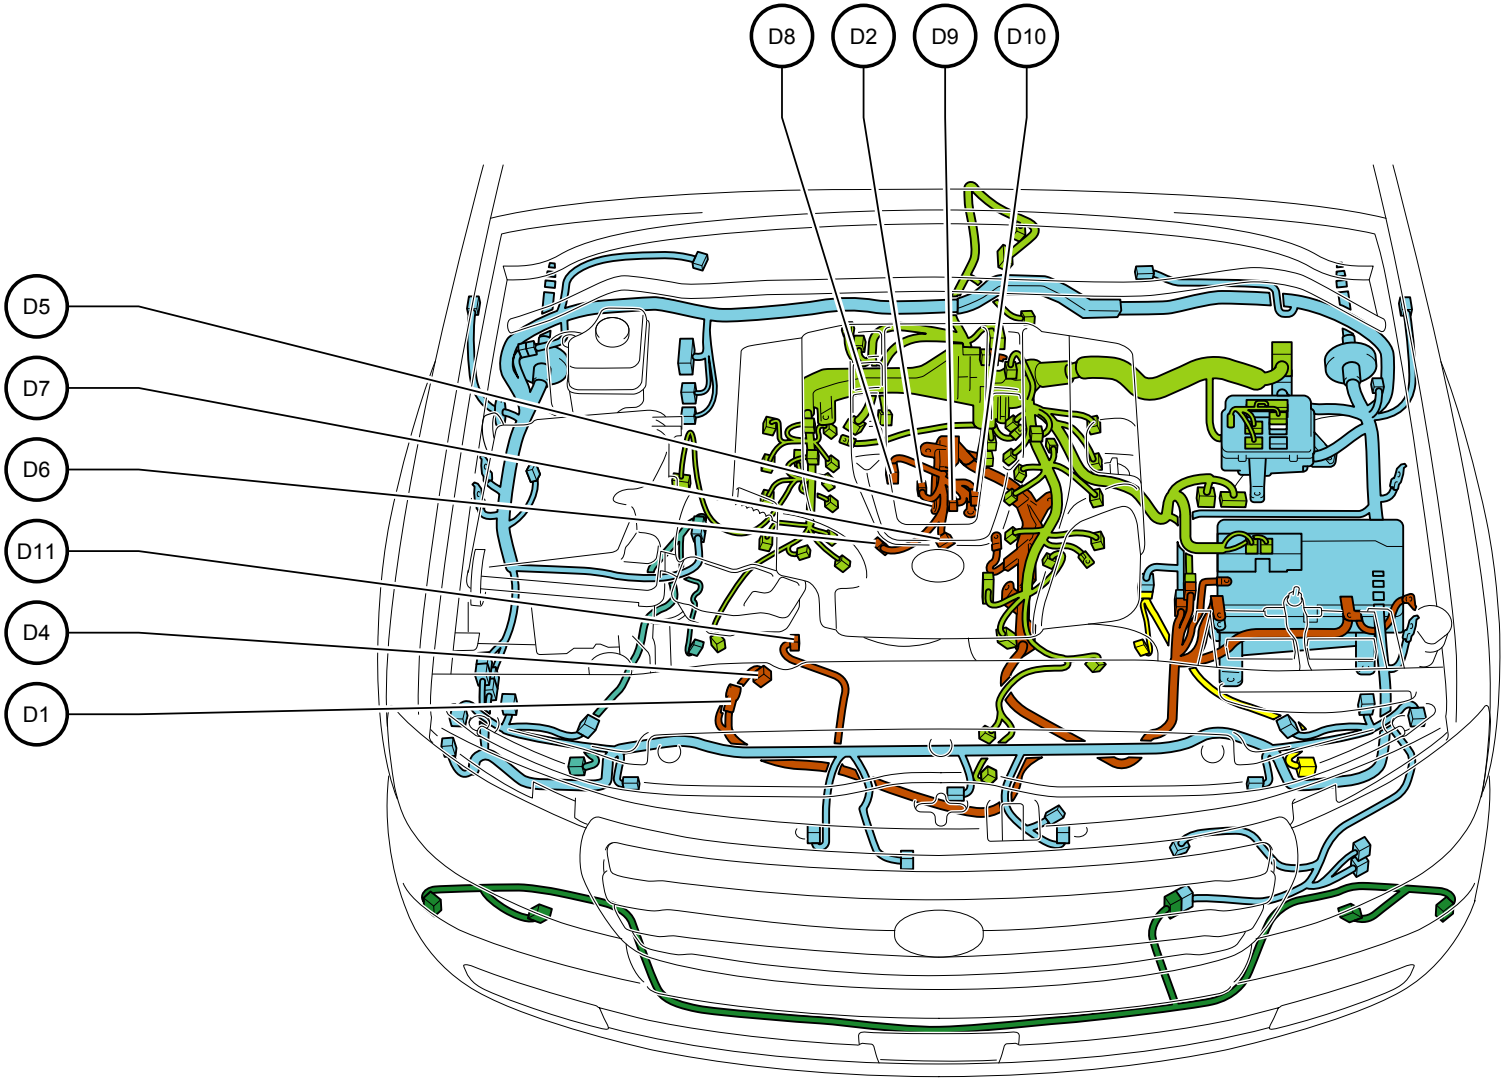
D8
D2
D9
D10
D5
D7
D6
D11
D4
D1

D 1 Generator Assembly
D 2 Starter Assembly
D 4 Generator Assembly
D 5 Starter Assembly
D 6 Knock Control Sensor (Bank 2)
D 7 Knock Control Sensor (Bank 1)
D 8 Air Pump Assembly
D 9 Air Pressure Sensor
D 10 Air Switching Valve
D 11 Engine Oil Level Sensor

D 1




D 2
Black




D 4
Black




D 5




D 6
Gray



D 7
Black




D 8
Gray

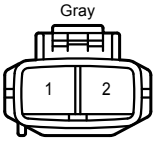


D 9
Black




D 10
Black

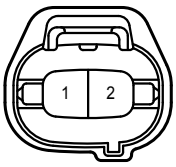

D 11
Gray

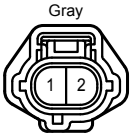


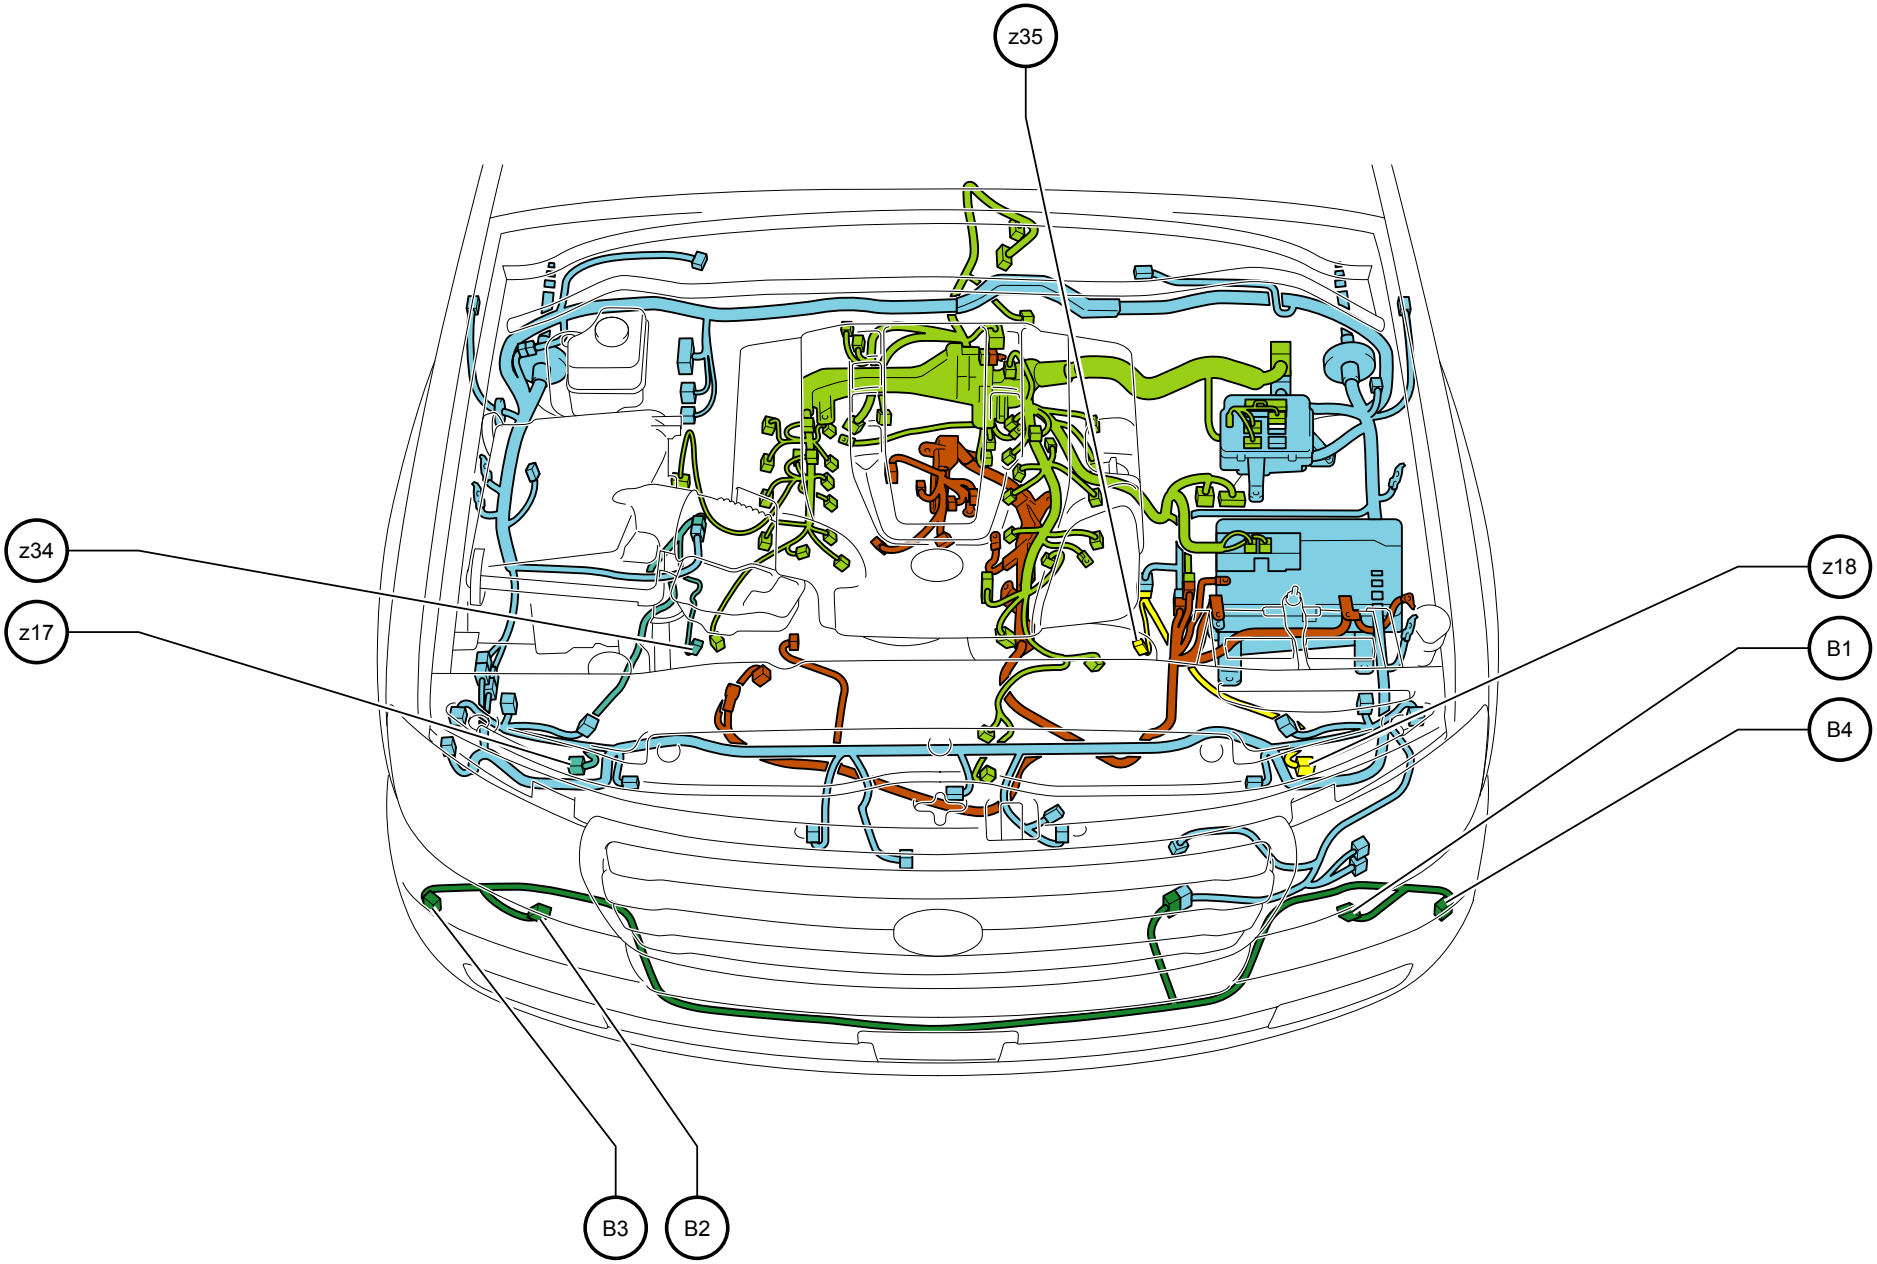
z35
z34
z17
z18
B1
B4
B3
B2


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH


B 1
Brown

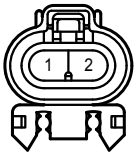


B 2
Brown

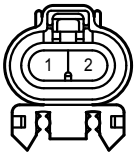

B 3
Black

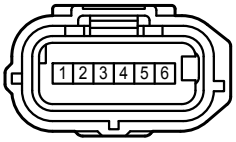

B 4
Black

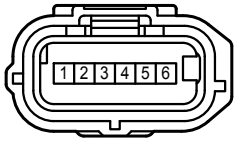


z 17
Black




z 18
Black





z 34
Black

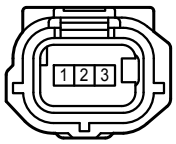



z 35
Black

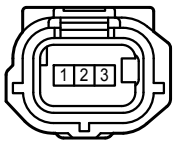


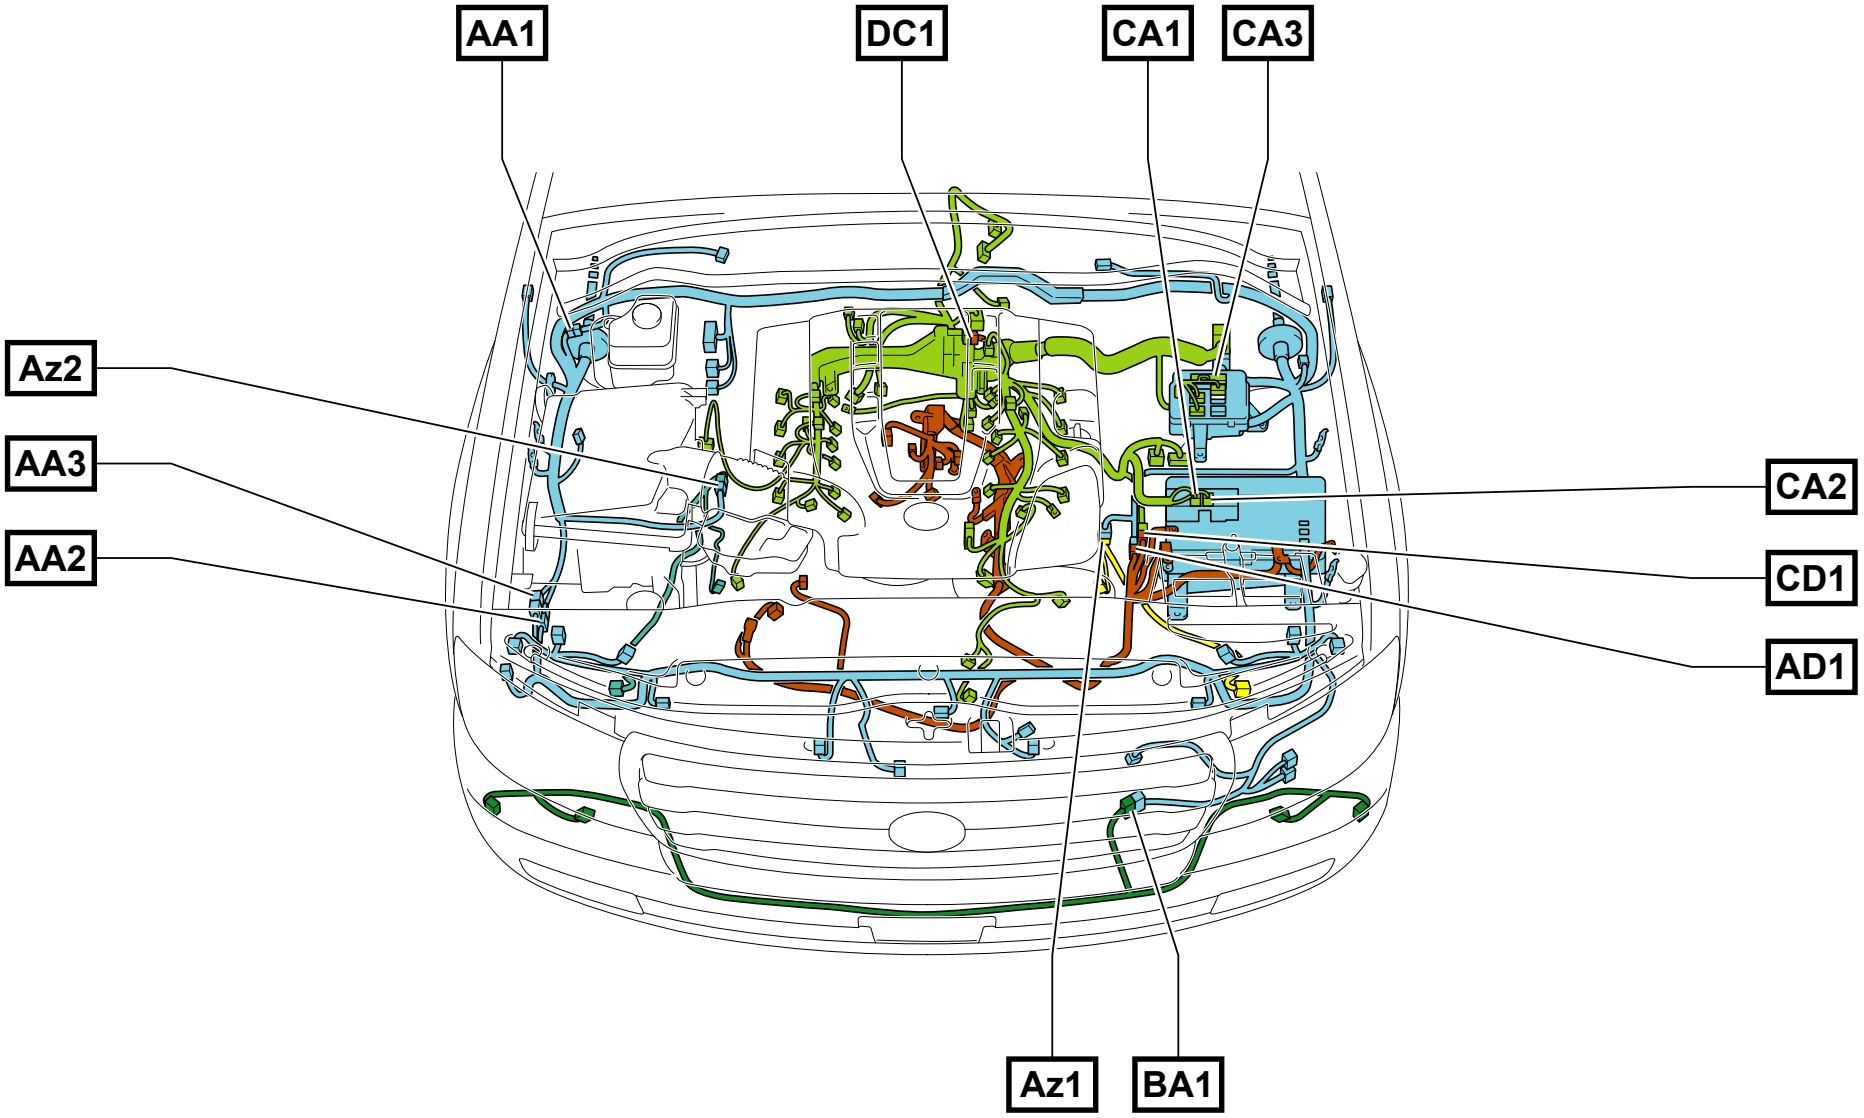

AA1
DC1
CA1
CA3
Az2
AA3
AA2
CA2
CD1
AD1
Az1
BA1

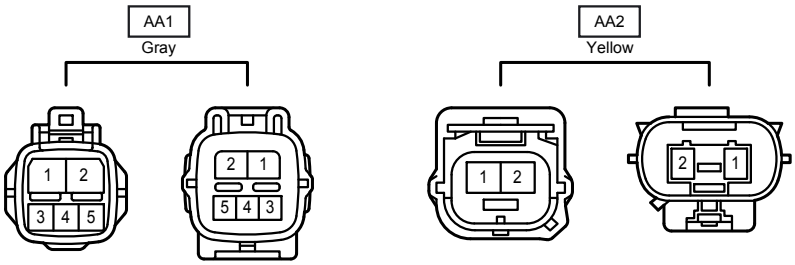

AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1

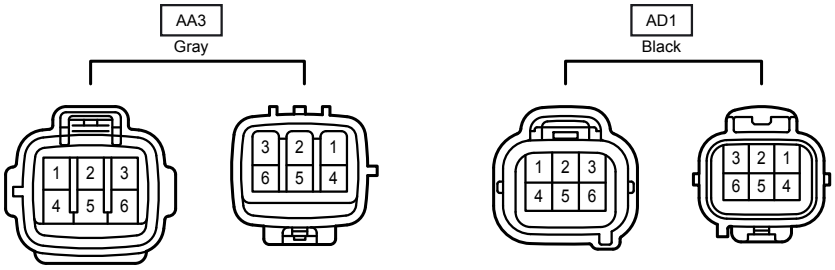

AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AD1
Black
1 2 3
4 5 6
3 2 1
6 5 4

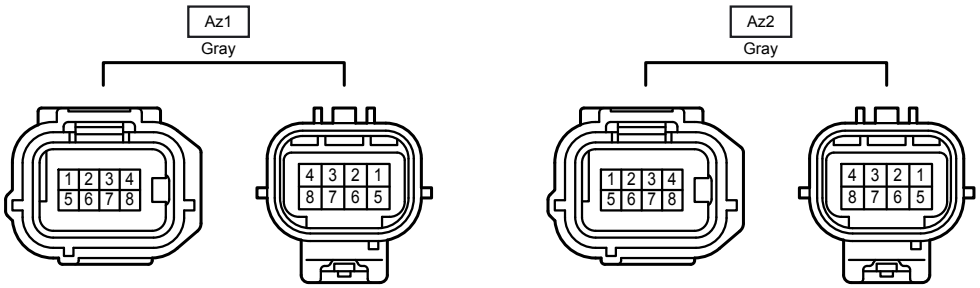

Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

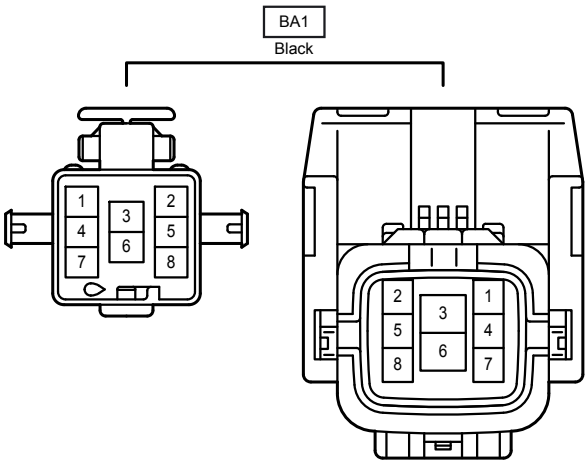
BA1
Black
1
4
7
3
6
2
5
8
2
5
8
3
6
1
4
7

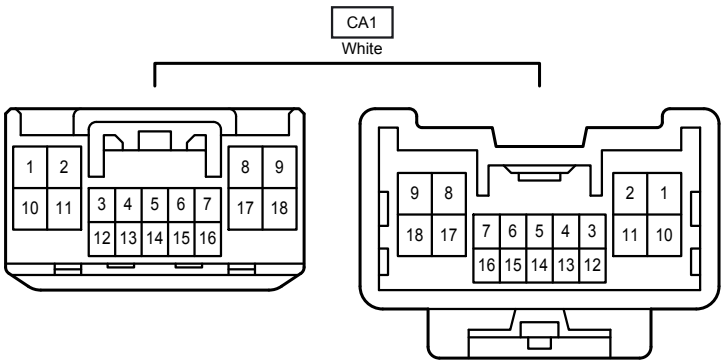
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

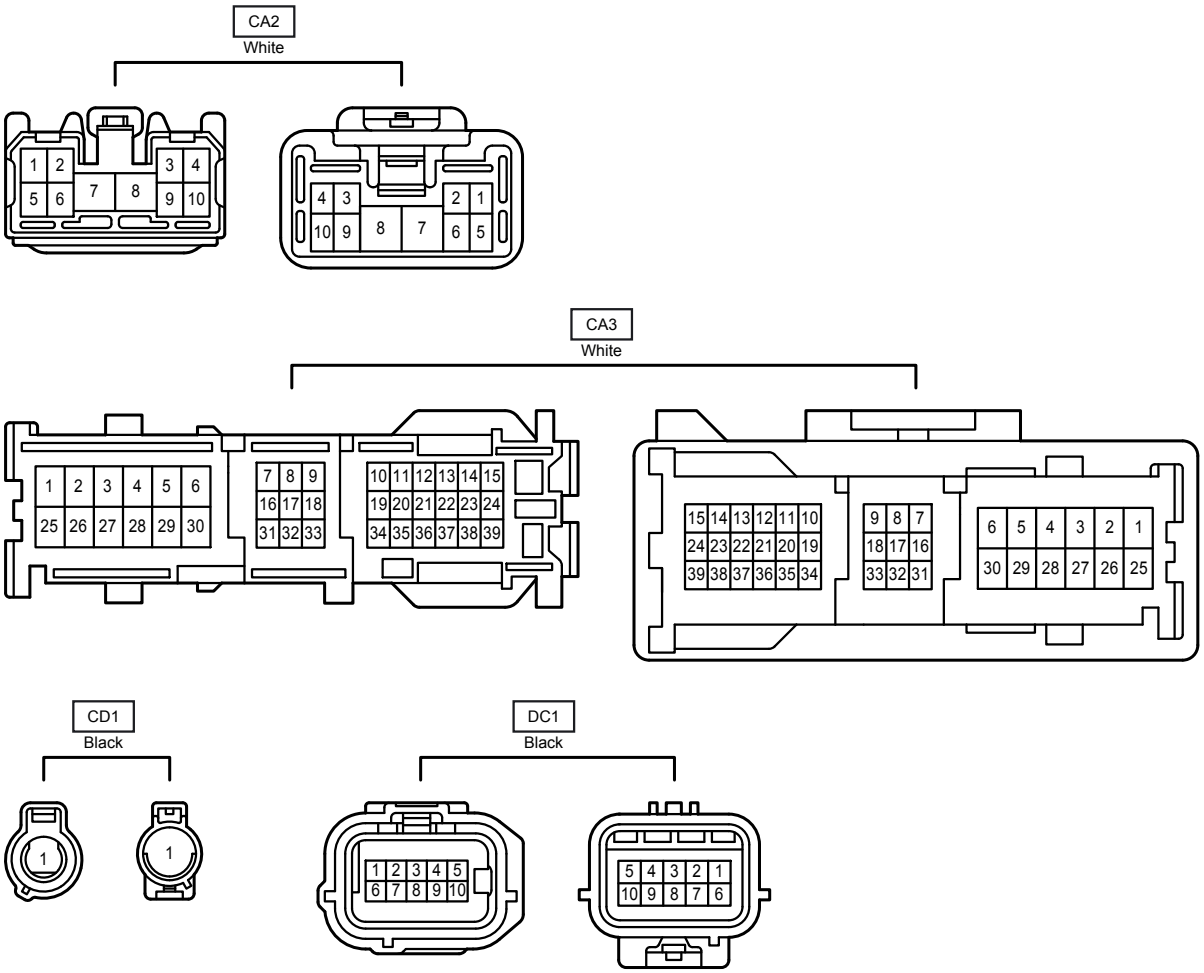

CA2
White
1 2 3 4
5 6 7 8 9 10
4 3 2 1
10 9 8 7 6 5
CA3
White
1 2 3 4 5 6
25 26 27 28 29 30
7 8 9
16 17 18
31 32 33
10 11 12 13 14 15
19 20 21 22 23 24
34 35 36 37 38 39
15 14 13 12 11 10
24 23 22 21 20 19
39 38 37 36 35 34
9 8 7
18 17 16
33 32 31
6 5 4 3 2 1
30 29 28 27 26 25
CD1
Black
1
1
DC1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

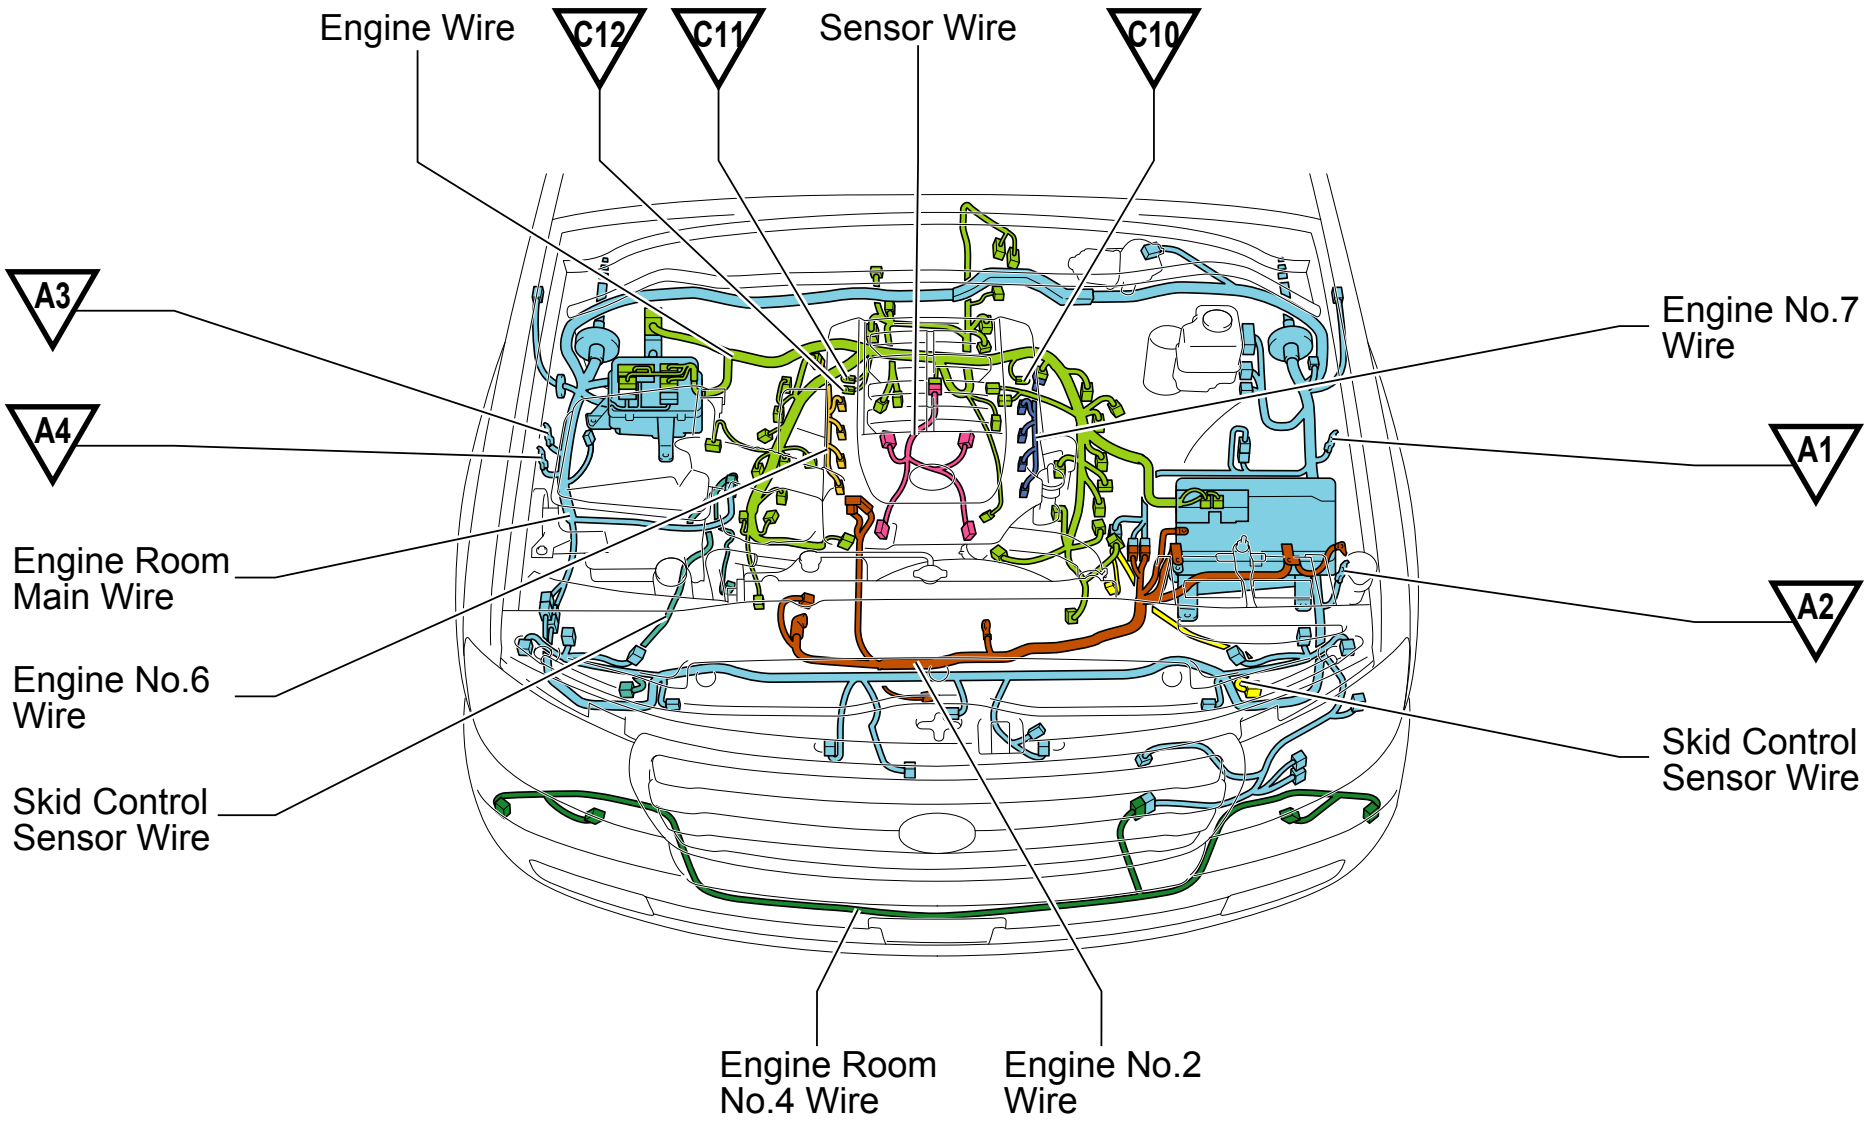
Engine Wire
C12
C11
Sensor Wire
C10
A3
A4
Engine Room Main Wire
Engine No.6 Wire
Skid Control Sensor Wire
Engine No.7 Wire
A1
A2
Skid Control Sensor Wire
Engine Room No.4 Wire
Engine No.2 Wire

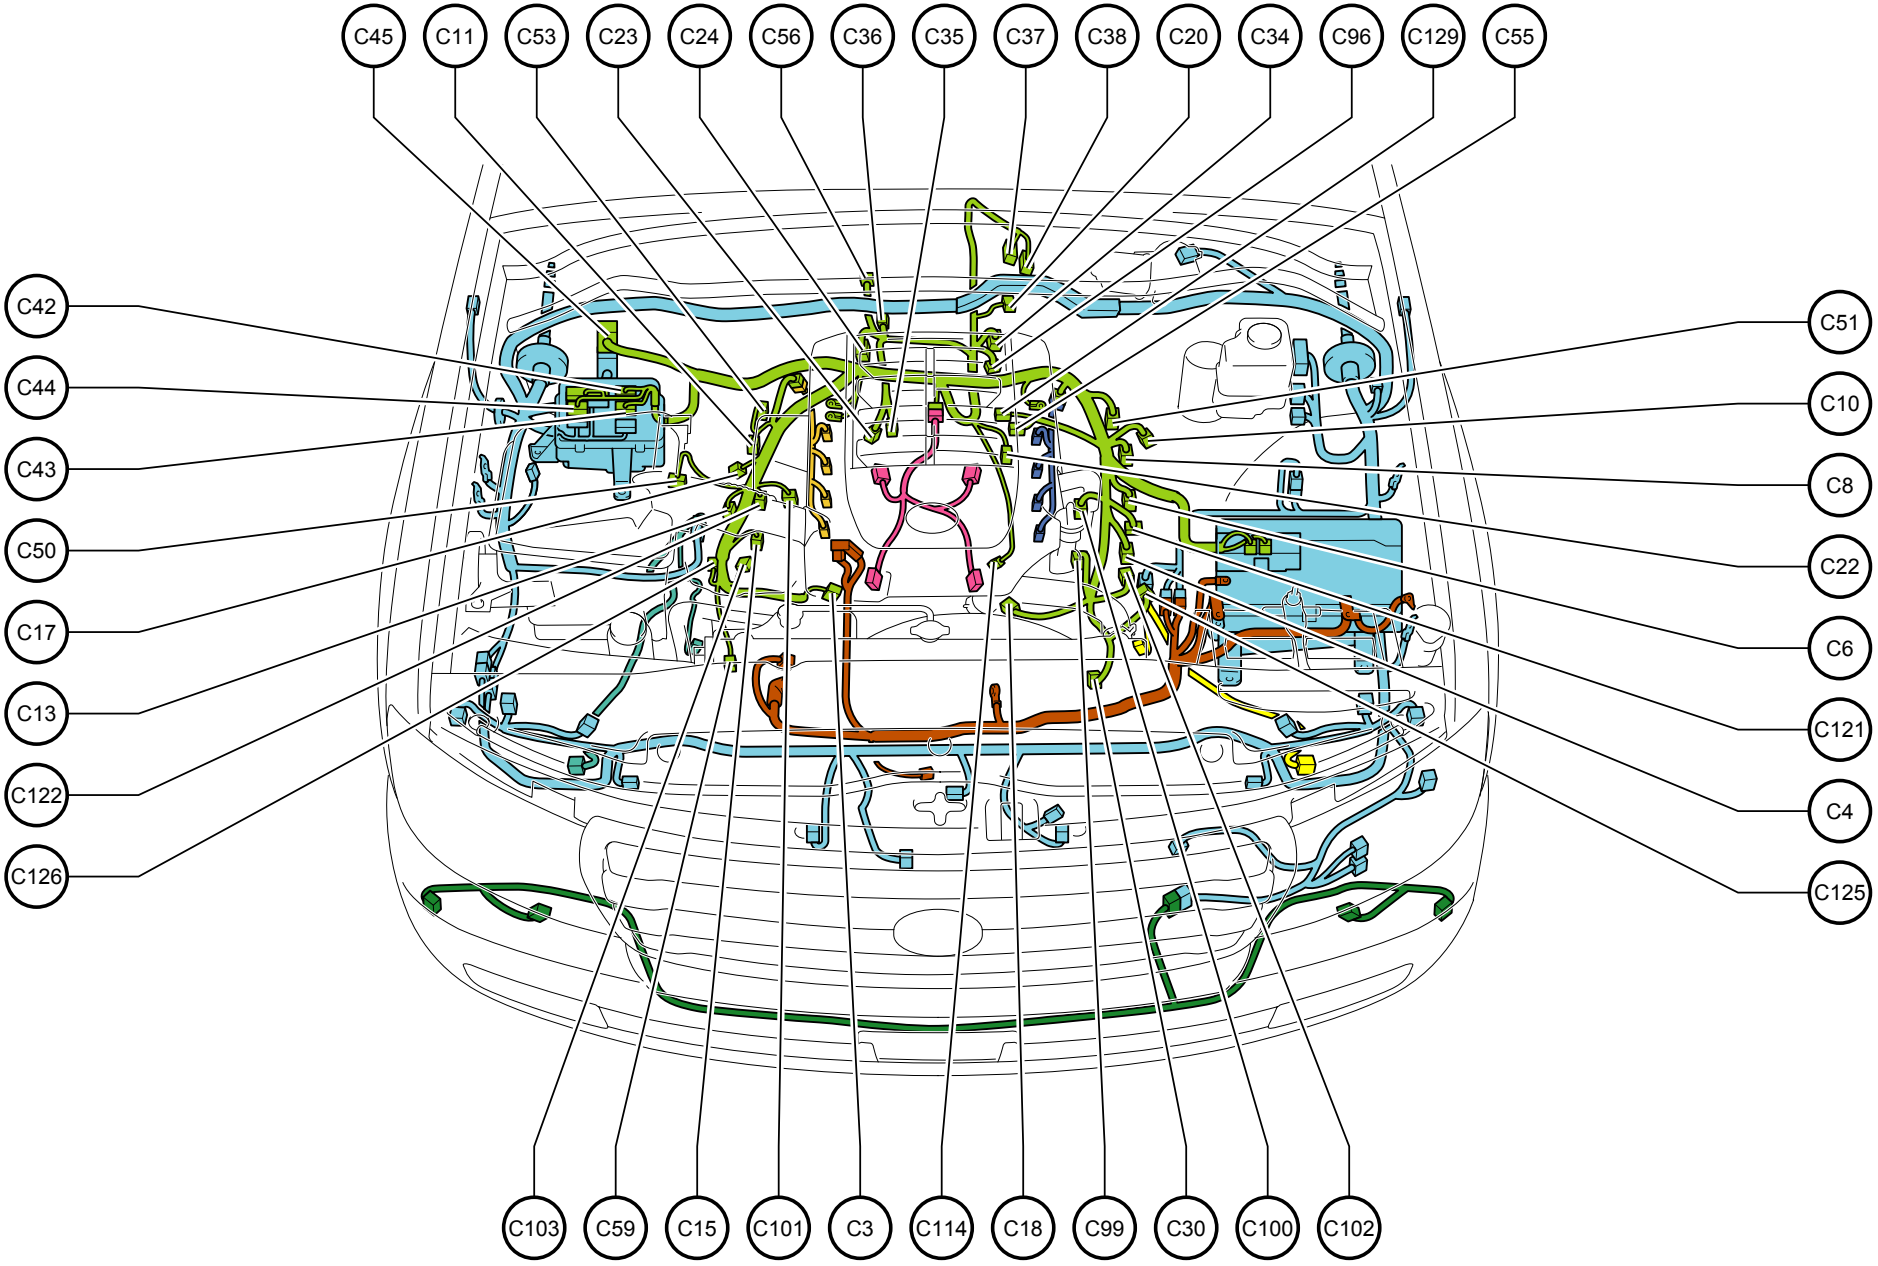

C45
C11
C53
C23
C24
C56
C36
C35
C37
C38
C20
C34
C96
C129
C55
C42
C44
C43
C50
C17
C13
C122
C126
C51
C10
C8
C22
C6
C121
C4
C125
C103
C59
C15
C101
C3
C114
C18
C99
C30
C100
C102

C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 6 Ignition Coil Assembly No.3
C 8 Ignition Coil Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 13 Ignition Coil Assembly No.4
C 15 Ignition Coil Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 30 Cooler Compressor Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 45 ECM
C 50 Mass Air Flow Meter
C 51 Ignition Coil Assembly No.7
C 53 Ignition Coil Assembly No.8
C 55 Purge VSV
C 56 Oxygen Sensor (Bank 2 Sensor 2)
C 59 Power Steering Oil Pressure Sensor
C 96 Electronically Controlled Transmission Solenoid
C 99 Camshaft Position Sensor
C 100 VVT Sensor (Bank 1 Intake Side)
C 101 VVT Sensor (Bank 2 Intake Side)
C 102 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 103 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 114 Crankshaft Position Sensor
C 121 VVT Sensor (Bank 1 Exhaust Side)
C 122 VVT Sensor (Bank 2 Exhaust Side)
C 125 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C 126 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C 129 VSV (ACIS)


C 3
Black

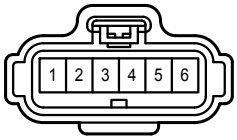


C 4
Black



C 6
Black




C 8
Black




C 10
Gray




C 11
Black



C 13
Black



C 15
Black



C 17
Gray



C 18
Dark Gray



C 20
Dark Gray




C 22
Dark Gray



C 23
Dark Gray




C 24
Gray

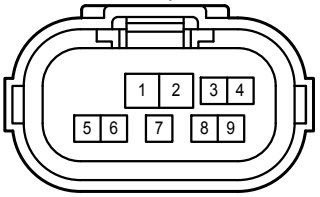


C 30
Gray




C 34
Gray

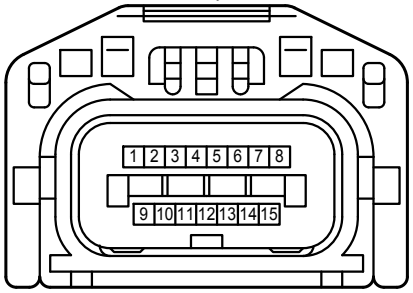


C 35
Black

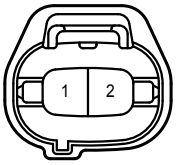


C 36
Black

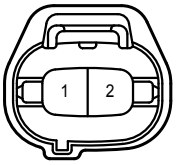


C 37
Black

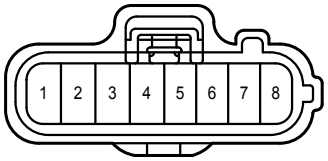


C 38
Dark Gray

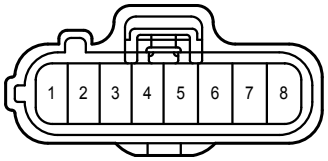


C 42
White

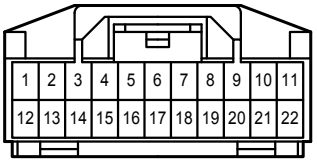


C 43
White

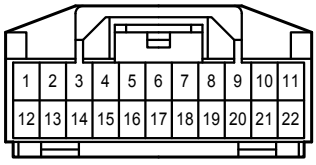

C 44
Blue

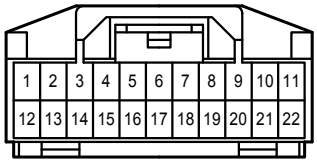


C 45
Black

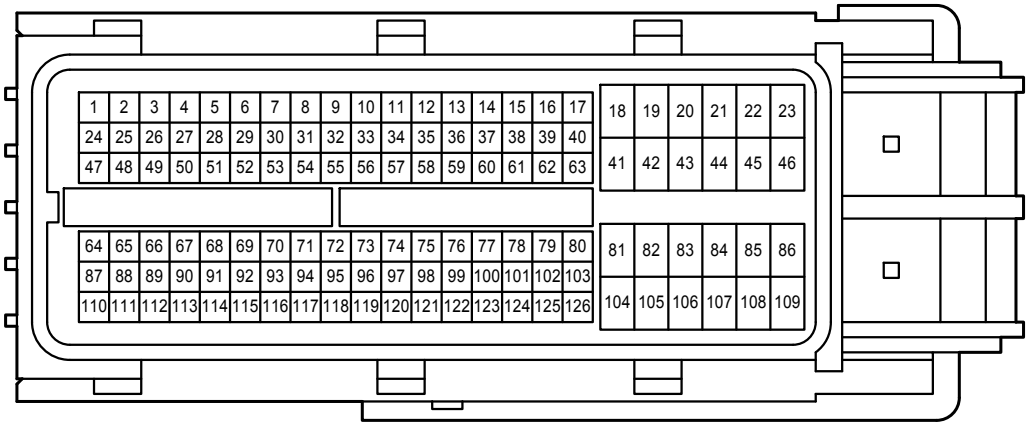


C 50
Black




C 51
Black



C 53
Black




C 55
Black

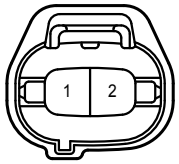


C 56
Dark Gray




C 59
Gray

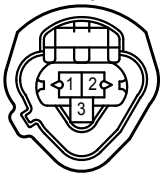


C 96
Gray

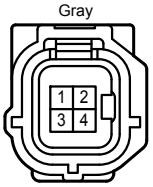


C 99
Black

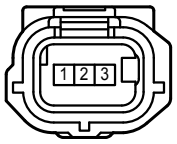

C100
Black

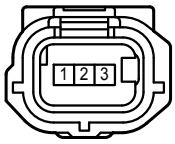

C101
Black

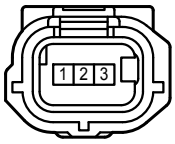


C102
Black




C103
Black




C114
Black

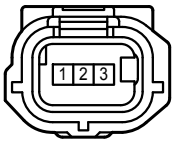

C121
Black

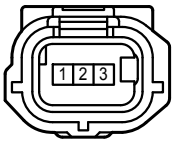

C122
Black

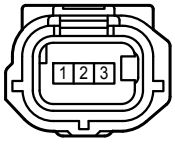


C125
Black




C126
Black



C129
Black

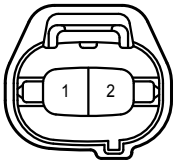

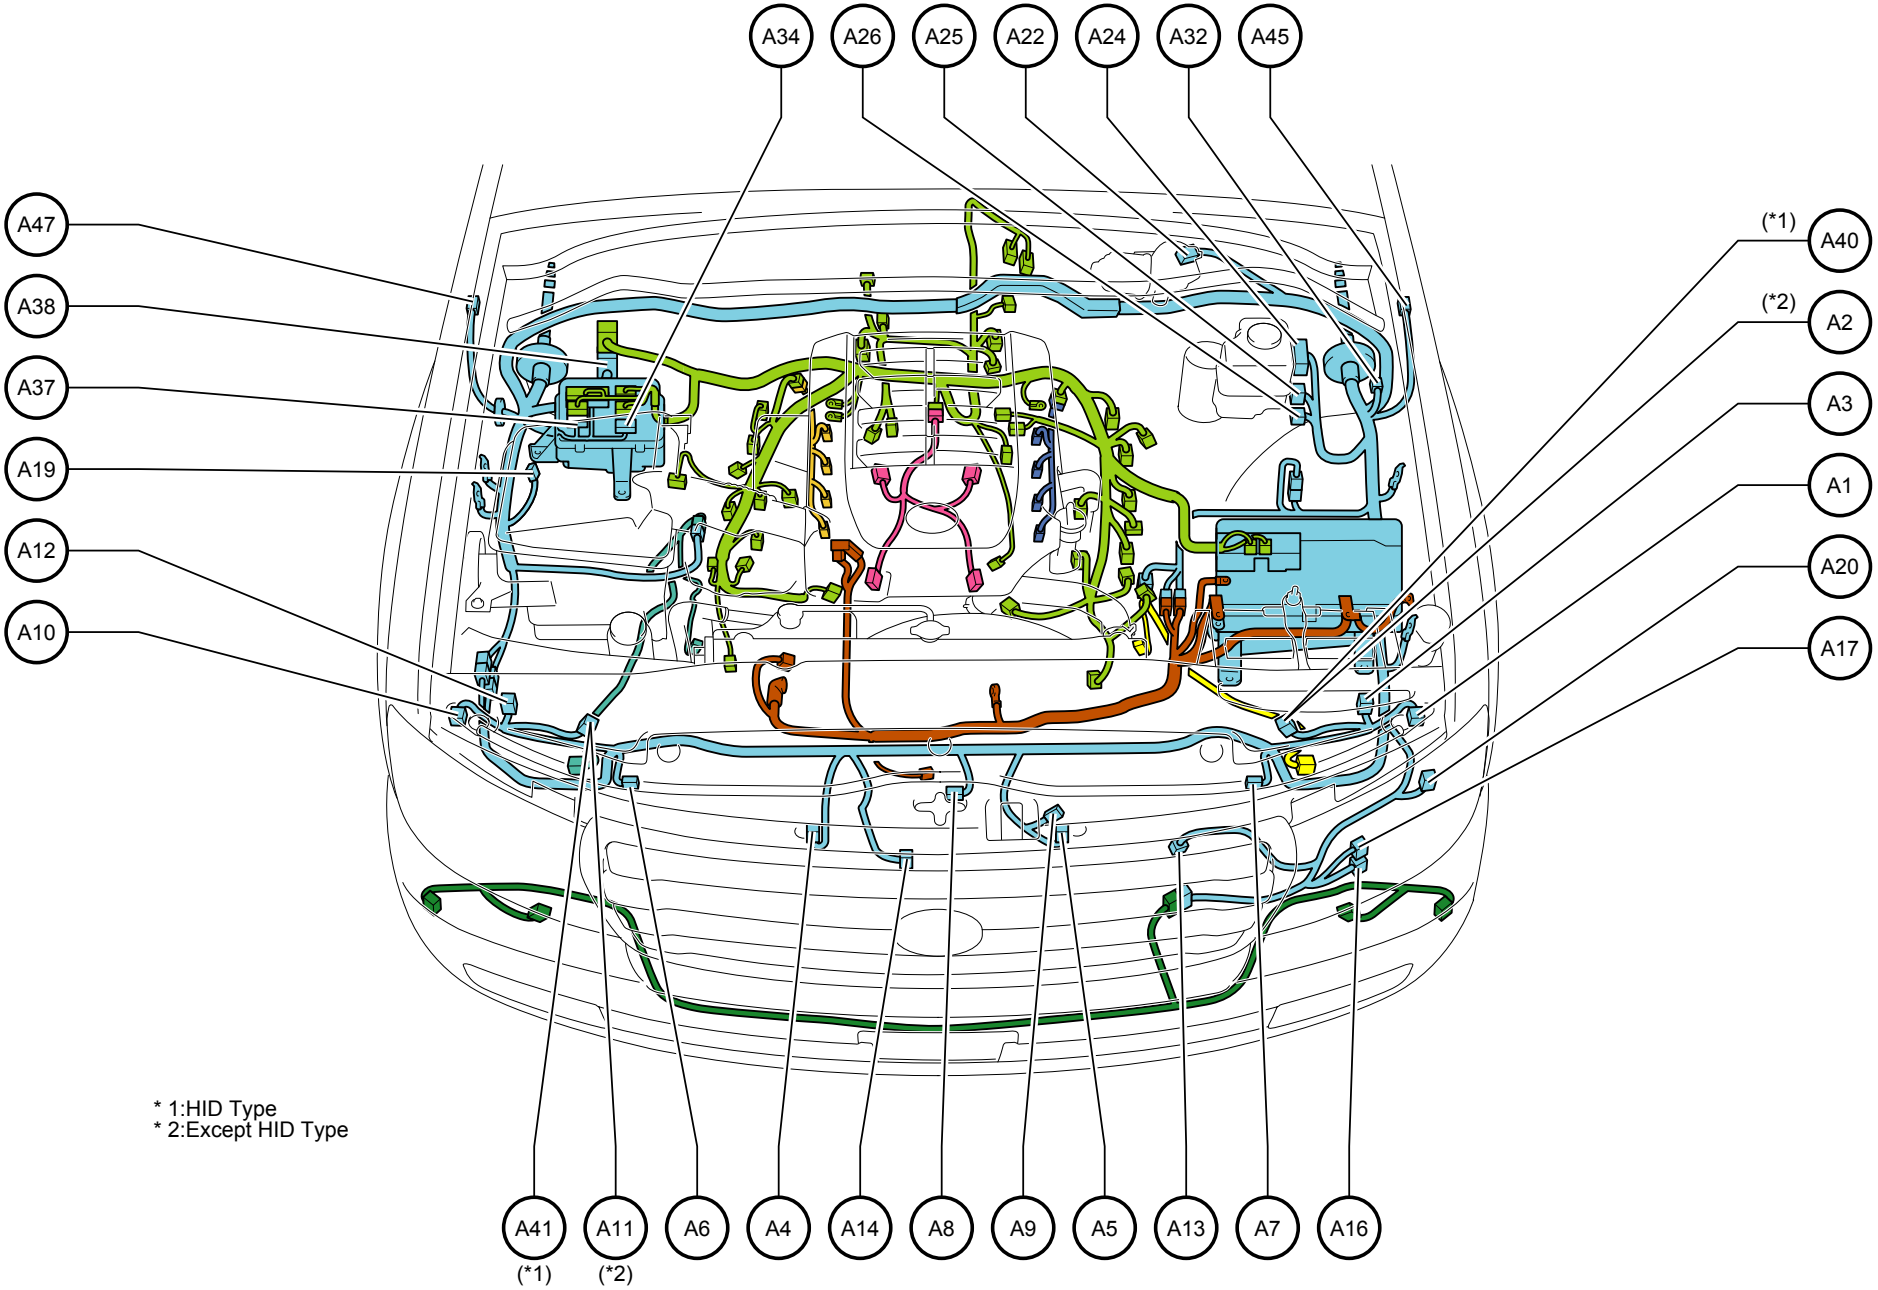


* 1:HID Type
* 2:Except HID Type

A	1	Headlight Assembly LH
A	2	Headlight Assembly LH
A	3	Headlight Assembly LH
A	4	High Pitched Horn Assembly
A	5	Low Pitched Horn Assembly
A	6	Front Airbag Sensor RH
A	7	Front Airbag Sensor LH
A	8	Engine Hood Courtesy Switch
A	8	Engine Hood Courtesy Switch
A	9	Condenser Blower Motor Assembly
A	10	Headlight Assembly RH
A	11	Headlight Assembly RH
A	12	Headlight Assembly RH
A	13	A/C Pressure Sensor
A	14	Ambient Temperature Sensor
A	16	Windshield Washer Motor and Pump Assembly
A	17	Headlight Cleaner Control Relay and Motor
A	19	Security Horn Assembly
A	20	Wireless Door Lock Buzzer
A	22	Windshield Wiper Motor Assembly
A	24	Skid Control ECU with Actuator Assembly
A	25	Skid Control ECU with Actuator Assembly
A	26	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A	32	Noise Filter
A	34	Junction Connector
A	37	Junction Connector
A	38	ECM
A	40	Headlight Assembly LH
A	41	Headlight Assembly RH
A	45	Side Turn Signal Light Assembly LH
A	47	Side Turn Signal Light Assembly RH


A 1
Gray



A 2
Black

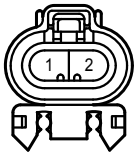

A 3
Black

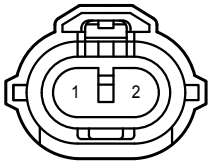

A 4
Black



A 5
Black



A 6
Yellow



A 7
Yellow



A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

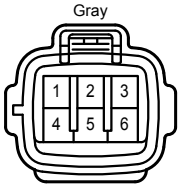


A 11
Black

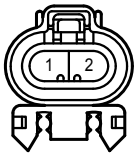

A 12
Black

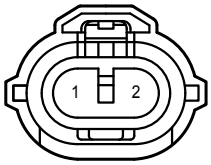


A 13
Black

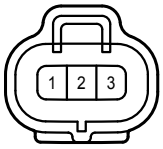

A 14
Black




A 16
Gray

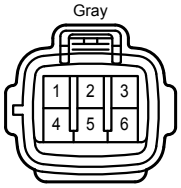

A 17
Black



A 19
Black




A 20
Black




A 22
Black




A 24
Black

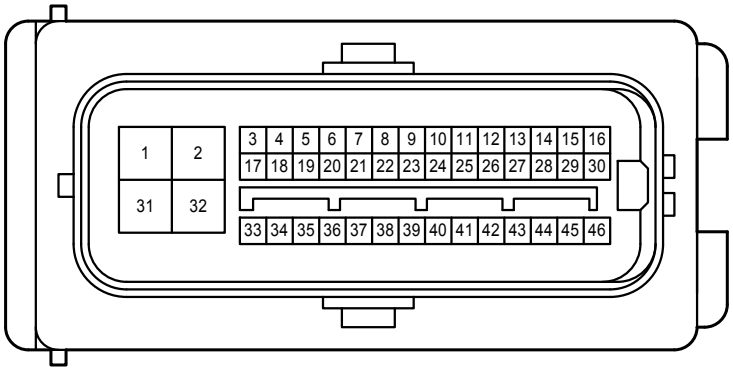


A 25
Black

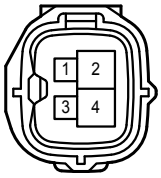


A 26
Gray

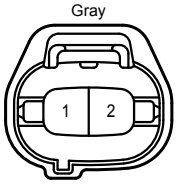


A 32
Black

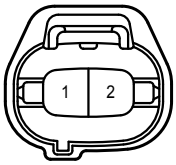


A 34
White

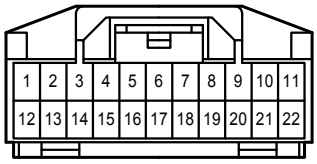

A 37
Blue

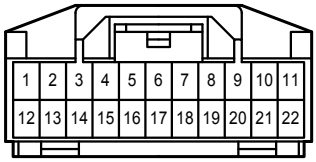

A 38
Black

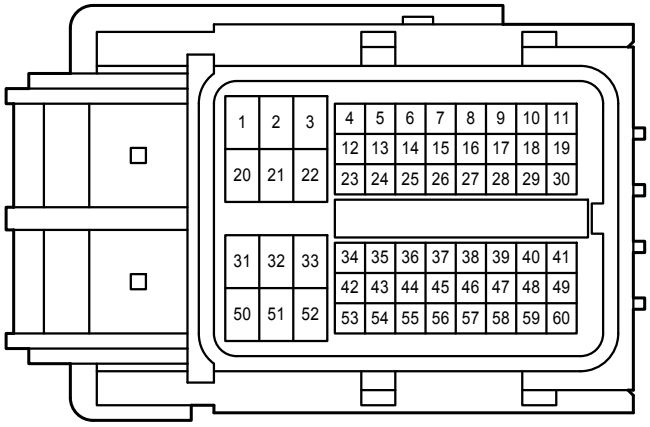

A 40
Gray



A 41
Gray




A 45
Gray



A 47
Gray

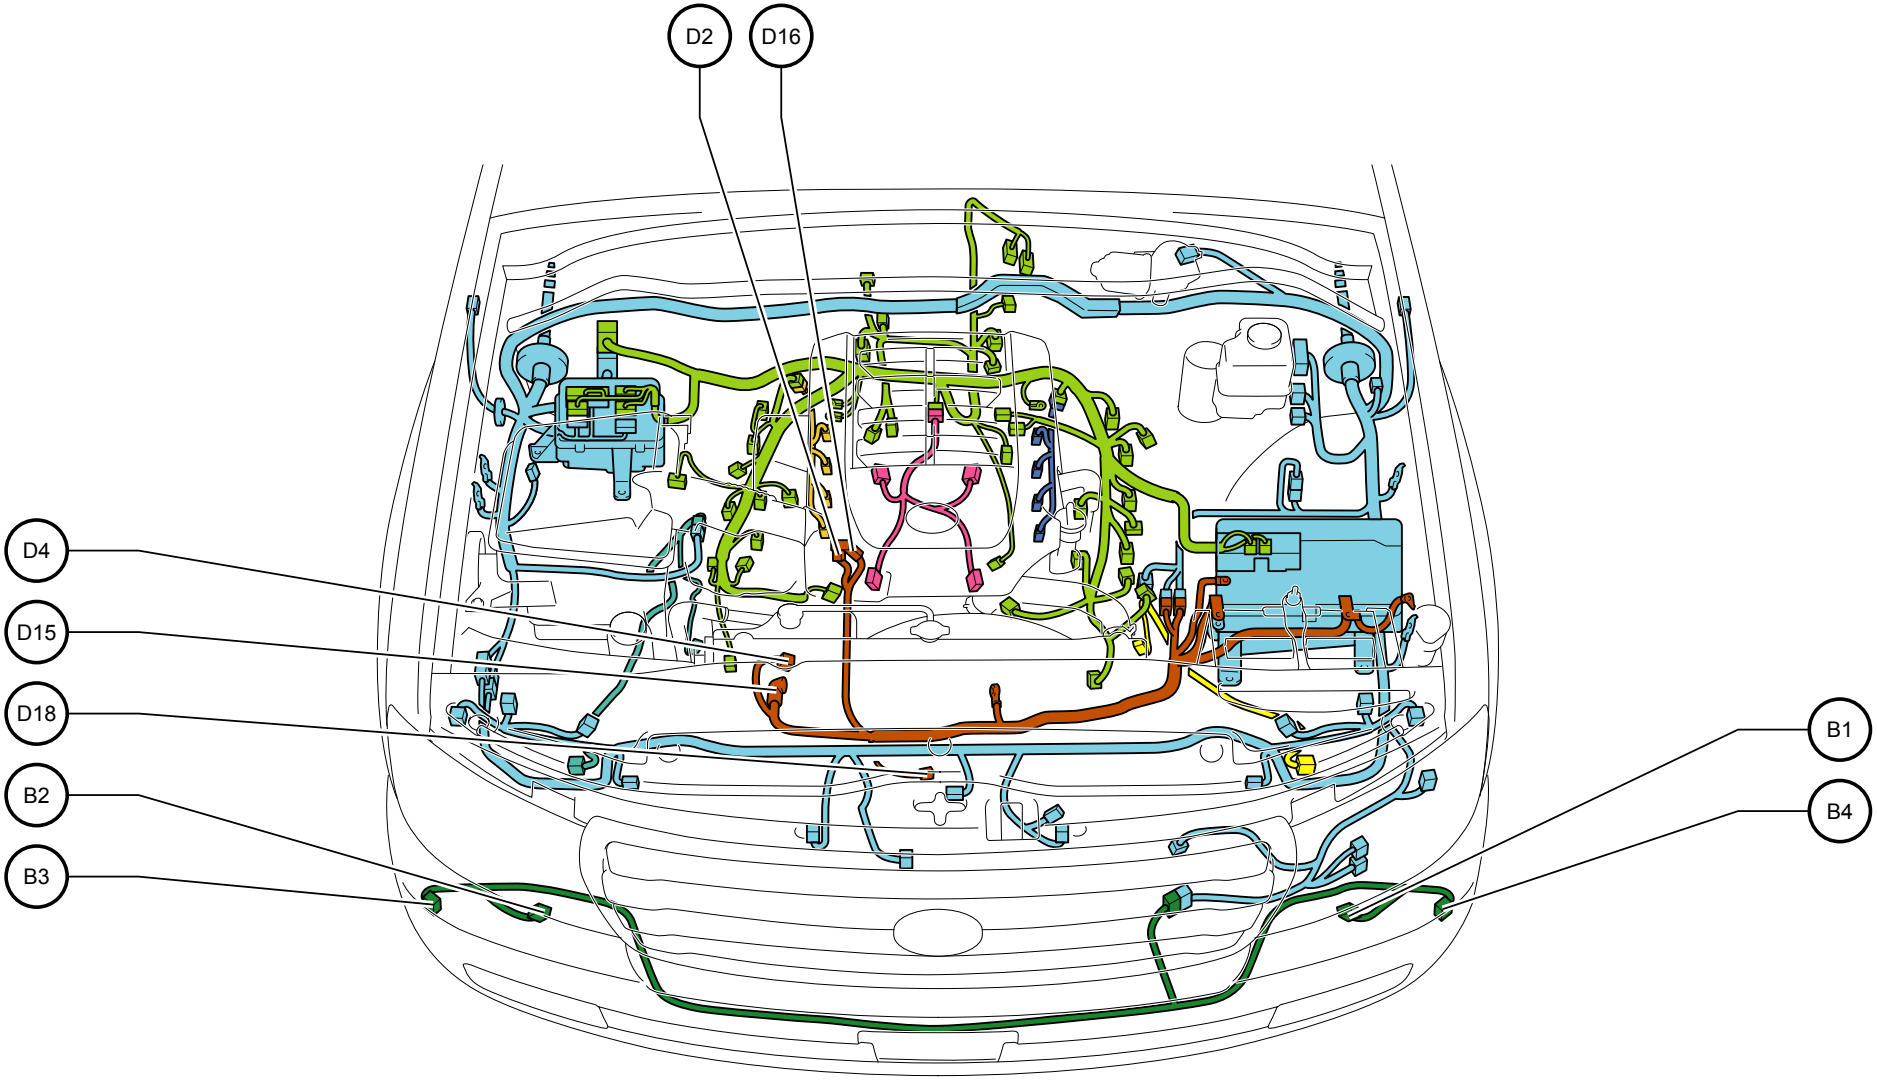



D2
D16
D4
D15
D18
B2
B3
B1
B4


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH

D 2 Starter Assembly
D 4 Generator Assembly
D 15 Generator Assembly
D 16 Starter Assembly
D 18 Oil Pressure Sender Gage Assembly


B 1
Brown

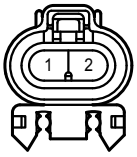


B 2
Brown

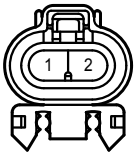

B 3
Black

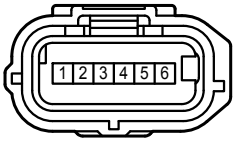

B 4
Black

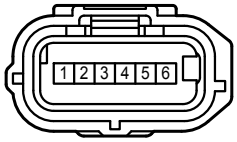


D 2
Black




D 4
Black



D 15




D 16



D 18
Black

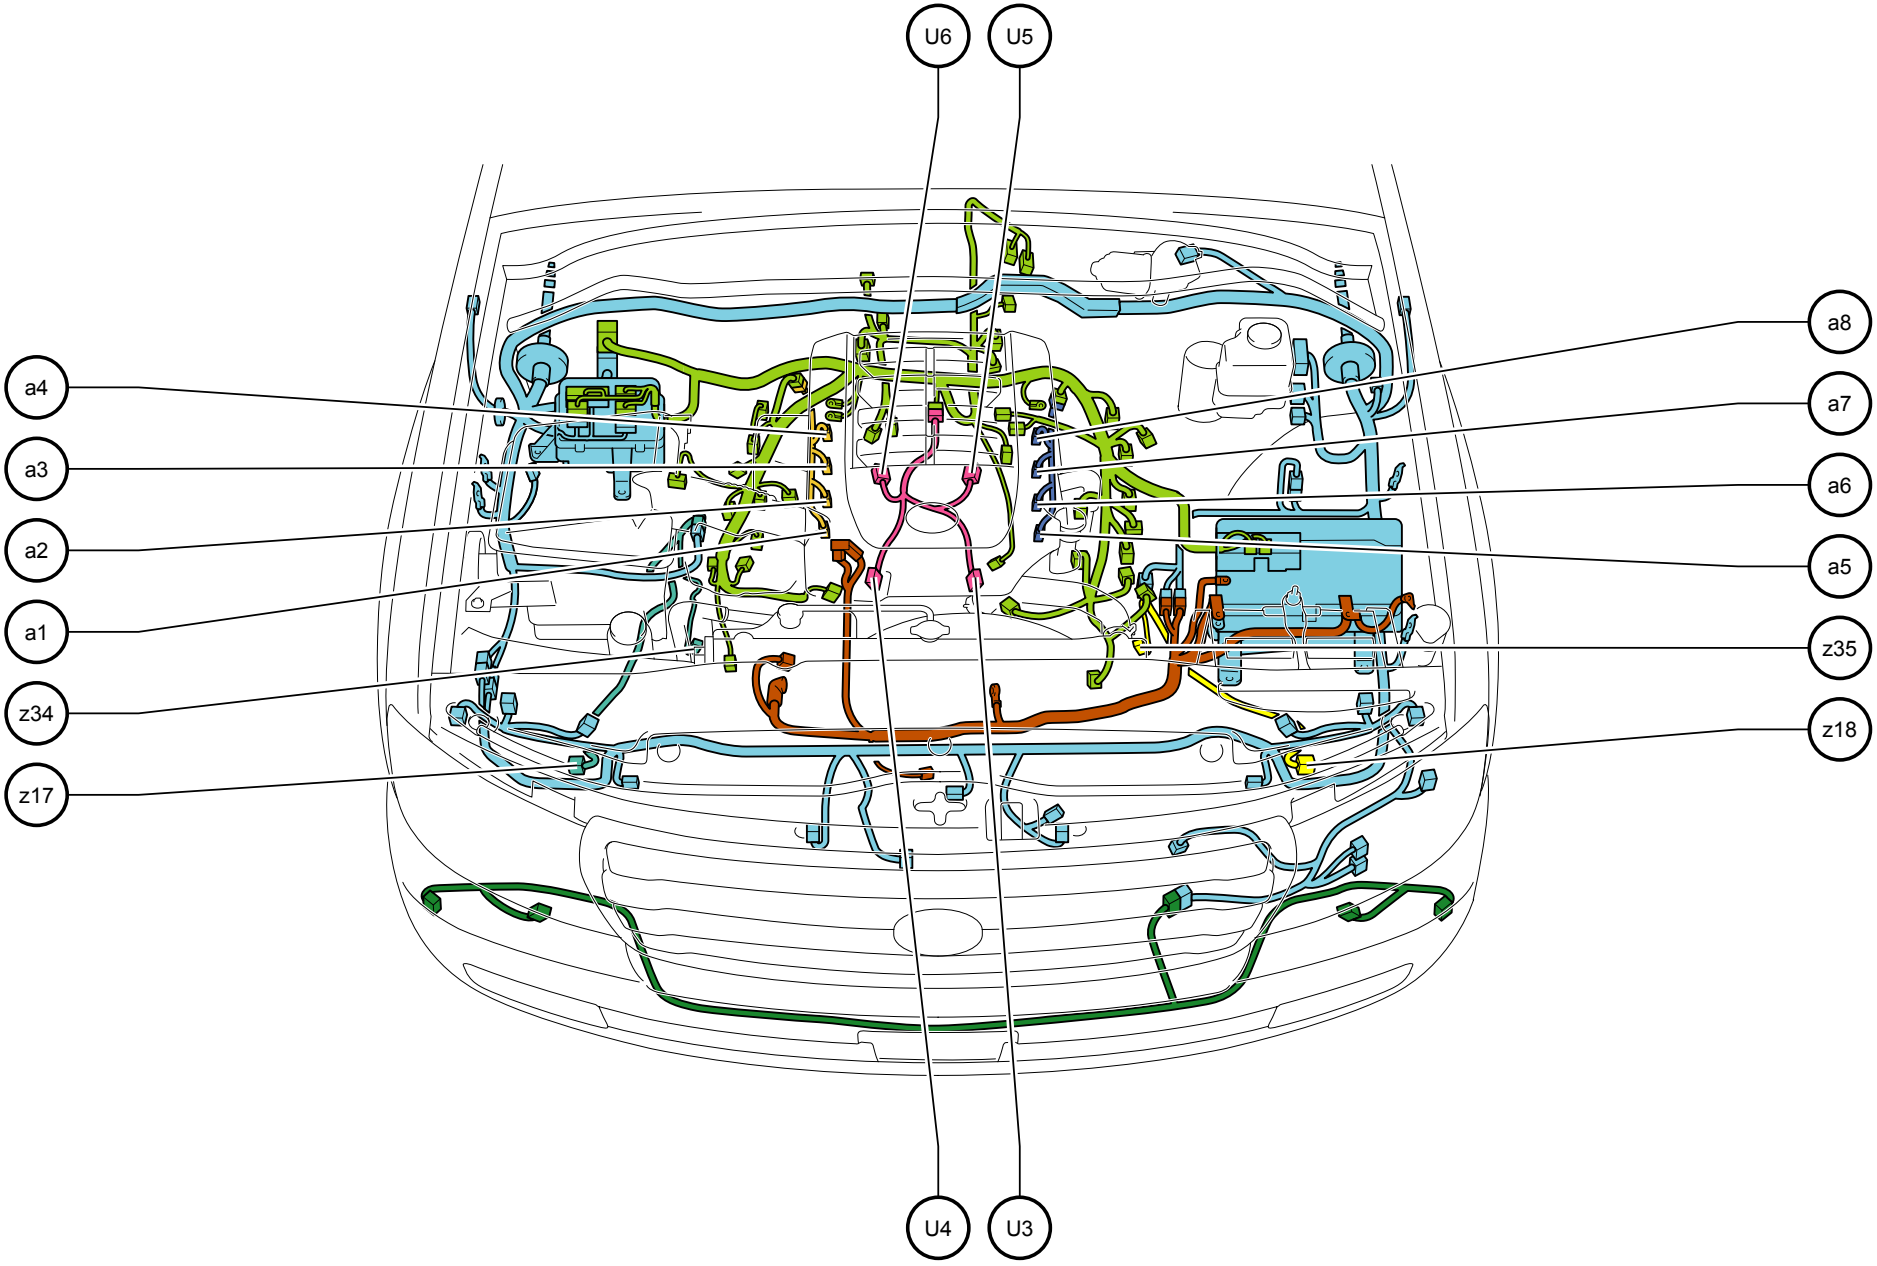



U6
U5
a4
a3
a2
a1
z34
z17
a8
a7
a6
a5
z35
z18
U4
U3

U 3 Knock Control Sensor (Bank 1 Sensor 1)
U 4 Knock Control Sensor (Bank 2 Sensor 1)
U 5 Knock Control Sensor (Bank 1 Sensor 2)
U 6 Knock Control Sensor (Bank 2 Sensor 2)


a 1 Fuel Injector Assembly No.2
a 2 Fuel Injector Assembly No.4
a 3 Fuel Injector Assembly No.6
a 4 Fuel Injector Assembly No.8
a 5 Fuel Injector Assembly No.1
a 6 Fuel Injector Assembly No.3
a 7 Fuel Injector Assembly No.5
a 8 Fuel Injector Assembly No.7

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH


U 3
Gray




U 4
Black




U 5
Gray




U 6
Black




a 1
Black

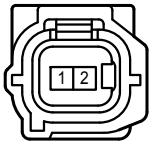


a 2
Black

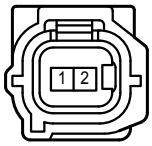


a 3
Black

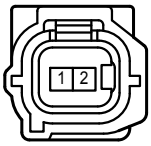


a 4
Black

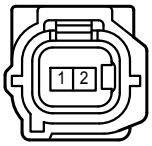


a 5
Black

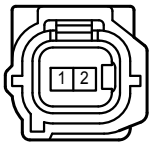


a 6
Black

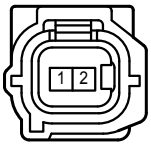

a 7
Black

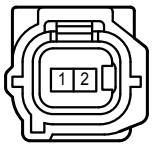

a 8
Black

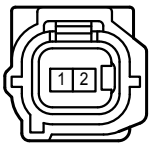


z 17
Black




z 18
Black





z 34
Black

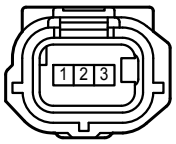



z 35
Black

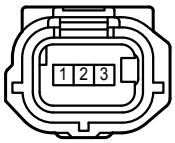


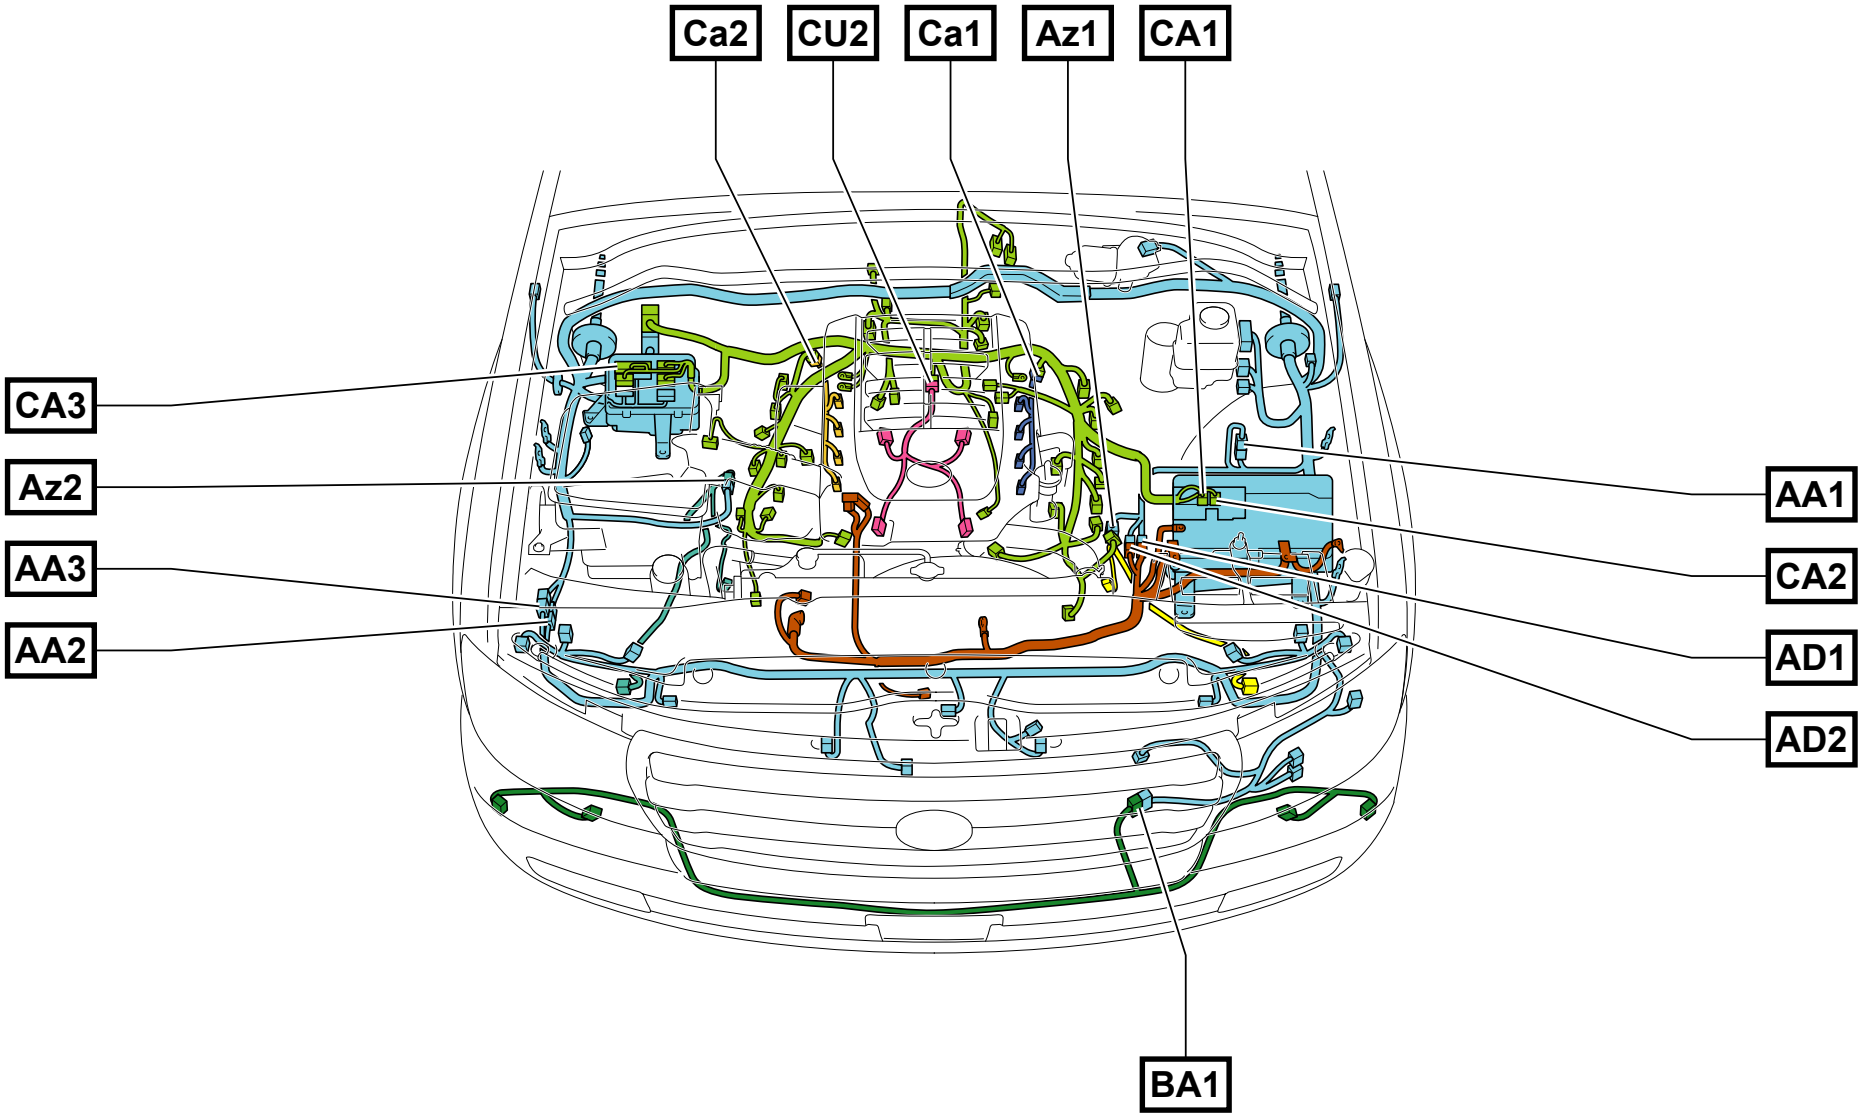

Ca2
CU2
Ca1
Az1
CA1
CA3
Az2
AA3
AA2
AA1
CA2
AD1
AD2
BA1

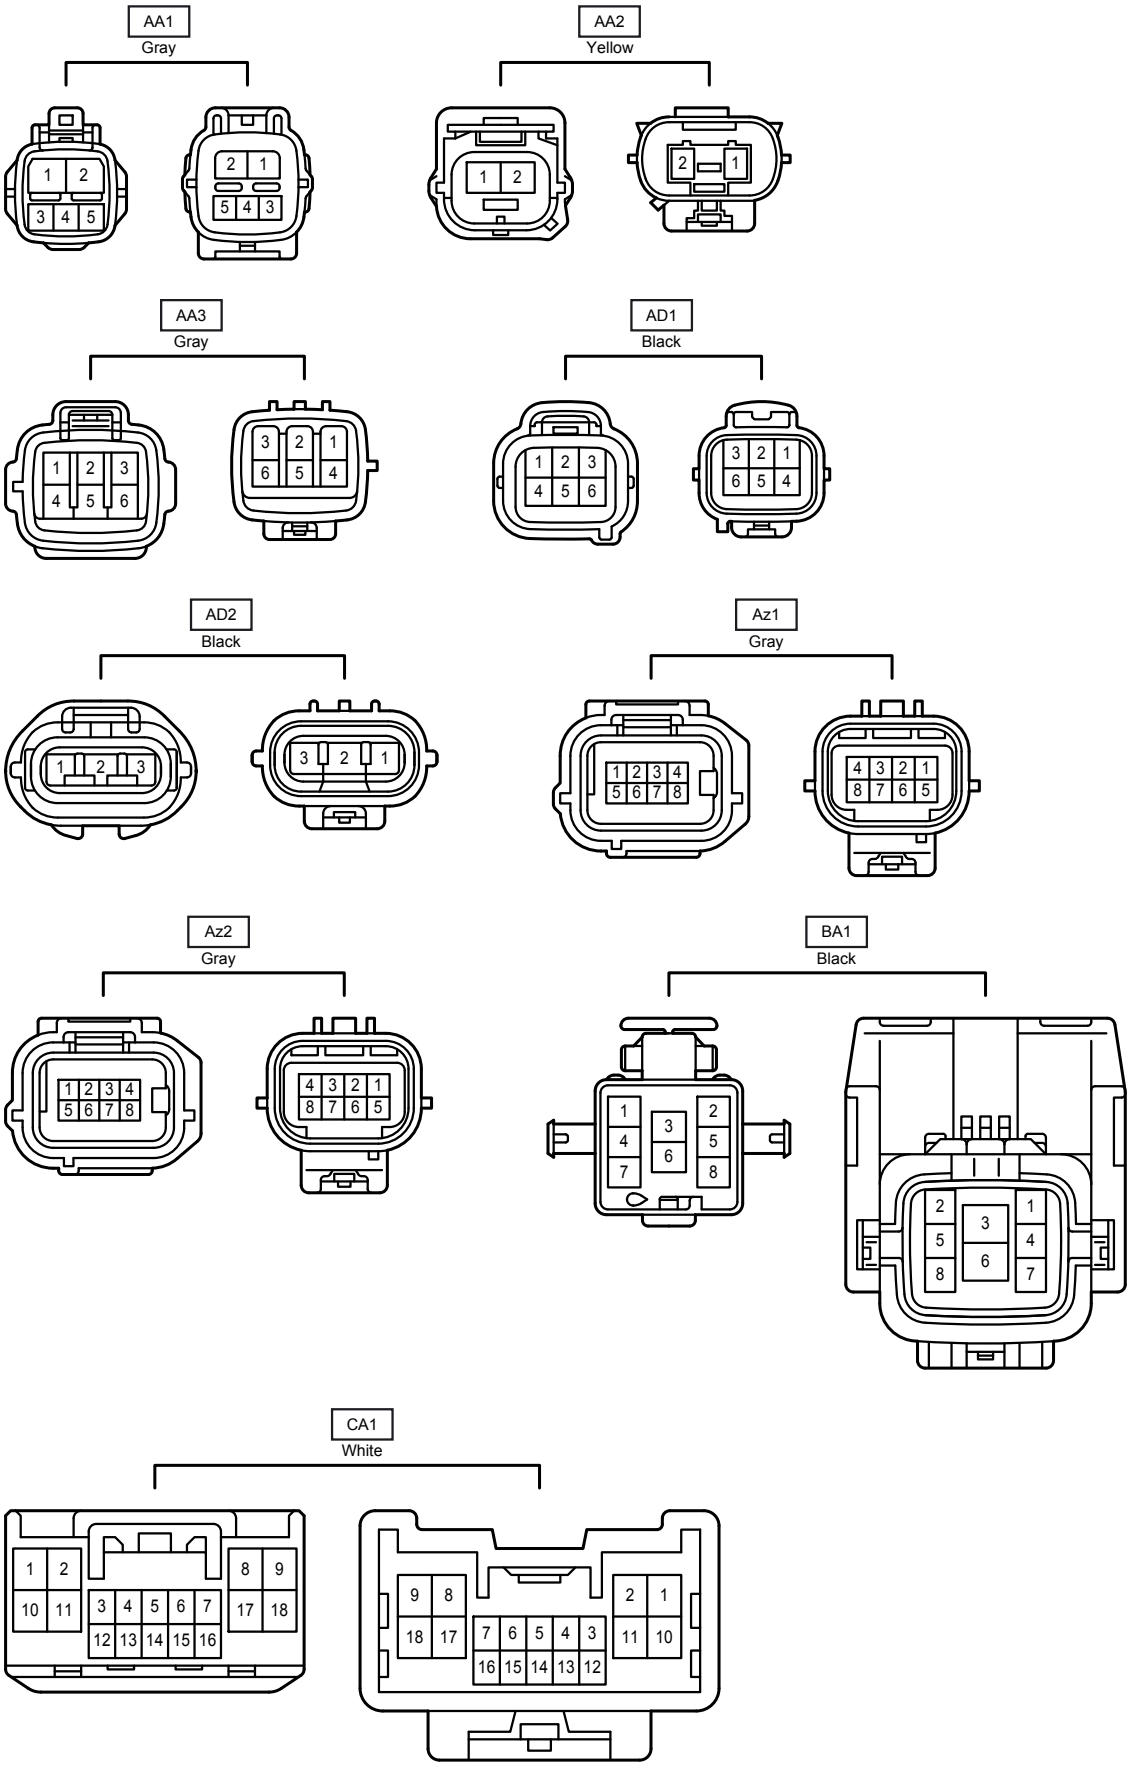

AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1
AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AD1
Black
1 2 3
4 5 6
3 2 1
6 5 4
AD2
Black
1 2 3
3 2 1
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
BA1
Black
1 4 7
3 6
2 5 8
2 5 8
3 6
1 4 7
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

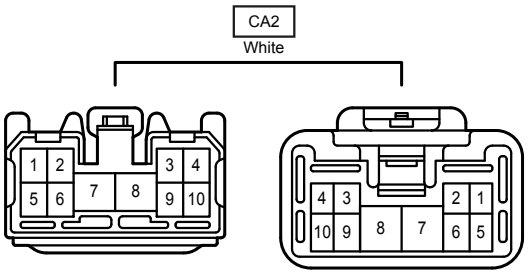

CA2
White
1 2 3 4
5 6 7 8 9 10
4 3 2 1
10 9 8 7 6 5

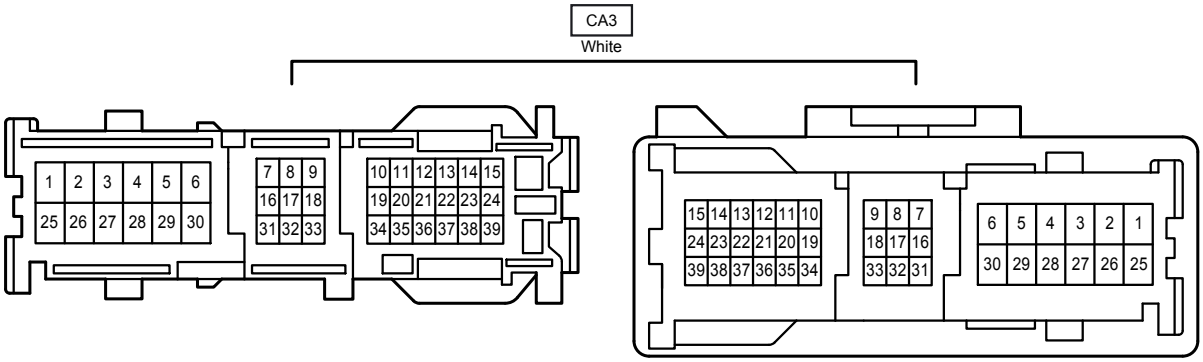
CA3
White
1 2 3 4 5 6
25 26 27 28 29 30
7 8 9
16 17 18
31 32 33
10 11 12 13 14 15
19 20 21 22 23 24
34 35 36 37 38 39
15 14 13 12 11 10
24 23 22 21 20 19
39 38 37 36 35 34
9 8 7
18 17 16
33 32 31
6 5 4 3 2 1
30 29 28 27 26 25

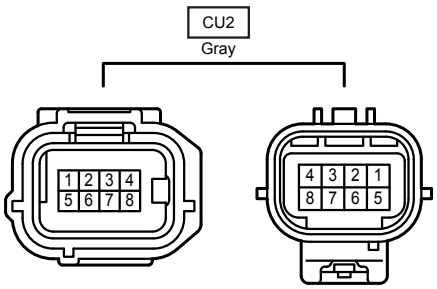
CU2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

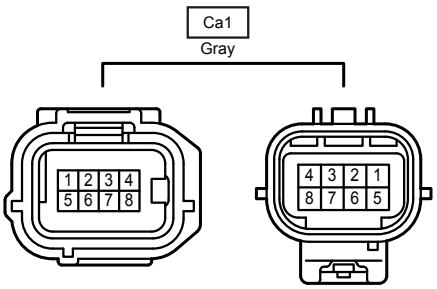
Ca1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

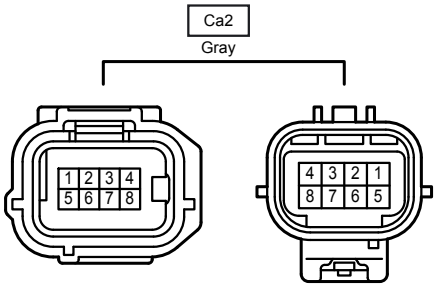
Ca2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

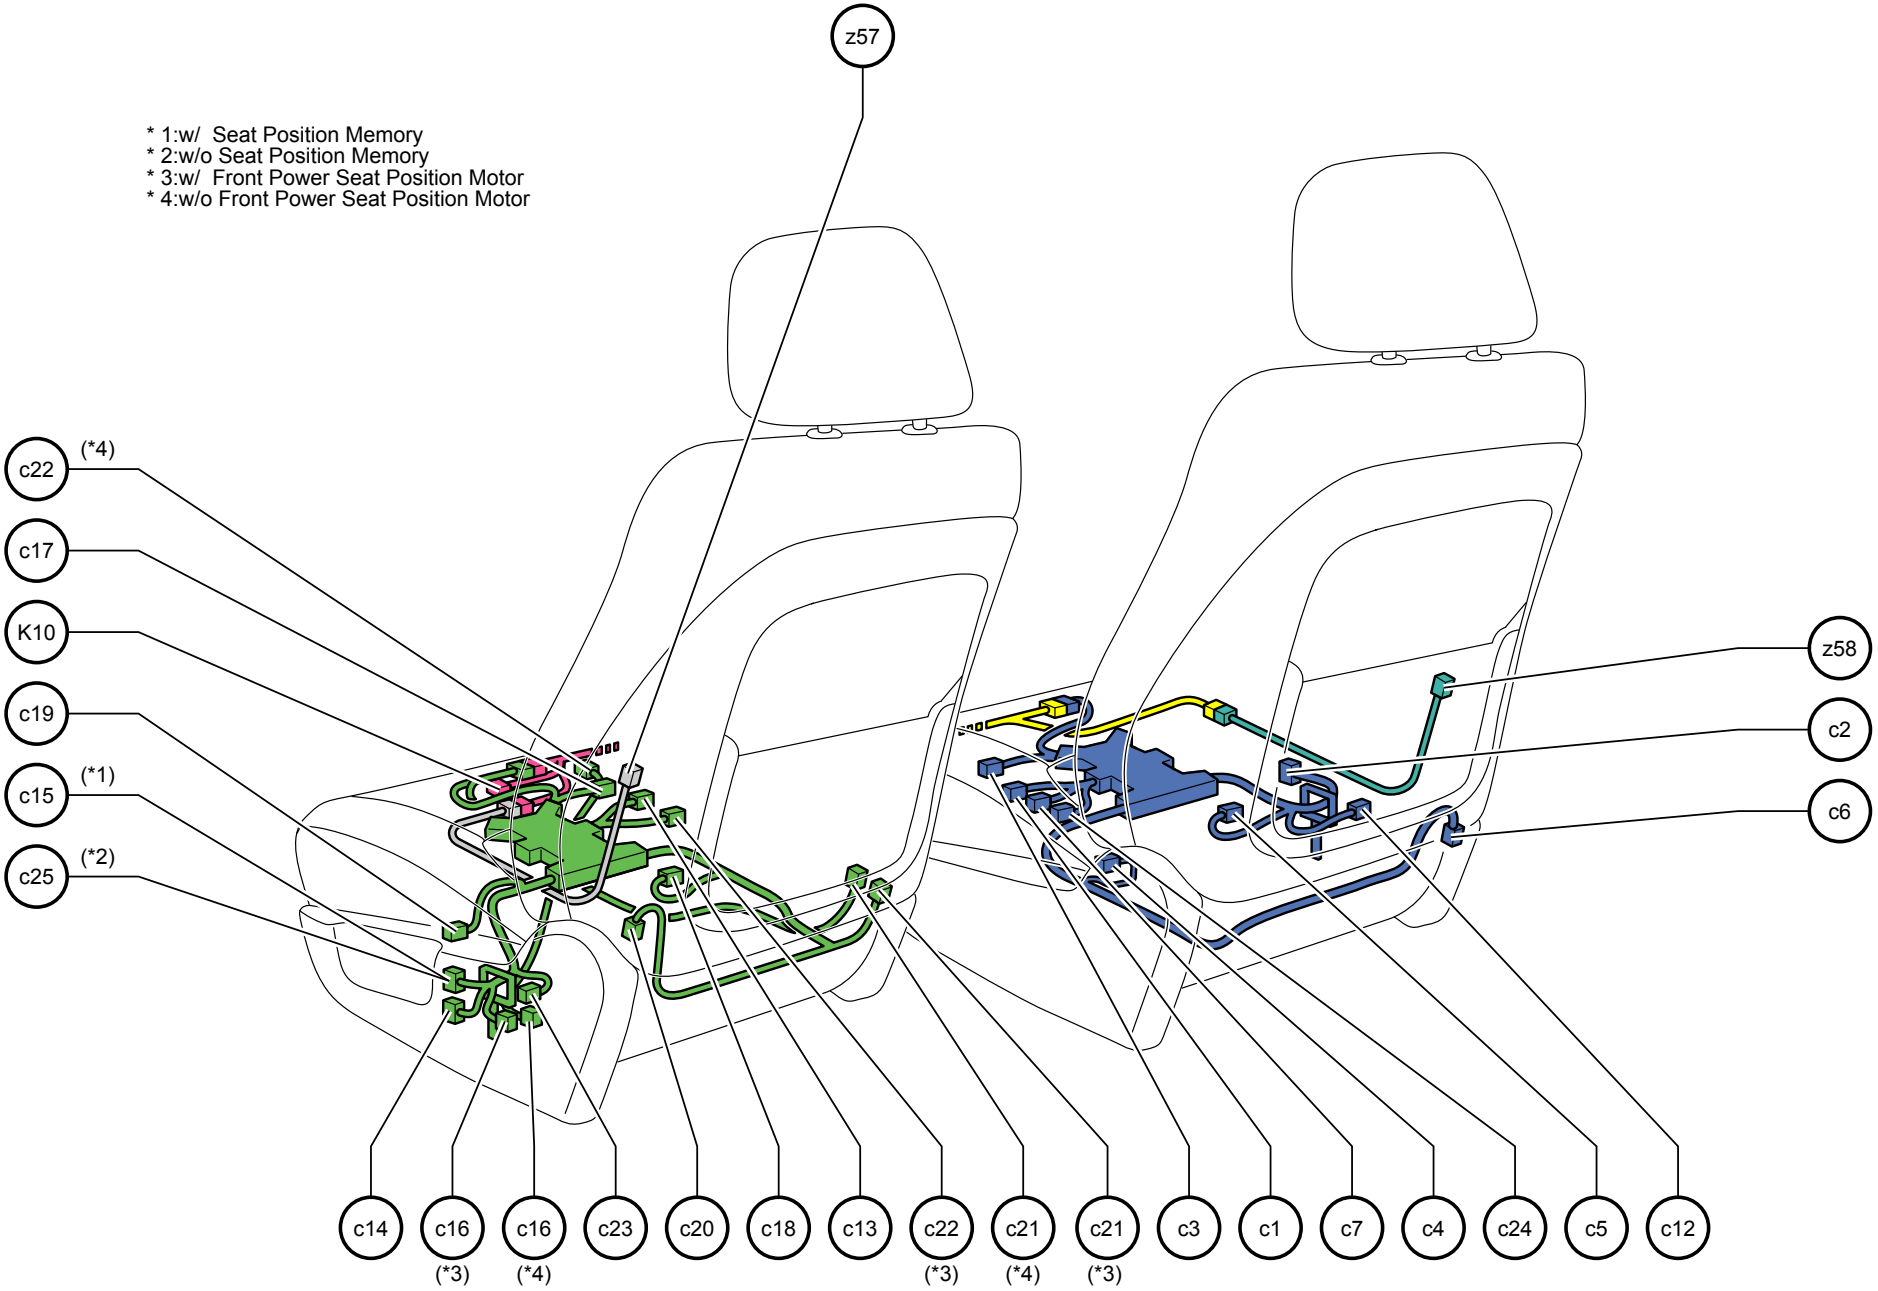

* 1:w/ Seat Position Memory
* 2:w/o Seat Position Memory
* 3:w/ Front Power Seat Position Motor
* 4:w/o Front Power Seat Position Motor
z57
c22
(*4)
c17
K10
c19
c15
(*1)
c25
(*2)
z58
c2
c6
c14
c16
(*3)
c16
(*4)
c23
c20
c18
c13
c22
(*3)
c21
(*4)
c21
(*3)
c3
c1
c7
c4
c24
c5
c12

K 10 Front Seat Inner Belt Assembly LH

c 1 Front Seat Heater Assembly RH
c 2 Front Power Seat Switch Assembly RH
c 3 Front Power Seat Slide Position Motor Assembly RH
c 4 Front Power Seat Lift Position Motor Assembly RH
c 5 Front Power Seat Vertical Position Motor Assembly RH
c 6 Front Power Seat Reclining Position Motor Assembly RH
c 7 Front Seat Inner Belt Assembly RH
c 12 Junction Connector
c 13 Front Seat Heater Assembly LH
c 14 Front Position Control ECU and Switch Assembly LH
c 15 Front Position Control ECU and Switch Assembly LH
c 16 Front Power Seat Switch Assembly LH
c 17 Front Power Seat Slide Position Motor Assembly LH
c 18 Front Power Seat Lift Position Motor Assembly LH
c 19 Front Power Seat Vertical Position Motor Assembly LH
c 20 Front Power Seat Reclining Position Motor Assembly LH
c 21 Front Lumbar Support Forward and Back Motor Assembly LH
c 22 Front Seat Inner Belt Assembly LH
c 23 Junction Connector
c 24 Front Seat Inner Belt Assembly RH
c 25 Front Power Seat Switch Assembly LH

z 57 Front Side Airbag Squib Circuit LH
z 58 Front Side Airbag Squib Circuit RH


K 10
Gray

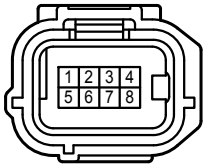


c 1
White




c 2
Black

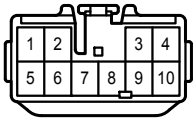


c 3
White




c 4
White




c 5
White




c 6
White



c 7
White

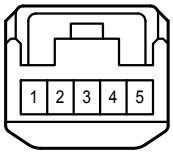


c 12
White




c 13
White




c 14
Gray

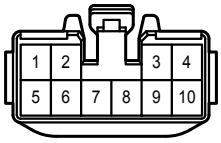


c 15
White

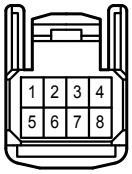


c 16
White

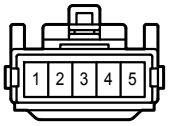


c 17
White




c 18
White




c 19
White




c 20
White




c 21
White




c 22
White

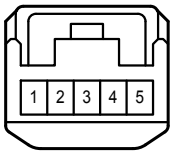


c 23
White




c 24
Gray

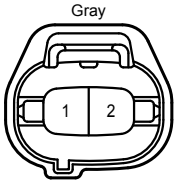


c 25
Black

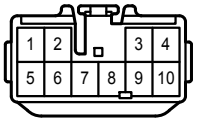



z 57
White





z 58
White




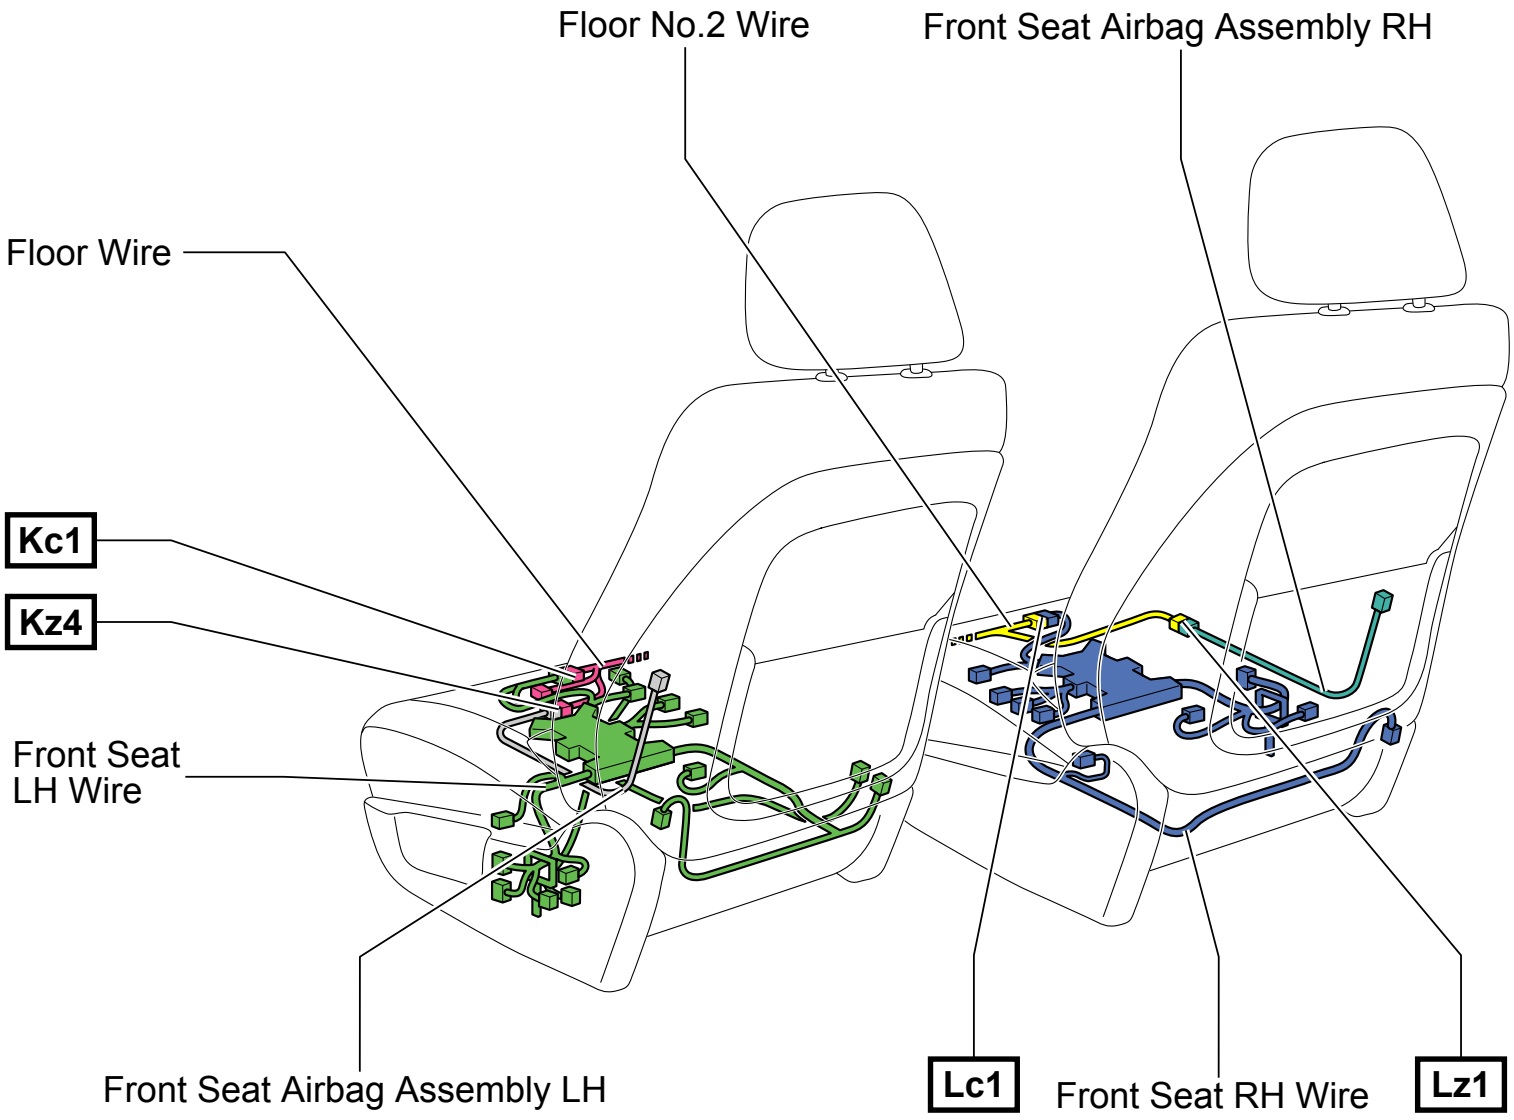

Floor No.2 Wire
Front Seat Airbag Assembly RH
Floor Wire
Kc1
Kz4
Front Seat
LH Wire
Front Seat Airbag Assembly LH
Lc1
Front Seat RH Wire
Lz1

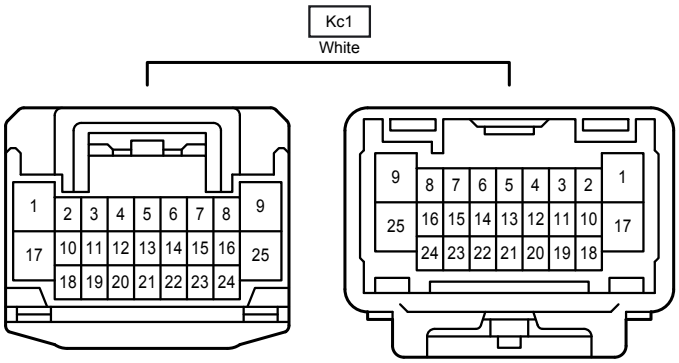
Kc1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

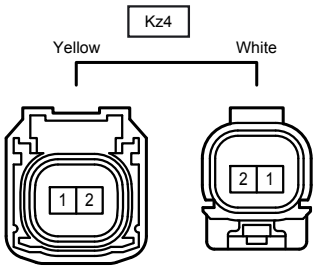
Kz4
Yellow
White
1 2
2 1

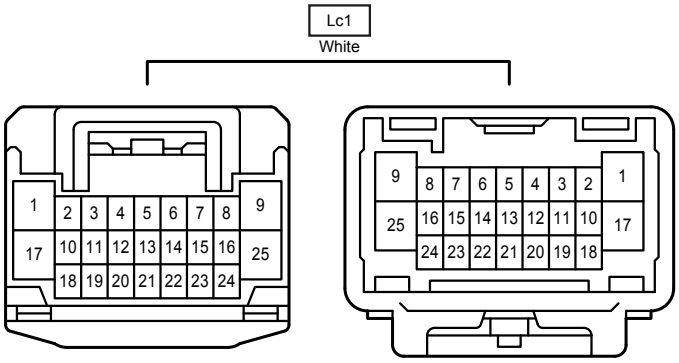
Lc1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

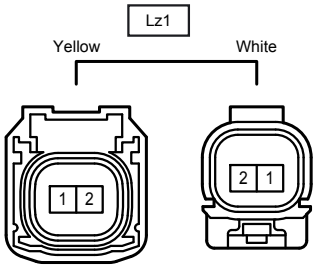
Lz1
Yellow
White
1 2
2 1

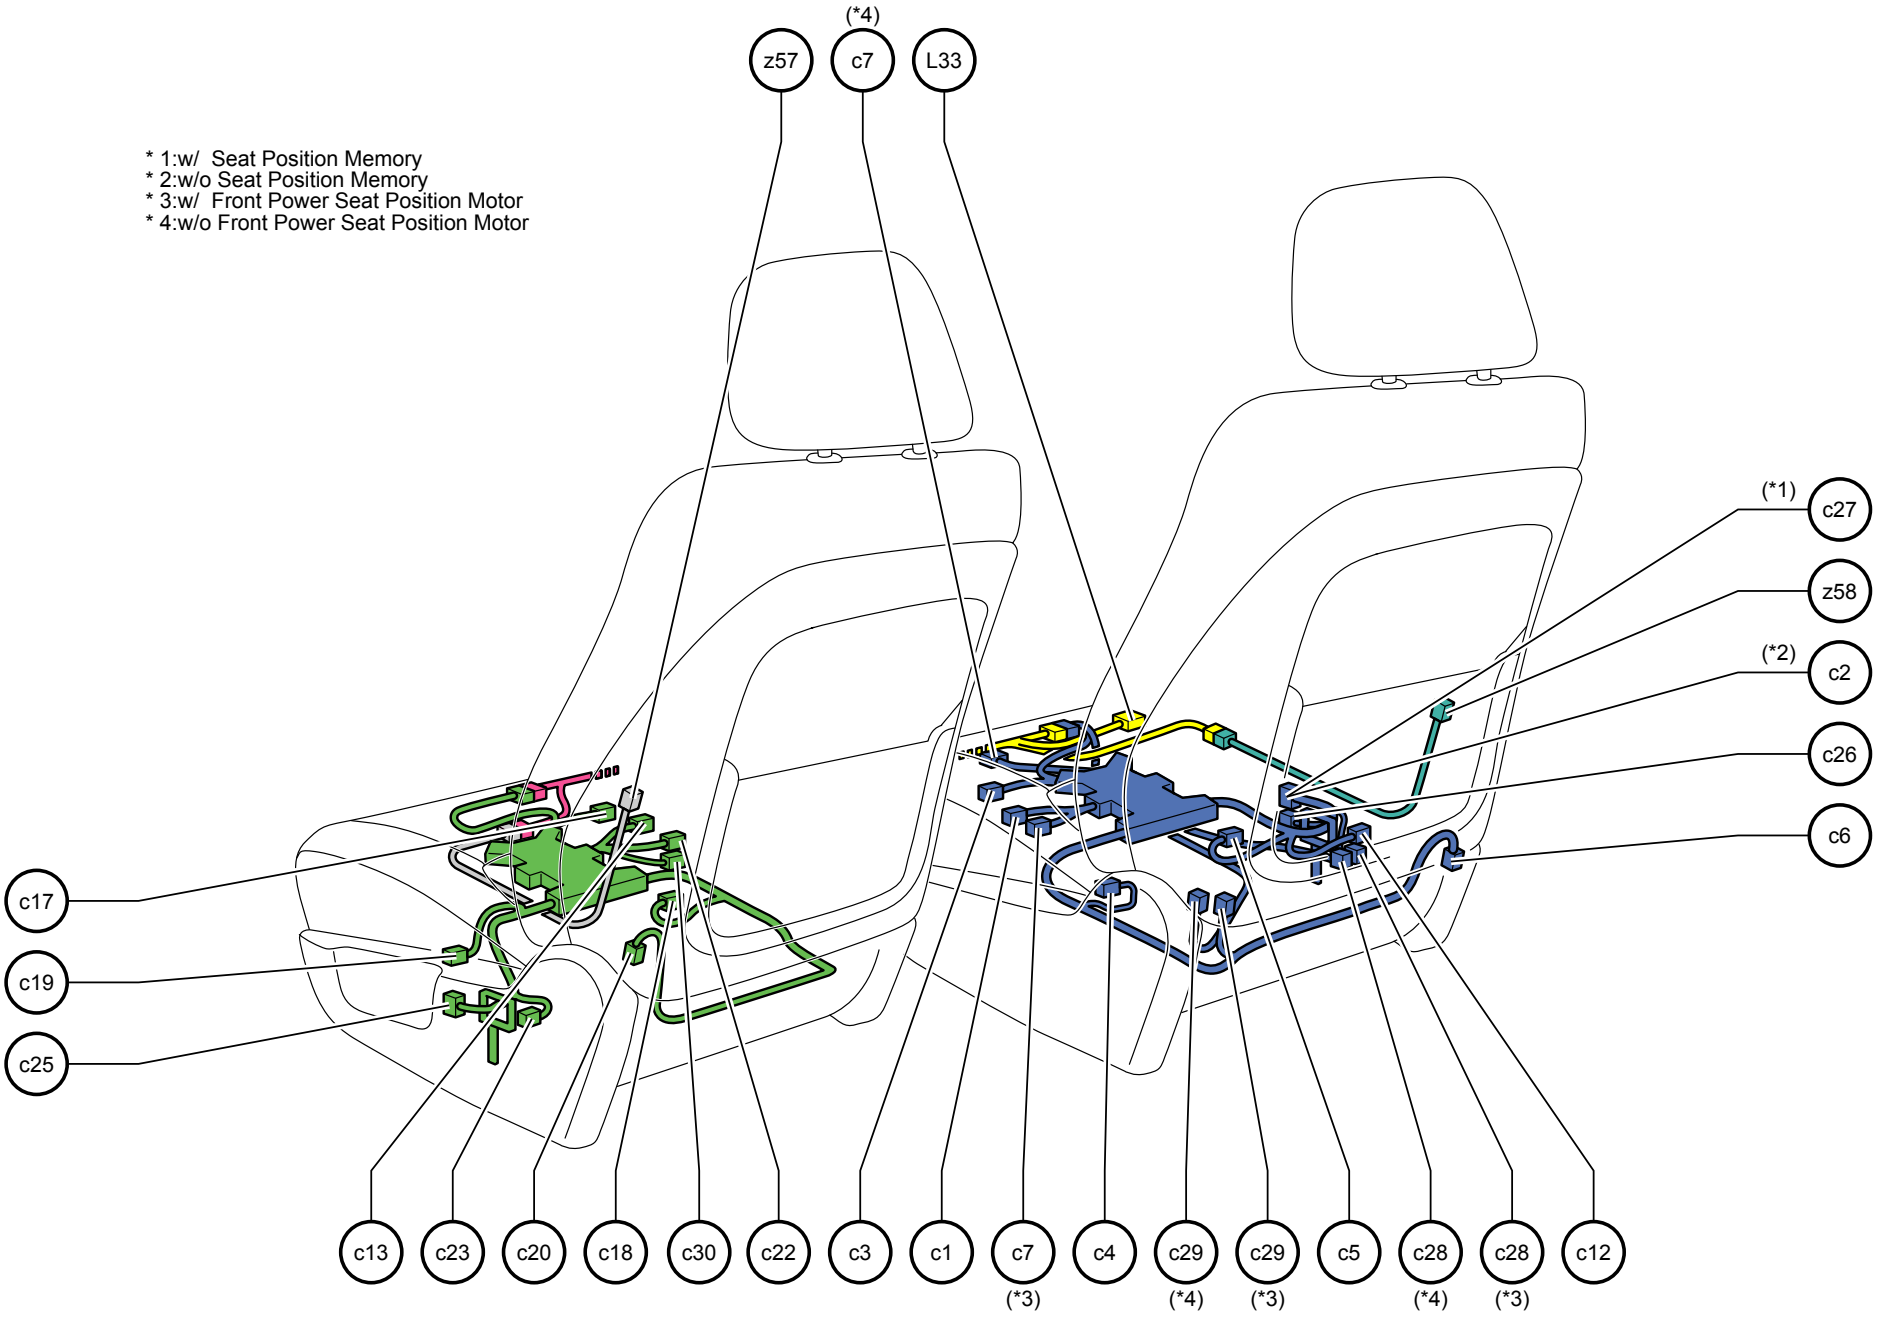

* 1:w/ Seat Position Memory
* 2:w/o Seat Position Memory
* 3:w/ Front Power Seat Position Motor
* 4:w/o Front Power Seat Position Motor
(*4)
z57
c7
L33
(*1)
c27
z58
(*2)
c2
c26
c6
c17
c19
c25
c13
c23
c20
c18
c30
c22
c3
c1
c7
(*3)
c4
c29
(*4)
c29
(*3)
c5
c28
(*4)
c28
(*3)
c12

L 33 Front Seat Inner Belt Assembly RH

c 1 Front Seat Heater Assembly RH
c 2 Front Power Seat Switch Assembly RH
c 3 Front Power Seat Slide Position Motor Assembly RH
c 4 Front Power Seat Lift Position Motor Assembly RH
c 5 Front Power Seat Vertical Position Motor Assembly RH
c 6 Front Power Seat Reclining Position Motor Assembly RH
c 7 Front Seat Inner Belt Assembly RH
c 12 Junction Connector
c 13 Front Seat Heater Assembly LH
c 17 Front Power Seat Slide Position Motor Assembly LH
c 18 Front Power Seat Lift Position Motor Assembly LH
c 19 Front Power Seat Vertical Position Motor Assembly LH
c 20 Front Power Seat Reclining Position Motor Assembly LH
c 22 Front Seat Inner Belt Assembly LH
c 23 Junction Connector
c 25 Front Power Seat Switch Assembly LH
c 26 Front Position Control ECU and Switch Assembly RH
c 27 Front Position Control ECU and Switch Assembly RH
c 28 Front Power Seat Switch Assembly RH
c 29 Front Lumbar Support Forward and Back Motor Assembly RH
c 30 Front Seat Inner Belt Assembly LH

z 57 Front Side Airbag Squib Circuit LH
z 58 Front Side Airbag Squib Circuit RH


L 33
Gray

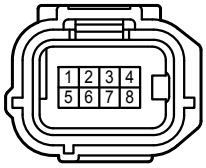


c 1
White




c 2
Black

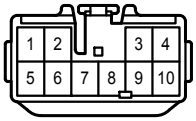


c 3
White




c 4
White




c 5
White




c 6
White



c 7
White

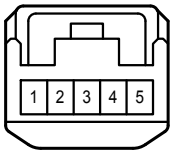


c 12
White




c 13
White




c 17
White




c 18
White




c 19
White




c 20
White




c 22
White

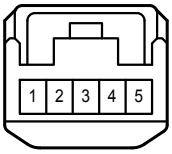


c 23
White




c 25
Black

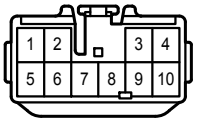


c 26
Gray

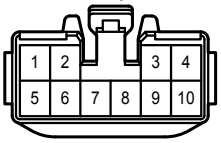


c 27
White

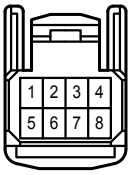


c 28
White

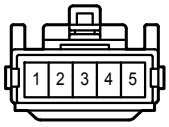


c 29
White




c 30
White

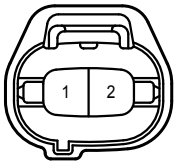



z 57
White





z 58
White




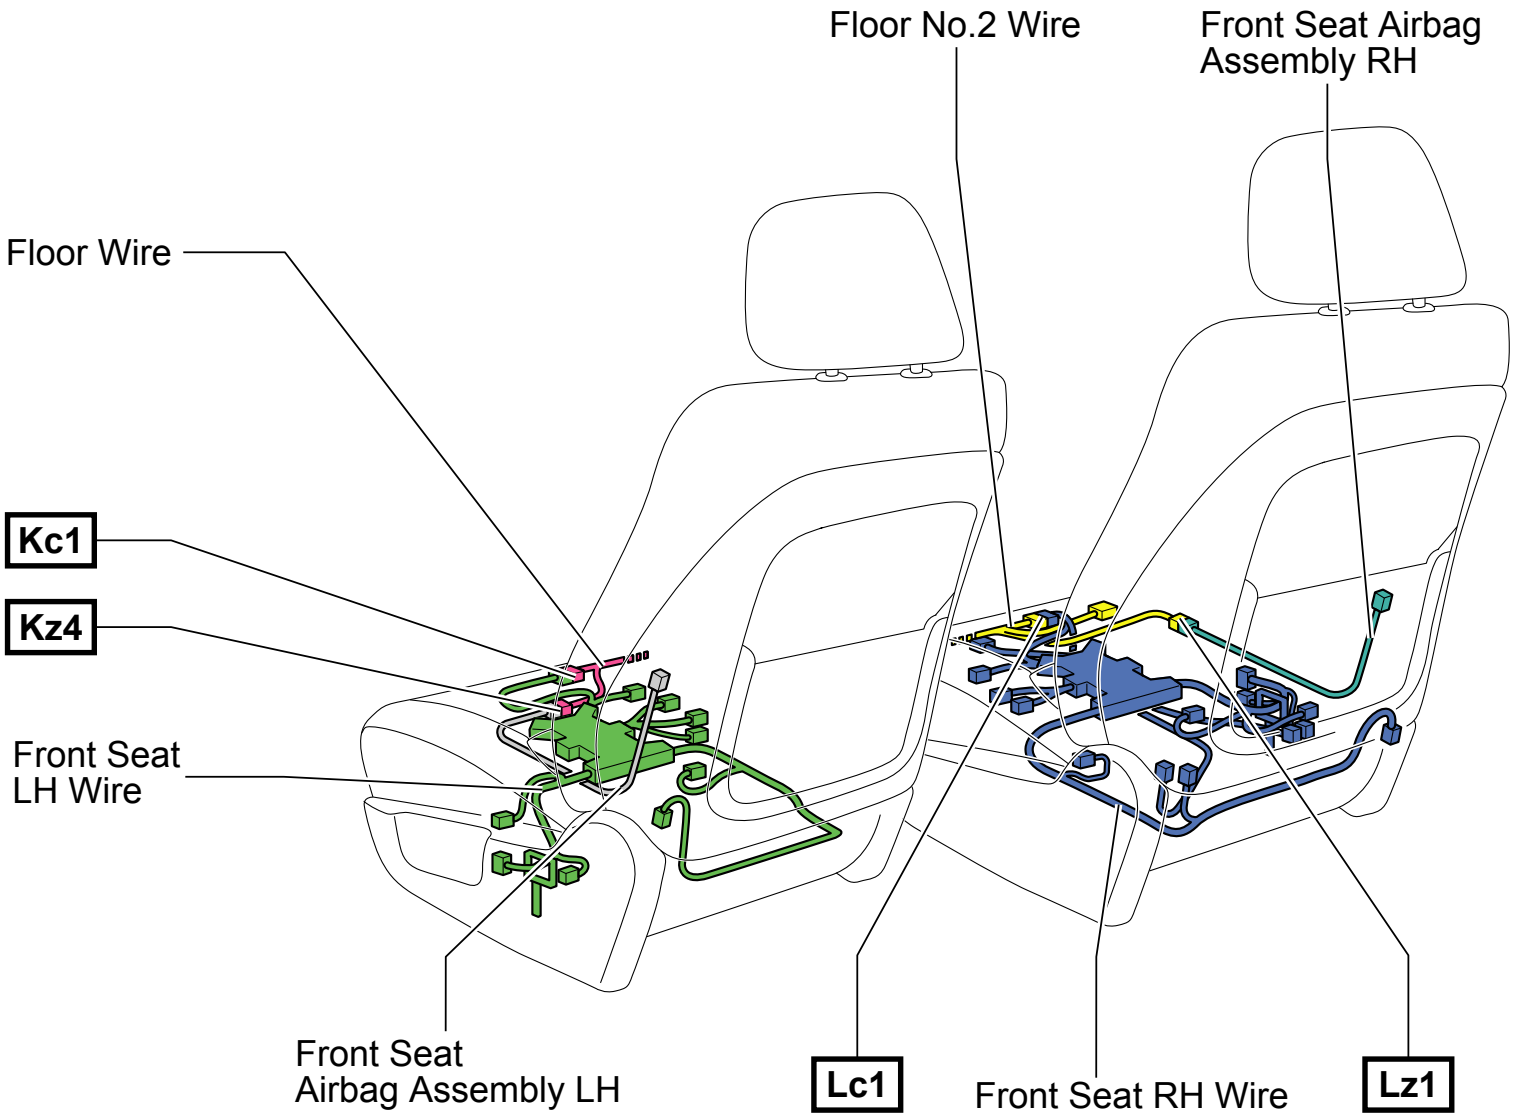

Floor No.2 Wire
Front Seat Airbag Assembly RH
Floor Wire
Kc1
Kz4
Front Seat LH Wire
Front Seat Airbag Assembly LH
Lc1
Front Seat RH Wire
Lz1

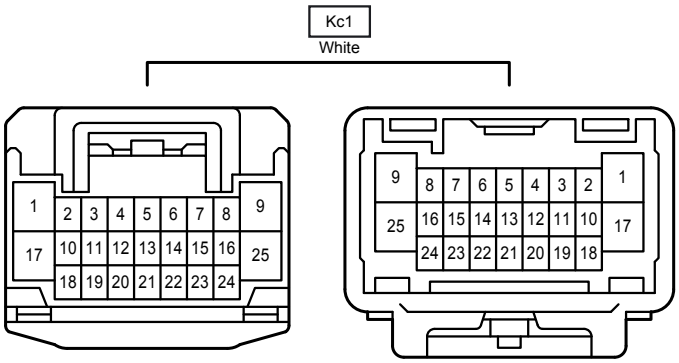

Kc1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

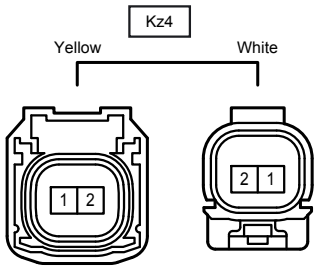
Kz4
Yellow
White
1 2
2 1

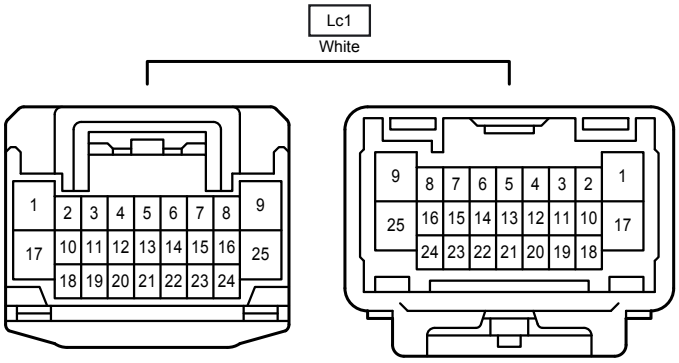
Lc1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

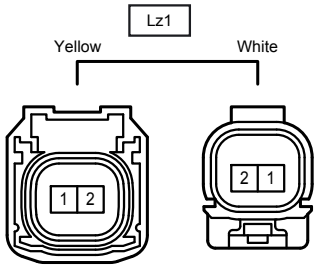

Lz1
Yellow
White
1 2
2 1

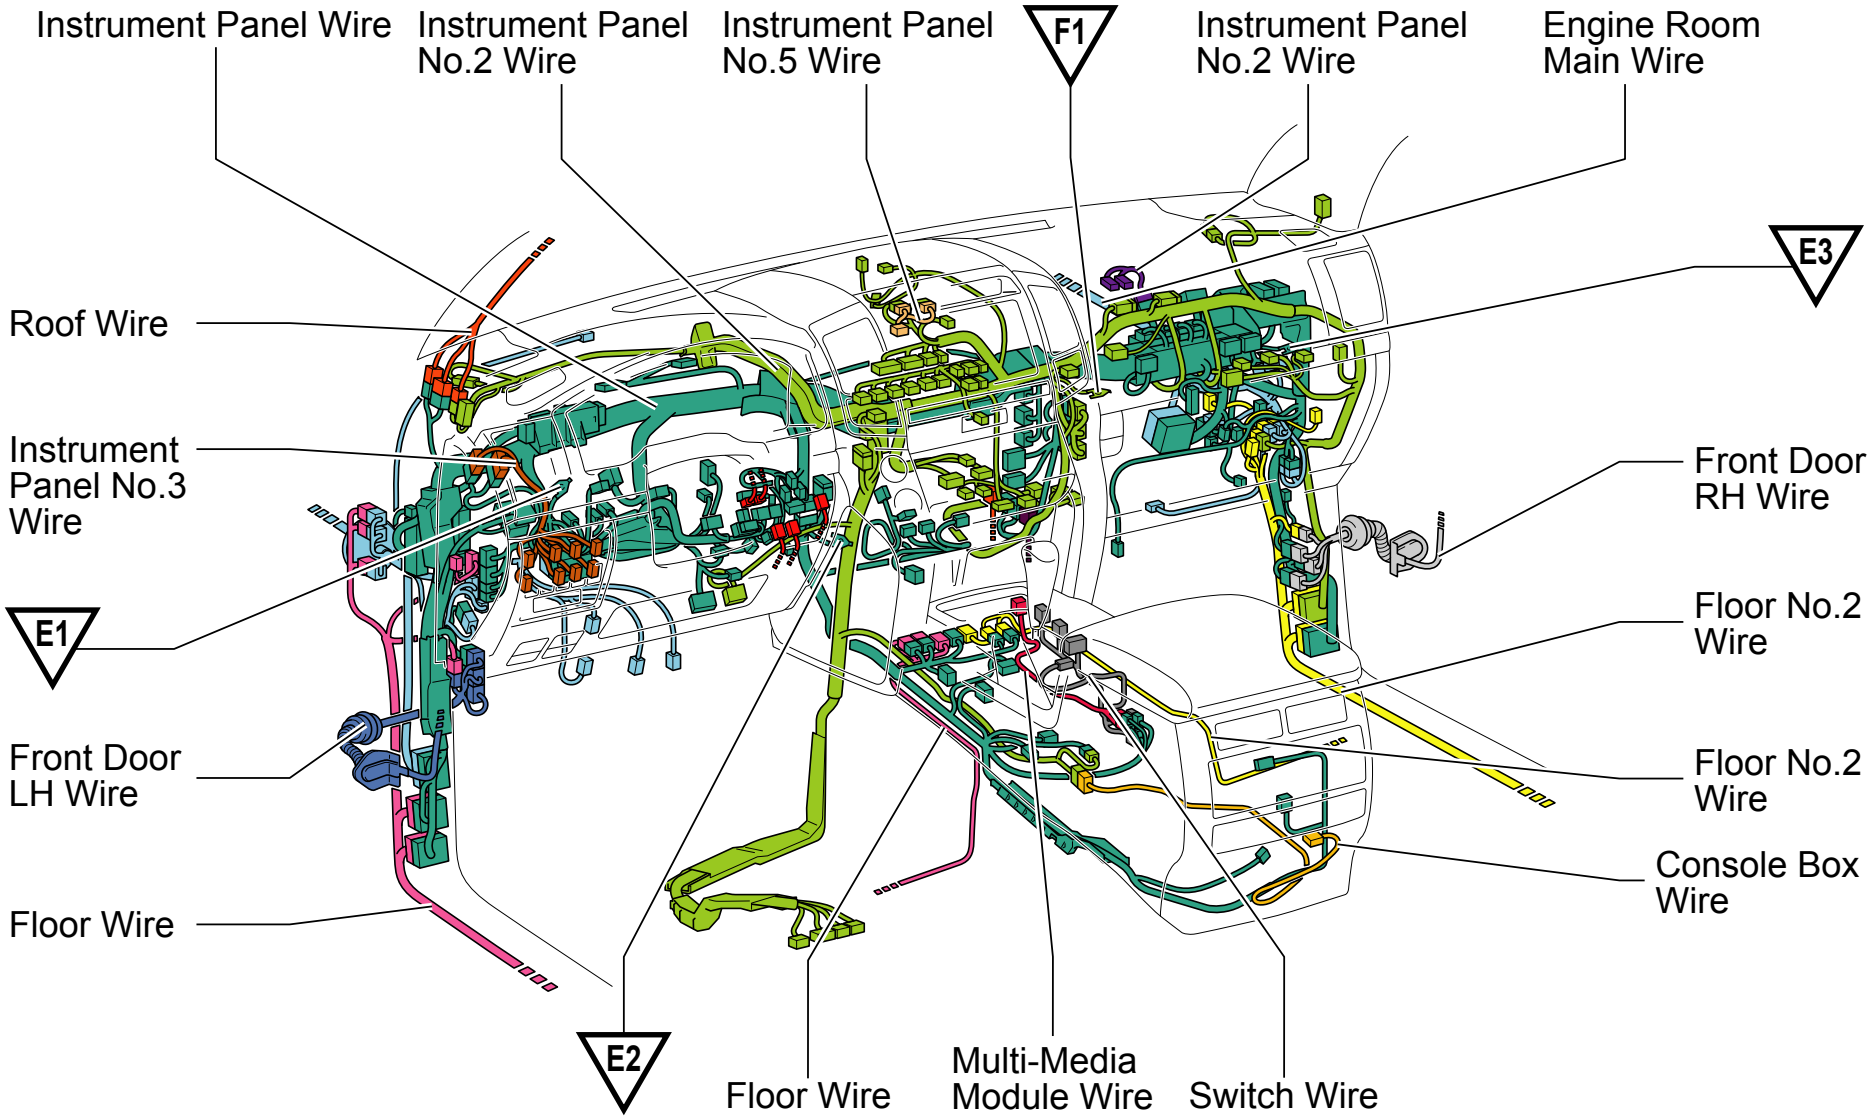
Instrument Panel Wire
Instrument Panel No.2 Wire
Instrument Panel No.5 Wire
F1
Instrument Panel No.2 Wire
Engine Room Main Wire
E3
Roof Wire
Instrument Panel No.3 Wire
Front Door RH Wire
E1
Floor No.2 Wire
Front Door LH Wire
Floor No.2 Wire
Console Box Wire
Floor Wire
E2
Floor Wire
Multi-Media Module Wire
Switch Wire

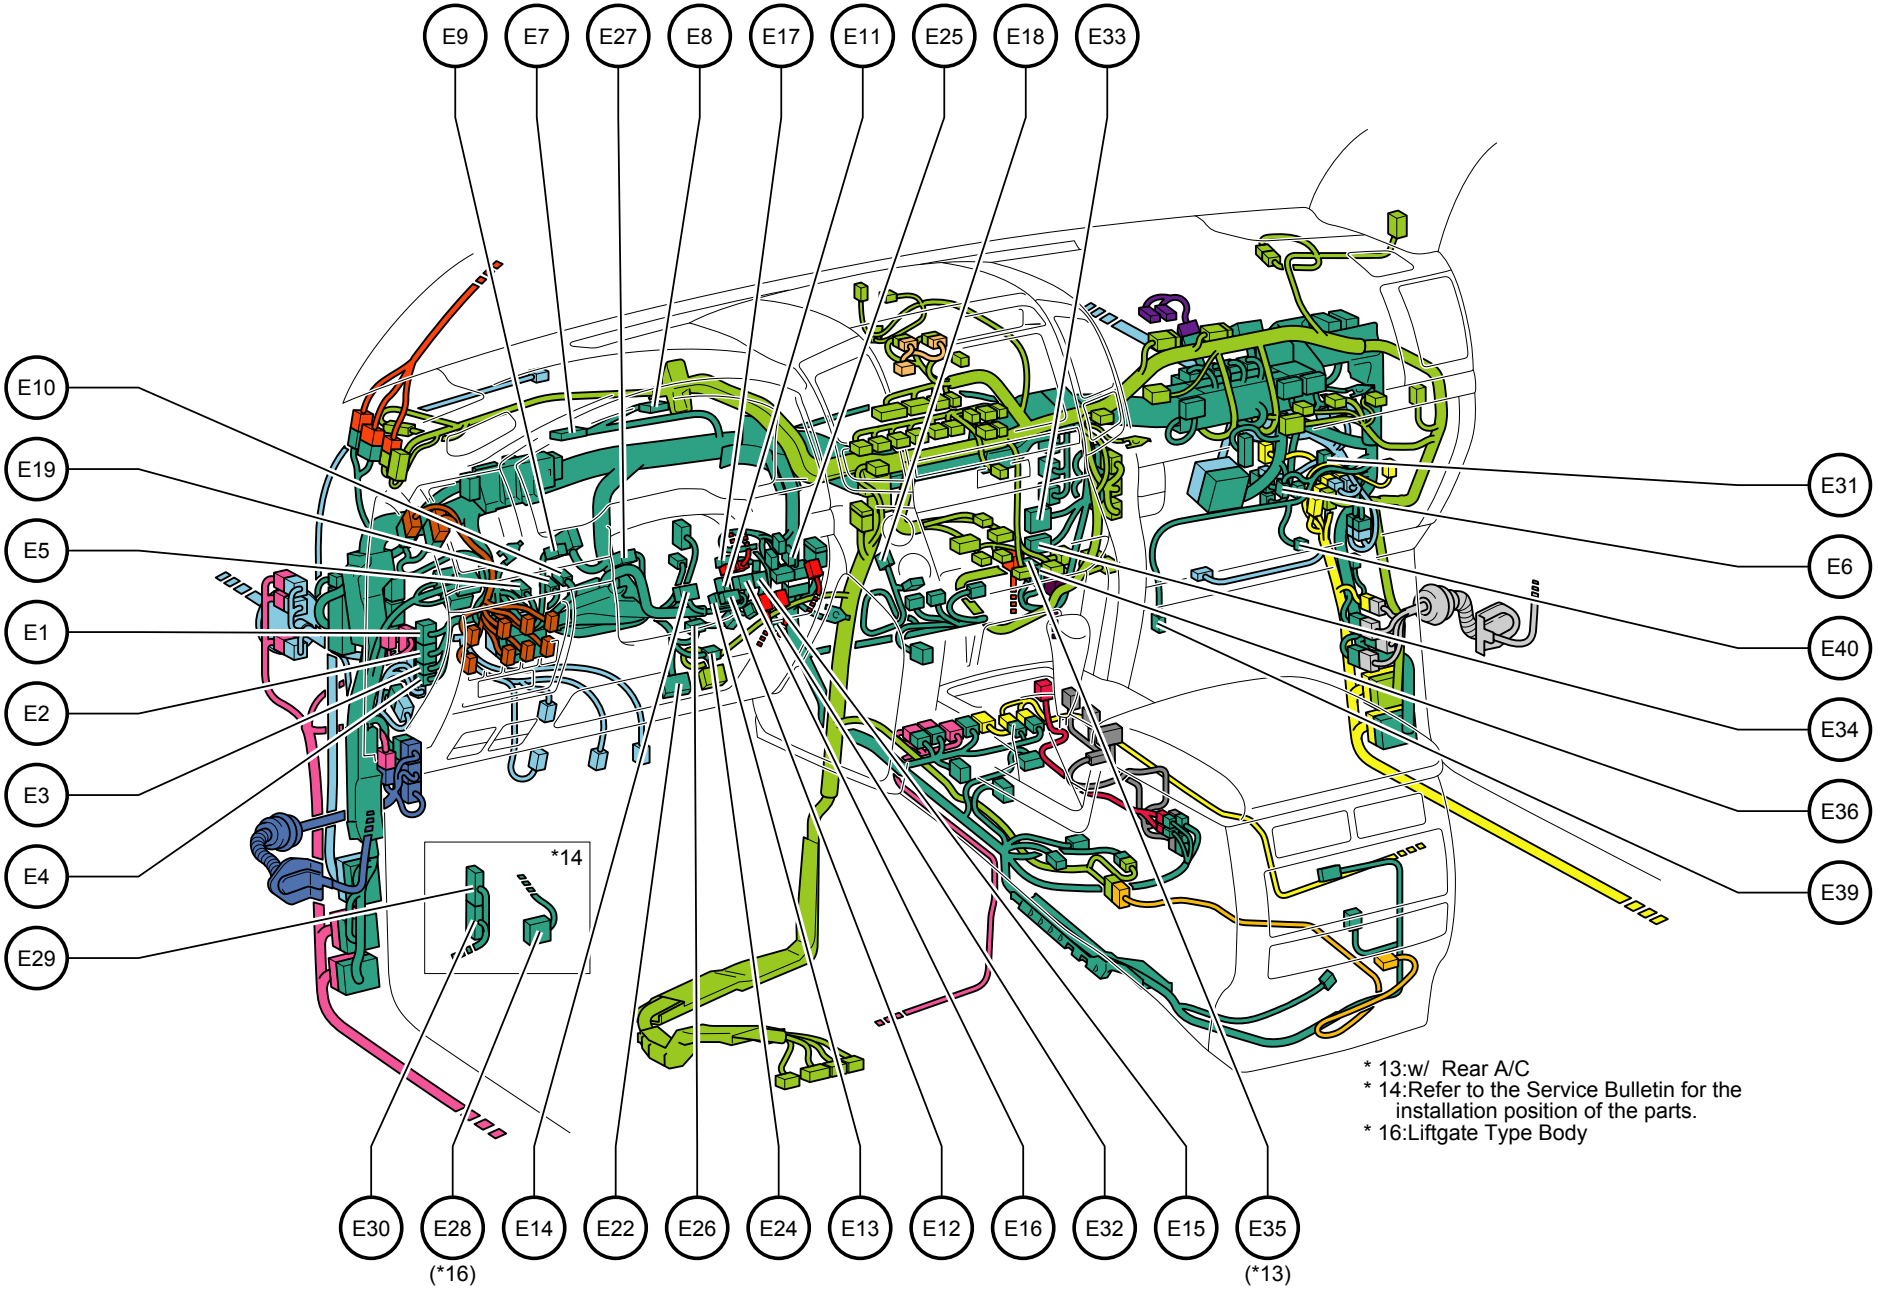

E9
E7
E27
E8
E17
E11
E25
E18
E33
E10
E19
E5
E1
E2
E3
E4
E29
E31
E6
E40
E34
E36
E39
*14
E30
E28
(*16)
E14
E22
E26
E24
E13
E12
E16
E32
E15
E35
(*13)
* 13:w/ Rear A/C
* 14:Refer to the Service Bulletin for the installation position of the parts.
* 16:Liftgate Type Body

E 1 Main Body ECU
E 2 Main Body ECU
E 3 Main Body ECU
E 4 Main Body ECU
E 5 Skid Control Buzzer Assembly
E 6 Option Connector (Bus Buffer)
E 7 Combination Meter Assembly
E 8 Combination Meter Assembly
E 9 Light Control Rheostat
E 10 No.1 Clearance Warning Buzzer
E 11 Steering Sensor
E 12 Spiral Cable Sub-Assembly
E 13 Spiral Cable Sub-Assembly
E 14 Headlight Dimmer Switch Assembly
E 15 Windshield Wiper Switch Assembly
E 16 Windshield Wiper Switch Assembly
E 17 Power Tilt Motor
E 18 Engine Switch
E 19 Turn Signal Flasher Assembly
E 22 DLC3
E 24 Lower No.1 Instrument Panel Airbag Assembly
E 25 VSC Off Switch
E 26 Steering Lock Actuator Assembly
E 27 Multiplex Tilt and Telescopic ECU
E 28 ID Code Box
E 29 Certification ECU Assembly
E 30 Certification ECU Assembly
E 31 Network Gateway ECU
E 32 Room Temperature Sensor
E 33 Quick Heater Assembly
E 34 Quick Heater Assembly
E 35 A/C Amplifier Assembly
E 36 A/C Amplifier Assembly
E 39 Glove Box Light Assembly
E 40 Lower No.2 Instrument Panel Airbag Assembly


E 1
White

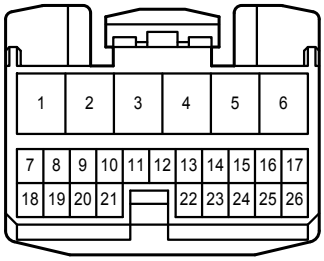


E 2
White

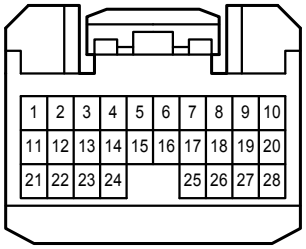


E 3
White

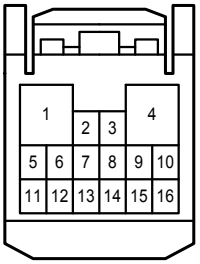


E 4
White

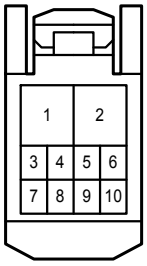


E 5
Blue




E 6
White




E 7
White

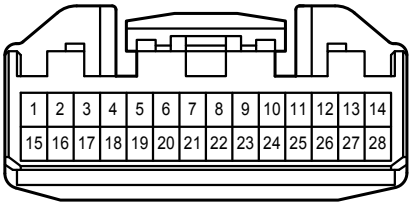


E 8
Black

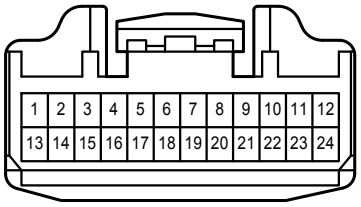


E 9
White

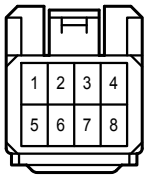

E 10
Black




E 11
Gray

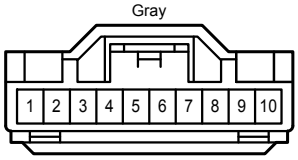


E 12
Black




E 13
Yellow

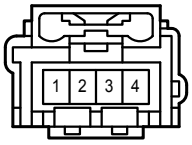


E 14
White

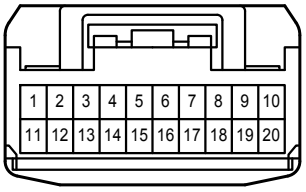

E 15
White

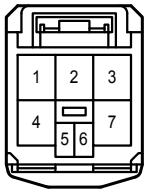


E 16
White

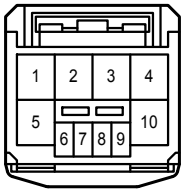


E 17
White




E 18
Black

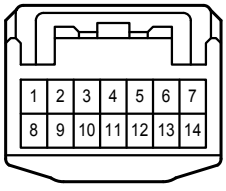


E 19
Black




E 22
White

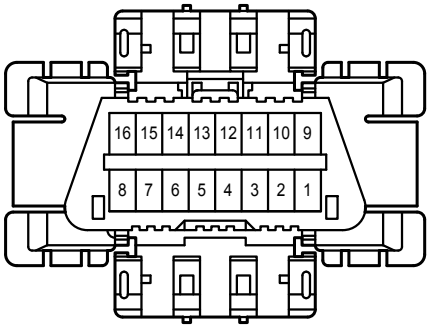


E 24
Black




E 25
Black

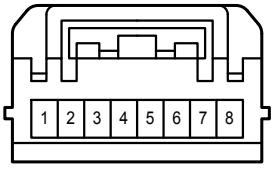


E 26
Black

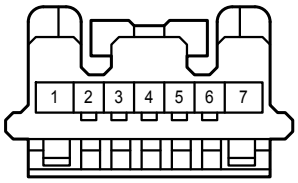


E 27
White

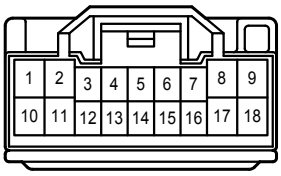


E 28
White

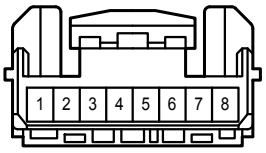


E 29
White

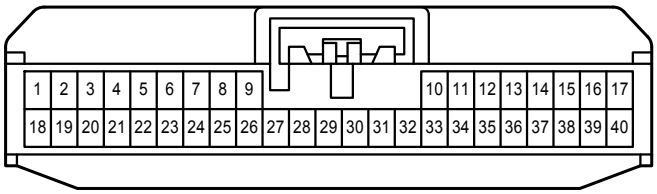


E 30
White

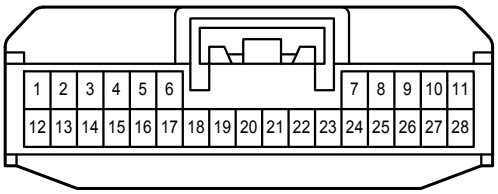


E 31
White

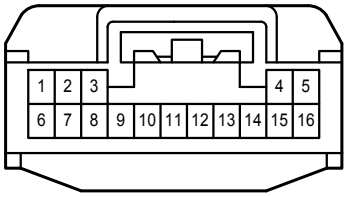


E 32
Black




E 33
White

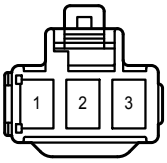


E 34
White

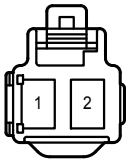

E 35
White

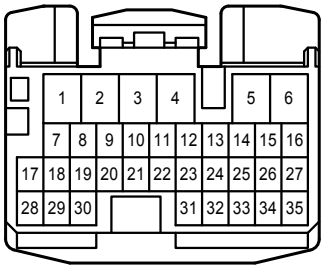


E 36
White

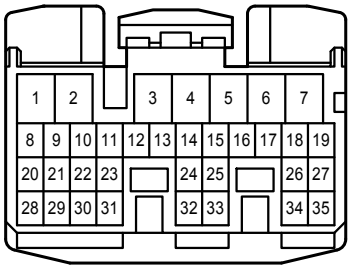


E 39
Black



E 40
Black




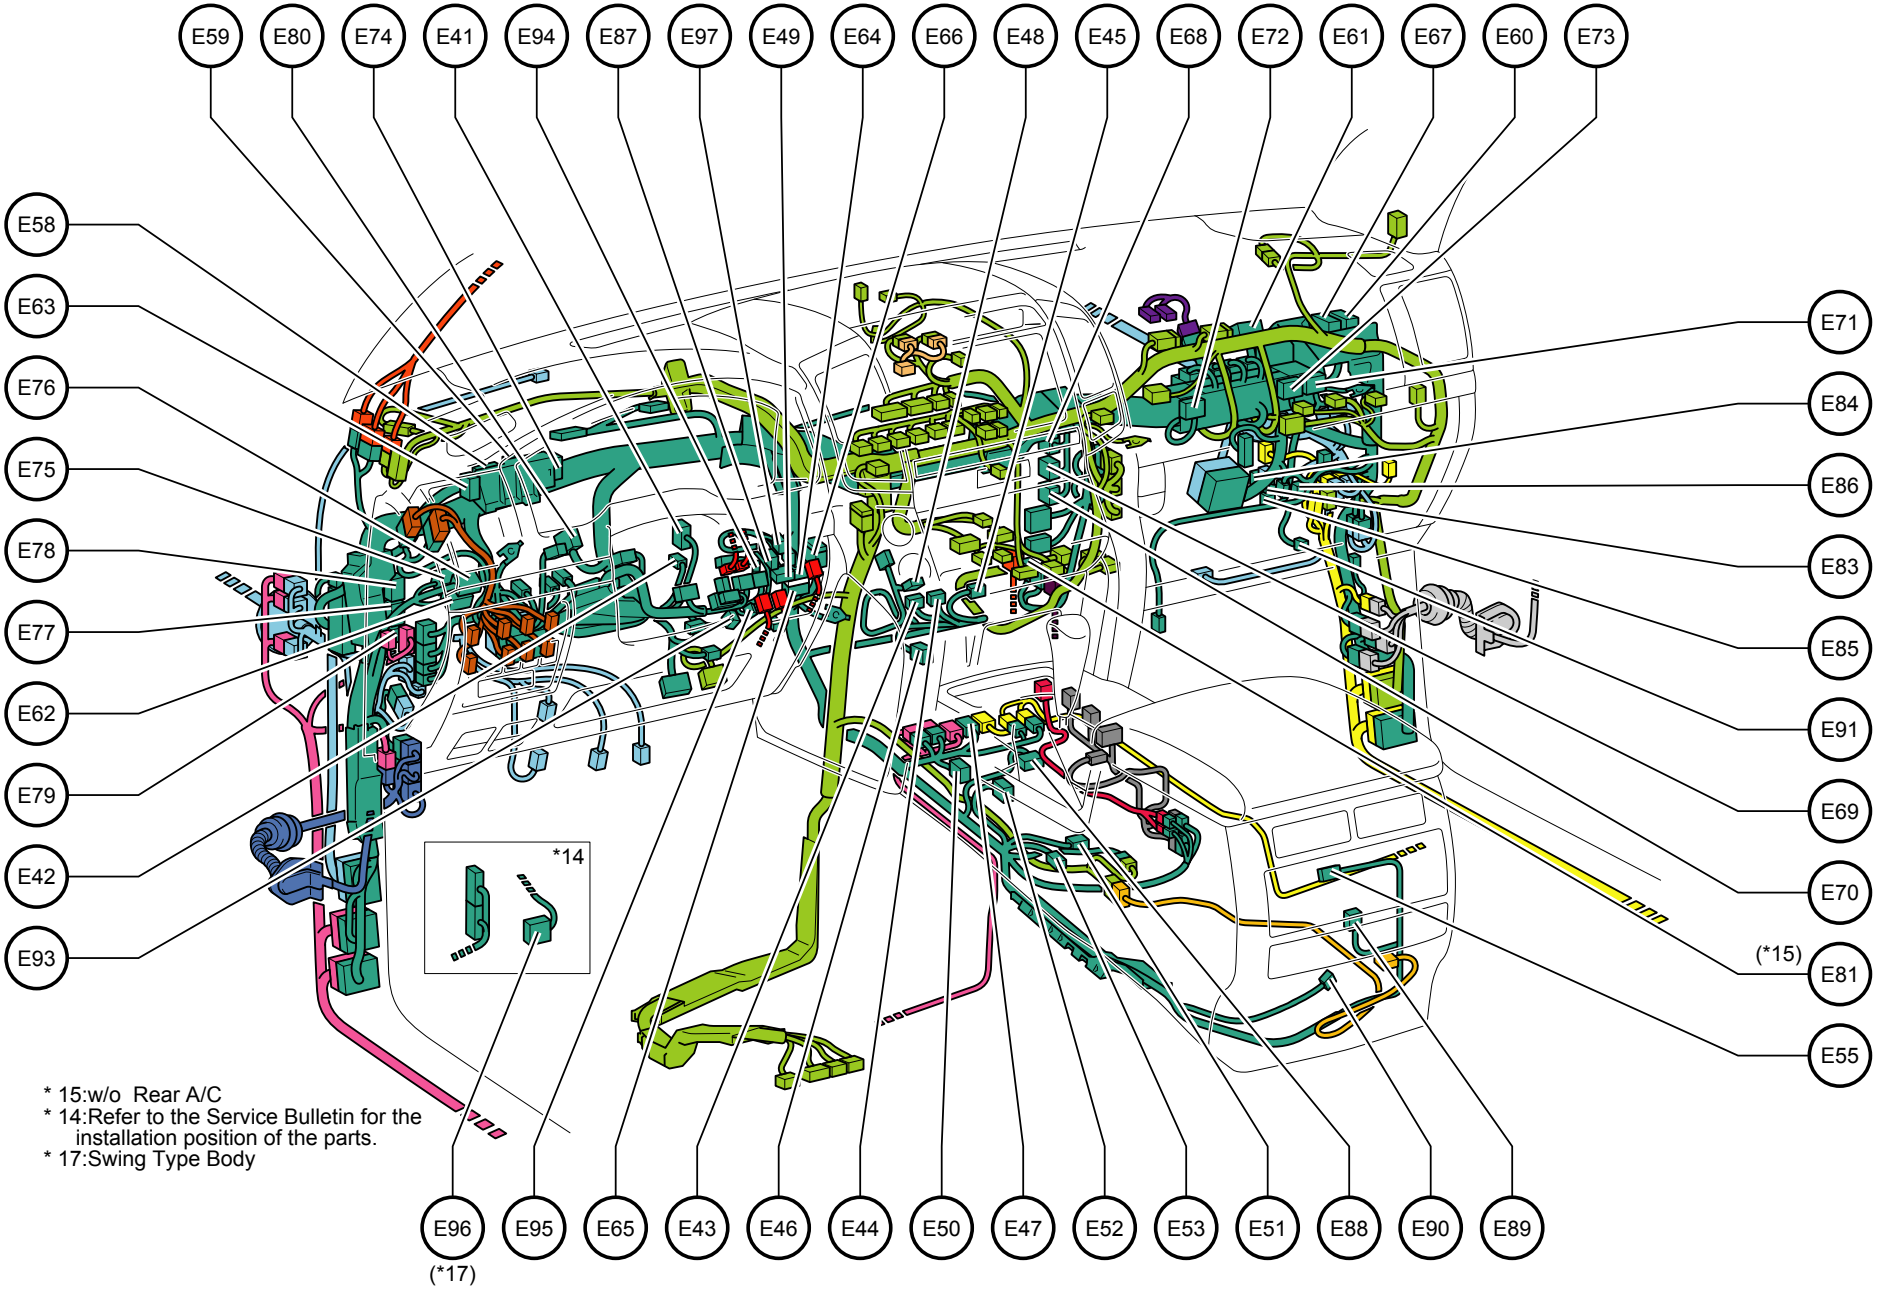


* 15:w/o Rear A/C
* 14:Refer to the Service Bulletin for the installation position of the parts.
* 17:Swing Type Body

E 41 Seat Belt Control ECU
E 42 Seat Belt Control ECU
E 43 Cigarette Lighter Assembly
E 44 Cigarette Lighter Illumination Assembly
E 45 Ash Receptacle Light Sub-Assembly
E 46 Front Power Outlet Socket Assembly
E 47 Center Airbag Sensor Assembly
E 48 Transfer Position Switch
E 49 Center Differential Lock Switch
E 50 Yaw Rate Sensor Assembly
E 51 Shift Lock Control ECU Sub-Assembly
E 52 Transmission Control Switch
E 53 Parking Brake Switch Assembly
E 55 No.2 A/C Control Assembly
E 58 Junction Connector
E 59 Junction Connector
E 60 Junction Connector
E 61 Junction Connector
E 62 Junction Connector
E 63 Junction Connector
E 64 Junction Connector
E 65 Junction Connector
E 66 Junction Connector
E 67 Junction Connector
E 68 Junction Connector
E 69 Junction Connector
E 70 Junction Connector
E 71 Junction Connector
E 72 Junction Connector
E 73 Junction Connector
E 74 Junction Connector
E 75 Junction Connector
E 76 Junction Connector
E 77 Steering Control ECU
E 78 Steering Control ECU
E 79 Steering Control ECU
E 80 Steering Actuator Assembly
E 81 A/C Amplifier Assembly
E 83 Windshield Wiper ECU , Short Connector
E 84 Short Connector
E 85 Windshield Wiper ECU
E 86 Double Lock Door Control Relay Assembly
E 87 Differential Lock Switch
E 88 Deceleration Sensor
E 89 Heater Blower Switch
E 90 Cooling Box Assembly
E 91 Option Connector (Parking Assist-Sensor)
E 93 Ignition or Starter Switch Assembly
E 94 Un-Lock Warning Switch Assembly
E 95 Transponder Key Amplifier
E 96 Transponder Key ECU Assembly
E 97 Idle Up Switch


E 41
White

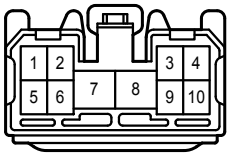

E 42
White

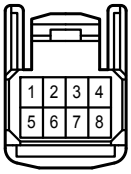


E 43
White




E 44
Gray




E 45
White




E 46
White




E 47
Yellow

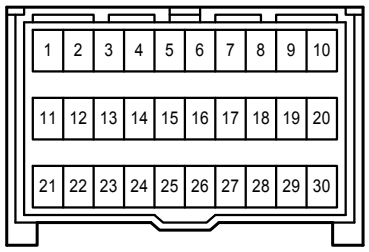


E 48
Black

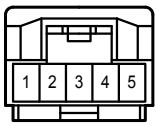

E 49
White

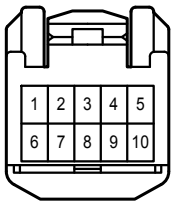


E 50
Black

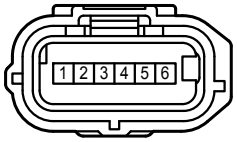

E 51
White



E 52
White

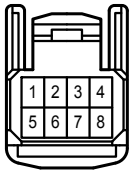


E 53
White




E 55
White




E 58

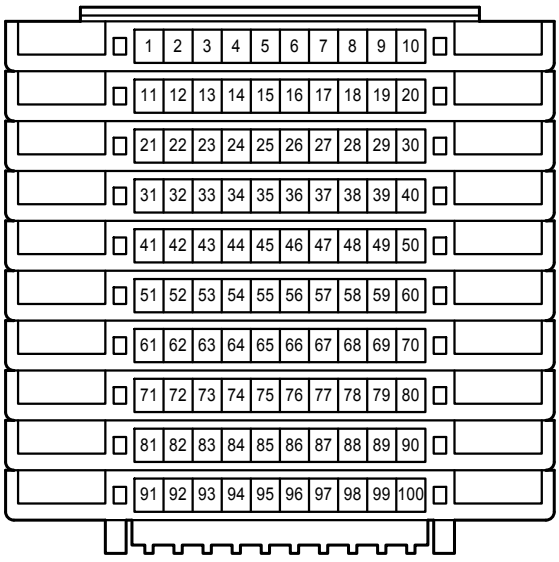


E 59

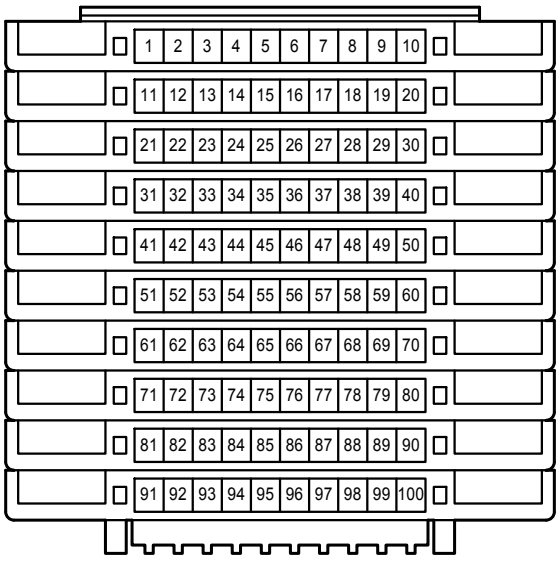


E 60

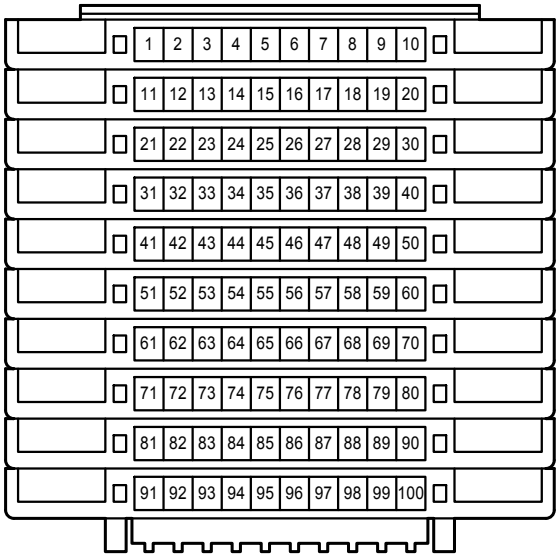


E 61

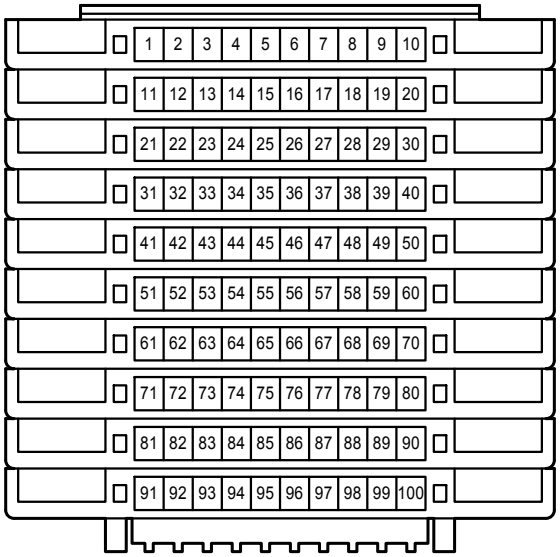


E 62
White

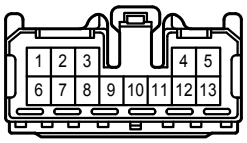


E 63
Gray




E 64
Black

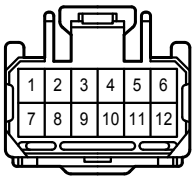


E 65
Black

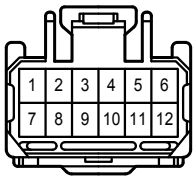


E 66
White

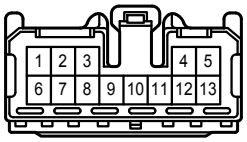


E 67
White

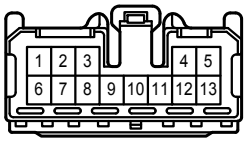


E 68
Gray

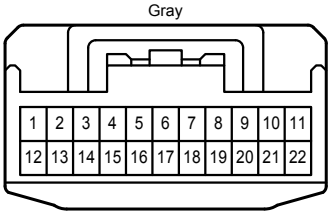


E 69
Gray

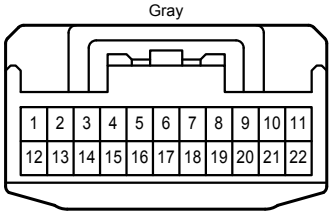


E 70
Gray

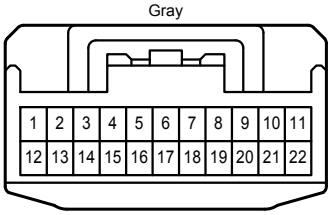


E 71
Gray

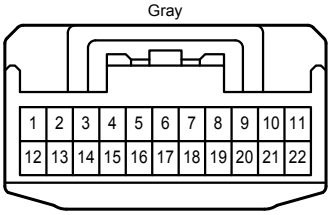


E 72
Gray

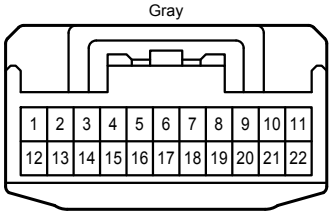


E 73
Gray

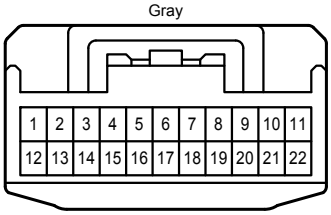


E 74
Gray

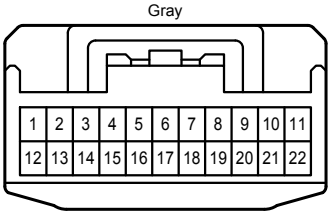


E 75
Gray

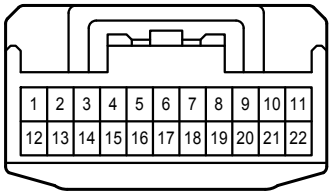


E 76
Gray

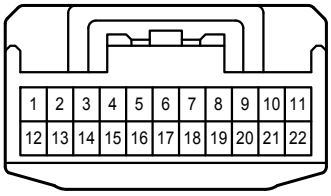


E 77
White

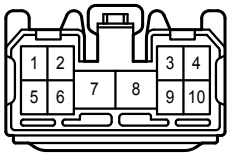


E 78
White

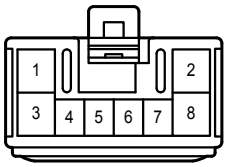


E 79
White

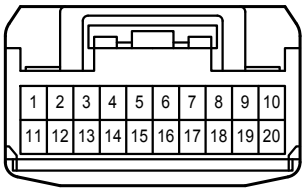


E 80
White

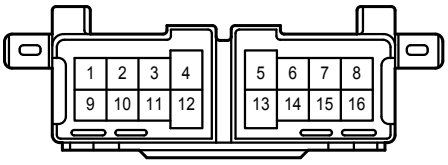

E 81
White

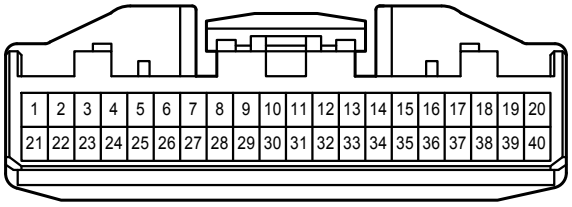

E 83
Blue

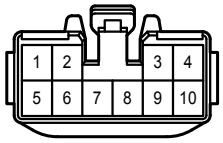


E 84
Blue



E 85
White




E 86
White




E 87
White




E 88
Black

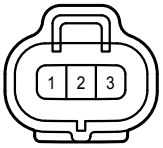


E 89
Black

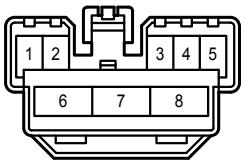


E 90
White



E 91
White

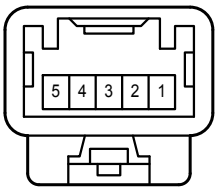


E 93
White

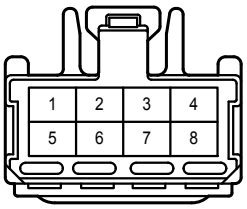


E 94
White




E 95
Black

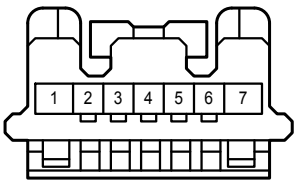


E 96
Black

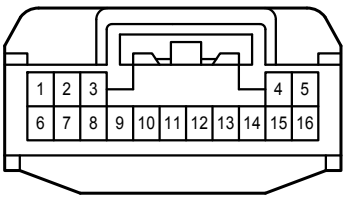


E 97
Black

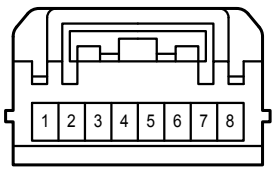

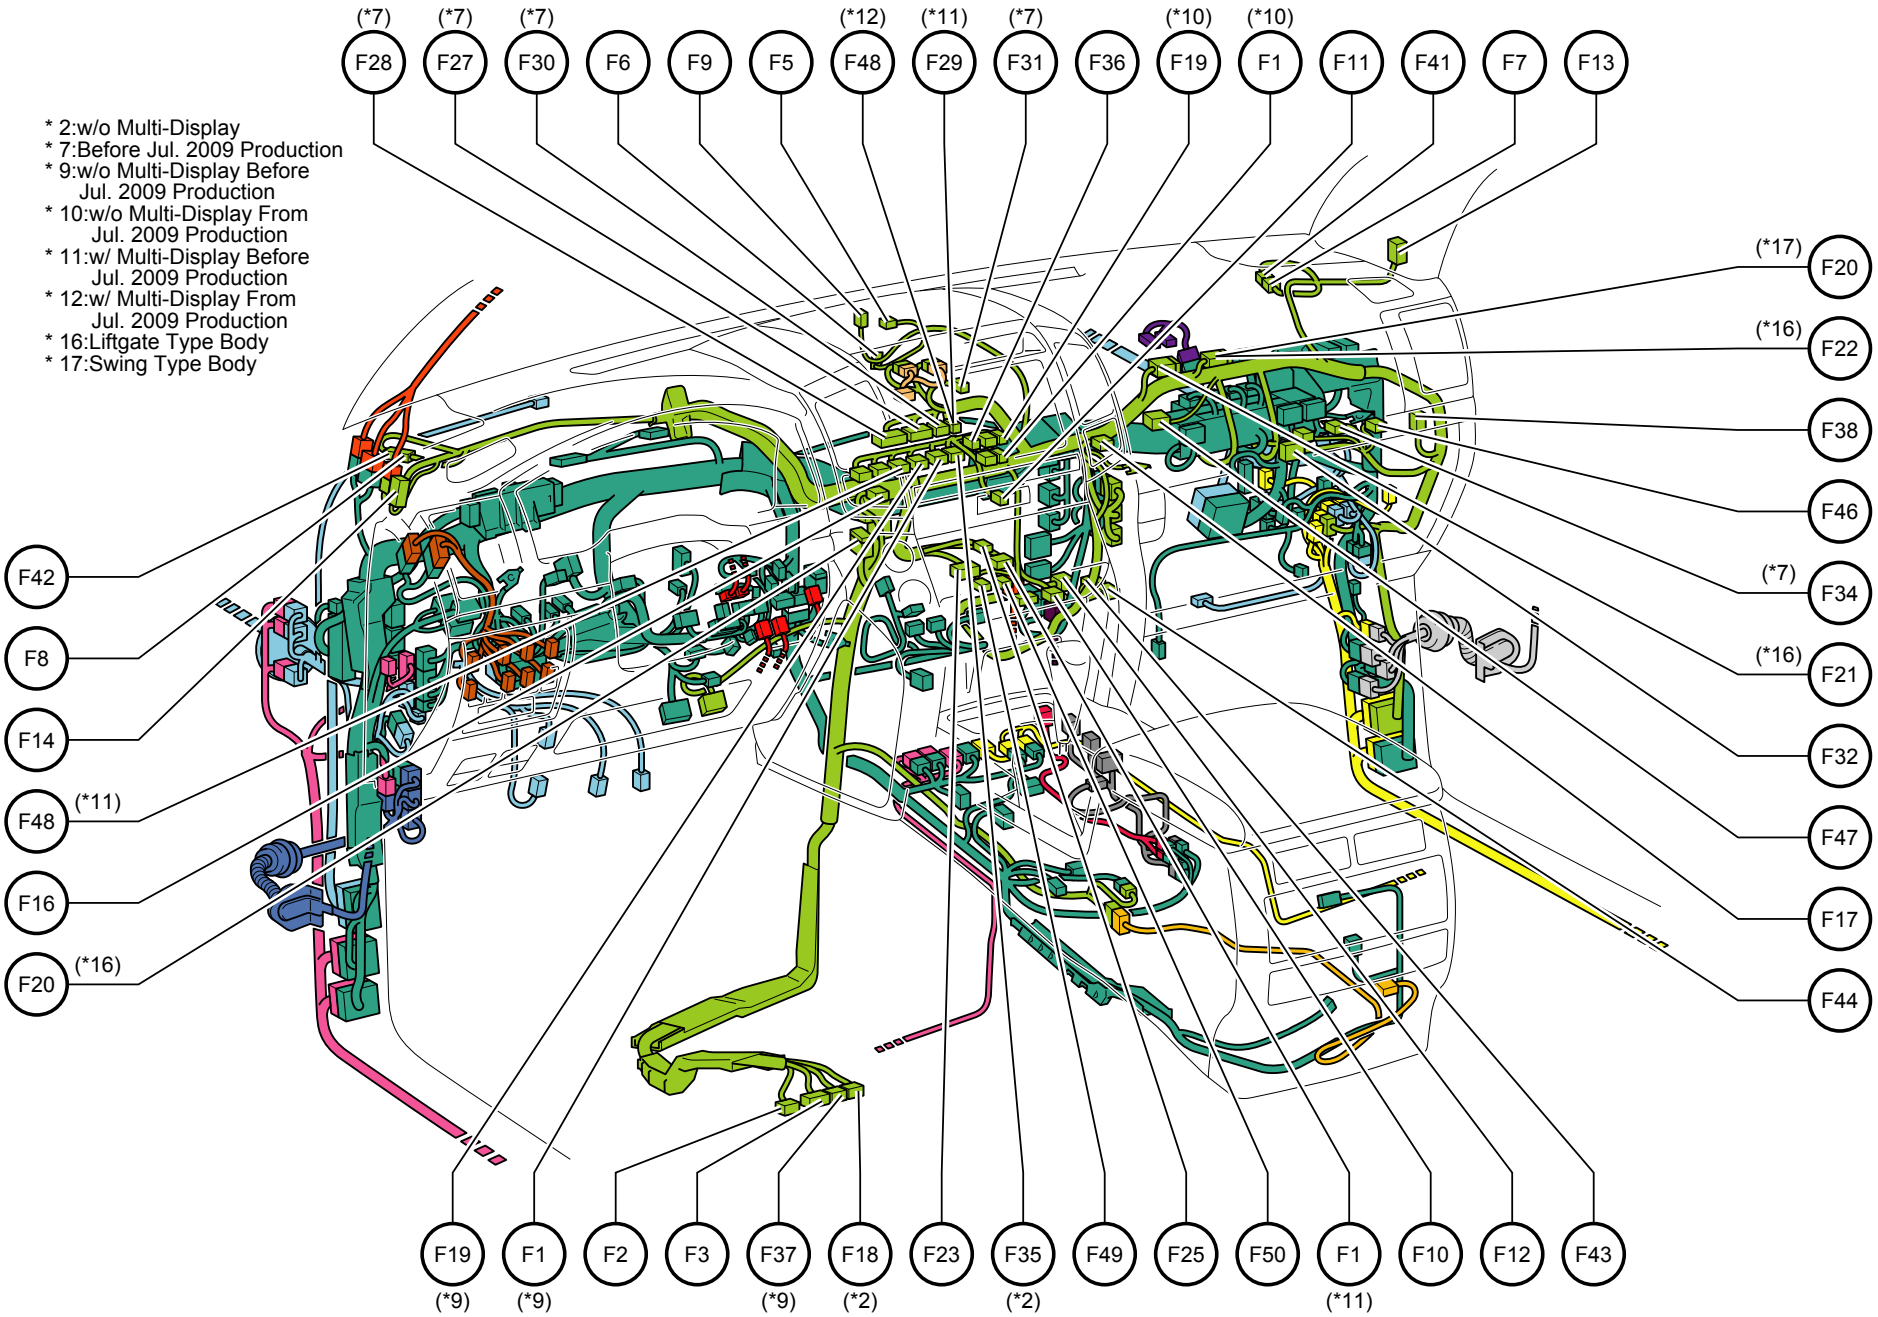
* 2:w/o Multi-Display
* 7:Before Jul. 2009 Production
* 9:w/o Multi-Display Before Jul. 2009 Production
* 10:w/o Multi-Display From Jul. 2009 Production
* 11:w/ Multi-Display Before Jul. 2009 Production
* 12:w/ Multi-Display From Jul. 2009 Production
* 16:Liftgate Type Body
* 17:Swing Type Body
(*7) F28
(*7) F27
(*7) F30
F6
F9
F5
(*12) F48
(*11) F29
(*7) F31
F36
(*10) F19
(*10) F1
F11
F41
F7
F13
(*17) F20
(*16) F22
F38
F46
(*7) F34
(*16) F21
F32
F47
F17
F44
F42
F8
F14
(*11) F48
F16
(*16) F20
F19 (*9)
F1 (*9)
F2
F3
F37 (*9)
F18 (*2)
F23
F35 (*2)
F49
F25
F50
F1 (*11)
F10
F12
F43

F 1 Radio Receiver Assembly
F 2 Stereo Component Amplifier Assembly
F 3 Stereo Component Amplifier Assembly
F 5 Amplifier Antenna Assembly
F 6 Front No.4 Speaker Assembly
F 7 Front No.2 Speaker Assembly RH , Short Connector
F 8 Front No.2 Speaker Assembly LH , Short Connector
F 9 Automatic Light Control Sensor
F 10 A/C Control Assembly
F 11 Hazard Warning Signal Switch Assembly
F 12 Clearance Warning ECU Assembly
F 12 Clearance Warning ECU Assembly
F 13 Front No.3 Speaker Assembly RH
F 14 Front No.3 Speaker Assembly LH
F 16 Temperature Control Switch Assembly LH
F 17 Temperature Control Switch Assembly RH
F 18 Stereo Component Amplifier Assembly
F 19 Radio Receiver Assembly
F 20 Junction Connector
F 21 Junction Connector
F 22 Junction Connector
F 23 Radio Receiver Assembly
F 25 Radio Receiver Assembly
F 27 Multi-Display
F 28 Multi-Display
F 29 Multi-Display
F 30 Multi-Display
F 31 Multi-Display
F 32 Navigation ECU
F 34 Navigation ECU
F 35 Radio Receiver Assembly
F 36 Radio Receiver Assembly
F 37 Stereo Component Amplifier Assembly
F 38 Airbag Cut Off Switch Cylinder Sub-Assembly
F 41 Short Connector
F 42 Short Connector
F 43 Parking Assist ECU
F 44 Parking Assist ECU
F 46 Navigation ECU
F 47 Navigation Antenna Assembly
F 48 Multi-Display
F 49 Parking Assist ECU
F 50 Parking Assist ECU


F 1
White

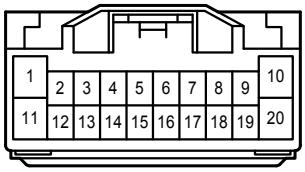

F 2
White




F 3
White

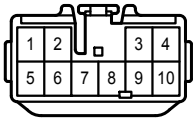


F 5
White




F 6
White




F 7
White




F 8
White




F 9
Black

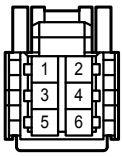


F 10
White

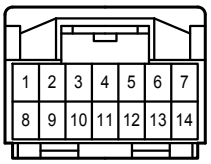

F 11
Gray

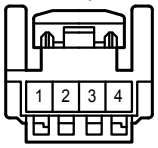


F 12
White

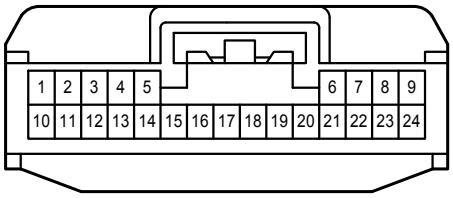

(Before Aug. 2007 Production)

F 12
Gray

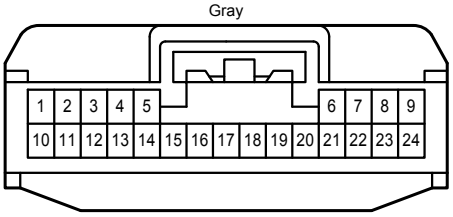


(From Aug. 2007 Production)


F 13
White




F 14
White




F 16
White




F 17
White




F 18
White

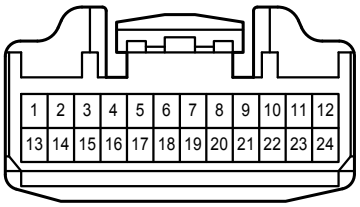


F 19
White

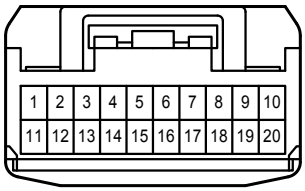


F 20
Gray

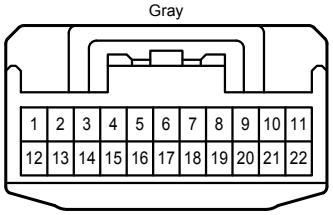


F 21
Black

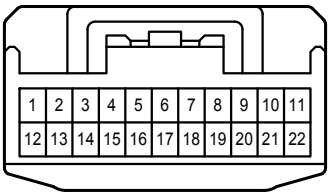


F 22
White

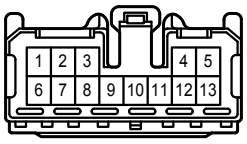


F 23
White

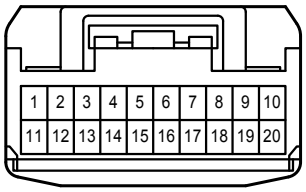


F 25
White

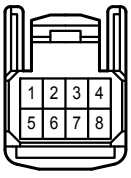


F 27
White

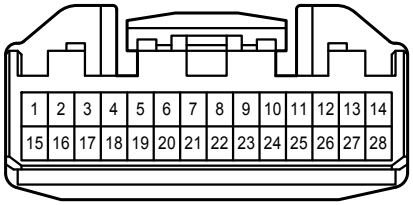


F 28
White

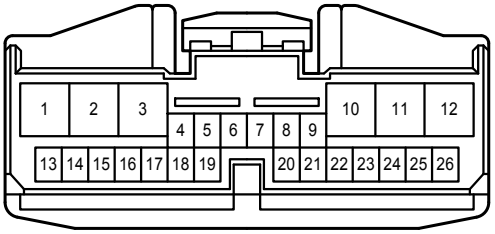


F 29
Blue

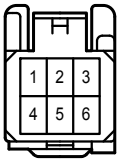


F 30
White

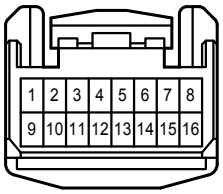


F 31
White

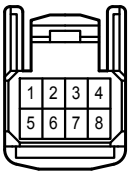


F 32
White

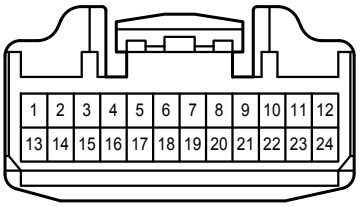

F 34
White

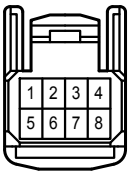


F 35
White

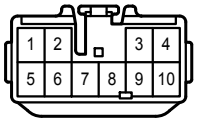


F 36
White




F 37
White

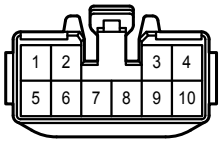


F 38
White




F 41
White




F 42
White



F 43
White

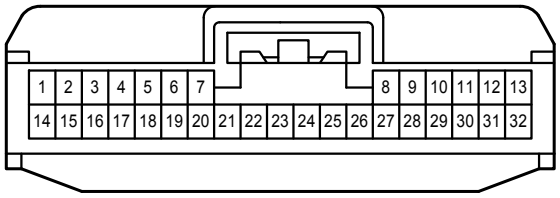

F 44
White

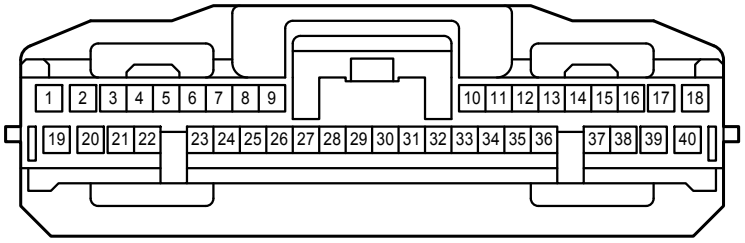

F 46
Gray



F 47
Gray



F 48
Blue




F 49
White



F 50
Blue

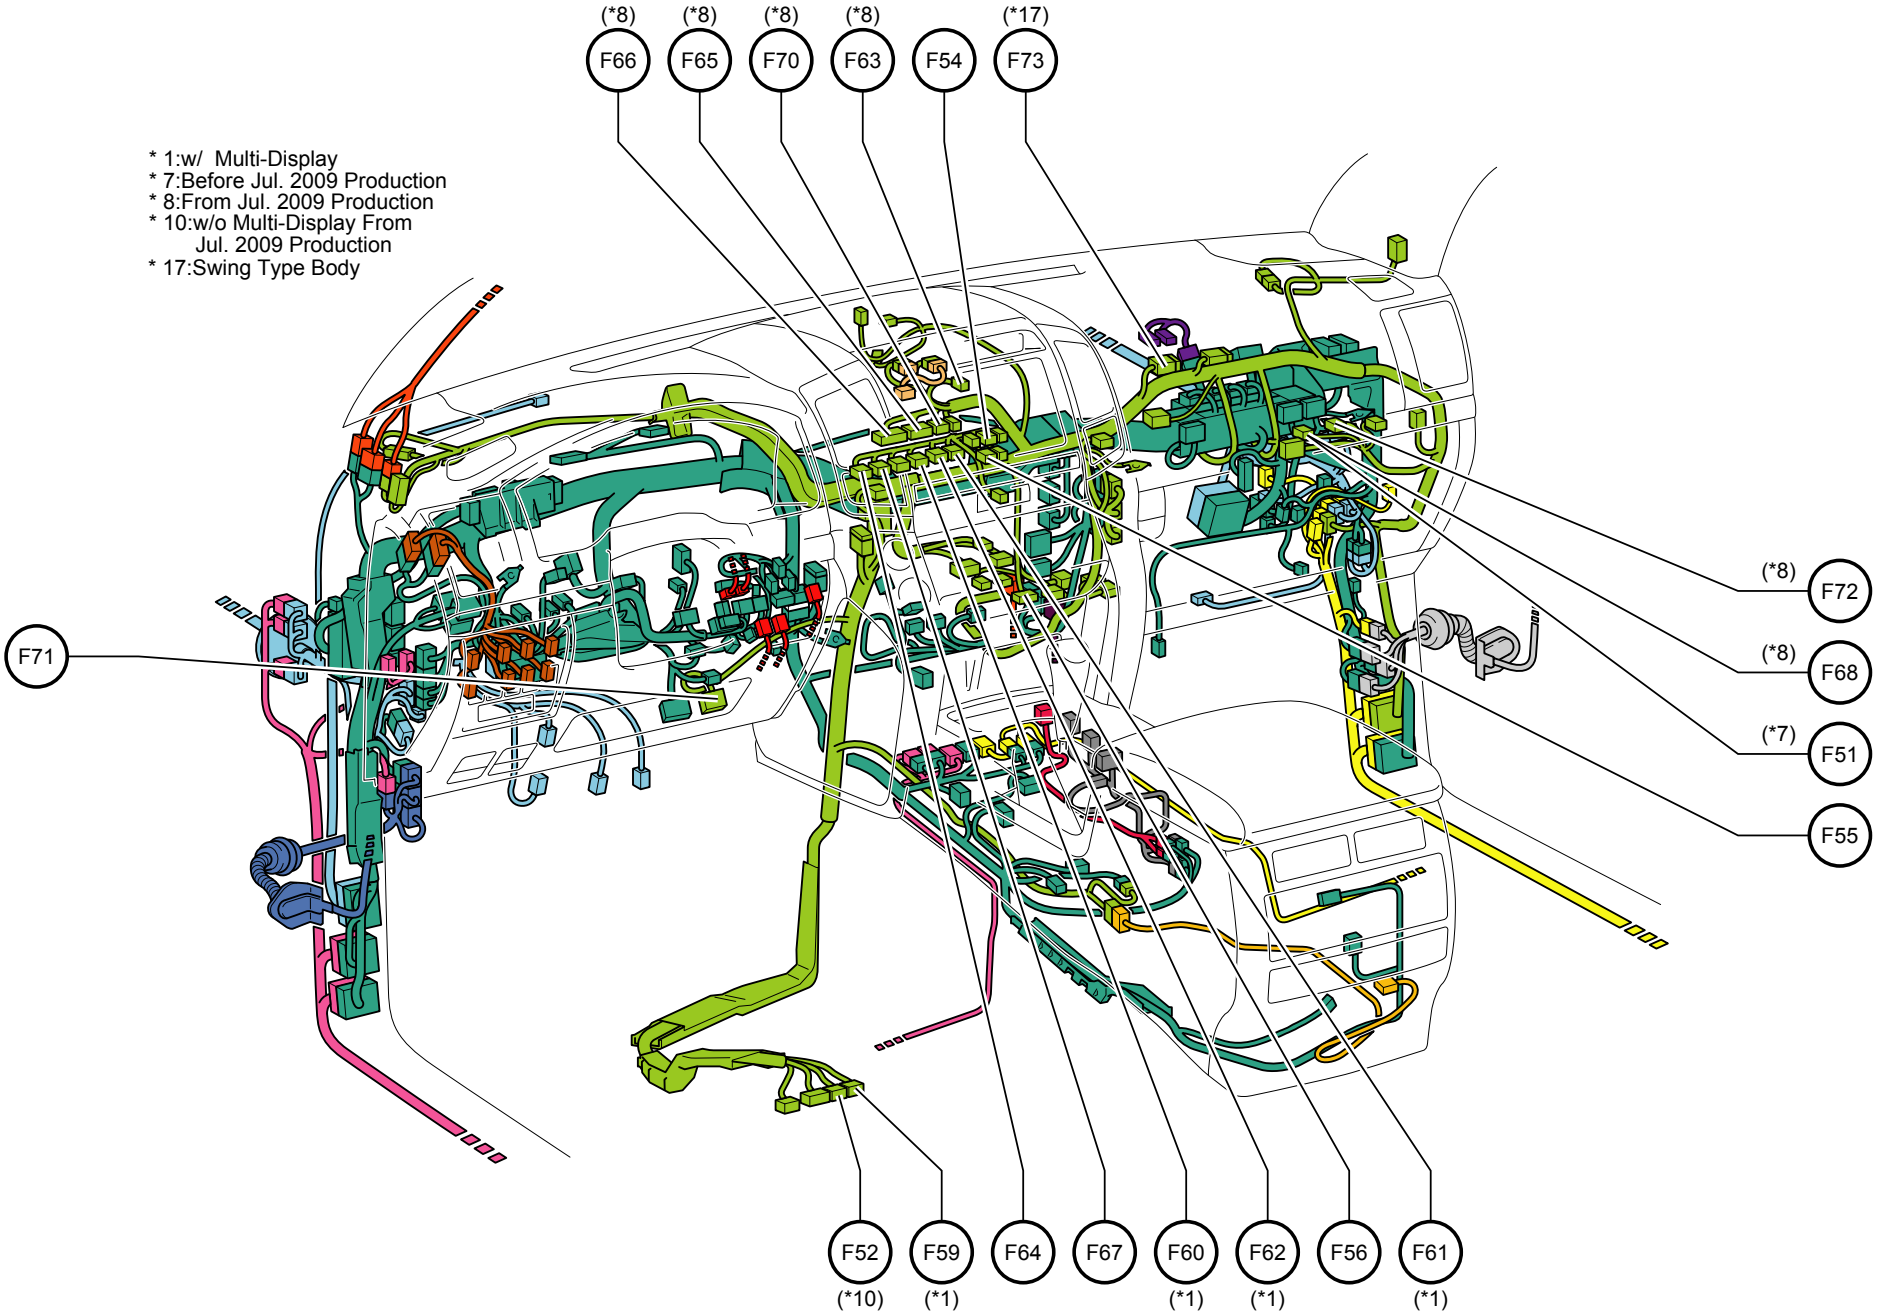



* 1:w/ Multi-Display
* 7:Before Jul. 2009 Production
* 8:From Jul. 2009 Production
* 10:w/o Multi-Display From Jul. 2009 Production
* 17:Swing Type Body
(*8) F66
(*8) F65
(*8) F70
(*8) F63
F54
(*17) F73
F71
(*8) F72
(*8) F68
(*7) F51
F55
F52 (*10)
F59 (*1)
F64
F67
F60 (*1)
F62 (*1)
F56
F61 (*1)

F 51 Navigation ECU
F 52 Stereo Component Amplifier Assembly
F 54 Radio Receiver Assembly
F 55 Radio Receiver Assembly
F 56 Radio Receiver Assembly
F 59 Stereo Component Amplifier Assembly
F 60 Display & Navigation Module Display
F 61 Display & Navigation Module Display
F 62 Display & Navigation Module Display
F 63 Display & Navigation Module Display
F 64 Display & Navigation Module Display
F 65 Display & Navigation Module Display
F 66 Display & Navigation Module Display
F 67 Display & Navigation Module Display
F 68 Multi-Media Module Navigation Assembly
F 70 Display & Navigation Module Display
F 71 IEEE Connector
F 72 IEEE Connector
F 73 Junction Connector


F 51
White



F 52
White




F 54
White

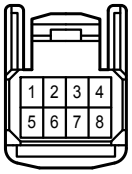

F 55
White



F 56
White

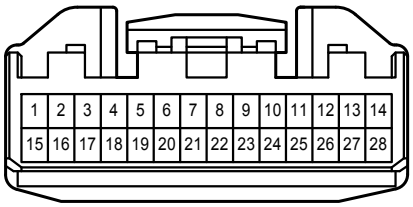


F 59
White




F 60
White




F 61
White

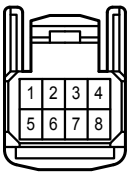


F 62
Blue




F 63
White

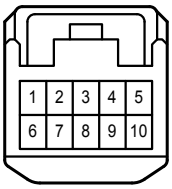


F 64
White

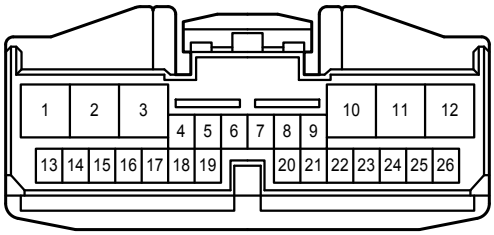


F 65
Black

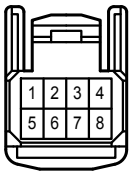


F 66
White

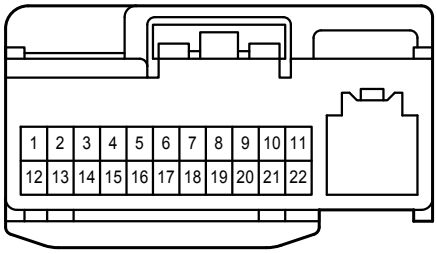

F 67
White




F 68
White

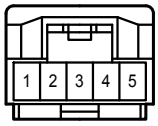

F 70
Gray




F 71
Gray

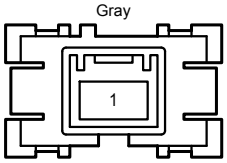


F 72
Gray



F 73
Blue

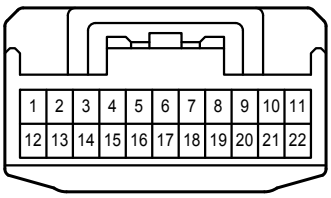

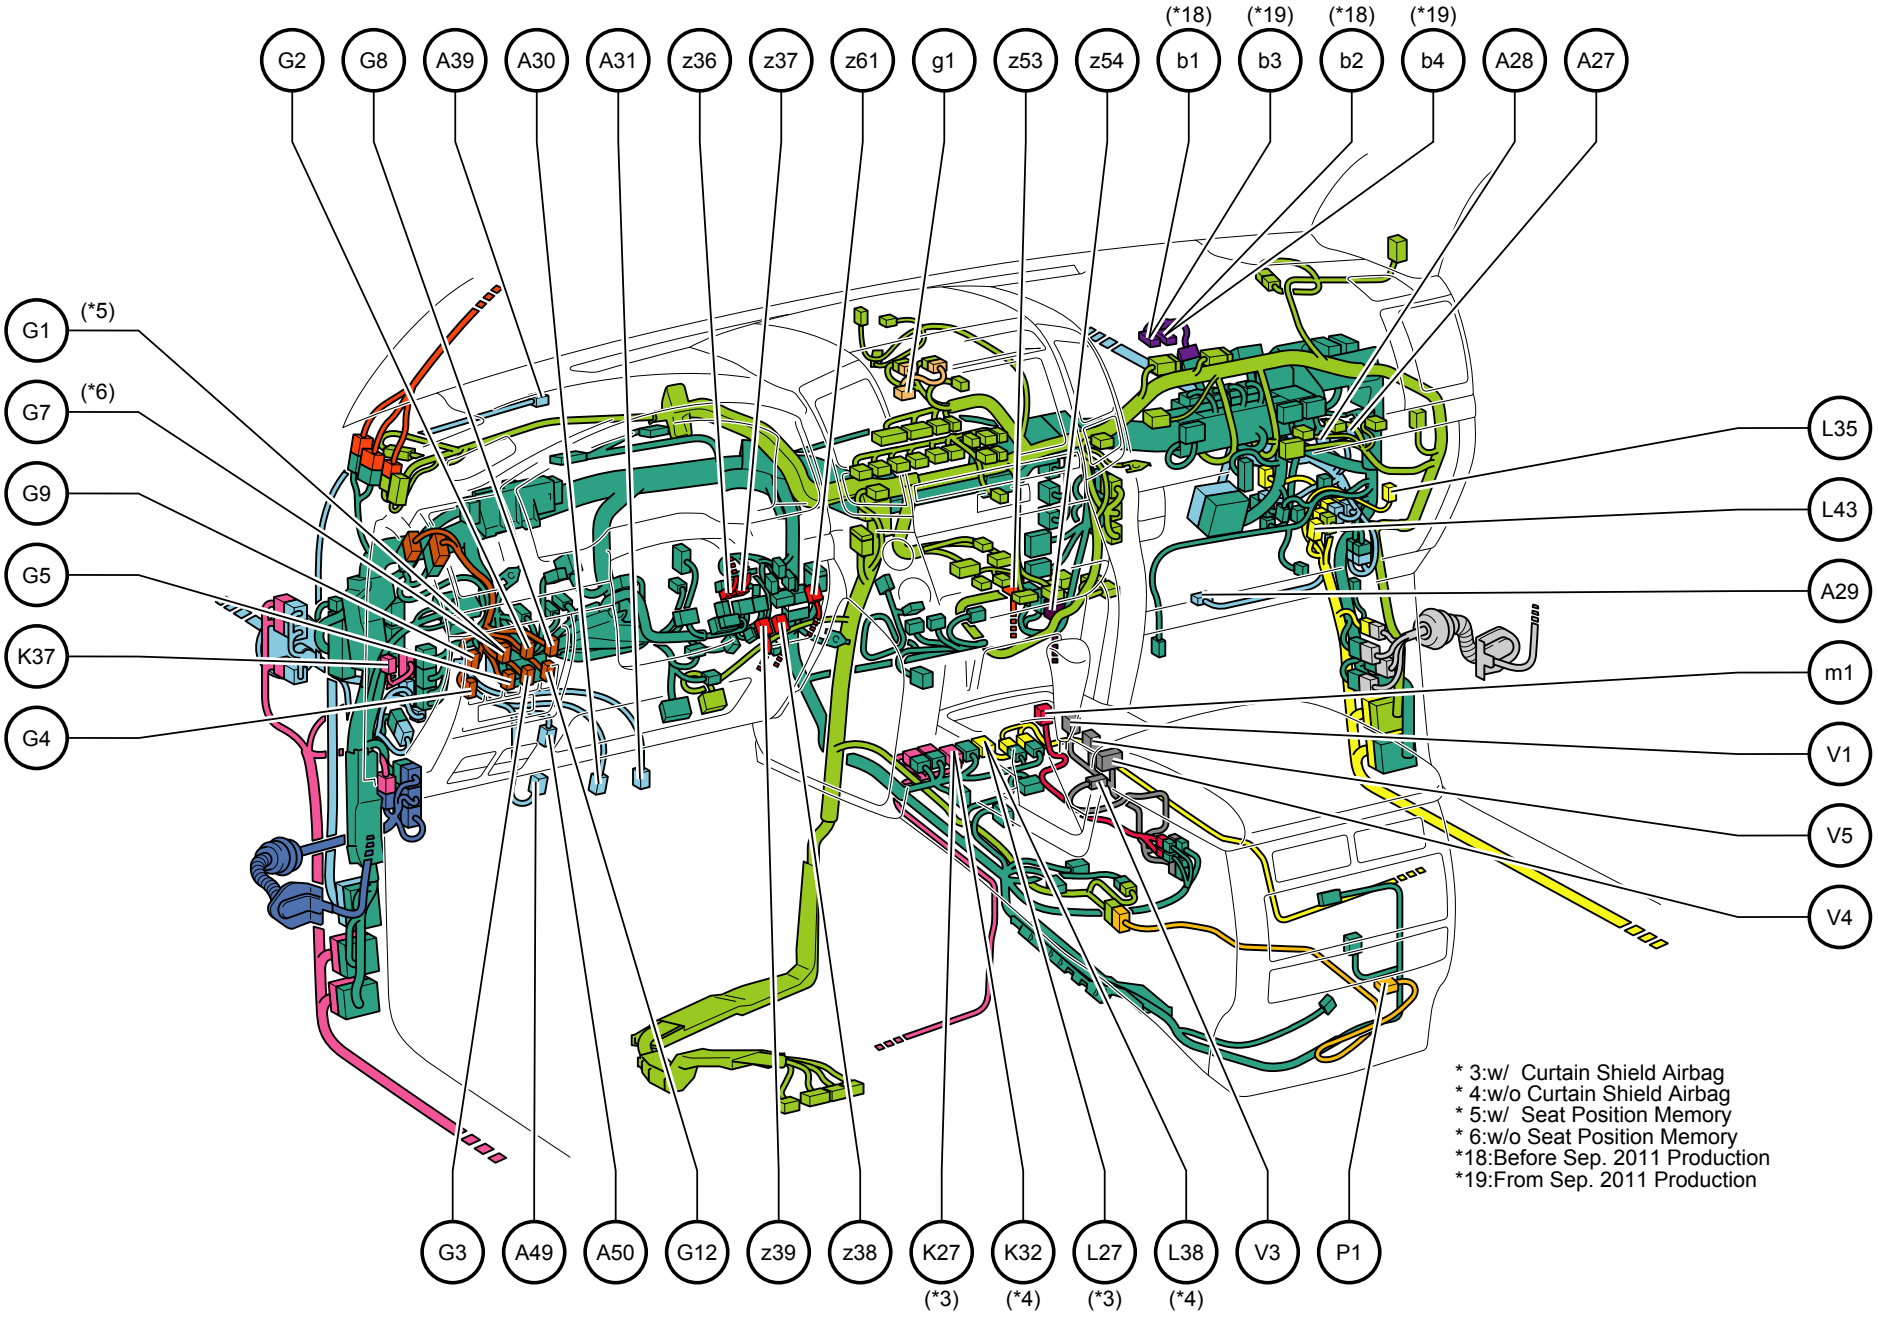
G2
G8
A39
A30
A31
z36
z37
z61
g1
z53
z54
(*18)
b1
(*19)
b3
(*18)
b2
(*19)
b4
A28
A27
G1
(*5)
G7
(*6)
G9
G5
K37
G4
L35
L43
A29
m1
V1
V5
V4
G3
A49
A50
G12
z39
z38
K27
(*3)
K32
(*4)
L27
(*3)
L38
(*4)
V3
P1
* 3:w/ Curtain Shield Airbag
* 4:w/o Curtain Shield Airbag
* 5:w/ Seat Position Memory
* 6:w/o Seat Position Memory
*18:Before Sep. 2011 Production
*19:From Sep. 2011 Production

A 27 Four Wheel Drive Control ECU
A 28 Four Wheel Drive Control ECU
A 29 Front Blower with Fan Motor Sub-Assembly
A 30 Stop Light Switch Assembly
A 31 Accelerator Pedal Sensor Assembly
A 39 Stop Light Control Relay Assembly
A 49 Clutch Start Switch Assembly
A 50 Clutch Switch Assembly

G 1 Outer Mirror Switch Assembly
G 2 Outer Mirror Switch Assembly
G 3 Curtain Airbag Cutoff Switch
G 4 Headlight Cleaner Switch Assembly
G 5 Back Sonar or Clearance Sonar Switch Assembly
G 7 Outer Mirror Switch Assembly
G 8 Idle Up Switch
G 9 Headlight Leveling Switch
G 12 Center Differential Lock Switch

K 27 Center Airbag Sensor Assembly
K 32 Center Airbag Sensor Assembly
K 37 Acceleration Sensor LH

L 27 Center Airbag Sensor Assembly
L 35 Acceleration Sensor RH
L 38 Center Airbag Sensor Assembly
L 43 Option Connector (Parking Assist-Sensor)

P 1 Headphone Terminal

V 1 Seat Heater Switch
V 3 Front Indoor Electrical Key Oscillator
V 4 Suspension Control Switch
V 5 Suspension Control Switch


b 1 Front Passenger Side Squib Circuit
b 2 Front Passenger Side Squib Circuit
b 3 Front Passenger Side Squib Circuit
b 4 Front Passenger Side Squib Circuit

g 1 Clock Assembly


m 1 No.1 Stereo Jack Adapter Assembly

z 36 Spiral Cable Sub-Assembly , Steering Pad Switch
z 37 Cruise Control Main Switch , Spiral Cable Sub-Assembly
z 38 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
z 39 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z 53 A/C Amplifier Assembly , A/C Blower Assembly
z 54 A/C Amplifier Assembly , A/C Blower Assembly
z 61 Cruise Control Main Switch , Spiral Cable Sub-Assembly


A 27
Black

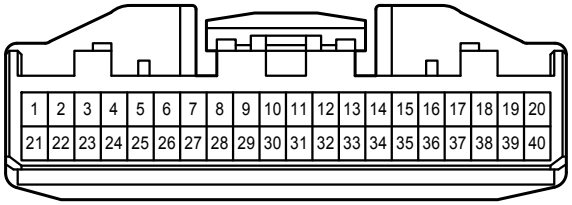


A 28
Black

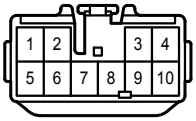


A 29
White

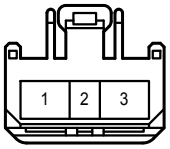


A 30
Gray




A 31
Black

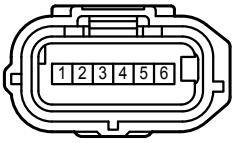


A 39
Black




A 49
Black




A 50
White




G 1
Black

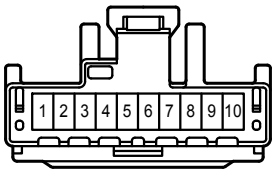


G 2
Black

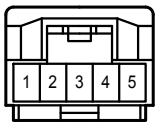


G 3
Gray

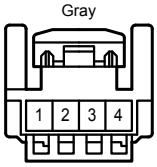


G 4
Black

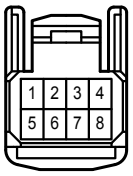


G 5
Black

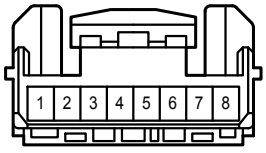


G 7
White

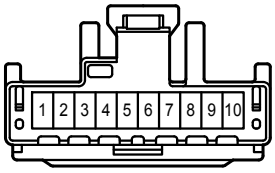


G 8
Black

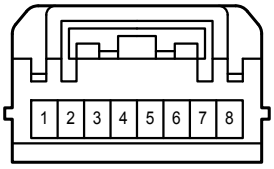


G 9
White




G 12
White

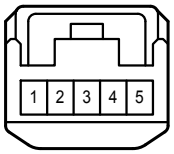


K 27
Yellow

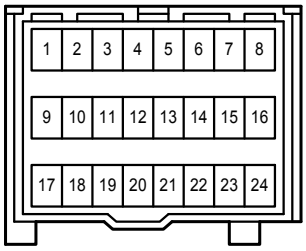


K 32
Yellow

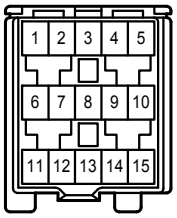


K 37
Black

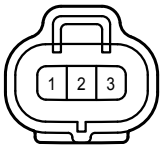


L 27
Yellow

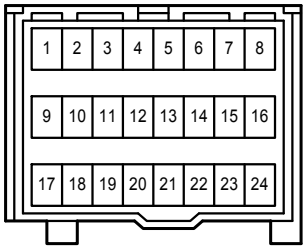


L 35
Black

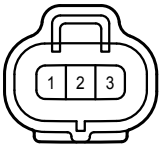


L 38
Yellow

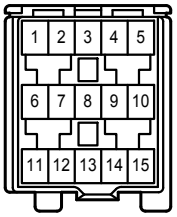


L 43
White

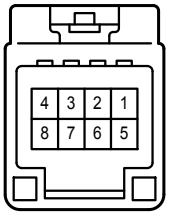


P 1
White

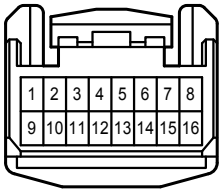


V 1
White

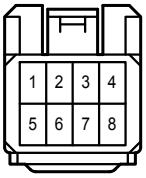


V 3
White

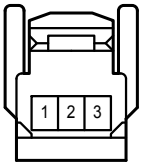


V 4
White

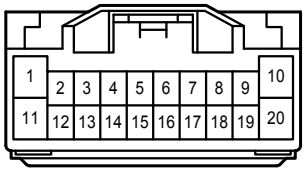


V 5
Gray

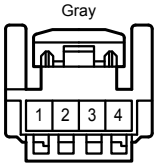


b 1
Orange




b 2
Black



b 3
Orange




b 4
Black




g 1
White




m 1
Black

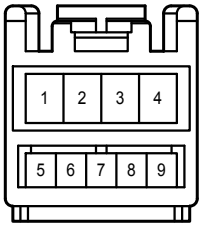


z 36
White

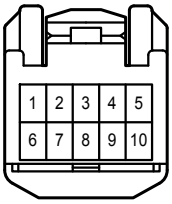


z 37
White




z 38
Black




z 39
Orange




z 53
White

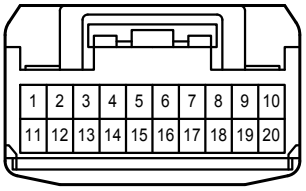



z 54
White

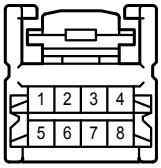



z 61
White

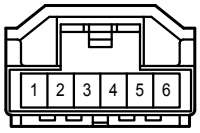

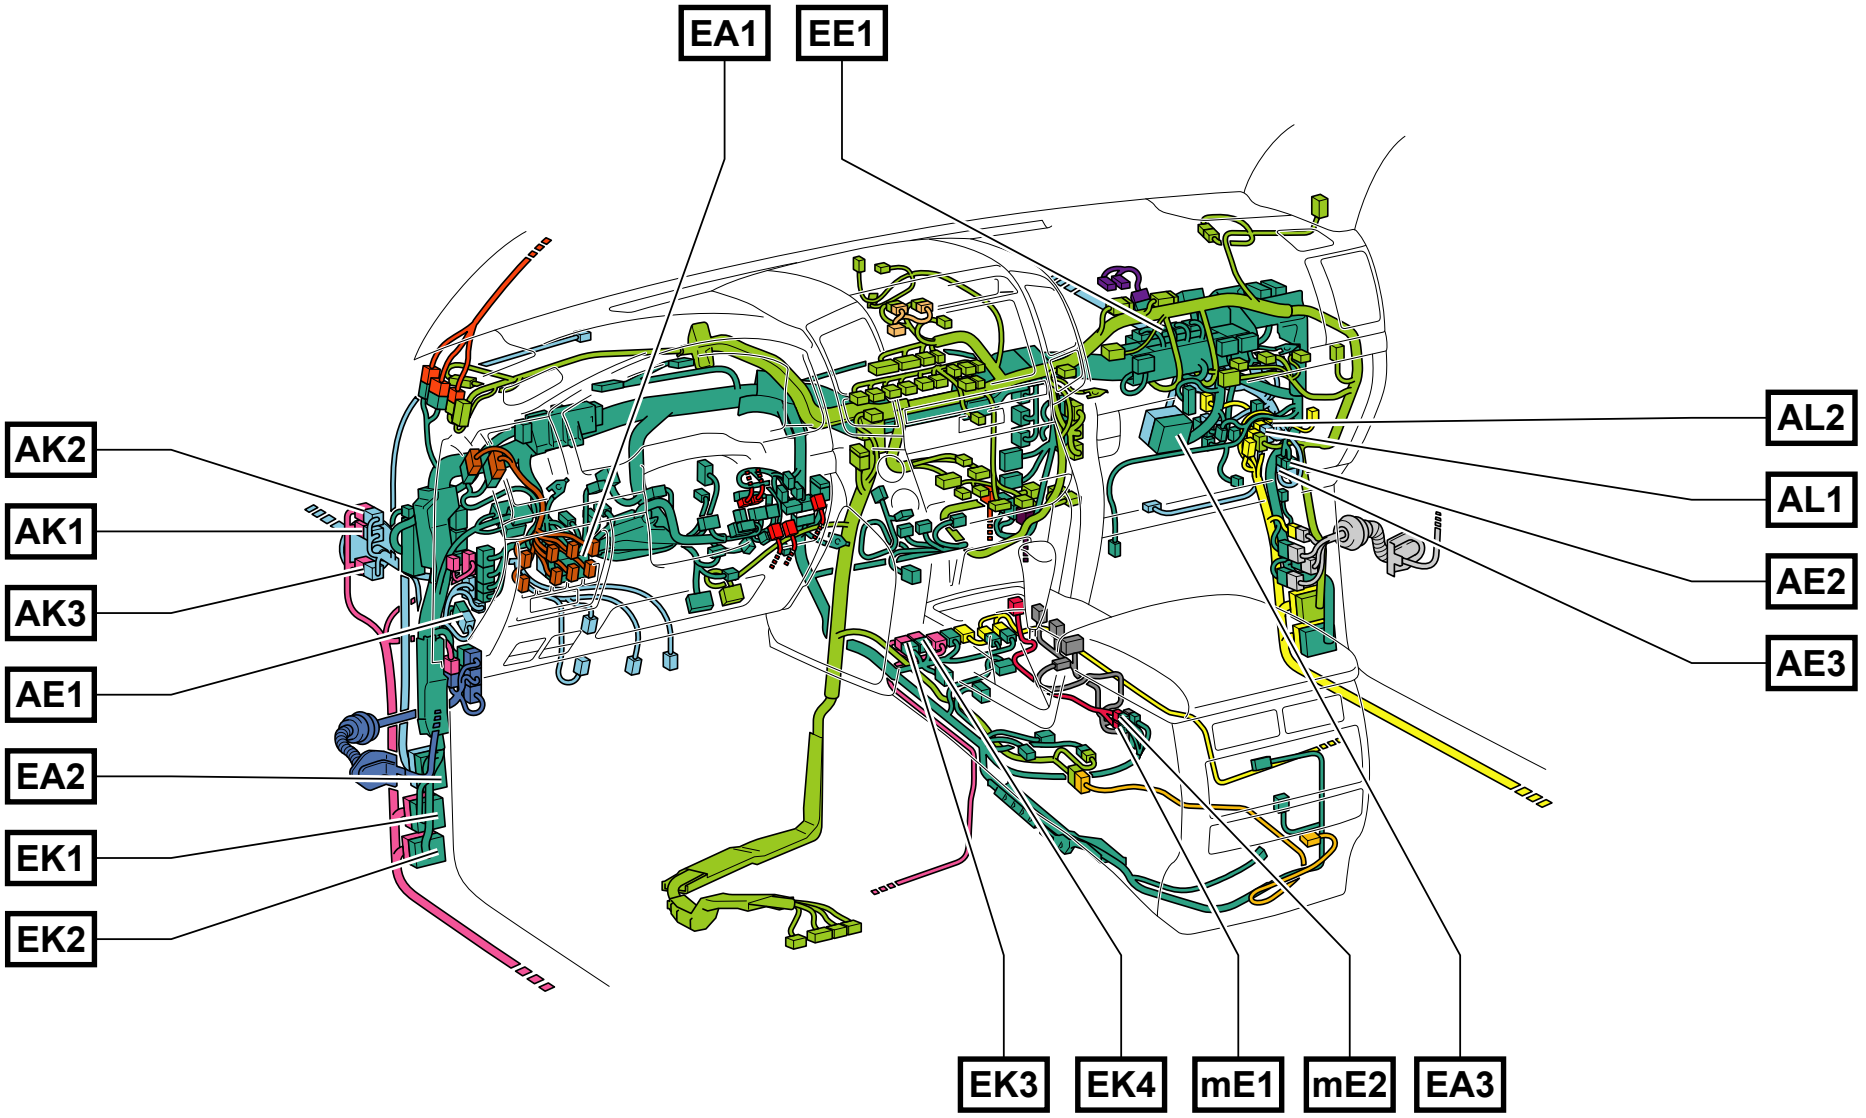
EA1
EE1
AK2
AK1
AK3
AE1
EA2
EK1
EK2
AL2
AL1
AE2
AE3
EK3
EK4
mE1
mE2
EA3

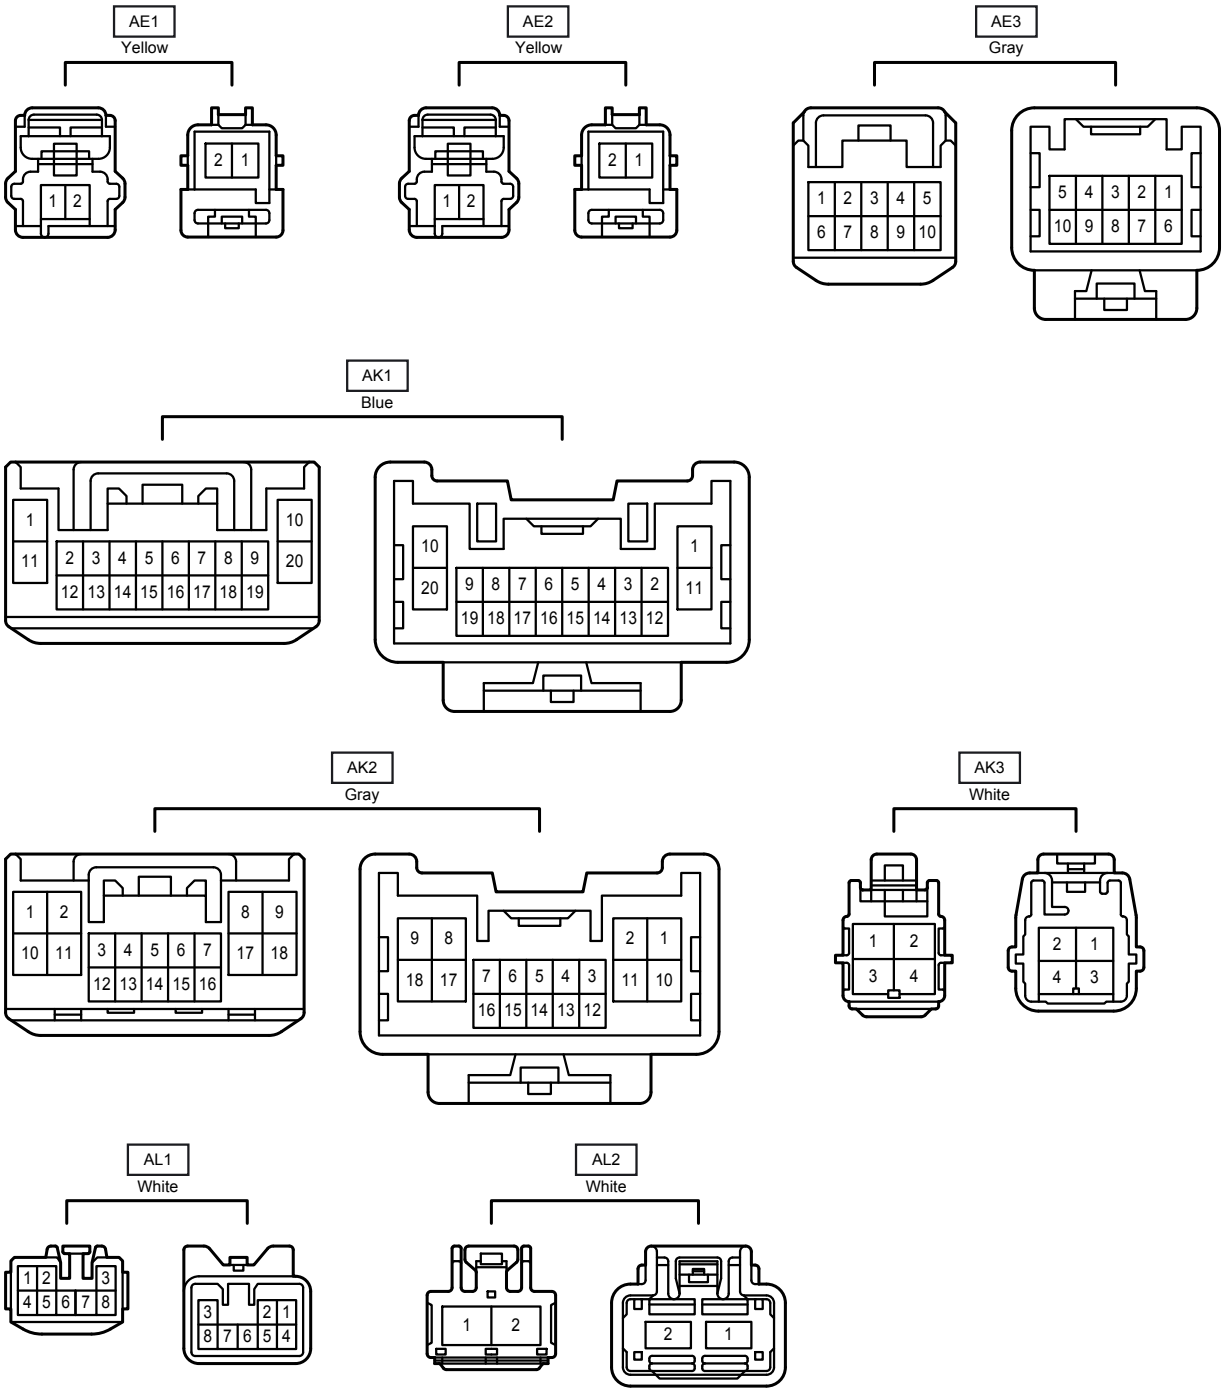

AE1
Yellow
AE2
Yellow
AE3
Gray
AK1
Blue
AK2
Gray
AK3
White
AL1
White
AL2
White

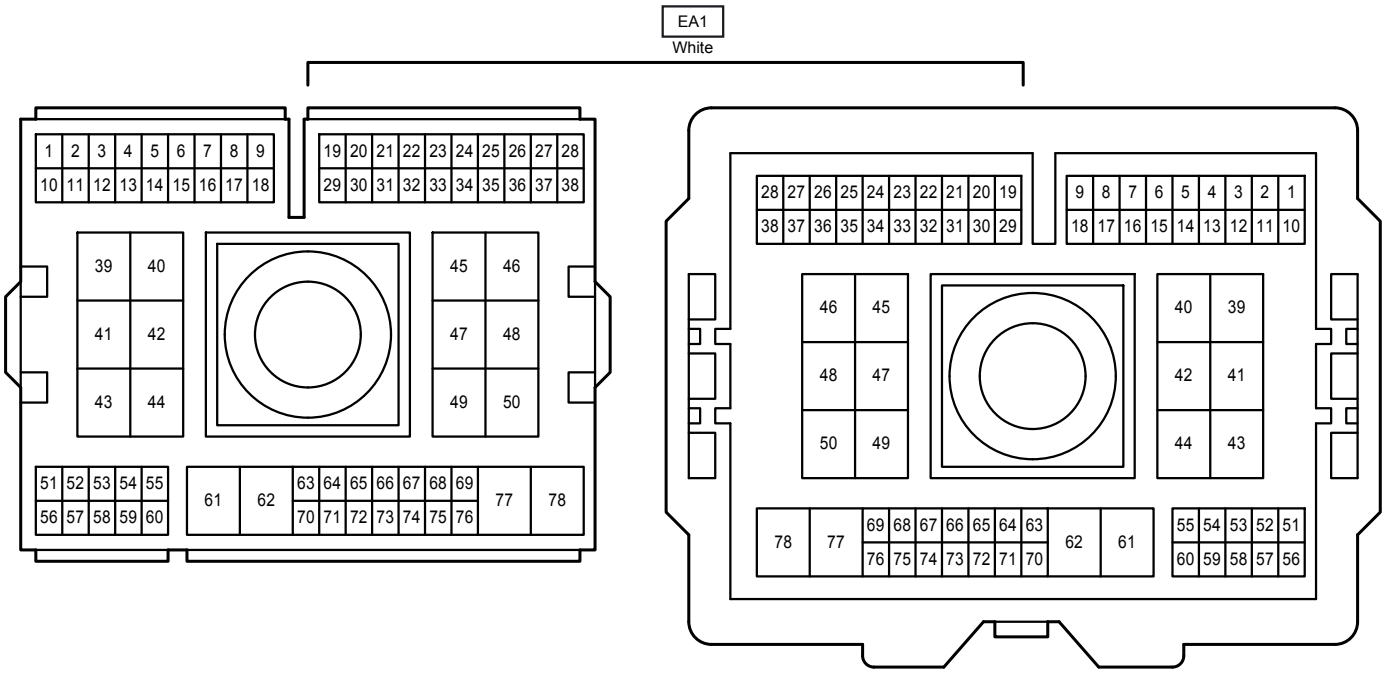
EA1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
19 20 21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40
41 42
43 44
45 46
47 48
49 50
51 52 53 54 55
56 57 58 59 60
61 62
63 64 65 66 67 68 69
70 71 72 73 74 75 76
77 78
28 27 26 25 24 23 22 21 20 19
38 37 36 35 34 33 32 31 30 29
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
46 45
48 47
50 49
40 39
42 41
44 43
78 77
69 68 67 66 65 64 63
76 75 74 73 72 71 70
62 61
55 54 53 52 51
60 59 58 57 56

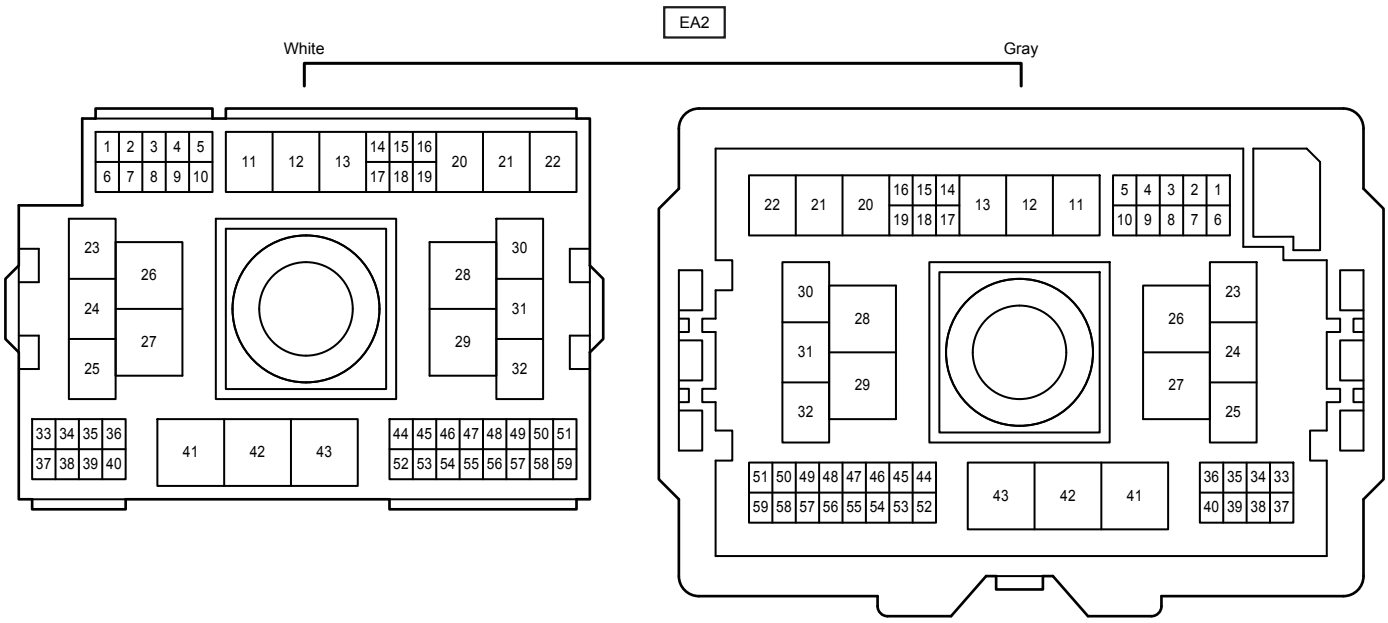
EA2
White
Gray
1 2 3 4 5
6 7 8 9 10
11 12 13
14 15 16
17 18 19
20 21 22
23 24 25
26 27
28 29
30 31 32
33 34 35 36
37 38 39 40
41 42 43
44 45 46 47 48 49 50 51
52 53 54 55 56 57 58 59
22 21 20
16 15 14
19 18 17
13 12 11
5 4 3 2 1
10 9 8 7 6
30 31 32
28 29
26 27
23 24 25
51 50 49 48 47 46 45 44
59 58 57 56 55 54 53 52
43 42 41
36 35 34 33
40 39 38 37


EA3

White

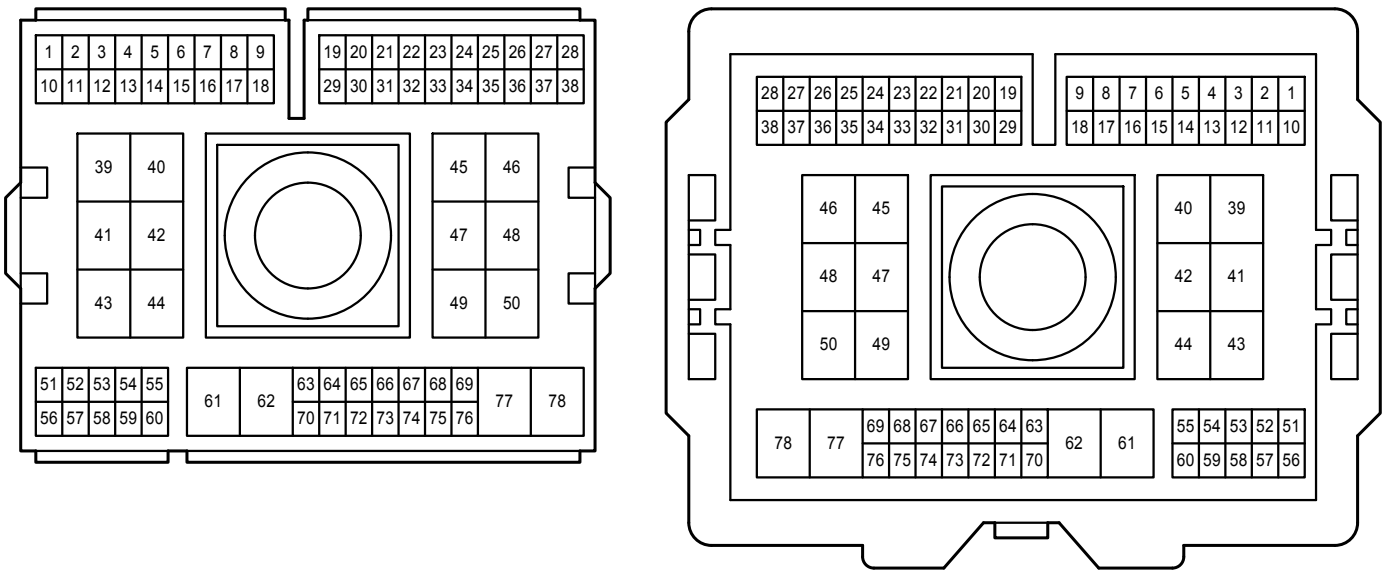

EE1


White

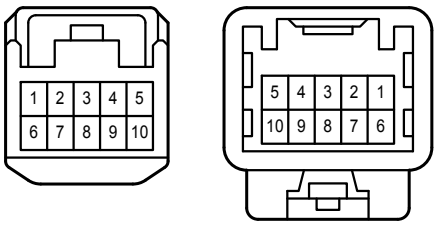



EK1

White


Blue

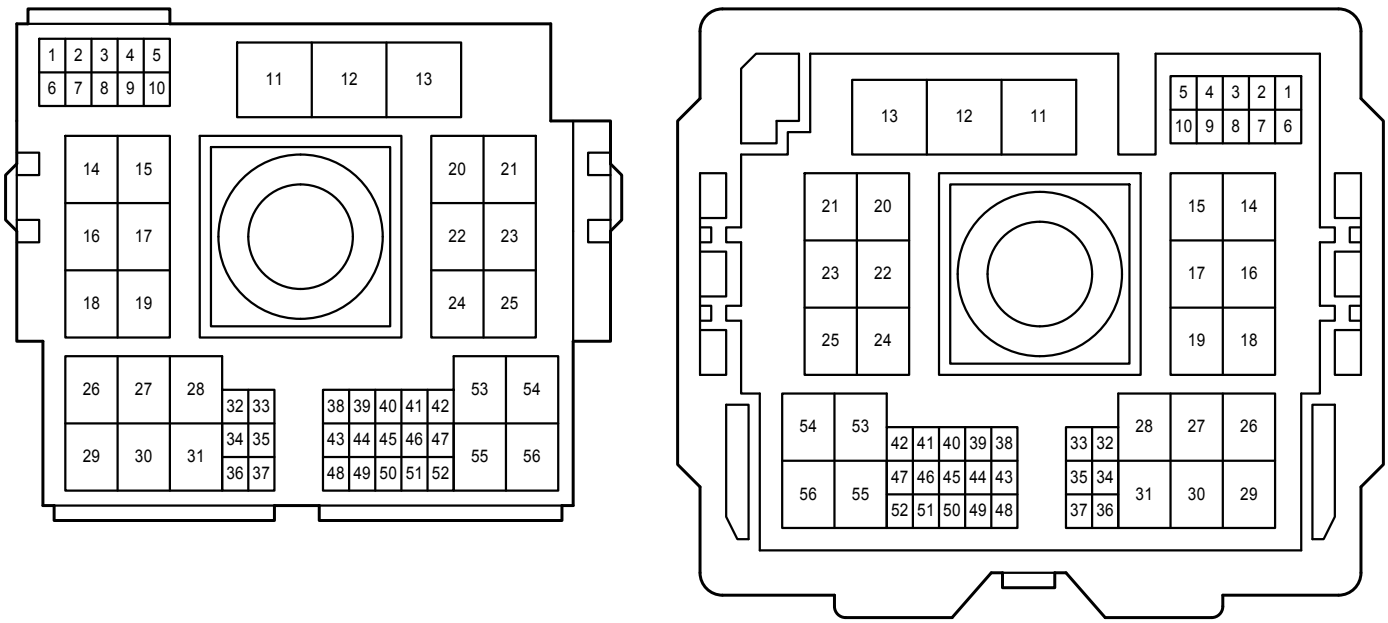

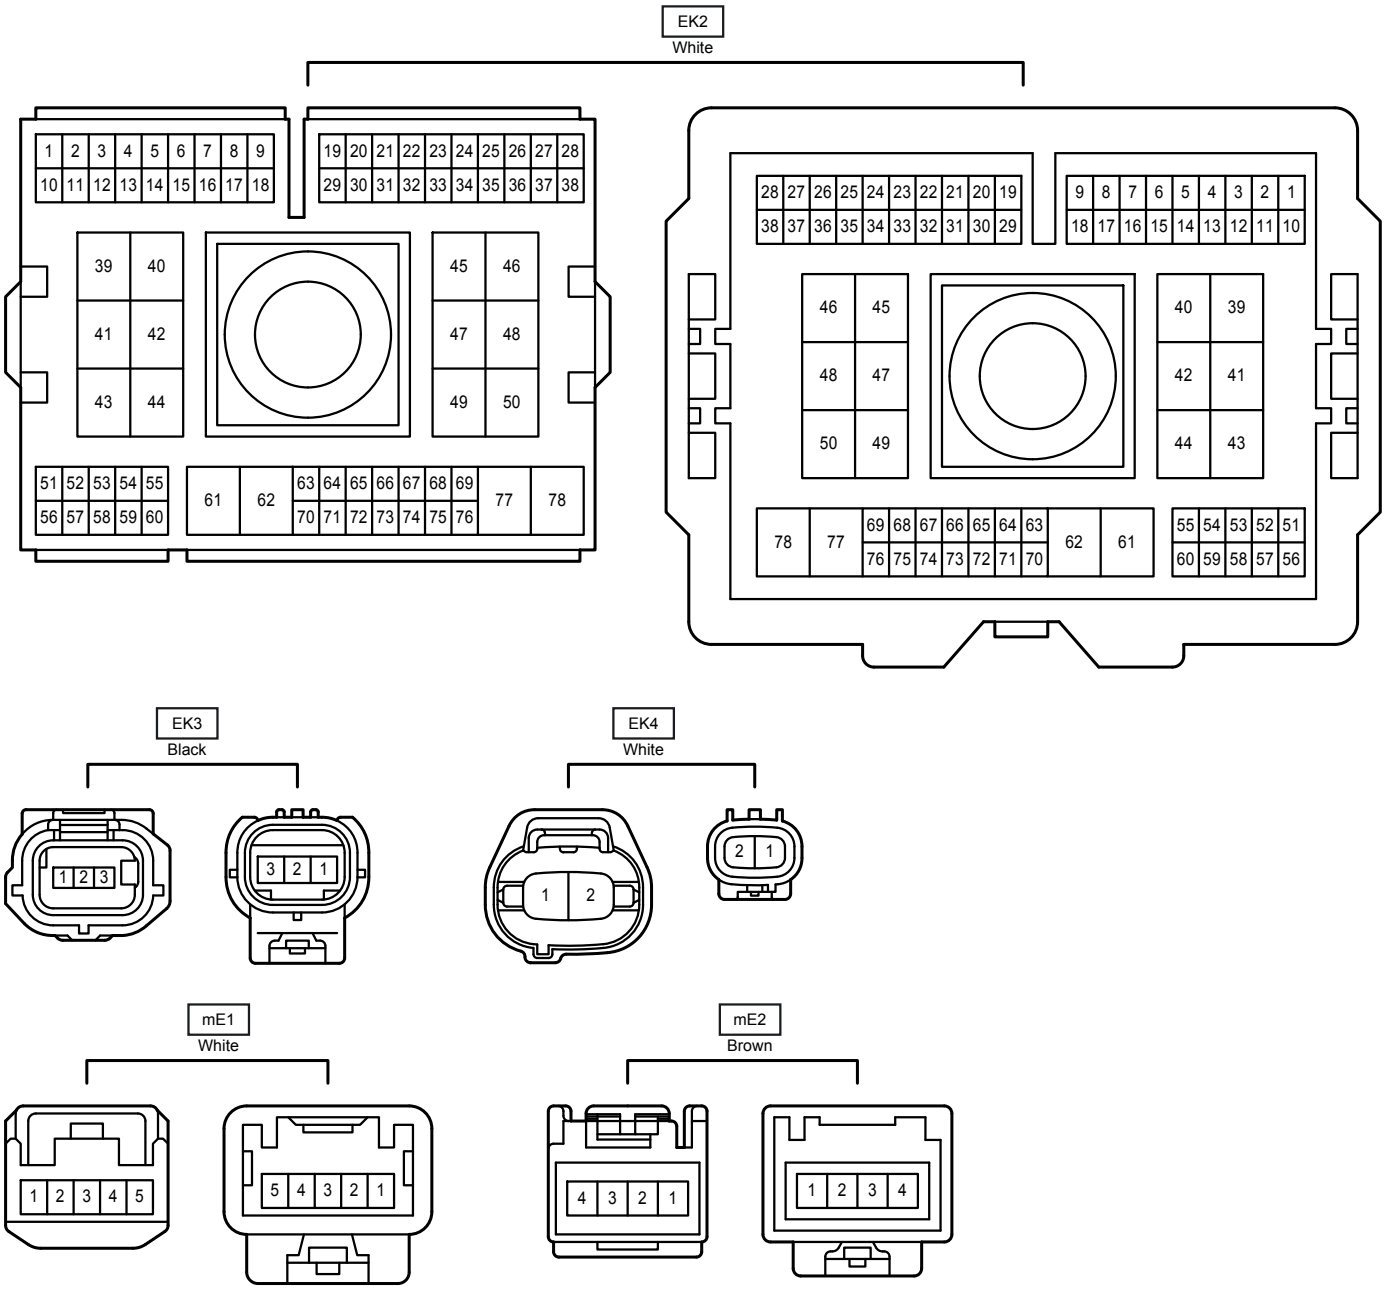

EK2
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
19 20 21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40
41 42
43 44
45 46
47 48
49 50
51 52 53 54 55
56 57 58 59 60
61 62
63 64 65 66 67 68 69
70 71 72 73 74 75 76
77 78
28 27 26 25 24 23 22 21 20 19
38 37 36 35 34 33 32 31 30 29
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
46 45
48 47
50 49
40 39
42 41
44 43
78 77
69 68 67 66 65 64 63
76 75 74 73 72 71 70
62 61
55 54 53 52 51
60 59 58 57 56
EK3
Black
1 2 3
3 2 1
EK4
White
1 2
2 1
mE1
White
1 2 3 4 5
5 4 3 2 1
mE2
Brown
4 3 2 1
1 2 3 4

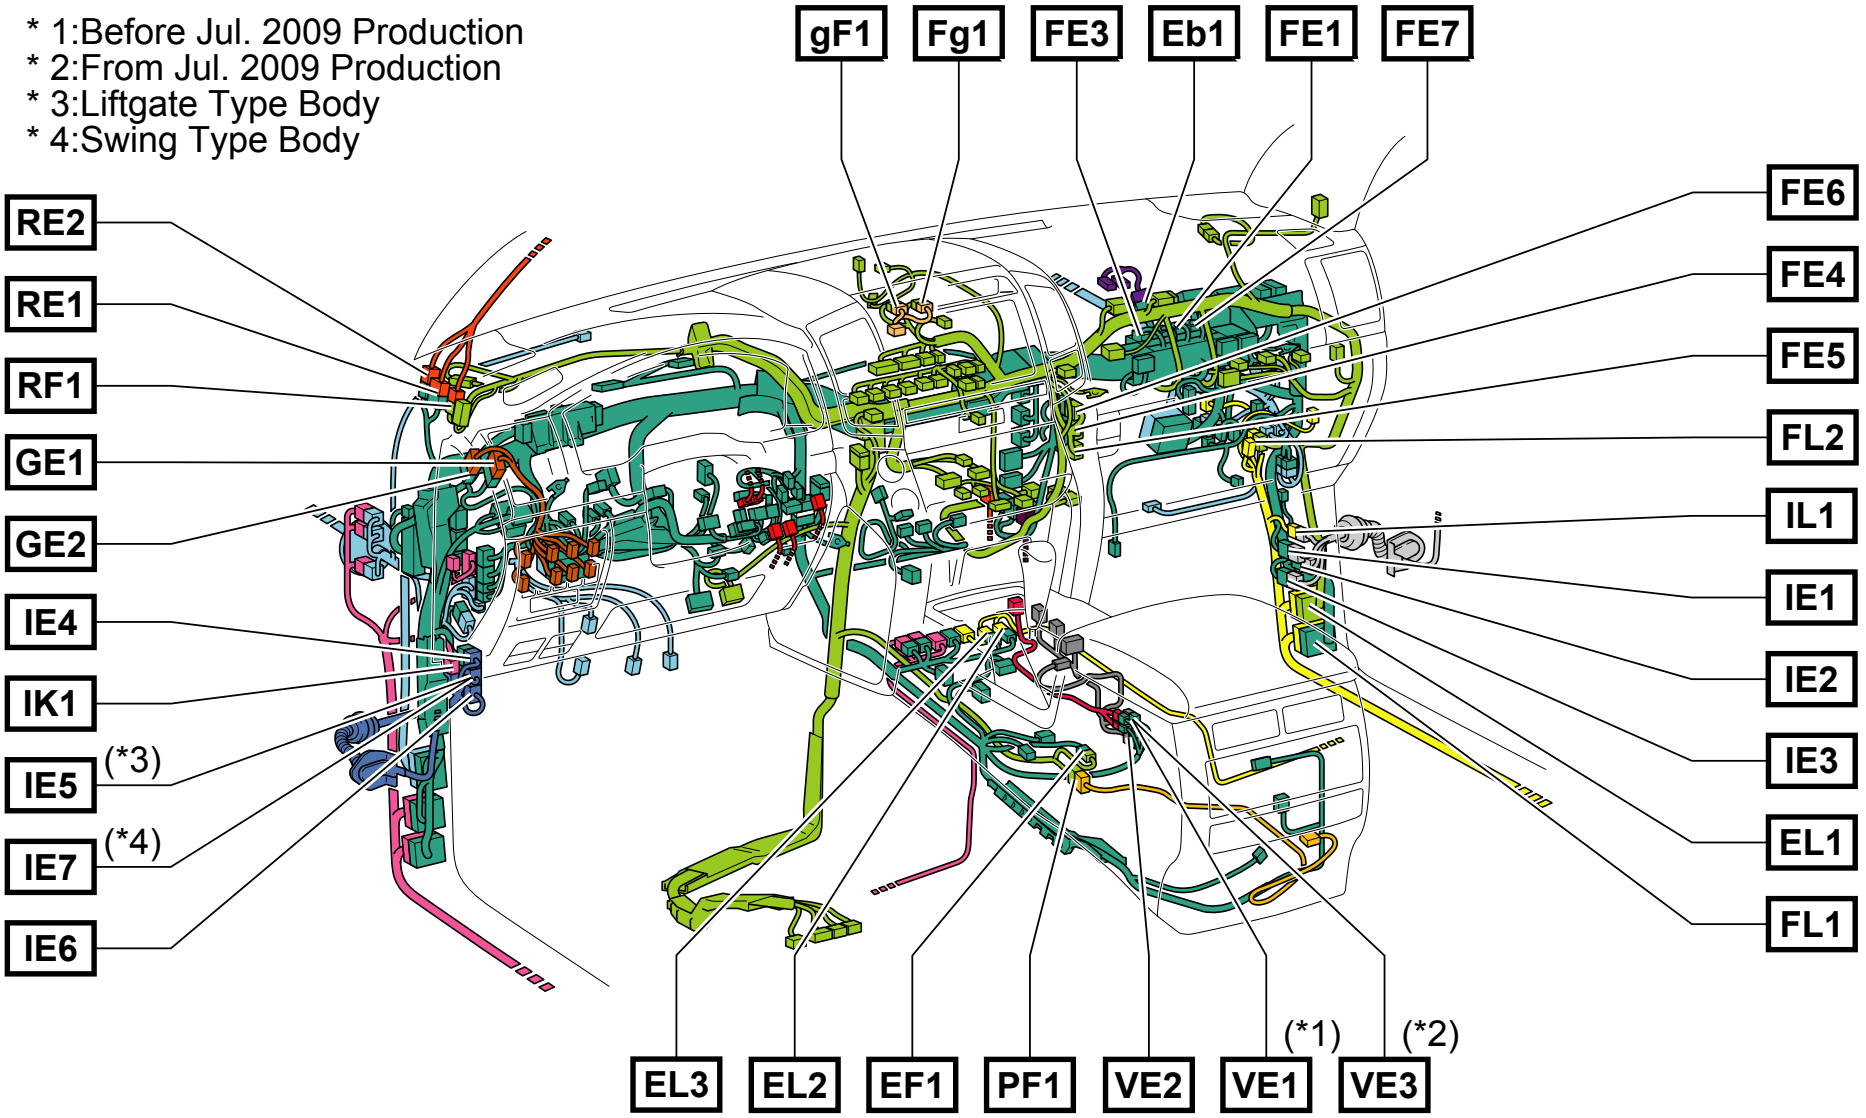
* 1:Before Jul. 2009 Production
* 2:From Jul. 2009 Production
* 3:Liftgate Type Body
* 4:Swing Type Body
gF1
Fg1
FE3
Eb1
FE1
FE7
FE6
FE4
FE5
FL2
IL1
IE1
IE2
IE3
EL1
FL1
RE2
RE1
RF1
GE1
GE2
IE4
IK1
IE5
(*3)
IE7
(*4)
IE6
EL3
EL2
EF1
PF1
VE2
VE1
(*1)
VE3
(*2)


EF1
White

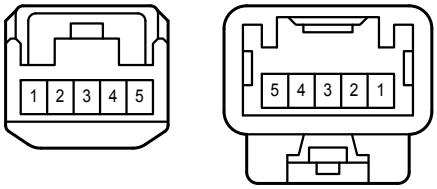


EL1
White

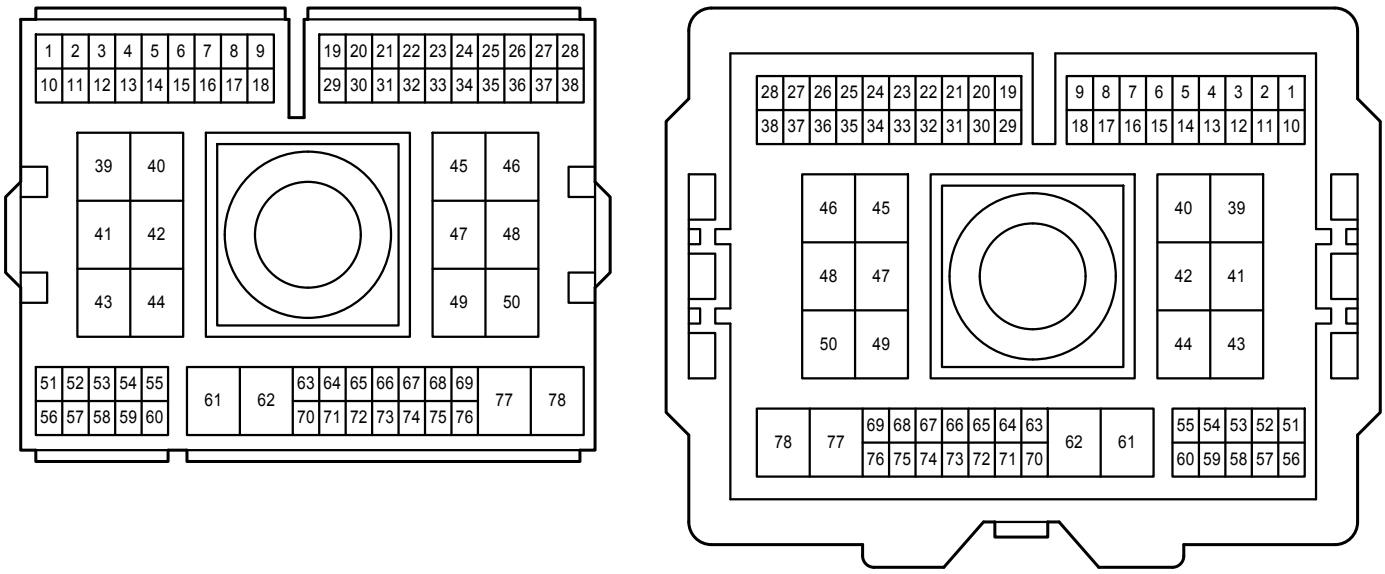


EL2
Gray

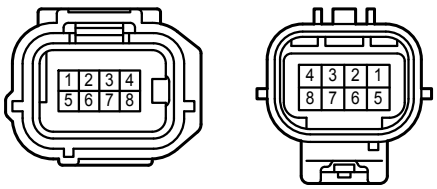


EL3
Brown

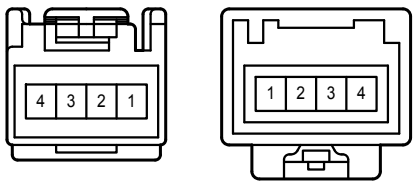


Eb1
Yellow

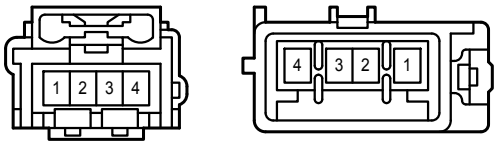


FE1
White

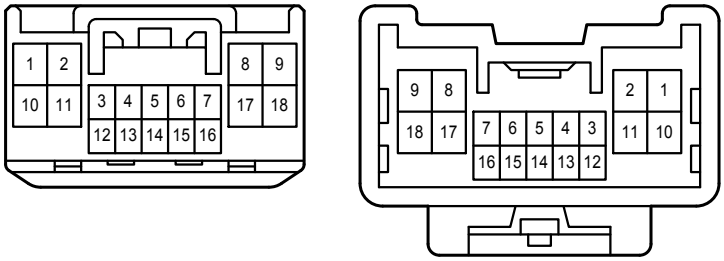


FE3
White

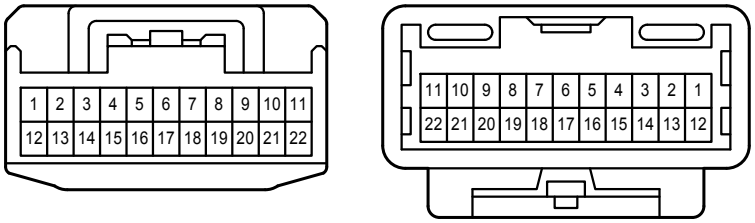


FE4
White

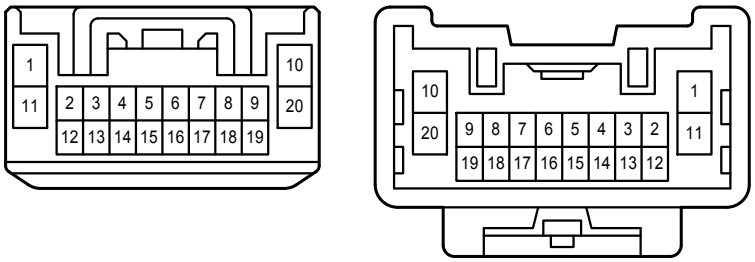


FE5
White

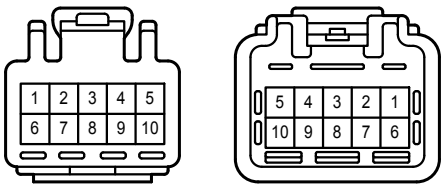



FE6
White

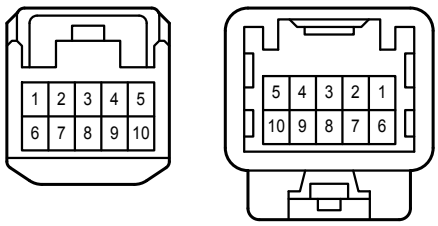



FE7
White

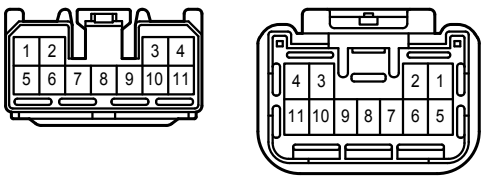

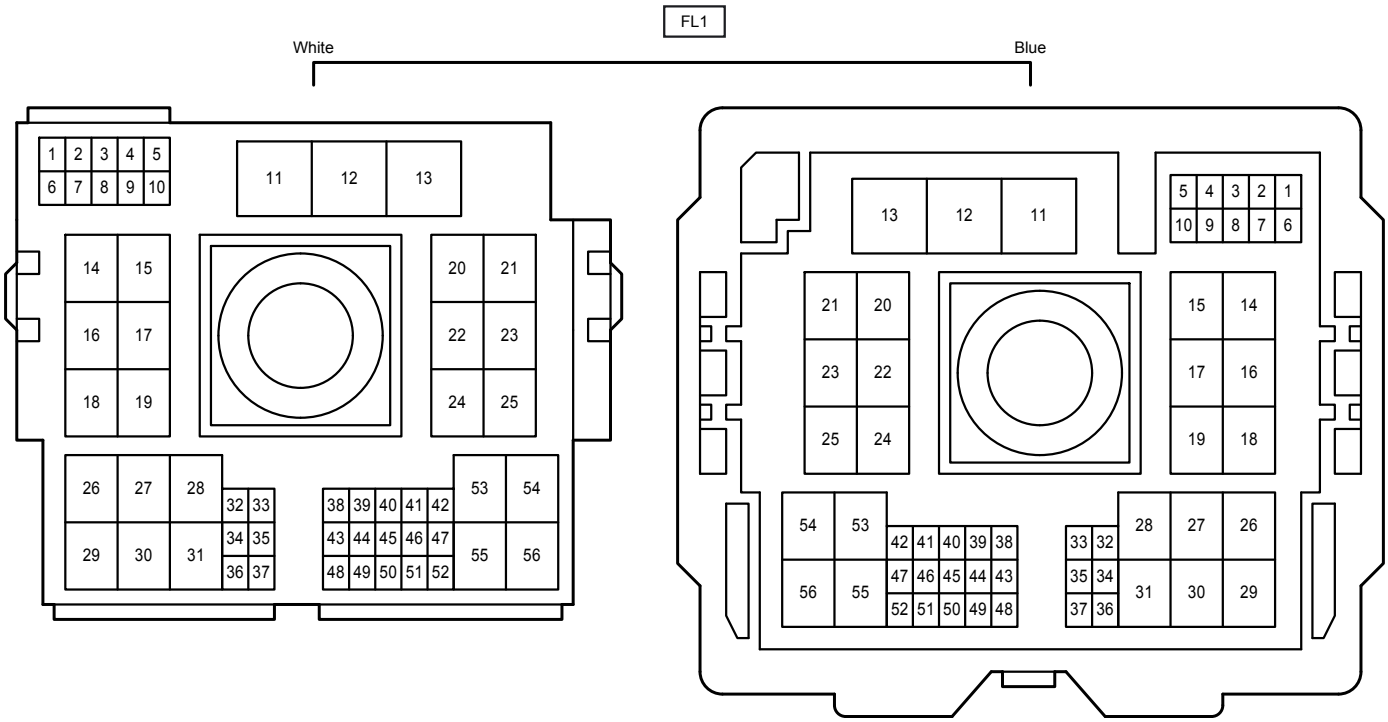

FL1
White
Blue
1 2 3 4 5
6 7 8 9 10
11 12 13
14 15
16 17
18 19
20 21
22 23
24 25
26 27 28
29 30 31
32 33
34 35
36 37
38 39 40 41 42
43 44 45 46 47
48 49 50 51 52
53 54
55 56
13 12 11
5 4 3 2 1
10 9 8 7 6
21 20
23 22
25 24
15 14
17 16
19 18
54 53
56 55
42 41 40 39 38
47 46 45 44 43
52 51 50 49 48
33 32
35 34
37 36
28 27 26
31 30 29

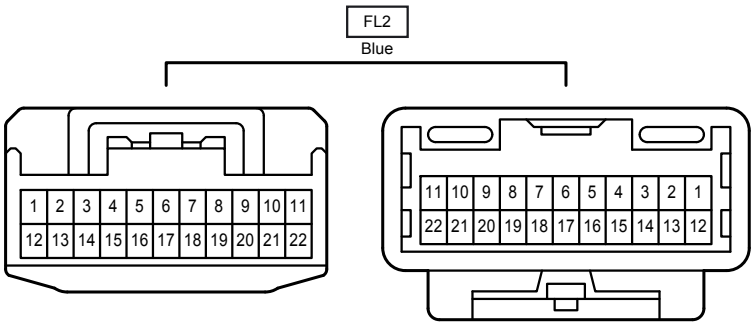
FL2
Blue
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12

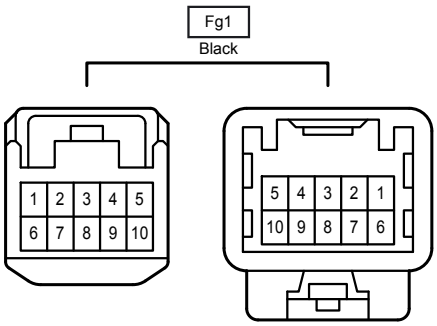

Fg1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

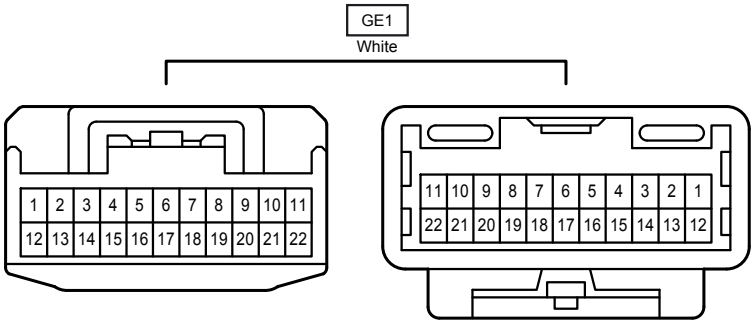
GE1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12


GE2
White

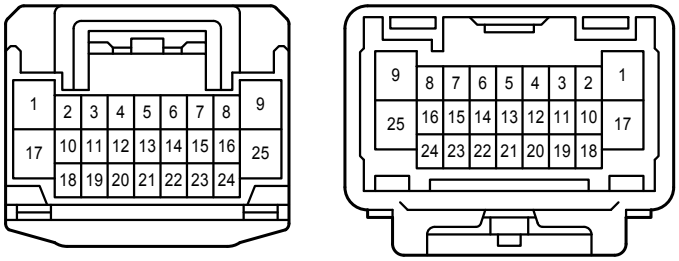


IE1
Gray

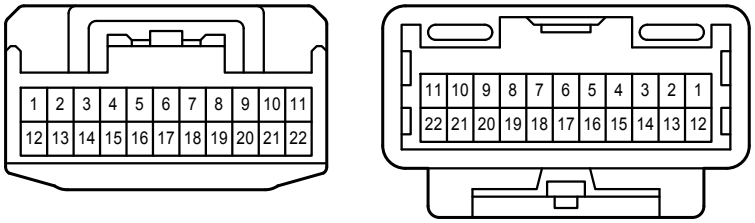


IE2
Blue

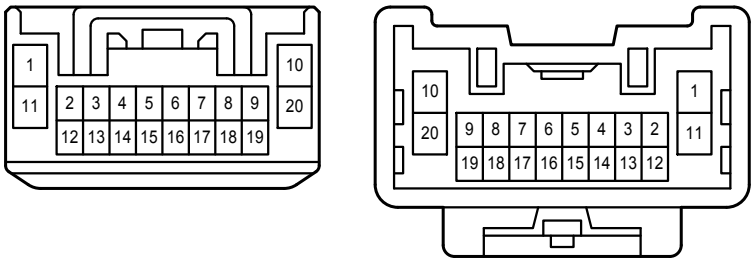


IE3
White

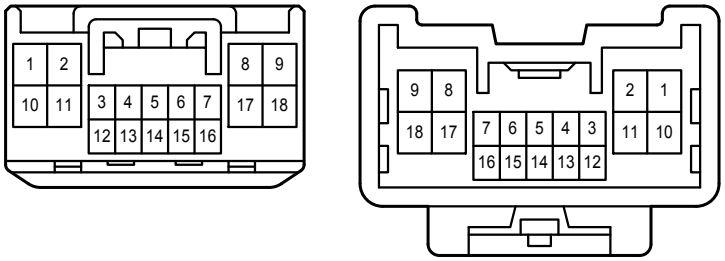


IE4
Gray

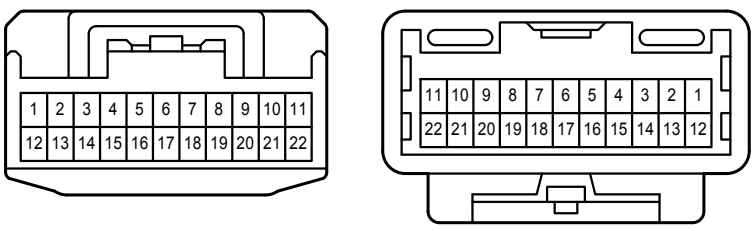


IE5
Blue

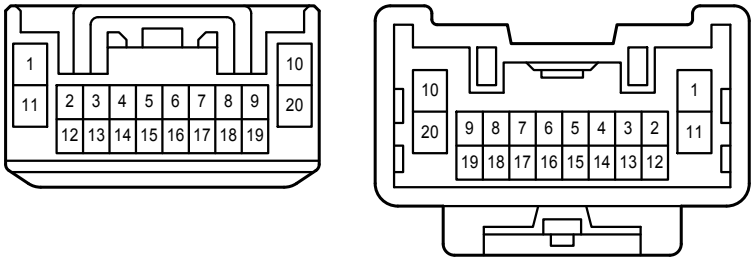


IE6
White

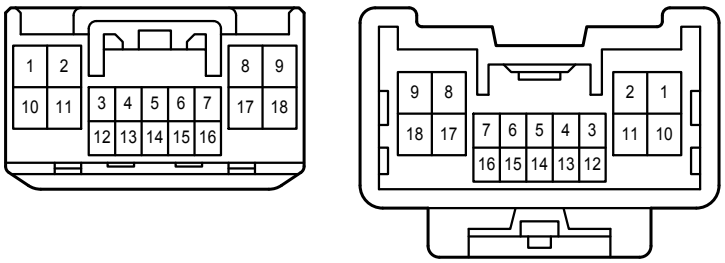


IE7
White

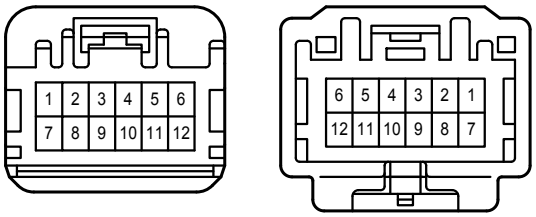


IK1
Yellow

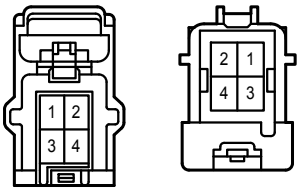


IL1
Yellow

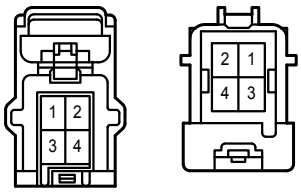


PF1
White

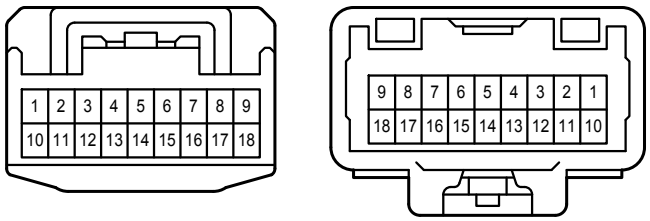


RE1
White

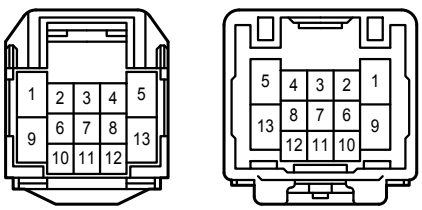


RE2
Blue

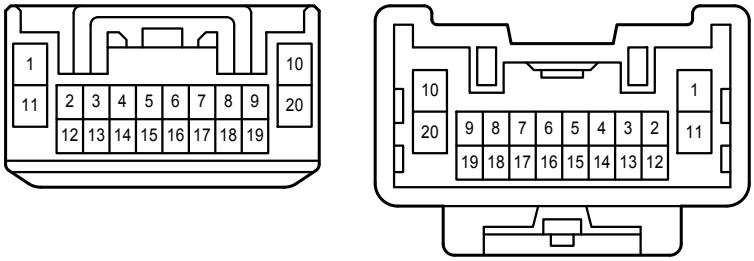


RF1
Gray

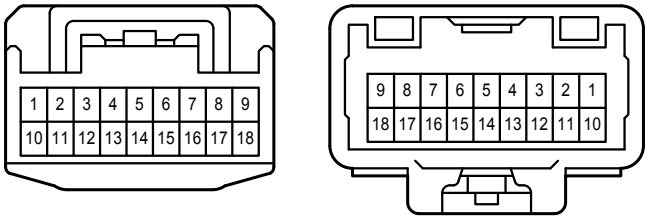


VE1
White

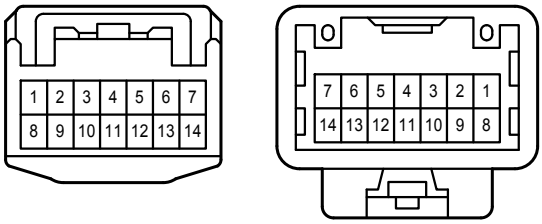


VE2
White

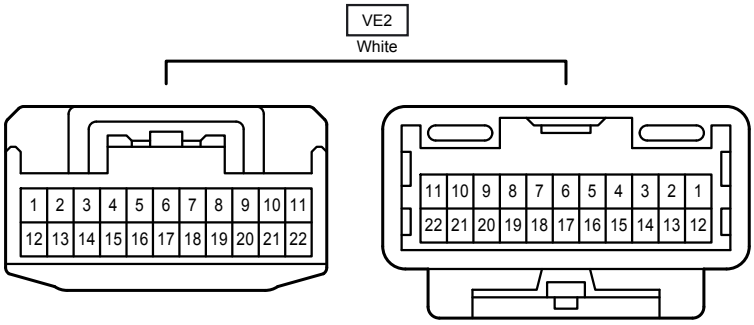



VE3
Gray

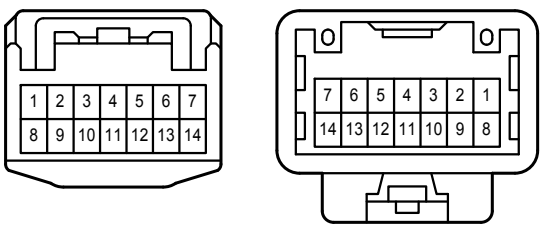

gF1
Black

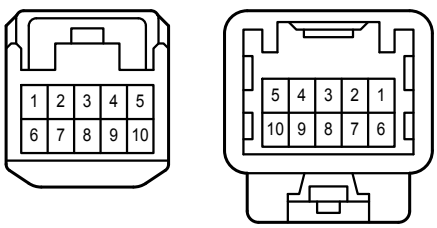


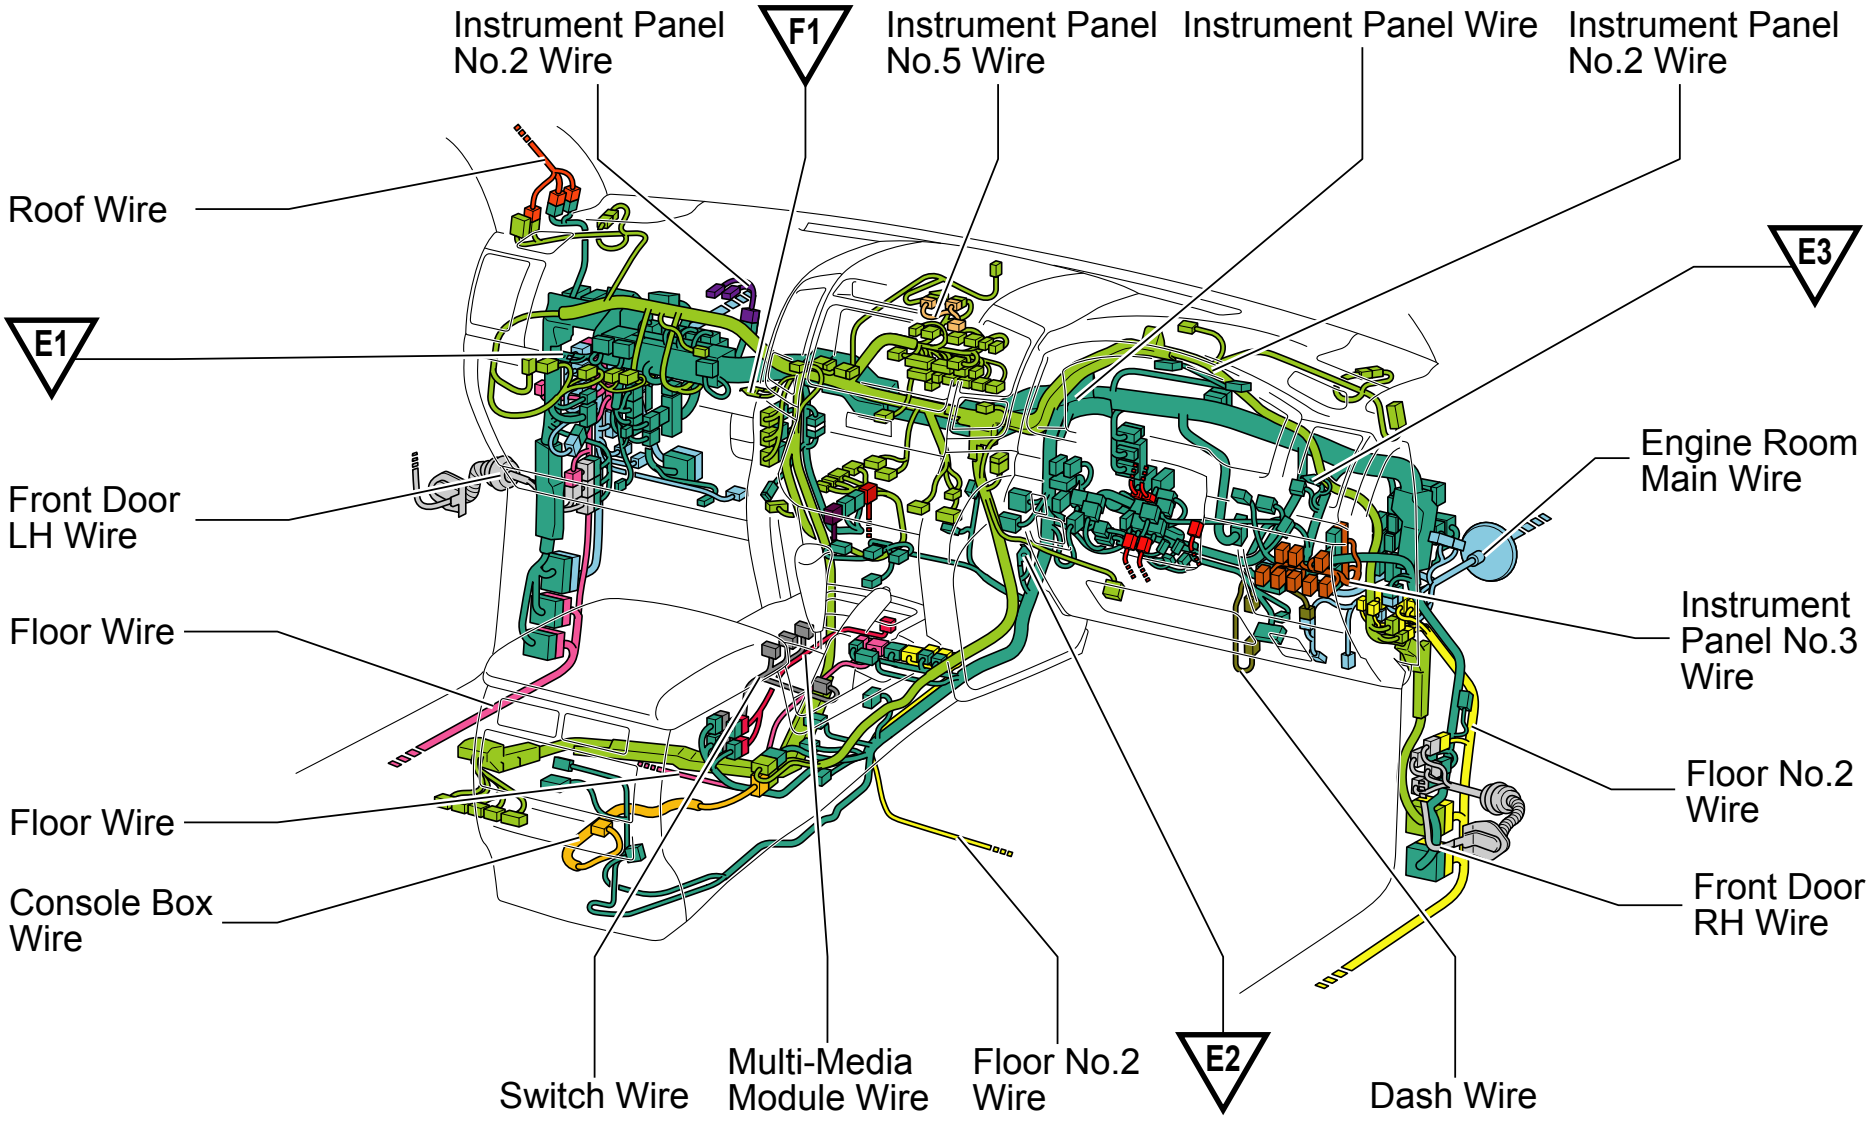
Instrument Panel No.2 Wire
F1
Instrument Panel No.5 Wire
Instrument Panel Wire
Instrument Panel No.2 Wire
Roof Wire
E3
E1
Engine Room Main Wire
Front Door LH Wire
Instrument Panel No.3 Wire
Floor Wire
Floor No.2 Wire
Floor Wire
Front Door RH Wire
Console Box Wire
Switch Wire
Multi-Media Module Wire
Floor No.2 Wire
E2
Dash Wire

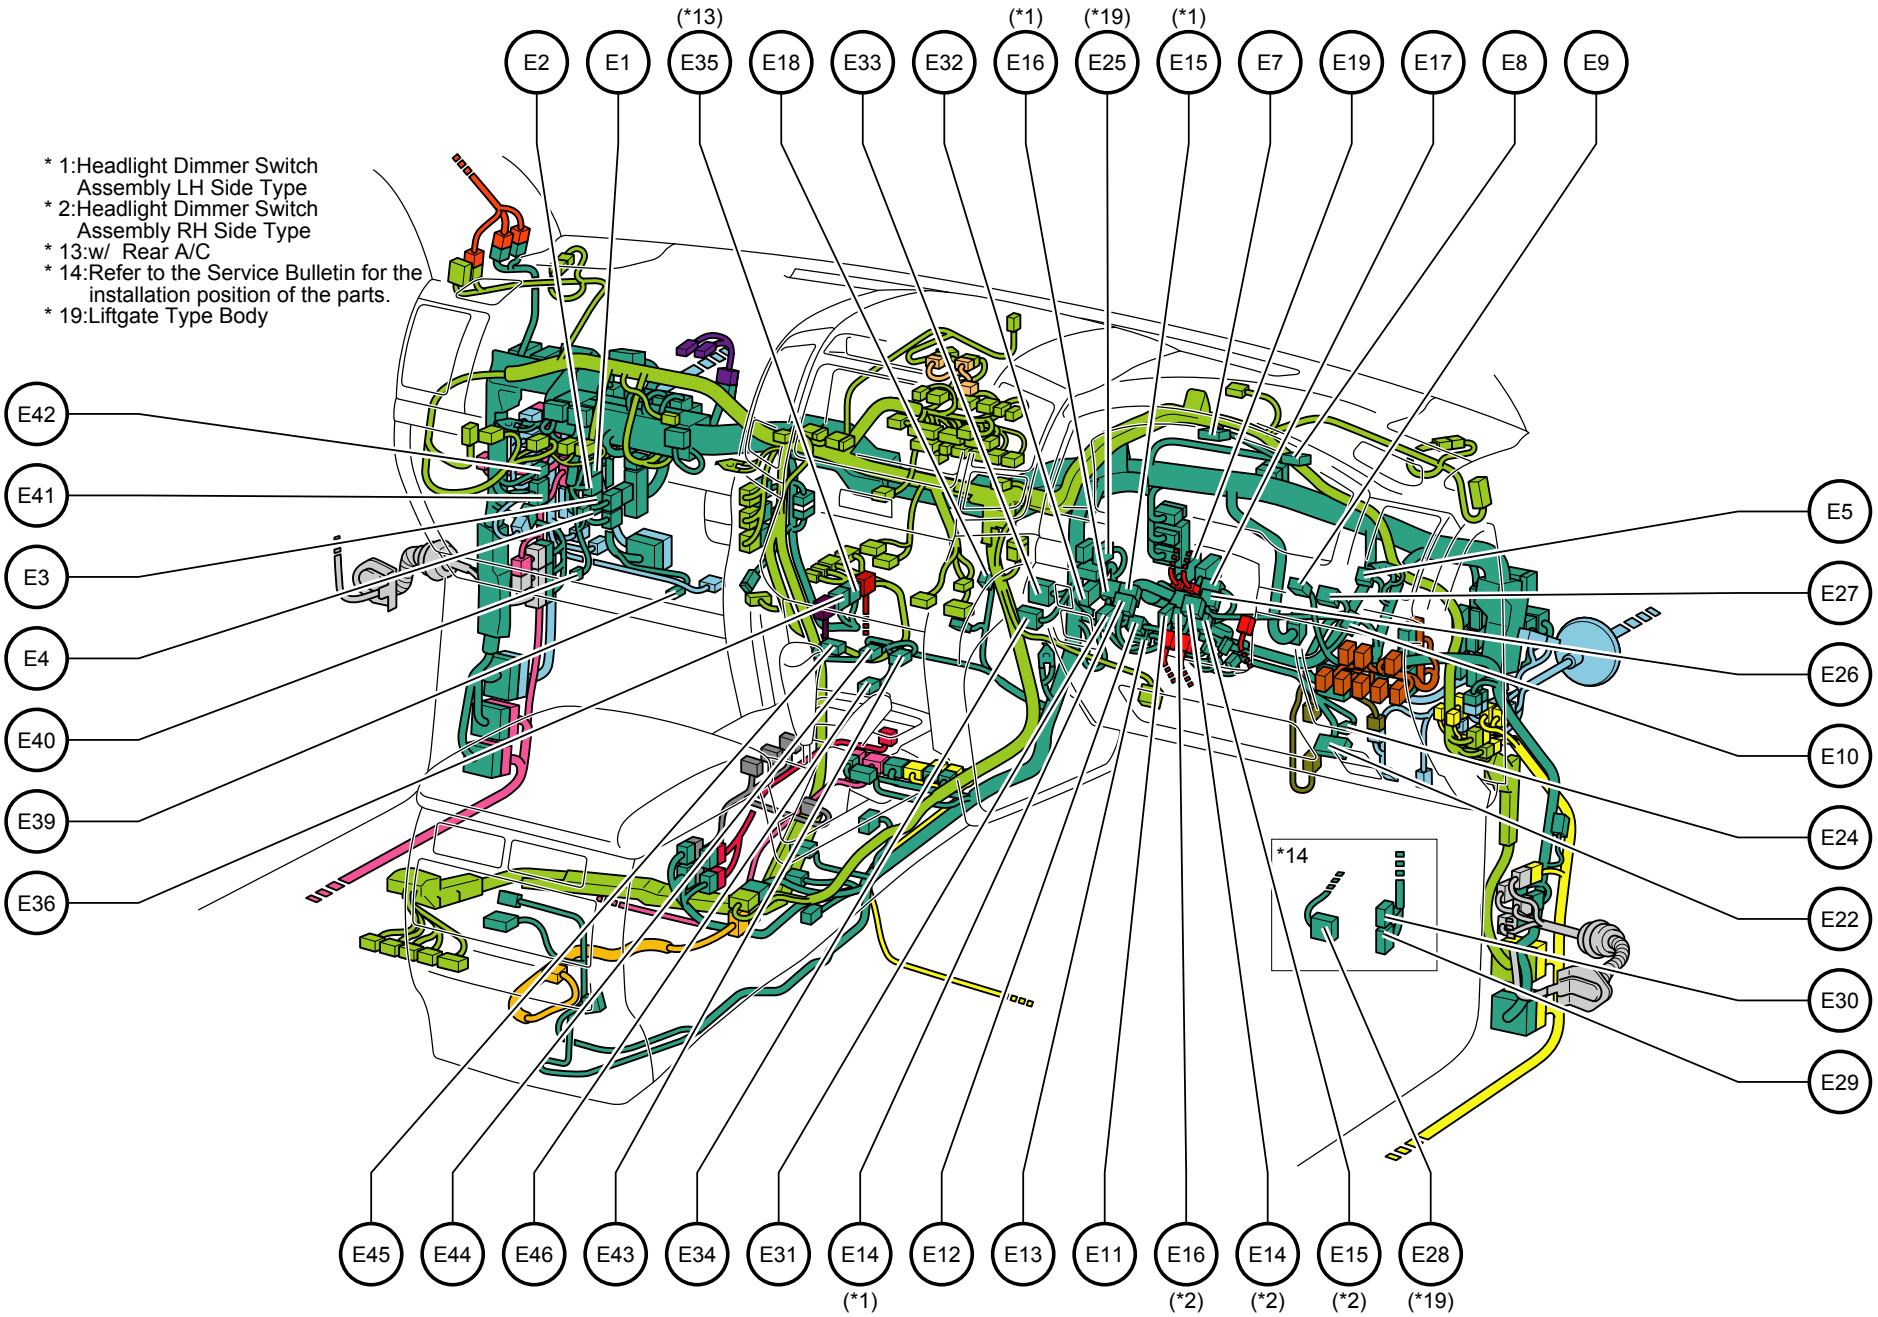

* 1:Headlight Dimmer Switch Assembly LH Side Type
* 2:Headlight Dimmer Switch Assembly RH Side Type
* 13:w/ Rear A/C
* 14:Refer to the Service Bulletin for the installation position of the parts.
* 19:Liftgate Type Body
(*13)
(*1)
(*19)
(*1)
E2
E1
E35
E18
E33
E32
E16
E25
E15
E7
E19
E17
E8
E9
E42
E41
E3
E4
E40
E39
E36
E5
E27
E26
E10
E24
E22
E30
E29
*14
E45
E44
E46
E43
E34
E31
E14
(*1)
E12
E13
E11
E16
(*2)
E14
(*2)
E15
(*2)
E28
(*19)

E 1 Main Body ECU
E 2 Main Body ECU
E 3 Main Body ECU
E 4 Main Body ECU
E 5 Skid Control Buzzer Assembly
E 7 Combination Meter Assembly
E 8 Combination Meter Assembly
E 9 Light Control Rheostat
E 10 No.1 Clearance Warning Buzzer
E 11 Steering Sensor
E 12 Spiral Cable Sub-Assembly
E 13 Spiral Cable Sub-Assembly
E 14 Headlight Dimmer Switch Assembly
E 15 Windshield Wiper Switch Assembly
E 16 Windshield Wiper Switch Assembly
E 17 Power Tilt Motor
E 18 Engine Switch
E 19 Turn Signal Flasher Assembly
E 22 DLC3
E 24 Lower No.1 Instrument Panel Airbag Assembly
E 25 VSC Off Switch
E 26 Steering Lock Actuator Assembly
E 27 Multiplex Tilt and Telescopic ECU
E 28 ID Code Box
E 29 Certification ECU Assembly
E 30 Certification ECU Assembly
E 31 Network Gateway ECU
E 32 Room Temperature Sensor
E 33 Quick Heater Assembly
E 34 Quick Heater Assembly
E 35 A/C Amplifier Assembly
E 36 A/C Amplifier Assembly
E 39 Glove Box Light Assembly
E 40 Lower No.2 Instrument Panel Airbag Assembly
E 41 Seat Belt Control ECU
E 42 Seat Belt Control ECU
E 43 Cigarette Lighter Assembly
E 44 Cigarette Lighter Illumination Assembly
E 45 Ash Receptacle Light Sub-Assembly
E 46 Front Power Outlet Socket Assembly


E 1
White

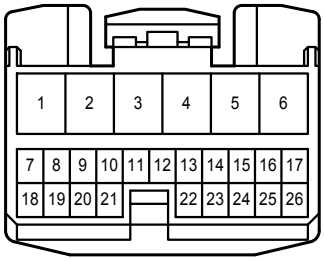


E 2
White

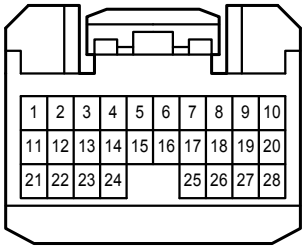


E 3
White

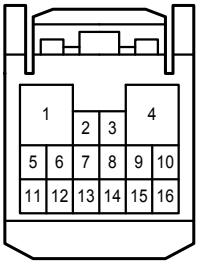


E 4
White

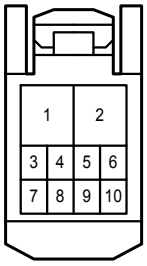


E 5
Blue




E 7
White

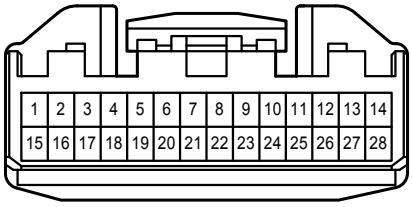


E 8
Black

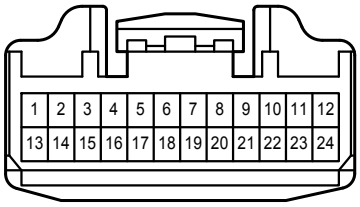


E 9
White

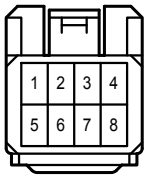

E 10
Black




E 11
Gray

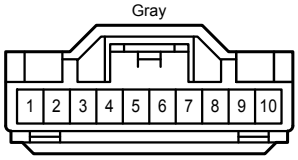


E 12
Black




E 13
Yellow

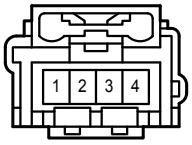


E 14
White

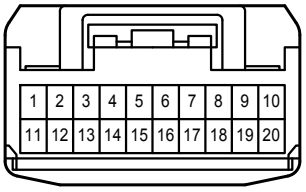

E 15
White

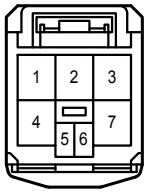


E 16
White

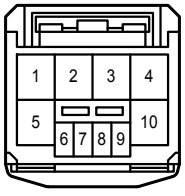


E 17
White




E 18
Black

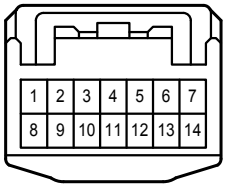


E 19
Black




E 22
White

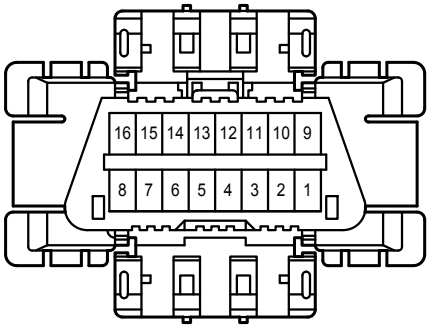


E 24
Black




E 25
Black

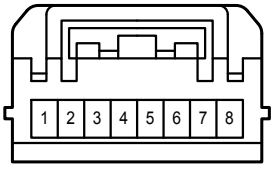


E 26
Black

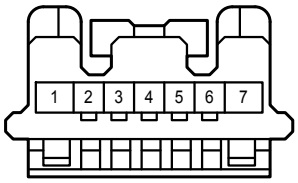


E 27
White

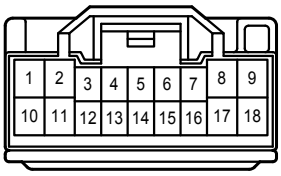


E 28
White

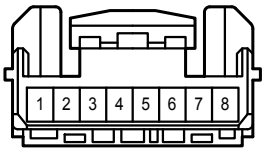


E 29
White

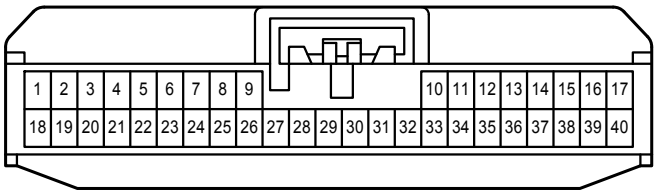


E 30
White

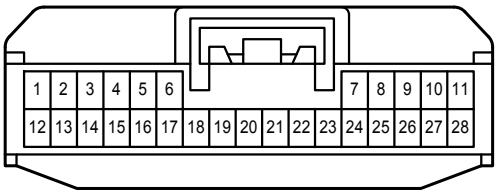


E 31
White

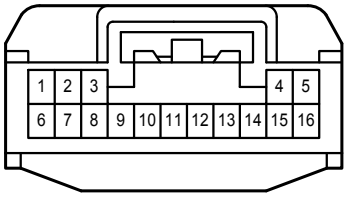


E 32
Black




E 33
White

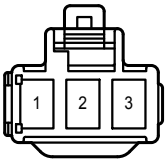


E 34
White

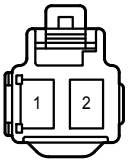

E 35
White

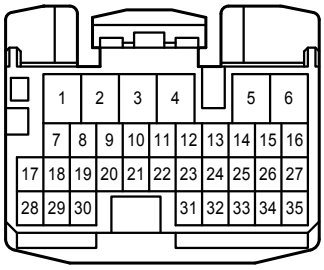


E 36
White

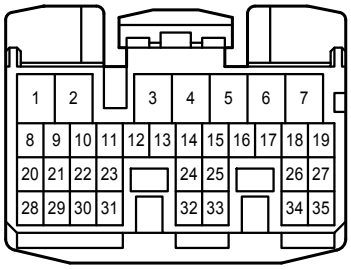


E 39
Black




E 40
Black




E 41
White

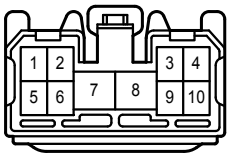

E 42
White

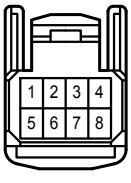

E 43
White




E 44
Gray




E 45
White




E 46
White



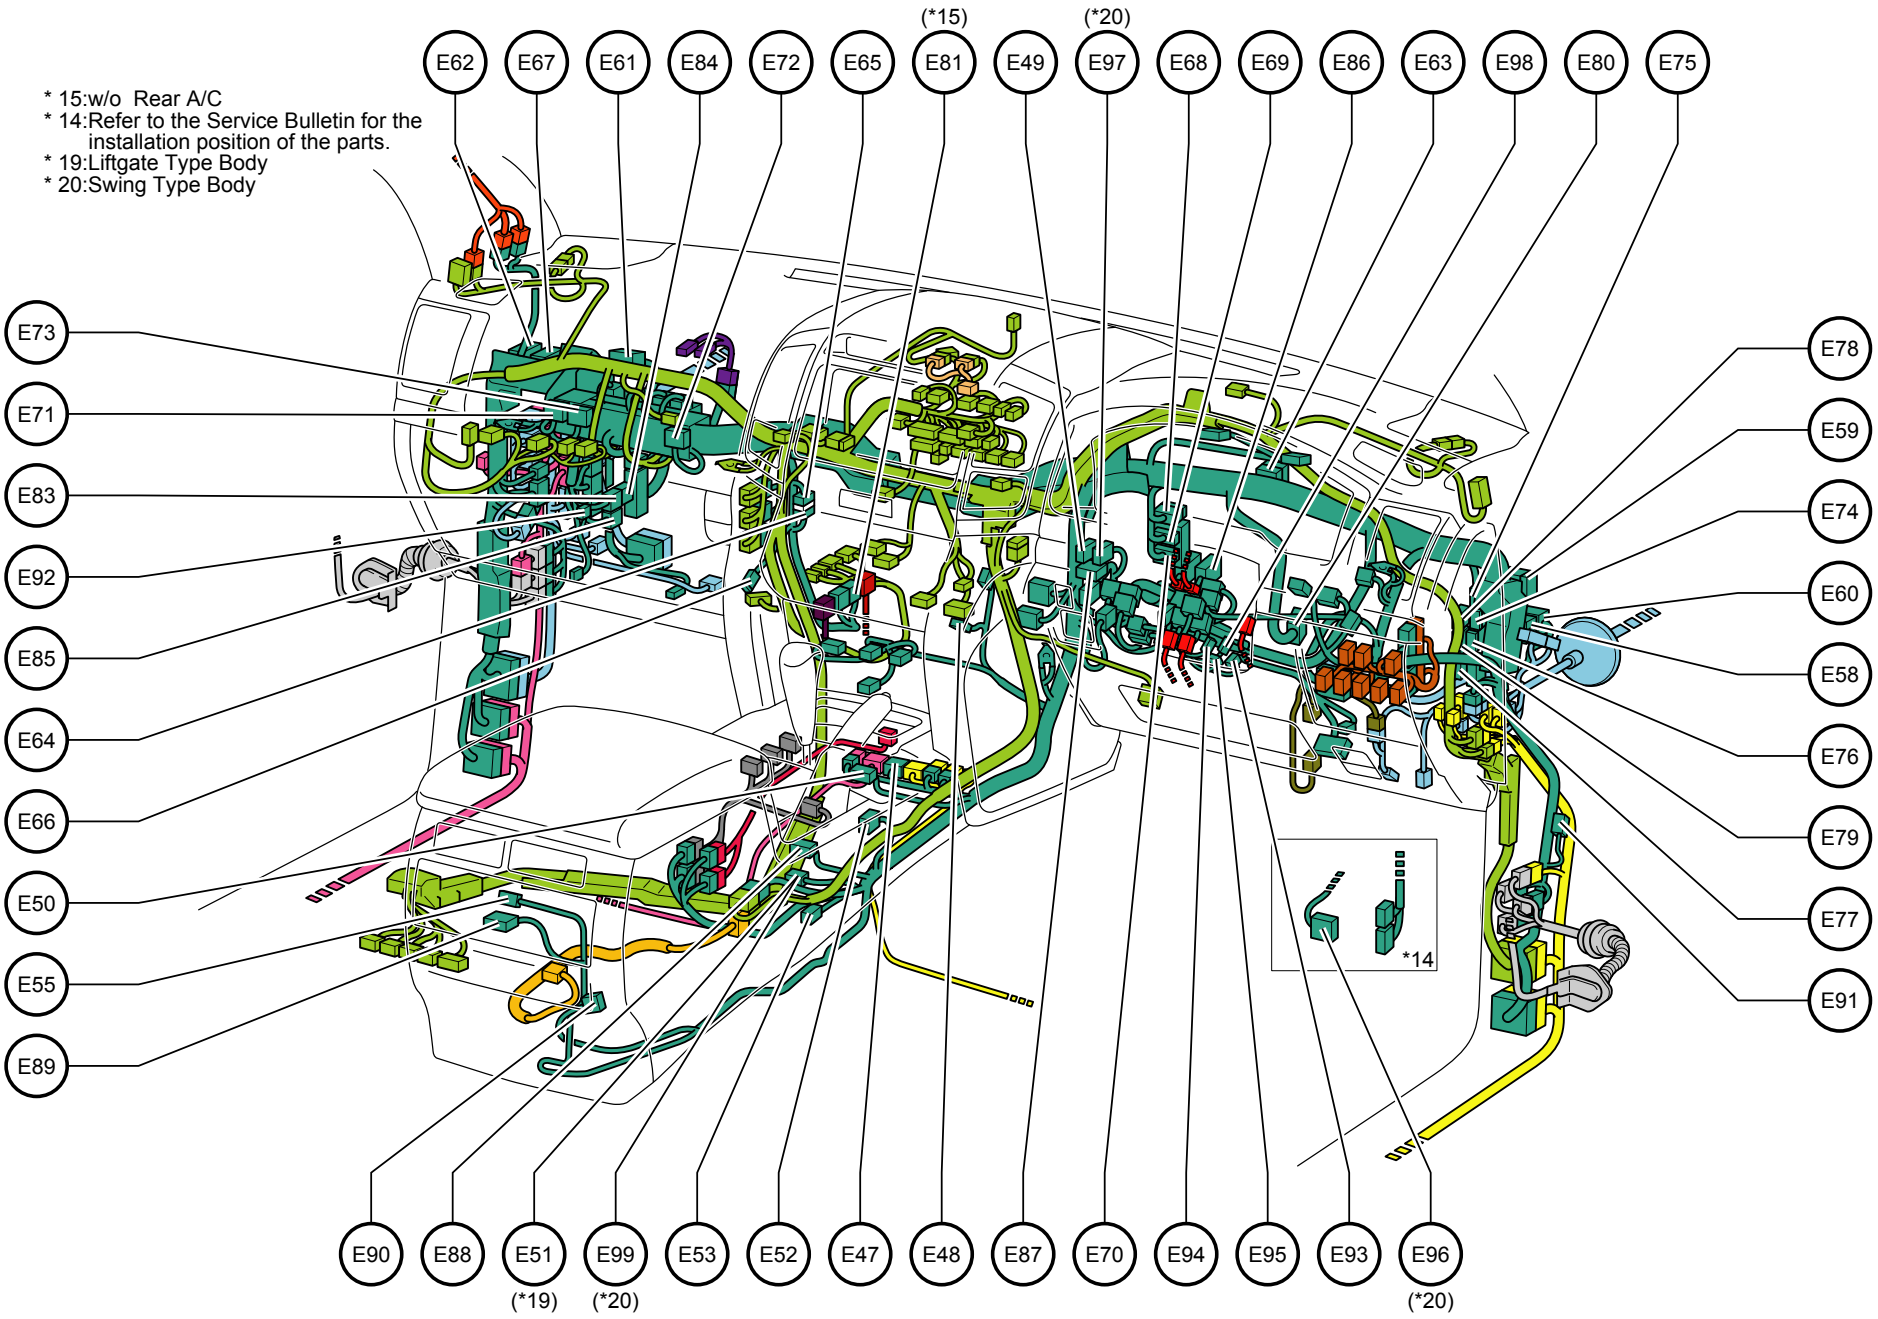

* 15:w/o Rear A/C
* 14:Refer to the Service Bulletin for the installation position of the parts.
* 19:Liftgate Type Body
* 20:Swing Type Body
E62
E67
E61
E84
E72
E65
(*15)
E81
E49
(*20)
E97
E68
E69
E86
E63
E98
E80
E75
E73
E71
E83
E92
E85
E64
E66
E50
E55
E89
E78
E59
E74
E60
E58
E76
E79
E77
E91
*14
E90
E88
E51
(*19)
E99
(*20)
E53
E52
E47
E48
E87
E70
E94
E95
E93
E96
(*20)

E 47 Center Airbag Sensor Assembly
E 48 Transfer Position Switch
E 49 Center Differential Lock Switch
E 50 Yaw Rate Sensor Assembly
E 51 Shift Lock Control ECU Sub-Assembly
E 52 Transmission Control Switch
E 53 Parking Brake Switch Assembly
E 55 No.2 A/C Control Assembly
E 58 Junction Connector
E 59 Junction Connector
E 60 Junction Connector
E 61 Junction Connector
E 62 Junction Connector
E 63 Junction Connector
E 64 Junction Connector
E 65 Junction Connector
E 66 Junction Connector
E 67 Junction Connector
E 68 Junction Connector
E 69 Junction Connector
E 70 Junction Connector
E 71 Junction Connector
E 72 Junction Connector
E 73 Junction Connector
E 74 Junction Connector
E 75 Junction Connector
E 76 Junction Connector
E 77 Steering Control ECU
E 78 Steering Control ECU
E 79 Steering Control ECU
E 80 Steering Actuator Assembly
E 81 A/C Amplifier Assembly
E 83 Windshield Wiper ECU , Short Connector
E 84 Short Connector
E 85 Windshield Wiper ECU
E 86 Double Lock Door Control Relay Assembly
E 87 Differential Lock Switch
E 88 Deceleration Sensor
E 89 Heater Blower Switch
E 90 Cooling Box Assembly
E 91 Option Connector (Parking Assist-Sensor)
E 92 Option Connector (Bus Buffer)
E 93 Ignition or Starter Switch Assembly
E 94 Un-Lock Warning Switch Assembly
E 95 Transponder Key Amplifier
E 96 Transponder Key ECU Assembly
E 97 Idle Up Switch
E 98 Key Inter Lock Solenoid
E 99 Shift Lock Control ECU Sub-Assembly


E 47
Yellow

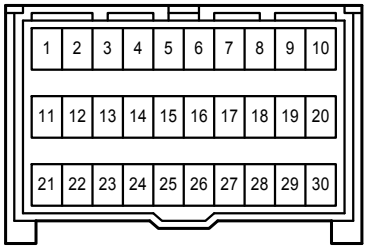


E 48
Black

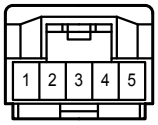

E 49
White

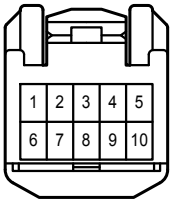


E 50
Black

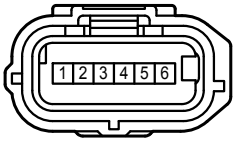

E 51
White



E 52
White

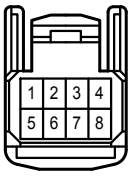


E 53
White




E 55
White




E 58

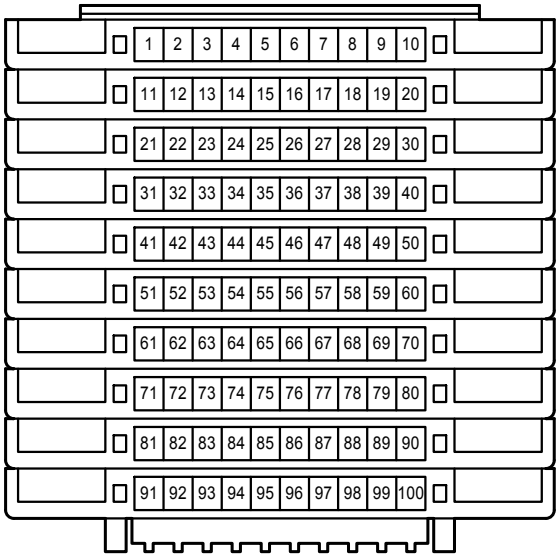


E 59

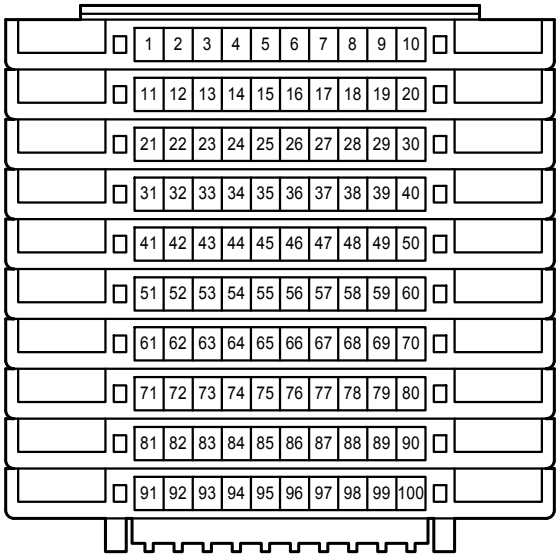


E 60

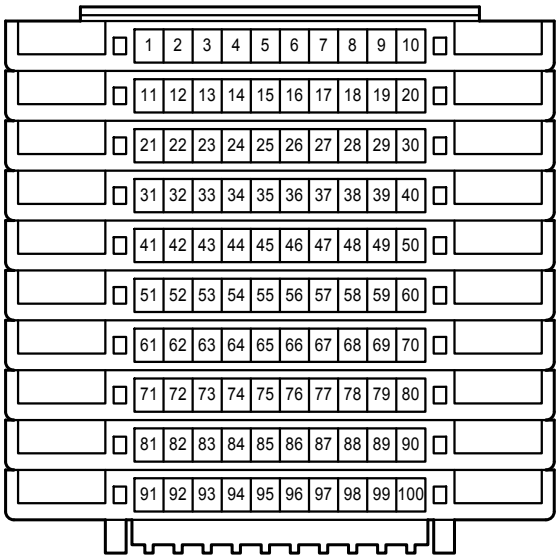


E 61

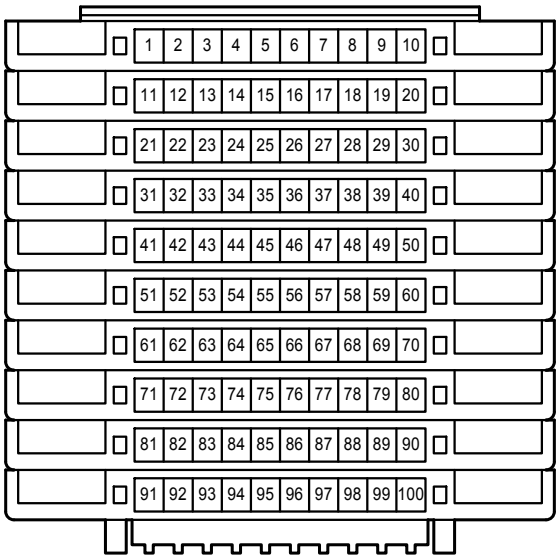


E 62
White

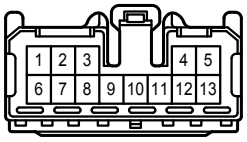


E 63
Gray




E 64
Black

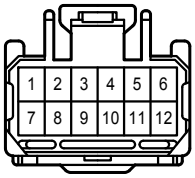


E 65
Black

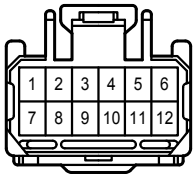


E 66
White

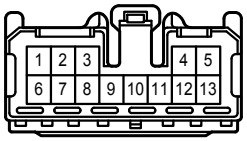


E 67
White

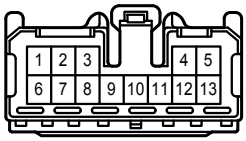


E 68
Gray

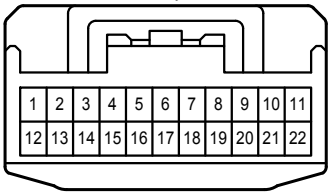


E 69
Gray

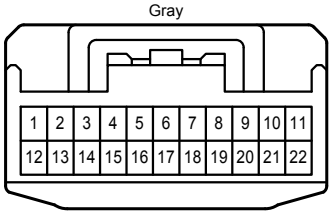


E 70
Gray

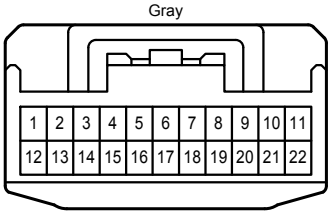


E 71
Gray

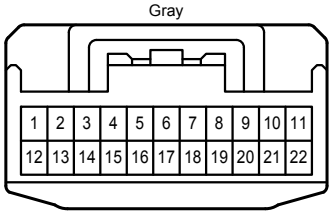


E 72
Gray

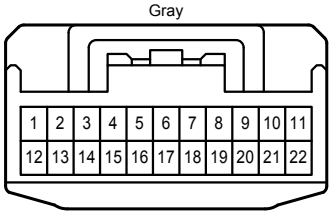


E 73
Gray

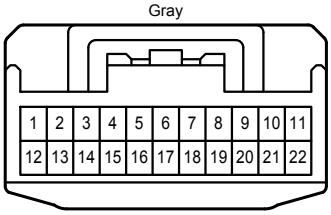


E 74
Gray

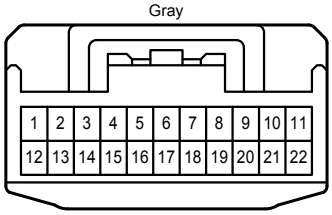


E 75
Gray

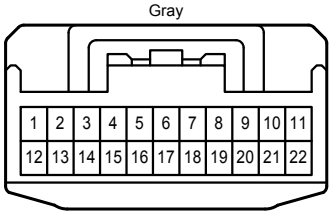


E 76
Gray

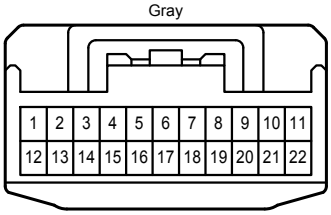


E 77
White

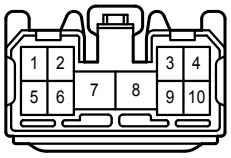


E 78
White

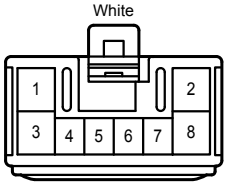


E 79
White

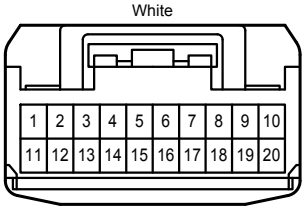


E 80
White

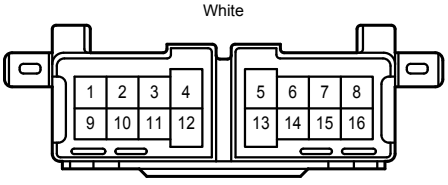

E 81
White

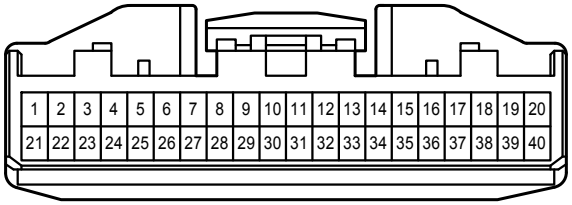

E 83
Blue

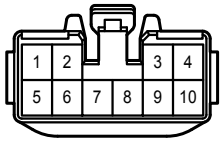


E 84
Blue



E 85
White




E 86
White




E 87
White




E 88
Black

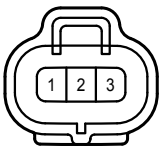


E 89
Black

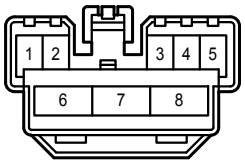


E 90
White




E 91
White

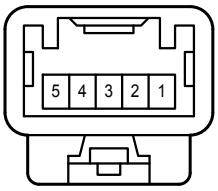

E 92
White

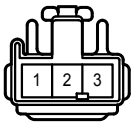


E 93
White

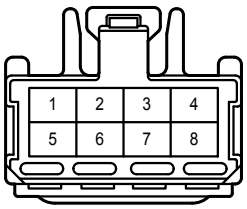


E 94
White




E 95
Black

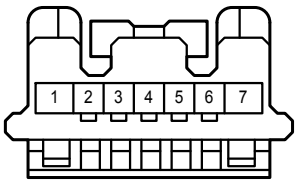


E 96
Black

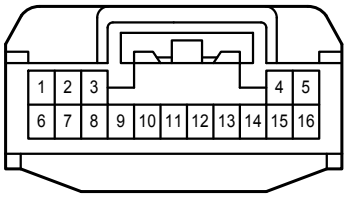


E 97
Black

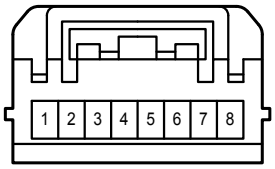


E 98
Black



E 99
White

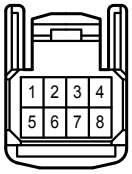

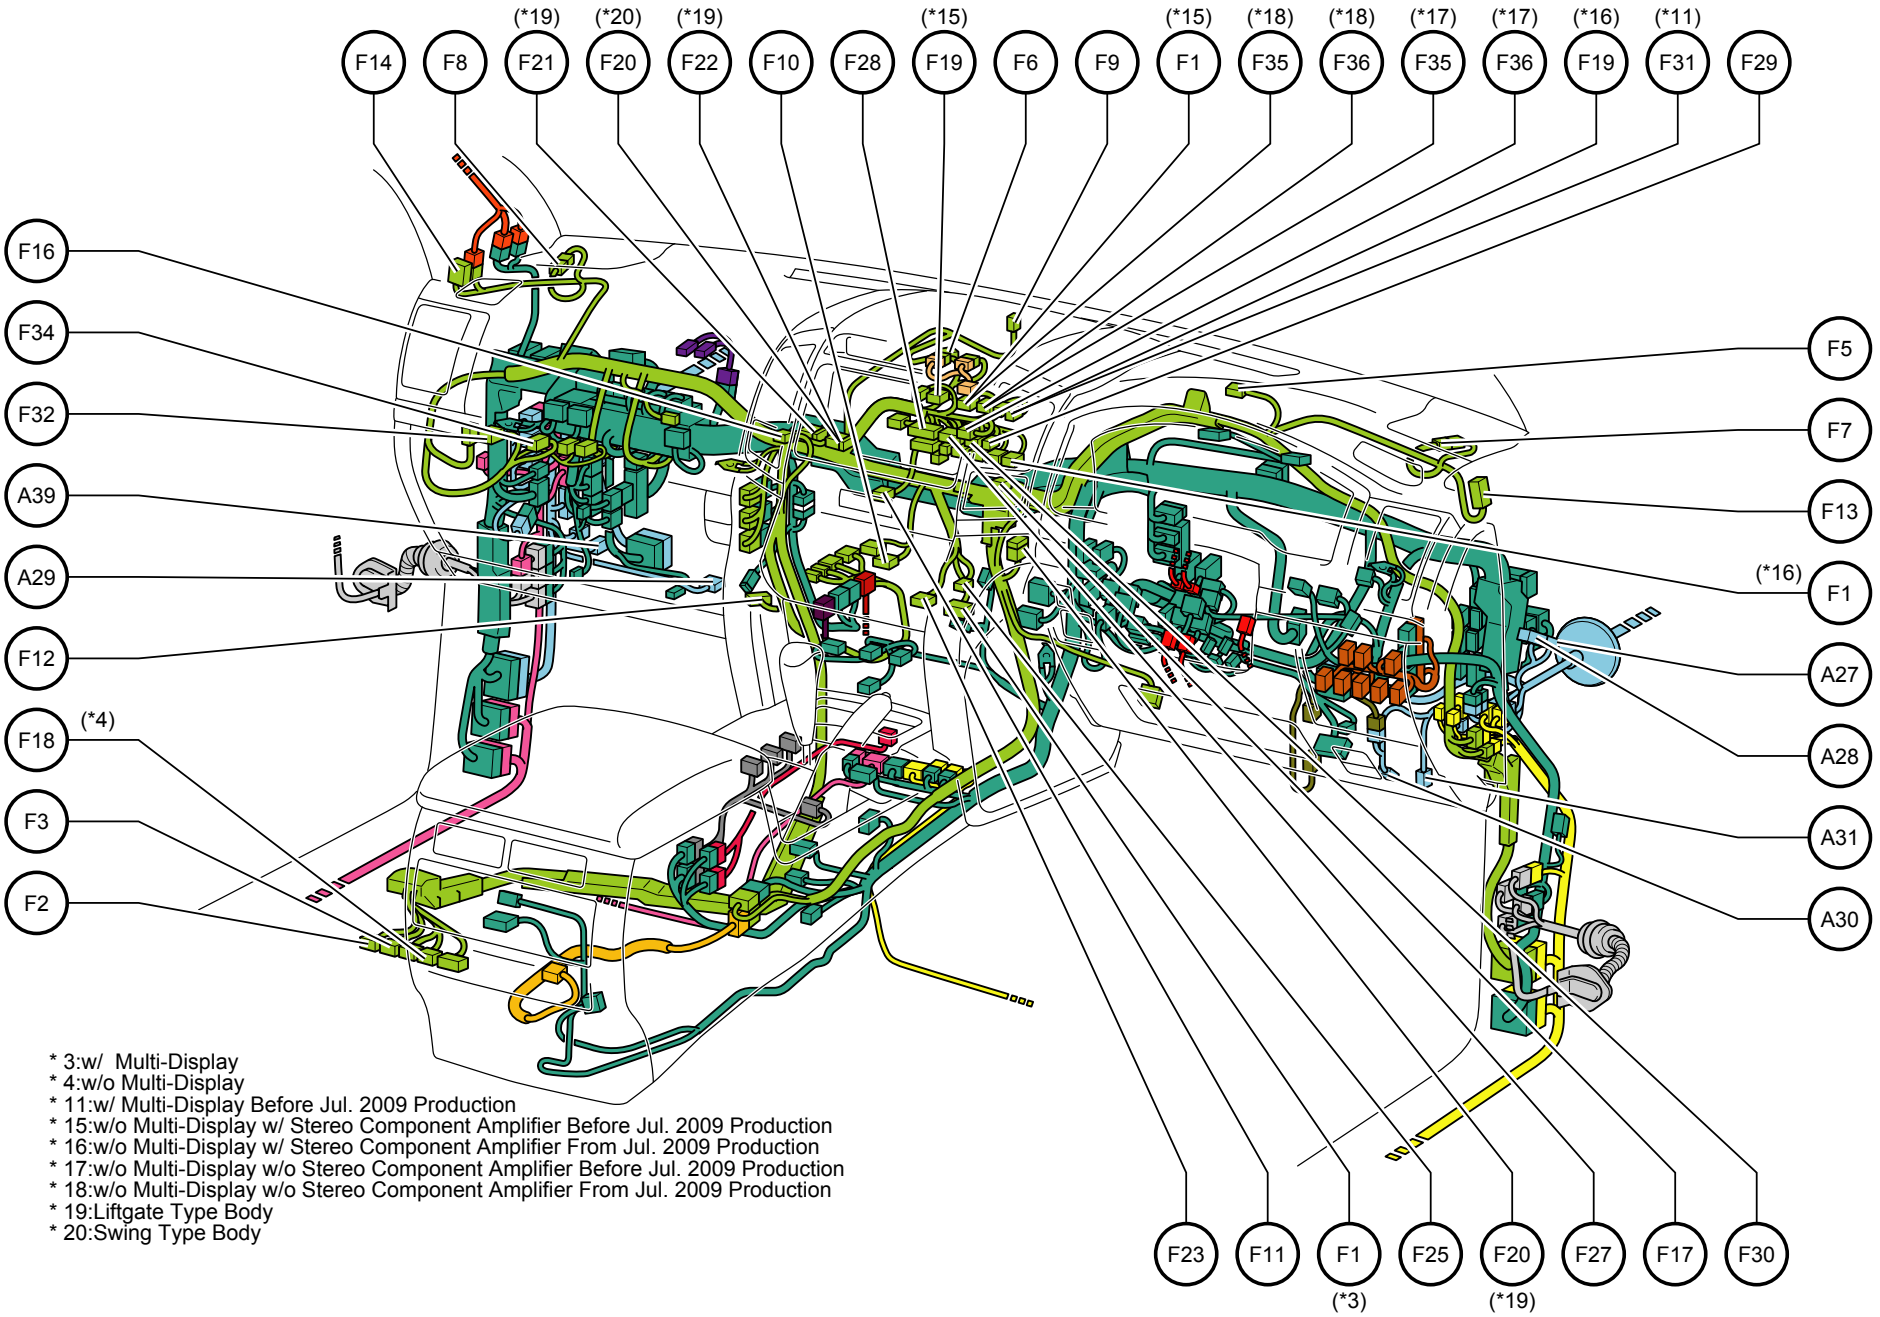


* 3:w/ Multi-Display
* 4:w/o Multi-Display
* 11:w/ Multi-Display Before Jul. 2009 Production
* 15:w/o Multi-Display w/ Stereo Component Amplifier Before Jul. 2009 Production
* 16:w/o Multi-Display w/ Stereo Component Amplifier From Jul. 2009 Production
* 17:w/o Multi-Display w/o Stereo Component Amplifier Before Jul. 2009 Production
* 18:w/o Multi-Display w/o Stereo Component Amplifier From Jul. 2009 Production
* 19:Liftgate Type Body
* 20:Swing Type Body


A 27 Four Wheel Drive Control ECU
A 28 Four Wheel Drive Control ECU
A 29 Front Blower with Fan Motor Sub-Assembly
A 30 Stop Light Switch Assembly
A 31 Accelerator Pedal Sensor Assembly
A 39 Stop Light Control Relay Assembly

F 1 Radio Receiver Assembly
F 2 Stereo Component Amplifier Assembly
F 3 Stereo Component Amplifier Assembly
F 5 Amplifier Antenna Assembly
F 6 Front No.4 Speaker Assembly
F 7 Front No.2 Speaker Assembly RH , Short Connector
F 8 Front No.2 Speaker Assembly LH , Short Connector
F 9 Automatic Light Control Sensor
F 10 A/C Control Assembly
F 11 Hazard Warning Signal Switch Assembly
F 12 Clearance Warning ECU Assembly
F 12 Clearance Warning ECU Assembly
F 13 Front No.3 Speaker Assembly RH
F 14 Front No.3 Speaker Assembly LH
F 16 Temperature Control Switch Assembly LH
F 17 Temperature Control Switch Assembly RH
F 18 Stereo Component Amplifier Assembly
F 19 Radio Receiver Assembly
F 20 Junction Connector
F 21 Junction Connector
F 22 Junction Connector
F 23 Radio Receiver Assembly
F 25 Radio Receiver Assembly
F 27 Multi-Display
F 28 Multi-Display
F 29 Multi-Display
F 30 Multi-Display
F 31 Multi-Display
F 32 Navigation ECU
F 34 Navigation ECU
F 35 Radio Receiver Assembly
F 36 Radio Receiver Assembly


A 27
Black

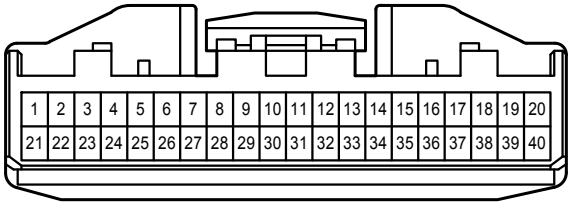


A 28
Black

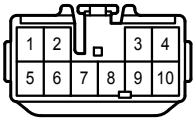


A 29
White

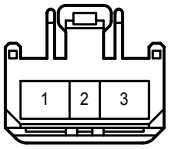


A 30
Gray




A 31
Black

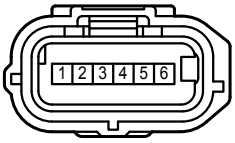

A 39
Black




F 1
White

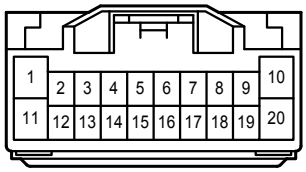

F 2
White




F 3
White

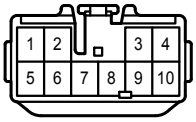


F 5
White




F 6
White




F 7
White




F 8
White




F 9
Black

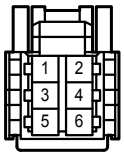


F 10
White

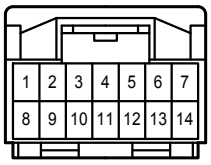

F 11
Gray

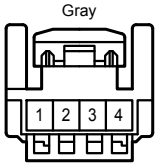


F 12
White

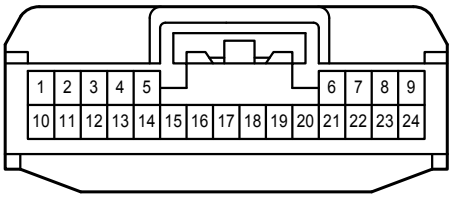

(Before Aug. 2007 Production)

F 12
Gray

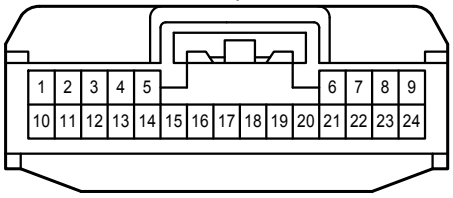

(From Aug. 2007 Production)


F 13
White




F 14
White




F 16
White




F 17
White




F 18
White

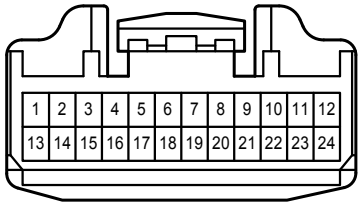


F 19
White

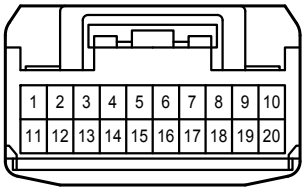


F 20
Gray

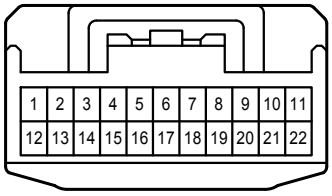


F 21
Black

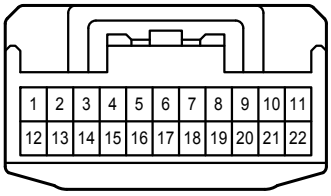


F 22
White

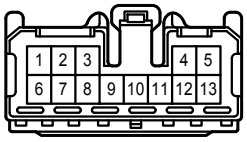


F 23
White

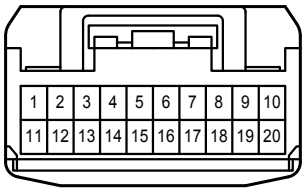


F 25
White

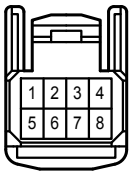


F 27
White

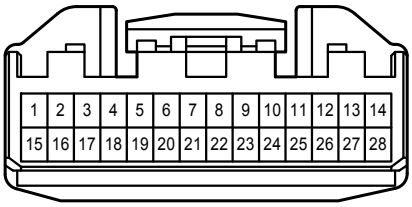


F 28
White

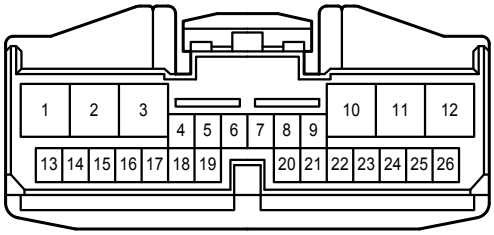


F 29
Blue

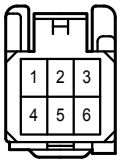


F 30
White

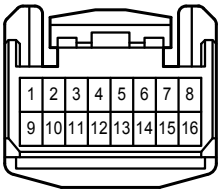


F 31
White

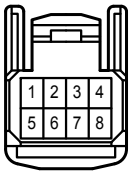


F 32
White

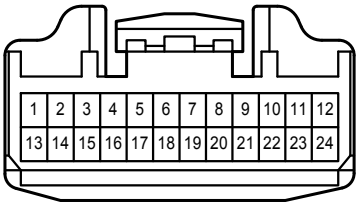

F 34
White

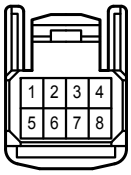


F 35
White

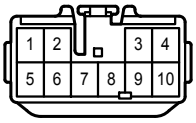


F 36
White

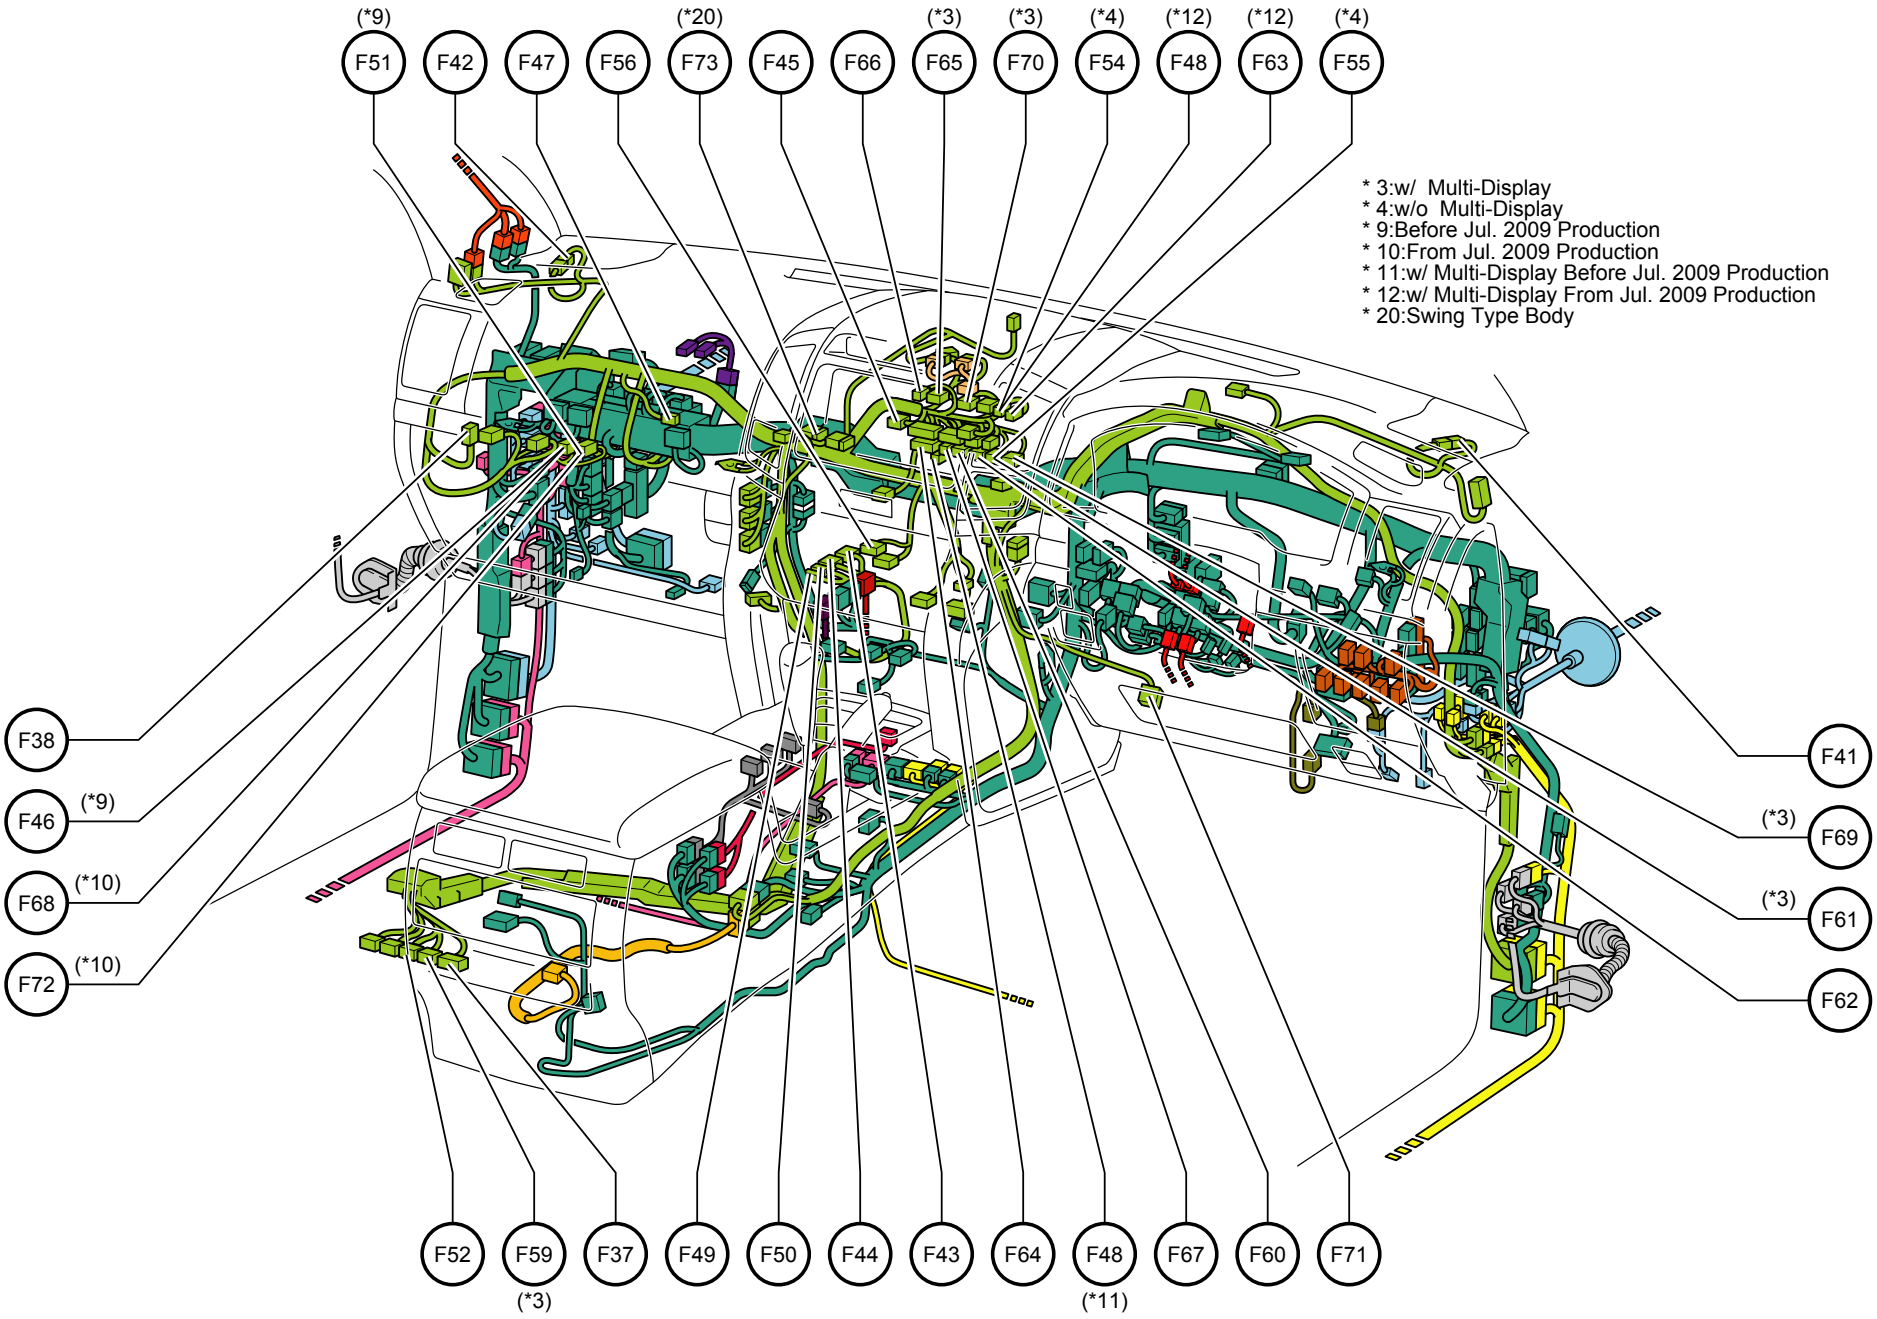



(*9)
F51
F42
F47
F56
(*20)
F73
F45
F66
(*3)
F65
(*3)
F70
(*4)
F54
(*12)
F48
(*12)
F63
(*4)
F55
* 3:w/ Multi-Display
* 4:w/o Multi-Display
* 9:Before Jul. 2009 Production
* 10:From Jul. 2009 Production
* 11:w/ Multi-Display Before Jul. 2009 Production
* 12:w/ Multi-Display From Jul. 2009 Production
* 20:Swing Type Body
F38
F46
(*9)
F68
(*10)
F72
(*10)
F41
(*3)
F69
(*3)
F61
F62
F52
F59
(*3)
F37
F49
F50
F44
F43
F64
F48
(*11)
F67
F60
F71

F 37 Stereo Component Amplifier Assembly
F 38 Airbag Cut Off Switch Cylinder Sub-Assembly
F 41 Short Connector
F 42 Short Connector
F 43 Parking Assist ECU
F 44 Parking Assist ECU
F 45 Option Connector (Back Guide Monitor)
F 46 Navigation ECU
F 47 Navigation Antenna Assembly
F 48 Multi-Display
F 49 Parking Assist ECU
F 50 Parking Assist ECU
F 51 Navigation ECU
F 52 Stereo Component Amplifier Assembly
F 54 Radio Receiver Assembly
F 55 Radio Receiver Assembly
F 56 Radio Receiver Assembly
F 59 Stereo Component Amplifier Assembly
F 60 Display & Navigation Module Display
F 61 Display & Navigation Module Display
F 62 Display & Navigation Module Display
F 63 Display & Navigation Module Display
F 64 Display & Navigation Module Display
F 65 Display & Navigation Module Display
F 66 Display & Navigation Module Display
F 67 Display & Navigation Module Display
F 68 Multi-Media Module Navigation Assembly
F 69 Display & Navigation Module Display
F 70 Display & Navigation Module Display
F 71 IEEE Connector
F 72 IEEE Connector
F 73 Junction Connector


F 37
White

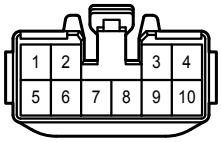


F 38
White




F 41
White




F 42
White




F 43
White

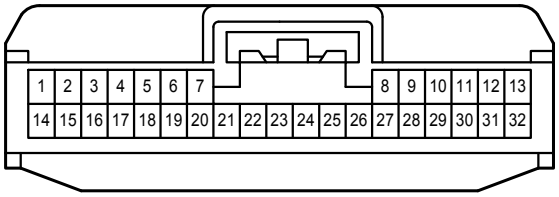

F 44
White

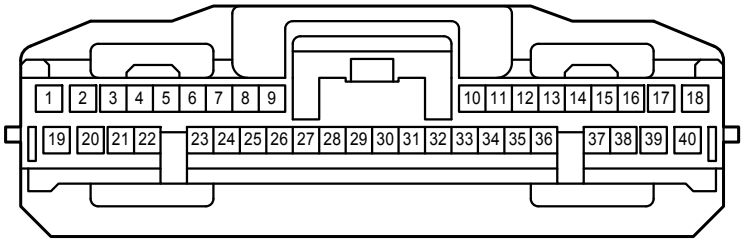

F 45
White



F 46
Gray



F 47
Gray



F 48
Blue



F 49
White




F 50
Blue




F 51
White



F 52
White




F 54
White

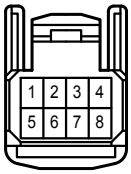

F 55
White



F 56
White

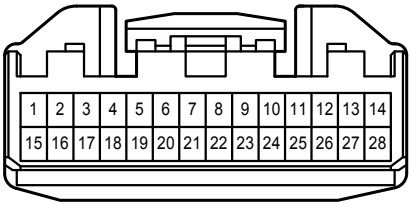


F 59
White




F 60
White




F 61
White

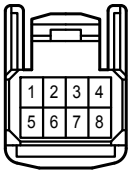


F 62
Blue




F 63
White

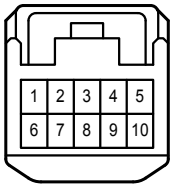


F 64
White

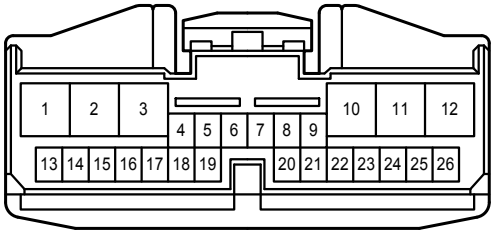


F 65
Black

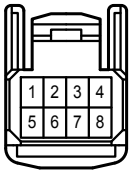


F 66
White

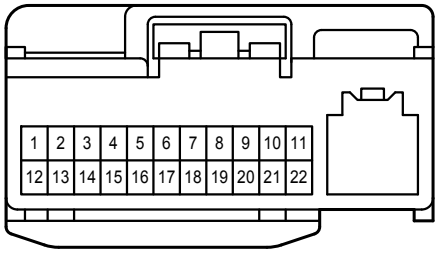

F 67
White



F 68
White

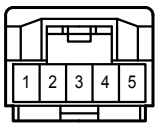


F 69
Brown



F 70
Gray




F 71
Gray

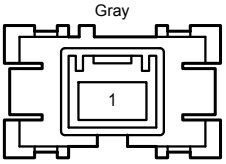


F 72
Gray



F 73
Blue

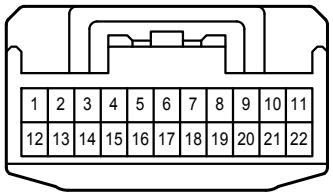

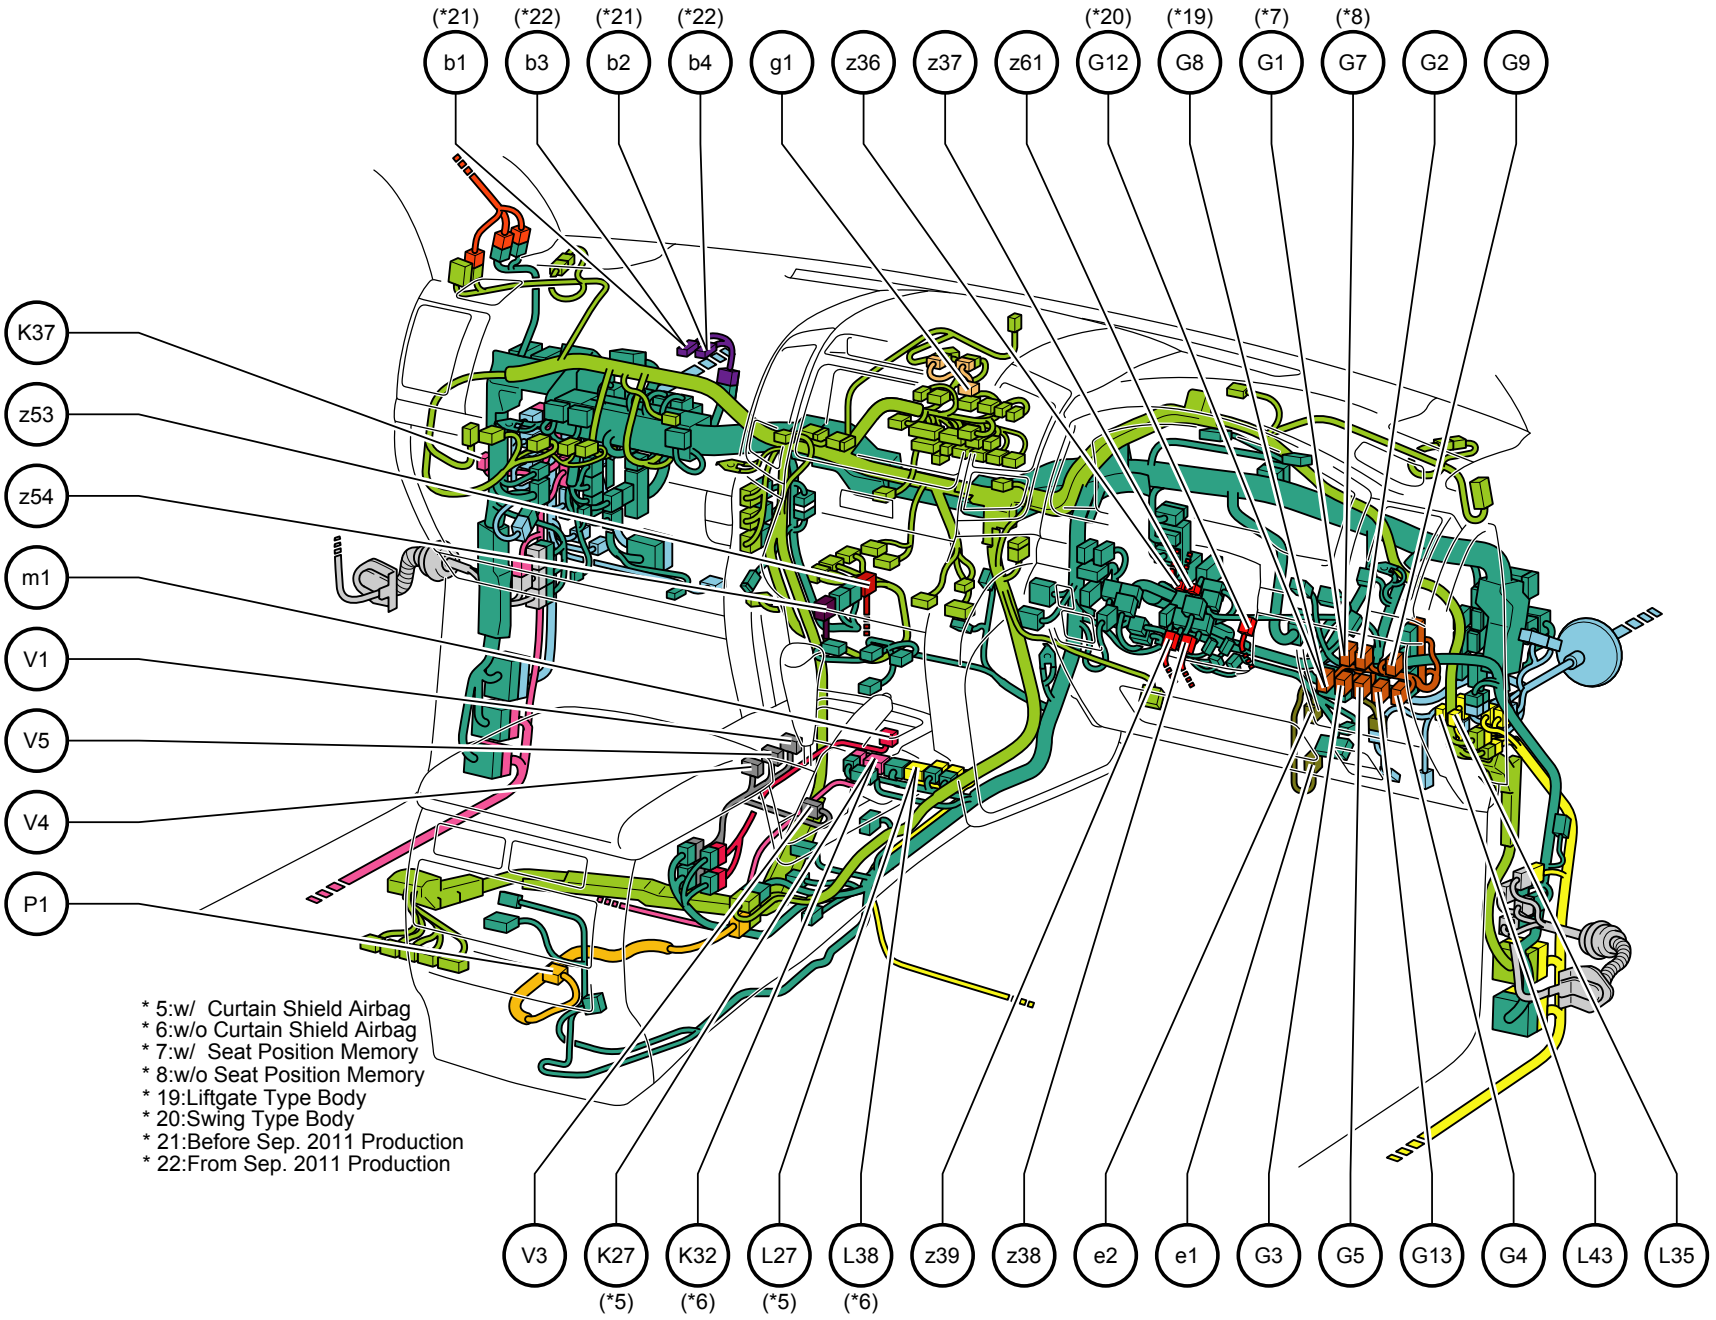
(*21)
b1
(*22)
b3
(*21)
b2
(*22)
b4
g1
z36
z37
z61
(*20)
G12
(*19)
G8
(*7)
G1
(*8)
G7
G2
G9
K37
z53
z54
m1
V1
V5
V4
P1
* 5:w/ Curtain Shield Airbag
* 6:w/o Curtain Shield Airbag
* 7:w/ Seat Position Memory
* 8:w/o Seat Position Memory
* 19:Liftgate Type Body
* 20:Swing Type Body
* 21:Before Sep. 2011 Production
* 22:From Sep. 2011 Production
V3
K27
(*5)
K32
(*6)
L27
(*5)
L38
(*6)
z39
z38
e2
e1
G3
G5
G13
G4
L43
L35

G 1 Outer Mirror Switch Assembly
G 2 Outer Mirror Switch Assembly
G 3 Curtain Airbag Cutoff Switch
G 4 Headlight Cleaner Switch Assembly
G 5 Back Sonar or Clearance Sonar Switch Assembly
G 7 Outer Mirror Switch Assembly
G 8 Idle Up Switch
G 9 Headlight Leveling Switch
G 12 Center Differential Lock Switch
G 13 VSC Off Switch

K 27 Center Airbag Sensor Assembly
K 32 Center Airbag Sensor Assembly
K 37 Acceleration Sensor LH

L 27 Center Airbag Sensor Assembly
L 35 Acceleration Sensor RH
L 38 Center Airbag Sensor Assembly
L 43 Option Connector (Parking Assist-Sensor)

P 1 Headphone Terminal

V 1 Seat Heater Switch
V 3 Front Indoor Electrical Key Oscillator
V 4 Suspension Control Switch
V 5 Suspension Control Switch

b 1 Front Passenger Side Squib Circuit
b 2 Front Passenger Side Squib Circuit
b 3 Front Passenger Side Squib Circuit
b 4 Front Passenger Side Squib Circuit


e 1 Clutch Start Switch Assembly
e 2 Clutch Switch Assembly

g 1 Clock Assembly


m 1 No.1 Stereo Jack Adapter Assembly

z 36 Spiral Cable Sub-Assembly , Steering Pad Switch
z 37 Cruise Control Main Switch , Spiral Cable Sub-Assembly
z 38 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
z 39 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z 53 A/C Amplifier Assembly , A/C Blower Assembly
z 54 A/C Amplifier Assembly , A/C Blower Assembly
z 61 Cruise Control Main Switch , Spiral Cable Sub-Assembly


G 1
Black

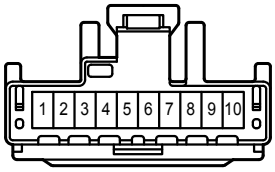


G 2
Black

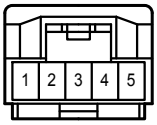


G 3
Gray

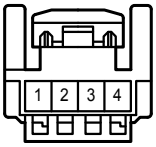


G 4
Black

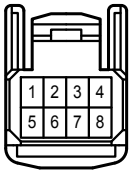


G 5
Black

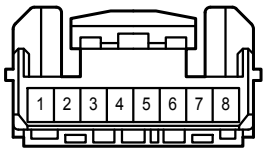


G 7
White

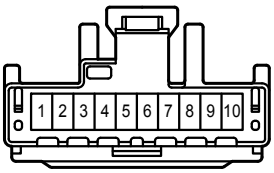


G 8
Black

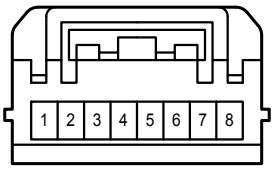


G 9
White




G 12
White

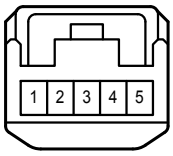


G 13
Black

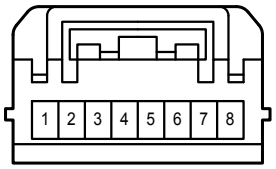


K 27
Yellow

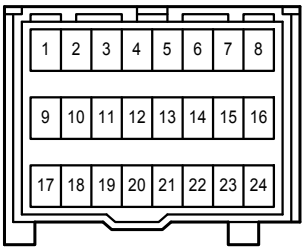


K 32
Yellow

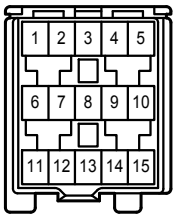


K 37
Black

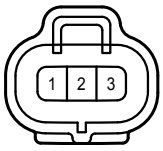


L 27
Yellow

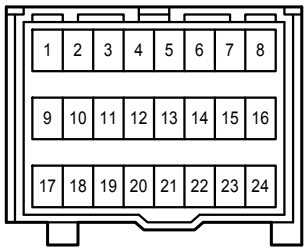


L 35
Black

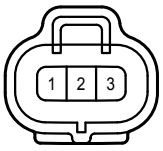


L 38
Yellow

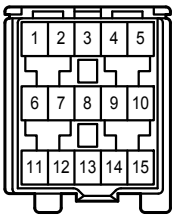


L 43
White

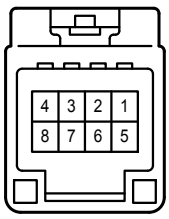


P 1
White

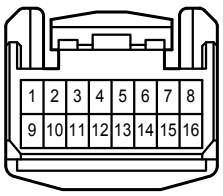


V 1
White

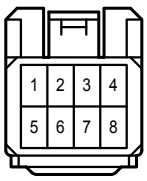


V 3
White

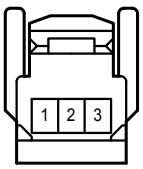


V 4
White

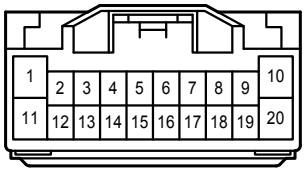


V 5
Gray

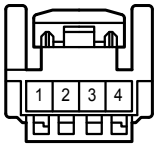


b 1
Orange




b 2
Black




b 3
Orange




b 4
Black



e 1
Black




e 2
White




g 1
White




m 1
Black

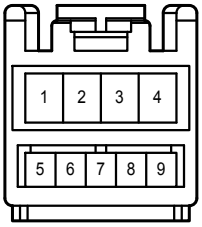


z 36
White

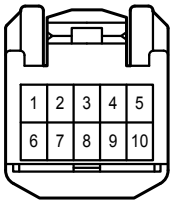


z 37
White




z 38
Black




z 39
Orange




z 53
White

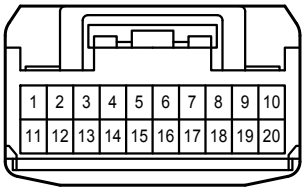


z 54
White

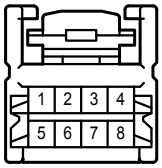


z 61
White

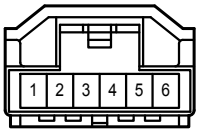


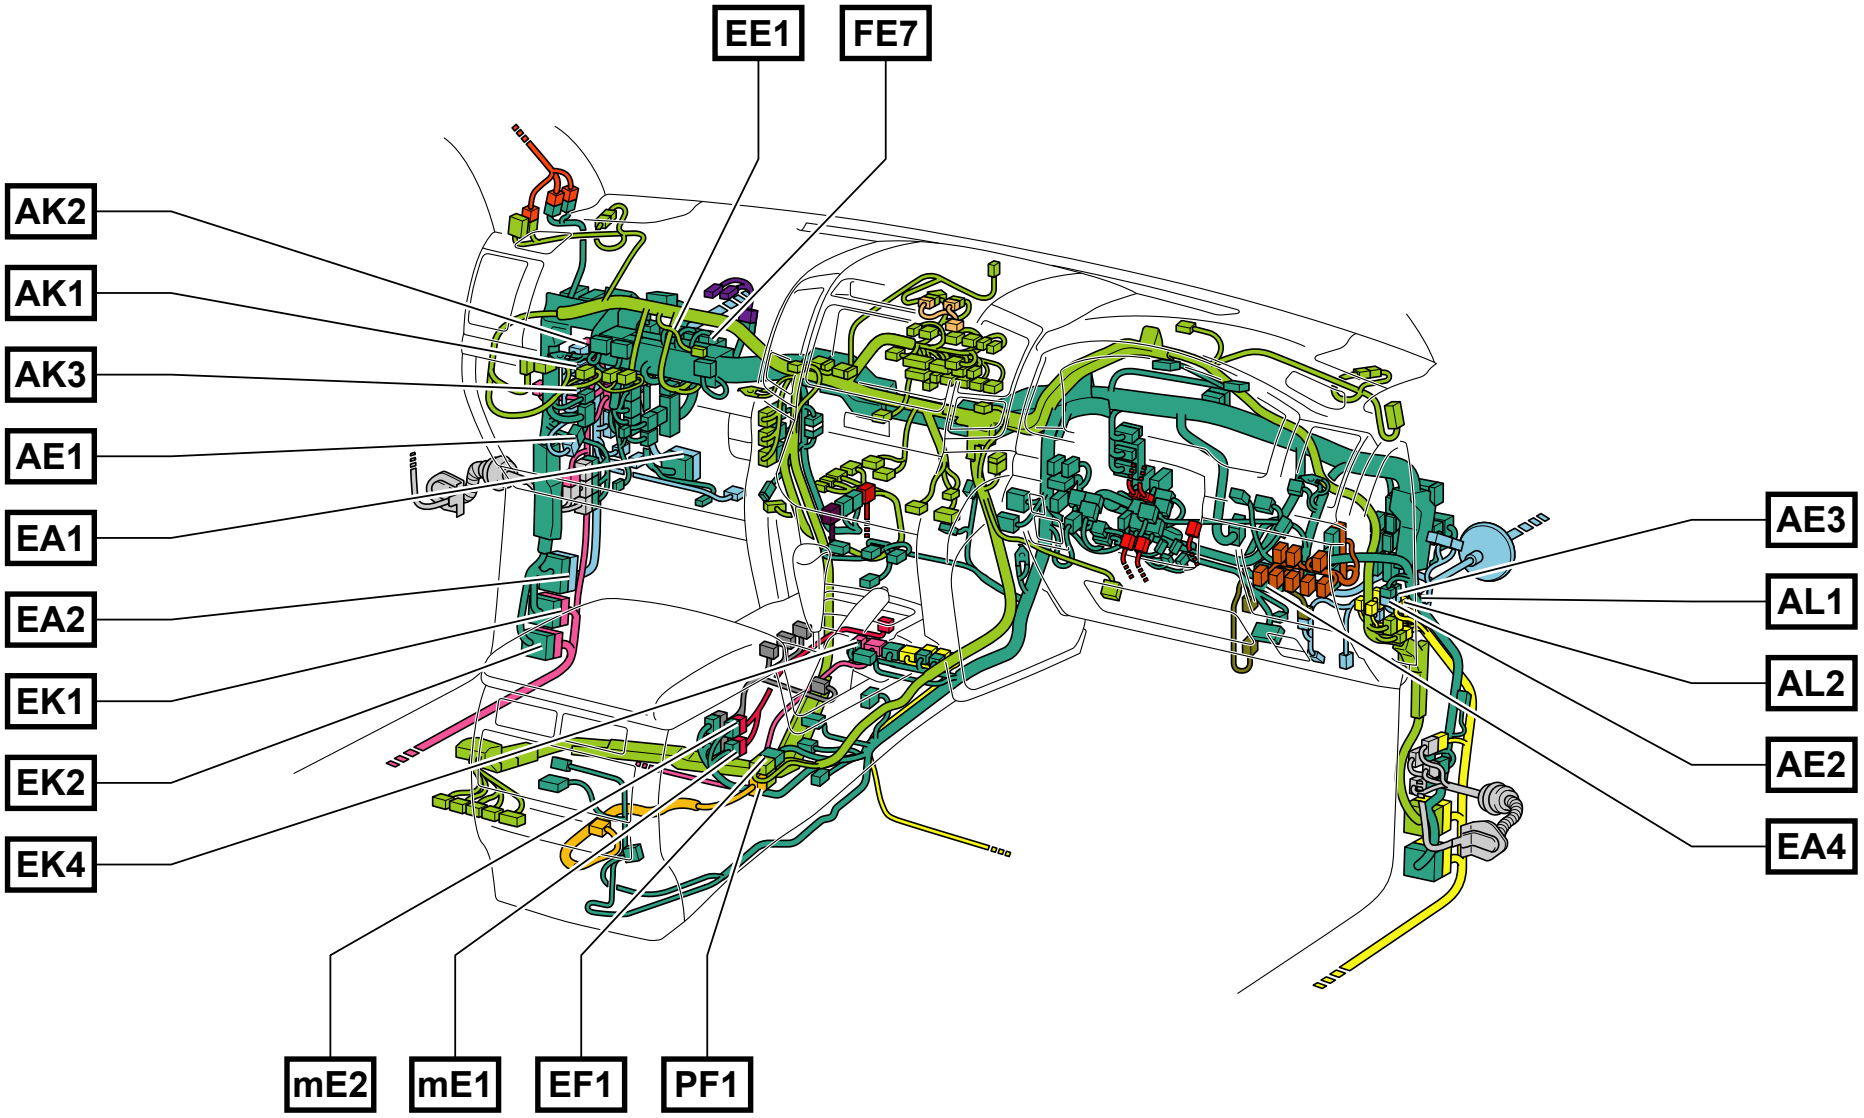
EE1
FE7
AK2
AK1
AK3
AE1
EA1
EA2
EK1
EK2
EK4
AE3
AL1
AL2
AE2
EA4
mE2
mE1
EF1
PF1


AE1
Yellow

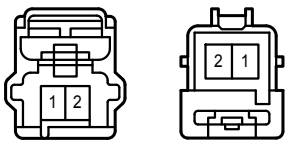


AE2
Yellow

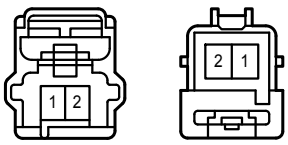


AE3
Gray

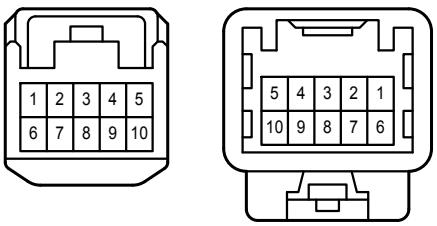


AK1
Blue

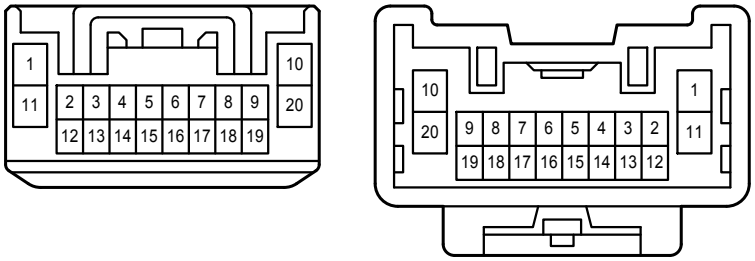


AK2
Gray

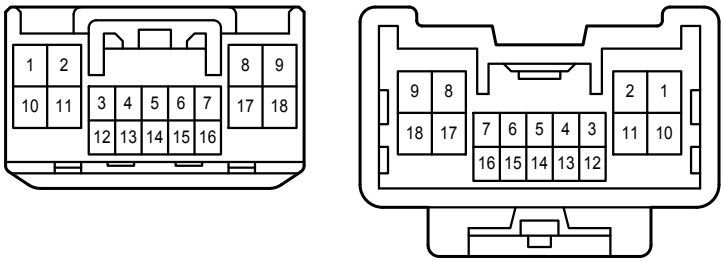


AK3
White

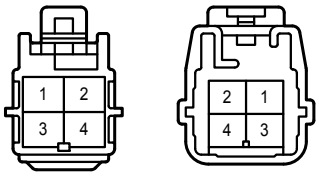


AL1
White

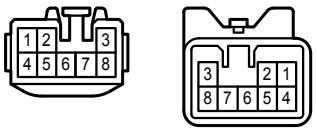


AL2
White

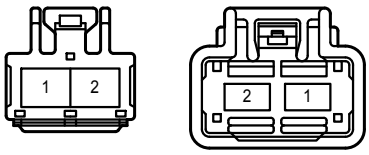


EA1
White

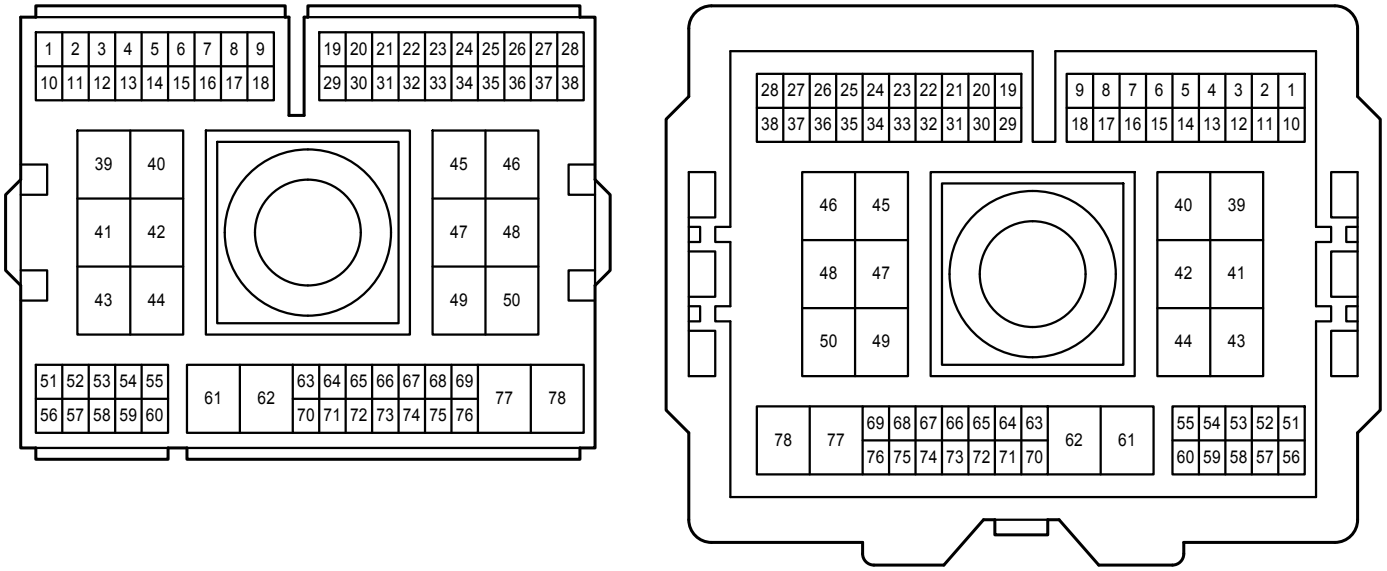



EA2
White
Gray

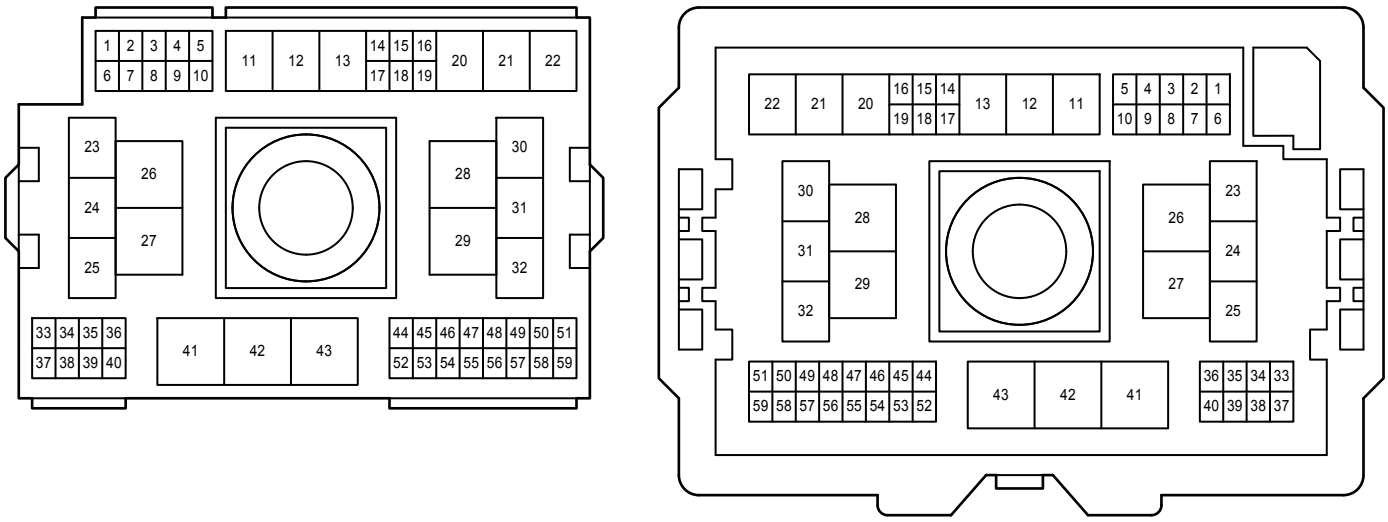



EA4
White

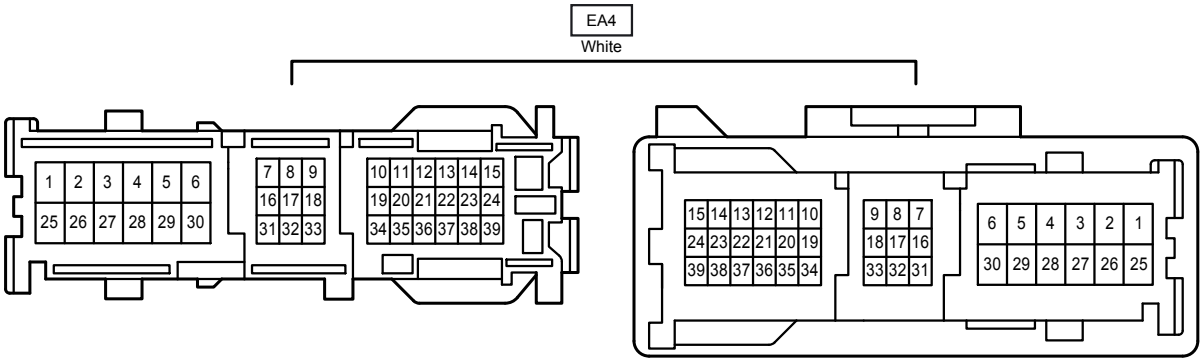


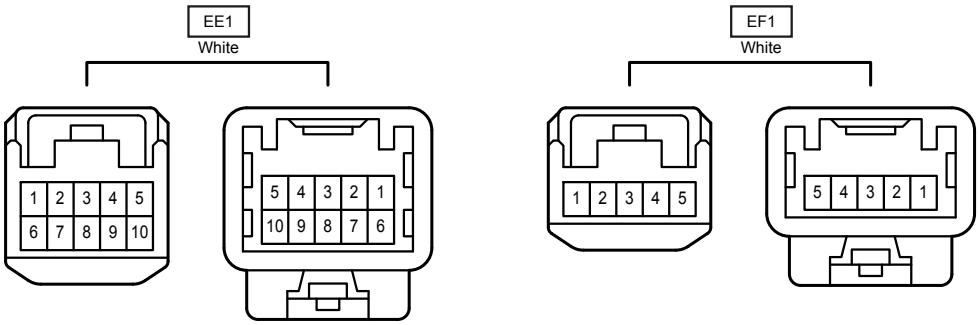
EE1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
EF1
White
1 2 3 4 5
5 4 3 2 1

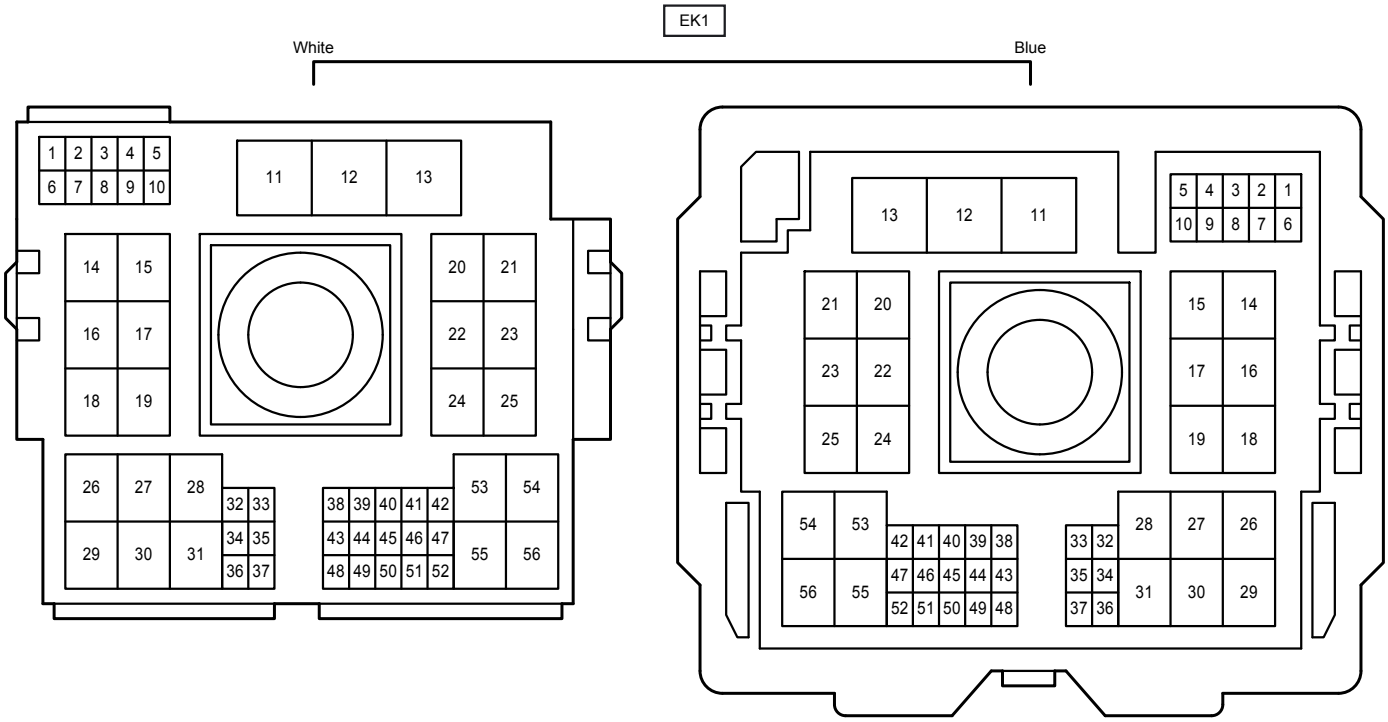

EK1
White
Blue
1 2 3 4 5
6 7 8 9 10
11 12 13
14 15
16 17
18 19
20 21
22 23
24 25
26 27 28
29 30 31
32 33
34 35
36 37
38 39 40 41 42
43 44 45 46 47
48 49 50 51 52
53 54
55 56
13 12 11
5 4 3 2 1
10 9 8 7 6
21 20
23 22
25 24
15 14
17 16
19 18
54 53
56 55
42 41 40 39 38
47 46 45 44 43
52 51 50 49 48
33 32
35 34
37 36
28 27 26
31 30 29

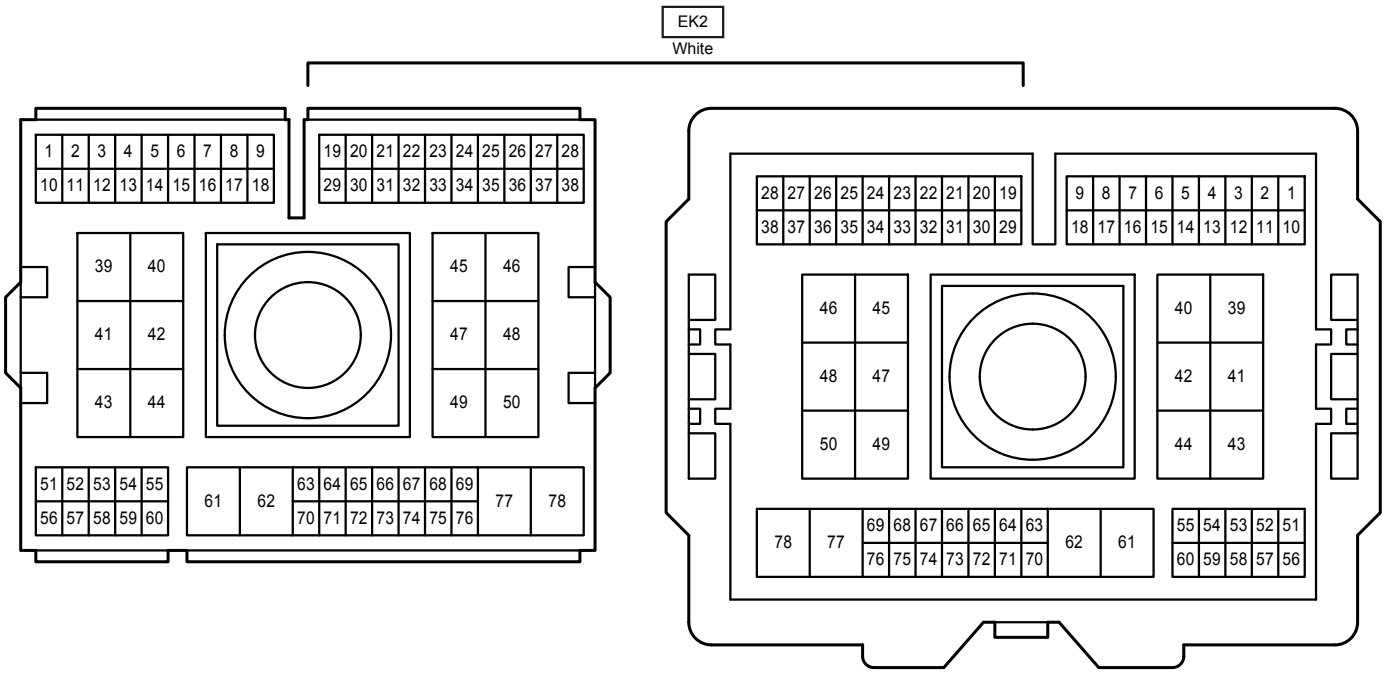
EK2
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
19 20 21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40
41 42
43 44
45 46
47 48
49 50
51 52 53 54 55
56 57 58 59 60
61 62
63 64 65 66 67 68 69
70 71 72 73 74 75 76
77 78
28 27 26 25 24 23 22 21 20 19
38 37 36 35 34 33 32 31 30 29
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
46 45
48 47
50 49
40 39
42 41
44 43
78 77
69 68 67 66 65 64 63
76 75 74 73 72 71 70
62 61
55 54 53 52 51
60 59 58 57 56

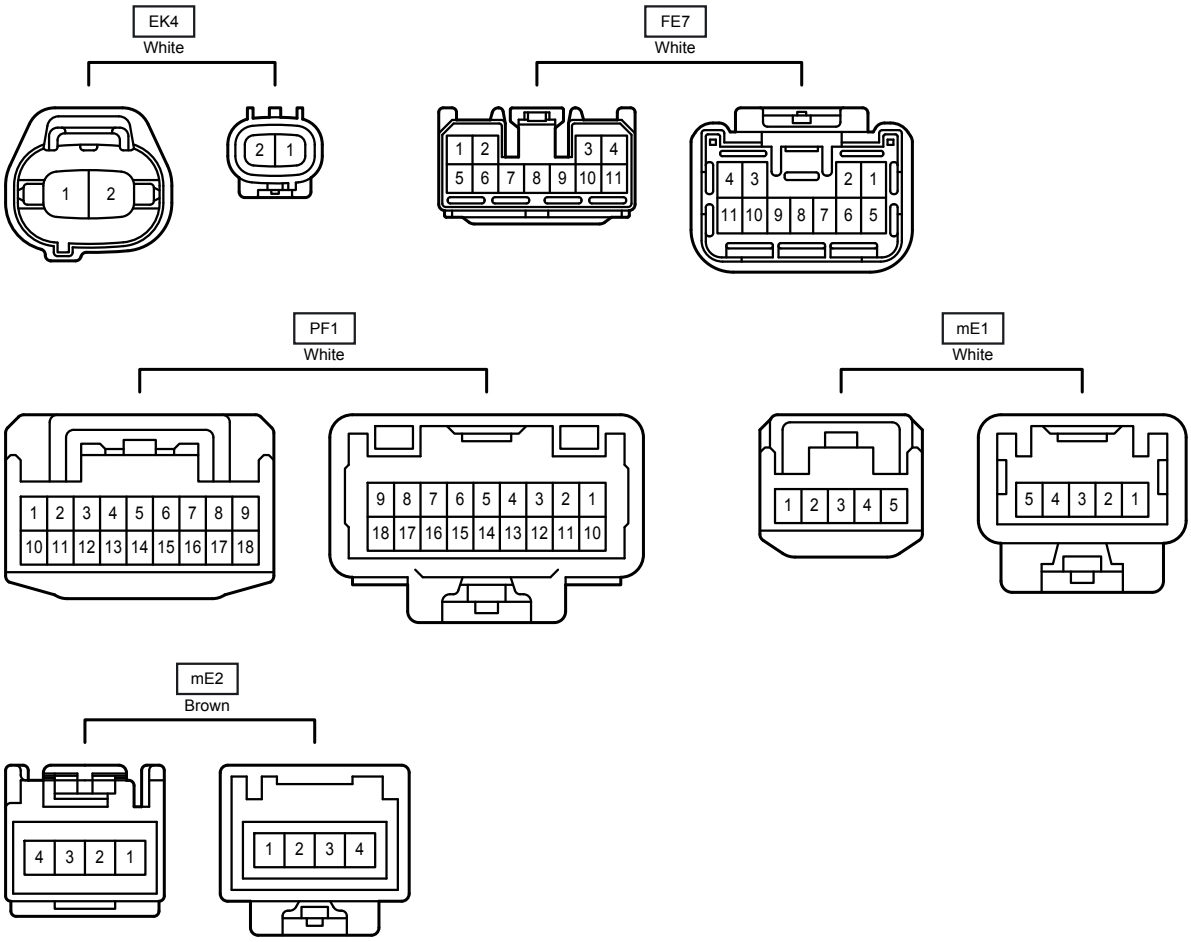

EK4
White
1 2
2 1
FE7
White
1 2 3 4
5 6 7 8 9 10 11
4 3 2 1
11 10 9 8 7 6 5
PF1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
mE1
White
1 2 3 4 5
5 4 3 2 1
mE2
Brown
4 3 2 1
1 2 3 4

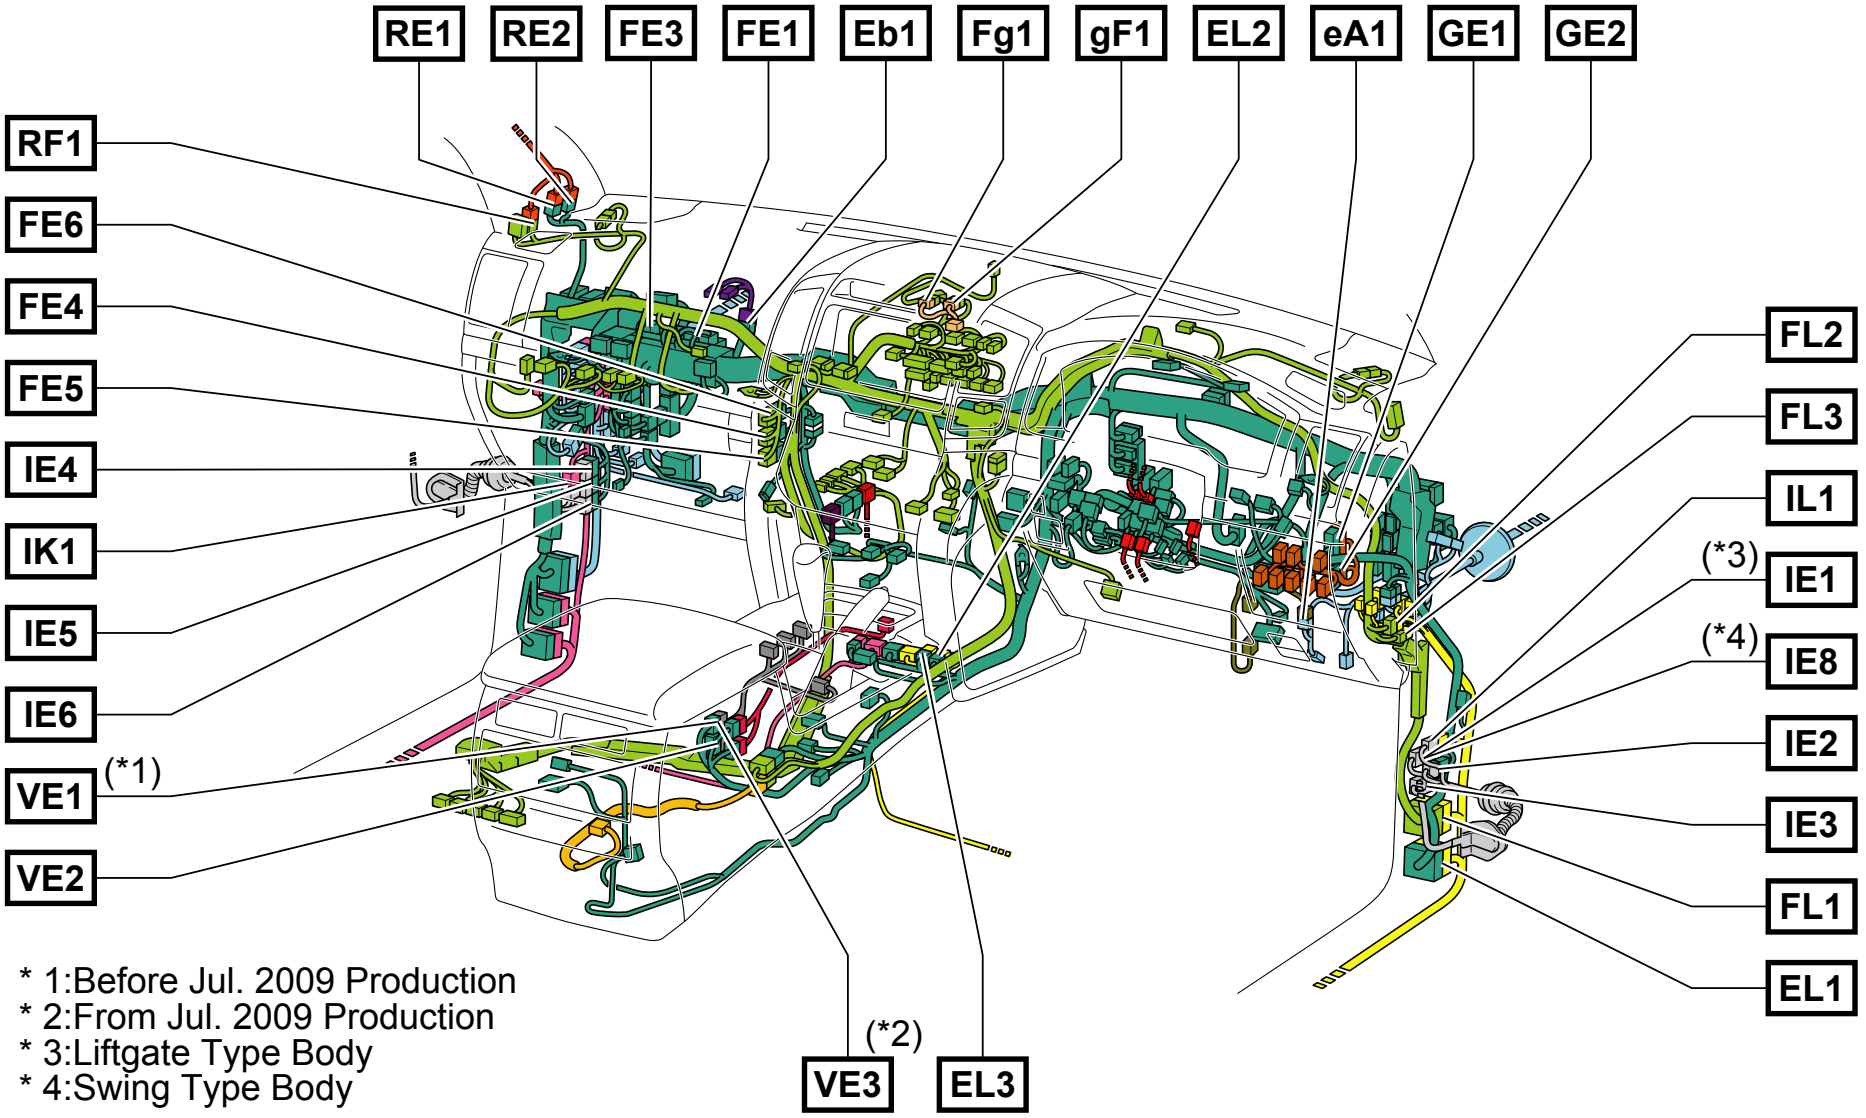


* 1:Before Jul. 2009 Production
* 2:From Jul. 2009 Production
* 3:Liftgate Type Body
* 4:Swing Type Body

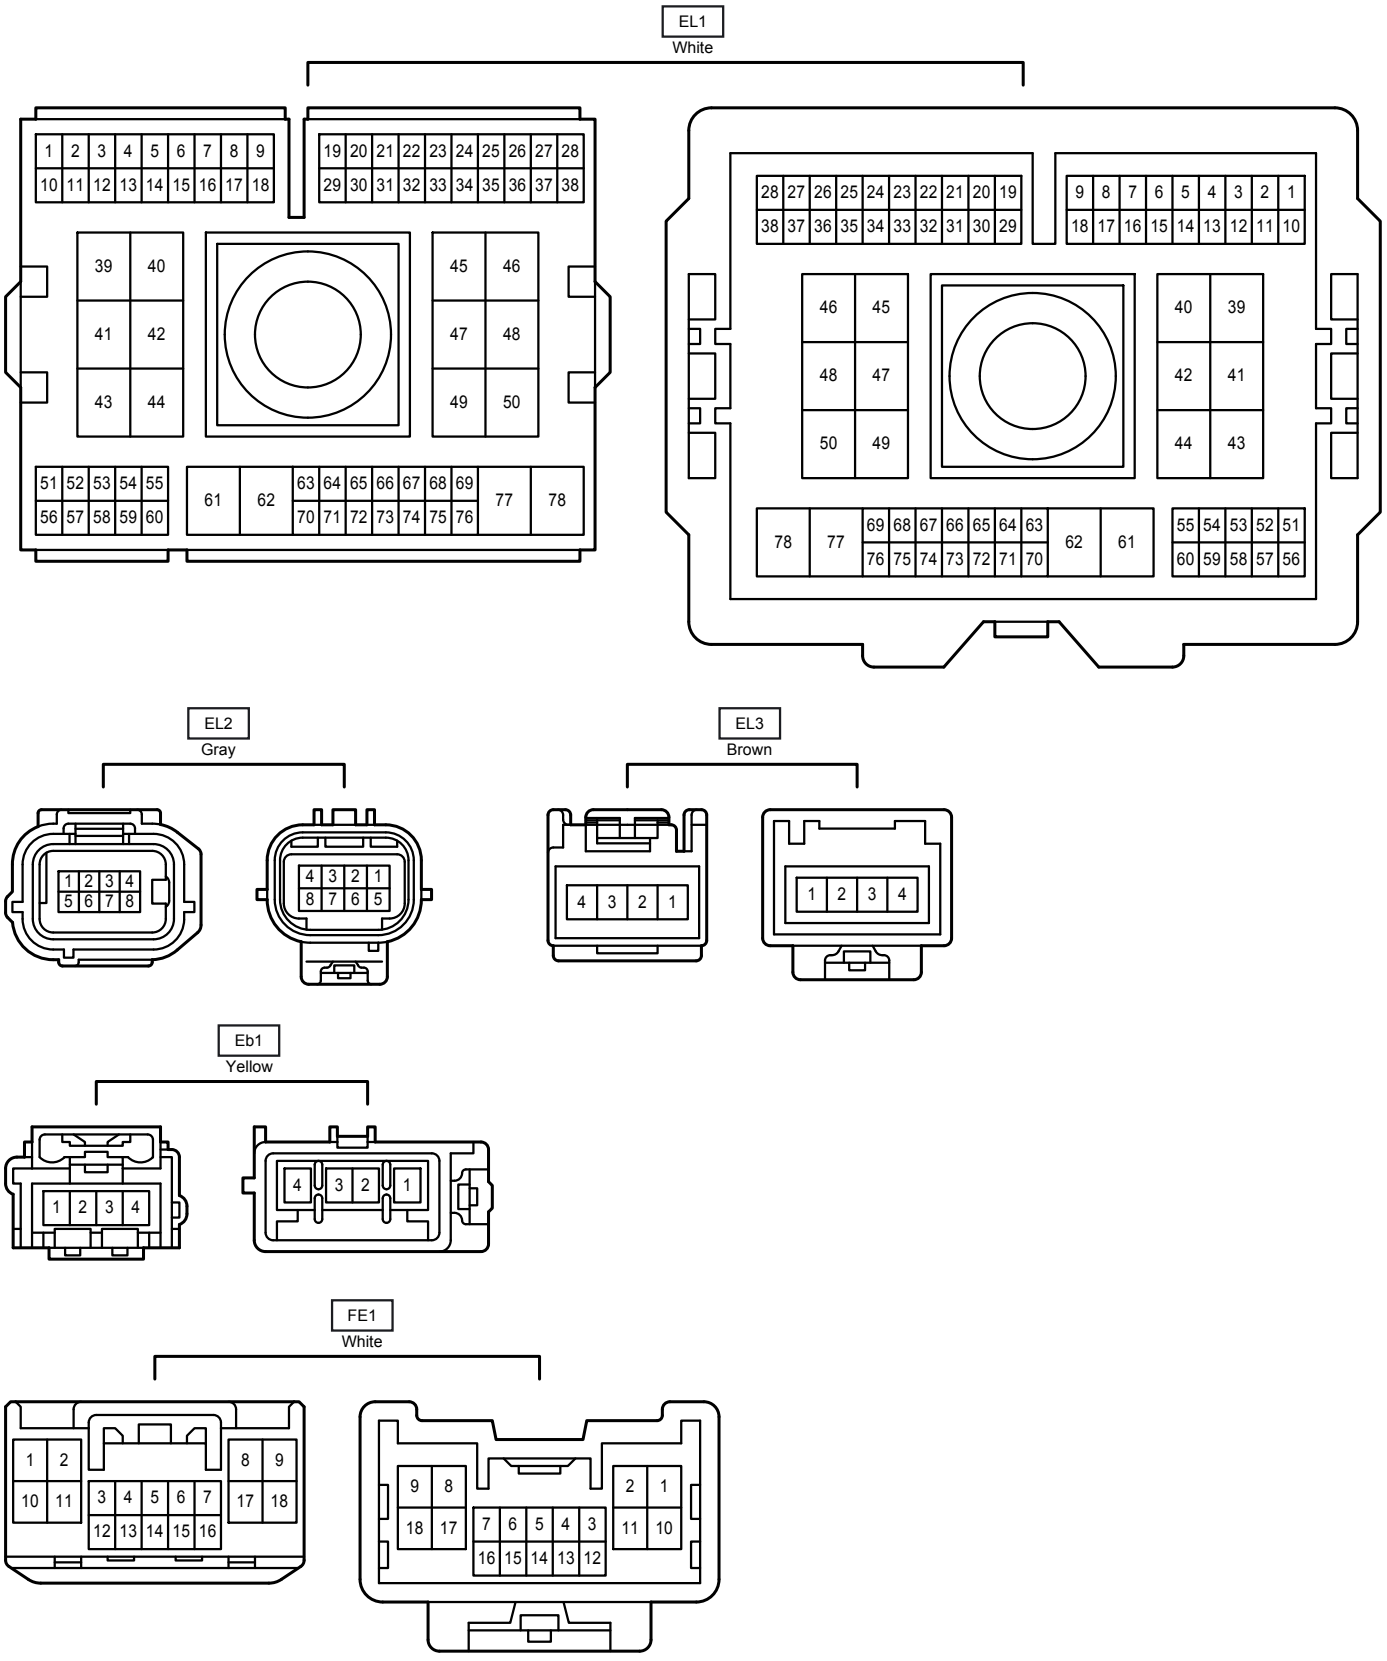
EL1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
19 20 21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40
41 42
43 44
45 46
47 48
49 50
51 52 53 54 55
56 57 58 59 60
61 62
63 64 65 66 67 68 69
70 71 72 73 74 75 76
77 78
28 27 26 25 24 23 22 21 20 19
38 37 36 35 34 33 32 31 30 29
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
46 45
48 47
50 49
40 39
42 41
44 43
78 77
69 68 67 66 65 64 63
76 75 74 73 72 71 70
62 61
55 54 53 52 51
60 59 58 57 56
EL2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
EL3
Brown
4 3 2 1
1 2 3 4
Eb1
Yellow
1 2 3 4
4 3 2 1
FE1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10


FE3
White

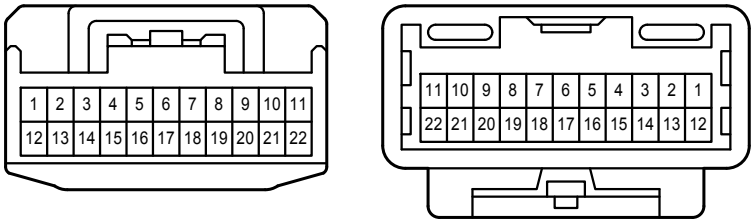


FE4
White

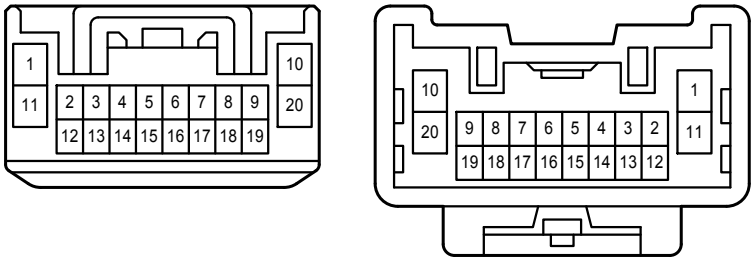


FE5
White

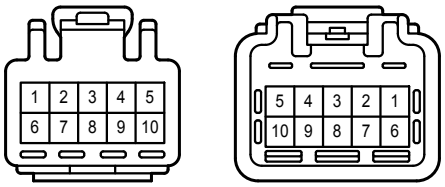


FE6
White

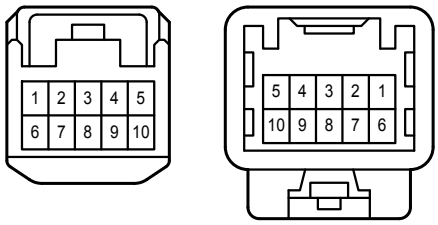


FL1
White
Blue

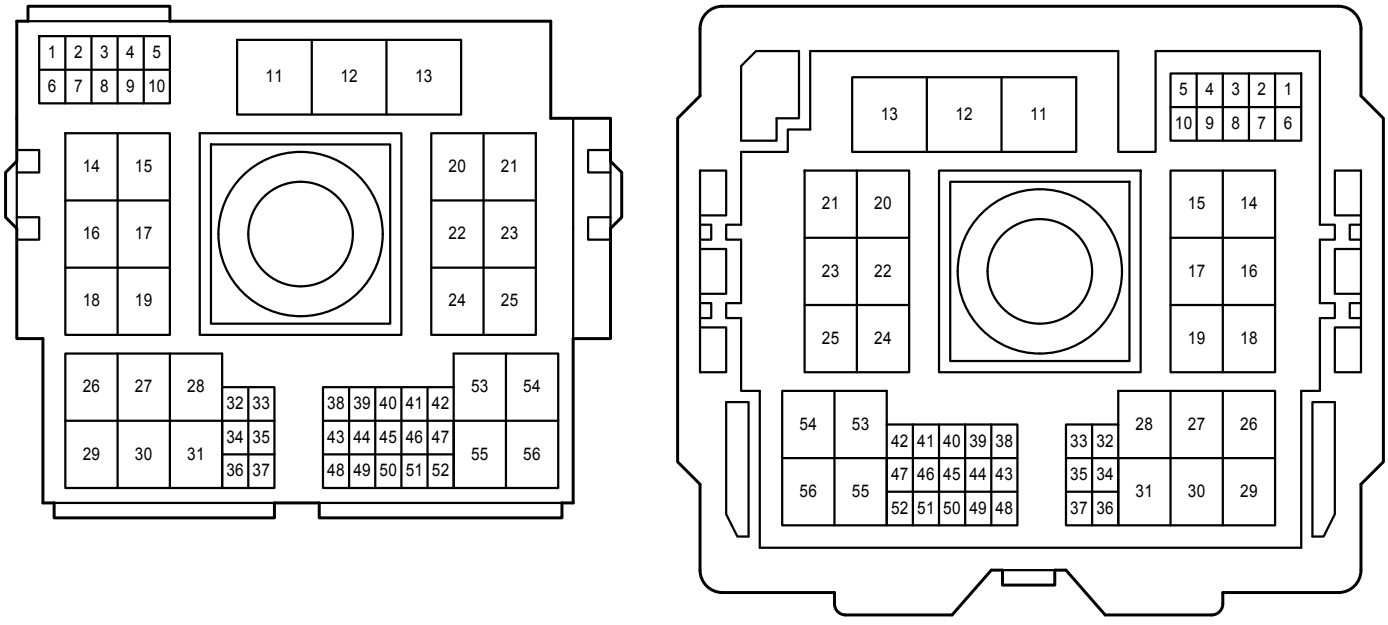


FL2
Blue

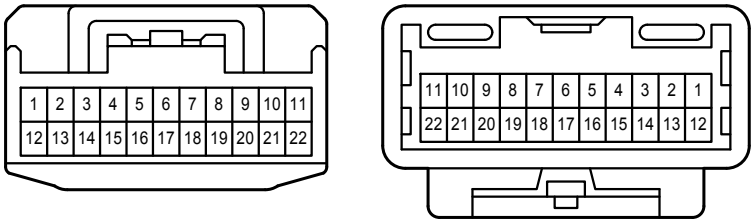


FL3
White




Fg1
Black

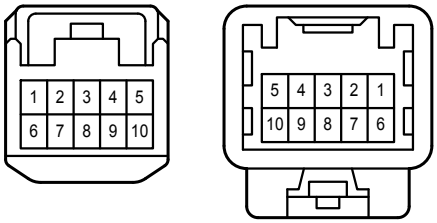


GE1
White

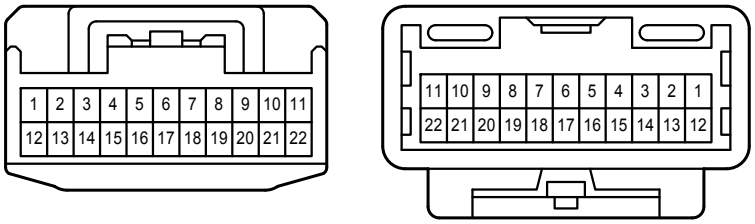



GE2
White

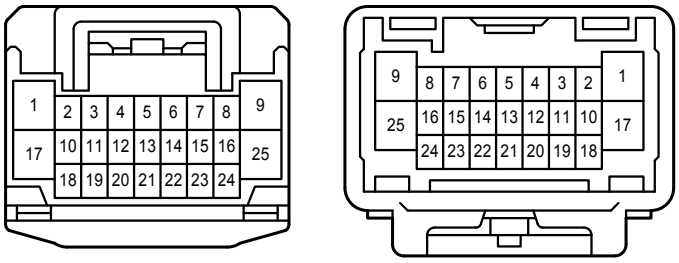



IE1
Gray

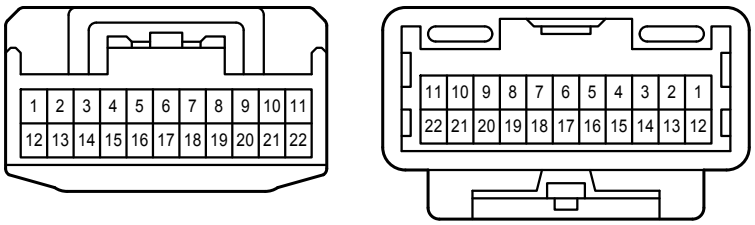


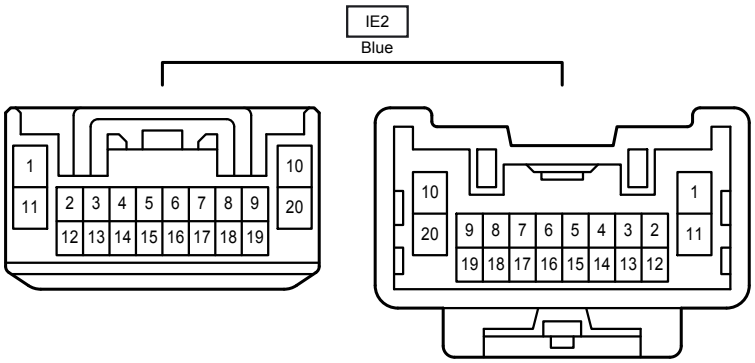

IE2
Blue
1
11
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
10
20
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12
1
11

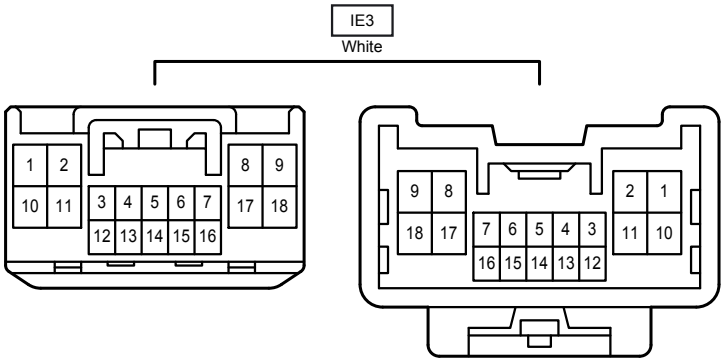

IE3
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

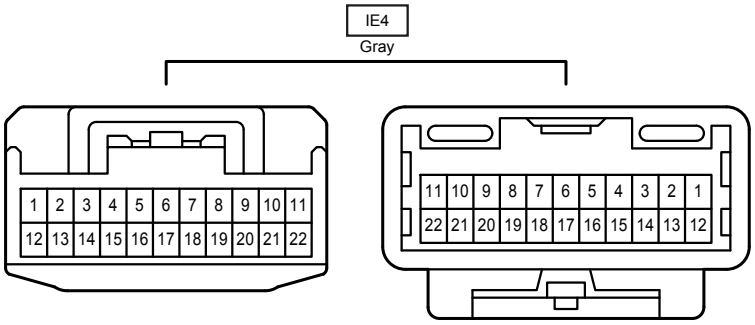

IE4
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12

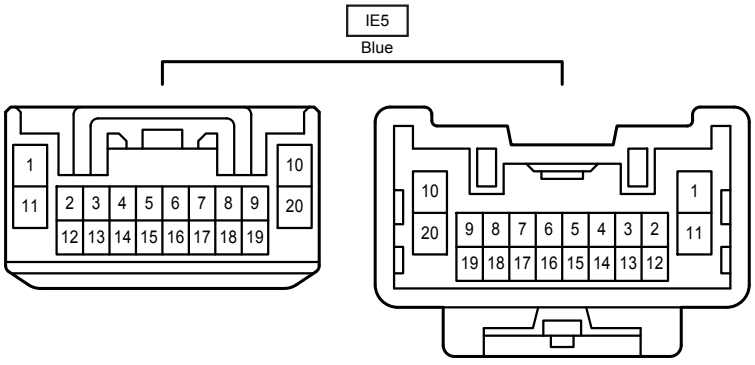

IE5
Blue
1
11
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
10
20
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12
1
11

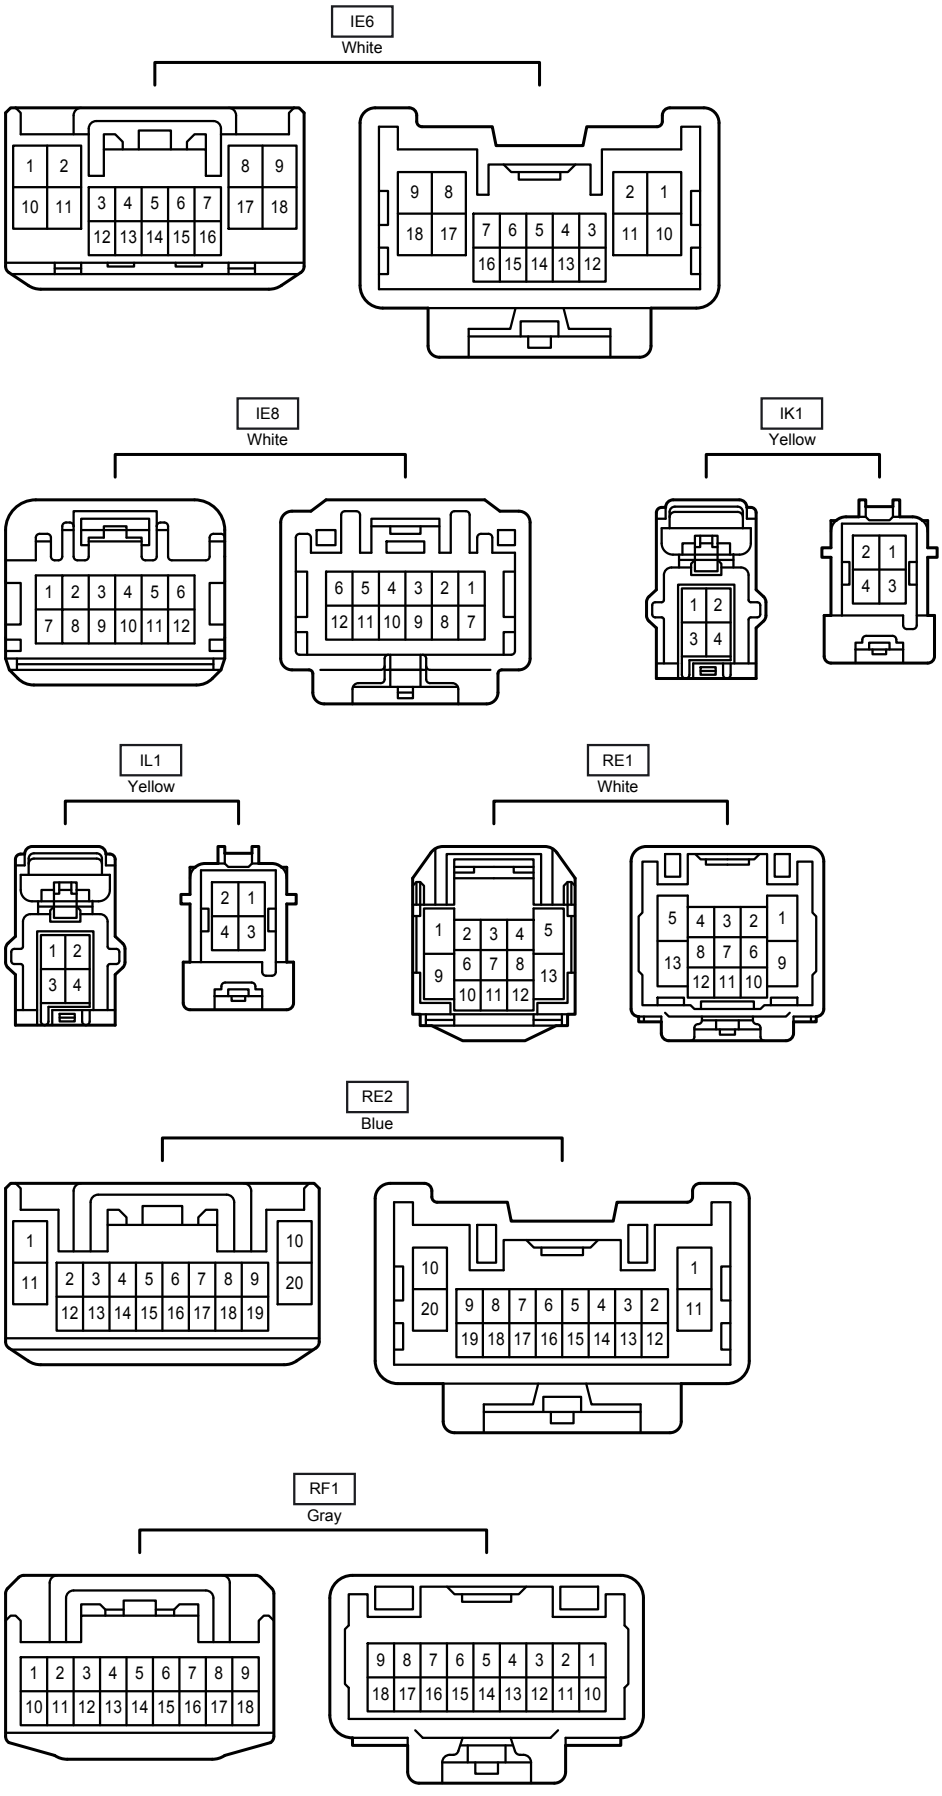

IE6
White
IE8
White
IK1
Yellow
IL1
Yellow
RE1
White
RE2
Blue
RF1
Gray

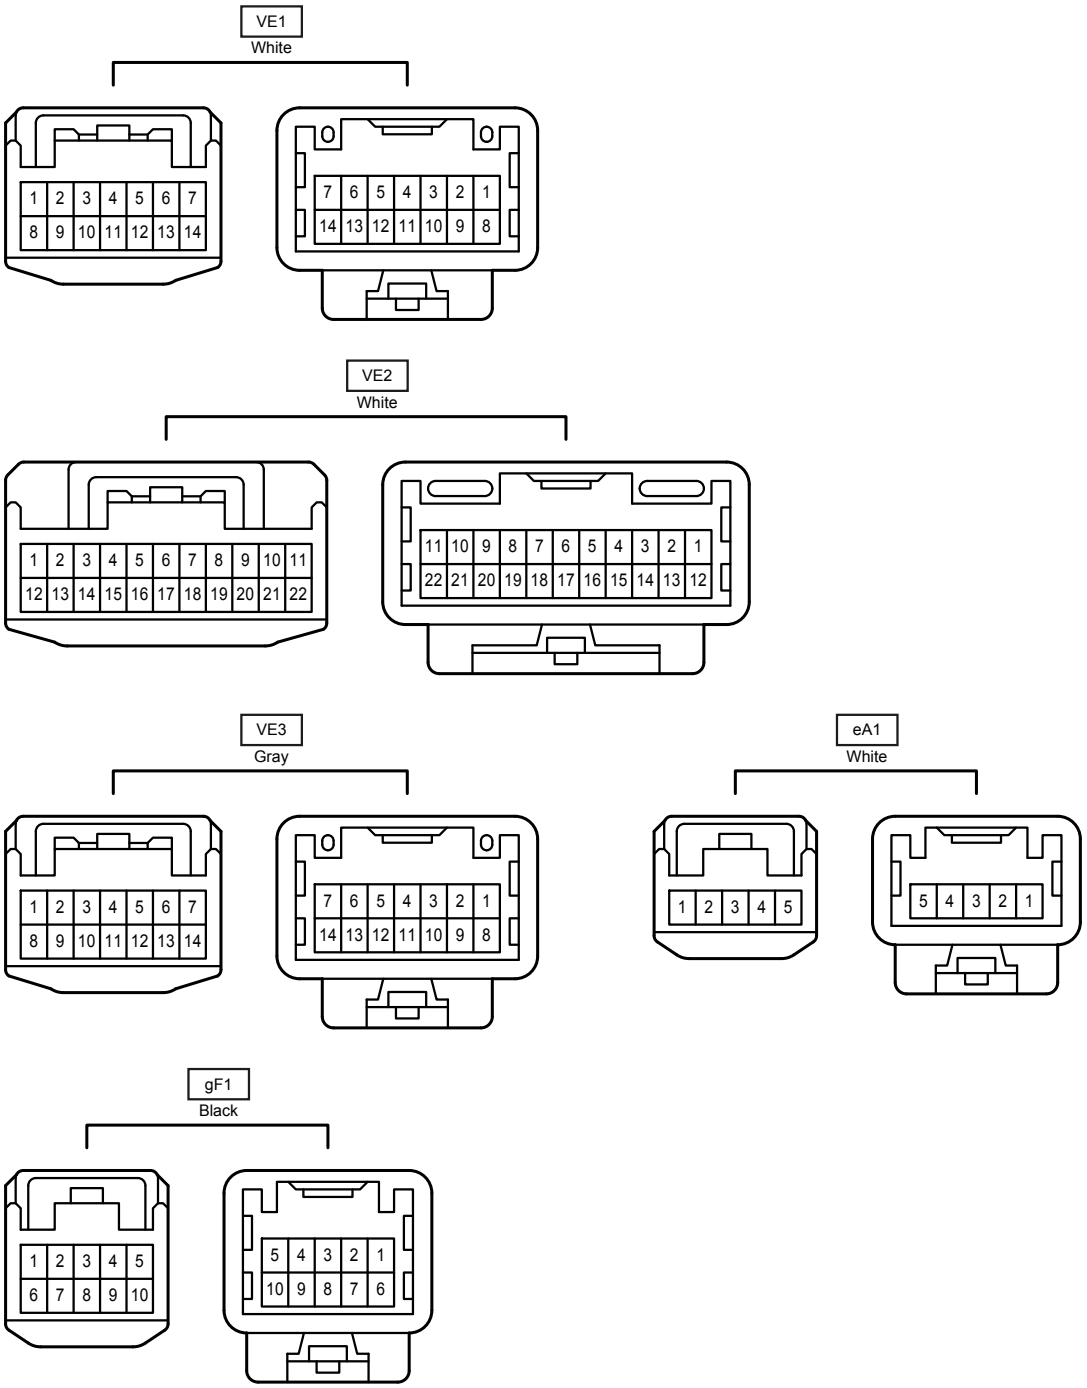
VE1
White
1 2 3 4 5 6 7
8 9 10 11 12 13 14
7 6 5 4 3 2 1
14 13 12 11 10 9 8
VE2
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
VE3
Gray
1 2 3 4 5 6 7
8 9 10 11 12 13 14
7 6 5 4 3 2 1
14 13 12 11 10 9 8
eA1
White
1 2 3 4 5
5 4 3 2 1
gF1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

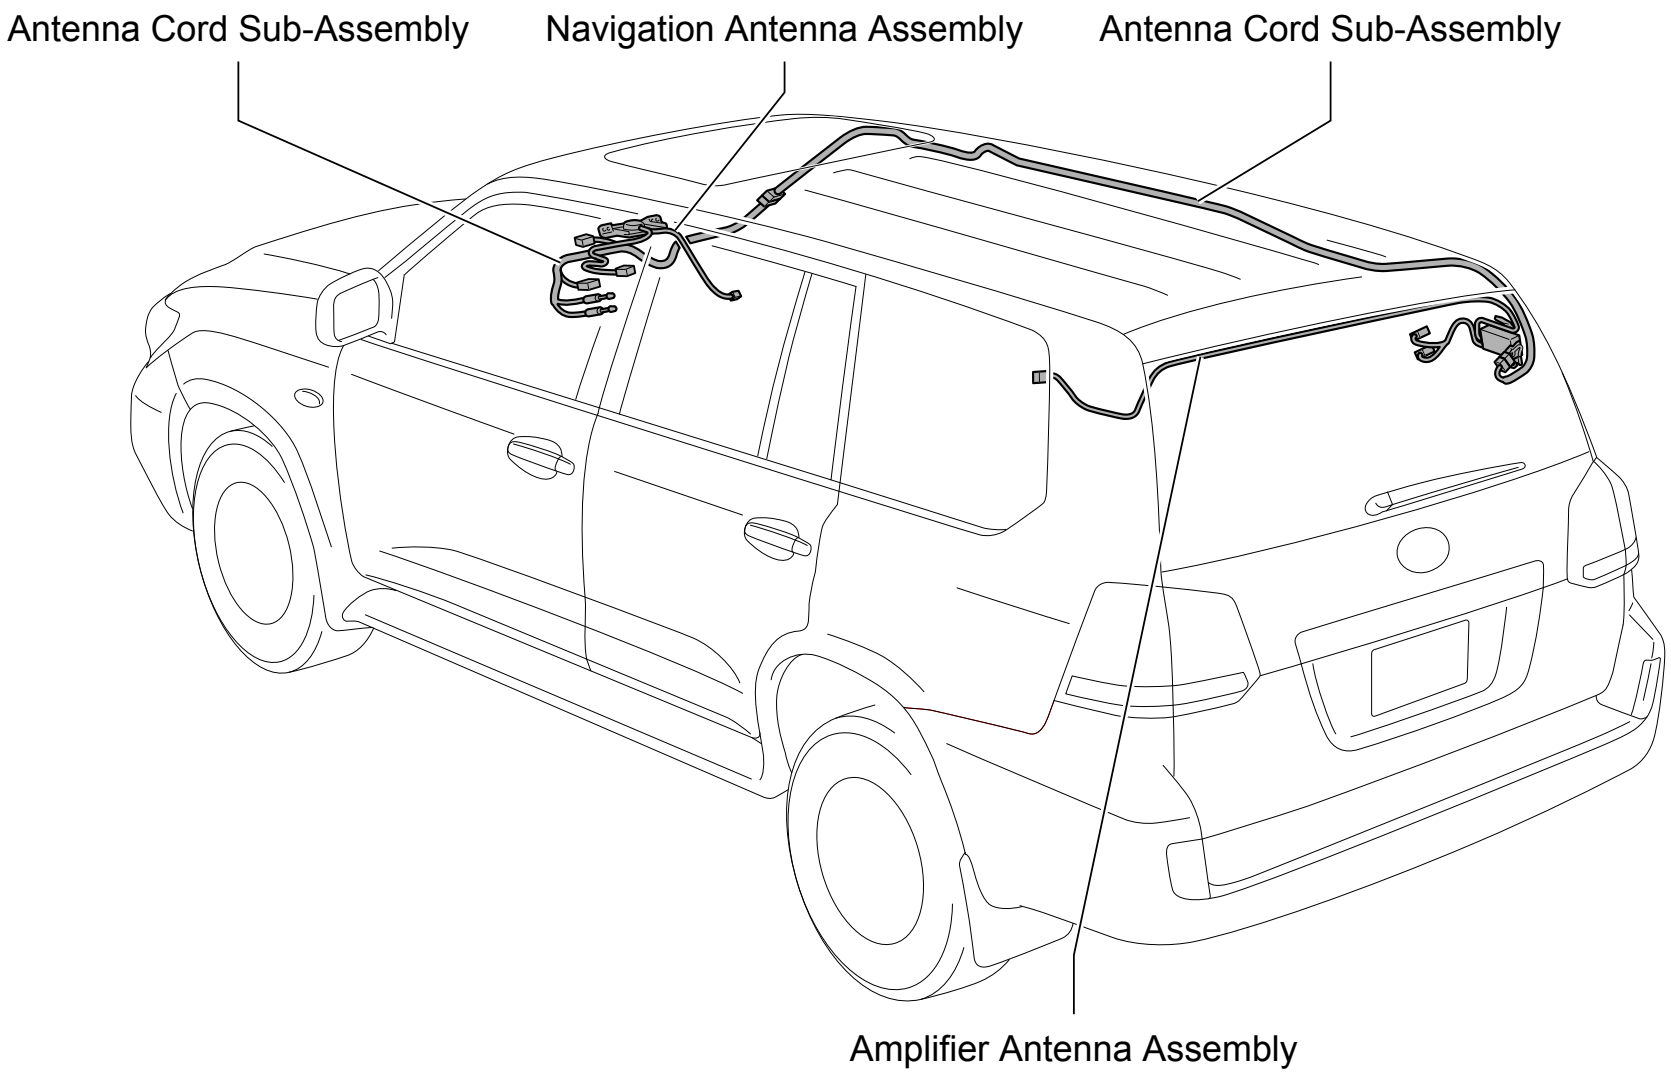
Antenna Cord Sub-Assembly
Navigation Antenna Assembly
Antenna Cord Sub-Assembly
Amplifier Antenna Assembly

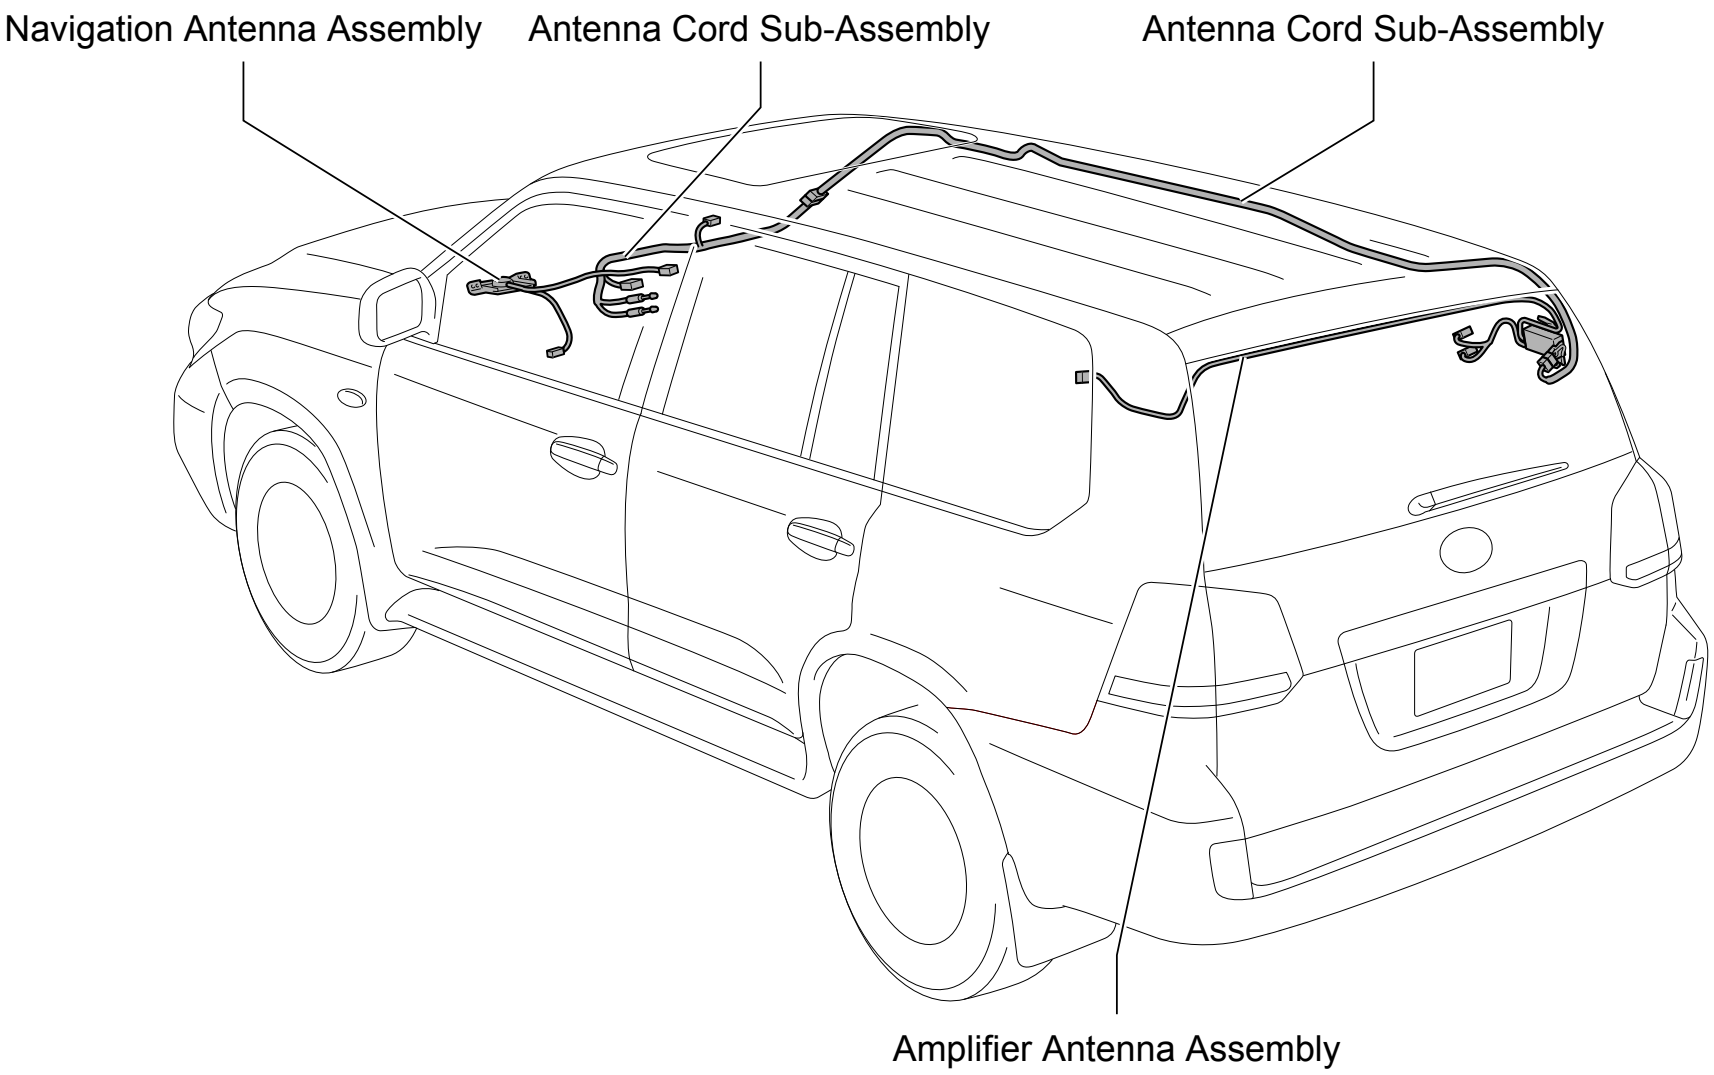
Navigation Antenna Assembly
Antenna Cord Sub-Assembly
Antenna Cord Sub-Assembly
Amplifier Antenna Assembly

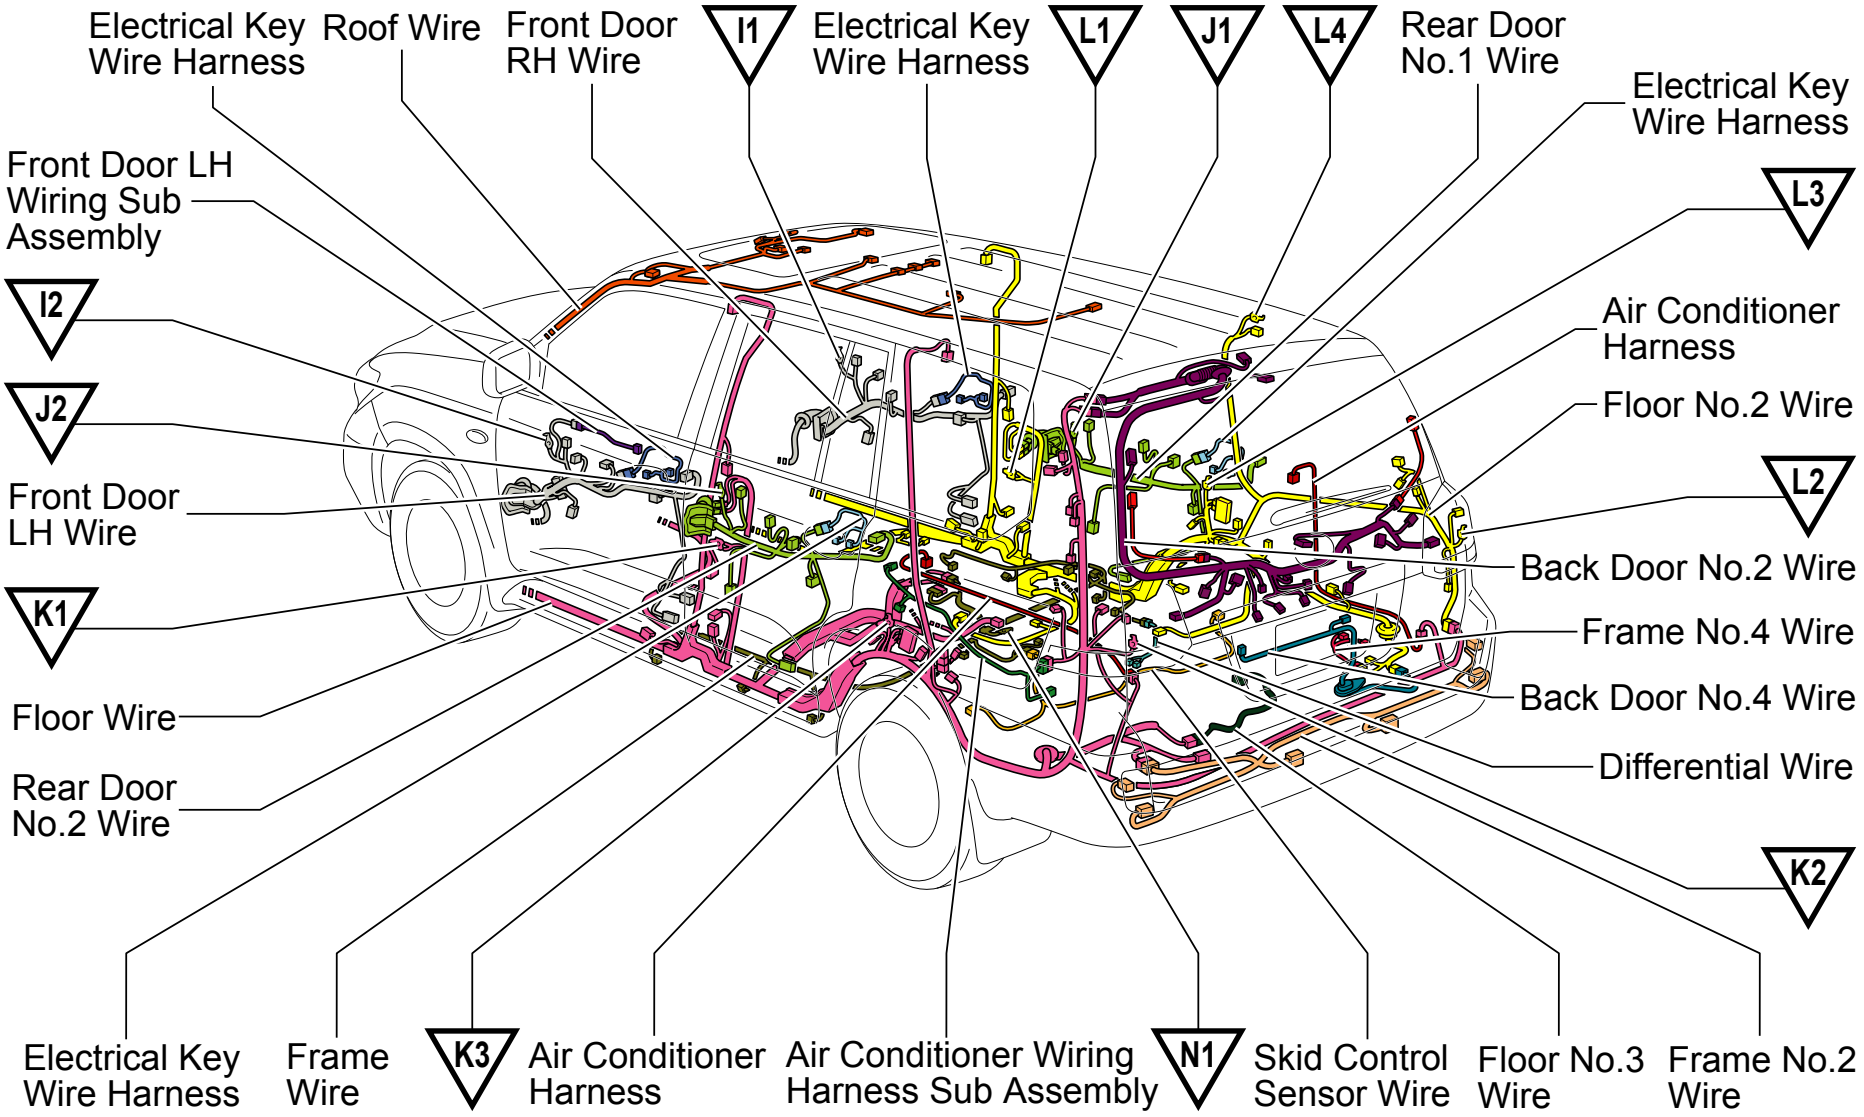

Electrical Key Wire Harness
Roof Wire
Front Door RH Wire
I1
Electrical Key Wire Harness
L1
J1
L4
Rear Door No.1 Wire
Electrical Key Wire Harness
L3
Front Door LH Wiring Sub Assembly
I2
J2
Front Door LH Wire
K1
Floor Wire
Rear Door No.2 Wire
Air Conditioner Harness
Floor No.2 Wire
L2
Back Door No.2 Wire
Frame No.4 Wire
Back Door No.4 Wire
Differential Wire
K2
Electrical Key Wire Harness
Frame Wire
K3
Air Conditioner Harness
Air Conditioner Wiring Harness Sub Assembly
N1
Skid Control Sensor Wire
Floor No.3 Wire
Frame No.2 Wire

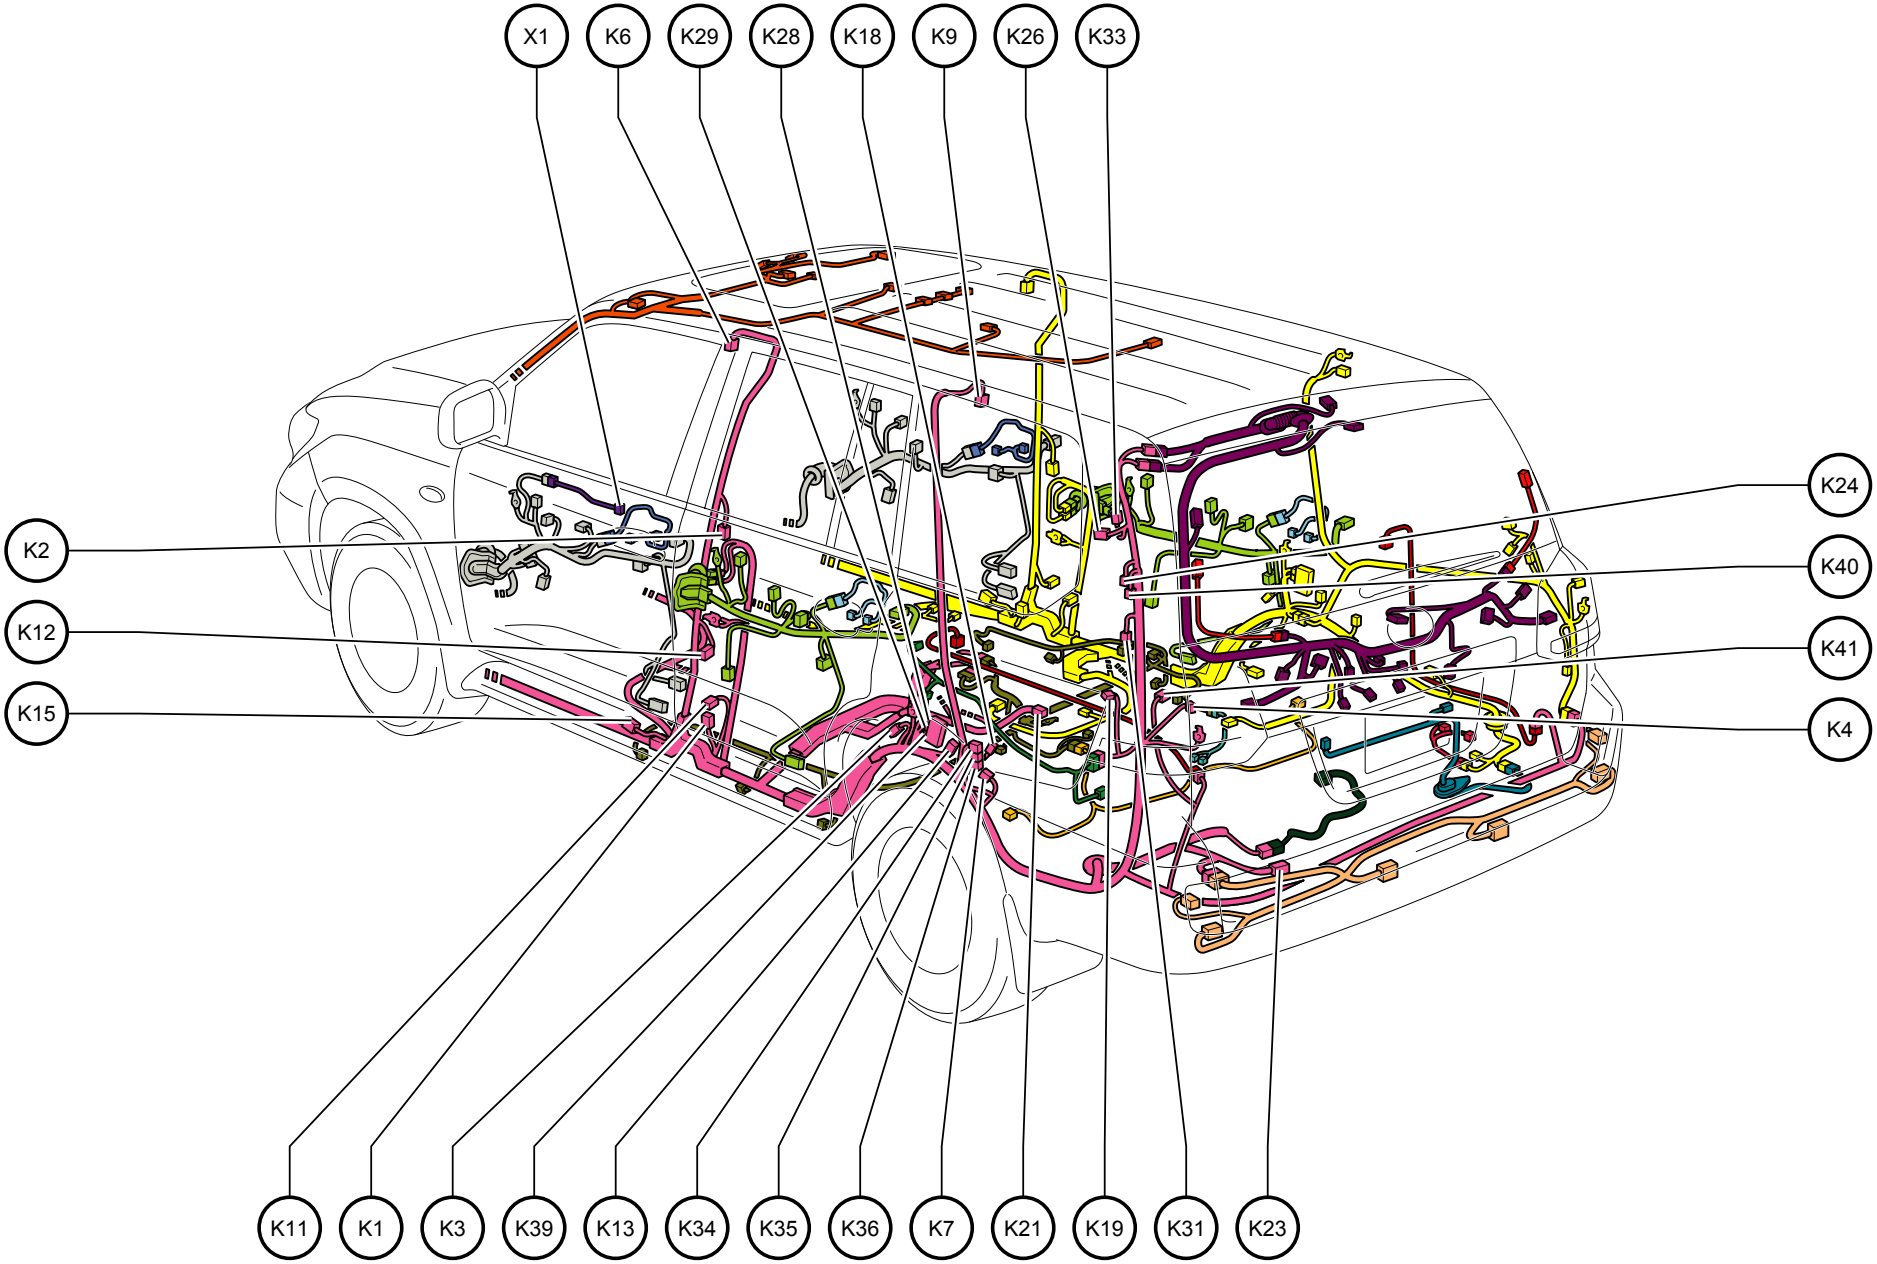
X1
K6
K29
K28
K18
K9
K26
K33
K2
K12
K15
K24
K40
K41
K4
K11
K1
K3
K39
K13
K34
K35
K36
K7
K21
K19
K31
K23

K 1 Front Pretensioner LH
K 2 Front Door Courtesy Light Switch Assembly LH
K 3 Rear Door Courtesy Light Switch Assembly LH
K 4 Rear Combination Light Assembly LH
K 6 Curtain Shield Airbag Assembly Circuit LH
K 7 Rear Side Airbag Sensor Assembly LH
K 9 Curtain Shield Airbag Assembly Circuit LH
K 11 Front Pre-Crash Seat Belt Motor LH
K 12 Front Tension Reducer LH
K 13 Rear Pretensioner LH
K 15 No.2 Interior Illumination Light Assembly
K 18 Theft Warning Siren Assembly
K 19 Rear A/C Blower Assembly
K 21 Cooler Thermistor LH
K 23 Outside Luggage Electrical Key Antenna
K 24 Towing Converter
K 26 Glass Breakage Sensor (Quarter Glass LH)
K 28 Junction Connector
K 29 Junction Connector
K 31 Diode (Rear Cooler)
K 33 Diode (Stop Light)
K 34 Suspension Control ECU
K 35 Suspension Control ECU
K 36 Suspension Control ECU
K 39 Junction Connector
K 40 Towing Converter
K 41 Rear Power Outlet Socket Assembly

X 1 Seat Memory Switch LH

K 1
Yellow

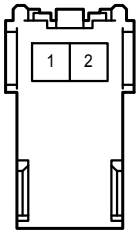

K 2
White




K 3
White




K 4
White




K 6
Black

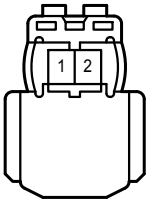


K 7
Yellow

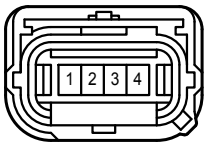


K 9
Black

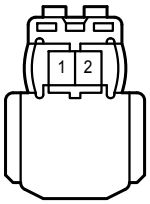


K 11
White



K 12
White




K 13
Yellow

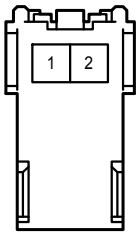


K 15
White




K 18
Gray

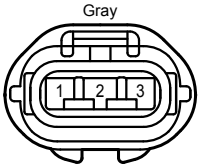


K 19
White

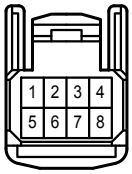


K 21
Black



K 23
White

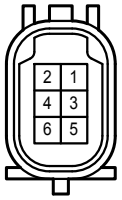

K 24
White

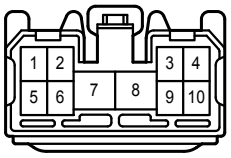


K 26
White



K 28
White



K 29
White




K 31
White




K 33
White




K 34
Black

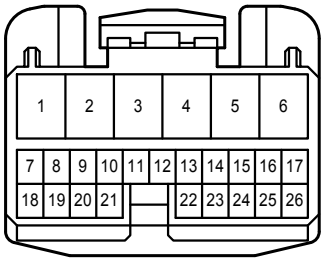


K 35
Black

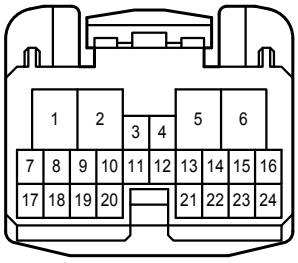


K 36
Black

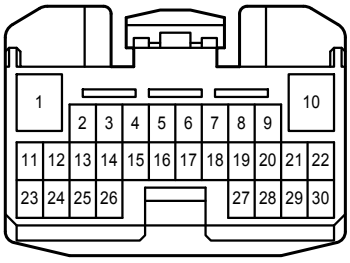


K 39
White




K 40
White




K 41
White



X 1
Black

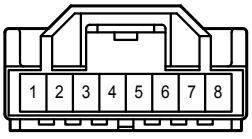

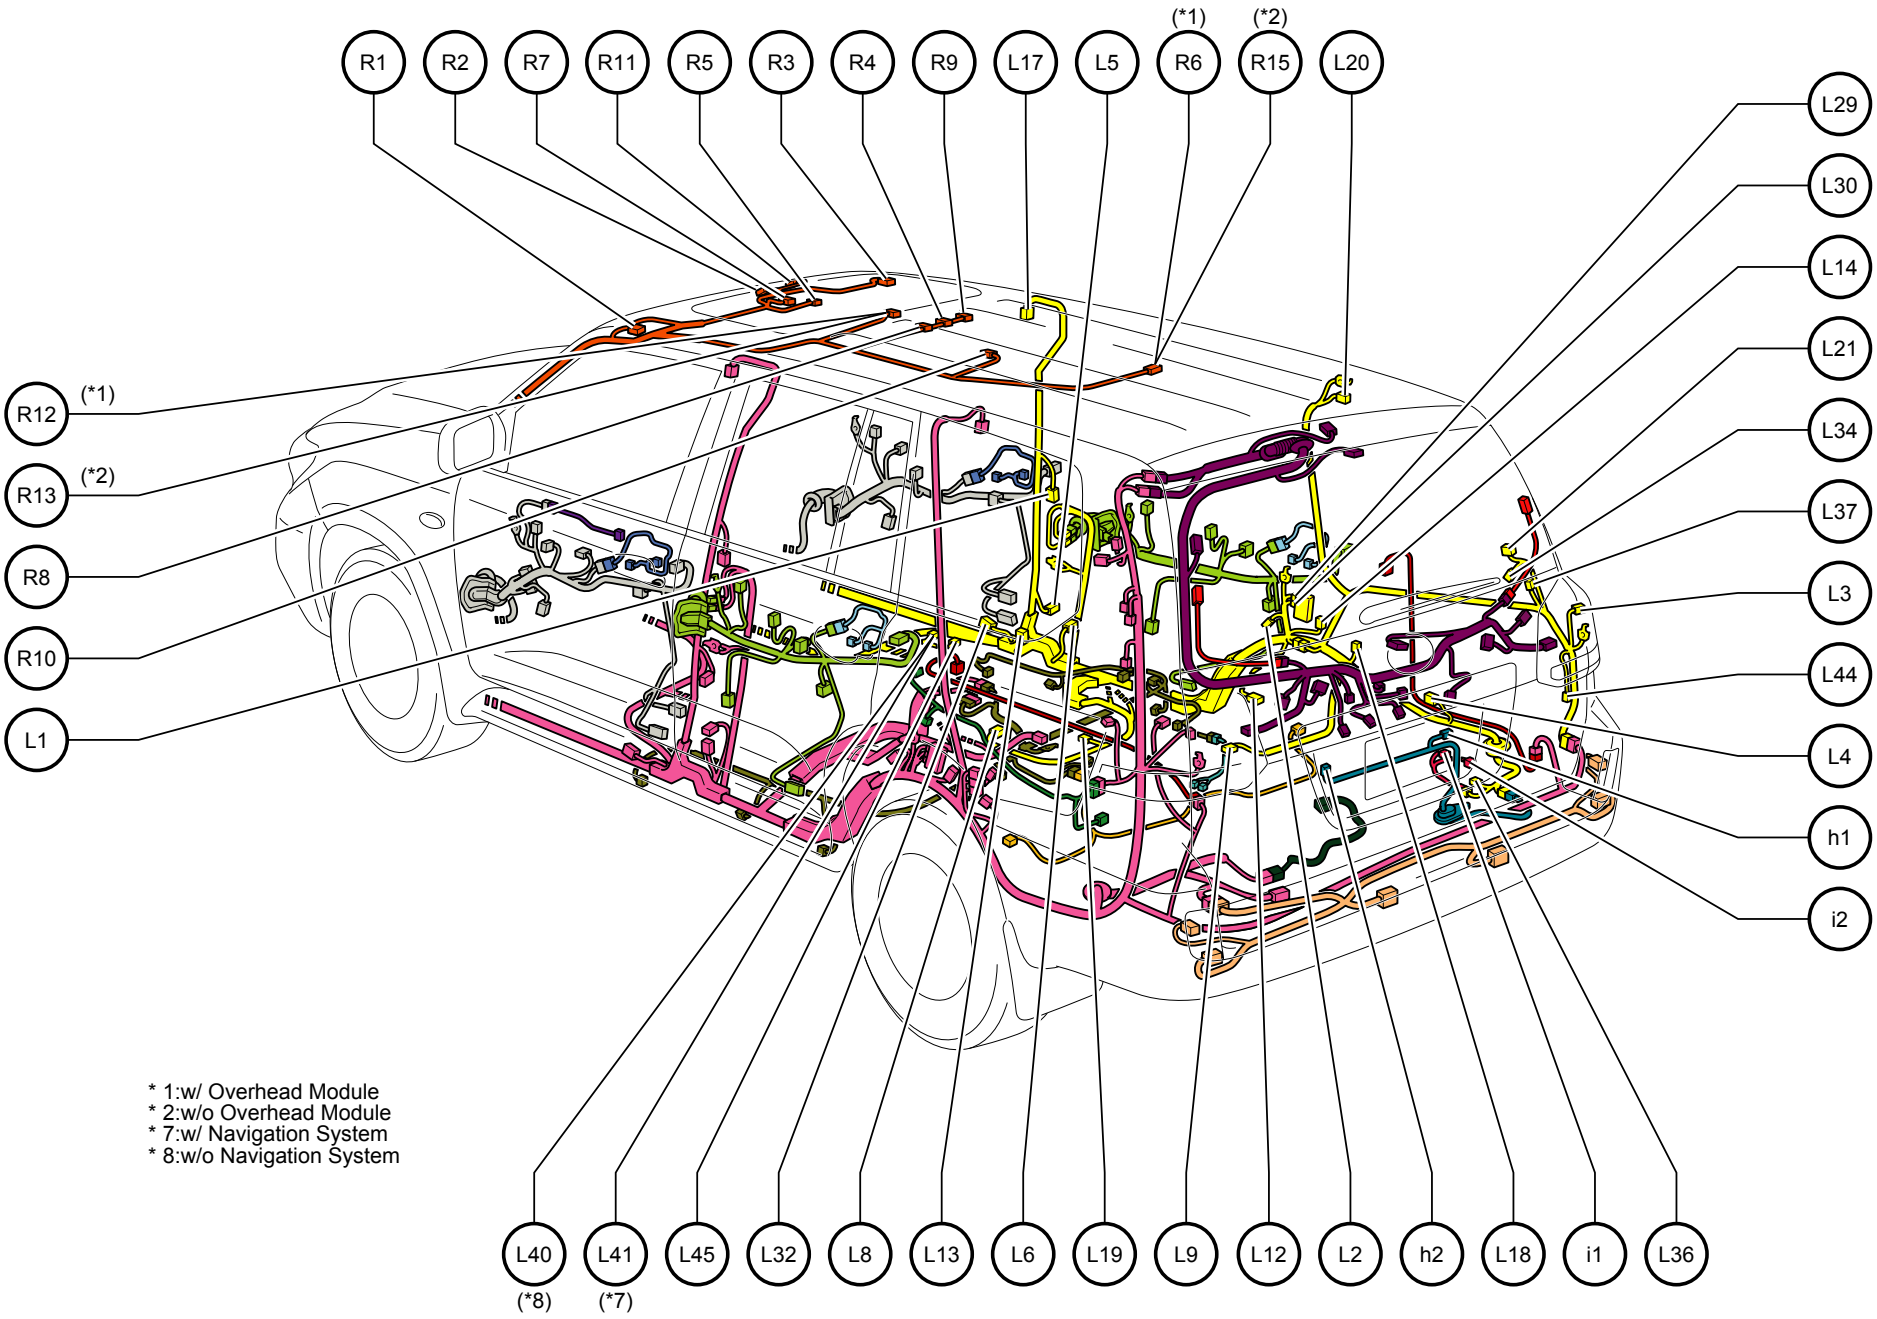

* 1:w/ Overhead Module
* 2:w/o Overhead Module
* 7:w/ Navigation System
* 8:w/o Navigation System

L	1	Front Door Courtesy Light Switch Assembly RH
L	2	Rear Door Courtesy Light Switch Assembly RH
L	3	Rear Combination Light Assembly RH
L	4	No.1 with Box Speaker Assembly
L	5	Front Pre-Crash Seat Belt Motor RH
L	6	Front Tension Reducer RH
L	8	Rear Indoor Electrical Key Oscillator
L	9	Indoor Luggage Compartment Electrical Key Oscillator
L	12	Cooler Thermistor RH
L	13	Front Pretensioner RH
L	14	Rear Pretensioner RH
L	17	Curtain Shield Airbag Assembly Circuit RH
L	18	Rear Side Airbag Sensor Assembly RH
L	19	Rear Floor Side Airbag Sensor
L	20	Curtain Shield Airbag Assembly Circuit RH
L	21	Door Control Receiver
L	29	Junction Connector
L	30	Junction Connector
L	32	No.1 Interior Illumination Light Assembly RH
L	34	Glass Breakage Sensor (Quarter Glass RH)
L	36	Height Control Pump and Motor Assembly
L	37	Option Connector (Theft Warning Radar Sensor)
L	40	Multi-Media Interface ECU Assembly
L	41	Multi-Media Interface ECU Assembly
L	44	Option Connector (Parking Assist-Sensor)
L	45	Multi-Media Interface ECU Assembly

R	1	Visor Assembly LH
R	2	Inner Rear View Mirror Assembly
R	3	Visor Assembly RH
R	4	No.2 Room Light Assembly
R	5	Sliding Roof Control ECU
R	6	No.3 Room Light Assembly
R	7	Overhead Module
R	8	No.2 Room Light Assembly
R	9	No.2 Room Light Assembly
R	10	No.1 Room Light Assembly
R	11	Rain Sensor
R	12	No.1 Room Light Assembly
R	13	No.1 Room Light Assembly
R	15	No.3 Room Light Assembly

h	1	Tire Carrier Courtesy Light Switch
h	2	License Plate Light Assembly RH

i	1	Fuel Temperature Sensor
i	2	Pressure Accumulator Sensor

L 1
White




L 2
White




L 3
White




L 4
White




L 5
White




L 6
White




L 8
Black

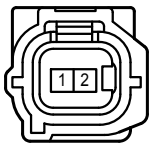


L 9
Black

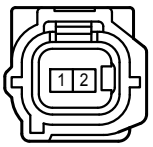


L 12
Black




L 13
Yellow

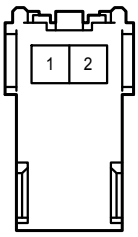

L 14
Yellow

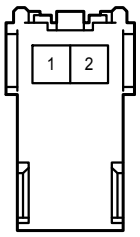

L 17
Black

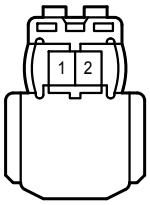


L 18
Yellow




L 19
Yellow




L 20
Black

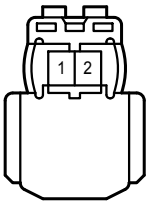


L 21
White

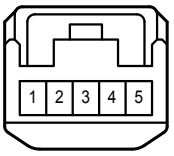

L 29
White



L 30
White



L 32
White




L 34
White



L 36
Black



L 37
White



L 40
White




L 41
Black




L 44
White




L 45
Brown

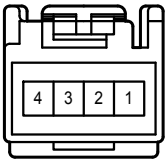


R 1
White

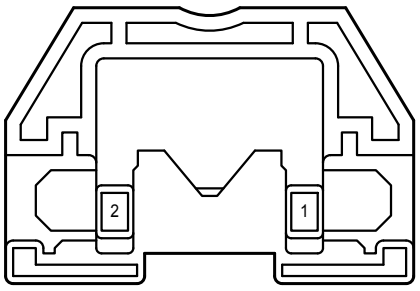


R 2
White

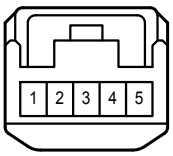


R 3
White

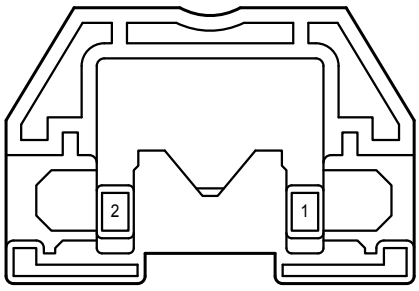


R 4
White

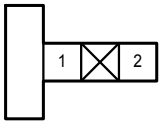


R 5
White

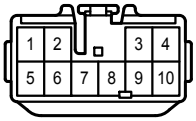


R 6
White




R 7
White

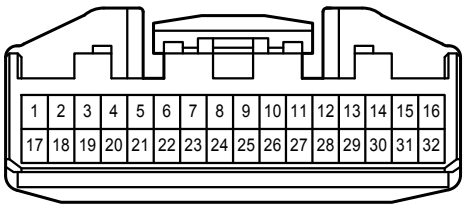


R 8
White




R 9
White




R 10
White

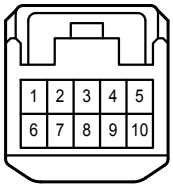


R 11
Black

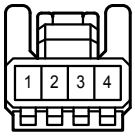


R 12
White



R 13
White



R 15
White



h 1
White




h 2
White




i 1
Gray



i 2
Black

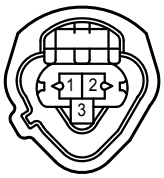

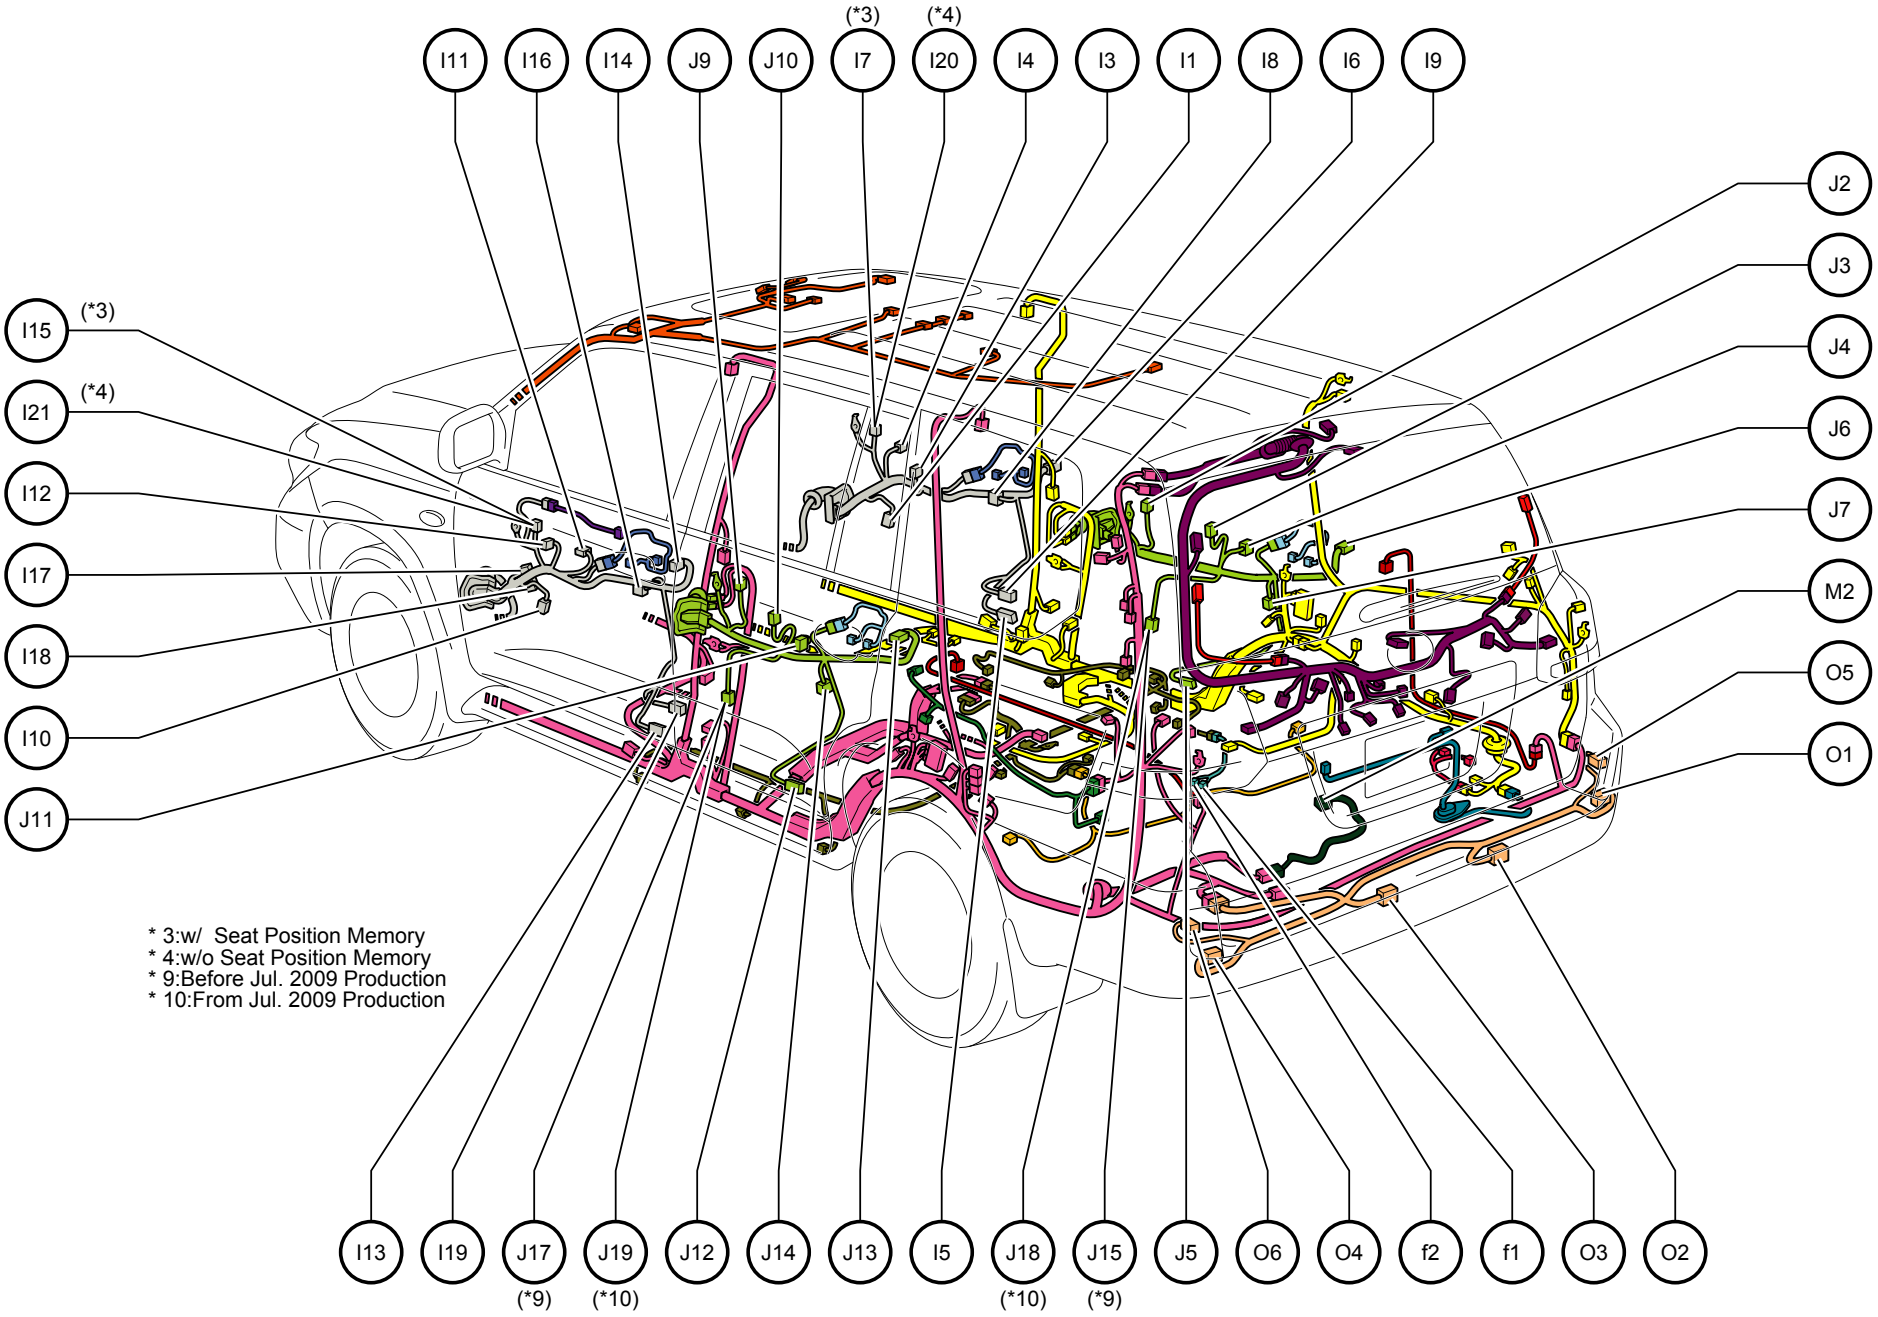

I11
I16
I14
J9
J10
(*3)
I7
(*4)
I20
I4
I3
I1
I8
I6
I9
J2
J3
J4
J6
J7
M2
O5
O1
I15
(*3)
I21
(*4)
I12
I17
I18
I10
J11
* 3:w/ Seat Position Memory
* 4:w/o Seat Position Memory
* 9:Before Jul. 2009 Production
* 10:From Jul. 2009 Production
I13
I19
J17
(*9)
J19
(*10)
J12
J14
J13
I5
J18
(*10)
J15
(*9)
J5
O6
O4
f2
f1
O3
O2

I	1	Front No.1 Speaker Assembly RH
I	3	Front Power Window Regulator Switch Assembly RH
I	4	Front Power Window Regulator Motor Assembly RH
I	5	Front Door Courtesy Light Assembly RH
I	6	Front Door Lock Assembly RH
I	7	Outer Rear View Mirror Assembly RH
I	8	Diode (Front Door Courtesy Switch RH)
I	9	Front Side Airbag Sensor Assembly RH
I	10	Front No.1 Speaker Assembly LH
I	11	Multiplex Network Master Switch Assembly
I	12	Front Power Window Regulator Motor Assembly LH
I	13	Front Door Courtesy Light Assembly LH
I	14	Front Door Lock Assembly LH
I	15	Outer Rear View Mirror Assembly LH
I	16	Diode (Front Door Courtesy Switch LH)
I	17	Outer Mirror Control ECU Assembly
I	18	Outer Mirror Control ECU Assembly
I	19	Front Side Airbag Sensor Assembly LH
I	20	Outer Rear View Mirror Assembly RH
I	21	Outer Rear View Mirror Assembly LH
J	2	Rear No.3 Speaker Assembly RH
J	3	Rear Power Window Regulator Switch Assembly RH
J	4	Rear Power Window Regulator Motor Assembly RH
J	5	Rear Door Courtesy Light Assembly RH
J	6	Rear Door Lock Assembly RH
J	7	Diode (Rear Door Courtesy Switch RH)
J	9	Rear No.3 Speaker Assembly LH
J	10	Rear Power Window Regulator Switch Assembly LH
J	11	Rear Power Window Regulator Motor Assembly LH
J	12	Rear Door Courtesy Light Assembly LH
J	13	Rear Door Lock Assembly LH
J	14	Diode (Rear Door Courtesy Switch LH)
J	15	Rear Speaker Set RH
J	17	Rear Speaker Set LH
J	18	Rear Speaker Set RH
J	19	Rear Speaker Set LH
M	2	Fuel Sender Gage Assembly (Sub)
O	1	No.2 Ultrasonic Sensor RH
O	2	No.3 Ultrasonic Sensor RH
O	3	No.3 Ultrasonic Sensor LH
O	4	No.2 Ultrasonic Sensor LH
O	5	Rear Fog Light Assembly RH
O	6	Rear Fog Light Assembly LH
f	1	Differential Lock Shift Actuator
f	2	Differential Lock Switch


I 1
White



I 3
White

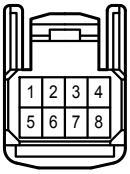


I 4
White

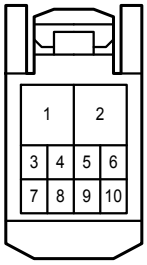


I 5
White



I 6
White

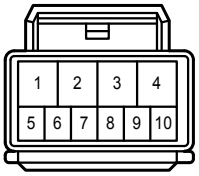


I 7
White

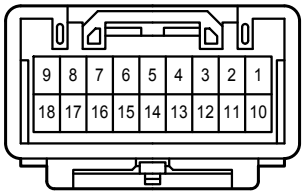

I 8
White




I 9
Yellow

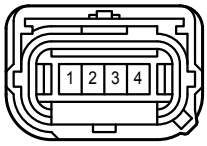


I 10
White



I 11
White

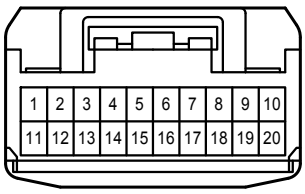

I 12
White

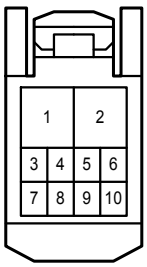


I 13
White



I 14
White




I 15
White

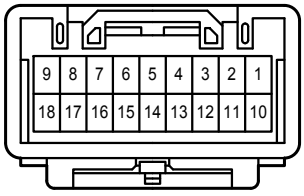


I 16
White




I 17
White

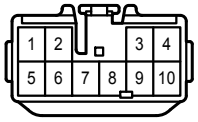


I 18
White

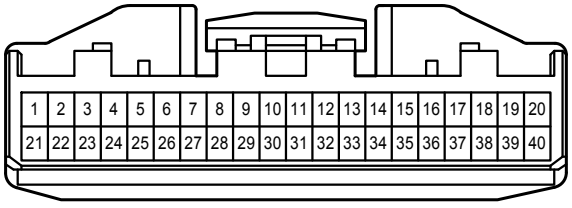


I 19
Yellow

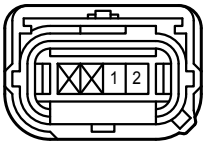


I 20
White

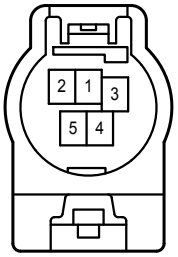


I 21
White

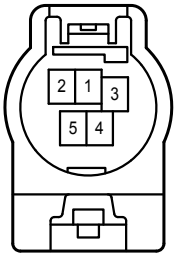


J 2
Black



J 3
White

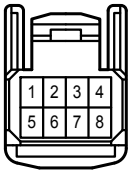


J 4
White

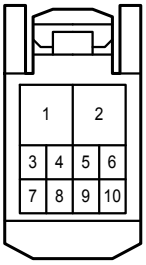

J 5
White




J 6
White

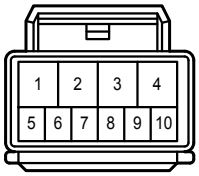


J 7
White




J 9
Black



J 10
White

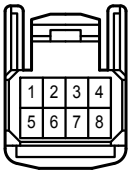


J 11
White

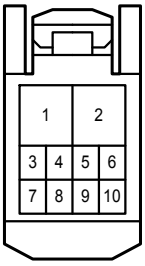

J 12
White



J 13
White

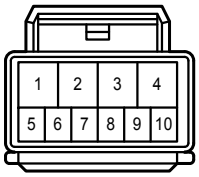

J 14
White



J 15
White



J 17
White



J 18
Black




J 19
Black




M 2
Black




O 1
Black

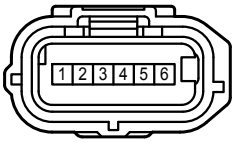


O 2
Black

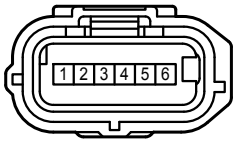


O 3
Black

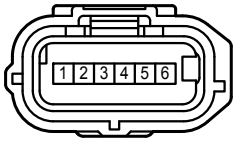


O 4
Black

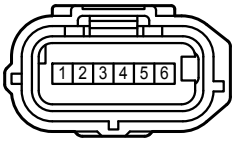

O 5
White

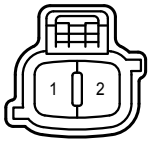


O 6
White

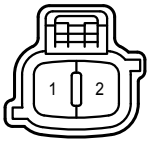


f 1
Gray



f 2
Blue

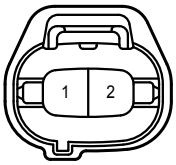

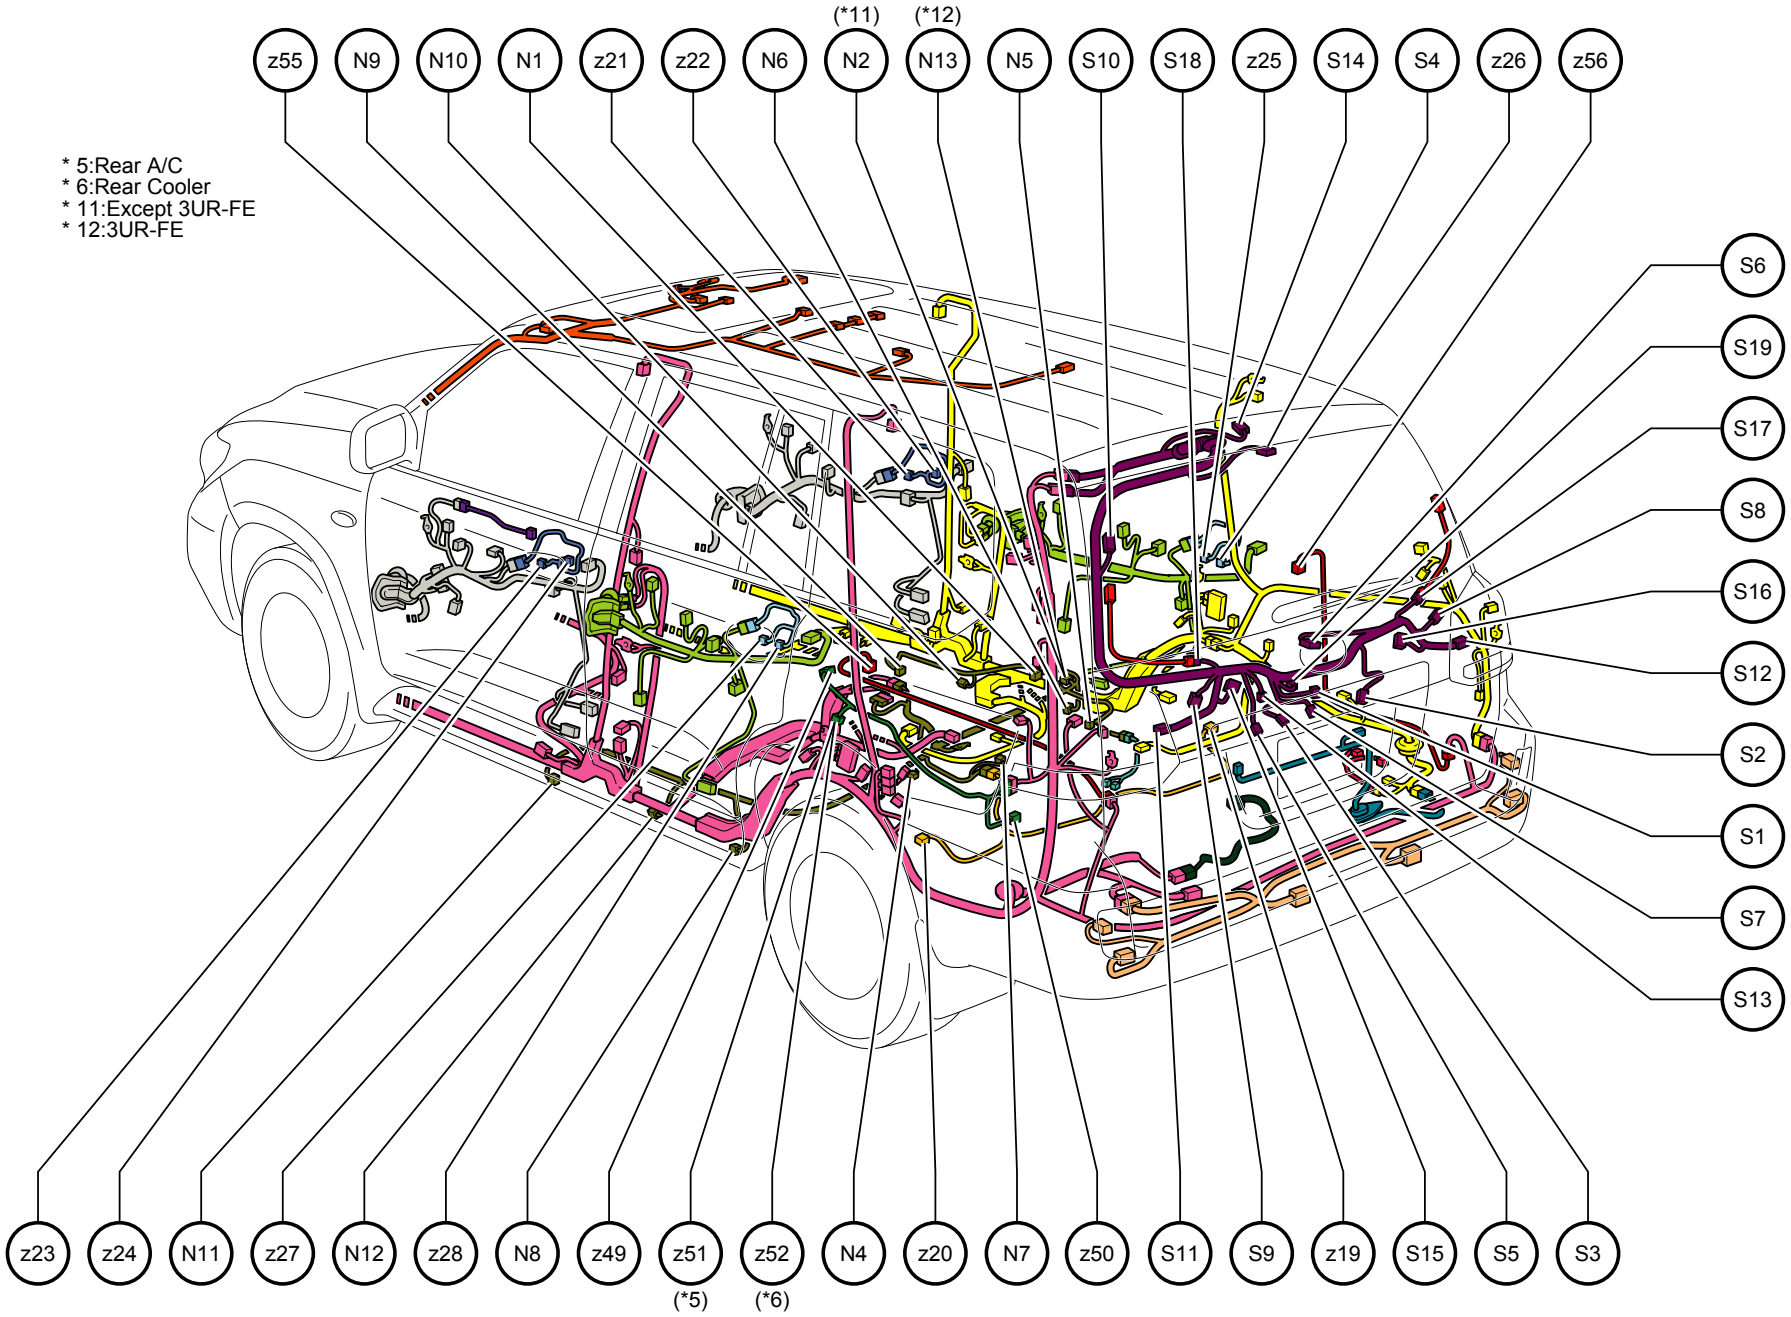
* 5:Rear A/C
* 6:Rear Cooler
* 11:Except 3UR-FE
* 12:3UR-FE
(*11)
(*12)
z55
N9
N10
N1
z21
z22
N6
N2
N13
N5
S10
S18
z25
S14
S4
z26
z56
S6
S19
S17
S8
S16
S12
S2
S1
S7
S13
z23
z24
N11
z27
N12
z28
N8
z49
z51
z52
N4
z20
N7
z50
S11
S9
z19
S15
S5
S3
(*5)
(*6)

N 1 Fuel Sender Gage Assembly (Main)
N 2 Fuel Pump Control ECU Assembly
N 4 No.1 Height Control Valve Assembly
N 5 Rear Height Control Sensor Sub-Assembly RH
N 6 Rear Shock Absorber Assembly RH
N 7 Rear Height Control Sensor Sub-Assembly LH
N 8 Rear Shock Absorber Assembly LH
N 9 Front Shock Absorber Assembly RH
N 10 Front Shock Absorber Control Valve Assembly RH
N 11 Front Shock Absorber Assembly LH
N 12 Front Shock Absorber Control Valve Assembly LH
N 13 Fuel Pump Control ECU Assembly


S 1 Back Door Lock Assembly
S 2 License Plate Light Assembly RH
S 3 License Plate Light Assembly LH
S 4 Center Stop Light Assembly
S 5 Rear Television Camera Assembly
S 6 Rear Wiper Motor Assembly
S 7 Back Door Opener Switch Assembly
S 8 Rear Header Speaker Assembly RH
S 9 Rear Header Speaker Assembly LH
S 10 Glass Breakage Sensor (Back Door Glass)
S 11 Rear Light Assembly LH
S 12 Rear Light Assembly RH
S 13 Option Connector (Back Guide Monitor)
S 14 Noise Filter (Rear Window Defogger and Stop)
S 15 Junction Connector
S 16 Junction Connector
S 17 Rear Window Defogger (Back Door Glass)
S 18 Rear Window Defogger (Back Door Glass)
S 19 Power Back Door Main Switch

z 19 Rear Speed Sensor RH
z 20 Rear Speed Sensor LH
z 21 Front Door Outside Handle Assembly RH
z 22 Front Door Electrical Key Oscillator RH
z 23 Front Door Outside Handle Assembly LH
z 24 Front Door Electrical Key Oscillator LH
z 25 Rear Door Outside Handle Assembly RH
z 26 Rear Door Electrical Key Oscillator RH
z 27 Rear Door Outside Handle Assembly LH
z 28 Rear Door Electrical Key Oscillator LH
z 49 Rear Blower with Fan Motor Sub-Assembly
z 50 Rear Cooling Unit Expansion Valve
z 51 Blower Motor Control
z 52 Rear Blower Resistor
z 55 Rear No.1 Cooler Thermistor LH
z 56 Rear No.1 Cooler Thermistor RH


N 1
White



N 2
Black

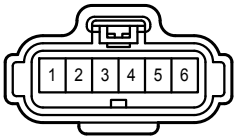

N 4
Black

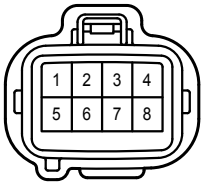

N 5
Black



N 6
Gray



N 7
Black



N 8
Gray



N 9
Gray



N 10
Gray




N 11
Gray




N 12
Gray



N 13
Gray

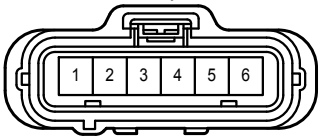

S 1
Black

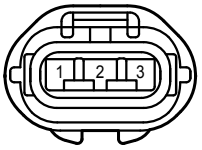


S 2
Gray




S 3
Gray




S 4
Gray




S 5
Black

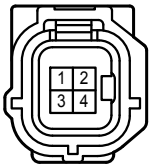


S 6
Black

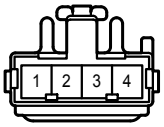


S 7
White

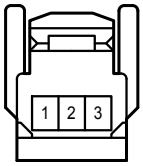

S 8
Black



S 9
Black



S 10
White




S 11
White




S 12
White




S 13
White

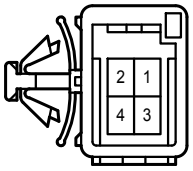


S 14
Black




S 15
White

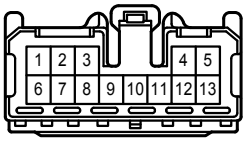


S 16
White

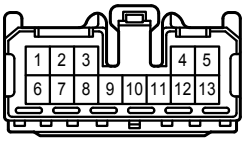


S 17
White

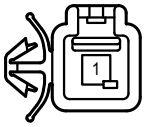

S 18
White

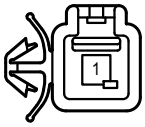

S 19
Blue




z 19
Black




z 20
Black




z 21
White

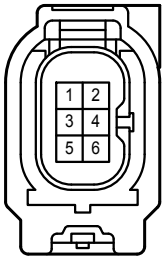


z 22
Black

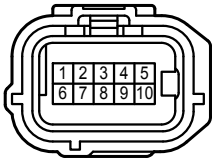


z 23
White

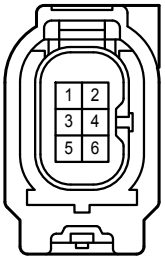

z 24
Black

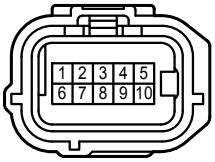


z 25
White

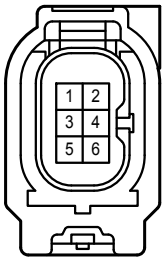

z 26
Black




z 27
White

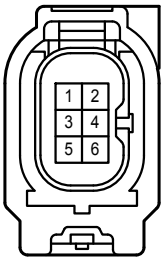


z 28
Black




z 49
Black

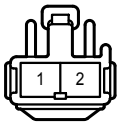


z 50
Black




z 51
Black

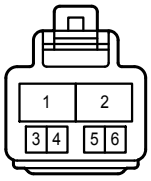

z 52
Black

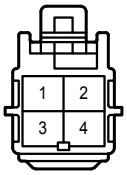


z 55
White




z 56
White

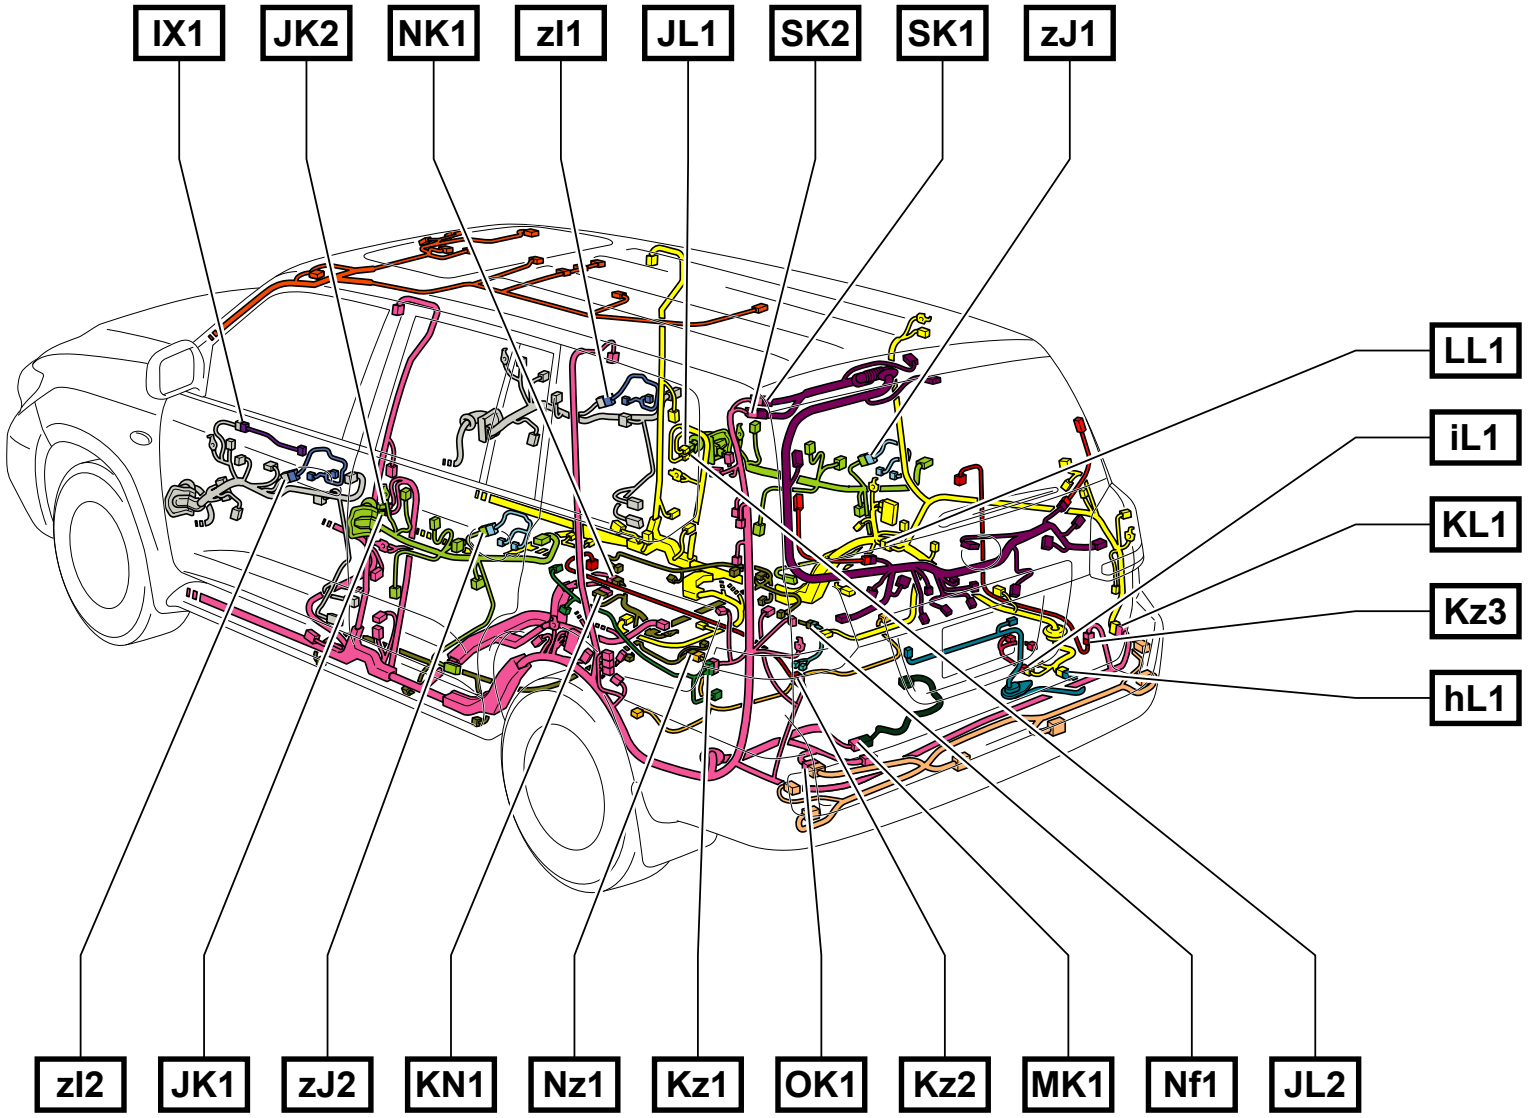



IX1
JK2
NK1
zI1
JL1
SK2
SK1
zJ1
LL1
iL1
KL1
Kz3
hL1
zI2
JK1
zJ2
KN1
Nz1
Kz1
OK1
Kz2
MK1
Nf1
JL2


IX1
White

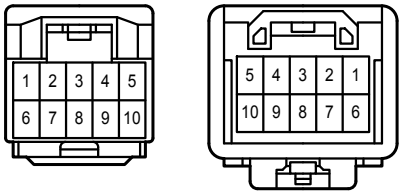


JK1
White

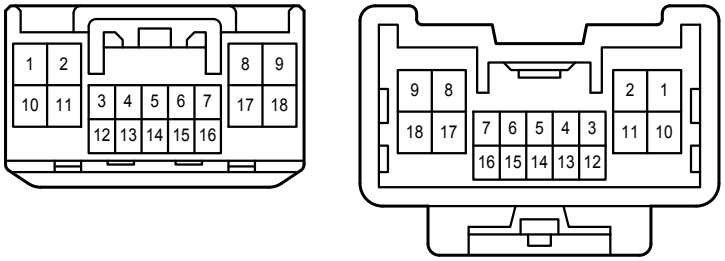


JK2
White

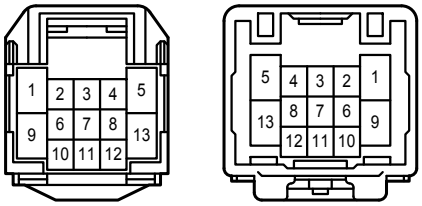


JL1
White

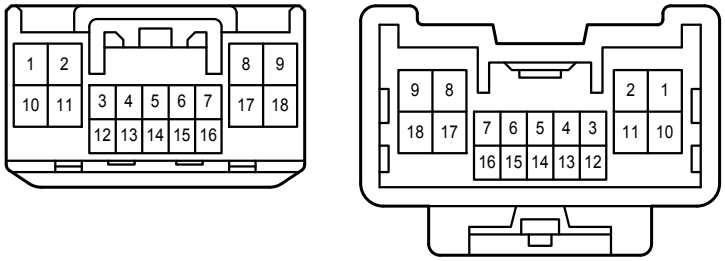


JL2
White

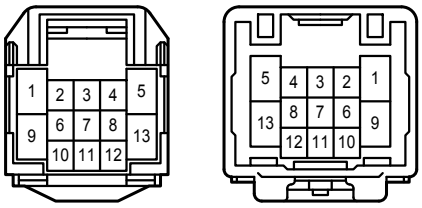


KL1
White

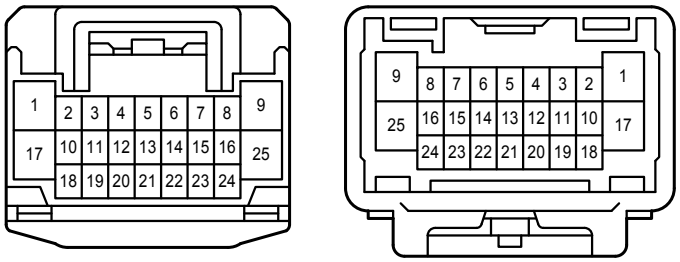


KN1
White

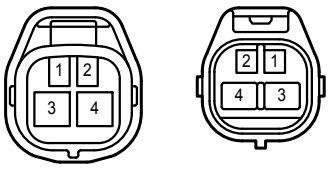


Kz1
Blue

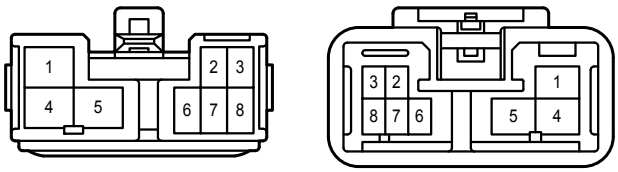


Kz2
White

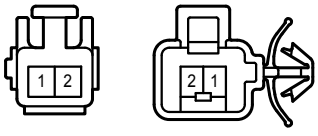


Kz3
White

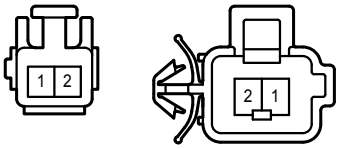


LL1
White




MK1
White

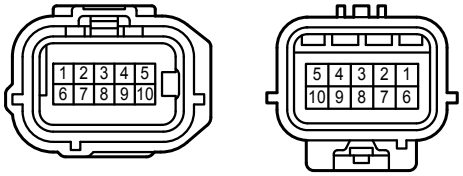


NK1
White

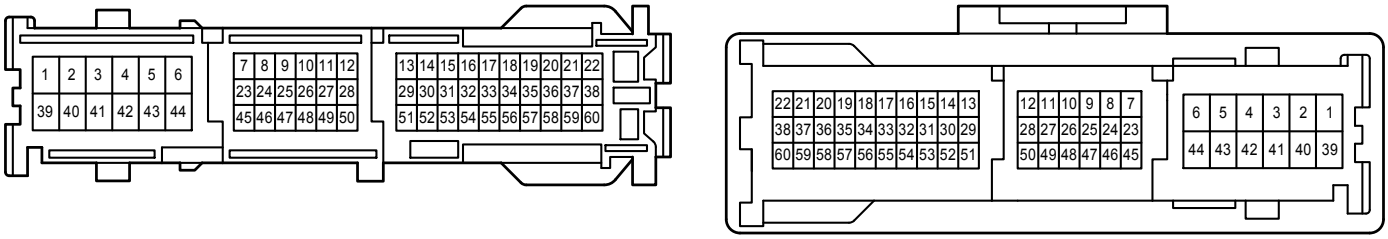


Nf1
White

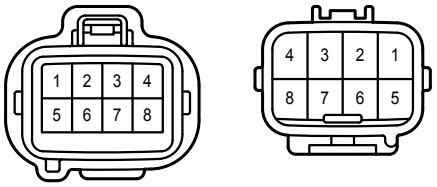


Nz1
Gray

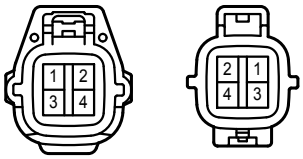


OK1
Black

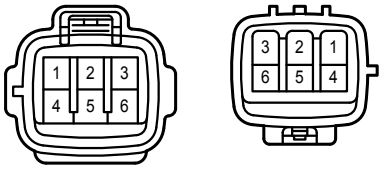



SK1
White

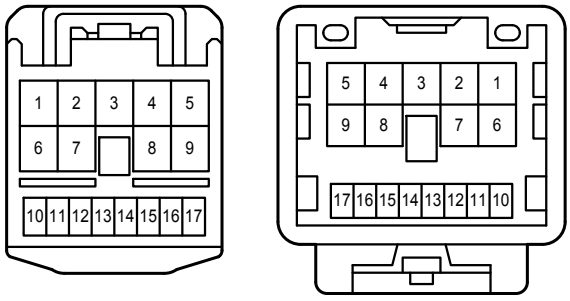


SK2
Blue

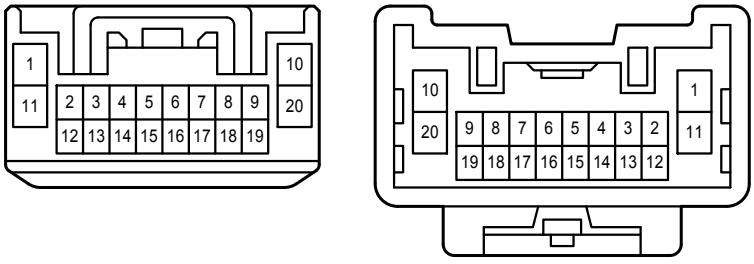

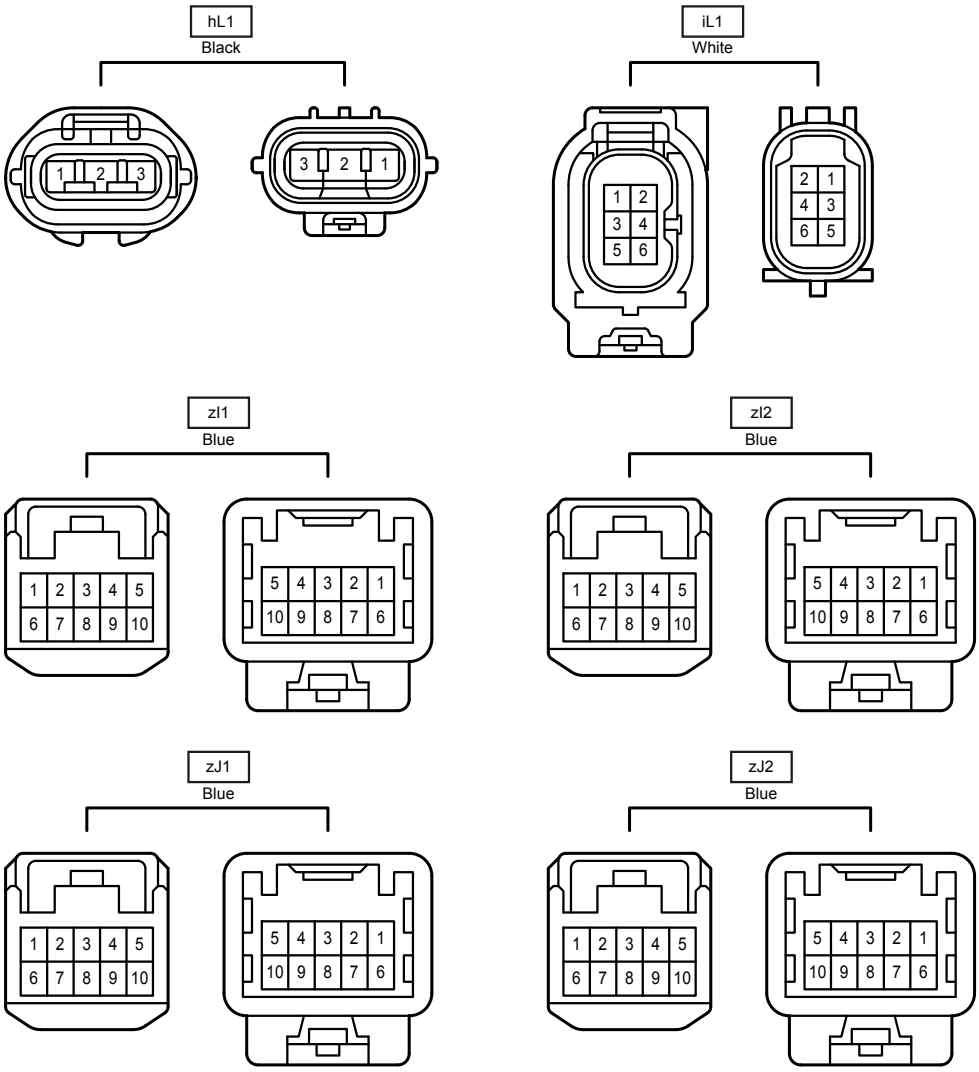
hL1
Black
1 2 3
3 2 1
iL1
White
1 2
3 4
5 6
2 1
4 3
6 5
zI1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zI2
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zJ1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zJ2
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

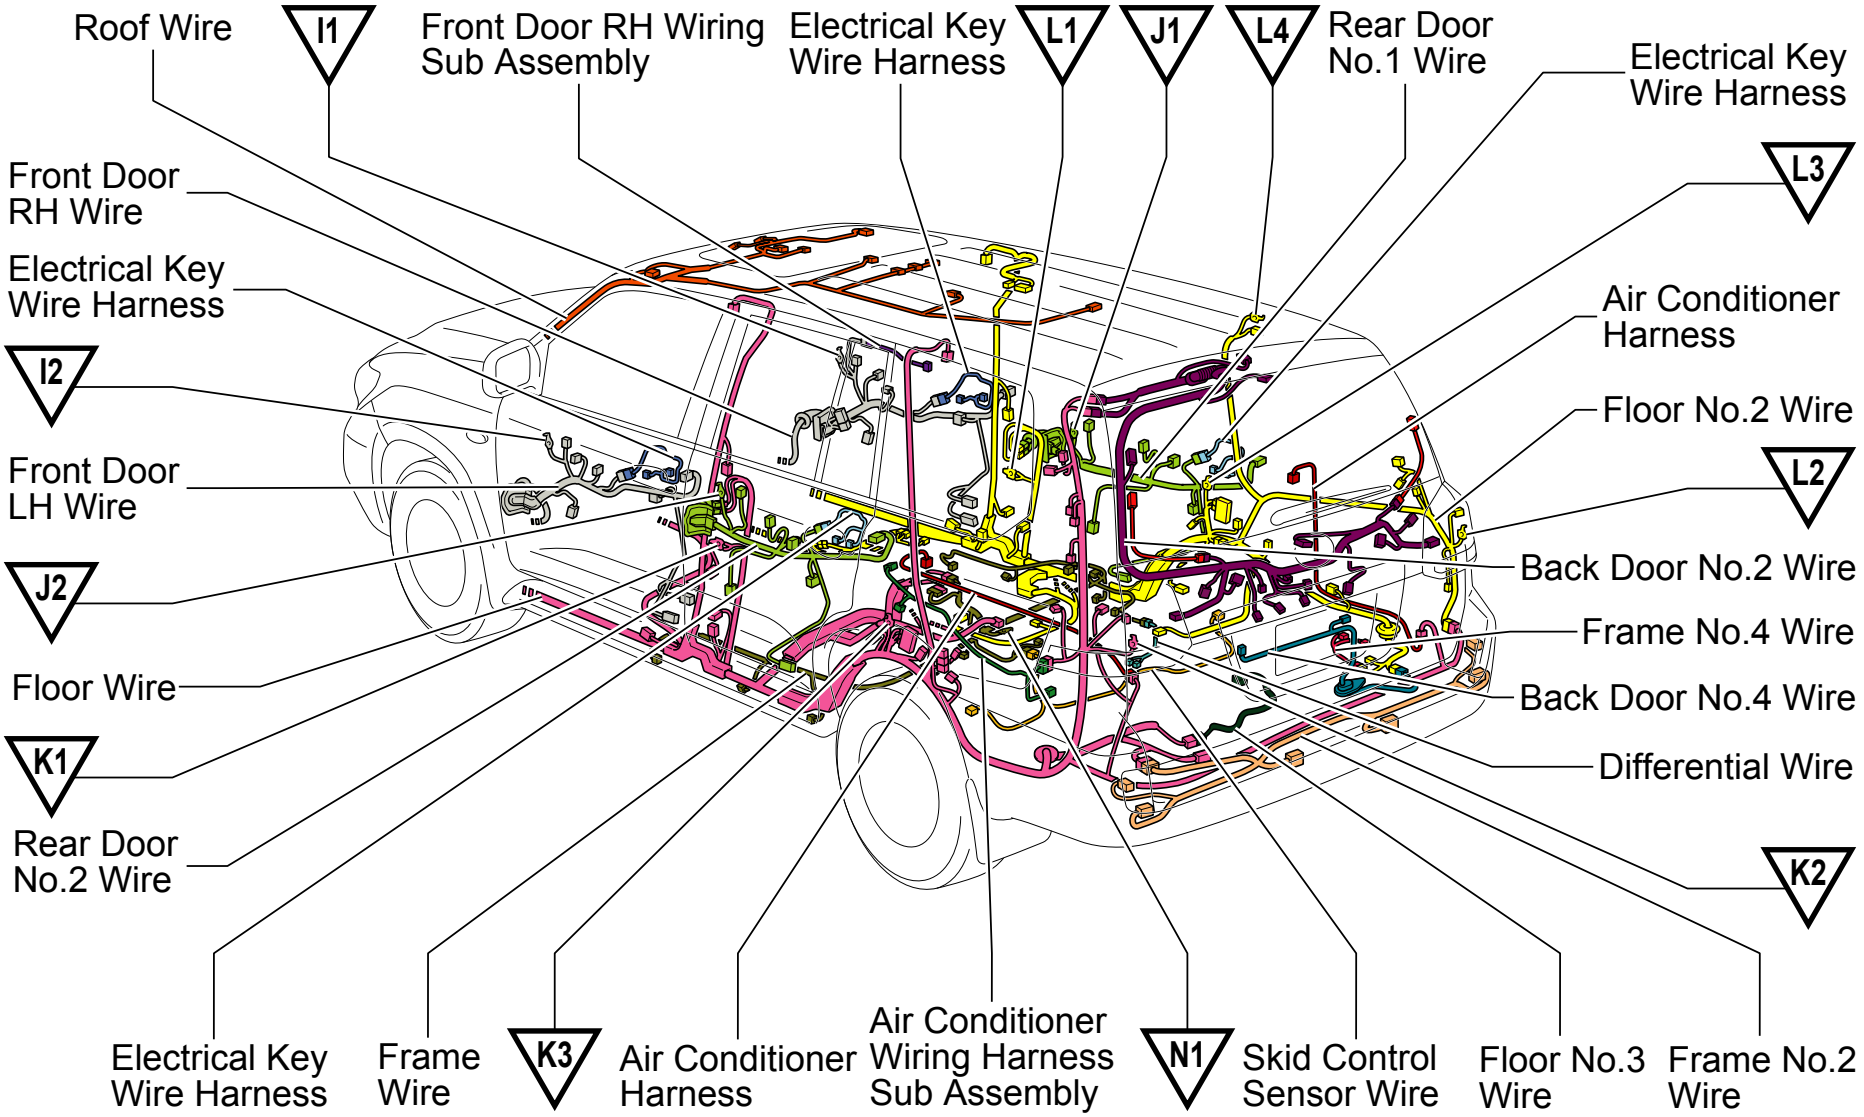

Roof Wire
I1
Front Door RH Wiring Sub Assembly
Electrical Key Wire Harness
L1
J1
L4
Rear Door No.1 Wire
Electrical Key Wire Harness
L3
Front Door RH Wire
Electrical Key Wire Harness
Air Conditioner Harness
I2
Floor No.2 Wire
L2
Front Door LH Wire
Back Door No.2 Wire
J2
Frame No.4 Wire
Floor Wire
Back Door No.4 Wire
K1
Differential Wire
Rear Door No.2 Wire
K2
Electrical Key Wire Harness
Frame Wire
K3
Air Conditioner Harness
Air Conditioner Wiring Harness Sub Assembly
N1
Skid Control Sensor Wire
Floor No.3 Wire
Frame No.2 Wire

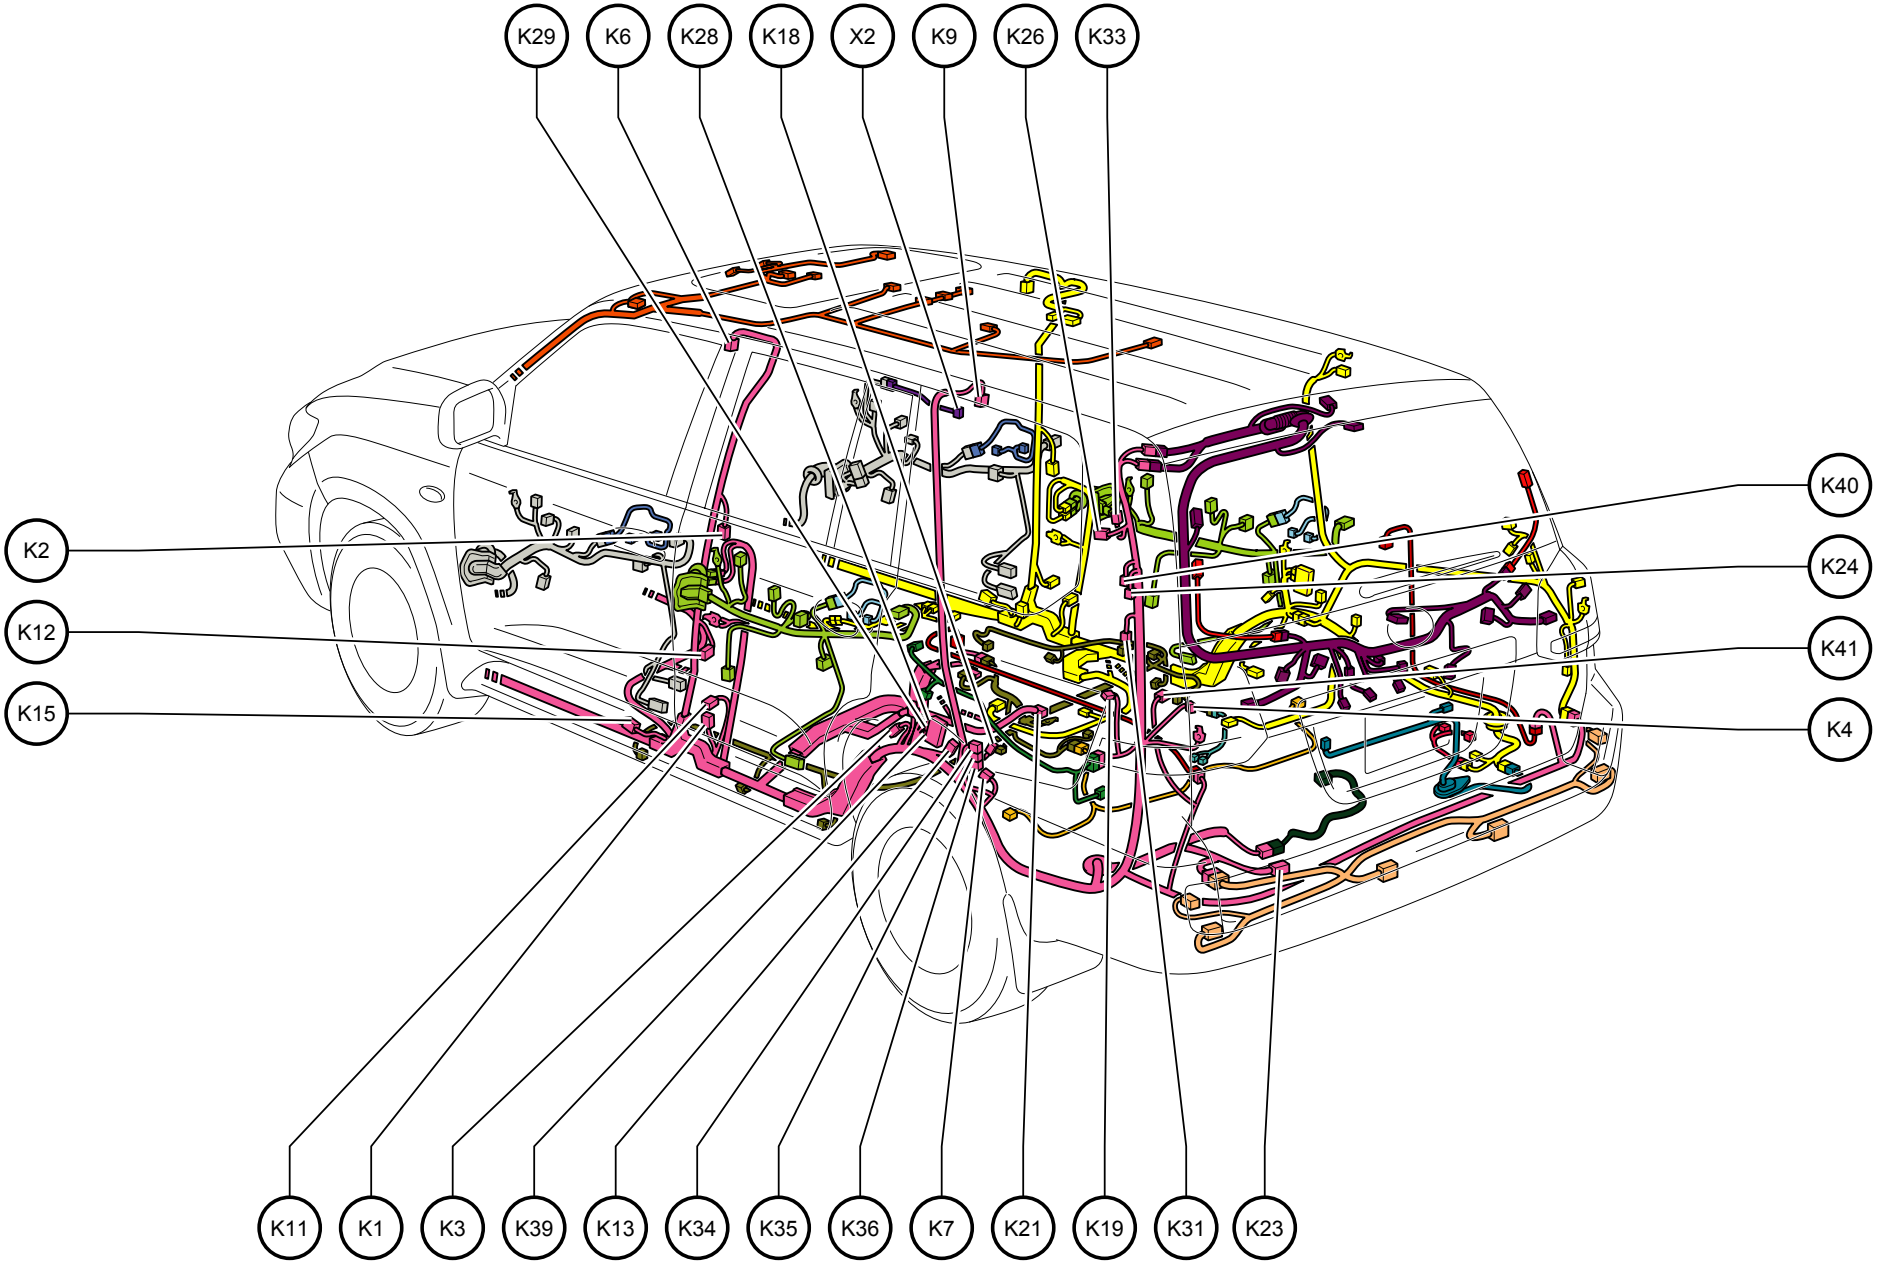
K29
K6
K28
K18
X2
K9
K26
K33
K2
K12
K15
K40
K24
K41
K4
K11
K1
K3
K39
K13
K34
K35
K36
K7
K21
K19
K31
K23

K 1 Front Pretensioner LH
K 2 Front Door Courtesy Light Switch Assembly LH
K 3 Rear Door Courtesy Light Switch Assembly LH
K 4 Rear Combination Light Assembly LH
K 6 Curtain Shield Airbag Assembly Circuit LH
K 7 Rear Side Airbag Sensor Assembly LH
K 9 Curtain Shield Airbag Assembly Circuit LH
K 11 Front Pre-Crash Seat Belt Motor LH
K 12 Front Tension Reducer LH
K 13 Rear Pretensioner LH
K 15 No.2 Interior Illumination Light Assembly
K 18 Theft Warning Siren Assembly
K 19 Rear A/C Blower Assembly
K 21 Cooler Thermistor LH
K 23 Outside Luggage Electrical Key Antenna
K 24 Towing Converter
K 26 Glass Breakage Sensor (Quarter Glass LH)
K 28 Junction Connector
K 29 Junction Connector
K 31 Diode (Rear Cooler)
K 33 Diode (Stop Light)
K 34 Suspension Control ECU
K 35 Suspension Control ECU
K 36 Suspension Control ECU
K 39 Junction Connector
K 40 Towing Converter
K 41 Rear Power Outlet Socket Assembly

X 2 Seat Memory Switch RH

K 1
Yellow

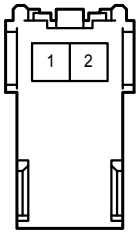

K 2
White




K 3
White




K 4
White




K 6
Black

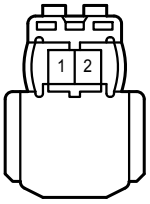


K 7
Yellow

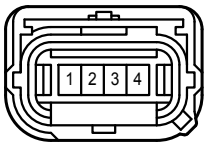


K 9
Black

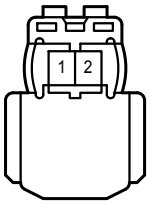


K 11
White



K 12
White




K 13
Yellow

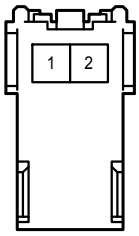


K 15
White




K 18
Gray

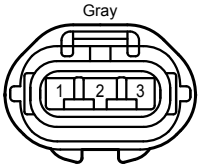


K 19
White

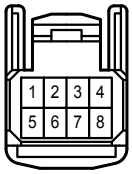


K 21
Black



K 23
White

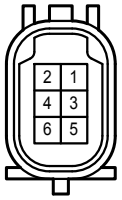

K 24
White

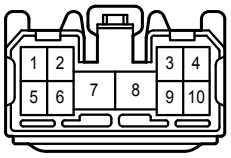


K 26
White



K 28
White



K 29
White




K 31
White




K 33
White




K 34
Black

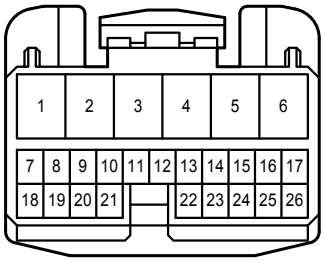


K 35
Black

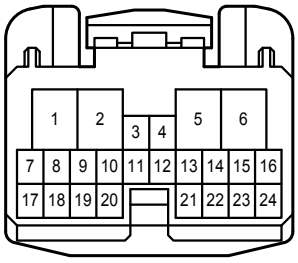


K 36
Black

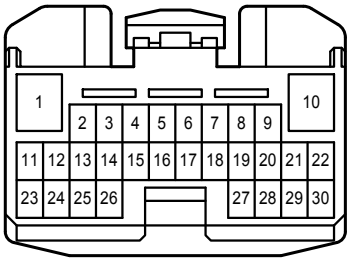


K 39
White




K 40
White




K 41
White



X 2
Black

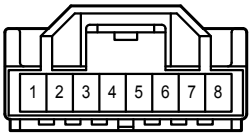

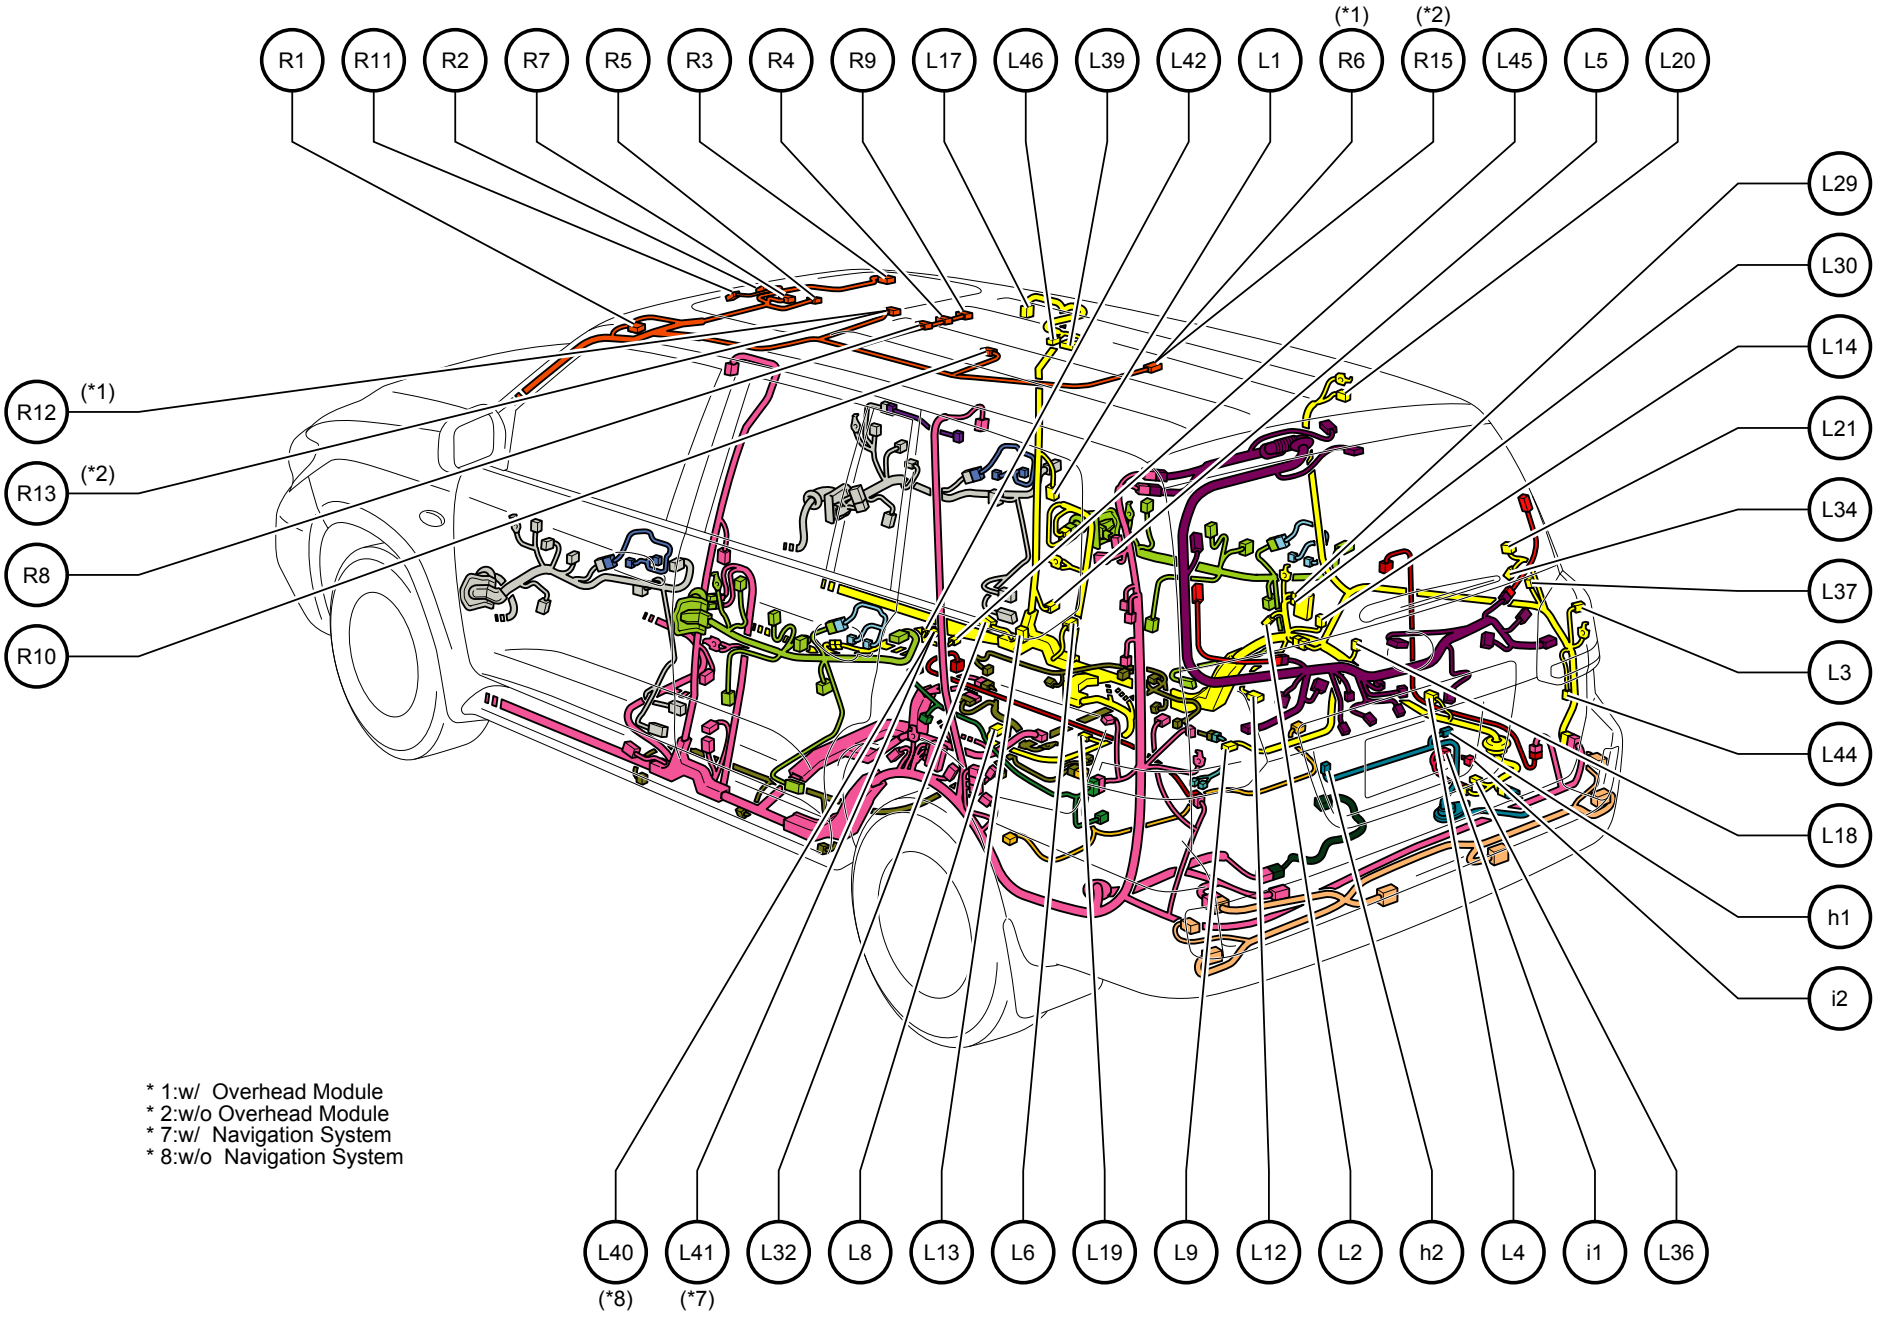
R1
R11
R2
R7
R5
R3
R4
R9
L17
L46
L39
L42
L1
(*1)
R6
(*2)
R15
L45
L5
L20
L29
L30
L14
L21
L34
L37
L3
L44
L18
h1
i2
(*1)
R12
(*2)
R13
R8
R10
L40
(*8)
L41
(*7)
L32
L8
L13
L6
L19
L9
L12
L2
h2
L4
i1
L36
* 1:w/ Overhead Module
* 2:w/o Overhead Module
* 7:w/ Navigation System
* 8:w/o Navigation System

L 1 Front Door Courtesy Light Switch Assembly RH
L 2 Rear Door Courtesy Light Switch Assembly RH
L 3 Rear Combination Light Assembly RH
L 4 No.1 with Box Speaker Assembly
L 5 Front Pre-Crash Seat Belt Motor RH
L 6 Front Tension Reducer RH
L 8 Rear Indoor Electrical Key Oscillator
L 9 Indoor Luggage Compartment Electrical Key Oscillator
L 12 Cooler Thermistor RH
L 13 Front Pretensioner RH
L 14 Rear Pretensioner RH
L 17 Curtain Shield Airbag Assembly Circuit RH
L 18 Rear Side Airbag Sensor Assembly RH
L 19 Rear Floor Side Airbag Sensor
L 20 Curtain Shield Airbag Assembly Circuit RH
L 21 Door Control Receiver
L 29 Junction Connector
L 30 Junction Connector
L 32 No.1 Interior Illumination Light Assembly RH
L 34 Glass Breakage Sensor (Quarter Glass RH)
L 36 Height Control Pump and Motor Assembly
L 37 Option Connector (Theft Warning Radar Sensor)
L 39 Television Display Assembly
L 40 Multi-Media Interface ECU Assembly
L 41 Multi-Media Interface ECU Assembly
L 42 Multi-Media Interface ECU Assembly
L 44 Option Connector (Parking Assist-Sensor)
L 45 Multi-Media Interface ECU Assembly
L 46 Television Display Assembly

R 1 Visor Assembly LH
R 2 Inner Rear View Mirror Assembly
R 3 Visor Assembly RH
R 4 No.2 Room Light Assembly
R 5 Sliding Roof Control ECU
R 6 No.3 Room Light Assembly
R 7 Overhead Module
R 8 No.2 Room Light Assembly
R 9 No.2 Room Light Assembly
R 10 No.1 Room Light Assembly
R 11 Rain Sensor
R 12 No.1 Room Light Assembly
R 13 No.1 Room Light Assembly
R 15 No.3 Room Light Assembly

h 1 Tire Carrier Courtesy Light Switch
h 2 License Plate Light Assembly RH

i 1 Fuel Temperature Sensor
i 2 Pressure Accumulator Sensor

L 1
White




L 2
White




L 3
White




L 4
White




L 5
White




L 6
White




L 8
Black

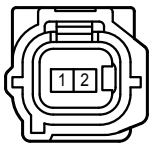


L 9
Black

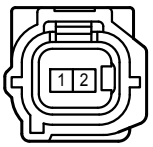


L 12
Black




L 13
Yellow

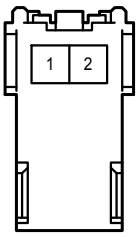

L 14
Yellow

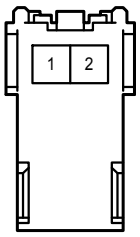

L 17
Black

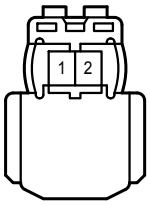


L 18
Yellow




L 19
Yellow




L 20
Black

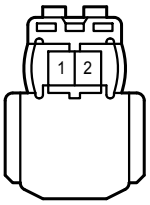


L 21
White

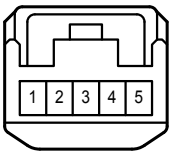

L 29
White



L 30
White



L 32
White




L 34
White




L 36
Black



L 37
White



L 39
White

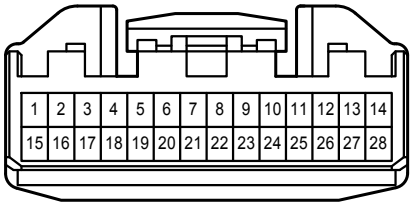


L 40
White




L 41
Black




L 42
White

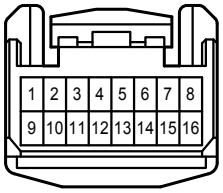

L 44
White

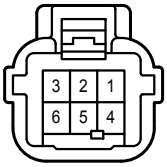


L 45
Brown

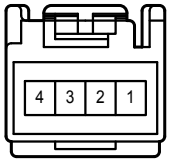


L 46
Blue




R 1
White

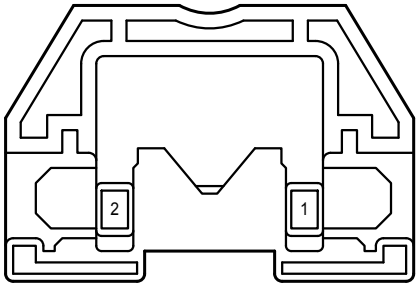


R 2
White

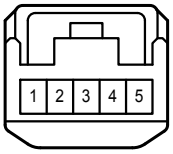


R 3
White

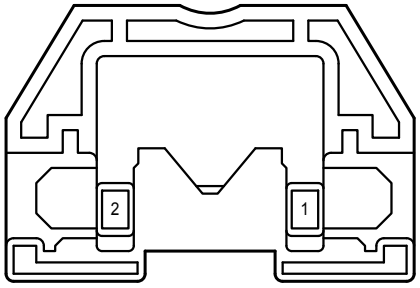


R 4
White

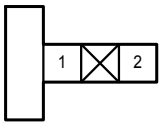


R 5
White

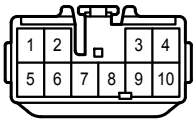


R 6
White




R 7
White

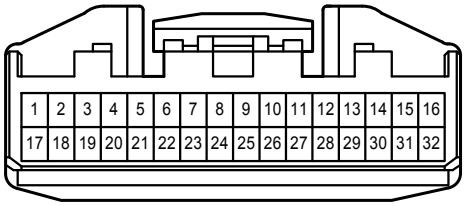


R 8
White




R 9
White




R 10
White

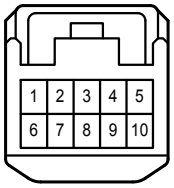


R 11
Black

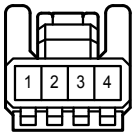


R 12
White



R 13
White



R 15
White



h 1
White




h 2
White




i 1
Gray



i 2
Black

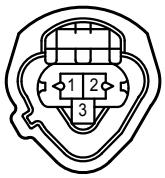

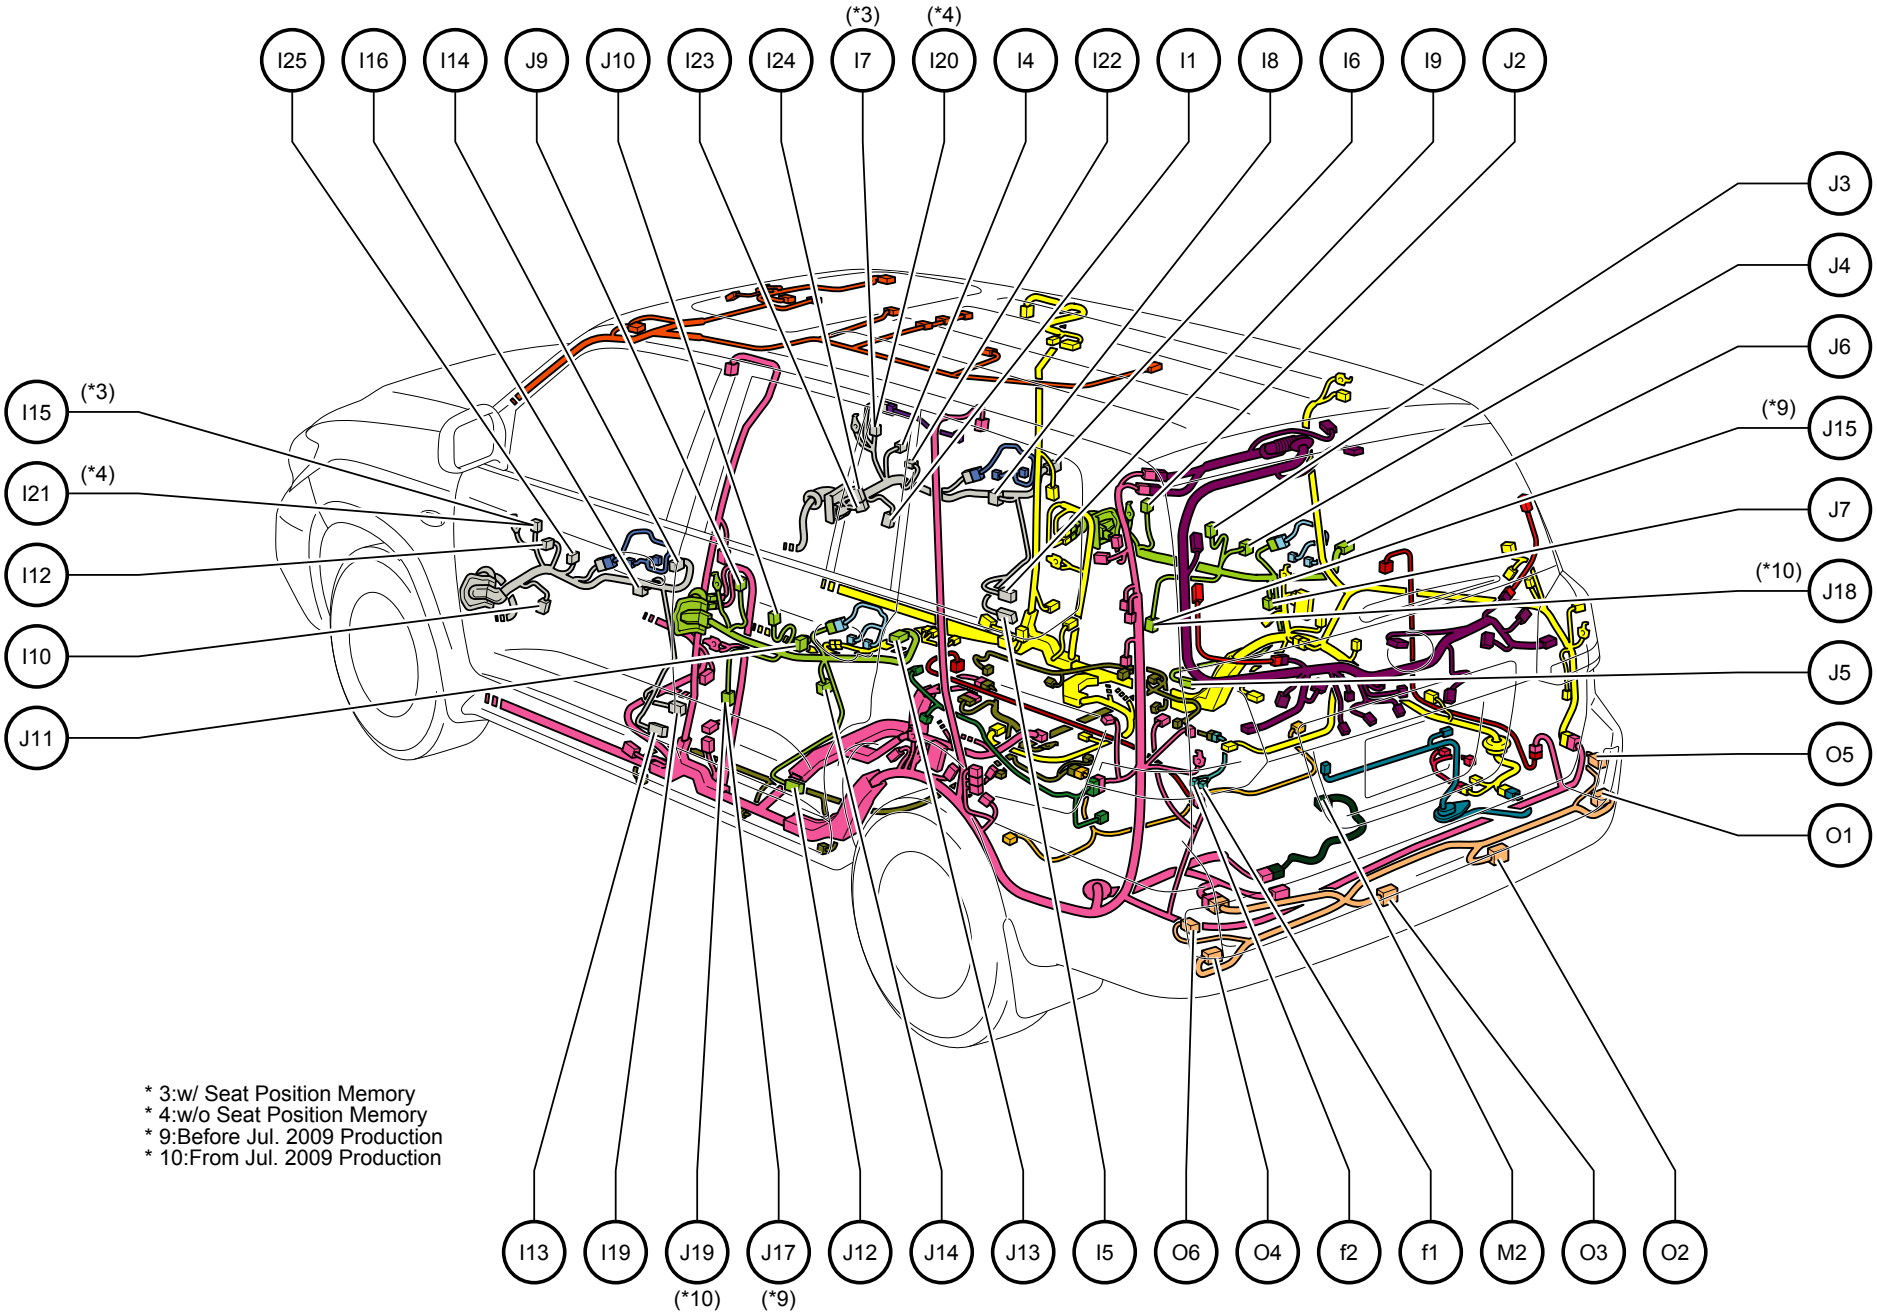

* 3:w/ Seat Position Memory
* 4:w/o Seat Position Memory
* 9:Before Jul. 2009 Production
* 10:From Jul. 2009 Production

I 1 Front No.1 Speaker Assembly RH
I 4 Front Power Window Regulator Motor Assembly RH
I 5 Front Door Courtesy Light Assembly RH
I 6 Front Door Lock Assembly RH
I 7 Outer Rear View Mirror Assembly RH
I 8 Diode (Front Door Courtesy Switch RH)
I 9 Front Side Airbag Sensor Assembly RH
I 10 Front No.1 Speaker Assembly LH
I 12 Front Power Window Regulator Motor Assembly LH
I 13 Front Door Courtesy Light Assembly LH
I 14 Front Door Lock Assembly LH
I 15 Outer Rear View Mirror Assembly LH
I 16 Diode (Front Door Courtesy Switch LH)
I 19 Front Side Airbag Sensor Assembly LH
I 20 Outer Rear View Mirror Assembly RH
I 21 Outer Rear View Mirror Assembly LH
I 22 Multiplex Network Master Switch Assembly
I 23 Outer Mirror Control ECU Assembly
I 24 Outer Mirror Control ECU Assembly
I 25 Front Power Window Regulator Switch Assembly LH

J 2 Rear No.3 Speaker Assembly RH
J 3 Rear Power Window Regulator Switch Assembly RH
J 4 Rear Power Window Regulator Motor Assembly RH
J 5 Rear Door Courtesy Light Assembly RH
J 6 Rear Door Lock Assembly RH
J 7 Diode (Rear Door Courtesy Switch RH)
J 9 Rear No.3 Speaker Assembly LH
J 10 Rear Power Window Regulator Switch Assembly LH
J 11 Rear Power Window Regulator Motor Assembly LH
J 12 Rear Door Courtesy Light Assembly LH
J 13 Rear Door Lock Assembly LH
J 14 Diode (Rear Door Courtesy Switch LH)
J 15 Rear Speaker Set RH
J 17 Rear Speaker Set LH
J 18 Rear Speaker Set RH
J 19 Rear Speaker Set LH

M 2 Fuel Sender Gage Assembly (Sub)


O 1 No.2 Ultrasonic Sensor RH
O 2 No.3 Ultrasonic Sensor RH
O 3 No.3 Ultrasonic Sensor LH
O 4 No.2 Ultrasonic Sensor LH
O 5 Rear Fog Light Assembly RH
O 6 Rear Fog Light Assembly LH

f 1 Differential Lock Shift Actuator
f 2 Differential Lock Switch

I 1
White




I 4
White

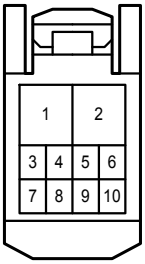


I 5
White



I 6
White

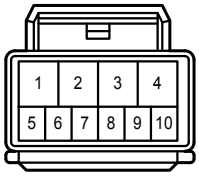


I 7
White

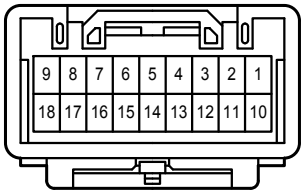

I 8
White




I 9
Yellow

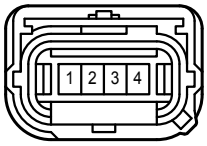

I 10
White




I 12
White

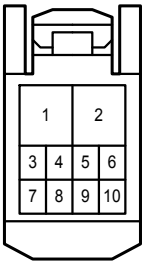


I 13
White



I 14
White

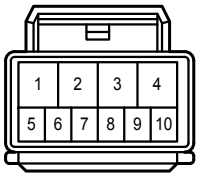


I 15
White

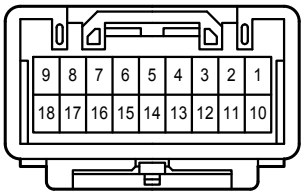


I 16
White




I 19
Yellow

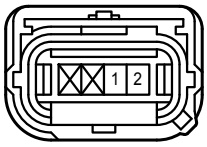


I 20
White

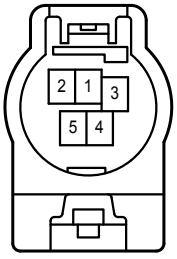


I 21
White

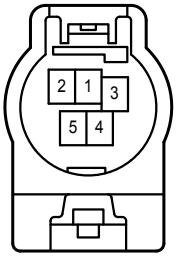


I 22
White

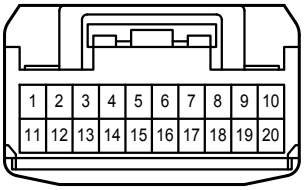


I 23
White

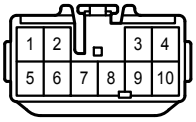


I 24
White

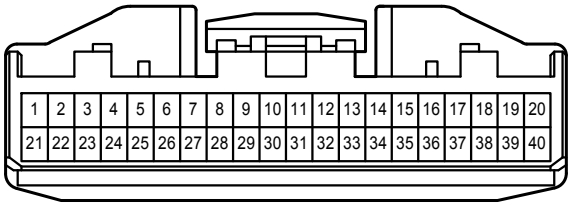


I 25
White

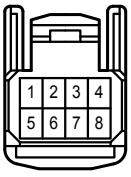


J 2
Black



J 3
White

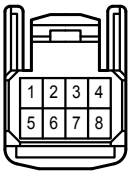


J 4
White

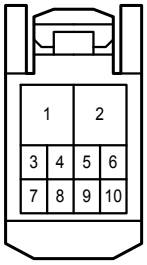

J 5
White




J 6
White

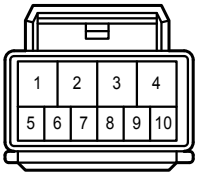


J 7
White




J 9
Black



J 10
White

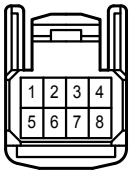


J 11
White

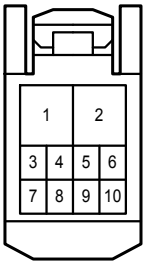

J 12
White



J 13
White

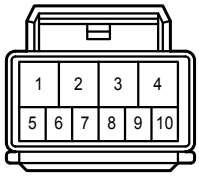

J 14
White



J 15
White



J 17
White



J 18
Black




J 19
Black




M 2
Black




O 1
Black

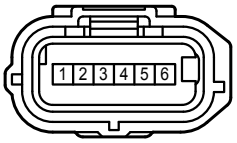


O 2
Black

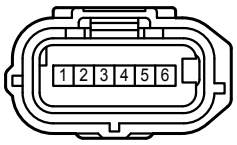


O 3
Black

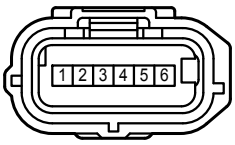


O 4
Black

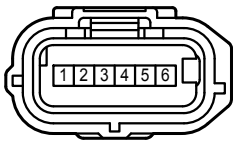

O 5
White

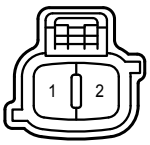


O 6
White

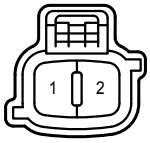


f 1
Gray



f 2
Blue

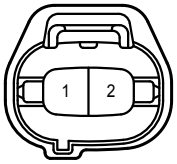

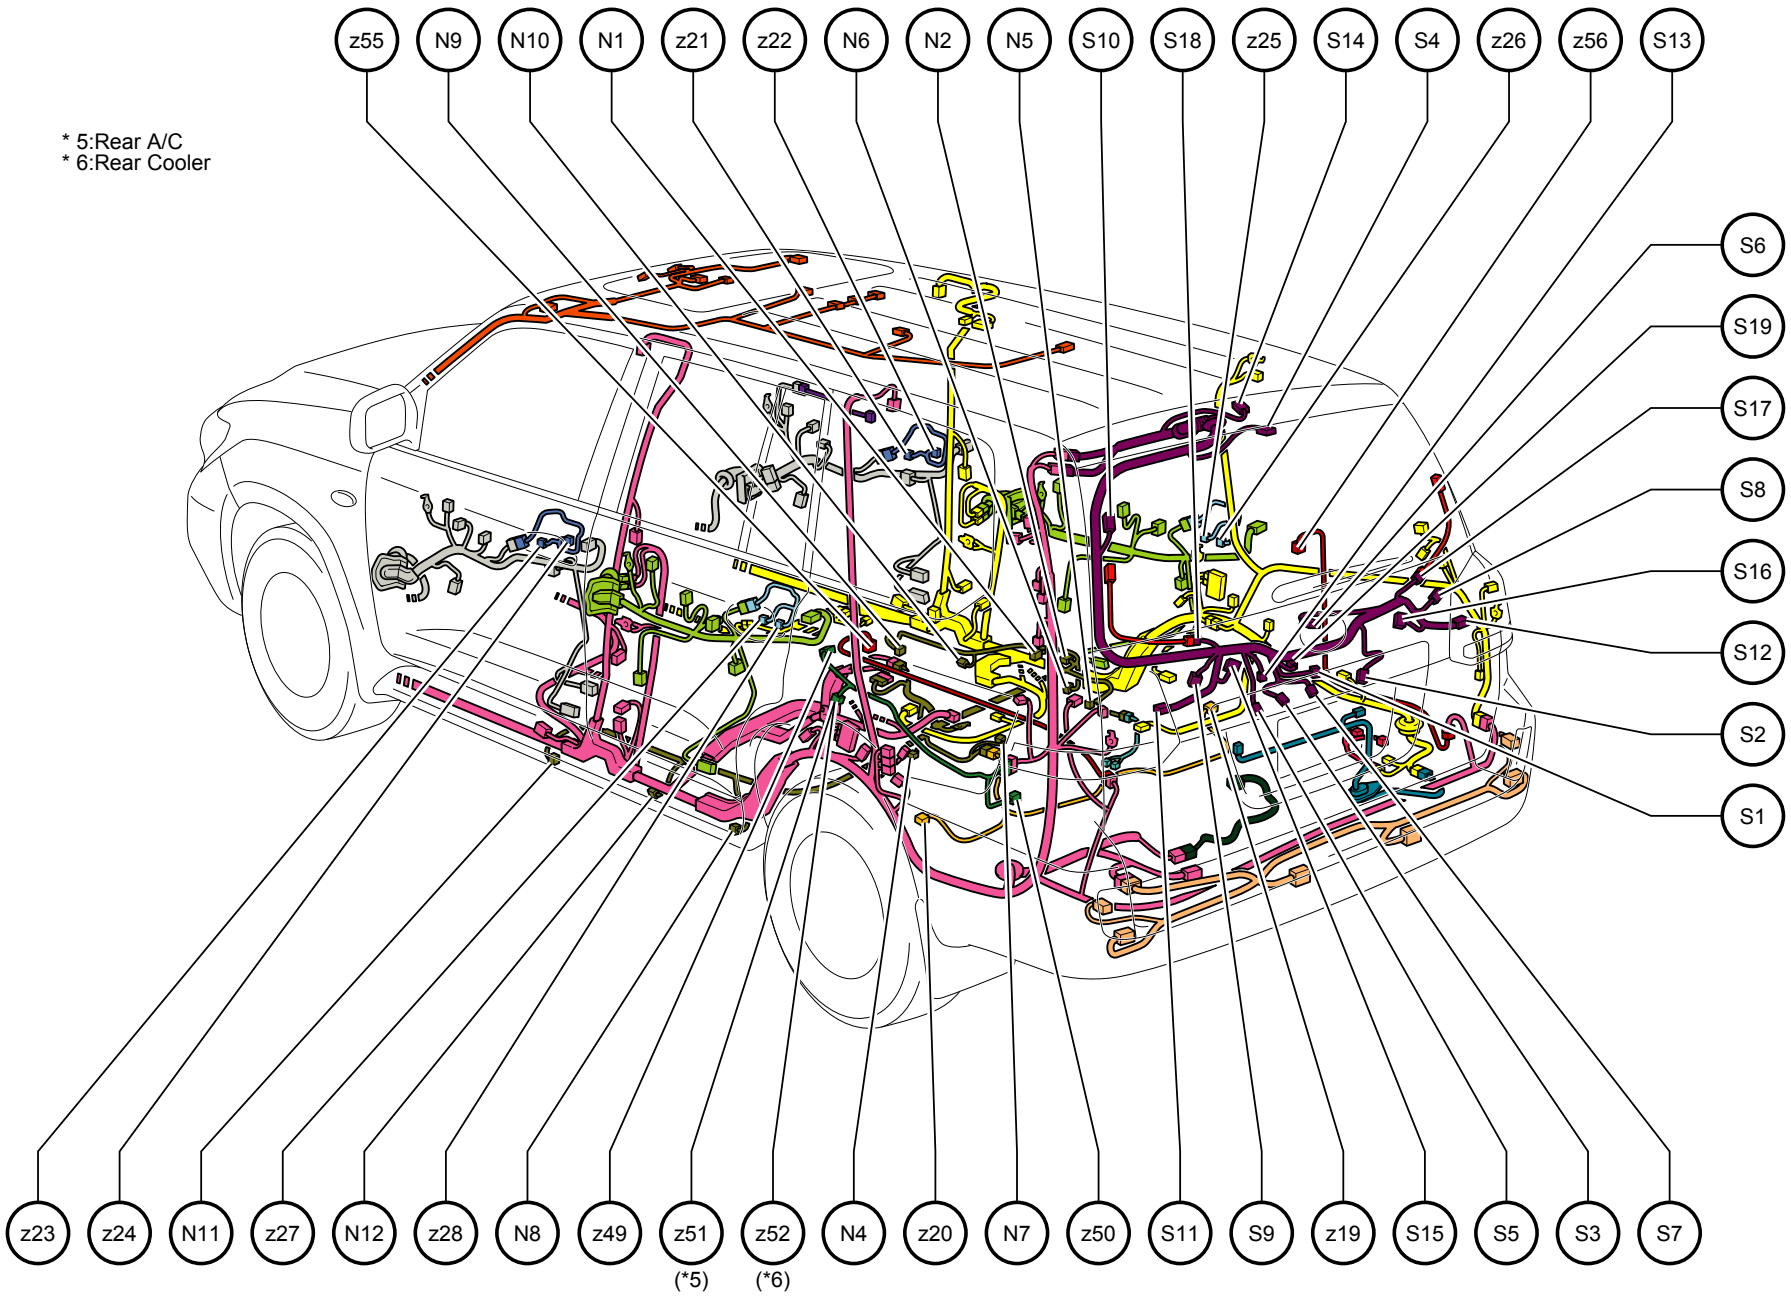

* 5:Rear A/C
* 6:Rear Cooler
z55
N9
N10
N1
z21
z22
N6
N2
N5
S10
S18
z25
S14
S4
z26
z56
S13
S6
S19
S17
S8
S16
S12
S2
S1
z23
z24
N11
z27
N12
z28
N8
z49
z51
(*5)
z52
(*6)
N4
z20
N7
z50
S11
S9
z19
S15
S5
S3
S7

N	1	Fuel Sender Gage Assembly (Main)
N	2	Fuel Pump Control ECU Assembly
N	4	No.1 Height Control Valve Assembly
N	5	Rear Height Control Sensor Sub-Assembly RH
N	6	Rear Shock Absorber Assembly RH
N	7	Rear Height Control Sensor Sub-Assembly LH
N	8	Rear Shock Absorber Assembly LH
N	9	Front Shock Absorber Assembly RH
N	10	Front Shock Absorber Control Valve Assembly RH
N	11	Front Shock Absorber Assembly LH
N	12	Front Shock Absorber Control Valve Assembly LH
S	1	Back Door Lock Assembly
S	2	License Plate Light Assembly RH
S	3	License Plate Light Assembly LH
S	4	Center Stop Light Assembly
S	5	Rear Television Camera Assembly
S	6	Rear Wiper Motor Assembly
S	7	Back Door Opener Switch Assembly
S	8	Rear Header Speaker Assembly RH
S	9	Rear Header Speaker Assembly LH
S	10	Glass Breakage Sensor (Back Door Glass)
S	11	Rear Light Assembly LH
S	12	Rear Light Assembly RH
S	13	Option Connector (Back Guide Monitor)
S	14	Noise Filter (Rear Window Defogger and Stop)
S	15	Junction Connector
S	16	Junction Connector
S	17	Rear Window Defogger (Back Door Glass)
S	18	Rear Window Defogger (Back Door Glass)
S	19	Power Back Door Main Switch
z	19	Rear Speed Sensor RH
z	20	Rear Speed Sensor LH
z	21	Front Door Outside Handle Assembly RH
z	22	Front Door Electrical Key Oscillator RH
z	23	Front Door Outside Handle Assembly LH
z	24	Front Door Electrical Key Oscillator LH
z	25	Rear Door Outside Handle Assembly RH
z	26	Rear Door Electrical Key Oscillator RH
z	27	Rear Door Outside Handle Assembly LH
z	28	Rear Door Electrical Key Oscillator LH
z	49	Rear Blower with Fan Motor Sub-Assembly
z	50	Rear Cooling Unit Expansion Valve
z	51	Blower Motor Control
z	52	Rear Blower Resistor
z	55	Rear No.1 Cooler Thermistor LH
z	56	Rear No.1 Cooler Thermistor RH


N 1
White



N 2
Black

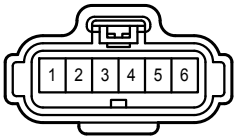

N 4
Black

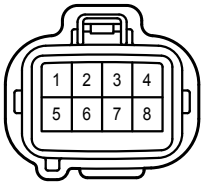

N 5
Black



N 6
Gray



N 7
Black



N 8
Gray



N 9
Gray



N 10
Gray




N 11
Gray



N 12
Gray



S 1
Black

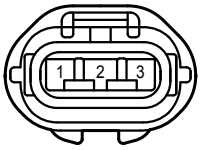


S 2
Gray




S 3
Gray




S 4
Gray




S 5
Black

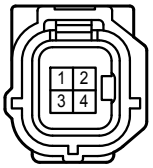


S 6
Black

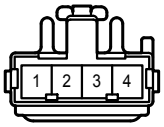


S 7
White

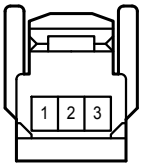

S 8
Black



S 9
Black



S 10
White




S 11
White




S 12
White




S 13
White

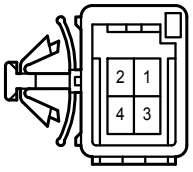


S 14
Black

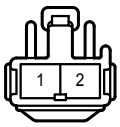


S 15
White

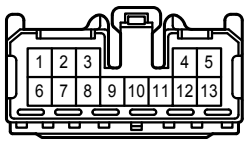


S 16
White

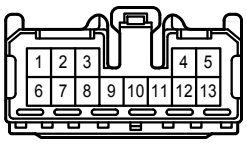


S 17
White

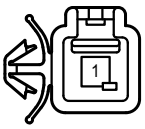

S 18
White

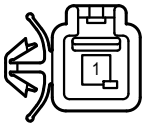

S 19
Blue




z 19
Black




z 20
Black




z 21
White

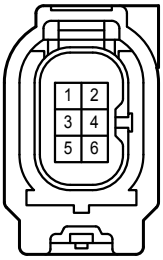


z 22
Black

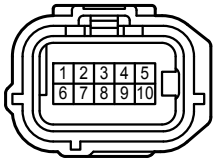


z 23
White

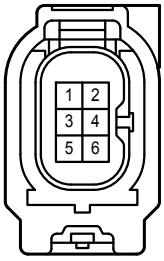

z 24
Black

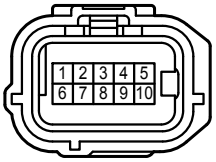


z 25
White

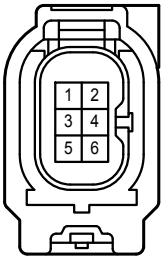


z 26
Black




z 27
White

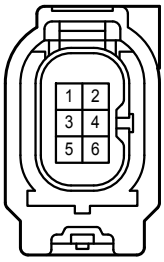


z 28
Black

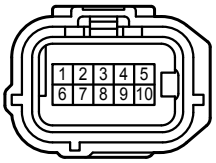


z 49
Black




z 50
Black



z 51
Black

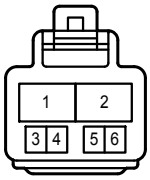

z 52
Black

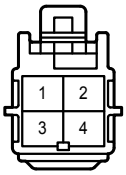


z 55
White




z 56
White

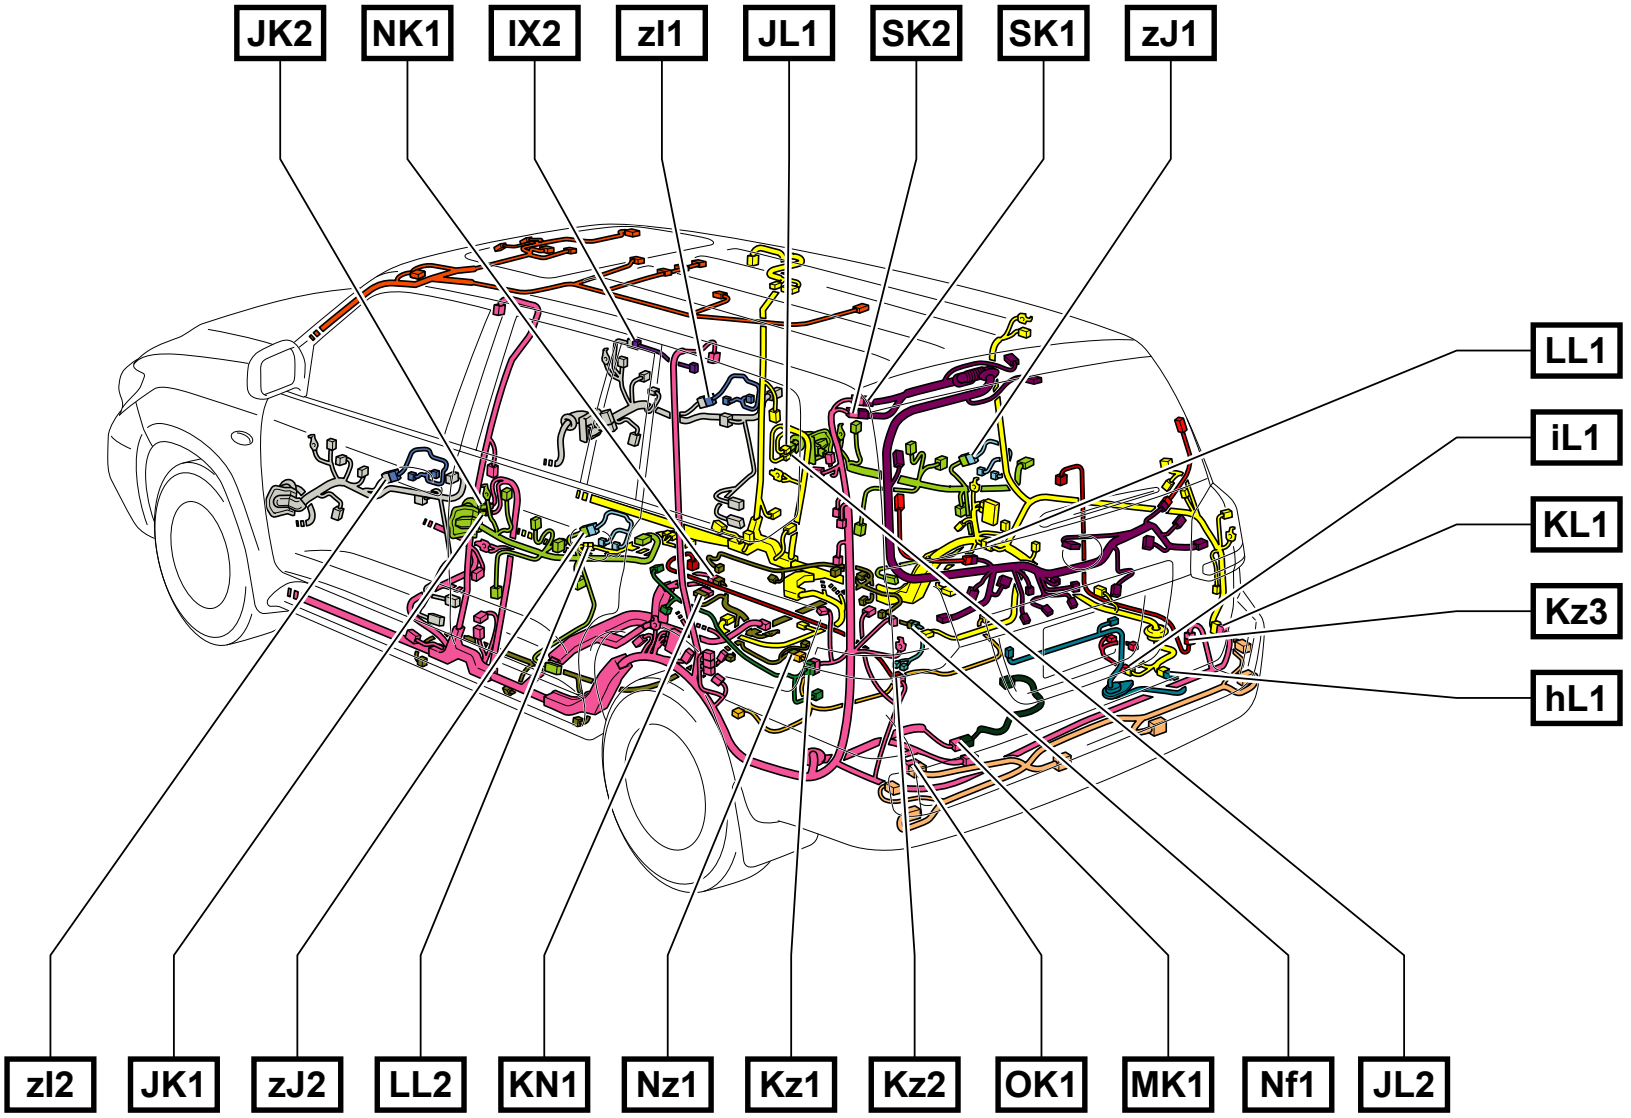



JK2
NK1
IX2
zI1
JL1
SK2
SK1
zJ1
LL1
iL1
KL1
Kz3
hL1
zI2
JK1
zJ2
LL2
KN1
Nz1
Kz1
Kz2
OK1
MK1
Nf1
JL2


IX2
White

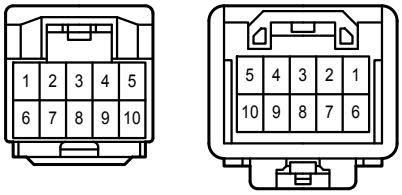


JK1
White

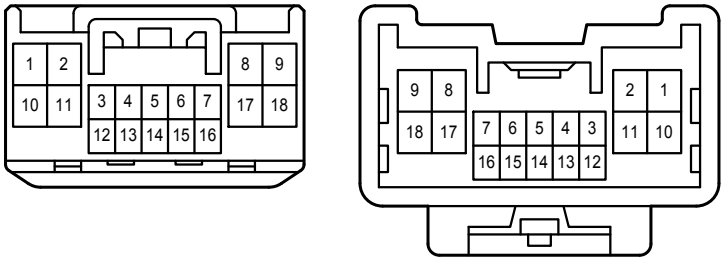


JK2
White

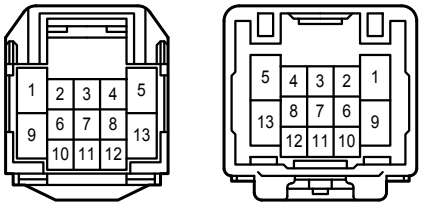


JL1
White

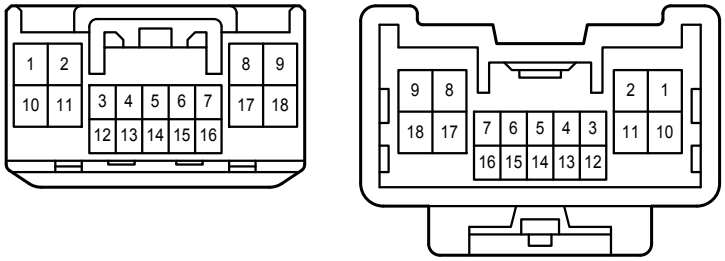


JL2
White

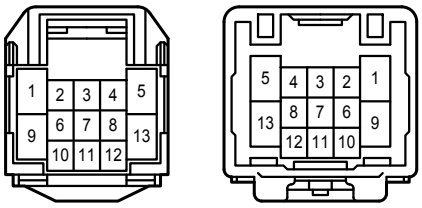


KL1
White

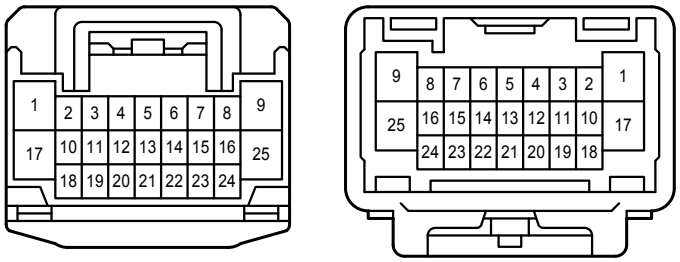


KN1
White

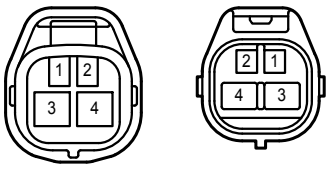


Kz1
Blue

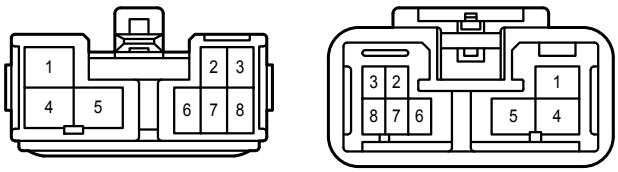


Kz2
White

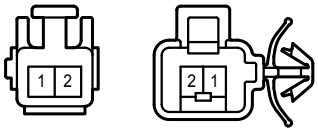


Kz3
White

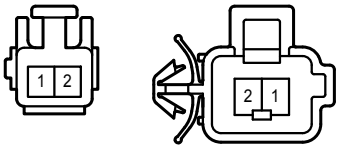


LL1
White




LL2
Gray

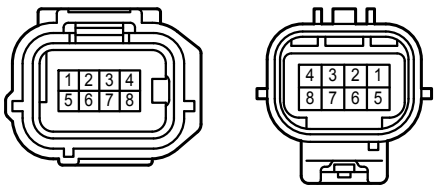


MK1
White

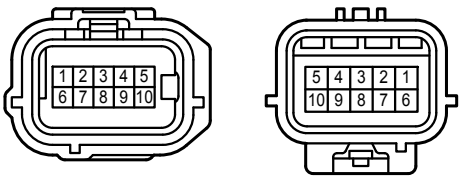


NK1
White

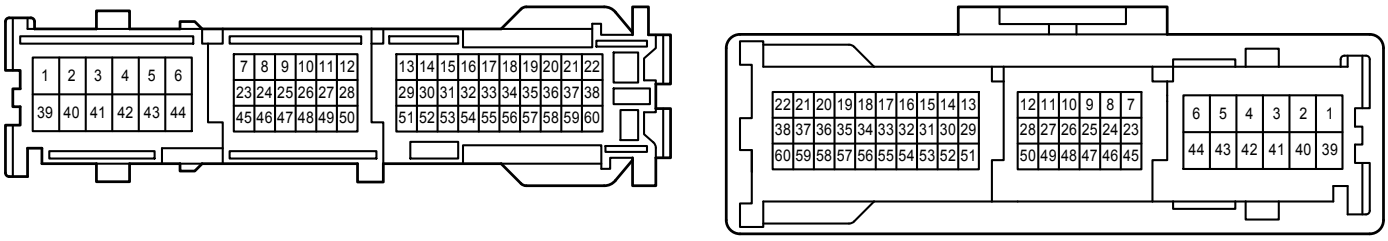


Nf1
White

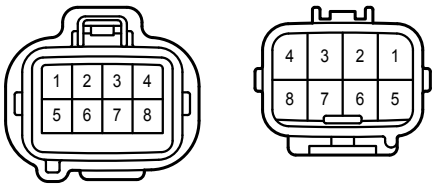


Nz1
Gray

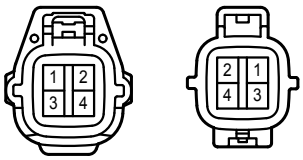


OK1
Black

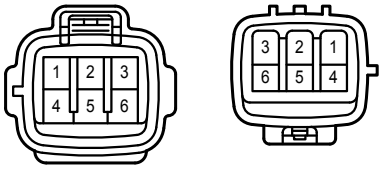



SK1
White

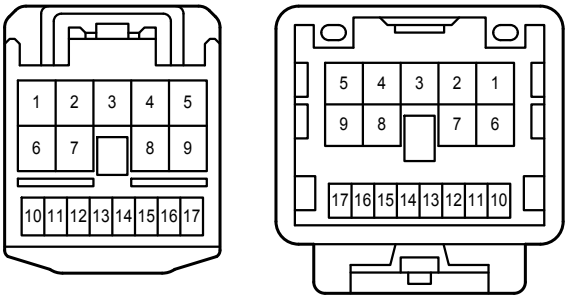

SK2
Blue

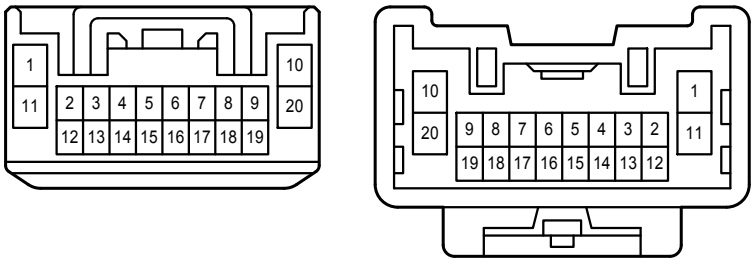

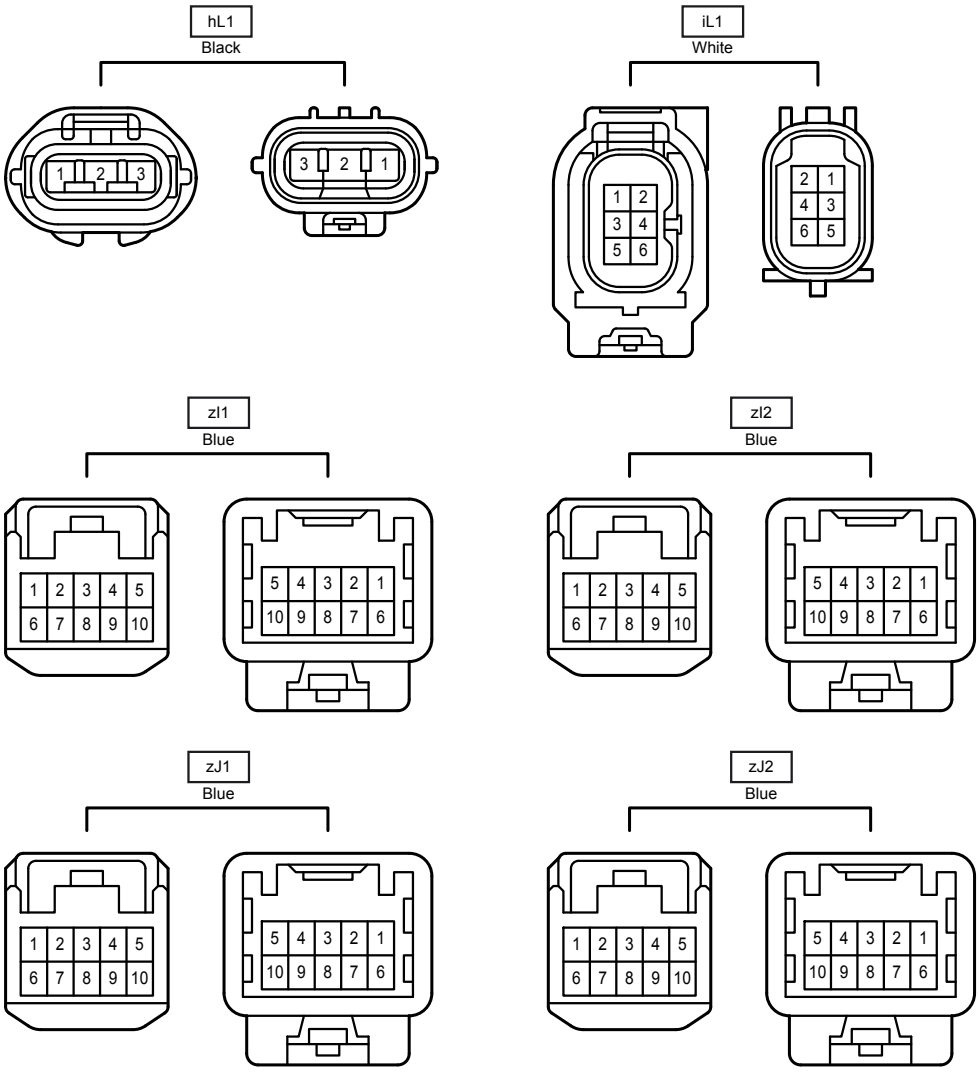
hL1
Black
1 2 3
3 2 1
iL1
White
1 2
3 4
5 6
2 1
4 3
6 5
zI1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zI2
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zJ1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zJ2
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

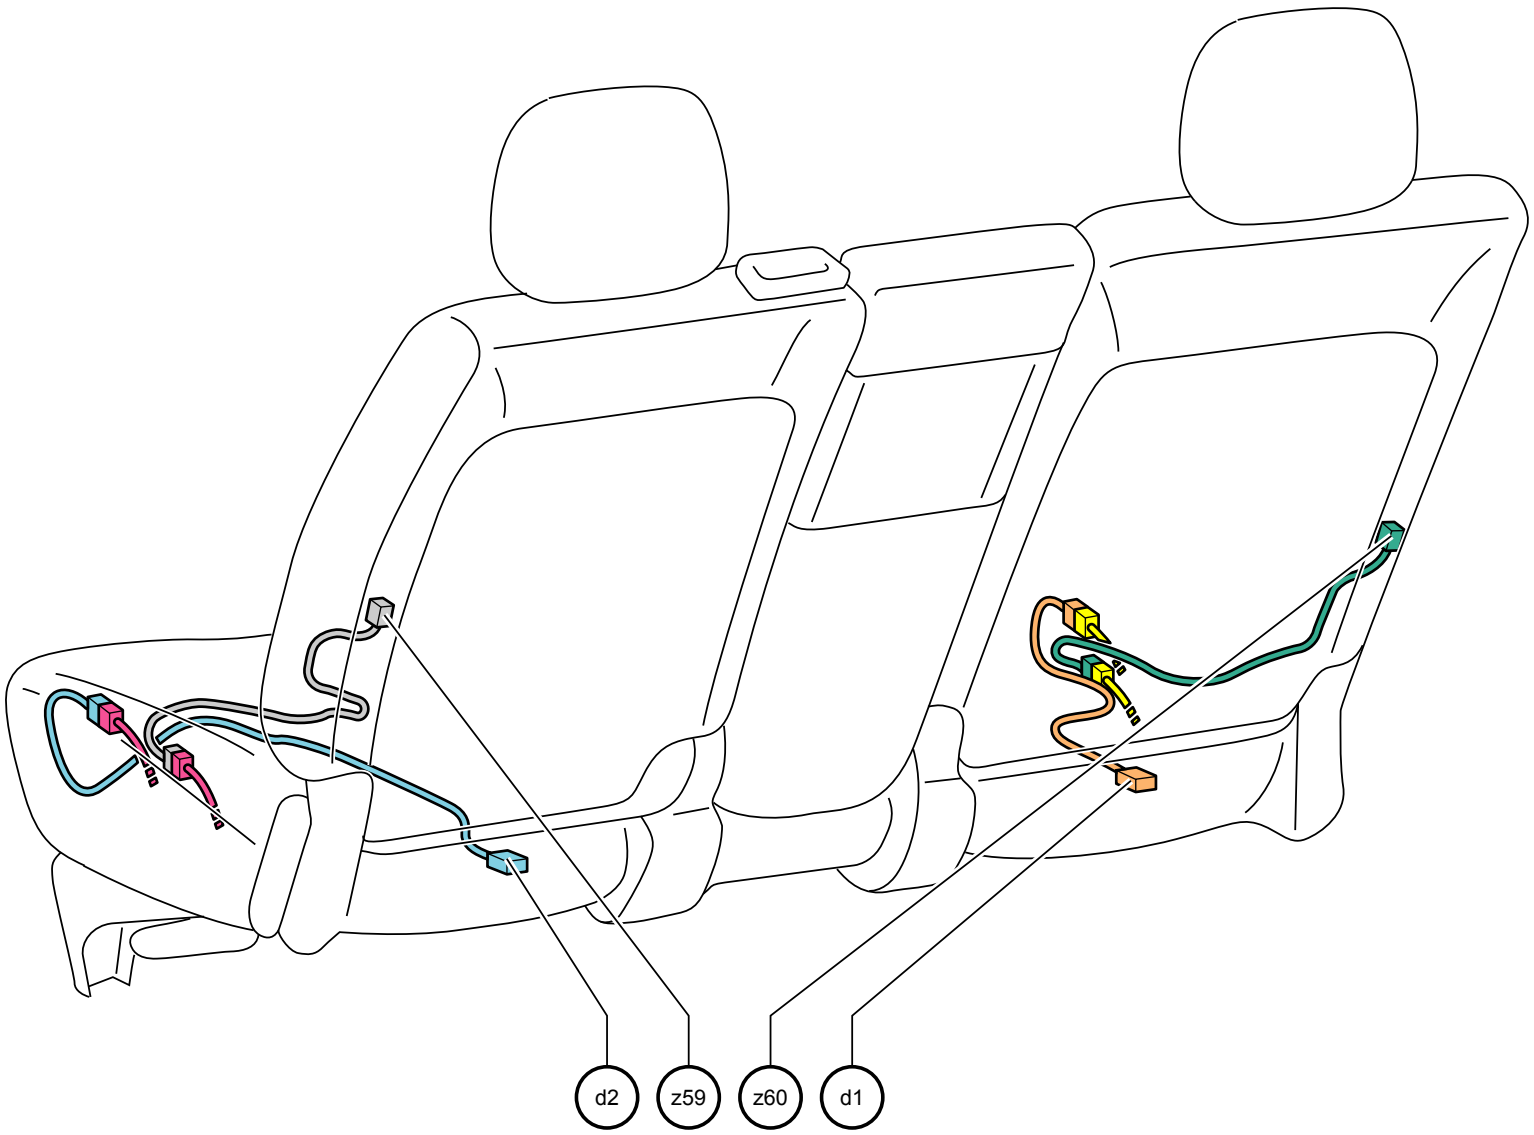
d2
z59
z60
d1

d 1 Rear Seat Heater RH
d 2 Rear Seat Heater LH

z 59 Rear Side Airbag Squib Circuit LH
z 60 Rear Side Airbag Squib Circuit RH


d 1
White




d 2
White





z 59
White




z 60
White



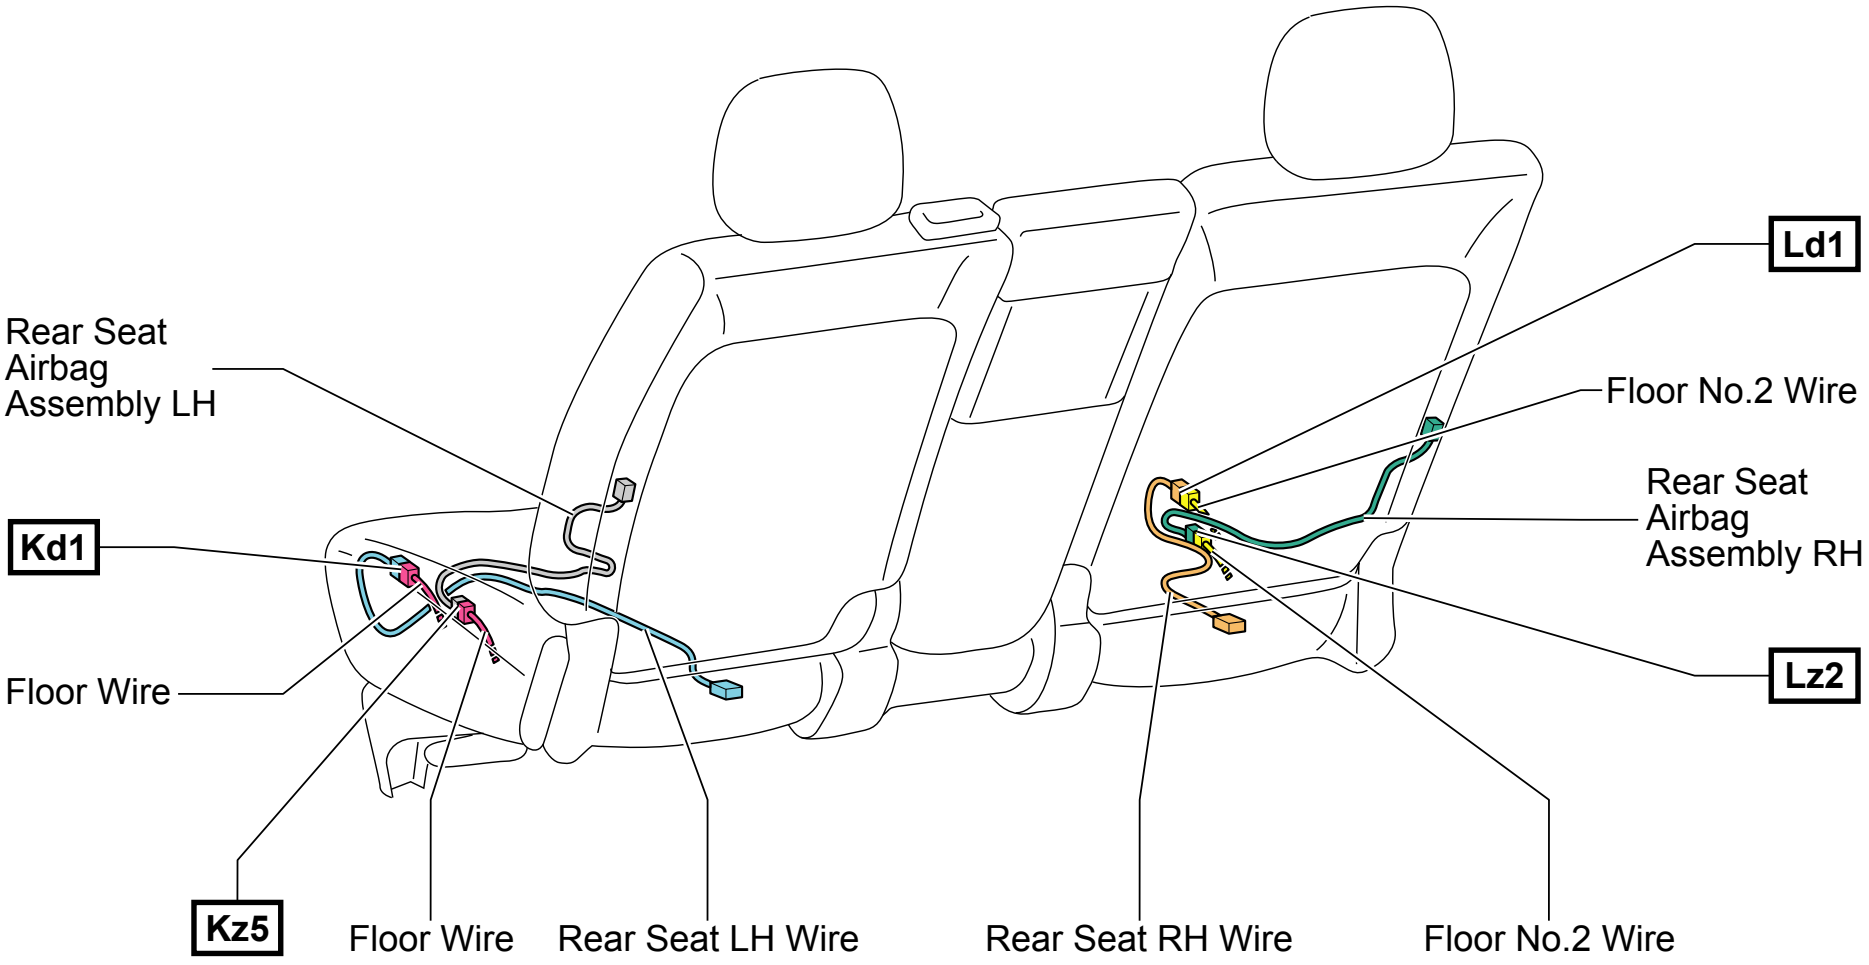
Rear Seat
Airbag
Assembly LH
Kd1
Floor Wire
Kz5
Floor Wire
Rear Seat LH Wire
Ld1
Floor No.2 Wire
Rear Seat
Airbag
Assembly RH
Lz2
Rear Seat RH Wire
Floor No.2 Wire

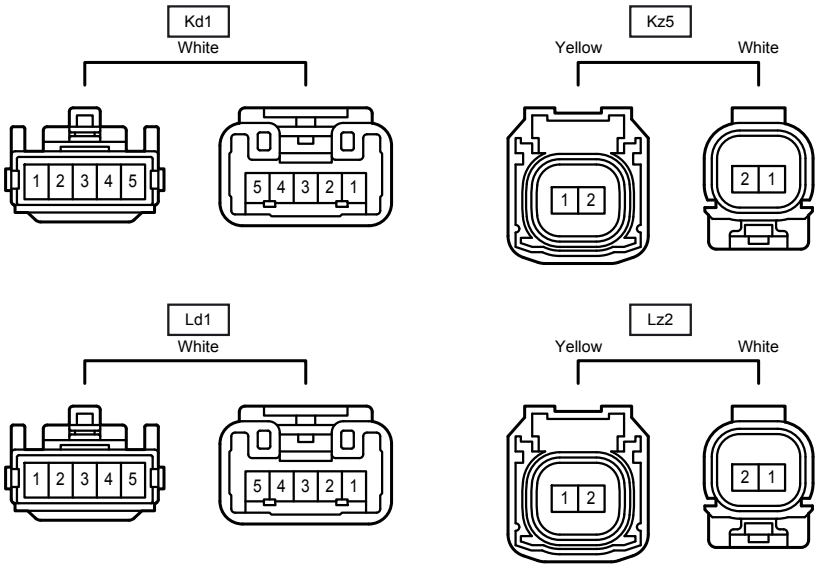
Kd1
White
1 2 3 4 5
5 4 3 2 1
Kz5
Yellow
White
1 2
2 1
Ld1
White
1 2 3 4 5
5 4 3 2 1
Lz2
Yellow
White
1 2
2 1

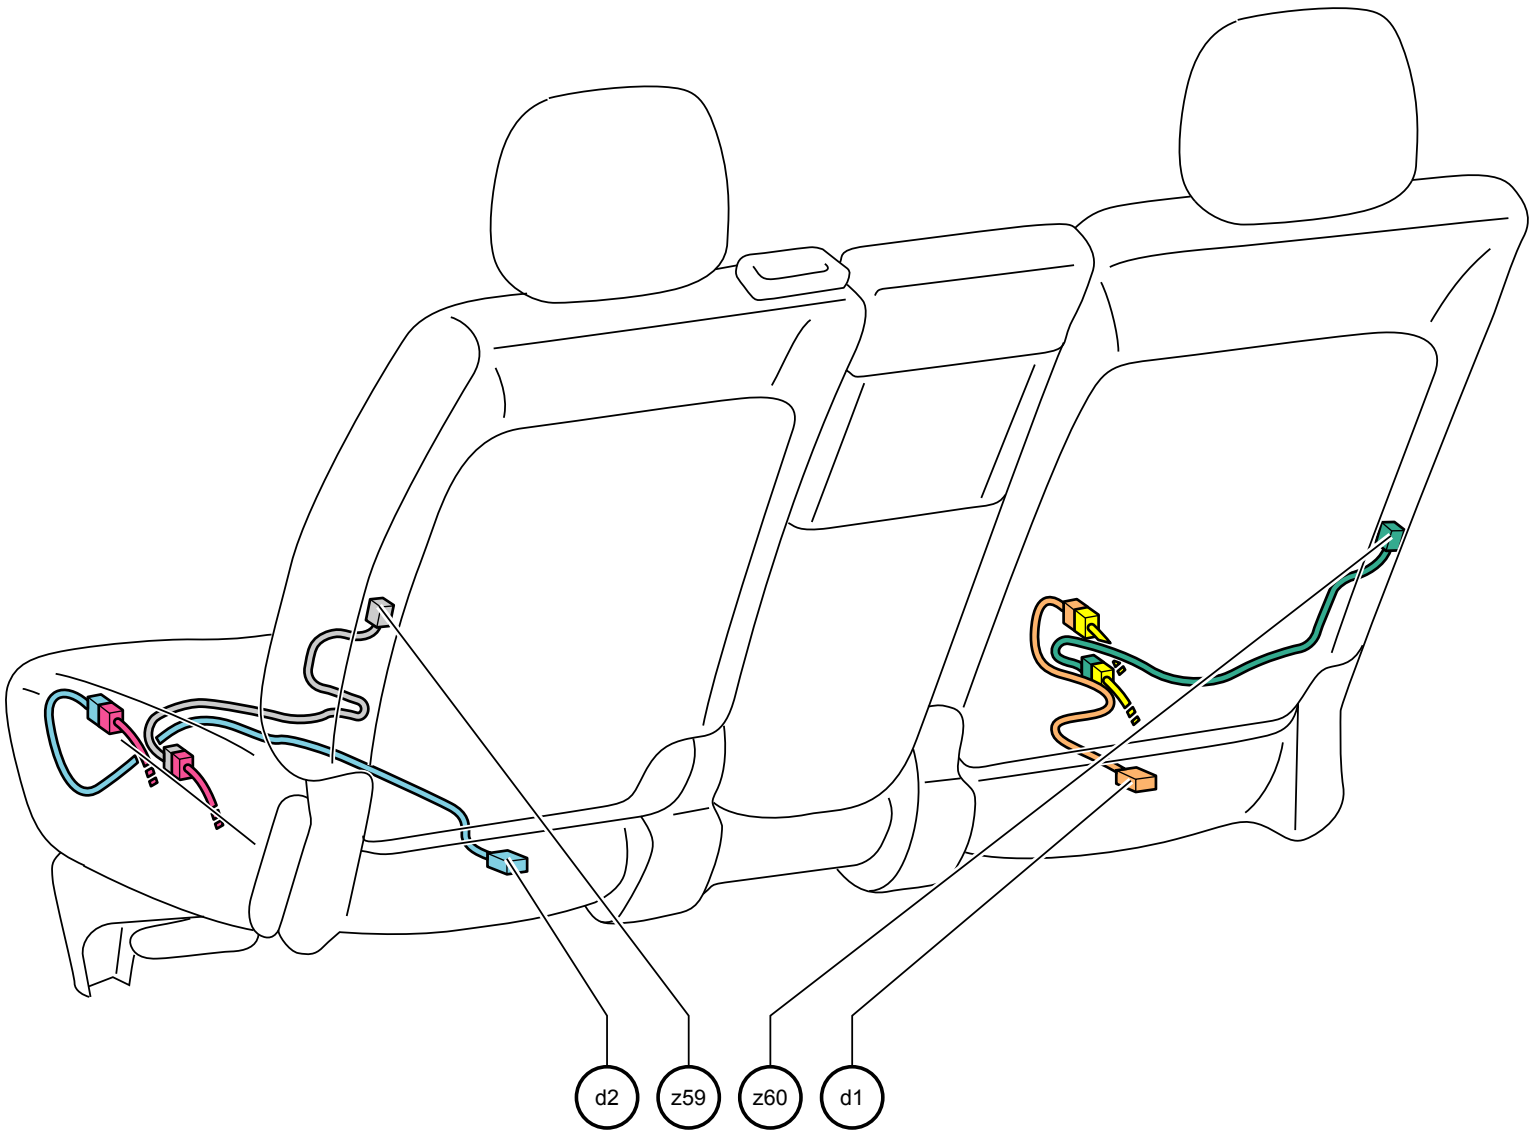
d2
z59
z60
d1

d 1 Rear Seat Heater RH
d 2 Rear Seat Heater LH

z 59 Rear Side Airbag Squib Circuit LH
z 60 Rear Side Airbag Squib Circuit RH


d 1
White




d 2
White





z 59
White





z 60
White




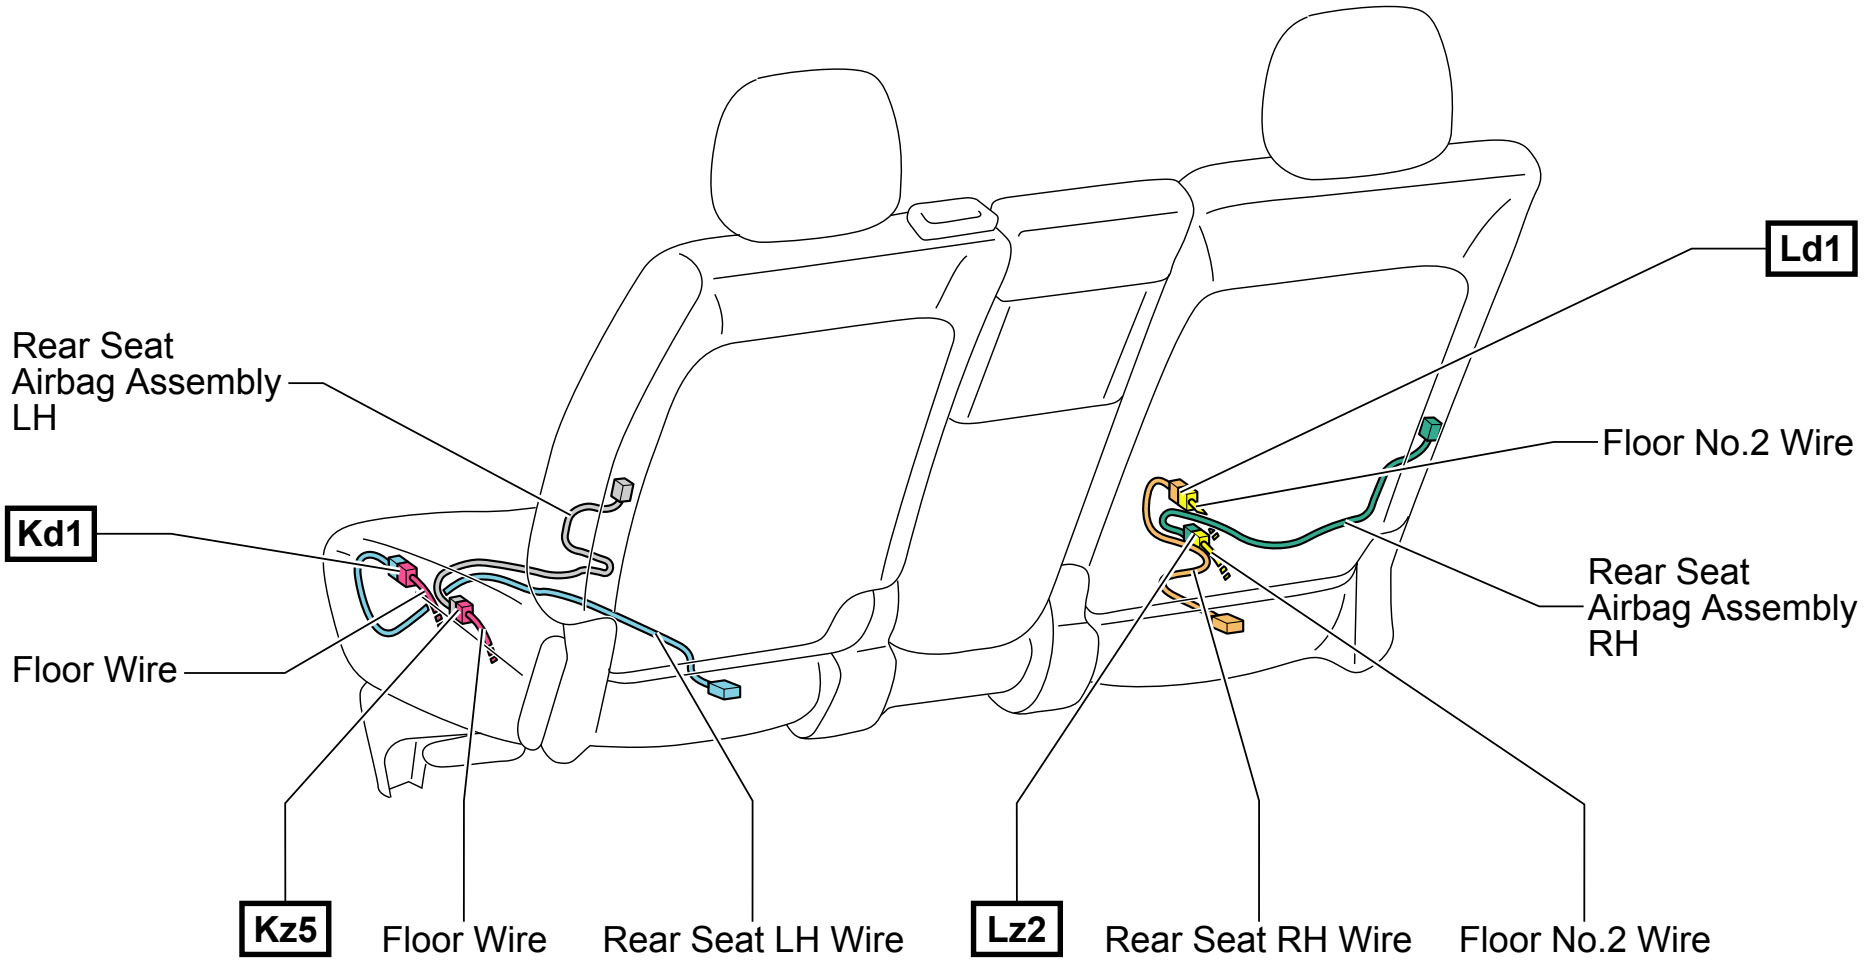

Ld1
Rear Seat
Airbag Assembly
LH
Floor No.2 Wire
Kd1
Rear Seat
Airbag Assembly
RH
Floor Wire
Kz5
Floor Wire
Rear Seat LH Wire
Lz2
Rear Seat RH Wire
Floor No.2 Wire

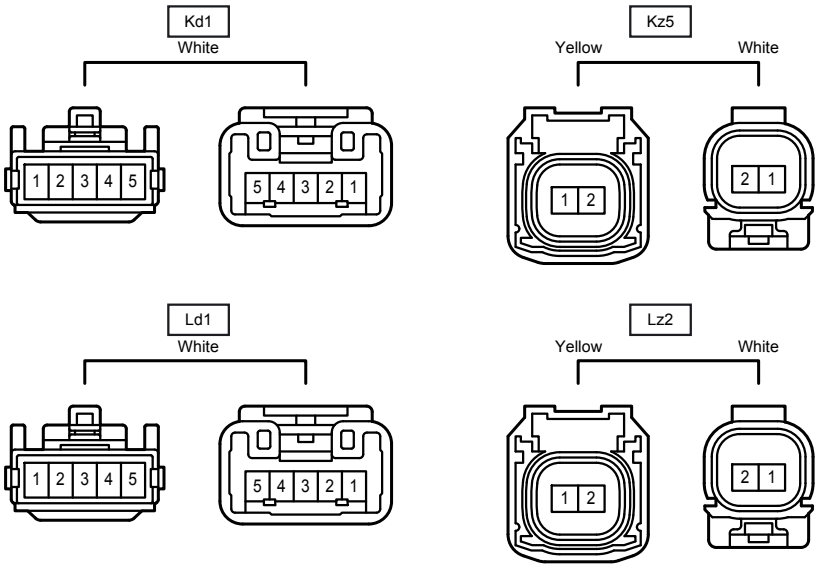
Kd1
White
1 2 3 4 5
5 4 3 2 1
Kz5
Yellow
White
1 2
2 1
Ld1
White
1 2 3 4 5
5 4 3 2 1
Lz2
Yellow
White
1 2
2 1

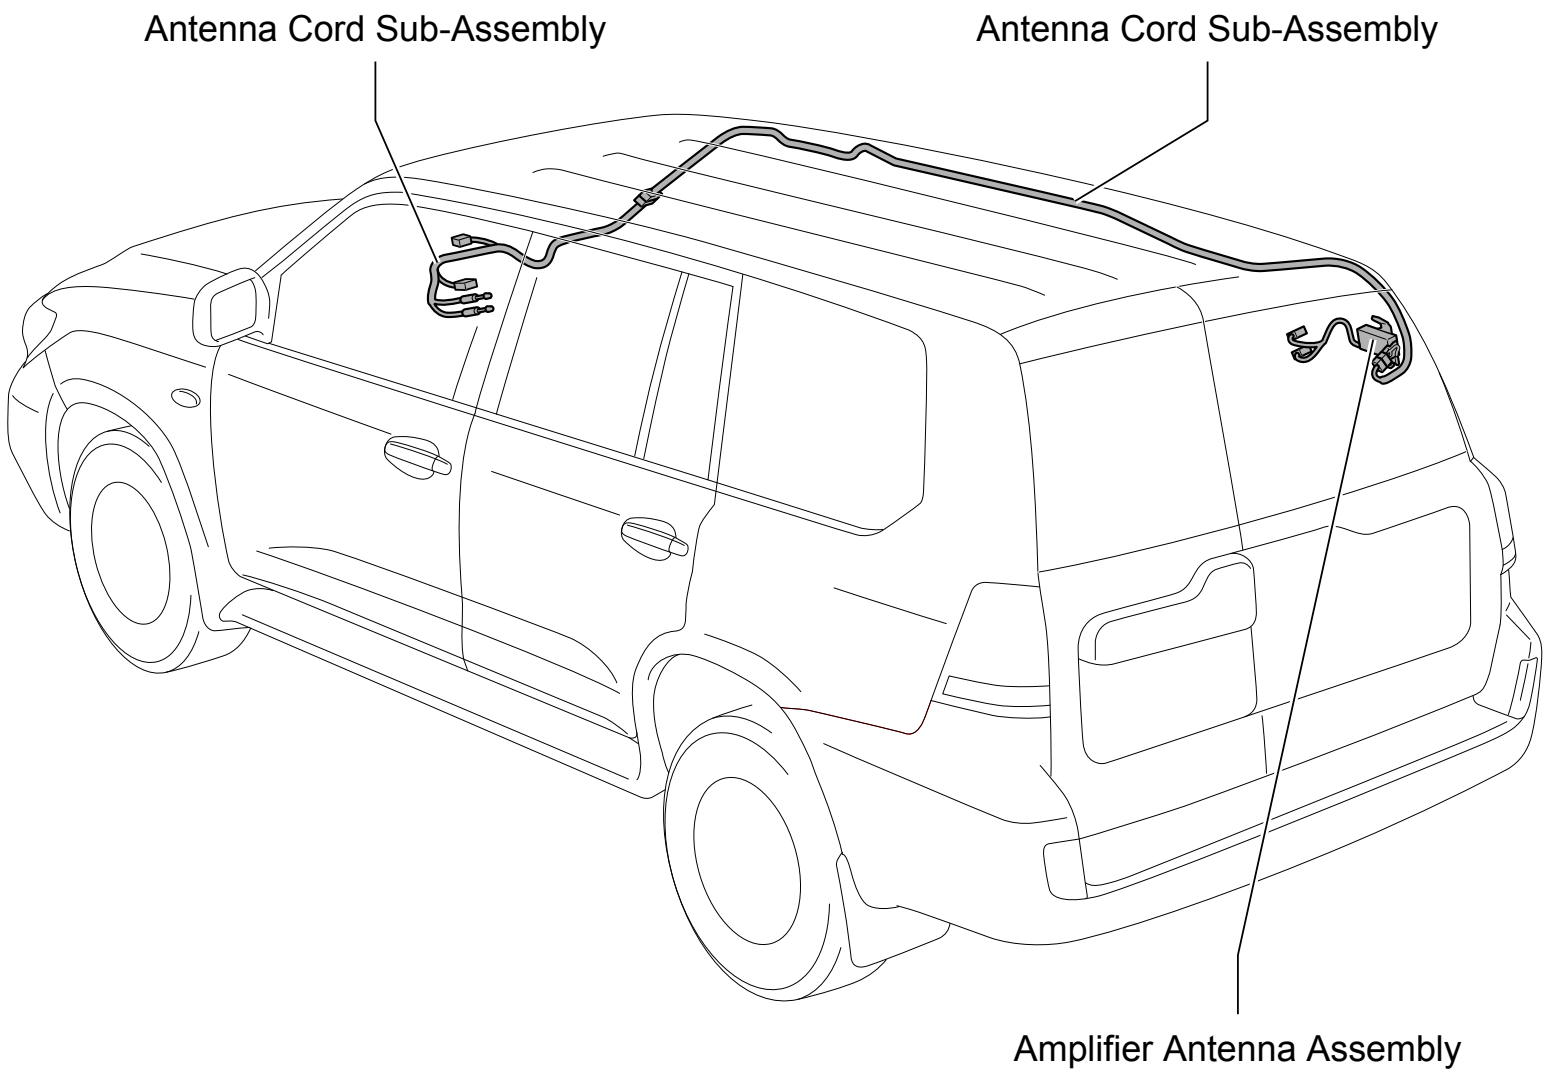
Antenna Cord Sub-Assembly
Antenna Cord Sub-Assembly
Amplifier Antenna Assembly

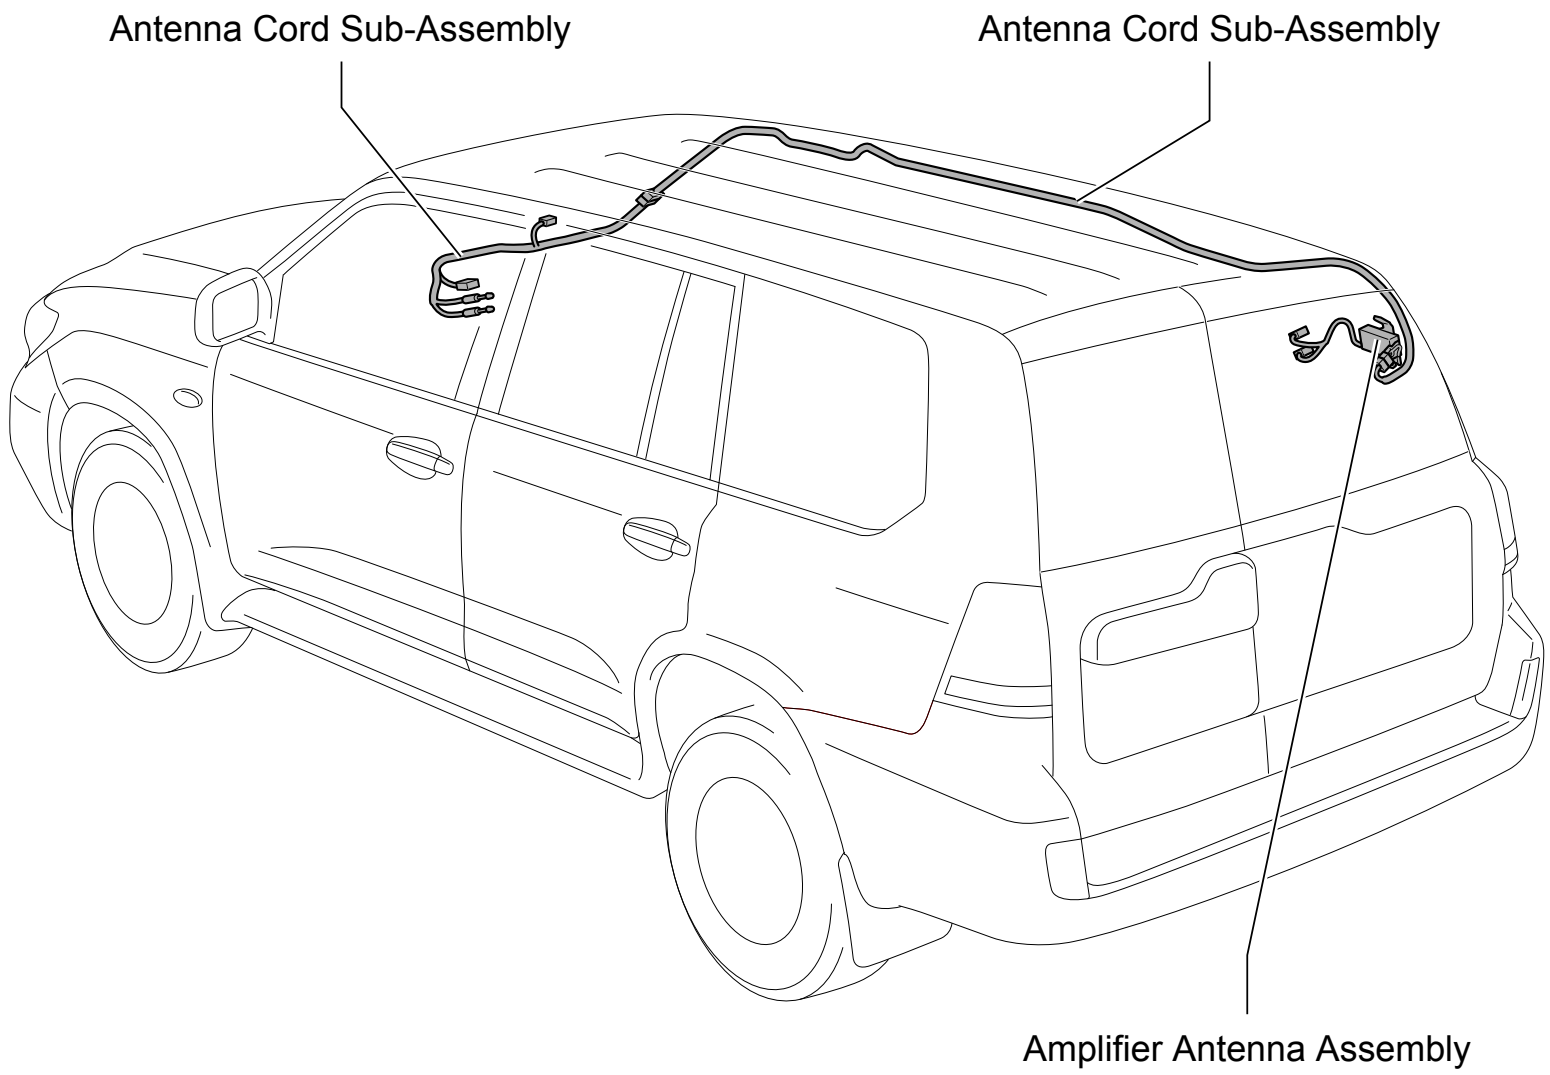

Antenna Cord Sub-Assembly
Antenna Cord Sub-Assembly
Amplifier Antenna Assembly

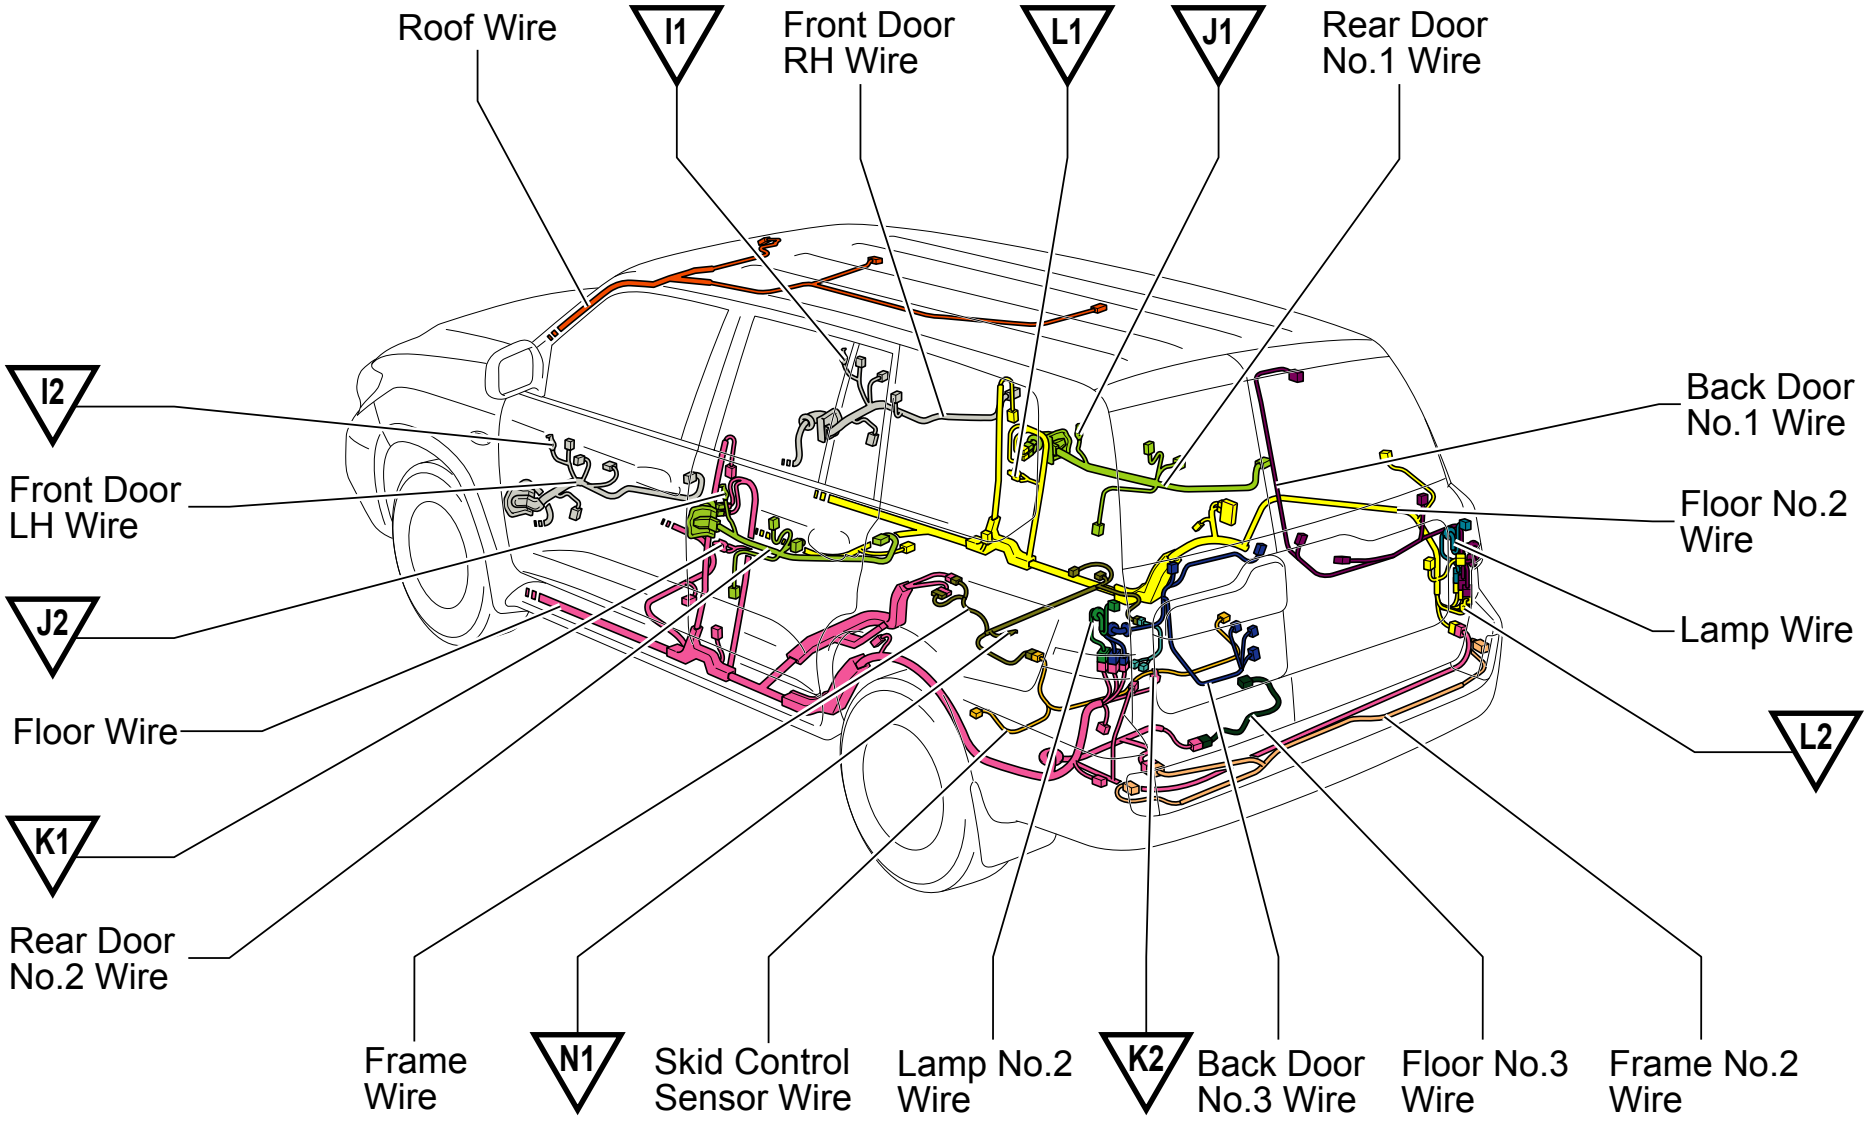
Roof Wire
I1
Front Door RH Wire
L1
J1
Rear Door No.1 Wire
I2
Front Door LH Wire
J2
Floor Wire
K1
Rear Door No.2 Wire
Back Door No.1 Wire
Floor No.2 Wire
Lamp Wire
L2
Frame Wire
N1
Skid Control Sensor Wire
Lamp No.2 Wire
K2
Back Door No.3 Wire
Floor No.3 Wire
Frame No.2 Wire

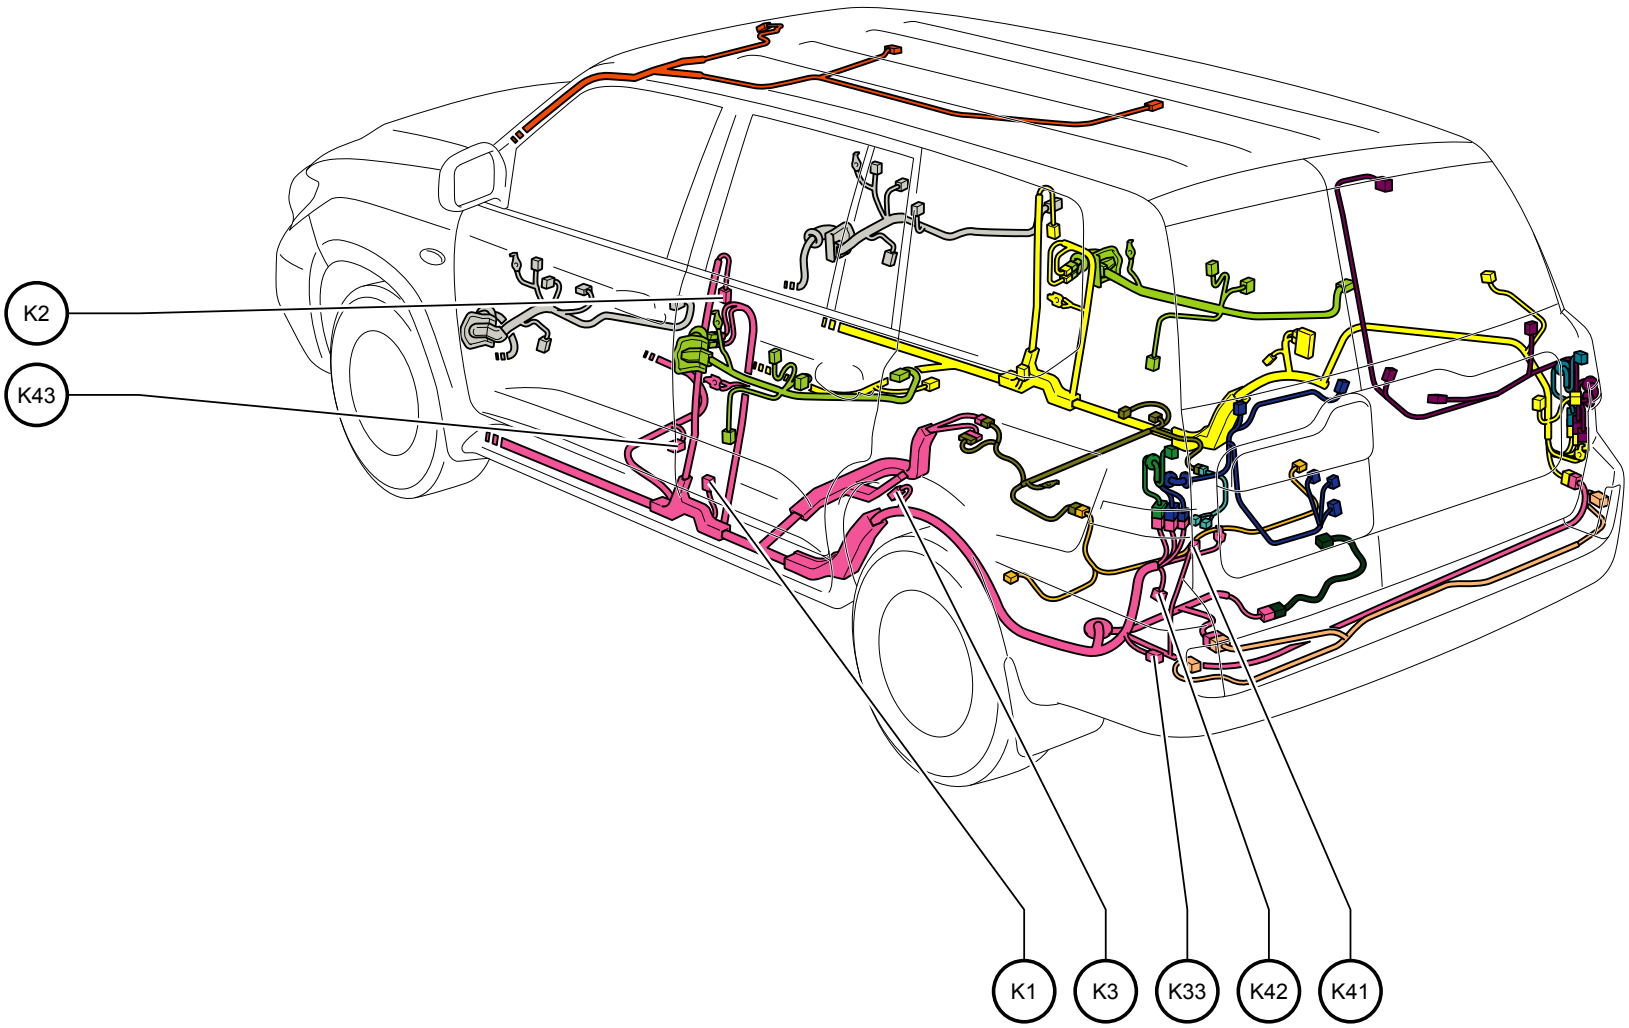
K2
K43
K1
K3
K33
K42
K41

K 1 Front Pretensioner LH
K 2 Front Door Courtesy Light Switch Assembly LH
K 3 Rear Door Courtesy Light Switch Assembly LH
K 33 Diode (Stop Light)
K 41 Rear Power Outlet Socket Assembly
K 42 Noise Filter (Rear Window Defogger LH)
K 43 Front Seat Inner Belt Assembly LH

K 1
Yellow

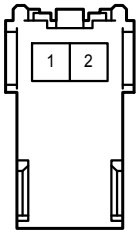

K 2
White




K 3
White




K 33
White




K 41
White




K 42
Black

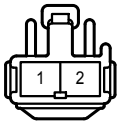

K 43
White

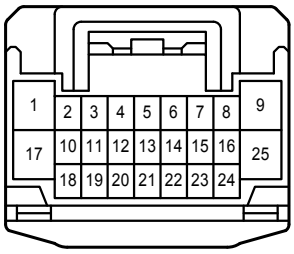

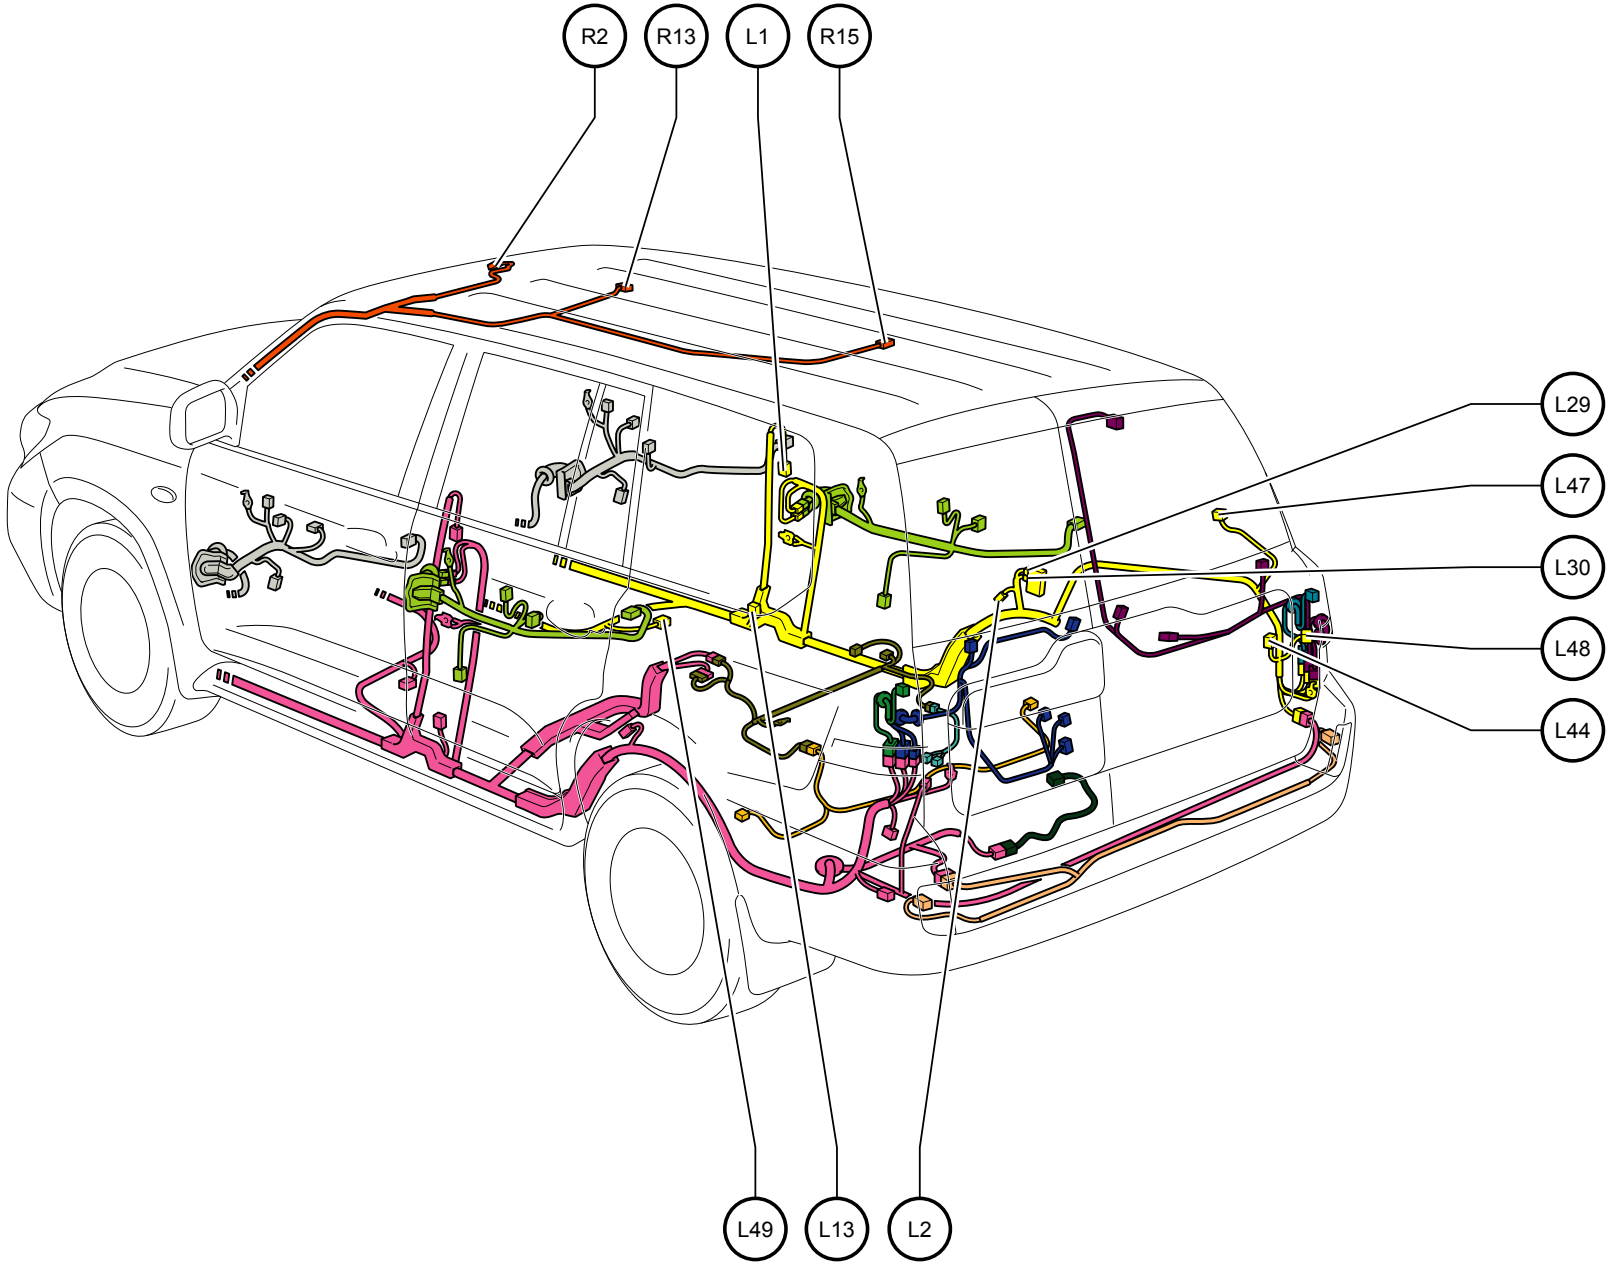
R2
R13
L1
R15
L29
L47
L30
L48
L44
L49
L13
L2

L 1 Front Door Courtesy Light Switch Assembly RH
L 2 Rear Door Courtesy Light Switch Assembly RH
L 13 Front Pretensioner RH
L 29 Junction Connector
L 30 Junction Connector
L 44 Option Connector (Parking Assist-Sensor)
L 47 Door Control Receiver
L 48 Noise Filter (Rear Window Defogger and Stop)
L 49 Front Seat Inner Belt Assembly RH

R 2 Inner Rear View Mirror Assembly
R 13 No.1 Room Light Assembly
R 15 No.3 Room Light Assembly


L 1
White




L 2
White




L 13
Yellow

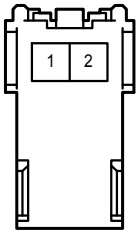


L 29
White




L 30
White




L 44
White

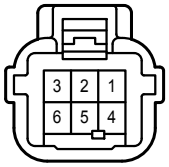


L 47
White

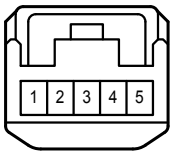


L 48
Black

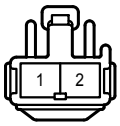


L 49
White

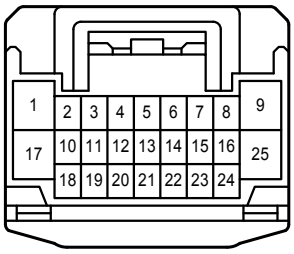


R 2
White

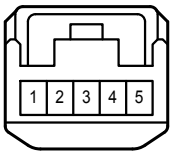


R 13
White



R 15
White



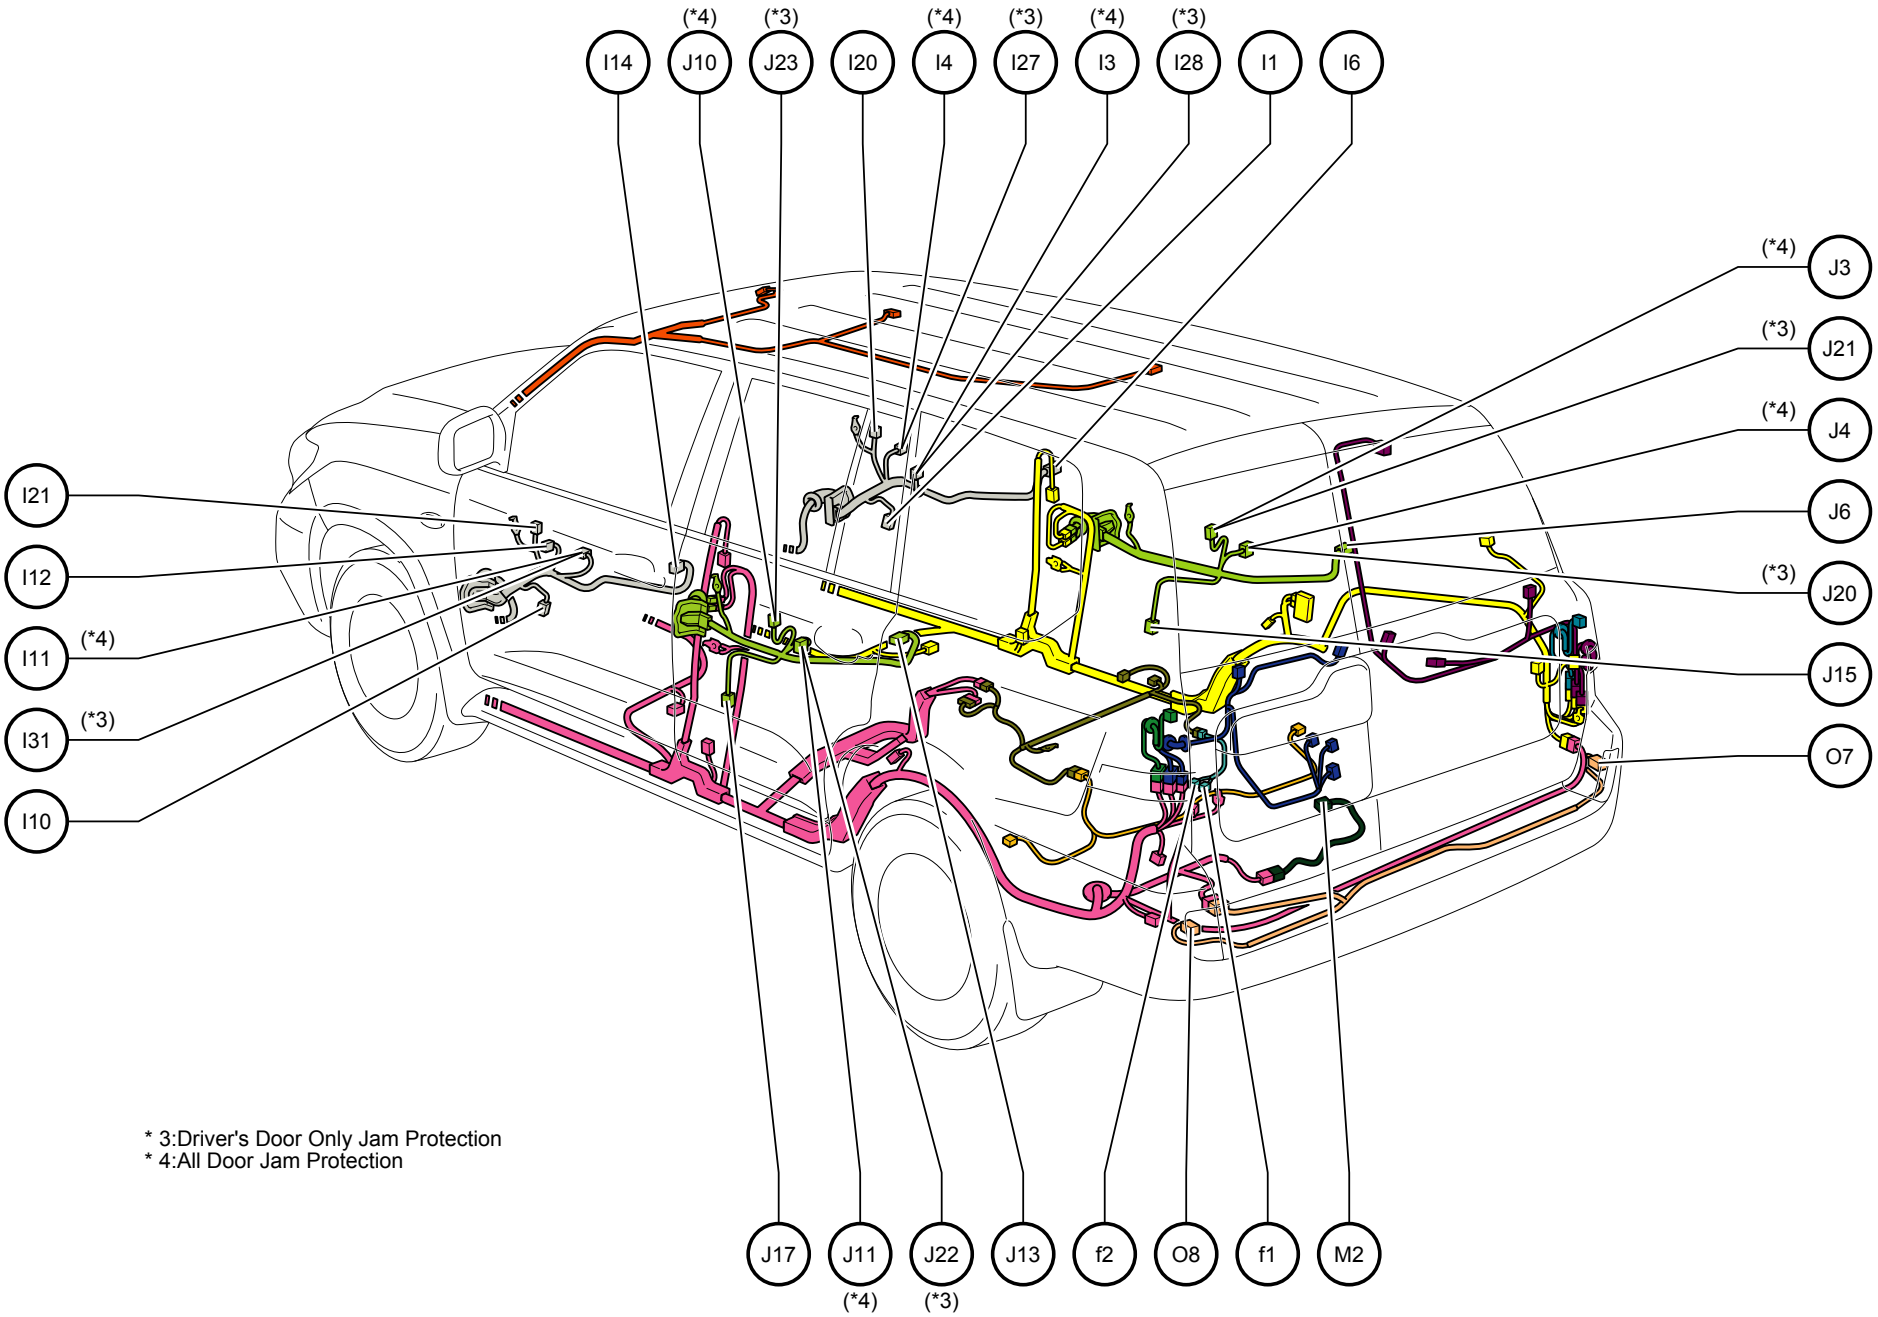


* 3:Driver's Door Only Jam Protection
* 4:All Door Jam Protection

I	1	Front No.1 Speaker Assembly RH
I	3	Front Power Window Regulator Switch Assembly RH
I	4	Front Power Window Regulator Motor Assembly RH
I	6	Front Door Lock Assembly RH
I	10	Front No.1 Speaker Assembly LH
I	11	Multiplex Network Master Switch Assembly
I	12	Front Power Window Regulator Motor Assembly LH
I	14	Front Door Lock Assembly LH
I	20	Outer Rear View Mirror Assembly RH
I	21	Outer Rear View Mirror Assembly LH
I	27	Front Power Window Regulator Motor Assembly RH
I	28	Front Power Window Regulator Switch Assembly RH
I	31	Multiplex Network Master Switch Assembly
J	3	Rear Power Window Regulator Switch Assembly RH
J	4	Rear Power Window Regulator Motor Assembly RH
J	6	Rear Door Lock Assembly RH
J	10	Rear Power Window Regulator Switch Assembly LH
J	11	Rear Power Window Regulator Motor Assembly LH
J	13	Rear Door Lock Assembly LH
J	15	Rear Speaker Set RH
J	17	Rear Speaker Set LH
J	20	Rear Power Window Regulator Motor Assembly RH
J	21	Rear Power Window Regulator Switch Assembly RH
J	22	Rear Power Window Regulator Motor Assembly LH
J	23	Rear Power Window Regulator Switch Assembly LH
M	2	Fuel Sender Gage Assembly (Sub)
O	7	Back-Up Light Assembly RH
O	8	Back-Up Light Assembly LH
f	1	Differential Lock Shift Actuator
f	2	Differential Lock Switch


I 1
White




I 3
White

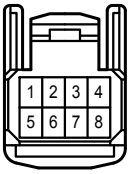

I 4
White

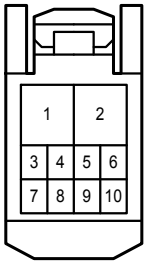


I 6
White

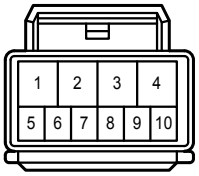


I 10
White




I 11
White

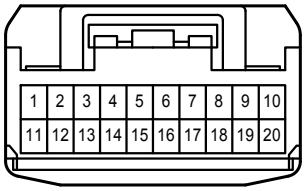


I 12
White

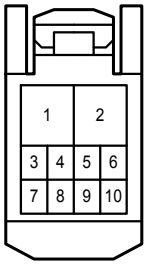


I 14
White

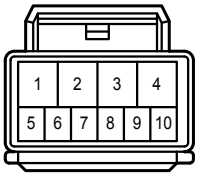

I 20
White

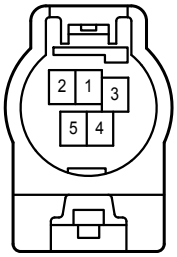


I 21
White

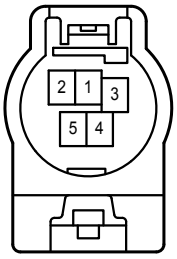


I 27
Black




I 28
White

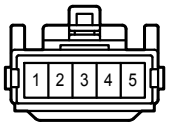


I 31
White

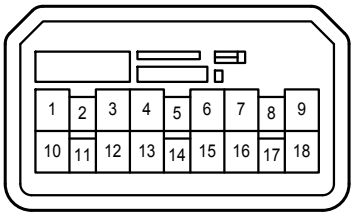


J 3
White

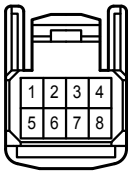


J 4
White

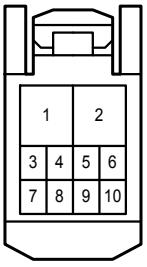


J 6
White

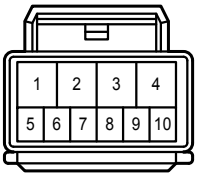


J 10
White

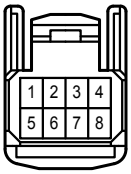

J 11
White

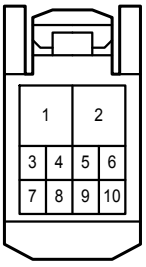

J 13
White

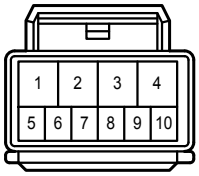


J 15
White




J 17
White



J 20
Black

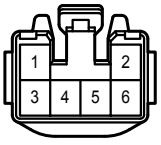


J 21
White

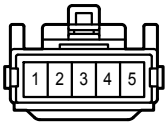

J 22
Black



J 23
White

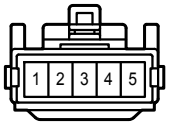

M 2
Black



O 7
Gray




O 8
Gray




f 1
Gray



f 2
Blue

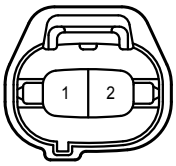

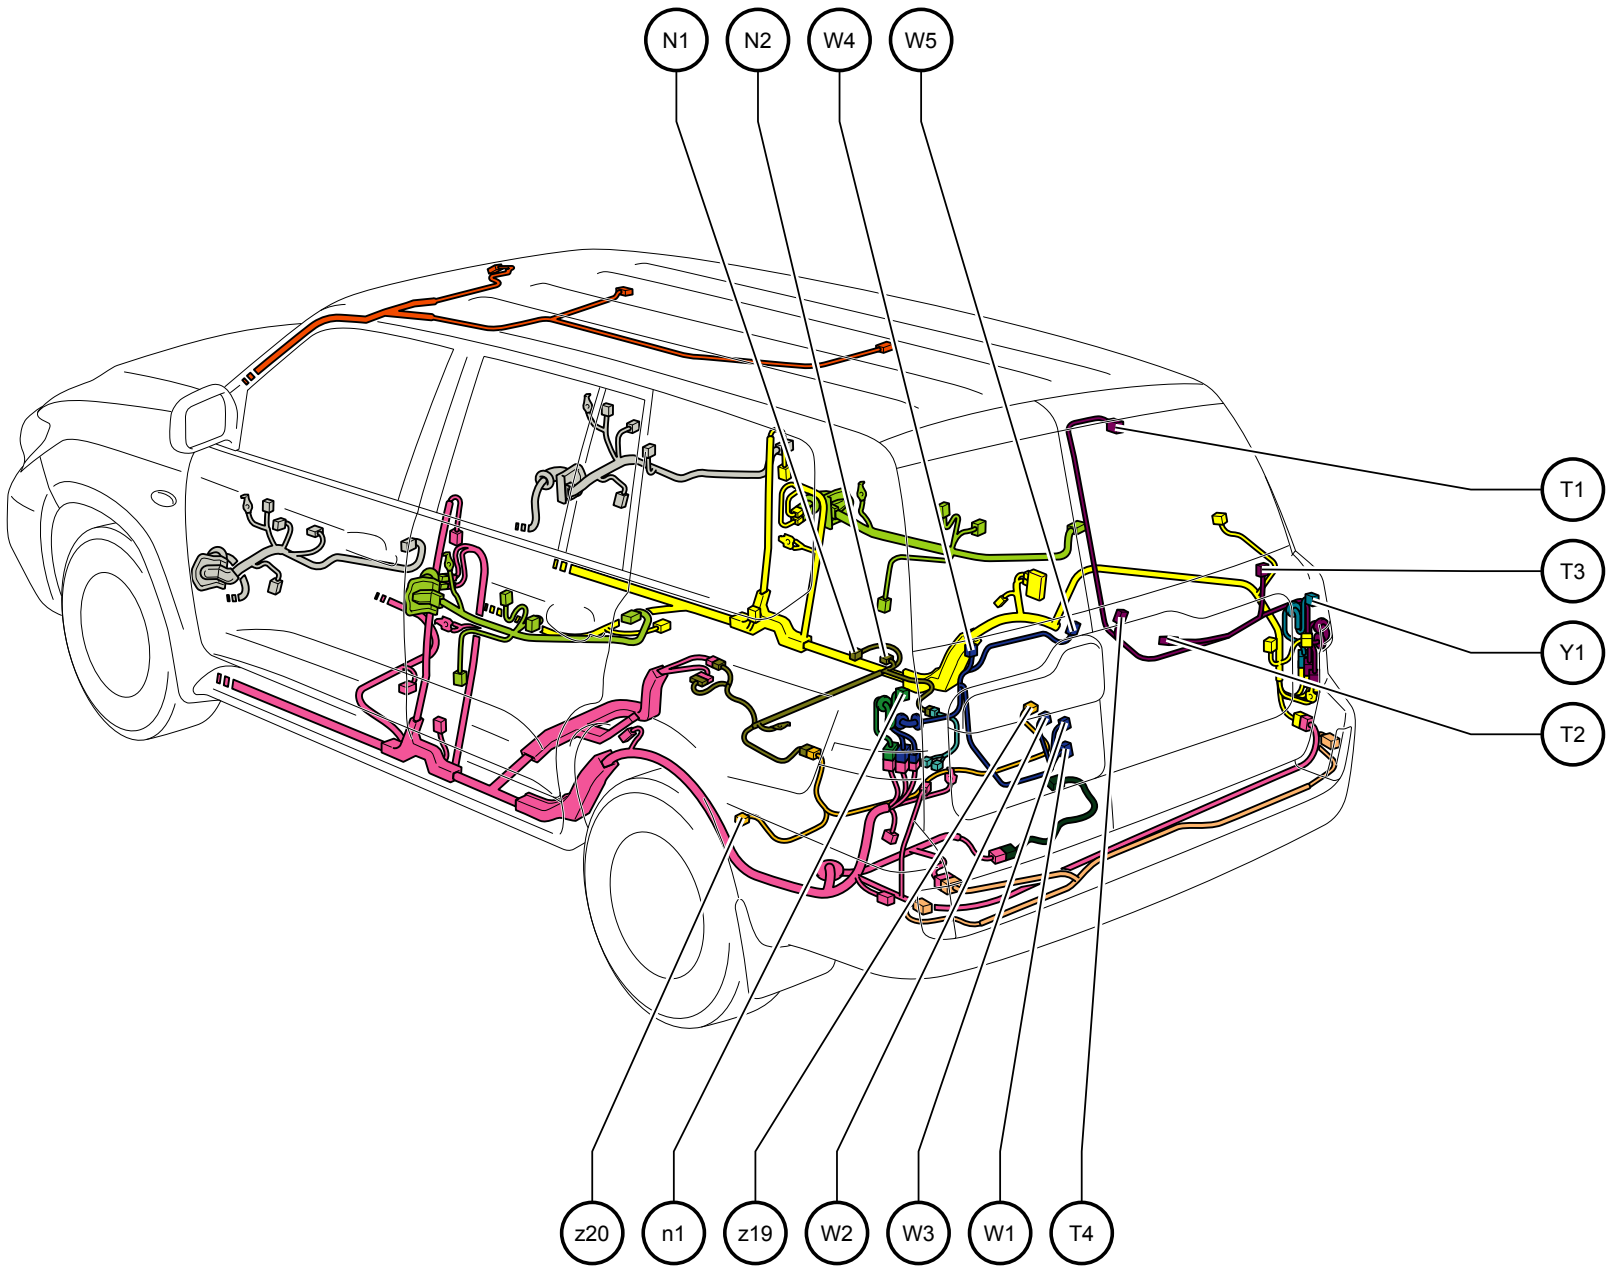
N1
N2
W4
W5
T1
T3
Y1
T2
z20
n1
z19
W2
W3
W1
T4

N 1 Fuel Sender Gage Assembly (Main)
N 2 Fuel Pump Control ECU Assembly

T 1 Center Stop Light Assembly
T 2 Rear Wiper Motor Assembly
T 3 Rear Window Defogger RH (Back Door Glass)
T 4 Rear Window Defogger RH (Back Door Glass)

W 1 Back Door Lock Assembly
W 2 License Plate Light Assembly
W 3 Back Door Courtesy Light Switch Assembly
W 4 Rear Window Defogger LH (Back Door Glass)
W 5 Rear Window Defogger LH (Back Door Glass)

Y 1 Rear Combination Light Assembly RH


n 1 Rear Combination Light Assembly LH

z 19 Rear Speed Sensor RH
z 20 Rear Speed Sensor LH


N 1
White




N 2
Black

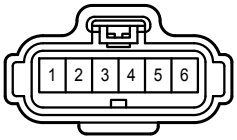

T 1
Gray



T 2
Black

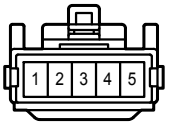

T 3
White



T 4
White




W 1
White



W 2
White



W 3
Blue

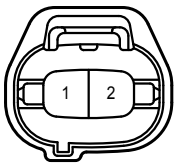

W 4
White



W 5
White



Y 1
Gray



n 1
Gray




z 19
Black




z 20
Black

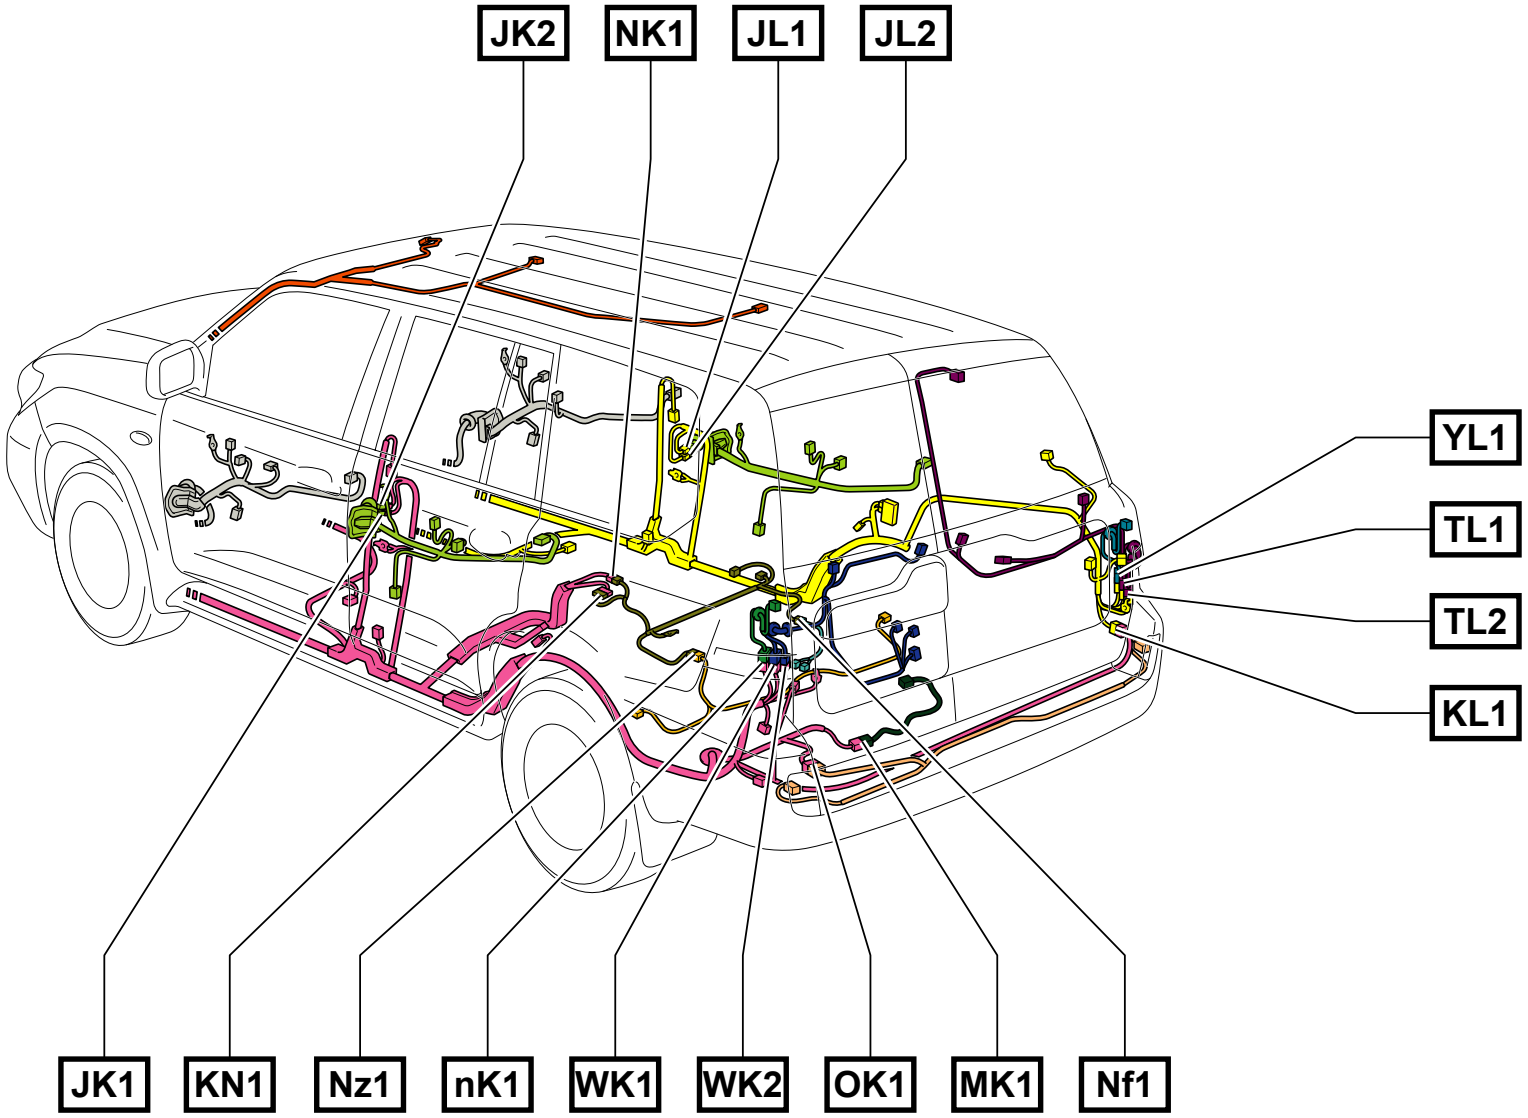



JK2
NK1
JL1
JL2
YL1
TL1
TL2
KL1
JK1
KN1
Nz1
nK1
WK1
WK2
OK1
MK1
Nf1


JK1
White

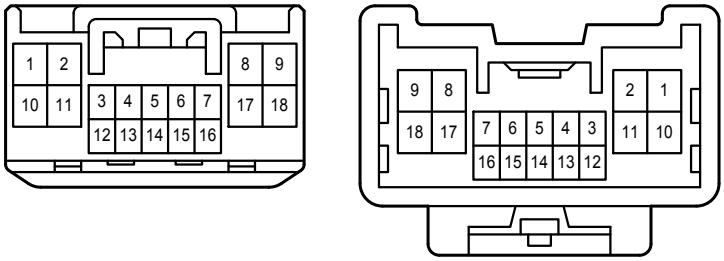


JK2
White

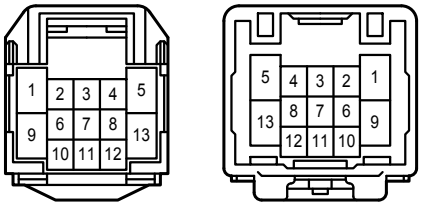


JL1
White

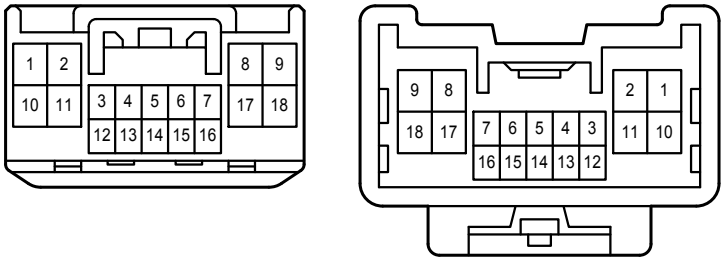


JL2
White

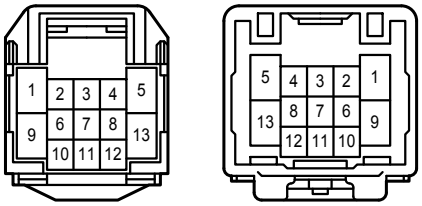


KL1
White

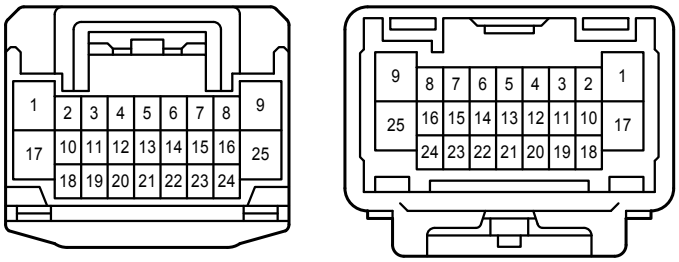


KN1
White

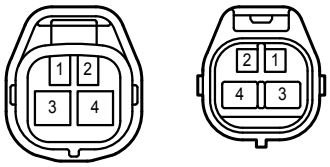



MK1
White

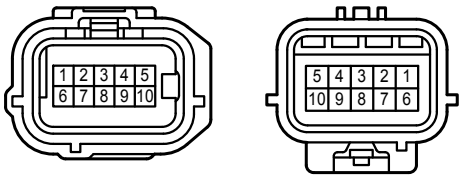


NK1
White

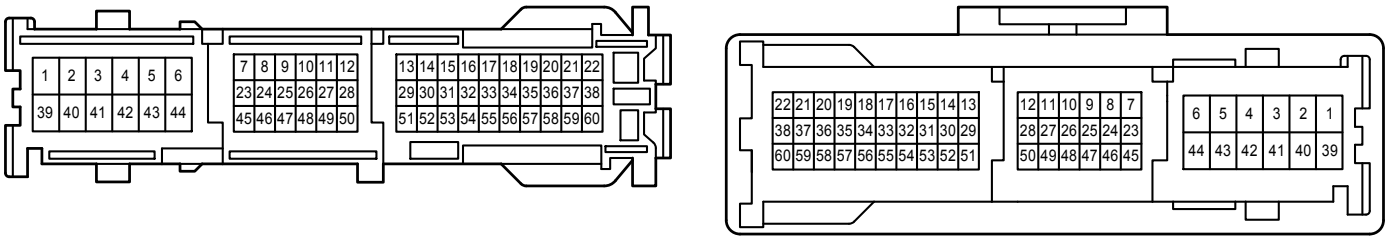

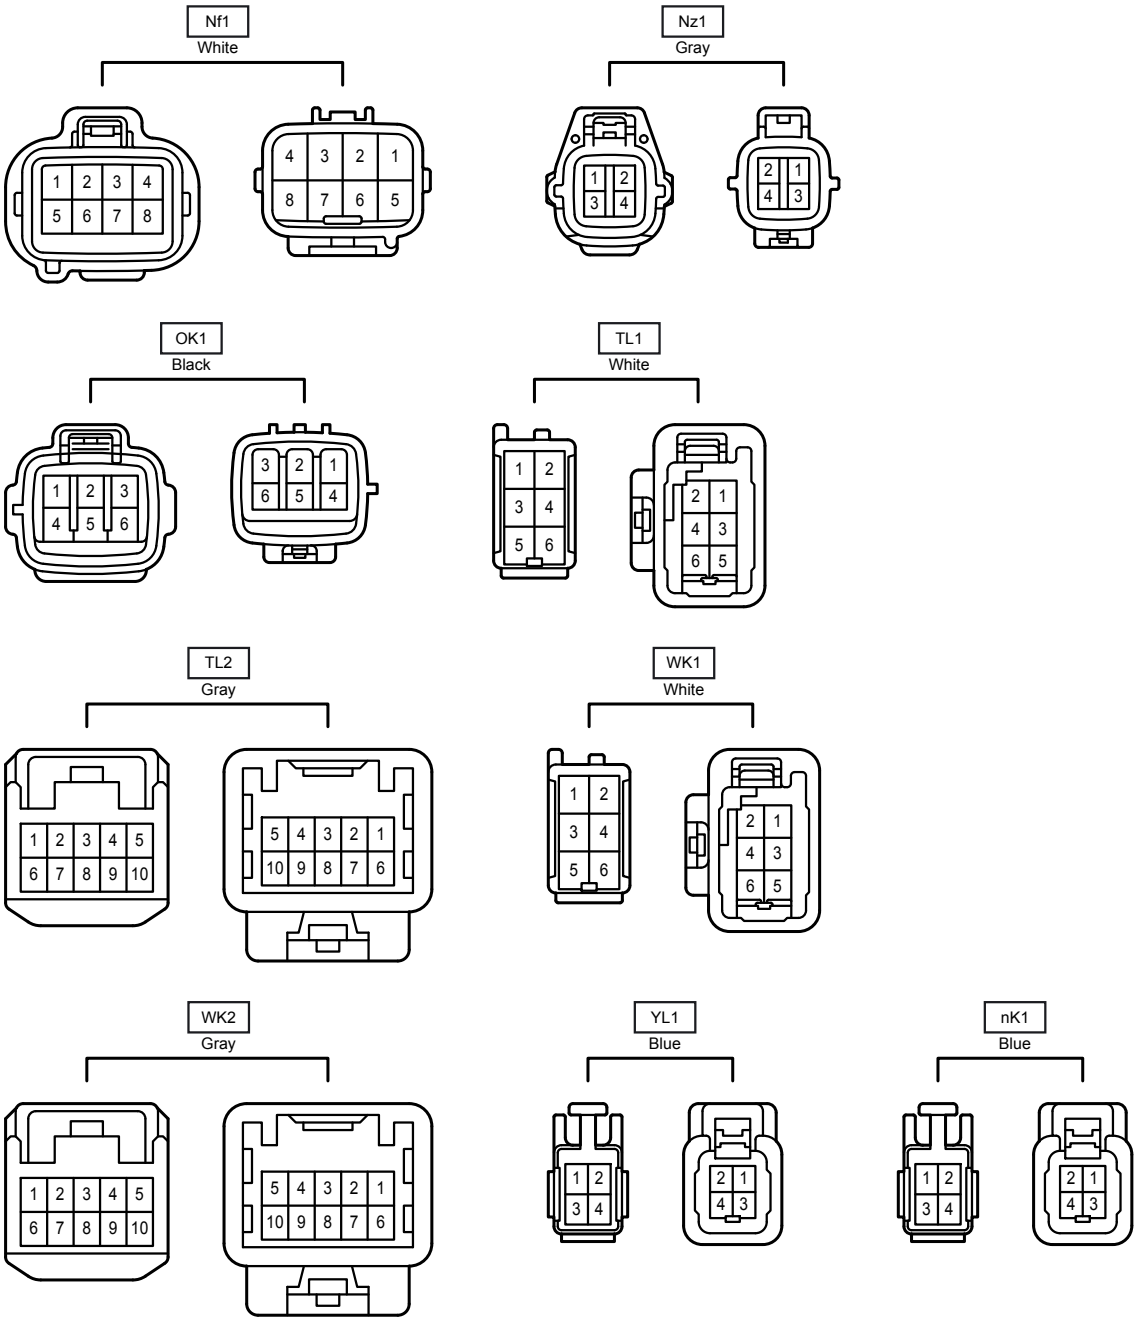

Nf1
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Nz1
Gray
1 2
3 4
2 1
4 3
OK1
Black
1 2 3
4 5 6
3 2 1
6 5 4
TL1
White
1 2
3 4
5 6
2 1
4 3
6 5
TL2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
WK1
White
1 2
3 4
5 6
2 1
4 3
6 5
WK2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
YL1
Blue
1 2
3 4
2 1
4 3
nK1
Blue
1 2
3 4
2 1
4 3

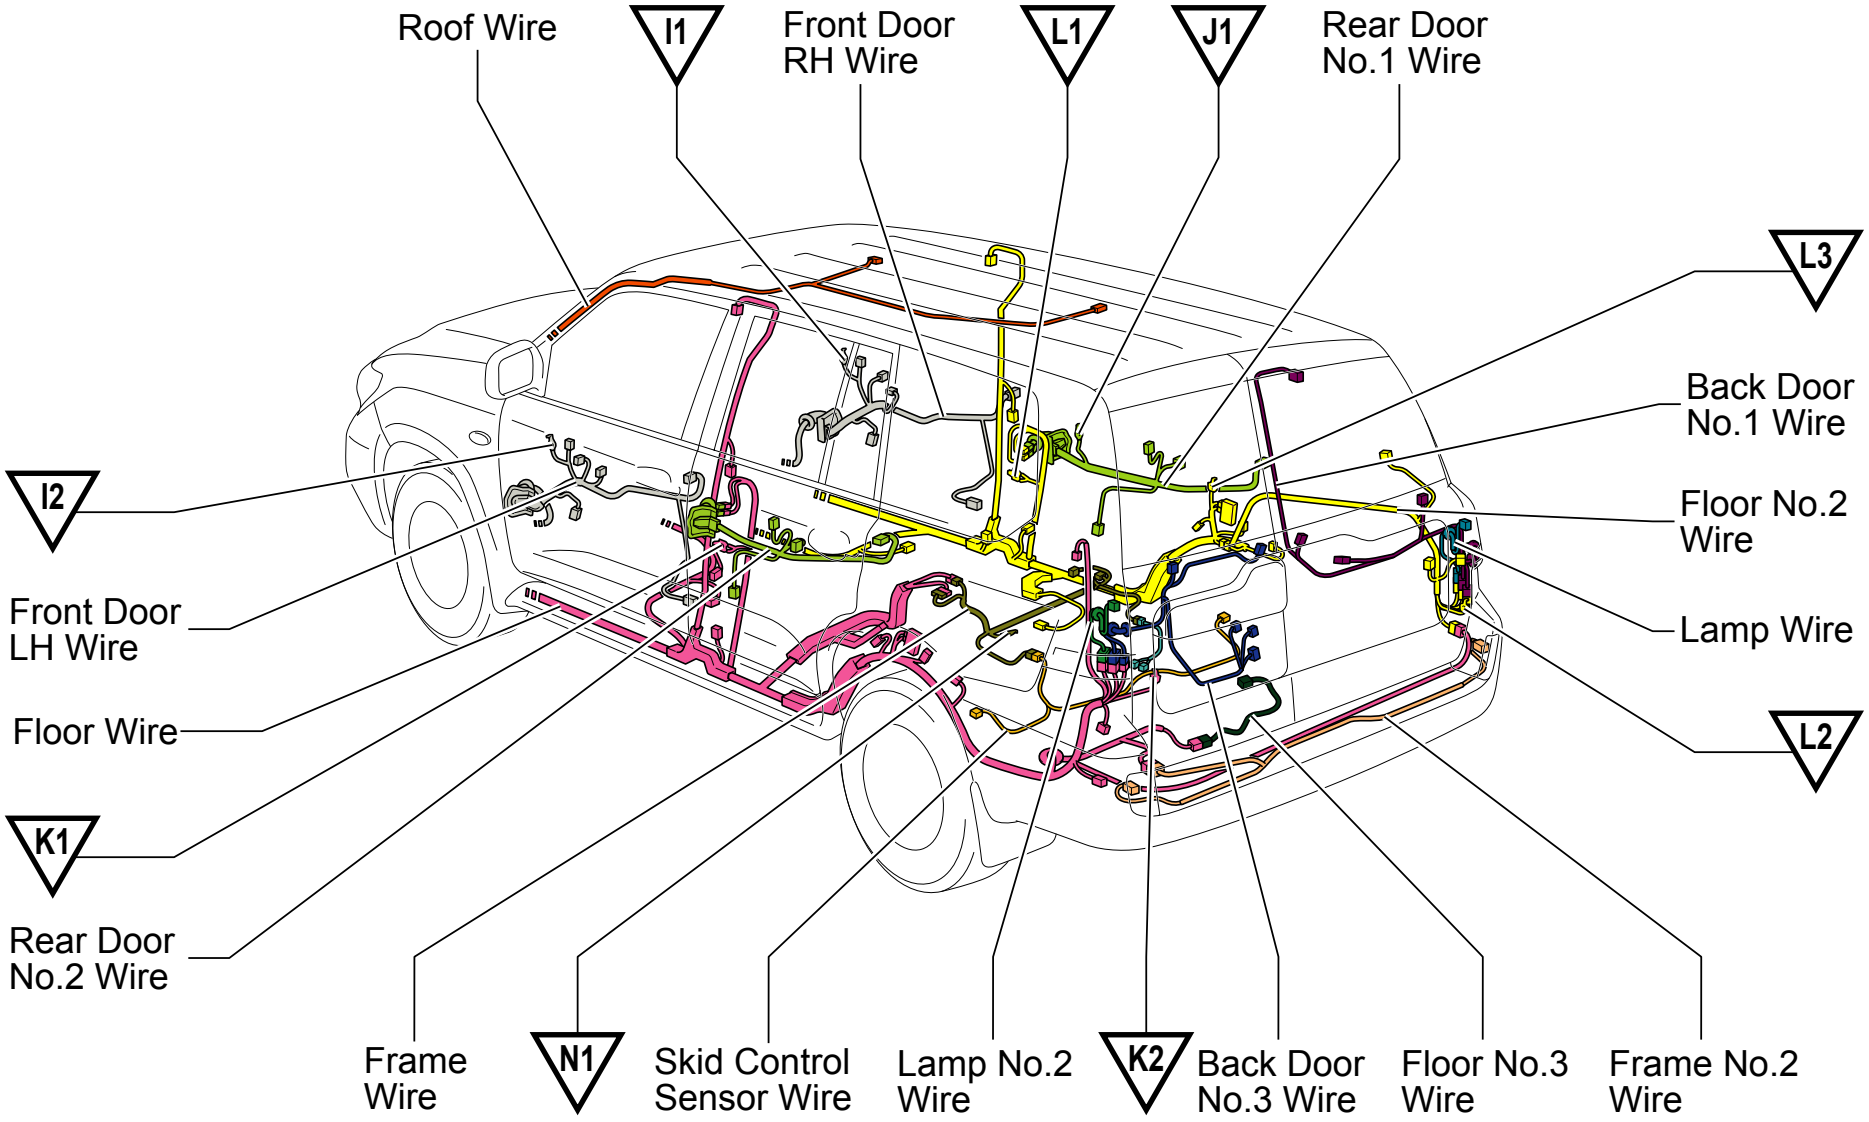
Roof Wire
I1
Front Door RH Wire
L1
J1
Rear Door No.1 Wire
L3
Back Door No.1 Wire
Floor No.2 Wire
Lamp Wire
L2
I2
Front Door LH Wire
Floor Wire
K1
Rear Door No.2 Wire
Frame Wire
N1
Skid Control Sensor Wire
Lamp No.2 Wire
K2
Back Door No.3 Wire
Floor No.3 Wire
Frame No.2 Wire

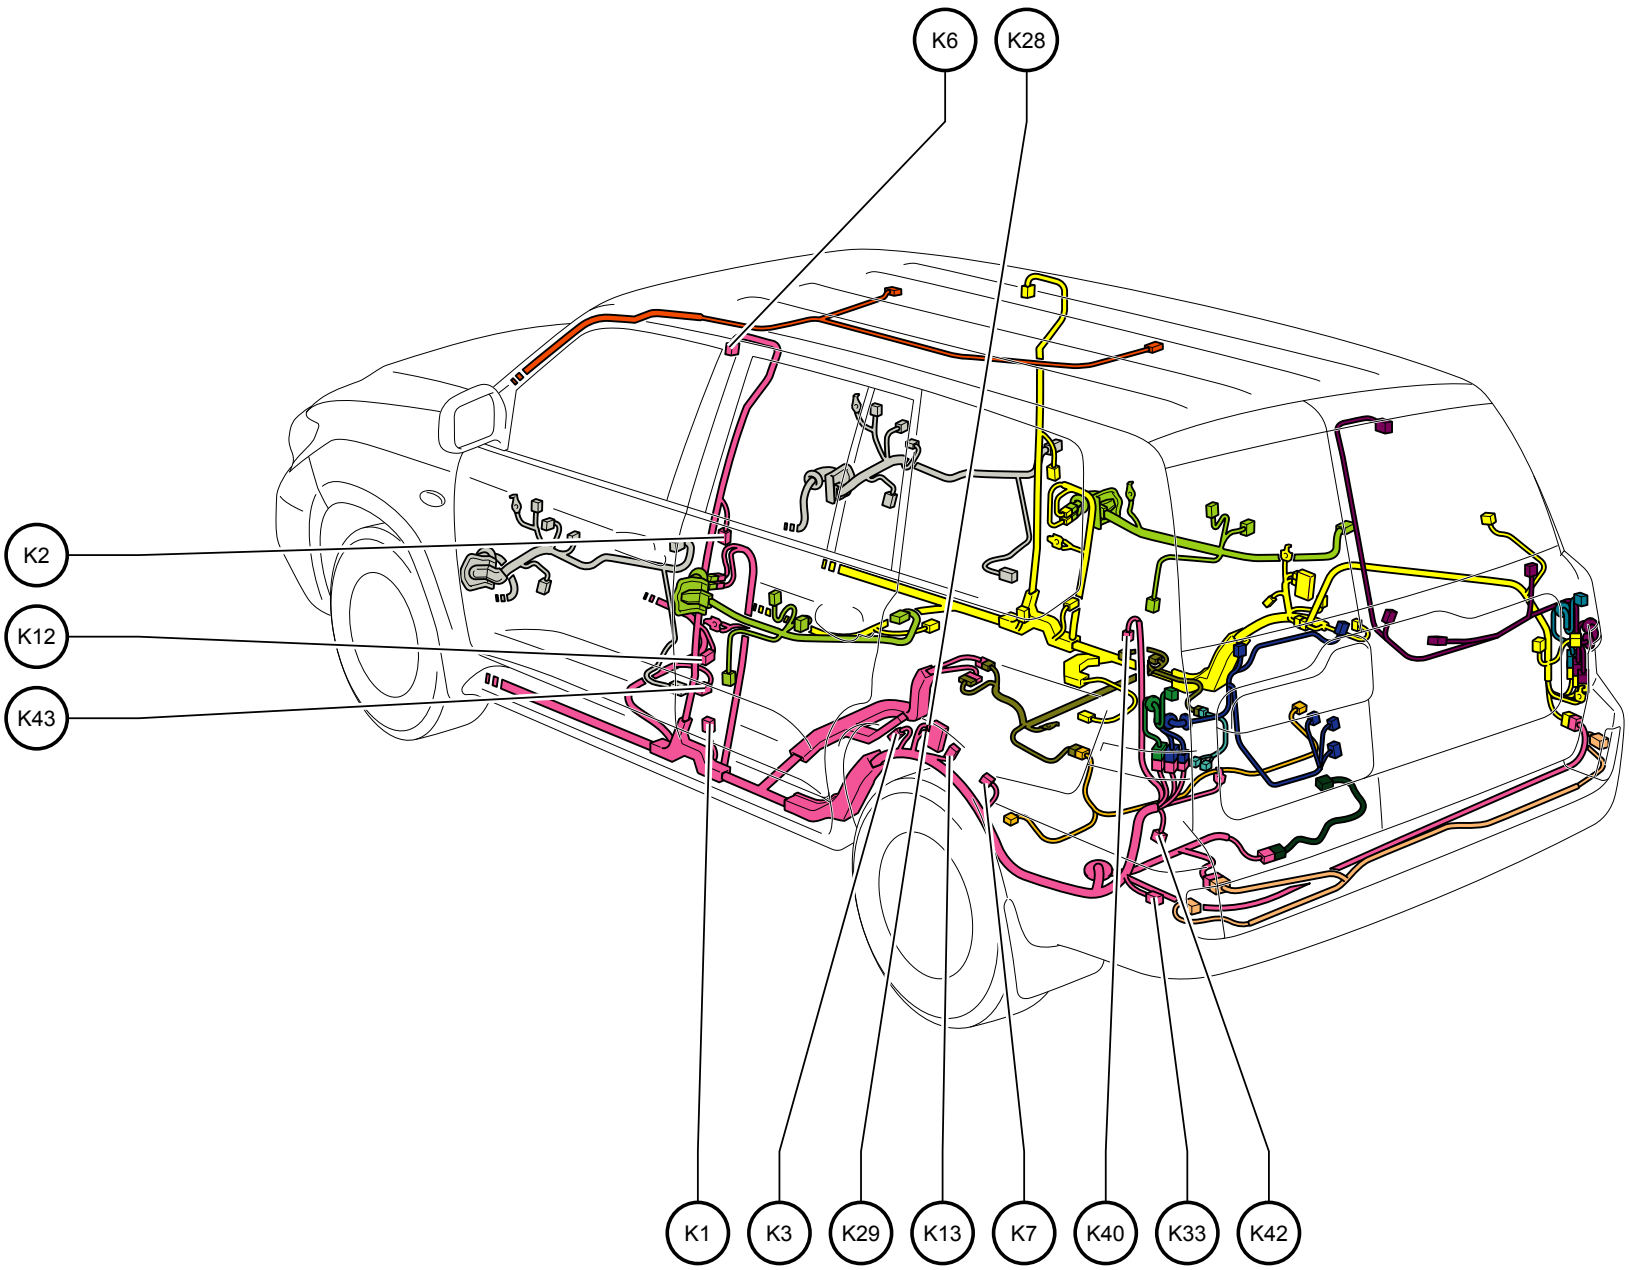
K6
K28
K2
K12
K43
K1
K3
K29
K13
K7
K40
K33
K42

K 1 Front Pretensioner LH
K 2 Front Door Courtesy Light Switch Assembly LH
K 3 Rear Door Courtesy Light Switch Assembly LH
K 6 Curtain Shield Airbag Assembly Circuit LH
K 7 Rear Side Airbag Sensor Assembly LH
K 12 Front Tension Reducer LH
K 13 Rear Pretensioner LH
K 28 Junction Connector
K 29 Junction Connector
K 33 Diode (Stop Light)
K 40 Towing Converter
K 42 Noise Filter (Rear Window Defogger LH)
K 43 Front Seat Inner Belt Assembly LH

K 1
Yellow

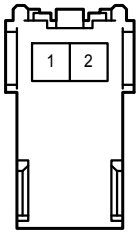


K 2
White




K 3
White




K 6
Black

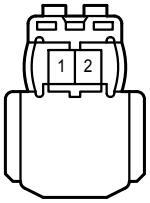


K 7
Yellow

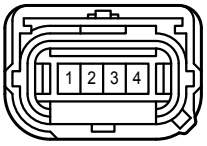

K 12
White




K 13
Yellow

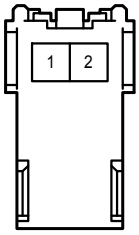

K 28
White




K 29
White




K 33
White




K 40
White




K 42
Black

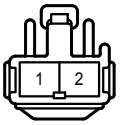

K 43
White

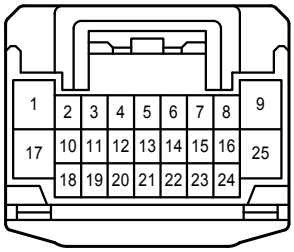

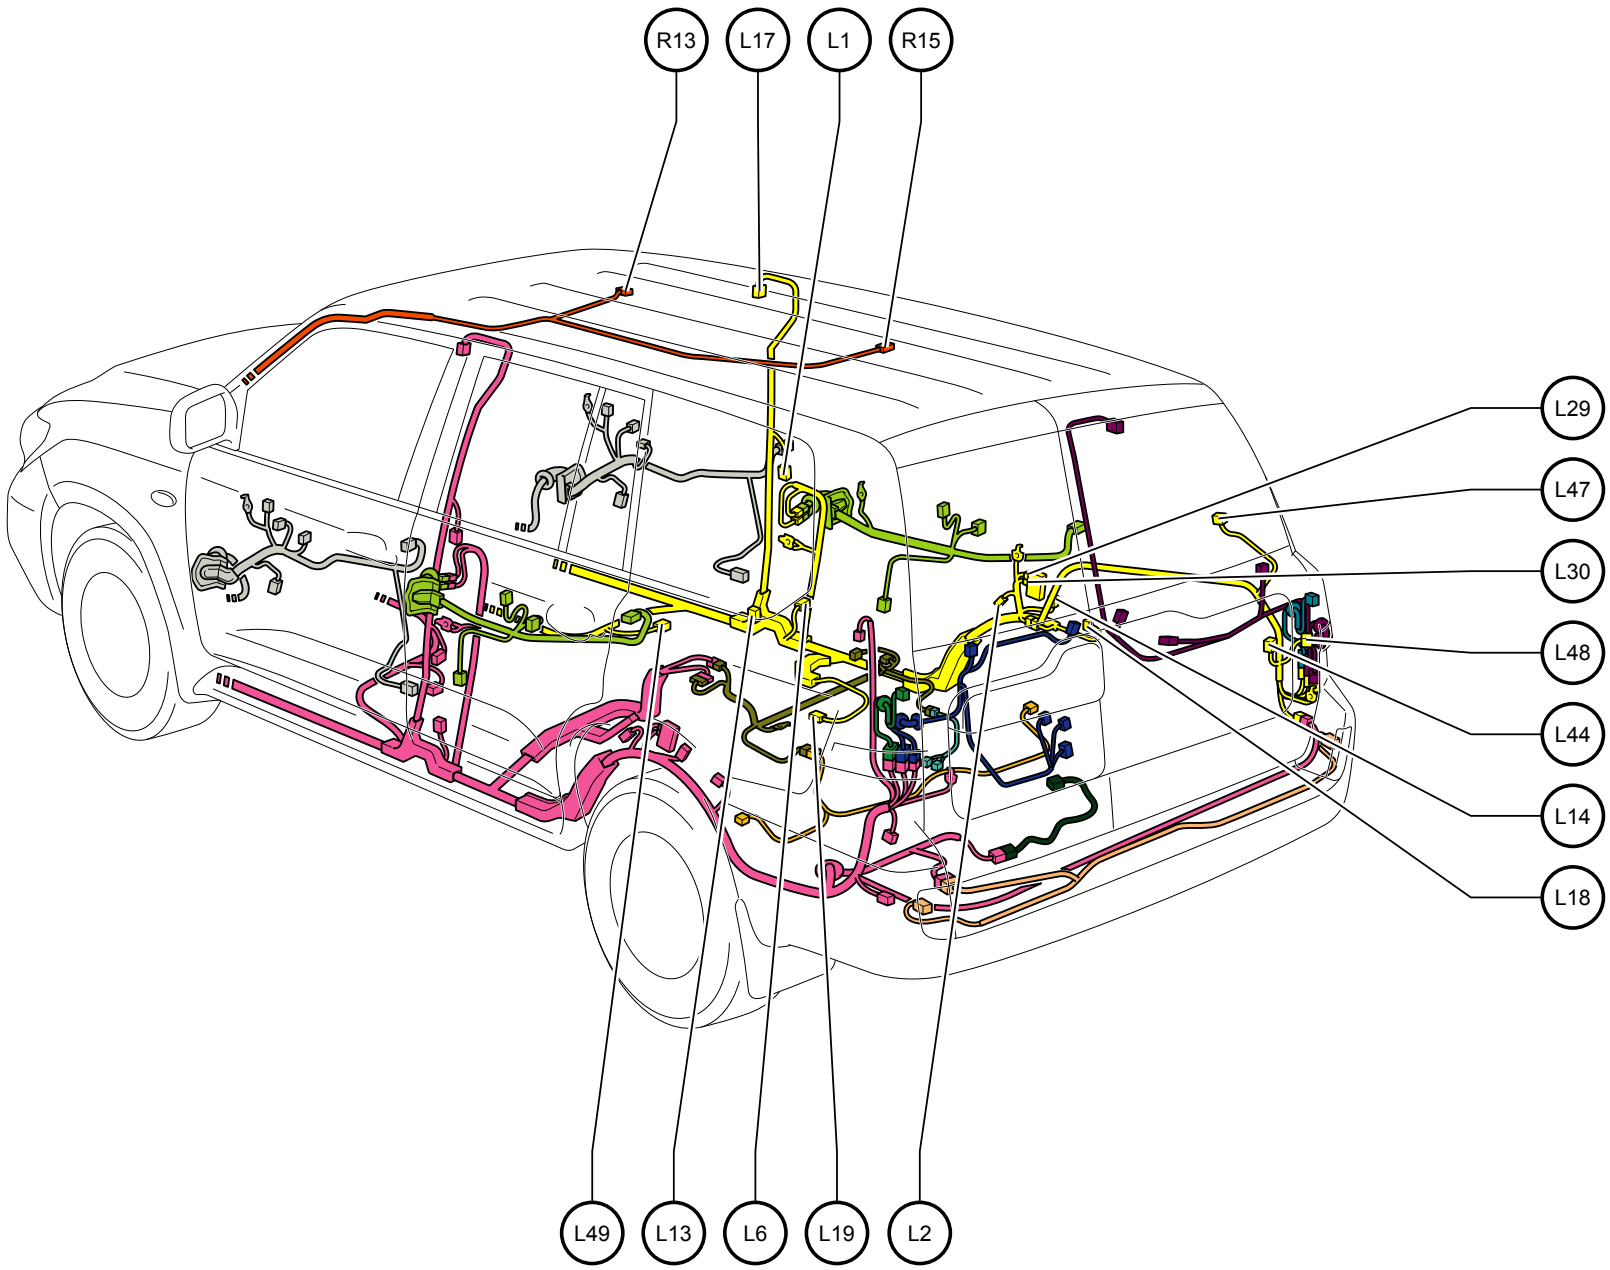
R13
L17
L1
R15
L29
L47
L30
L48
L44
L14
L18
L49
L13
L6
L19
L2

L 1 Front Door Courtesy Light Switch Assembly RH
L 2 Rear Door Courtesy Light Switch Assembly RH
L 6 Front Tension Reducer RH
L 13 Front Pretensioner RH
L 14 Rear Pretensioner RH
L 17 Curtain Shield Airbag Assembly Circuit RH
L 18 Rear Side Airbag Sensor Assembly RH
L 19 Rear Floor Side Airbag Sensor
L 29 Junction Connector
L 30 Junction Connector
L 44 Option Connector (Parking Assist-Sensor)
L 47 Door Control Receiver
L 48 Noise Filter (Rear Window Defogger and Stop)
L 49 Front Seat Inner Belt Assembly RH

R 13 No.1 Room Light Assembly
R 15 No.3 Room Light Assembly


L 1
White




L 2
White




L 6
White




L 13
Yellow

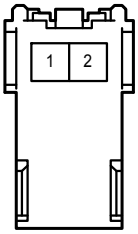


L 14
Yellow

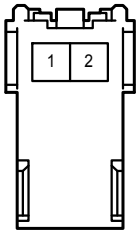

L 17
Black

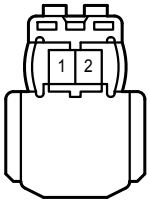


L 18
Yellow

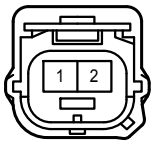


L 19
Yellow



L 29
White




L 30
White




L 44
White




L 47
White

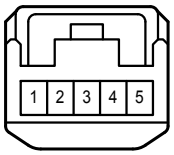


L 48
Black

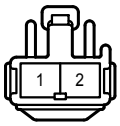


L 49
White

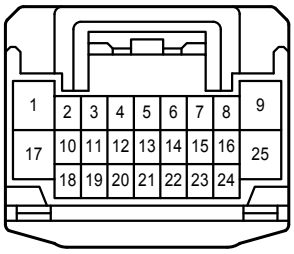


R 13
White



R 15
White



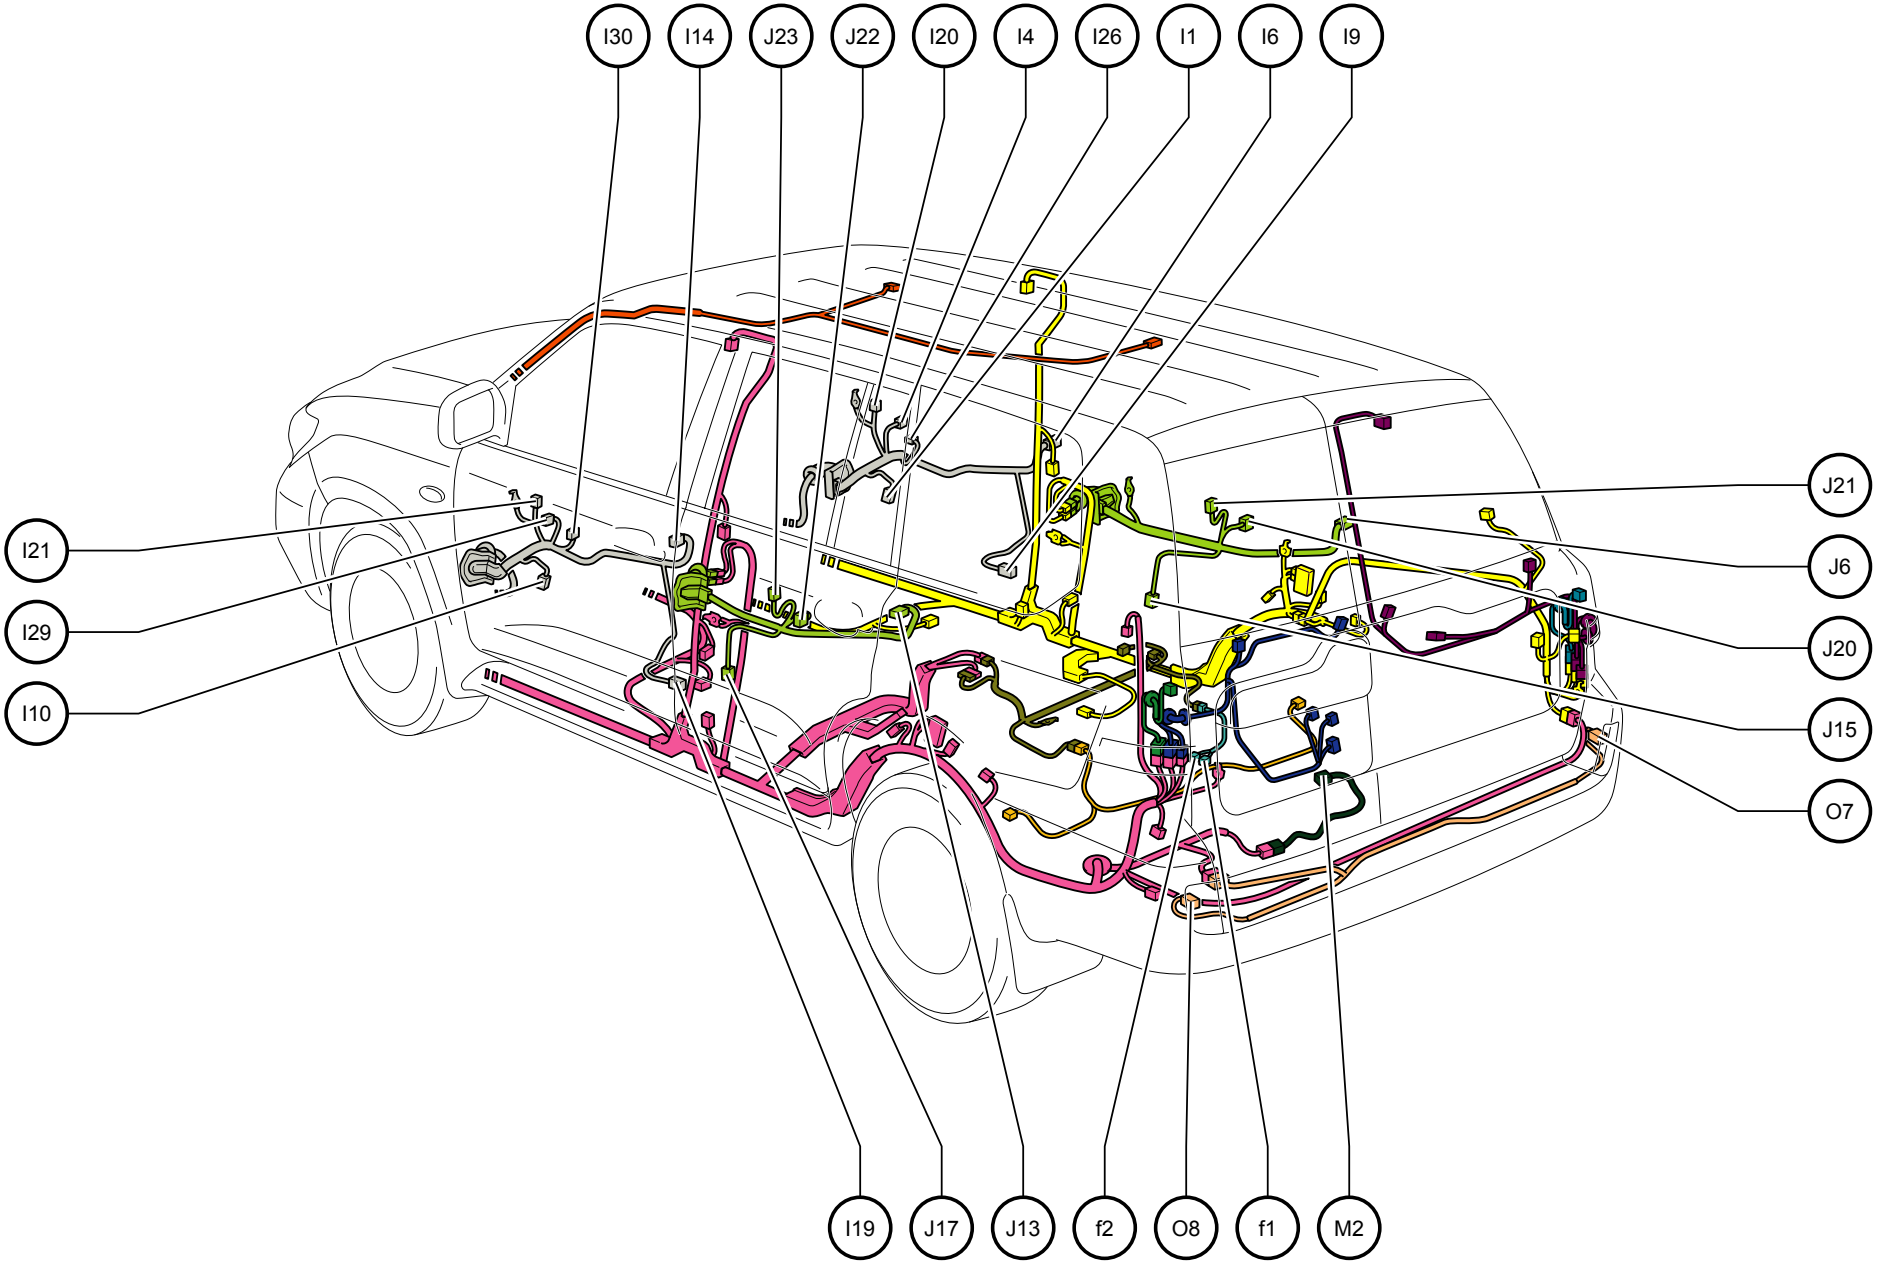
I30
I14
J23
J22
I20
I4
I26
I1
I6
I9
I21
I29
I10
J21
J6
J20
J15
O7
I19
J17
J13
f2
O8
f1
M2

I 1 Front No.1 Speaker Assembly RH
I 4 Front Power Window Regulator Motor Assembly RH
I 6 Front Door Lock Assembly RH
I 9 Front Side Airbag Sensor Assembly RH
I 10 Front No.1 Speaker Assembly LH
I 14 Front Door Lock Assembly LH
I 19 Front Side Airbag Sensor Assembly LH
I 20 Outer Rear View Mirror Assembly RH
I 21 Outer Rear View Mirror Assembly LH
I 26 Multiplex Network Master Switch Assembly
I 29 Front Power Window Regulator Motor Assembly LH
I 30 Front Power Window Regulator Switch Assembly LH

J 6 Rear Door Lock Assembly RH
J 13 Rear Door Lock Assembly LH
J 15 Rear Speaker Set RH
J 17 Rear Speaker Set LH
J 20 Rear Power Window Regulator Motor Assembly RH
J 21 Rear Power Window Regulator Switch Assembly RH
J 22 Rear Power Window Regulator Motor Assembly LH
J 23 Rear Power Window Regulator Switch Assembly LH

M 2 Fuel Sender Gage Assembly (Sub)


O 7 Back-Up Light Assembly RH
O 8 Back-Up Light Assembly LH

f 1 Differential Lock Shift Actuator
f 2 Differential Lock Switch


I 1
White




I 4
White

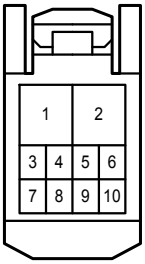

I 6
White

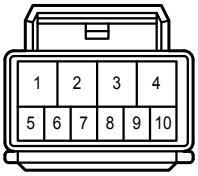


I 9
Yellow

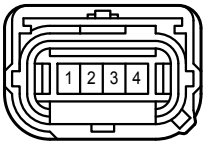


I 10
White




I 14
White

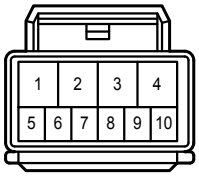


I 19
Yellow

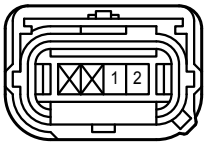


I 20
White

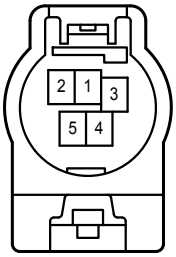


I 21
White

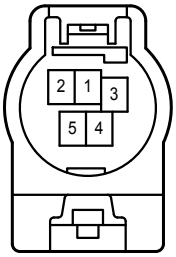


I 26
White

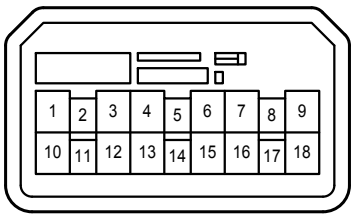


I 29
Black

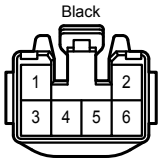


I 30
White

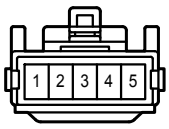

J 6
White

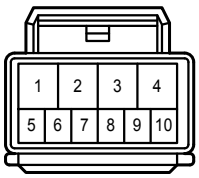

J 13
White

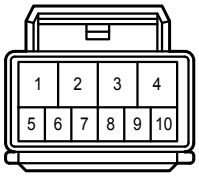

J 15
White




J 17
White



J 20
Black




J 21
White

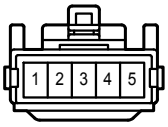

J 22
Black



J 23
White

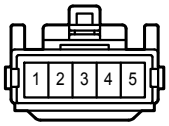

M 2
Black



O 7
Gray




O 8
Gray




f 1
Gray



f 2
Blue

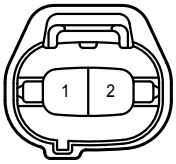

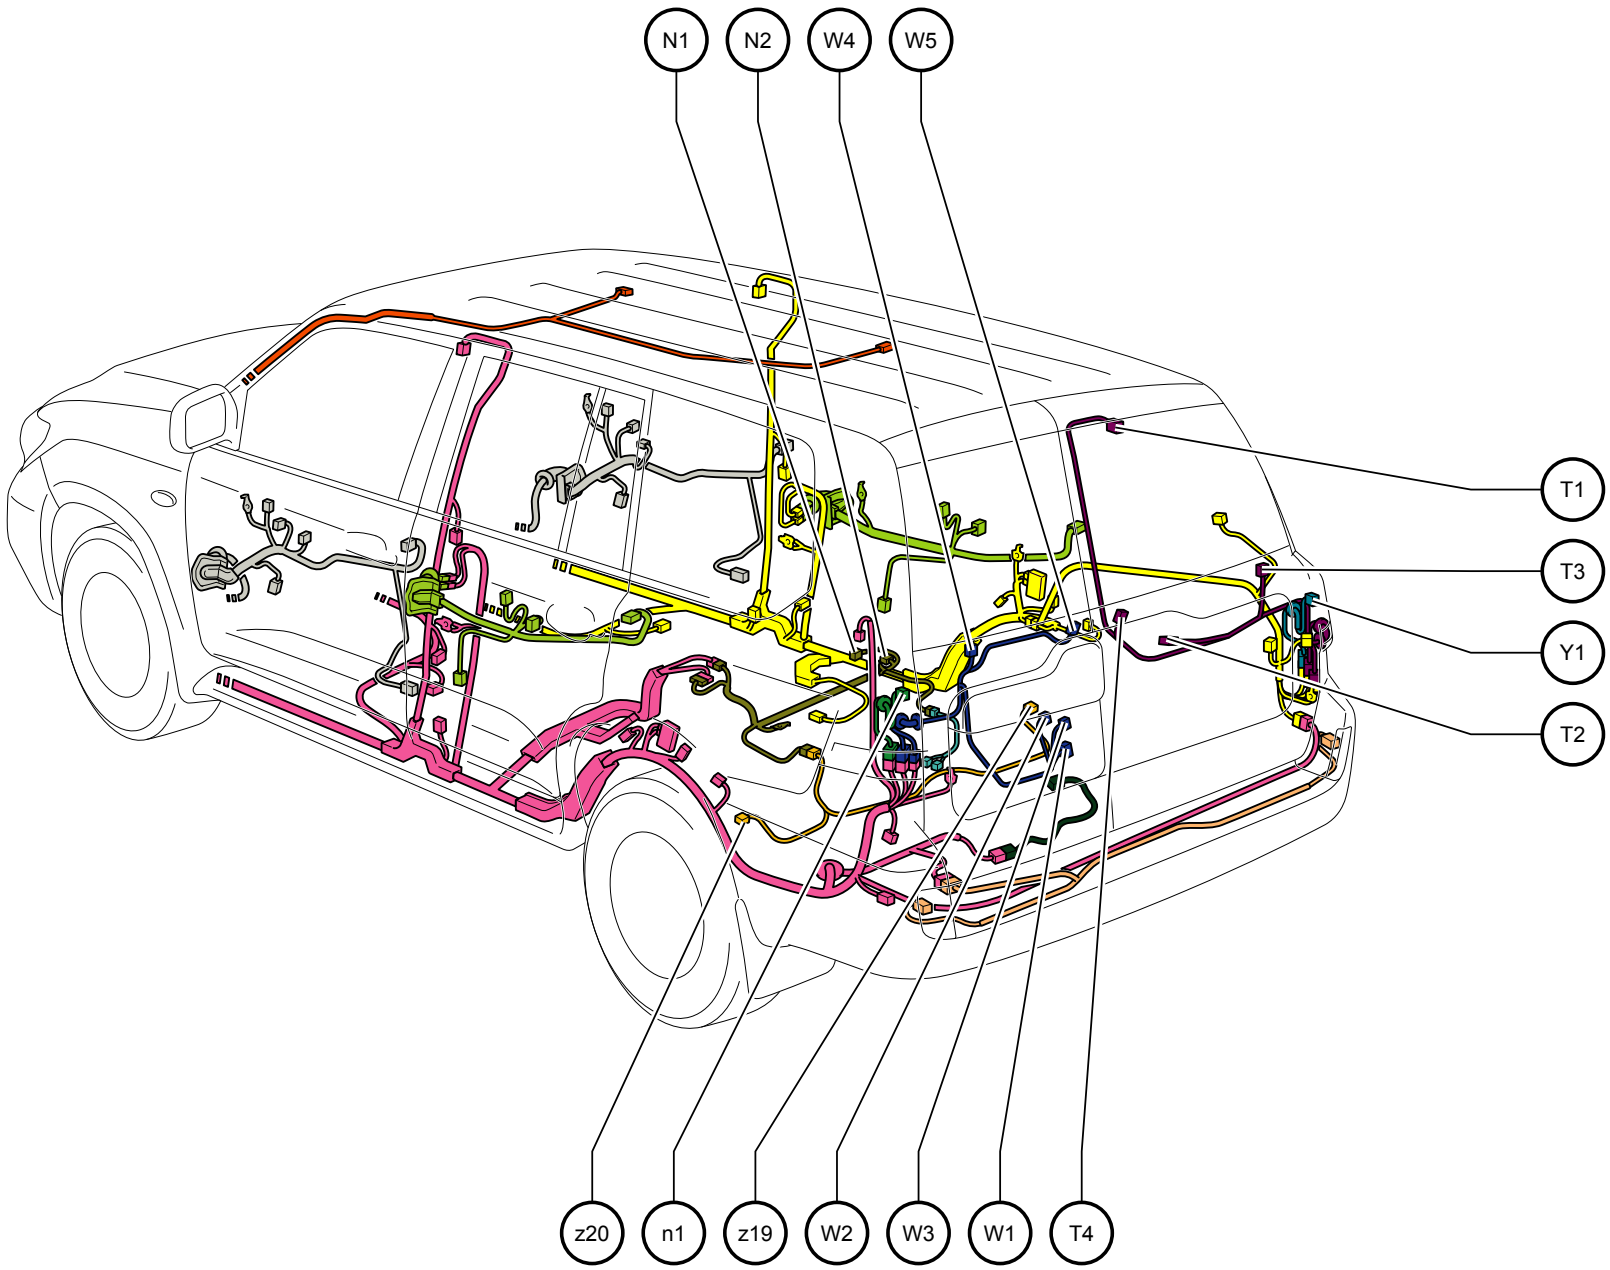
N1
N2
W4
W5
T1
T3
Y1
T2
z20
n1
z19
W2
W3
W1
T4

N 1 Fuel Sender Gage Assembly (Main)
N 2 Fuel Pump Control ECU Assembly

T 1 Center Stop Light Assembly
T 2 Rear Wiper Motor Assembly
T 3 Rear Window Defogger RH (Back Door Glass)
T 4 Rear Window Defogger RH (Back Door Glass)

W 1 Back Door Lock Assembly
W 2 License Plate Light Assembly
W 3 Back Door Courtesy Light Switch Assembly
W 4 Rear Window Defogger LH (Back Door Glass)
W 5 Rear Window Defogger LH (Back Door Glass)

Y 1 Rear Combination Light Assembly RH


n 1 Rear Combination Light Assembly LH

z 19 Rear Speed Sensor RH
z 20 Rear Speed Sensor LH


N 1
White




N 2
Black

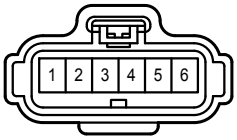

T 1
Gray



T 2
Black

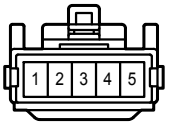

T 3
White



T 4
White




W 1
White



W 2
White



W 3
Blue

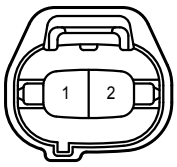

W 4
White



W 5
White



Y 1
Gray



n 1
Gray




z 19
Black




z 20
Black

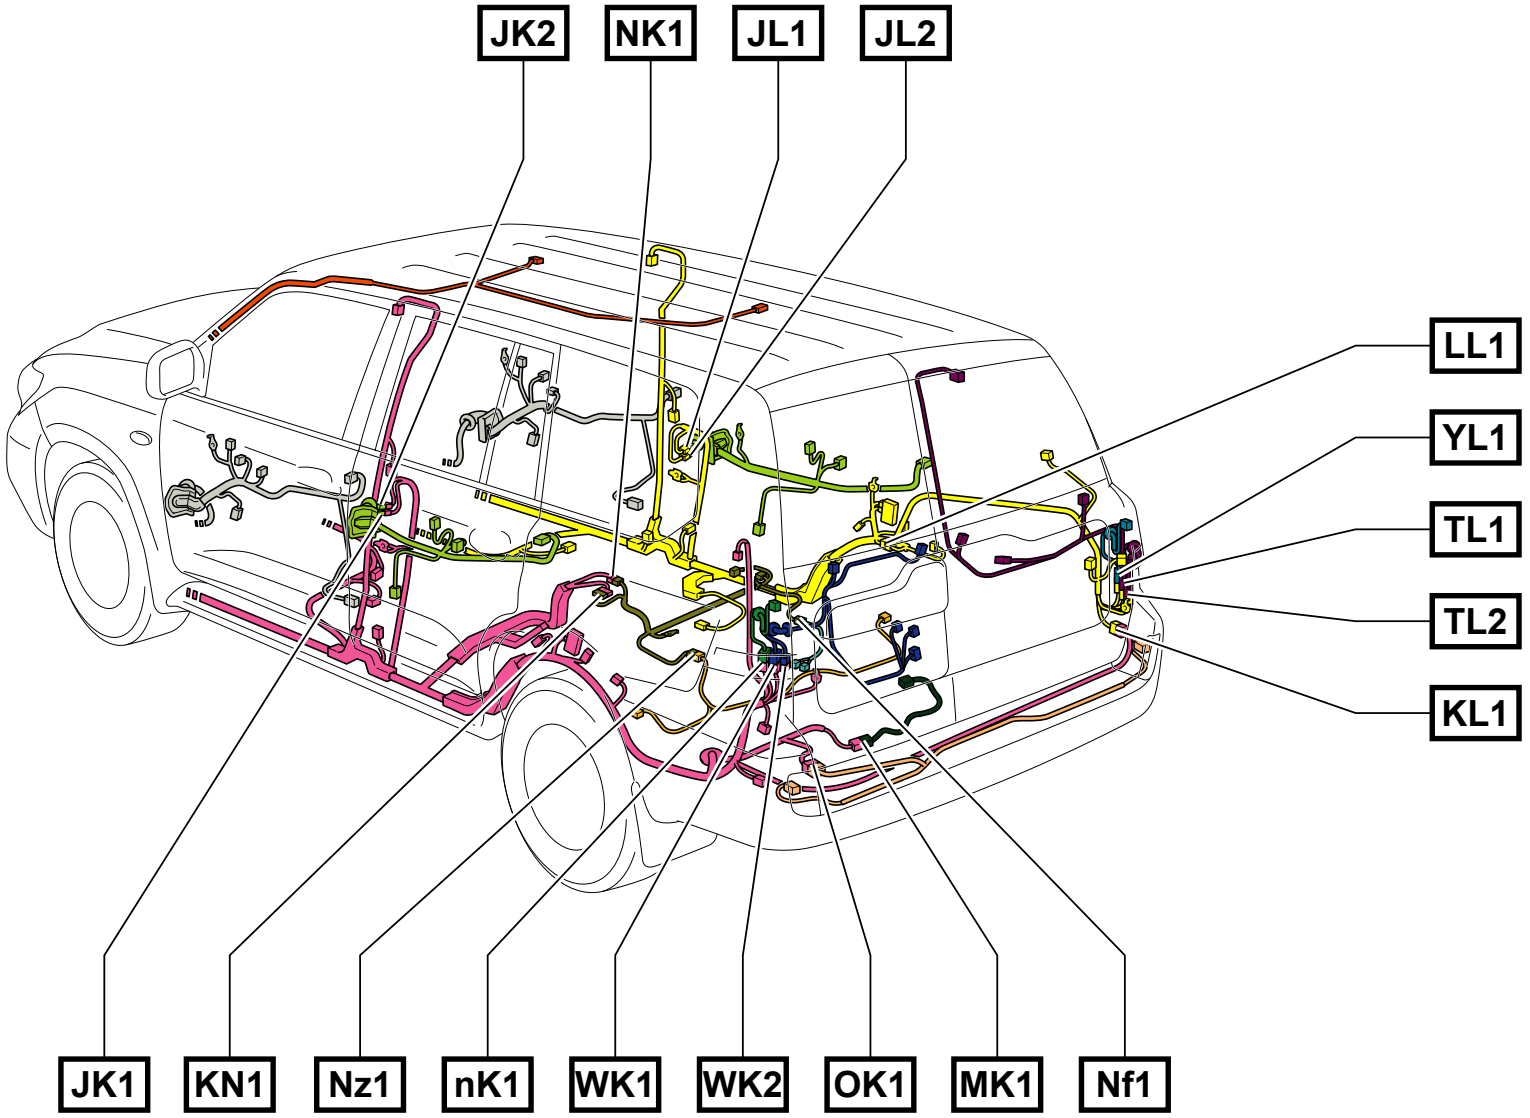



JK2
NK1
JL1
JL2
LL1
YL1
TL1
TL2
KL1
JK1
KN1
Nz1
nK1
WK1
WK2
OK1
MK1
Nf1


JK1
White

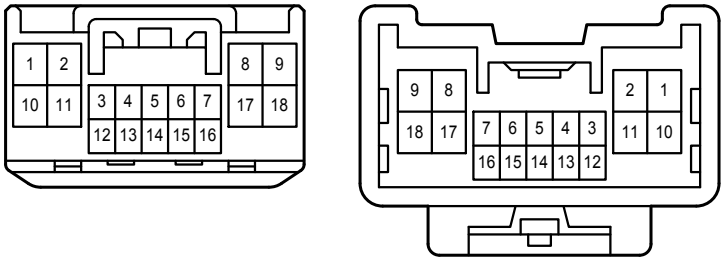


JK2
White

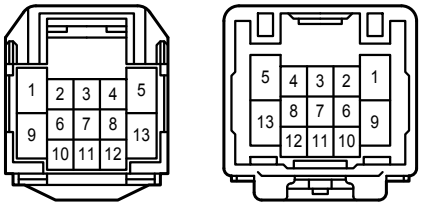


JL1
White

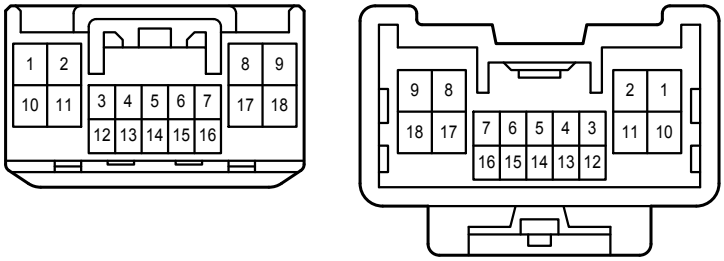


JL2
White

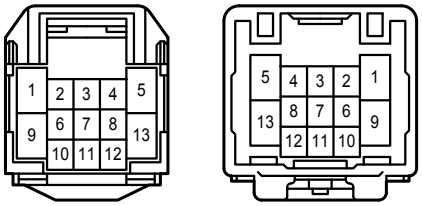


KL1
White

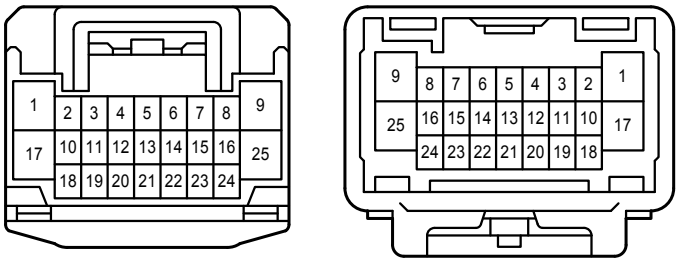


KN1
White

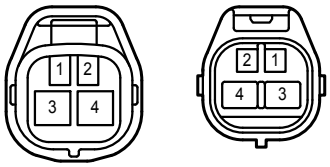


LL1
White




MK1
White

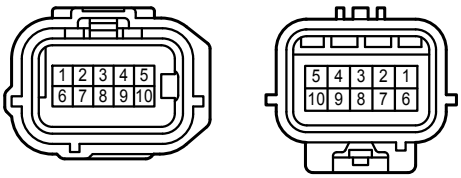

NK1
White

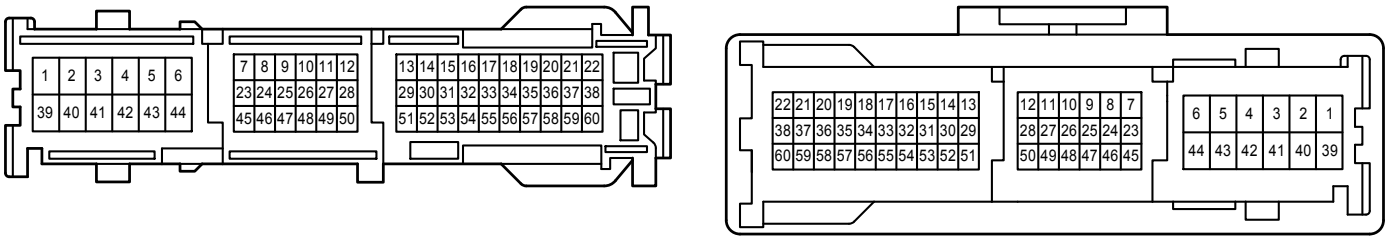

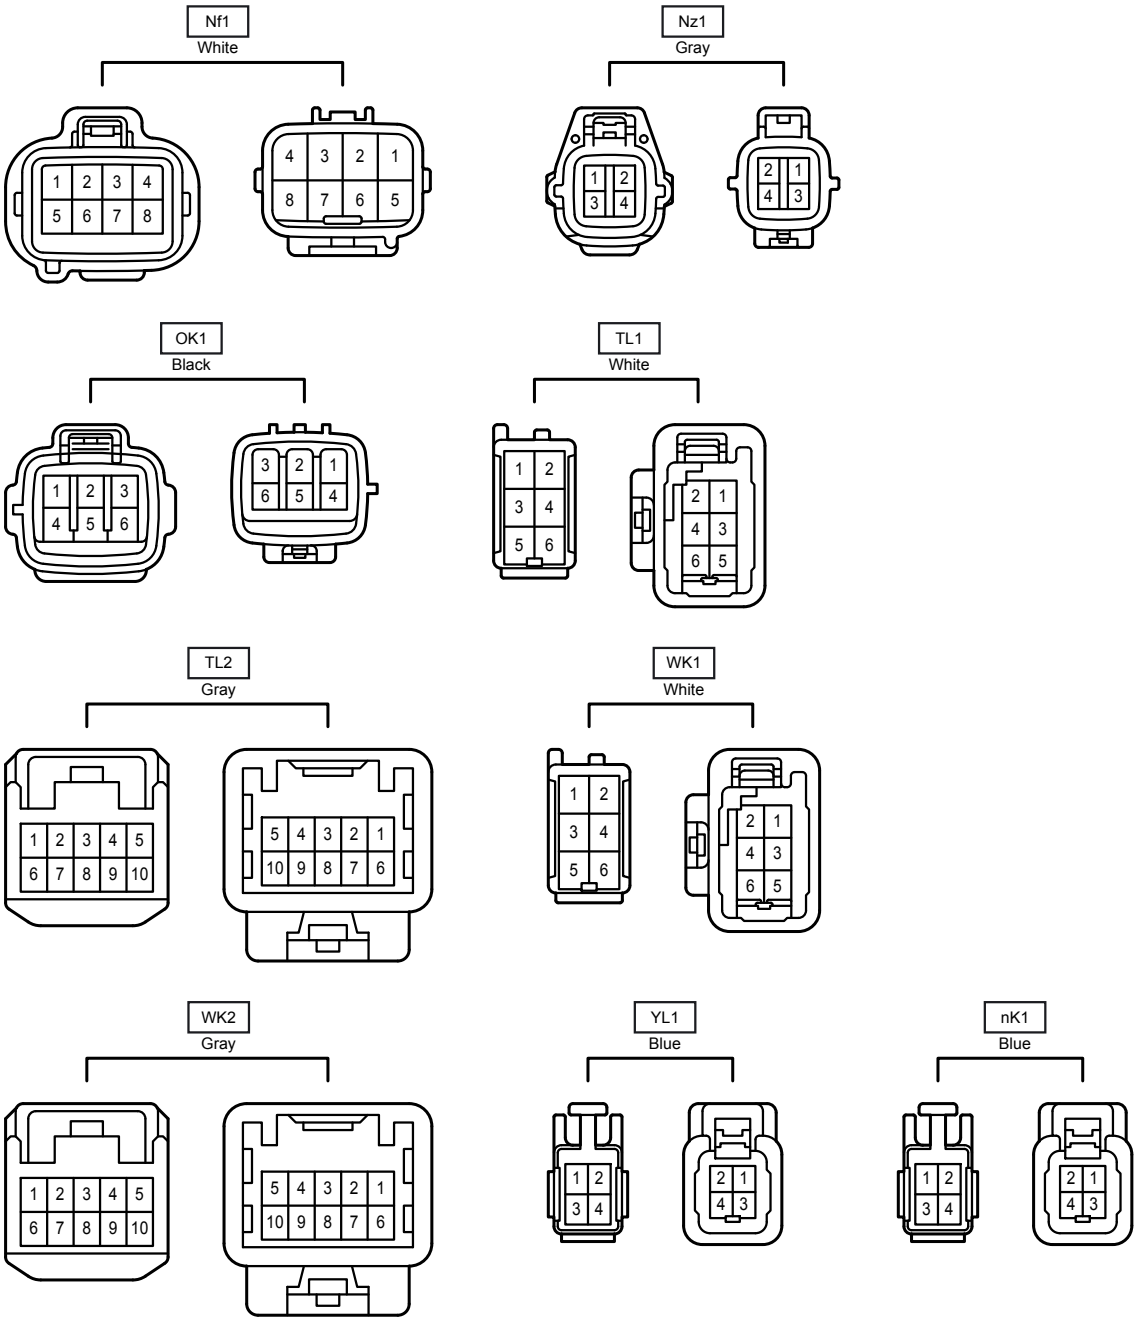
Nf1
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Nz1
Gray
1 2
3 4
2 1
4 3
OK1
Black
1 2 3
4 5 6
3 2 1
6 5 4
TL1
White
1 2
3 4
5 6
2 1
4 3
6 5
TL2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
WK1
White
1 2
3 4
5 6
2 1
4 3
6 5
WK2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
YL1
Blue
1 2
3 4
2 1
4 3
nK1
Blue
1 2
3 4
2 1
4 3