



Engine Room Main Wire
Engine Wire
Sensor Wire
C2 (*1)
* 1:Before Jan. 2012 Production
* 2:From Jan. 2012 Production
C1
C2 (*2)
A3
A4
Skid Control Sensor Wire
A1
Engine No.2 Wire
A2
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine Room No.4 Wire
Winch Control Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable

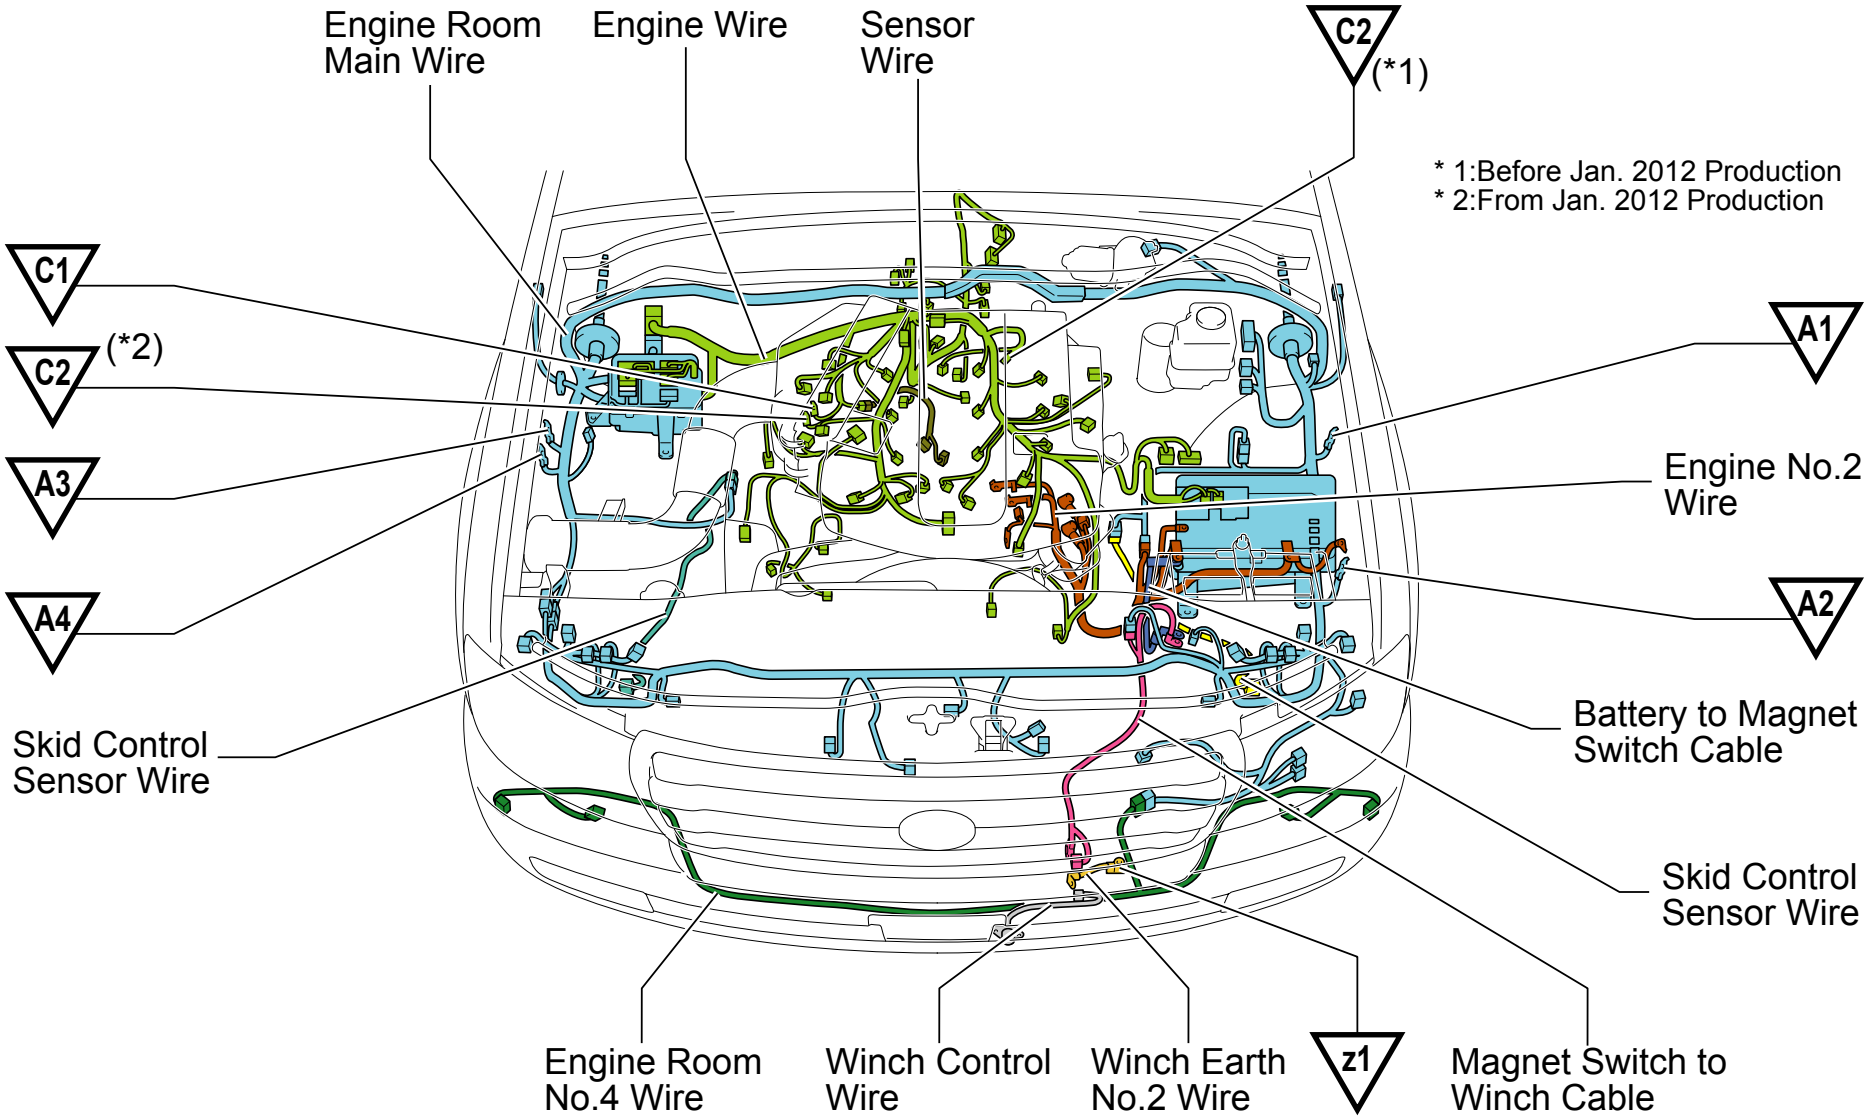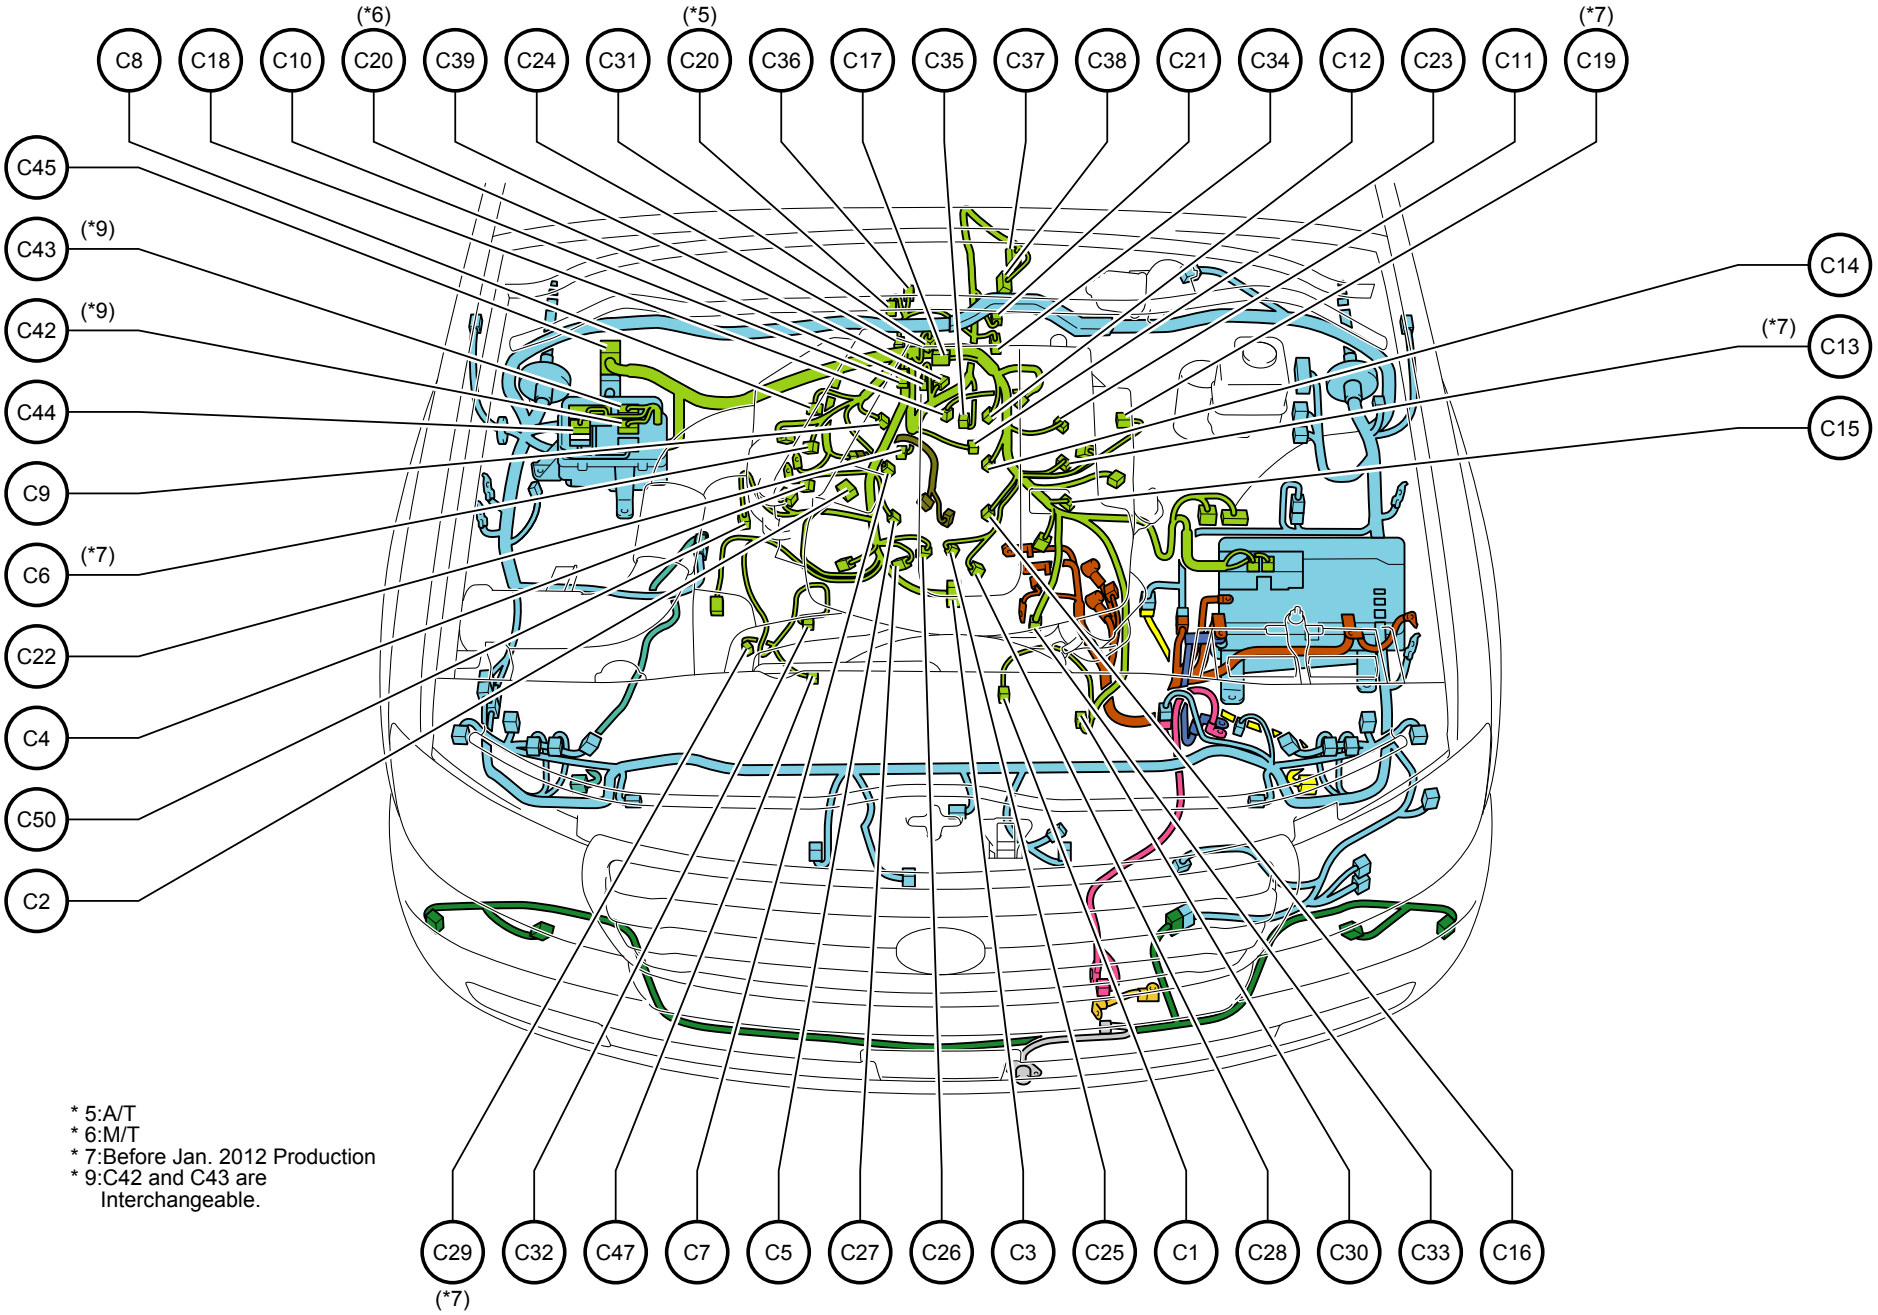


* 5:A/T
* 6:M/T
* 7:Before Jan. 2012 Production
* 9:C42 and C43 are Interchangeable.

C 1 Crankshaft Position Sensor
C 2 Mass Air Flow Meter
C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 5 Fuel Injector Assembly No.1
C 6 Ignition Coil Assembly No.3
C 7 Fuel Injector Assembly No.3
C 8 Ignition Coil Assembly No.5
C 9 Fuel Injector Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 12 Fuel Injector Assembly No.6
C 13 Ignition Coil Assembly No.4
C 14 Fuel Injector Assembly No.4
C 15 Ignition Coil Assembly No.2
C 16 Fuel Injector Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 19 Purge VSV
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 21 Oxygen Sensor (Bank 2 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 25 VVT Sensor (Bank 2 Intake Side)
C 26 VVT Sensor (Bank 1 Intake Side)
C 27 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 28 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 29 Power Steering Oil Pressure Switch
C 30 Cooler Compressor Assembly
C 31 VSV (ACIS)
C 32 Engine Oil Level Sensor
C 33 Oil Pressure Sender Gage Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 39 Back-Up Light Switch Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 45 ECM
C 47 Oil Pressure Sender Gage Assembly
C 50 Mass Air Flow Meter


C 1
Black

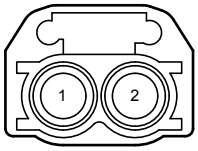


C 2
Black

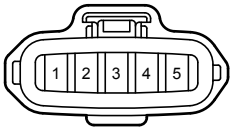


C 3
Black

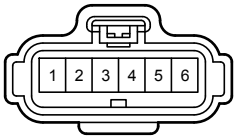


C 4
Black




C 5
Gray

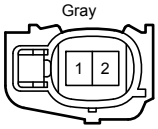


C 6
Black




C 7
Gray

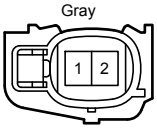


C 8
Black




C 9
Gray




C 10
Gray

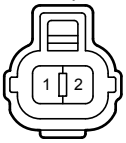


C 11
Black




C 12
Gray




C 13
Black




C 14
Gray




C 15
Black



C 16
Gray




C 17
Gray

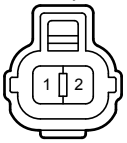

C 18
Dark Gray



C 19
Gray

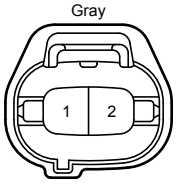

C 20
Dark Gray



C 21
Dark Gray




C 22
Dark Gray




C 23
Dark Gray




C 24
Gray

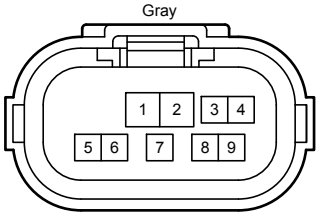

C 25
Black

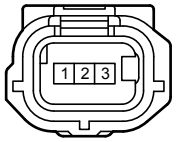

C 26
Black

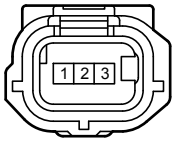

C 27
Black




C 28
Black




C 29
Black



C 30
Gray

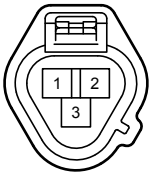


C 31
Brown

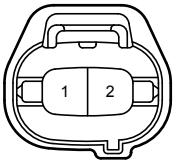


C 32
Gray




C 33
Black

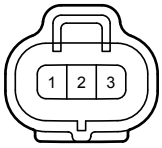


C 34
Gray

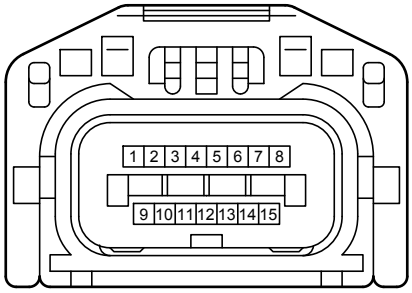


C 35
Black

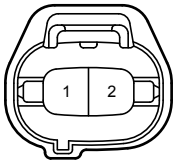


C 36
Black

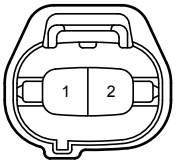


C 37
Black

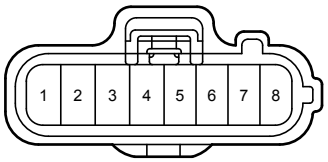


C 38
Dark Gray

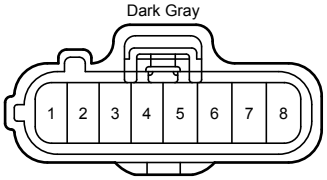


C 39
Gray

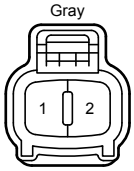


C 42
White

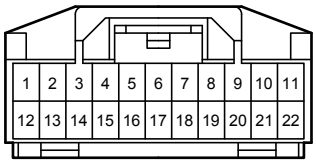


C 43
White

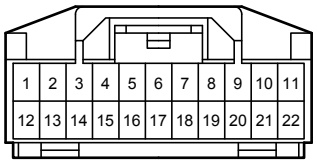

C 44
Blue

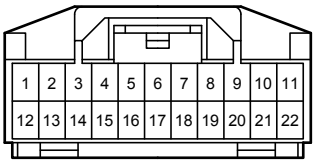


C 45
Black

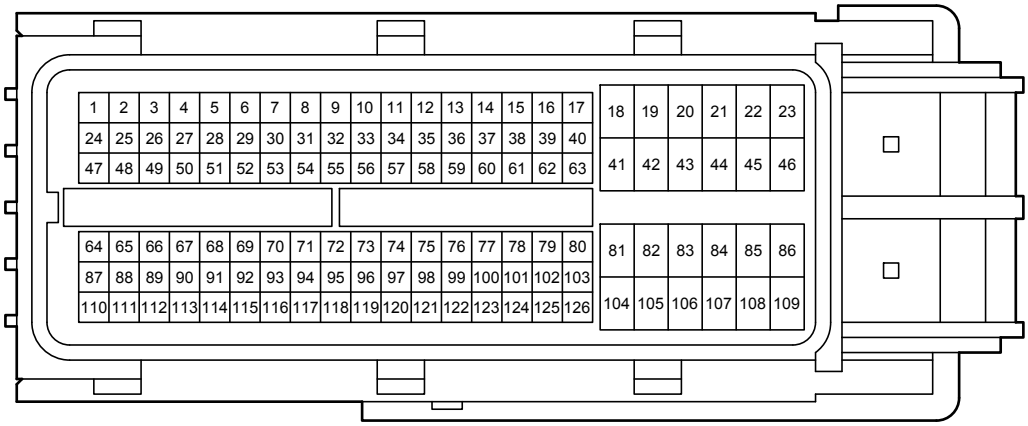


C 47
Black



C 50
Black

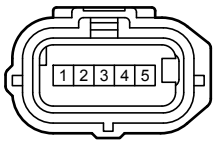


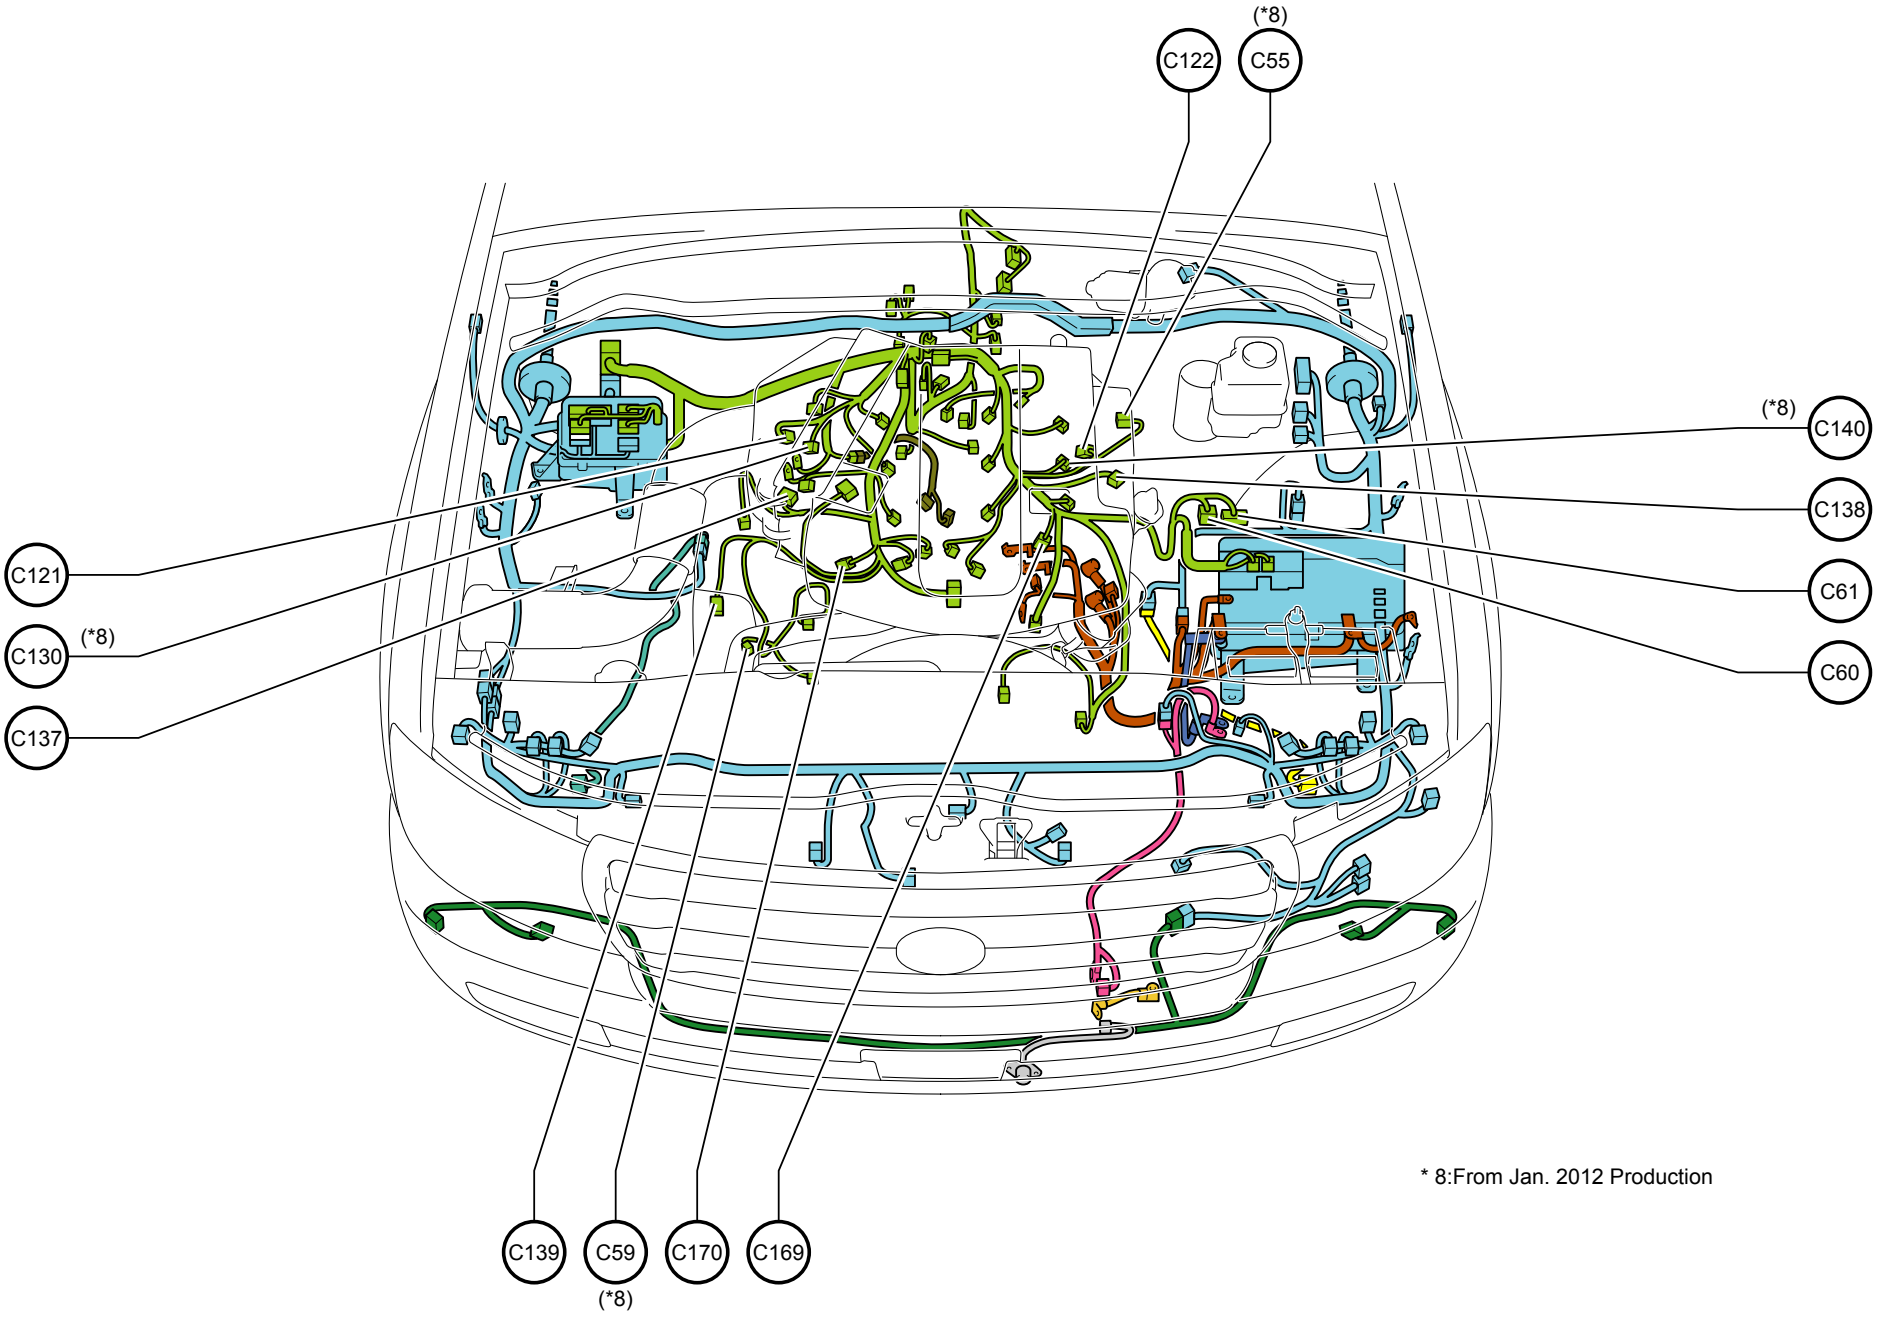


* 8:From Jan. 2012 Production

C 55 Purge VSV
C 59 Power Steering Oil Pressure Sensor
C 60 Air Injection Control Driver
C 61 Air Injection Control Driver
C 121 VVT Sensor (Bank 1 Exhaust Side)
C 122 VVT Sensor (Bank 2 Exhaust Side)
C 130 Ignition Coil Assembly No.3
C 137 Air Switching Valve (Bank 1)
C 138 Air Switching Valve (Bank 2)
C 139 Air Pump Assembly
C 140 Ignition Coil Assembly No.4
C 169 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C 170 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)


C 55
Black

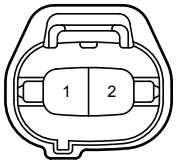


C 59
Gray

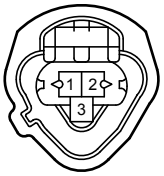


C 60
Black

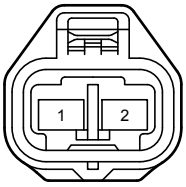


C 61
Black

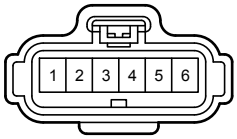

C121
Black

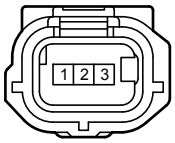


C122
Black

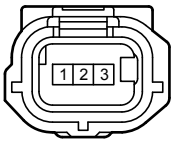


C130
Gray




C137
Black

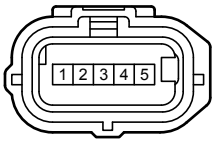


C138
Black

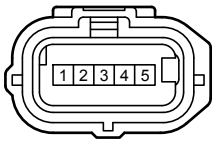

C139
Black

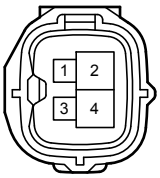

C140
Gray

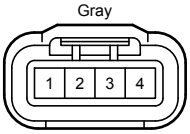


C169
Gray




C170
Gray

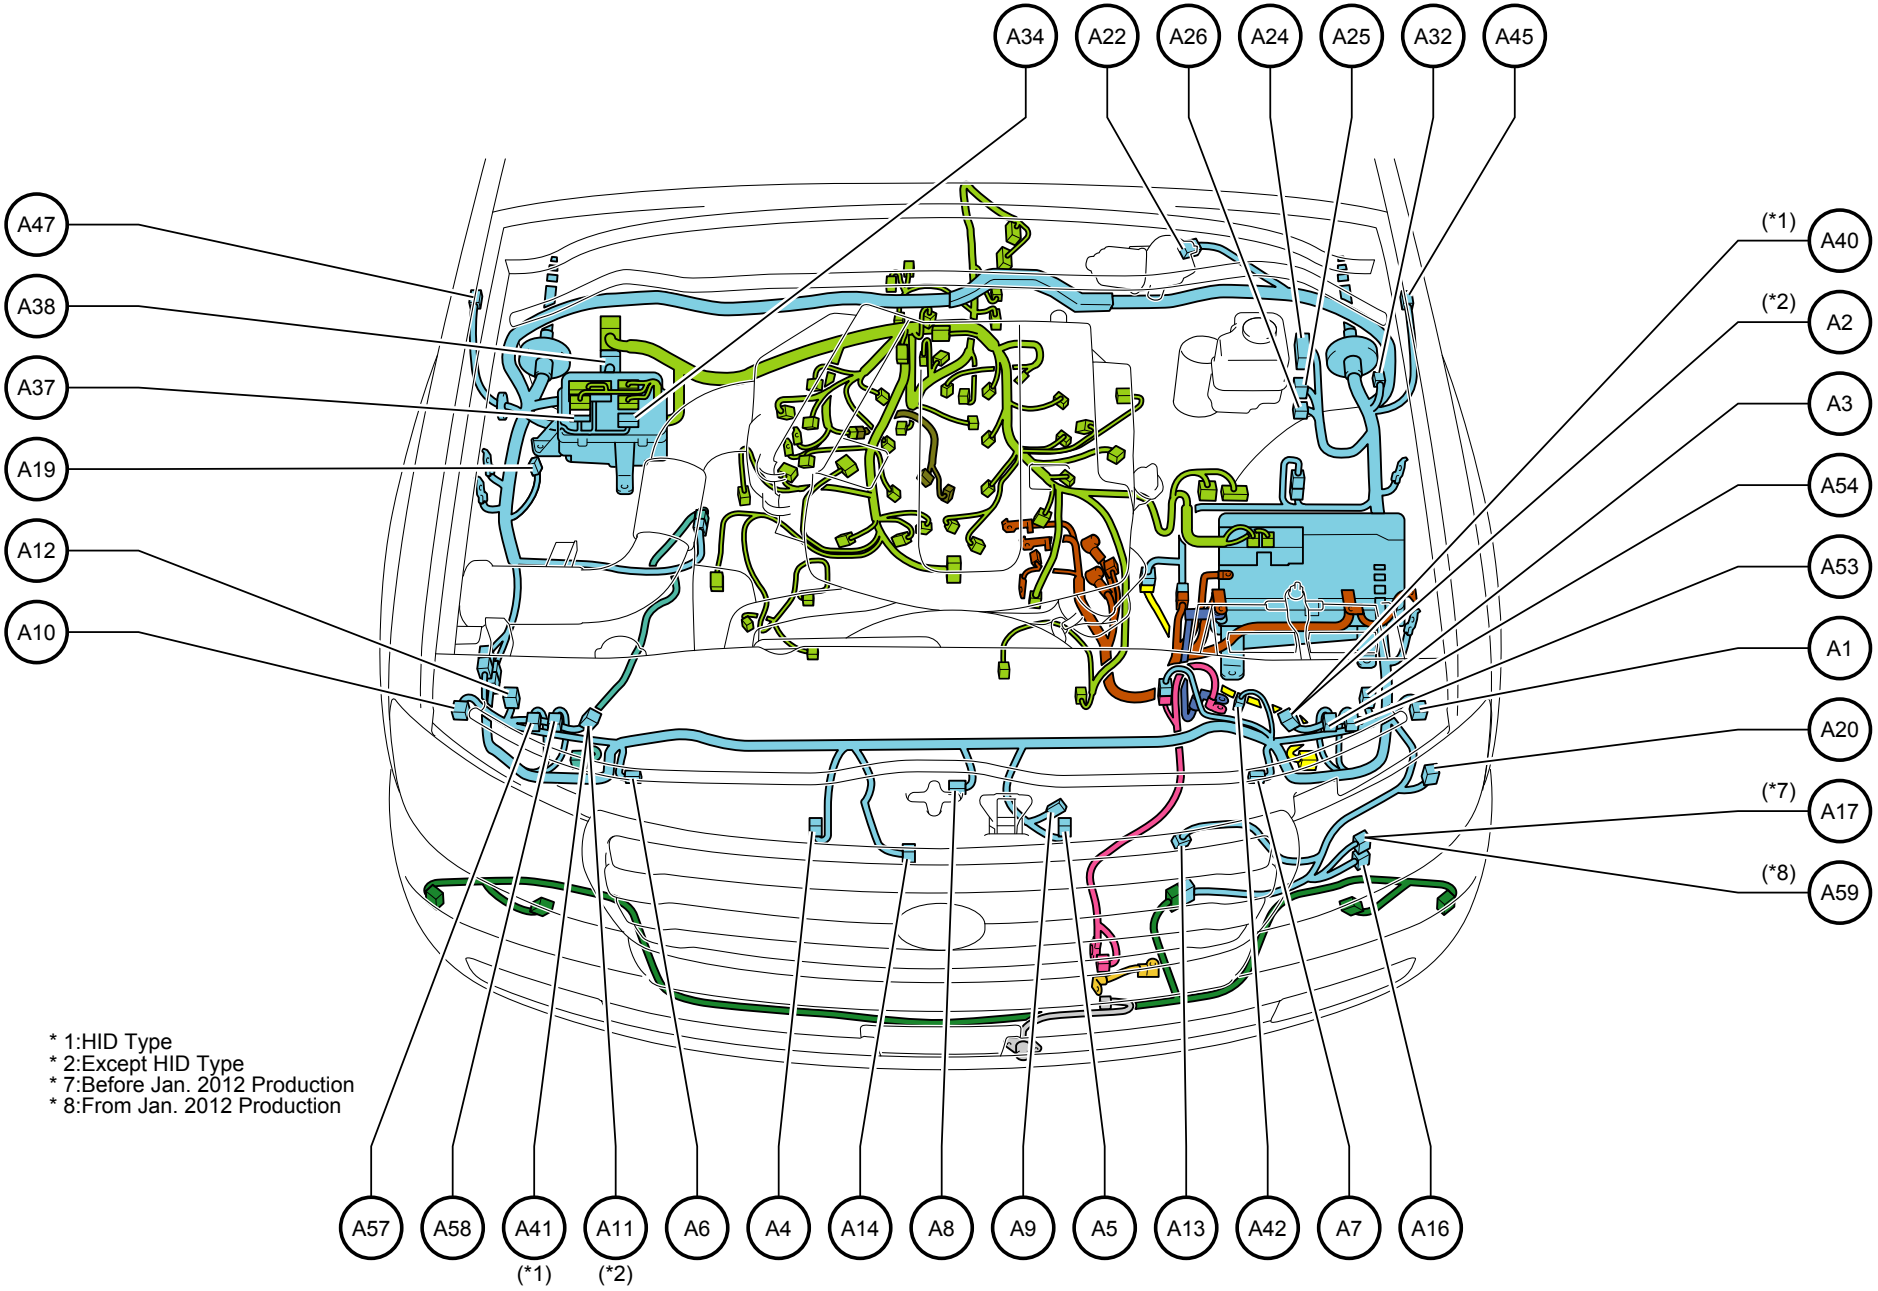



A34
A22
A26
A24
A25
A32
A45
A47
A38
A37
A19
A12
A10
(*1)
A40
(*2)
A2
A3
A54
A53
A1
A20
(*7)
A17
(*8)
A59
A57
A58
A41
(*1)
A11
(*2)
A6
A4
A14
A8
A9
A5
A13
A42
A7
A16
* 1:HID Type
* 2:Except HID Type
* 7:Before Jan. 2012 Production
* 8:From Jan. 2012 Production

A	1	Headlight Assembly LH
A	2	Headlight Assembly LH
A	3	Headlight Assembly LH
A	4	High Pitched Horn Assembly
A	5	Low Pitched Horn Assembly
A	6	Front Airbag Sensor RH
A	7	Front Airbag Sensor LH
A	8	Engine Hood Courtesy Switch
A	8	Engine Hood Courtesy Switch
A	9	Condenser Blower Motor Assembly
A	10	Headlight Assembly RH
A	11	Headlight Assembly RH
A	12	Headlight Assembly RH
A	13	A/C Pressure Sensor
A	14	Ambient Temperature Sensor
A	16	Windshield Washer Motor and Pump Assembly
A	17	Headlight Cleaner Control Relay and Motor
A	19	Security Horn Assembly
A	20	Wireless Door Lock Buzzer
A	22	Windshield Wiper Motor Assembly
A	24	Skid Control ECU with Actuator Assembly
A	25	Skid Control ECU with Actuator Assembly
A	26	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A	32	Noise Filter
A	34	Junction Connector
A	37	Junction Connector
A	38	ECM
A	40	Headlight Assembly LH
A	41	Headlight Assembly RH
A	42	Winch Main Relay (No.1 Magnet Switch Assembly)
A	45	Side Turn Signal Light Assembly LH
A	47	Side Turn Signal Light Assembly RH
A	53	Headlight Assembly LH
A	54	Headlight Assembly LH
A	57	Headlight Assembly RH
A	58	Headlight Assembly RH
A	59	Headlight Cleaner Control Relay and Motor


A 1
Gray

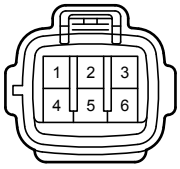


A 2
Black

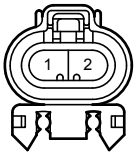


A 3
Black

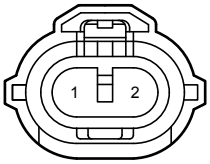


A 4
Black




A 5
Black



A 6
Yellow

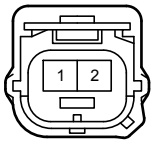

A 7
Yellow

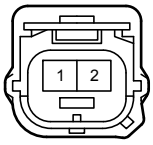


A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

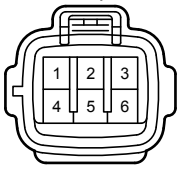


A 11
Black

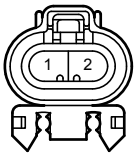

A 12
Black

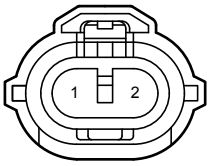

A 13
Black

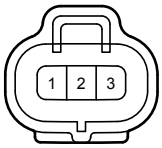

A 14
Black



A 16
Gray




A 17
Black




A 19
Black




A 20
Black




A 22
Black

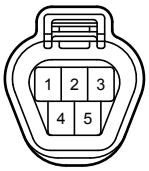


A 24
Black

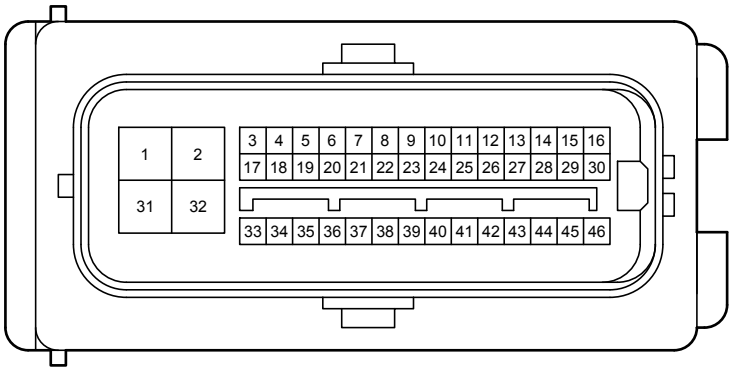


A 25
Black

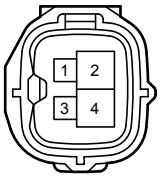


A 26
Gray

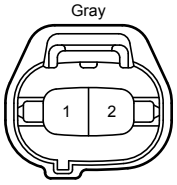


A 32
Black

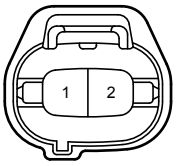


A 34
White

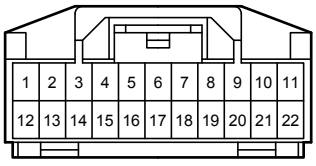

A 37
Blue

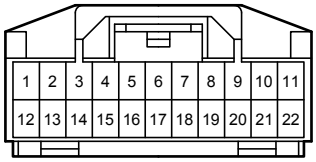

A 38
Black

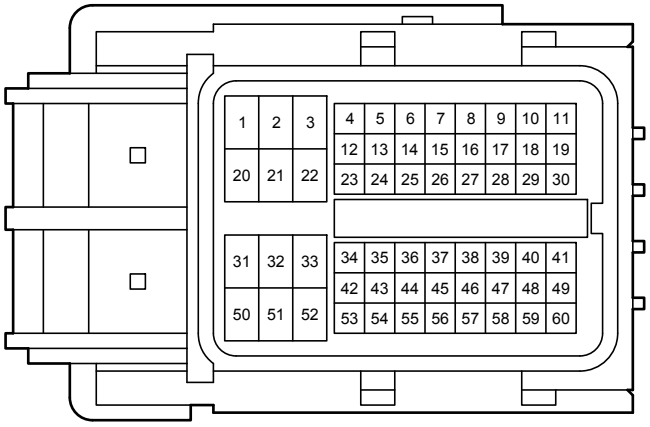


A 40
Gray



A 41
Gray



A 42
Black

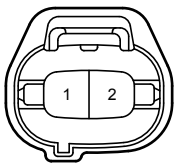

A 45
Gray




A 47
Gray



A 53
Black




A 54
Black

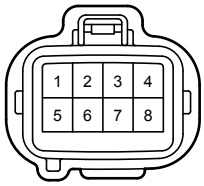

A 57
Black




A 58
Black

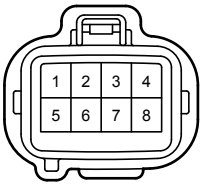

A 59
White

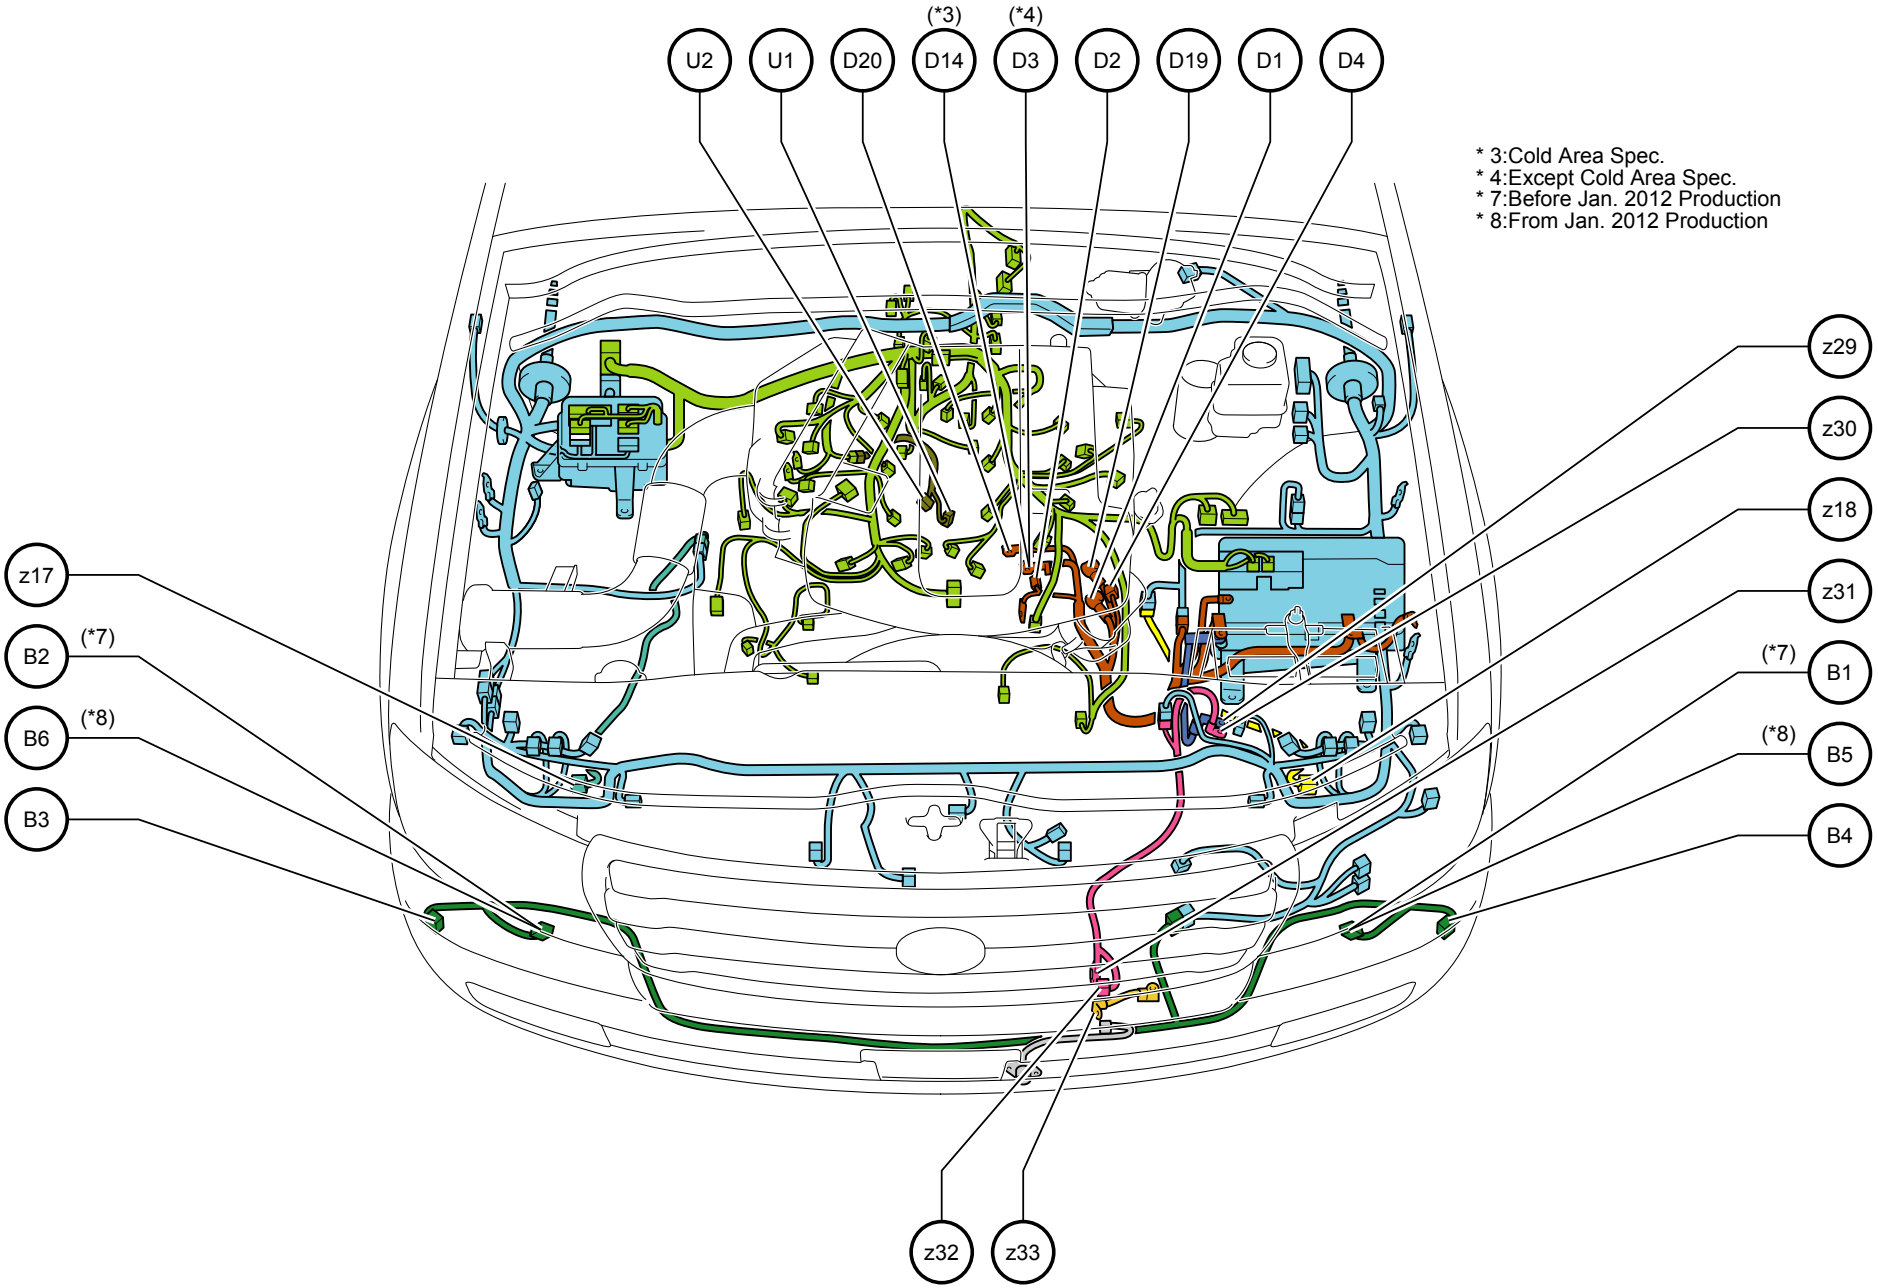


(*3)
(*4)
U2
U1
D20
D14
D3
D2
D19
D1
D4
* 3:Cold Area Spec.
* 4:Except Cold Area Spec.
* 7:Before Jan. 2012 Production
* 8:From Jan. 2012 Production
z29
z30
z18
z31
(*7)
B1
(*8)
B5
B4
z17
B2
(*7)
B6
(*8)
B3
z32
z33


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH
B 5 Fog Light Assembly LH
B 6 Fog Light Assembly RH

D 1 Generator Assembly
D 2 Starter Assembly
D 3 Starter Assembly
D 4 Generator Assembly
D 14 Starter Assembly
D 19 Generator Assembly
D 20 Starter Assembly


U 1 Knock Control Sensor (Bank 2)
U 2 Knock Control Sensor (Bank 1)

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
z 31 With Magnet Switch Winch Motor Assembly
z 32 With Magnet Switch Winch Motor Assembly
z 33 With Magnet Switch Winch Motor Assembly


B 1
Brown

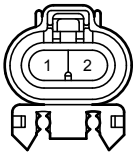


B 2
Brown

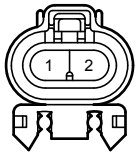


B 3
Black

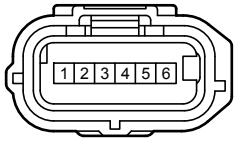


B 4
Black

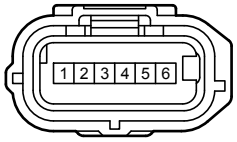


B 5
Black

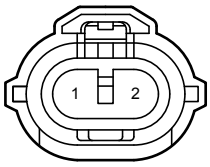

B 6
Black

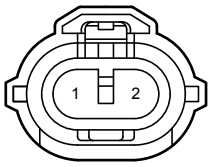


D 1



D 2
Black




D 3




D 4
Black




D 14




D 19




D 20



U 1
Black



U 2
Black




z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

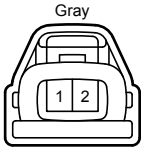



z 33





* 1:Liftgate Type Body
* 2:Swing Type Body

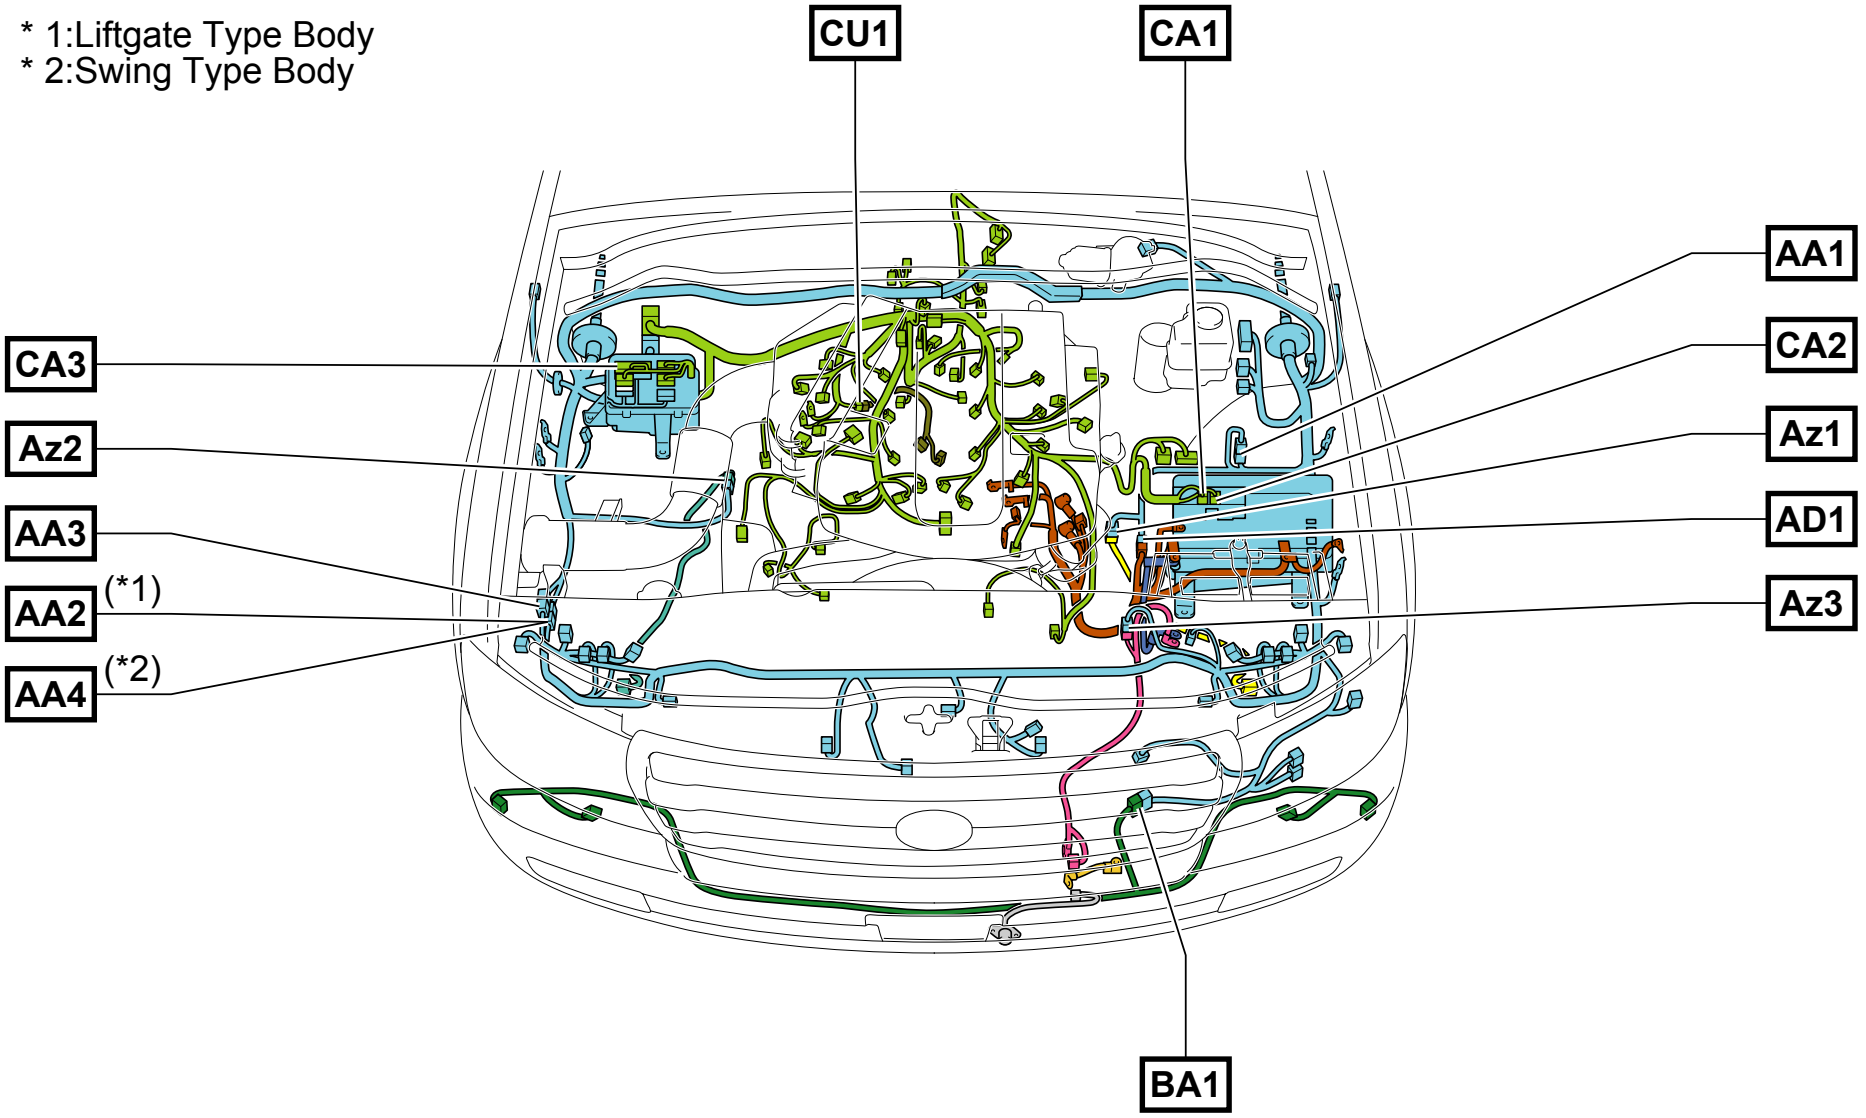


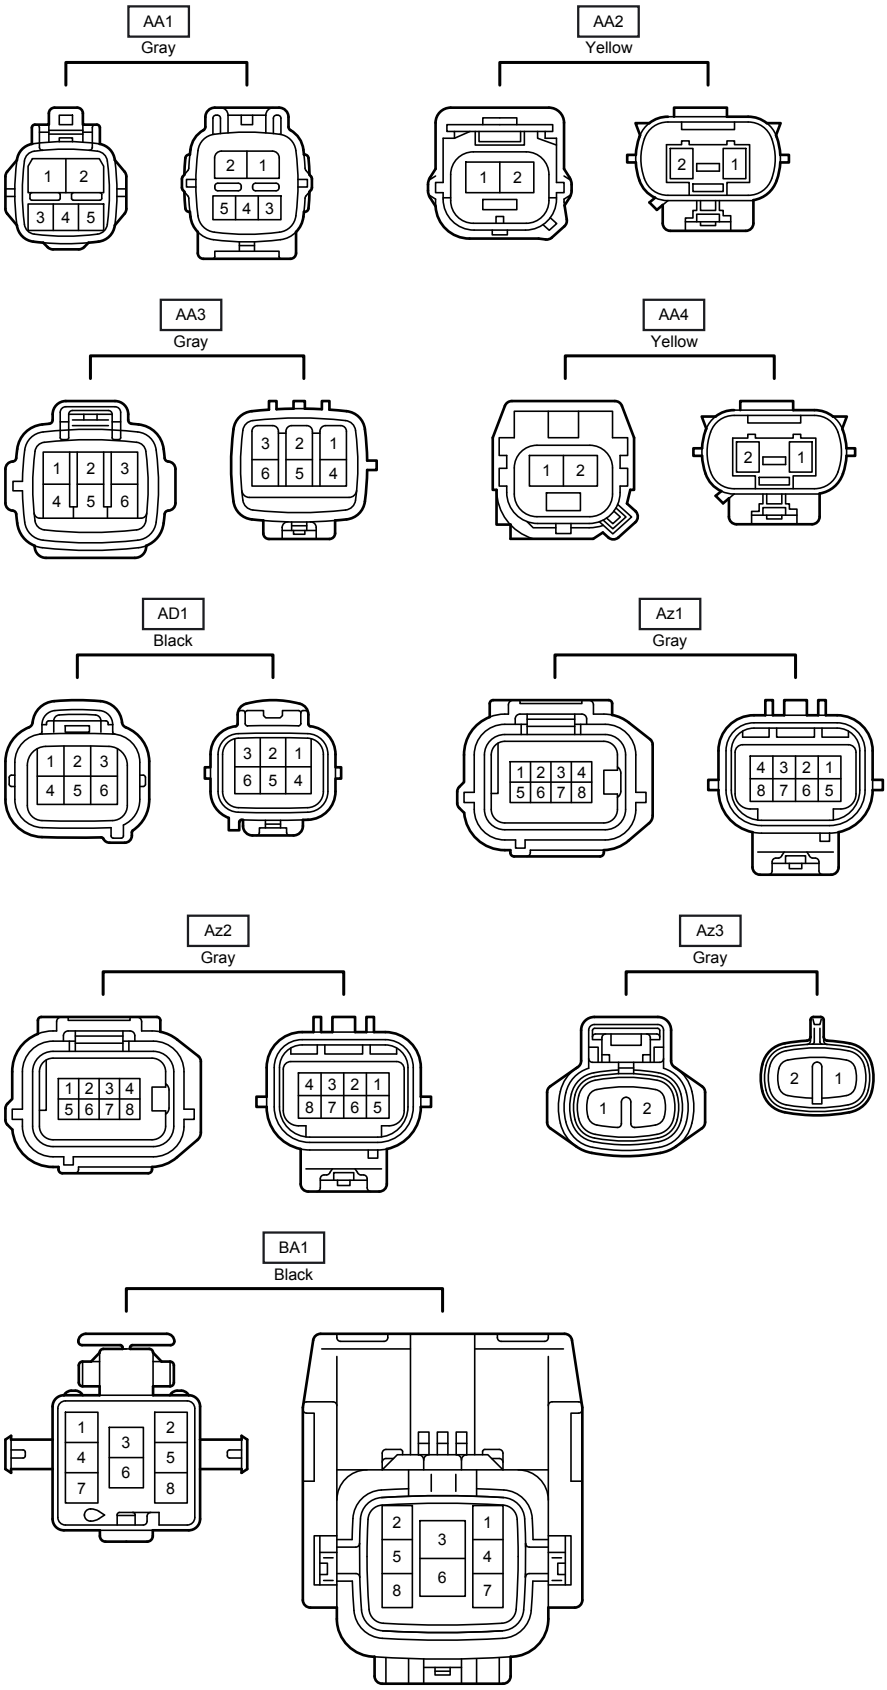

AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1
AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AA4
Yellow
1 2
2 1
AD1
Black
1 2 3
4 5 6
3 2 1
6 5 4
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az3
Gray
1 2
2 1
BA1
Black
1 2
4 3 5
7 6 8
2 1
5 3 4
8 6 7

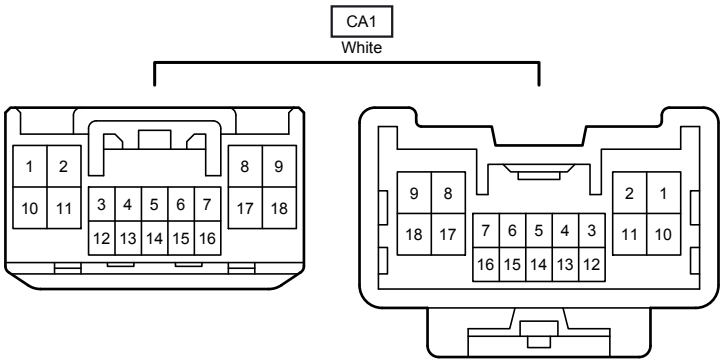

CA1
White
1 2 10 11 3 4 5 6 7 12 13 14 15 16 8 9 17 18
9 8 18 17 7 6 5 4 3 16 15 14 13 12 2 1 11 10

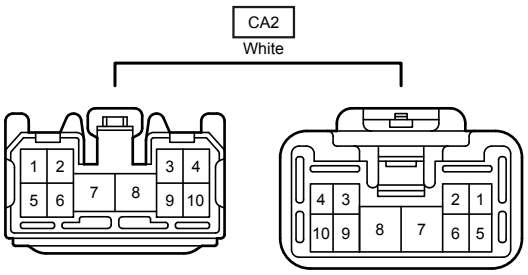
CA2
White
1 2 5 6 7 8 3 4 9 10
4 3 10 9 8 7 2 1 6 5

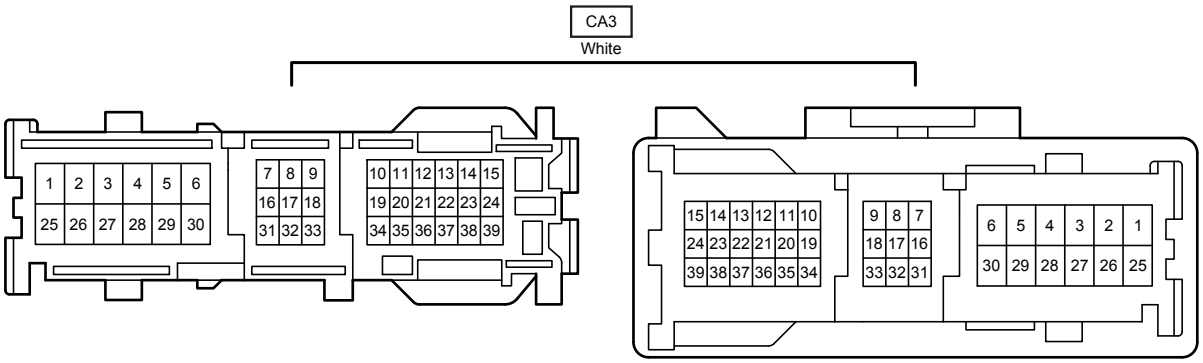
CA3
White
1 2 3 4 5 6 25 26 27 28 29 30 7 8 9 16 17 18 31 32 33 10 11 12 13 14 15 19 20 21 22 23 24 34 35 36 37 38 39
15 14 13 12 11 10 24 23 22 21 20 19 39 38 37 36 35 34 9 8 7 18 17 16 33 32 31 6 5 4 3 2 1 30 29 28 27 26 25

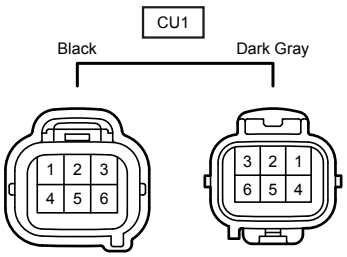
CU1
Black
Dark Gray
1 2 3 4 5 6
3 2 1 6 5 4

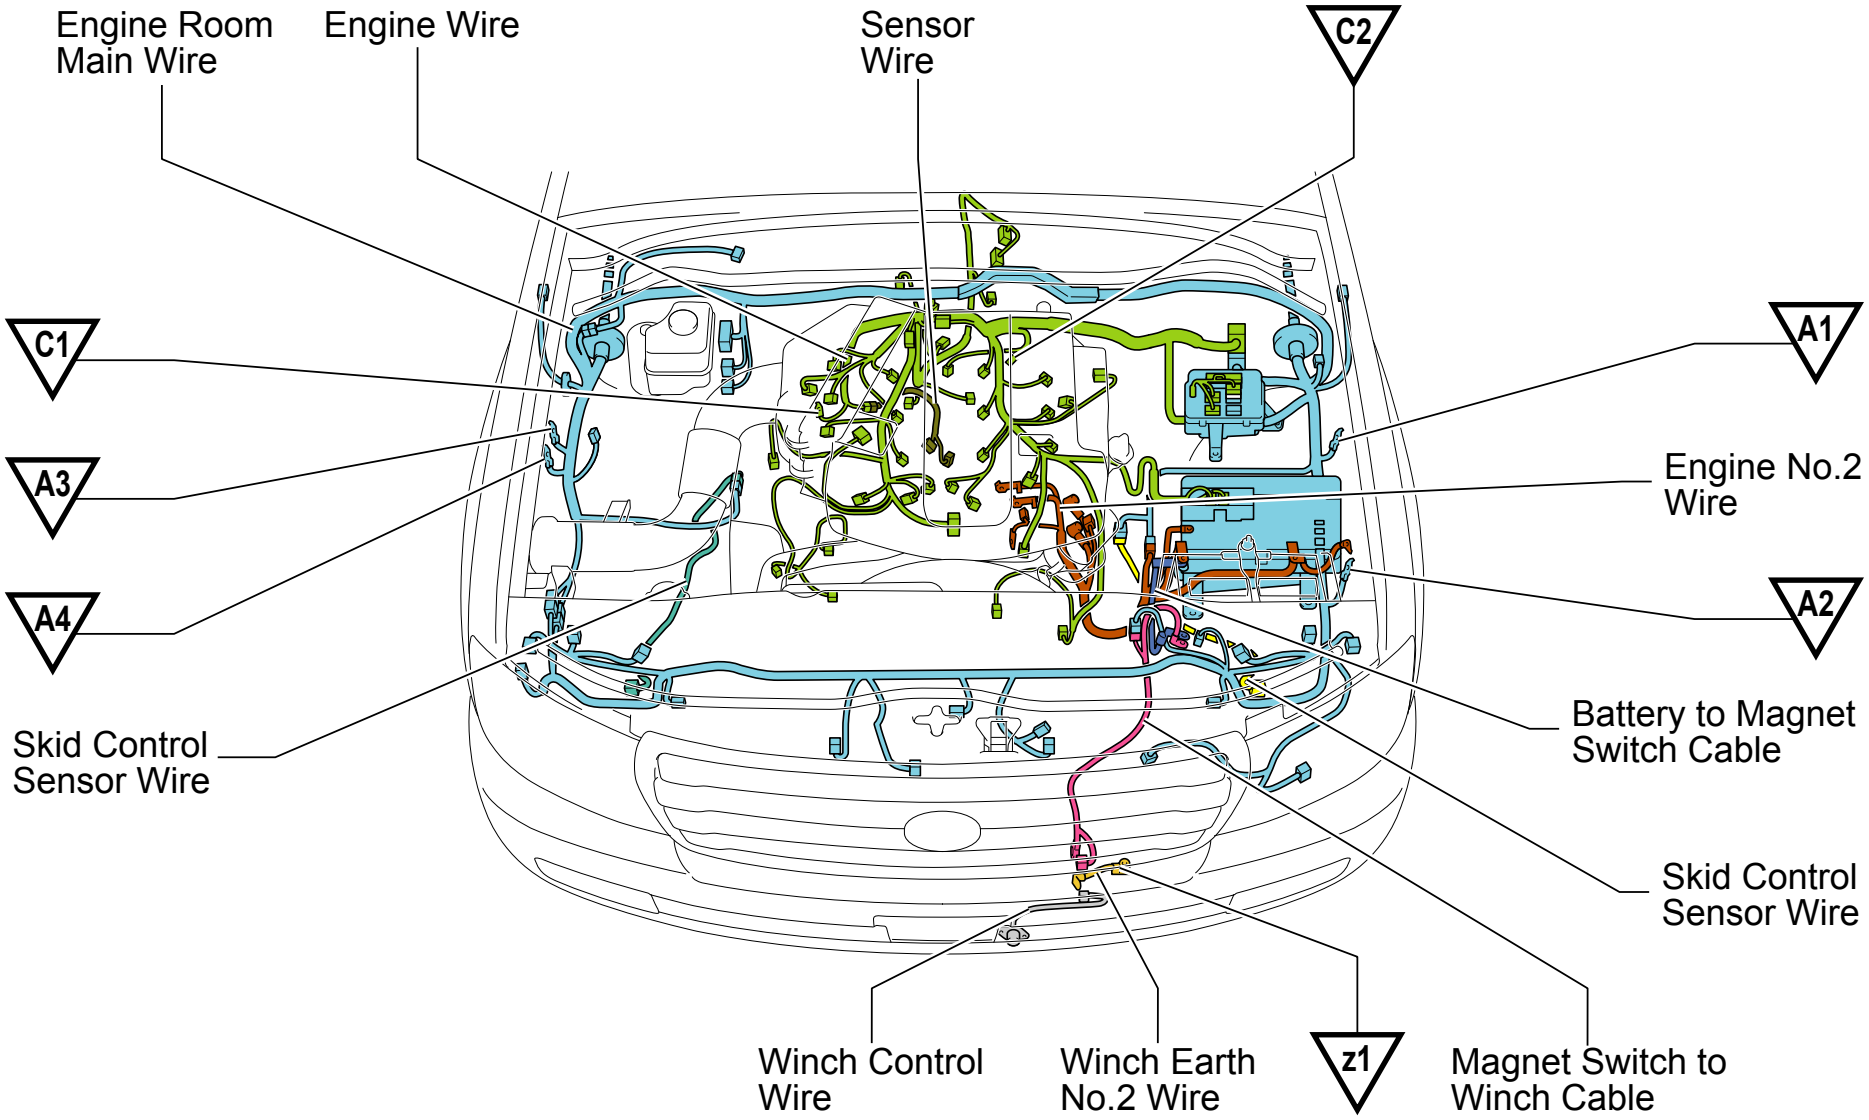

Engine Room Main Wire
Engine Wire
Sensor Wire
C2
C1
A1
A3
Engine No.2 Wire
A4
A2
Skid Control Sensor Wire
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Winch Control Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable

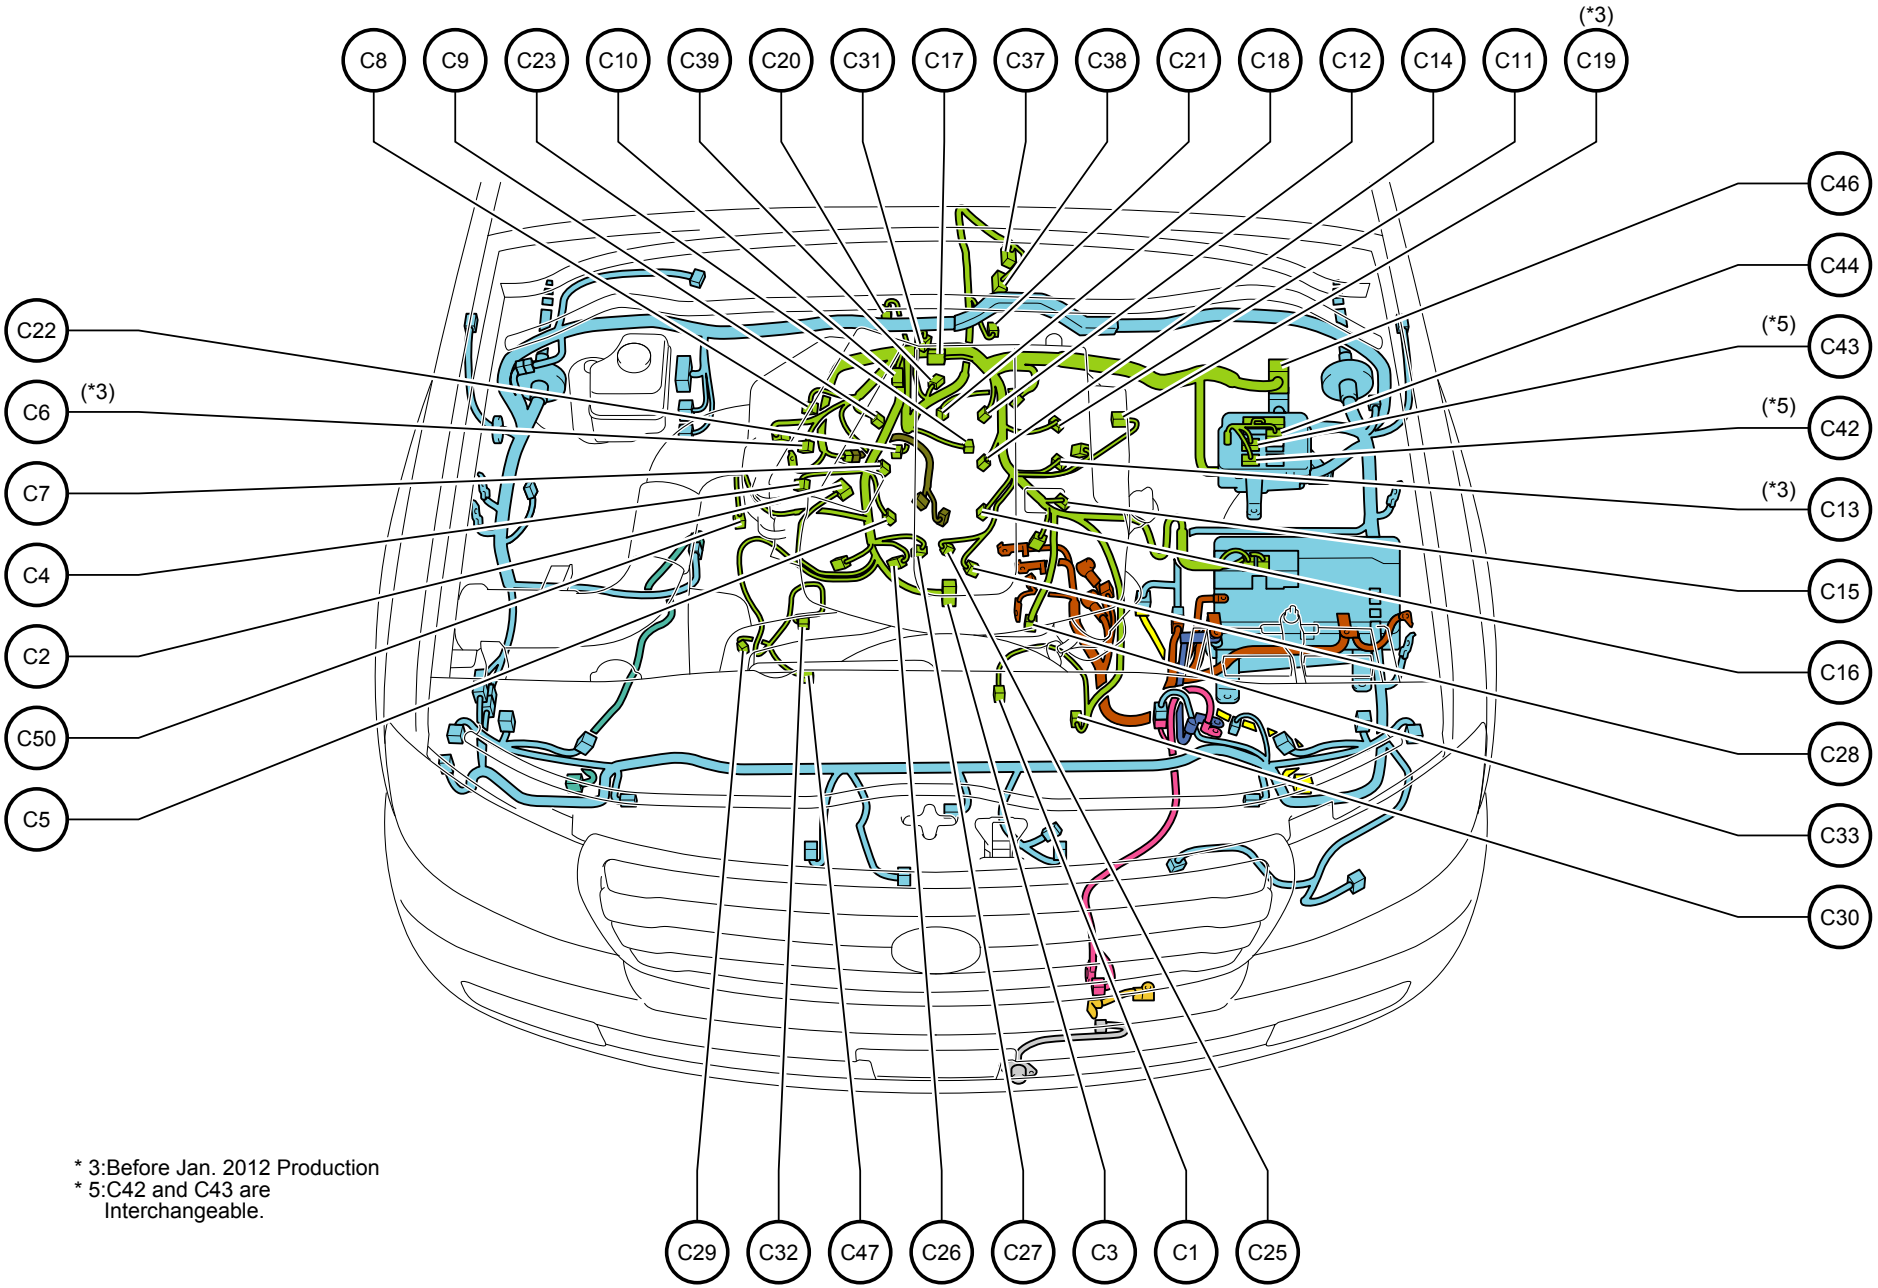


* 3:Before Jan. 2012 Production
* 5:C42 and C43 are Interchangeable.

C 1 Crankshaft Position Sensor
C 2 Mass Air Flow Meter
C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 5 Fuel Injector Assembly No.1
C 6 Ignition Coil Assembly No.3
C 7 Fuel Injector Assembly No.3
C 8 Ignition Coil Assembly No.5
C 9 Fuel Injector Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 12 Fuel Injector Assembly No.6
C 13 Ignition Coil Assembly No.4
C 14 Fuel Injector Assembly No.4
C 15 Ignition Coil Assembly No.2
C 16 Fuel Injector Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 19 Purge VSV
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 21 Oxygen Sensor (Bank 2 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 25 VVT Sensor (Bank 2 Intake Side)
C 26 VVT Sensor (Bank 1 Intake Side)
C 27 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 28 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 29 Power Steering Oil Pressure Switch
C 30 Cooler Compressor Assembly
C 31 VSV (ACIS)
C 32 Engine Oil Level Sensor
C 33 Oil Pressure Sender Gage Assembly
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 39 Back-Up Light Switch Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 46 ECM
C 47 Oil Pressure Sender Gage Assembly
C 50 Mass Air Flow Meter


C 1
Black

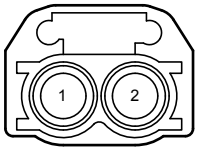


C 2
Black

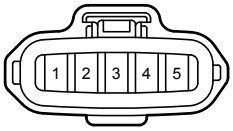


C 3
Black

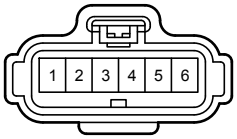


C 4
Black




C 5
Gray

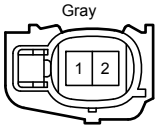


C 6
Black




C 7
Gray

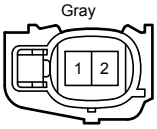


C 8
Black




C 9
Gray




C 10
Gray

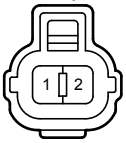


C 11
Black




C 12
Gray




C 13
Black




C 14
Gray

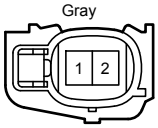


C 15
Black



C 16
Gray

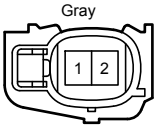


C 17
Gray

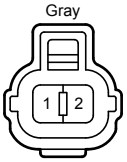

C 18
Dark Gray



C 19
Gray

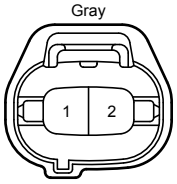

C 20
Dark Gray



C 21
Dark Gray




C 22
Dark Gray




C 23
Dark Gray



C 25
Black

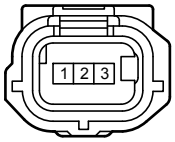

C 26
Black

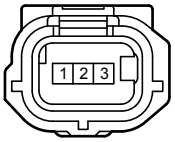

C 27
Black



C 28
Black




C 29
Black




C 30
Gray




C 31
Brown

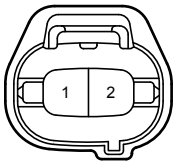


C 32
Gray

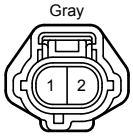


C 33
Black

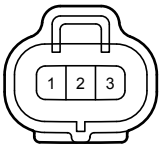


C 37
Black

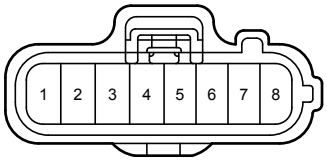


C 38
Dark Gray

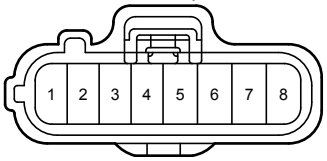


C 39
Gray

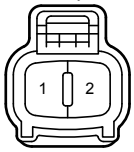


C 42
White

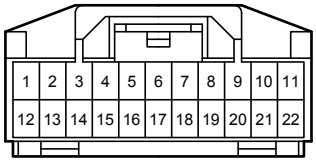


C 43
White

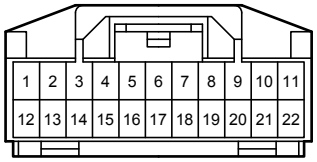

C 44
Blue

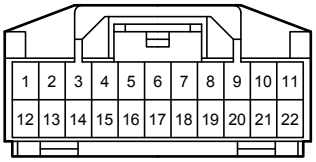


C 46
Black

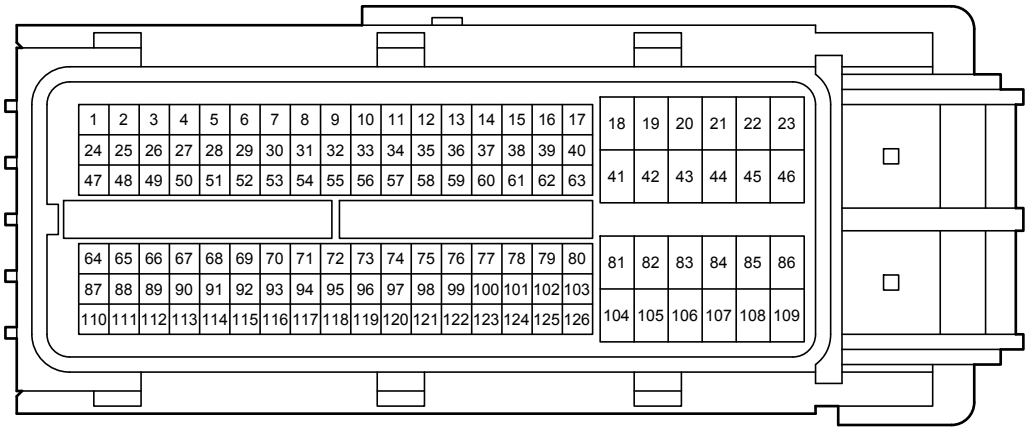


C 47
Black



C 50
Black

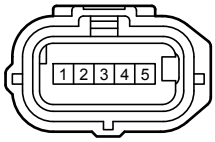


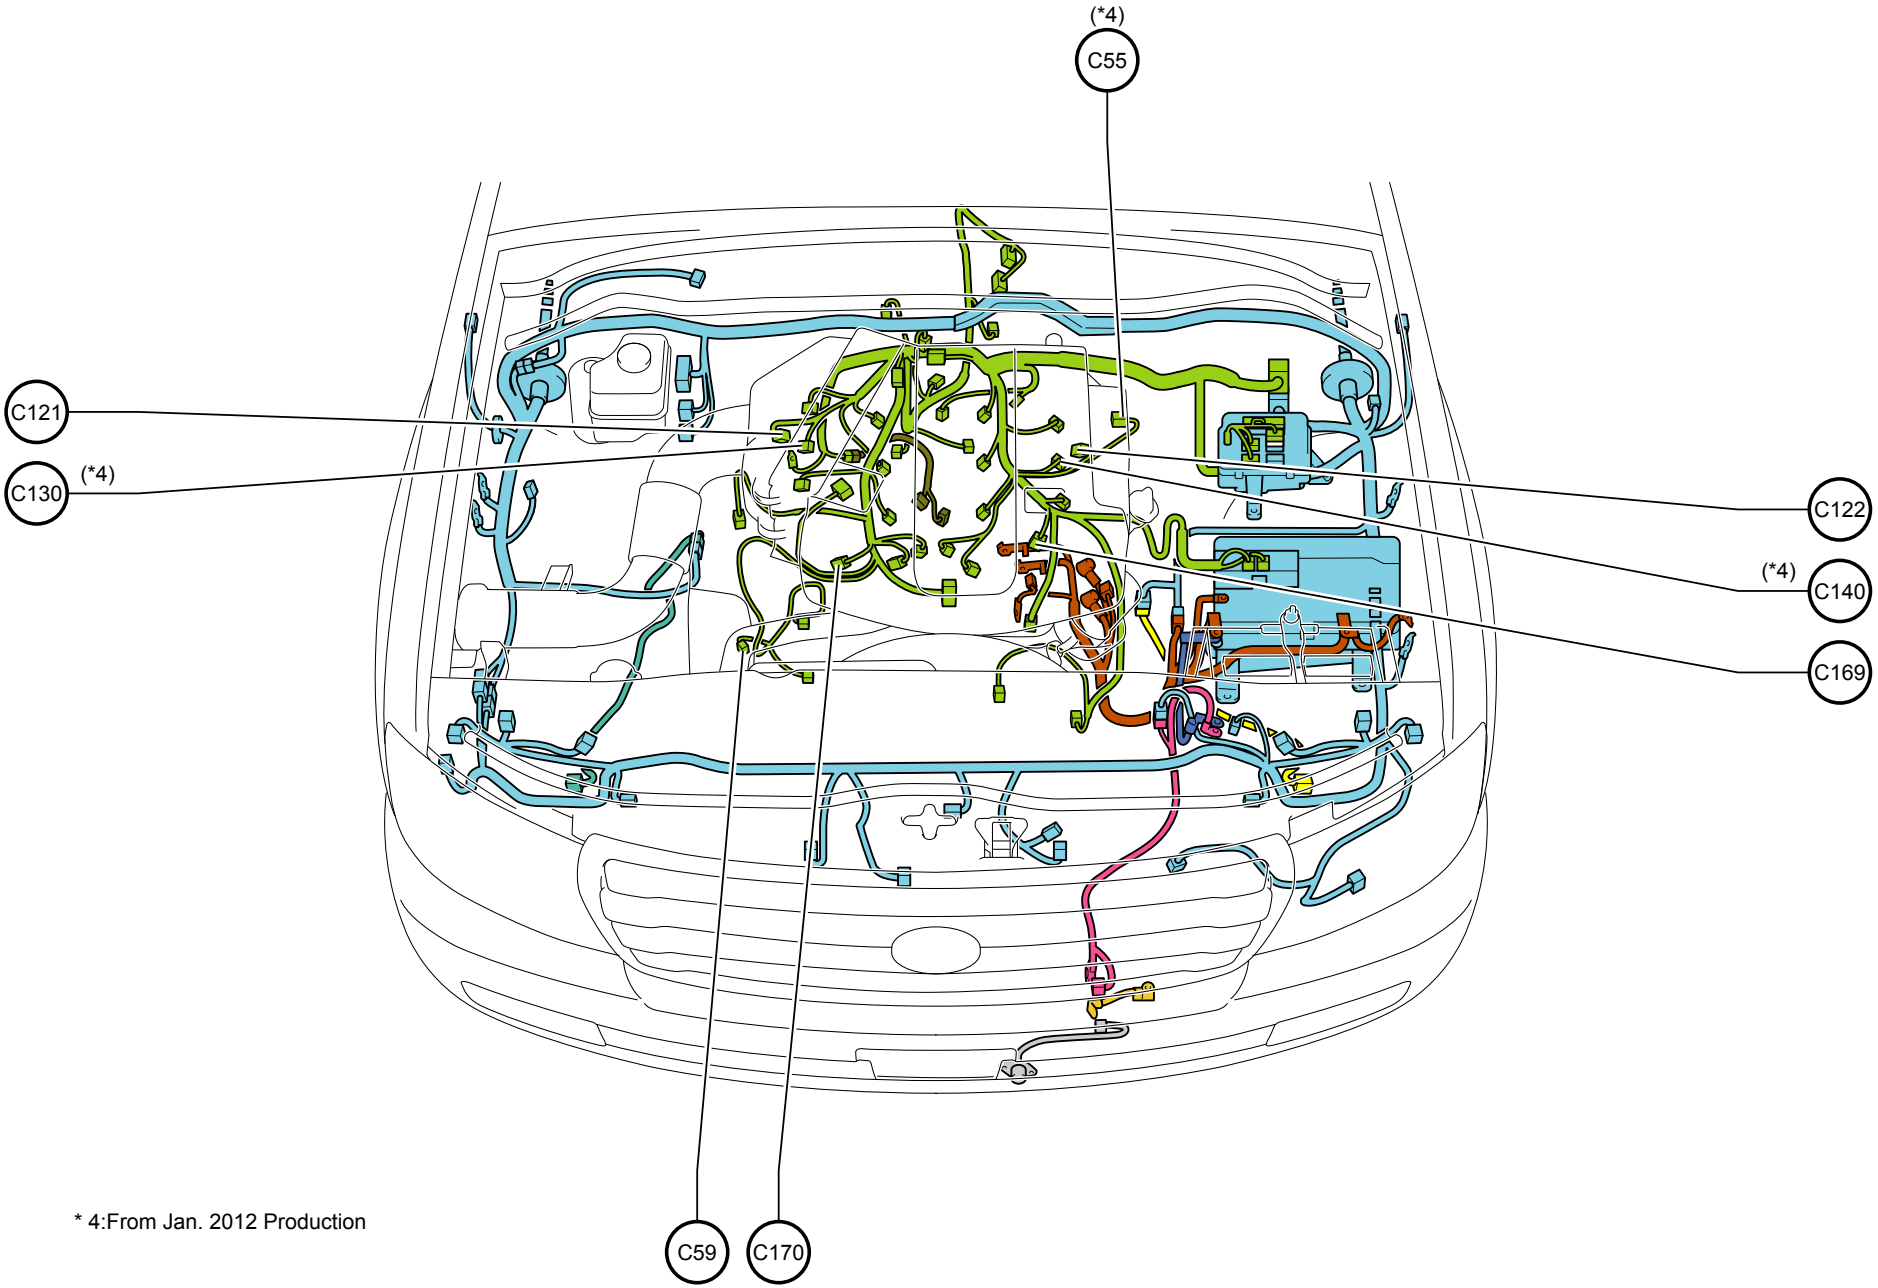


* 4:From Jan. 2012 Production

C 55 Purge VSV
C 59 Power Steering Oil Pressure Sensor
C 121 VVT Sensor (Bank 1 Exhaust Side)
C 122 VVT Sensor (Bank 2 Exhaust Side)
C 130 Ignition Coil Assembly No.3
C 140 Ignition Coil Assembly No.4
C 169 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C 170 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)


C 55
Black

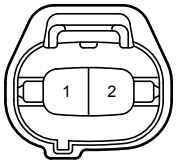


C 59
Gray

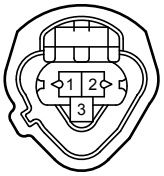


C121
Black

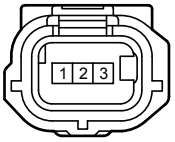

C122
Black

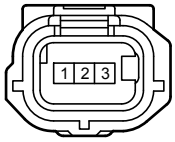

C130
Gray

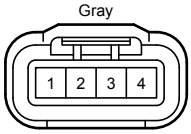

C140
Gray




C169
Gray




C170
Gray

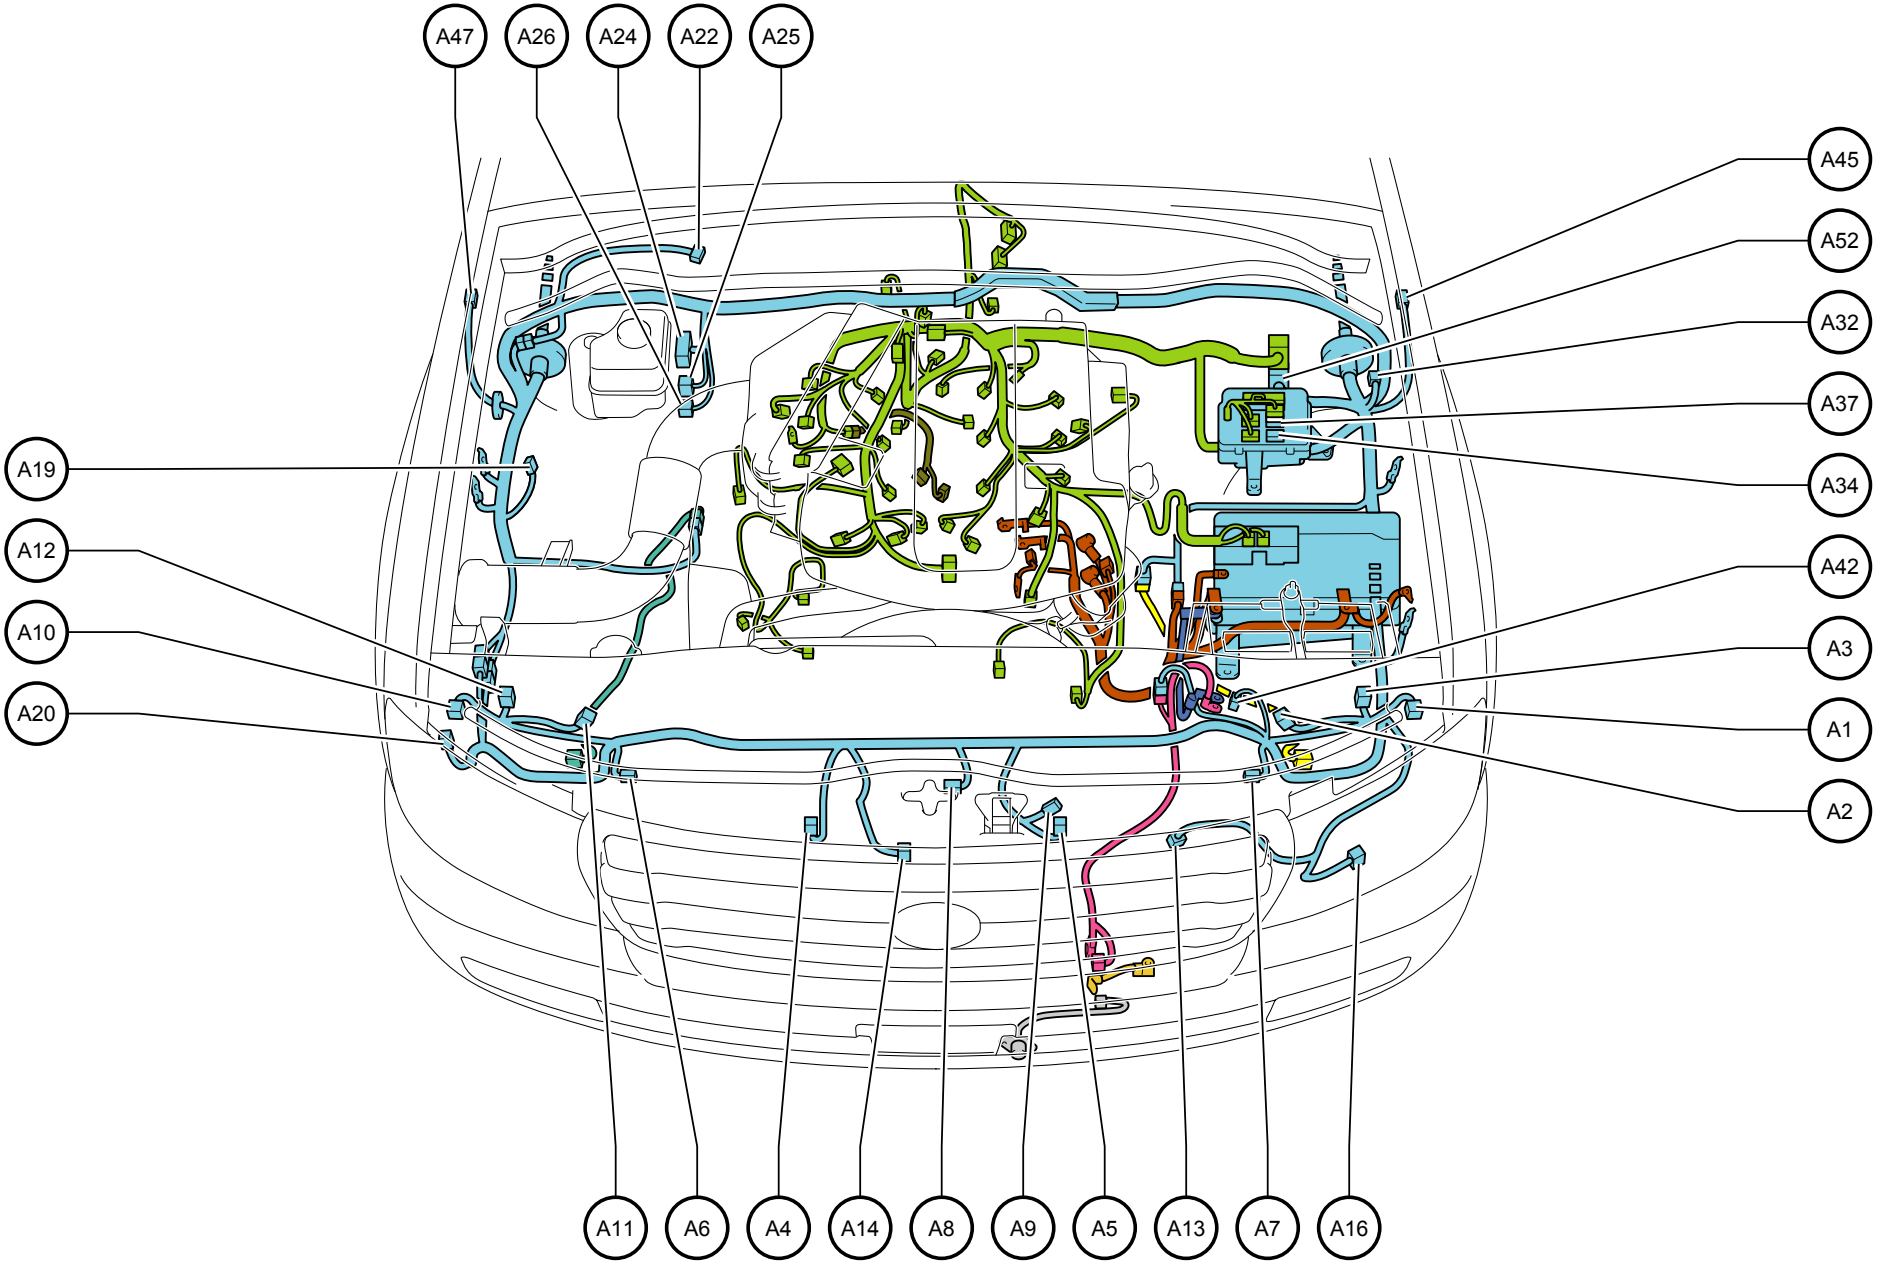



A47
A26
A24
A22
A25
A45
A52
A32
A37
A34
A19
A12
A10
A20
A42
A3
A1
A2
A11
A6
A4
A14
A8
A9
A5
A13
A7
A16

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH
A 52 ECM


A 1
Gray

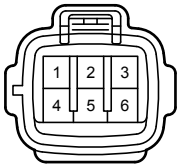


A 2
Black

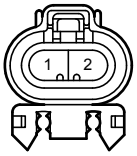


A 3
Black

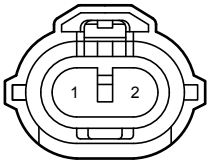


A 4
Black




A 5
Black



A 6
Yellow

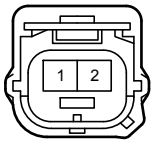

A 7
Yellow

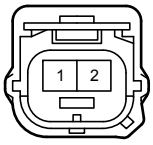


A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

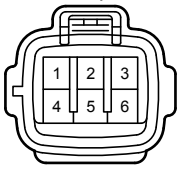


A 11
Black

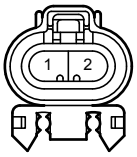

A 12
Black

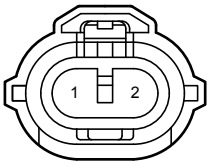


A 13
Black

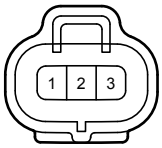

A 14
Black




A 16
Gray

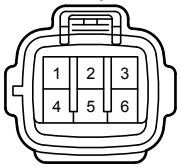


A 19
Black




A 20
Black




A 22
Black

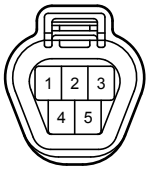


A 24
Black

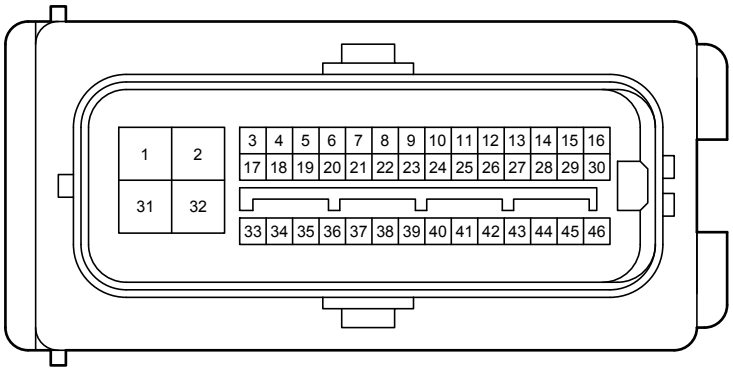


A 25
Black

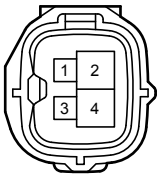


A 26
Gray

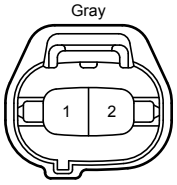


A 32
Black

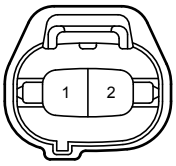


A 34
White

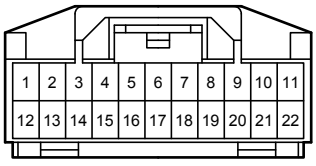

A 37
Blue

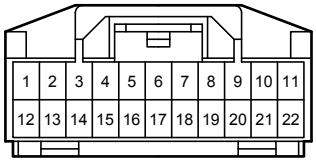

A 42
Black

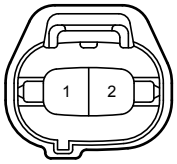


A 45
Gray




A 47
Gray



A 52
Black

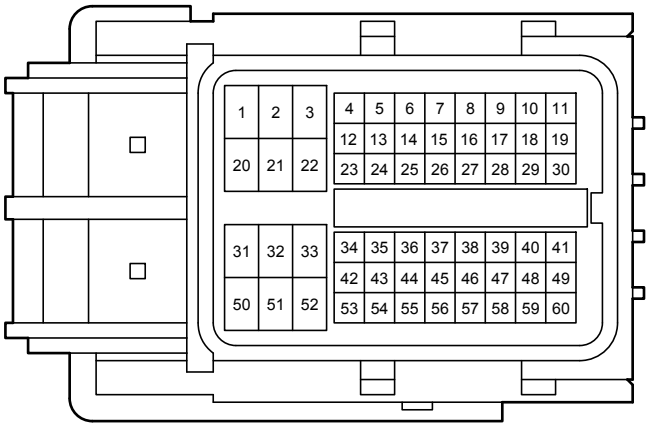

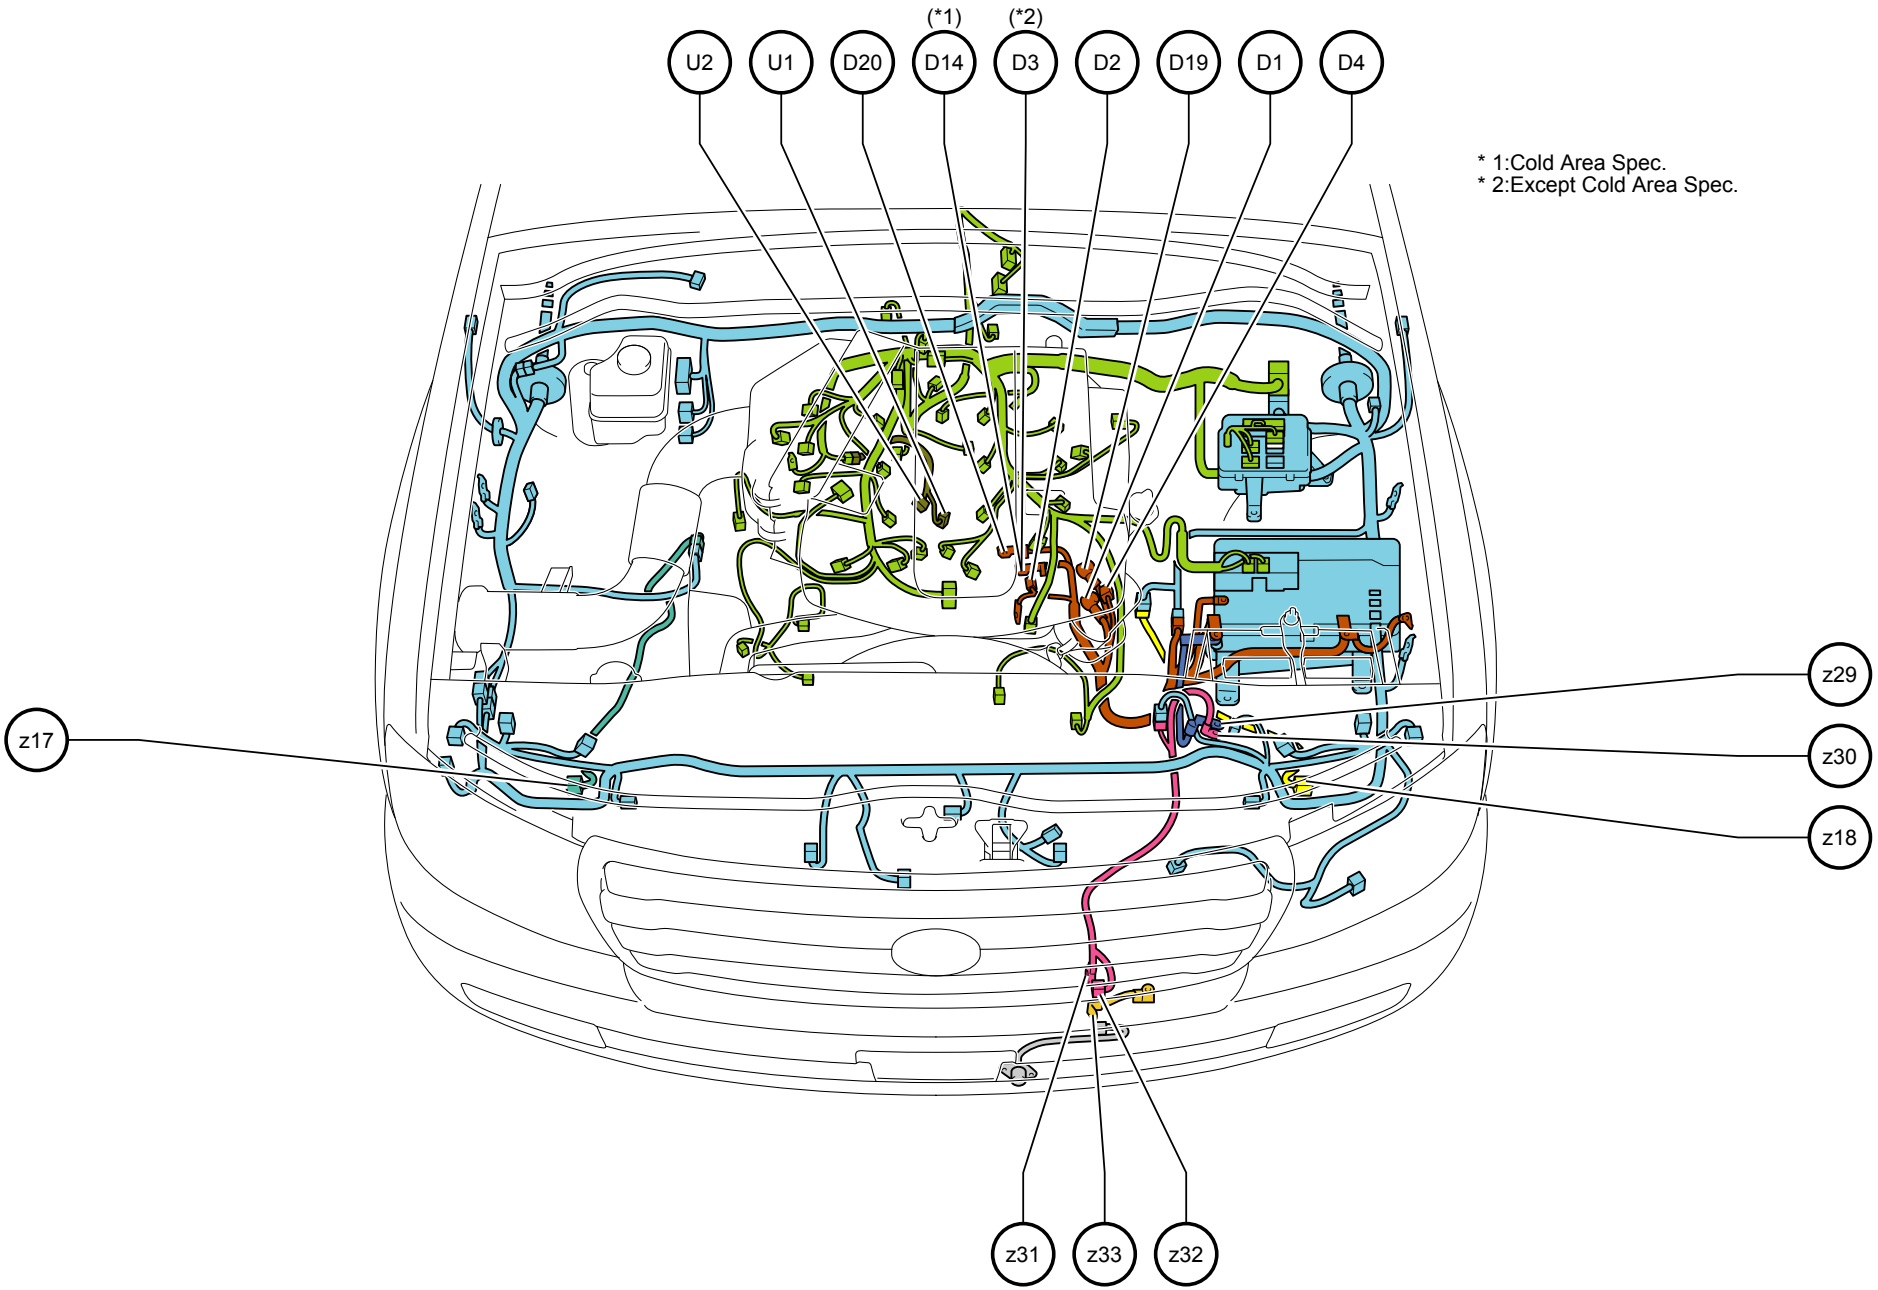

(*1)
(*2)
U2
U1
D20
D14
D3
D2
D19
D1
D4
* 1:Cold Area Spec.
* 2:Except Cold Area Spec.
z17
z29
z30
z18
z31
z33
z32

D 1 Generator Assembly
D 2 Starter Assembly
D 3 Starter Assembly
D 4 Generator Assembly
D 14 Starter Assembly
D 19 Generator Assembly
D 20 Starter Assembly

U 1 Knock Control Sensor (Bank 2)
U 2 Knock Control Sensor (Bank 1)

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
z 31 With Magnet Switch Winch Motor Assembly
z 32 With Magnet Switch Winch Motor Assembly
z 33 With Magnet Switch Winch Motor Assembly

D 1




D 2

Black



D 3




D 4


Black




D 14



D 19




D 20




U 1

Black



U 2

Black



z 17

Black




z 18


Black




z 29



z 30




z 31




z 32


Gray

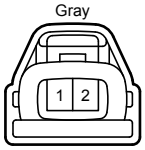



z 33





* 1:Liftgate Type Body
* 2:Swing Type Body

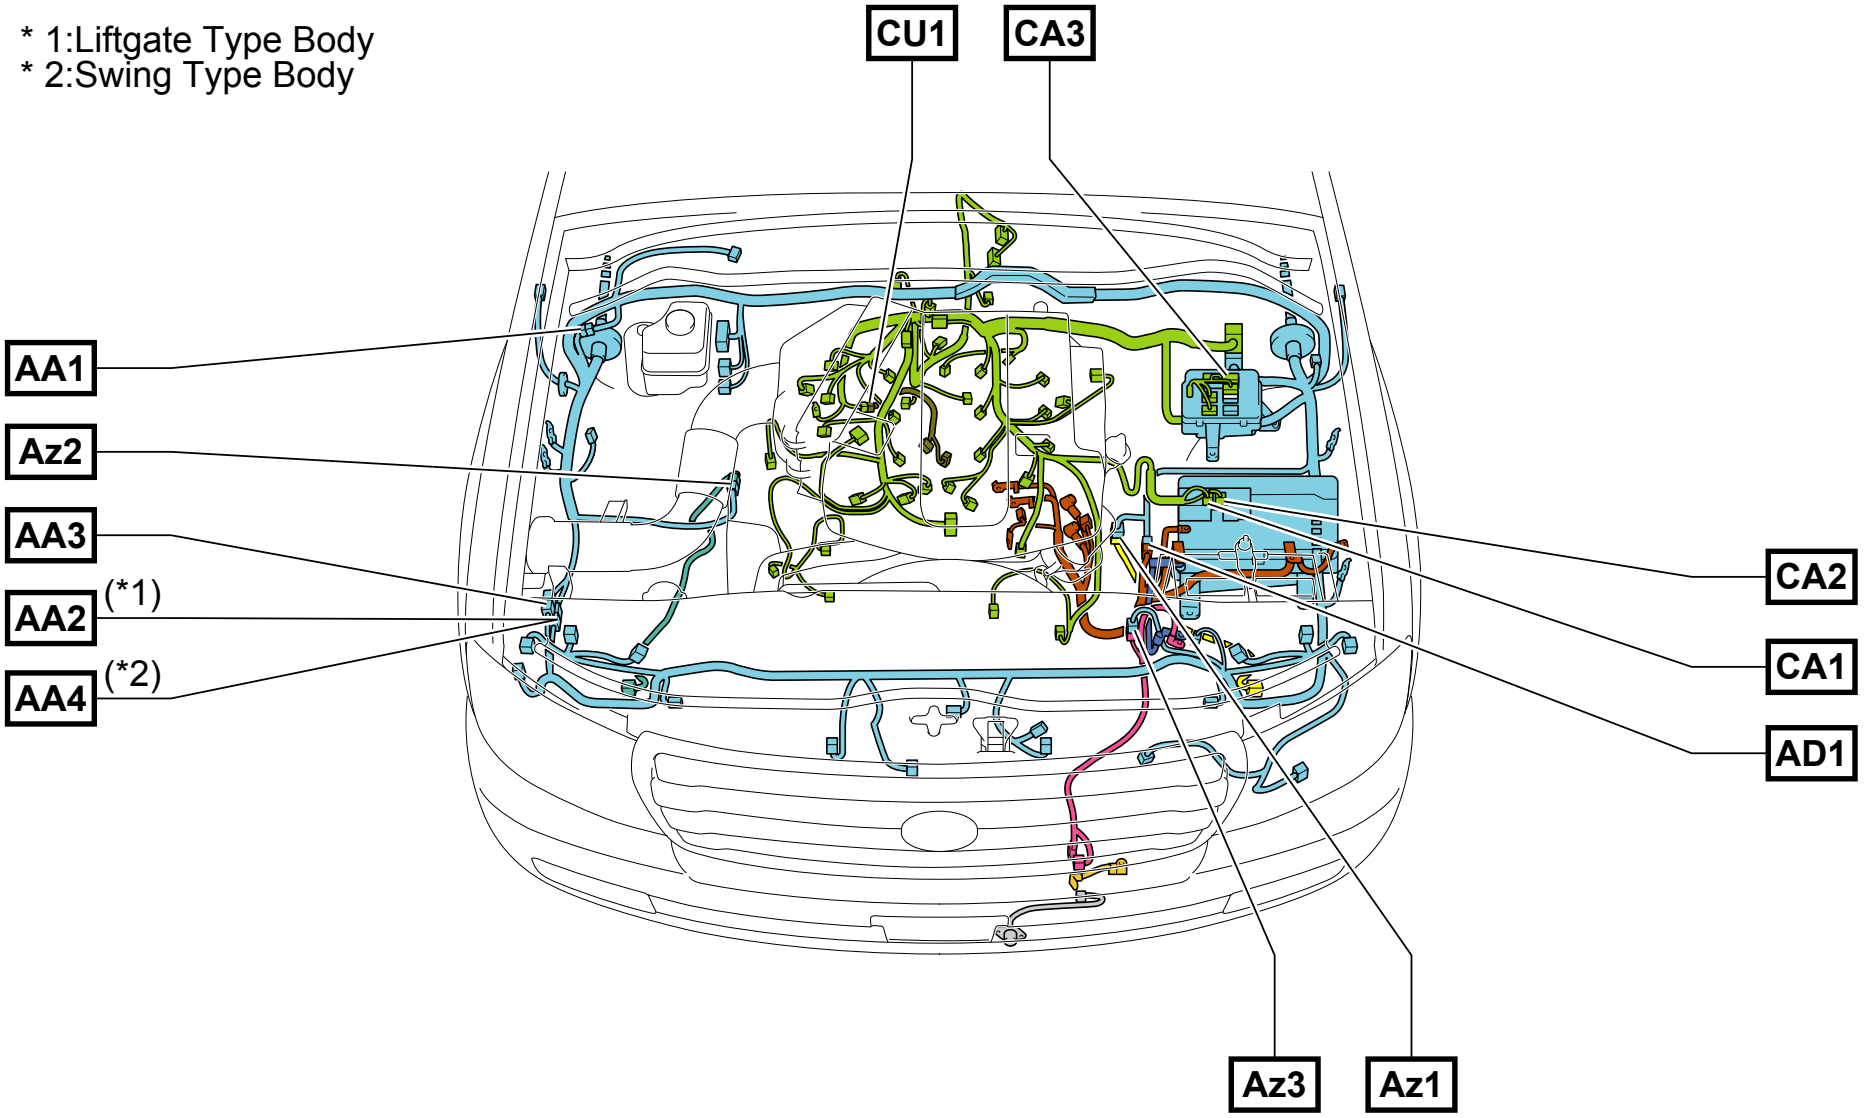


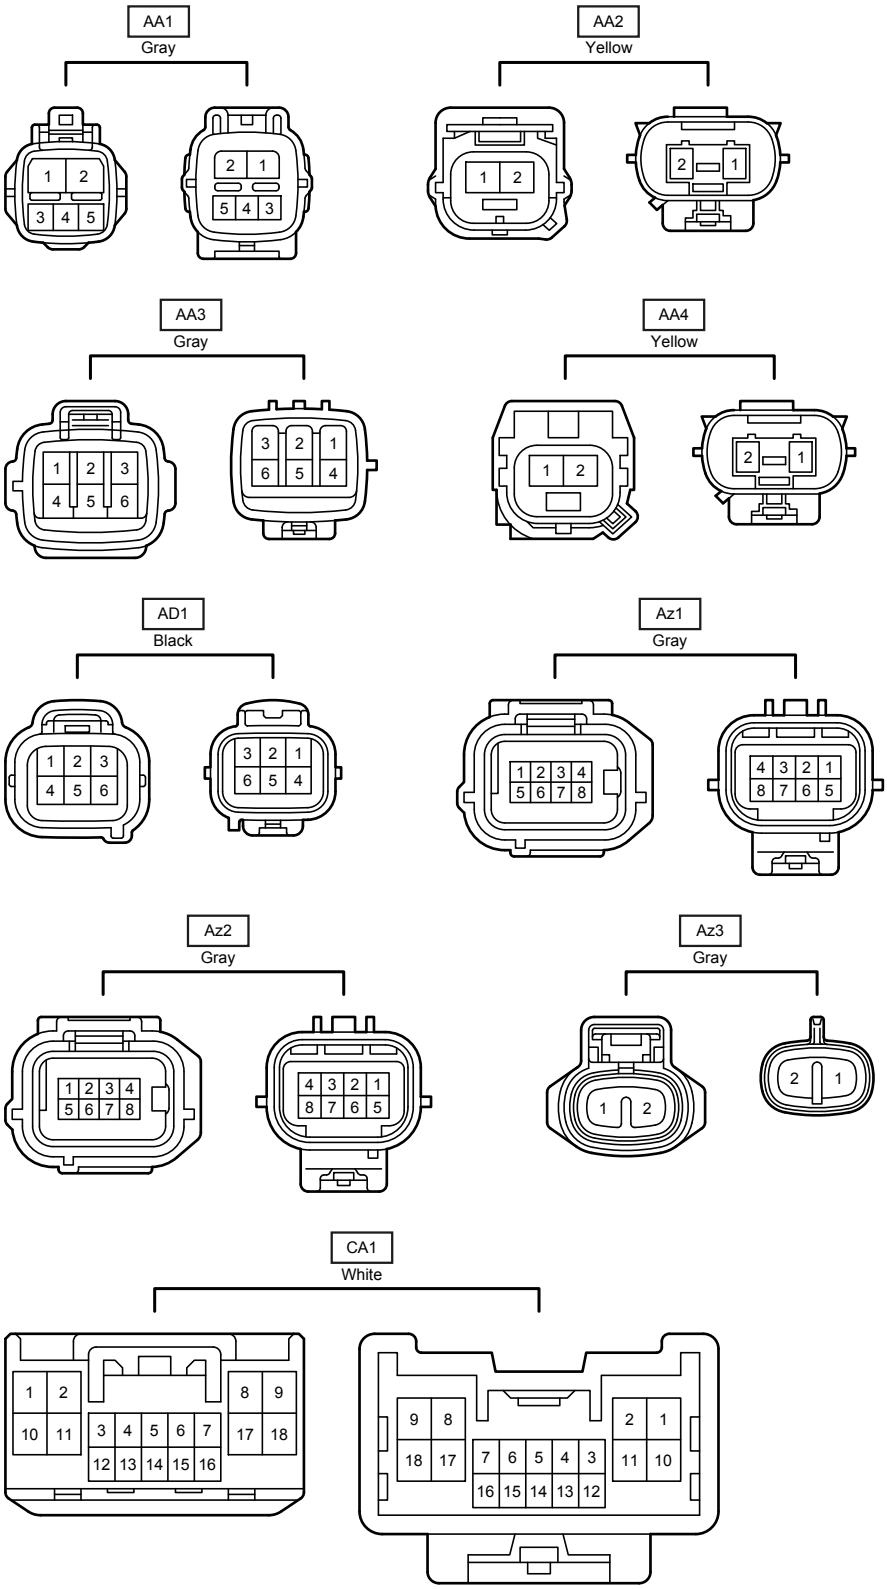

AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1
AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AA4
Yellow
1 2
2 1
AD1
Black
1 2 3
4 5 6
3 2 1
6 5 4
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az3
Gray
1 2
2 1
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

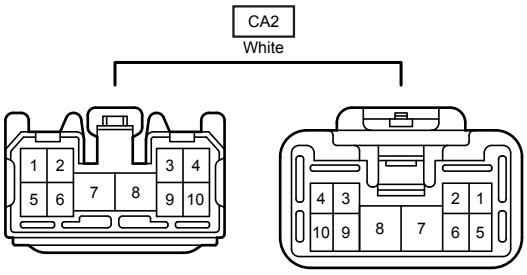
CA2
White
1 2 3 4
5 6 7 8 9 10
4 3 2 1
10 9 8 7 6 5

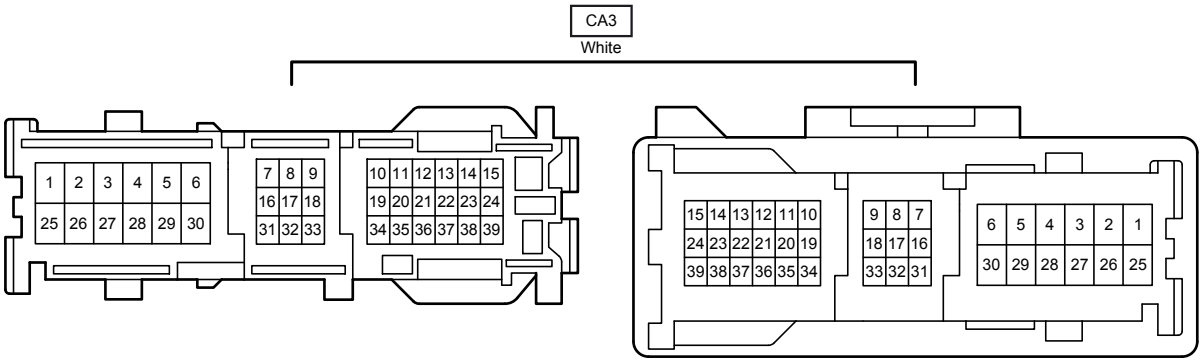
CA3
White
1 2 3 4 5 6
25 26 27 28 29 30
7 8 9
16 17 18
31 32 33
10 11 12 13 14 15
19 20 21 22 23 24
34 35 36 37 38 39
15 14 13 12 11 10
24 23 22 21 20 19
39 38 37 36 35 34
9 8 7
18 17 16
33 32 31
6 5 4 3 2 1
30 29 28 27 26 25

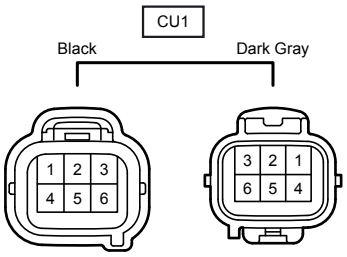

CU1
Black
Dark Gray
1 2 3
4 5 6
3 2 1
6 5 4

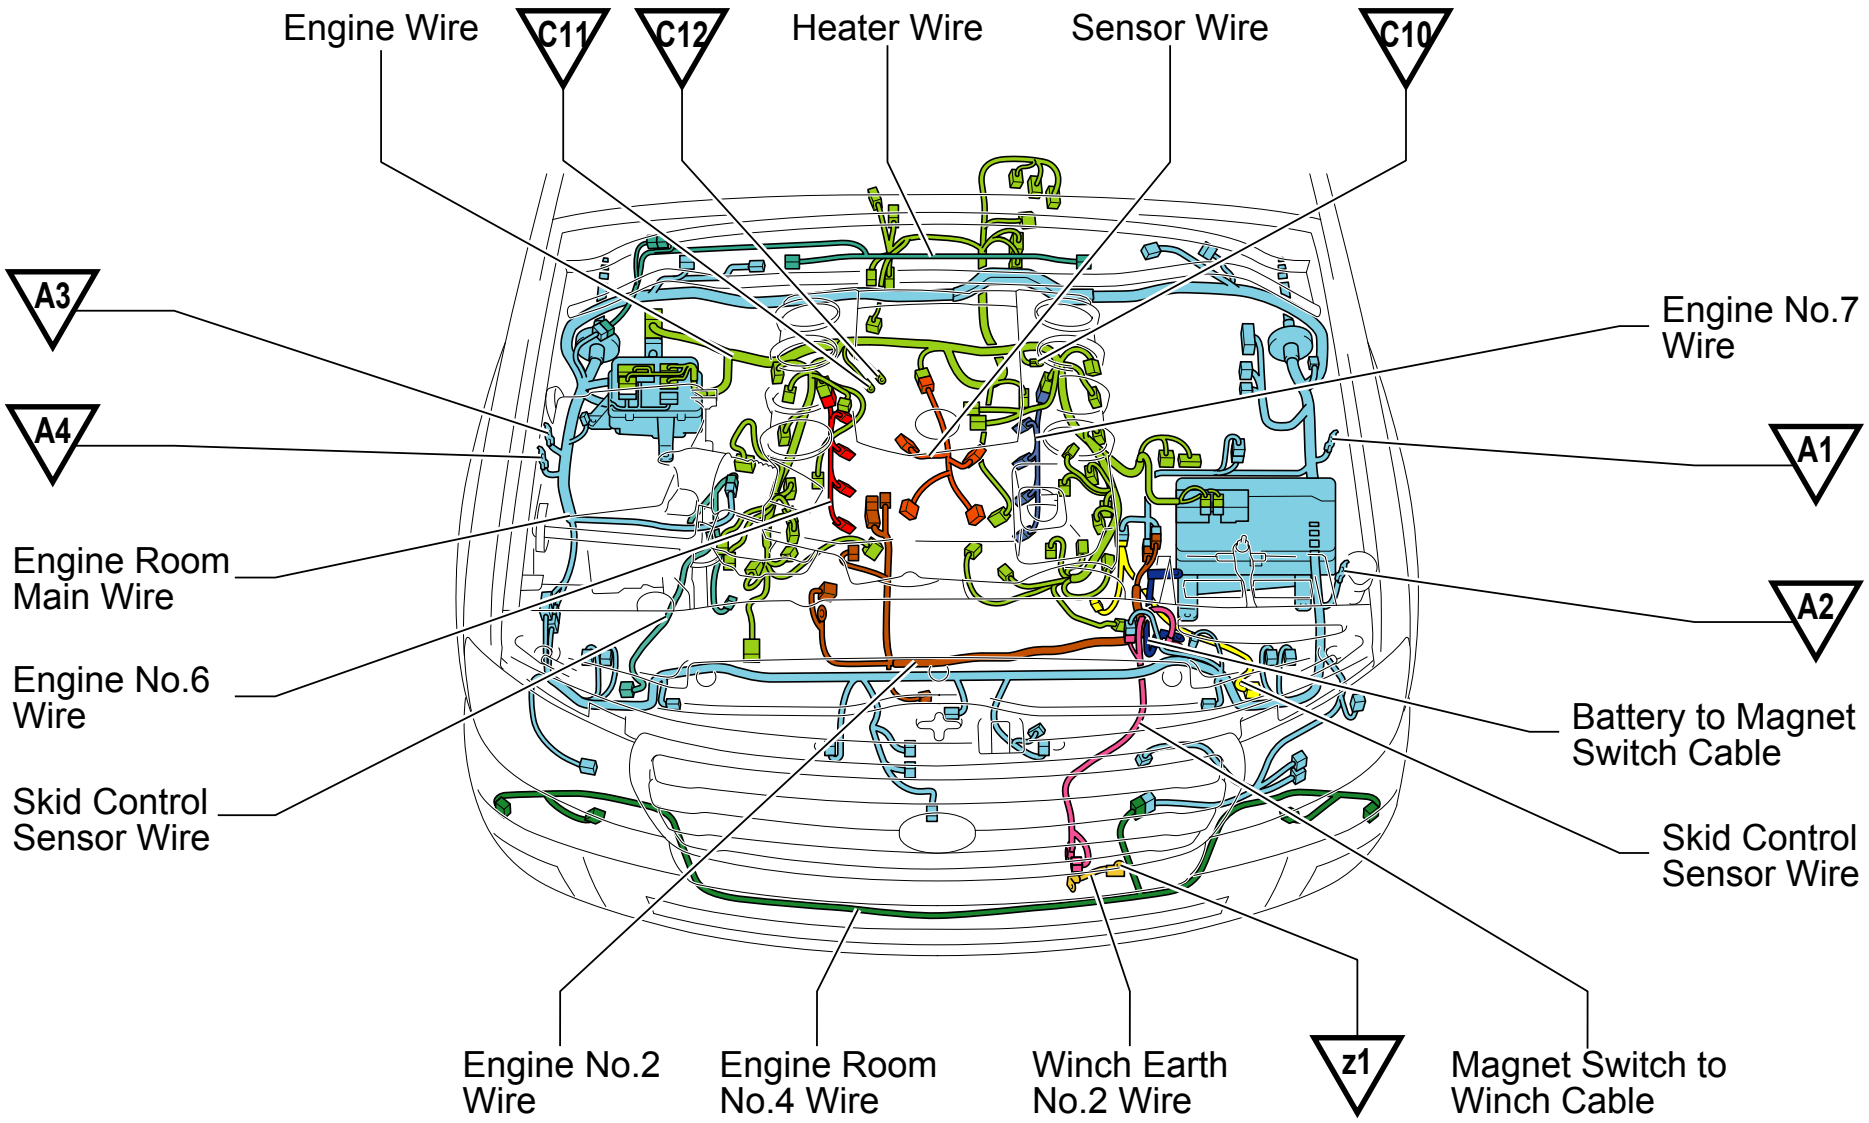
Engine Wire
C11
C12
Heater Wire
Sensor Wire
C10
A3
A4
Engine Room Main Wire
Engine No.6 Wire
Skid Control Sensor Wire
Engine No.7 Wire
A1
A2
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine No.2 Wire
Engine Room No.4 Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable

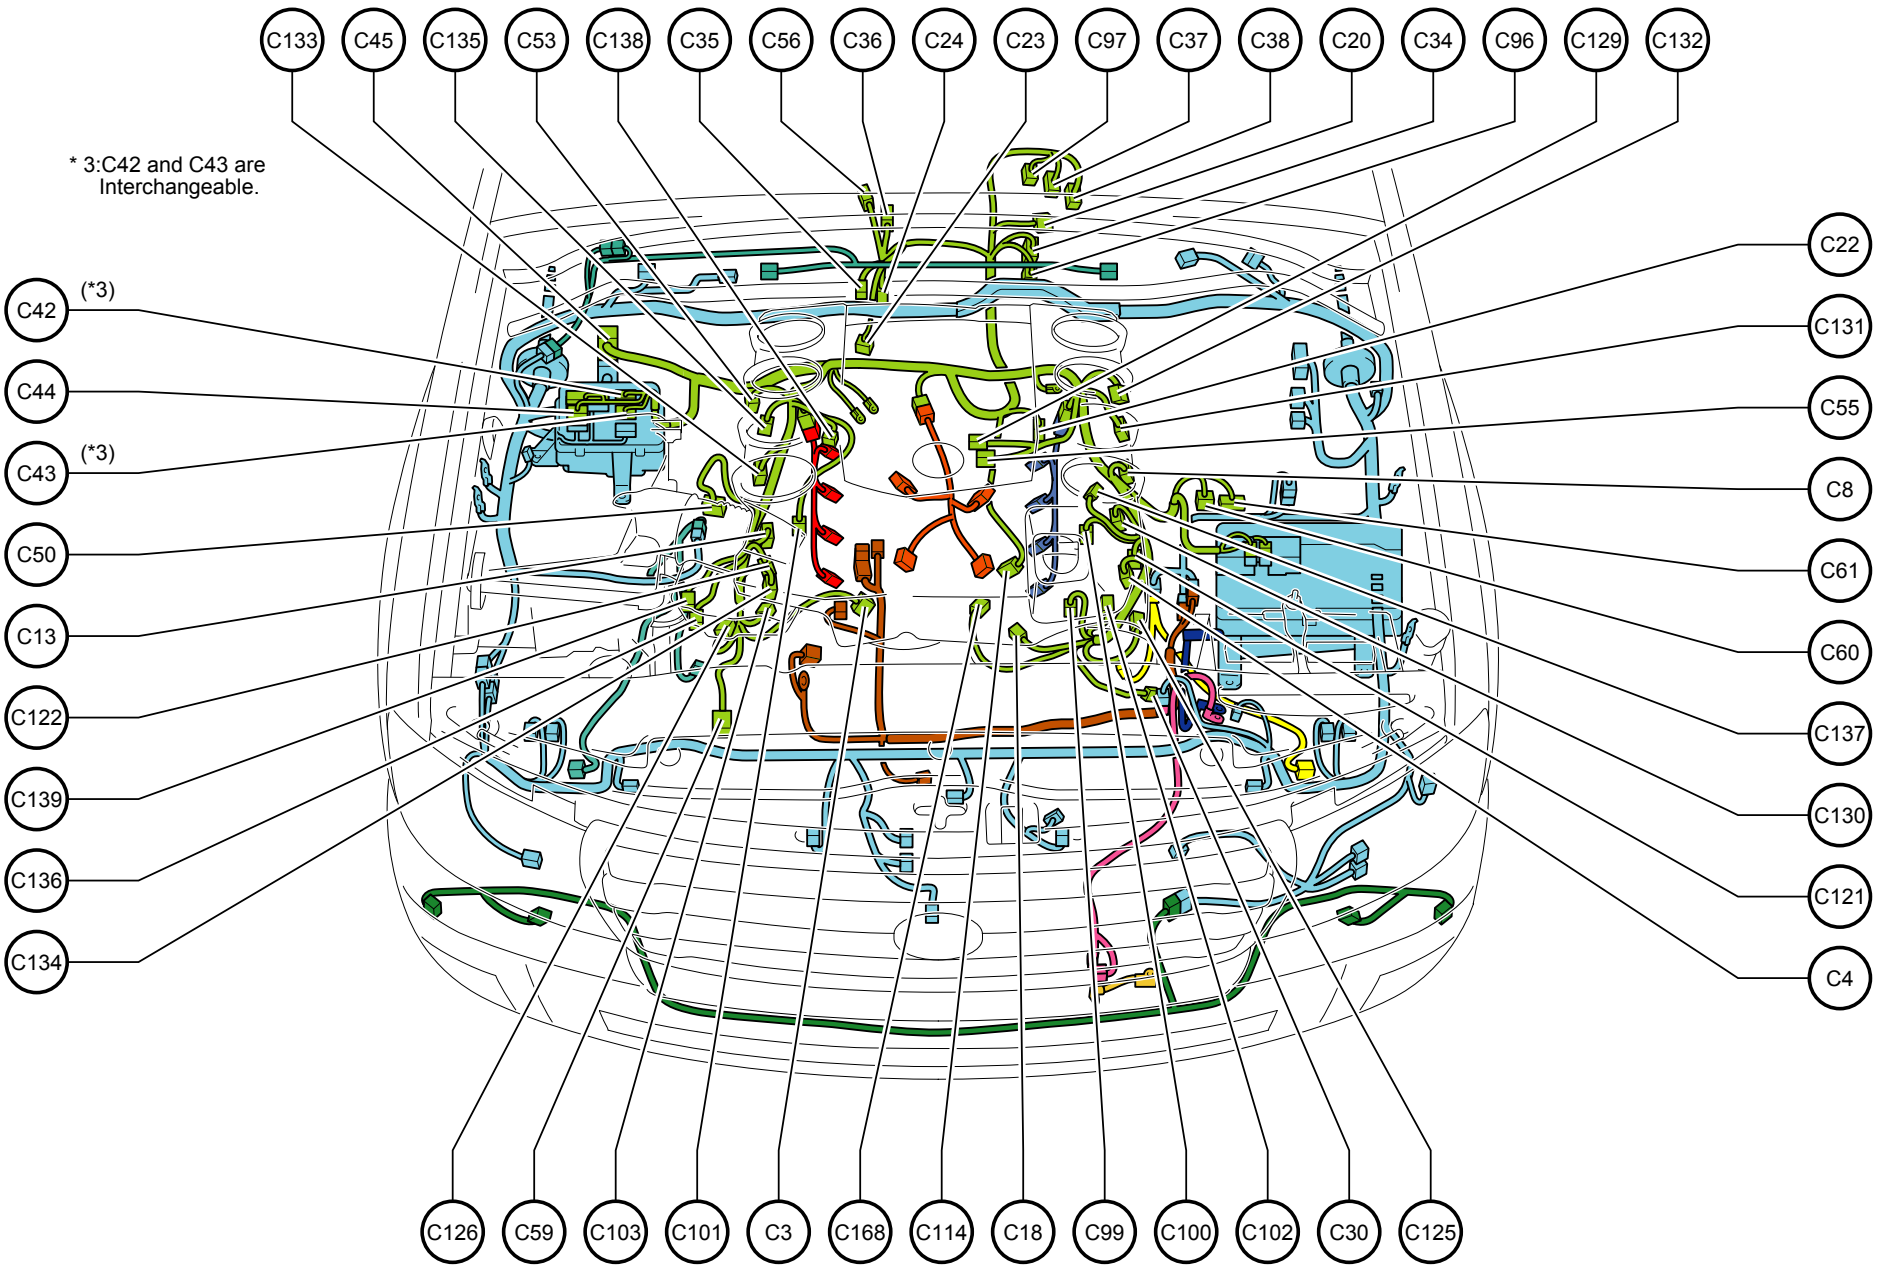

C133
C45
C135
C53
C138
C35
C56
C36
C24
C23
C97
C37
C38
C20
C34
C96
C129
C132
* 3:C42 and C43 are Interchangeable.
C42
(*3)
C44
C43
(*3)
C50
C13
C122
C139
C136
C134
C22
C131
C55
C8
C61
C60
C137
C130
C121
C4
C126
C59
C103
C101
C3
C168
C114
C18
C99
C100
C102
C30
C125

C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 8 Ignition Coil Assembly No.5
C 13 Ignition Coil Assembly No.4
C 18 E.F.I. Engine Coolant Temperature Sensor
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 30 Cooler Compressor Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 45 ECM
C 50 Mass Air Flow Meter
C 53 Ignition Coil Assembly No.8
C 55 Purge VSV
C 56 Oxygen Sensor (Bank 2 Sensor 2)
C 59 Power Steering Oil Pressure Sensor
C 60 Air Injection Control Driver
C 61 Air Injection Control Driver
C 96 Electronically Controlled Transmission Solenoid
C 97 Transfer Shift Actuator Assembly
C 99 Camshaft Position Sensor
C 100 VVT Sensor (Bank 1 Intake Side)
C 101 VVT Sensor (Bank 2 Intake Side)
C 102 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 103 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 114 Crankshaft Position Sensor
C 121 VVT Sensor (Bank 1 Exhaust Side)
C 122 VVT Sensor (Bank 2 Exhaust Side)
C 125 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C 126 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C 129 VSV (ACIS)
C 130 Ignition Coil Assembly No.3
C 131 Ignition Coil Assembly No.7
C 132 Noise Filter (Ignition Bank 1)
C 133 Ignition Coil Assembly No.6
C 134 Ignition Coil Assembly No.2
C 135 Noise Filter (Ignition Bank 2)
C 136 Air Pump Assembly
C 137 Air Switching Valve (Bank 1)
C 138 Air Switching Valve (Bank 2)
C 139 Air Pump Assembly
C 168 E.F.I. Vacuum Sensor Assembly


C 3
Black

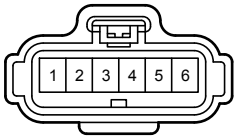


C 4
Black



C 8
Black



C 13
Black



C 18
Dark Gray



C 20
Dark Gray




C 22
Dark Gray



C 23
Dark Gray




C 24
Gray

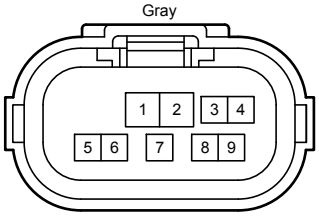


C 30
Gray




C 34
Gray

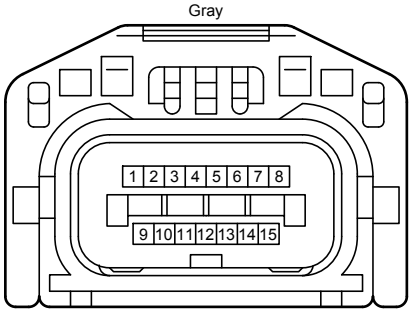


C 35
Black

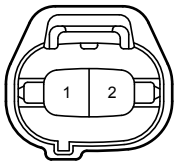


C 36
Black

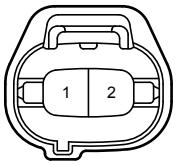


C 37
Black

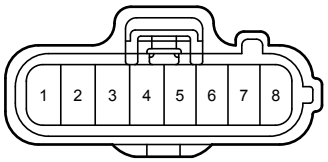


C 38
Dark Gray

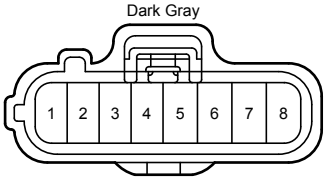


C 42
White

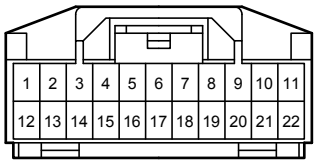


C 43
White

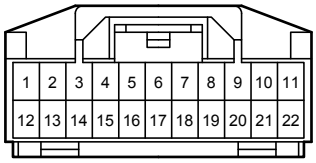


C 44
Blue

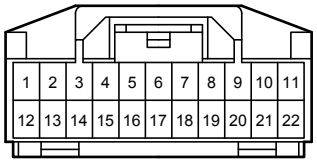


C 45
Black

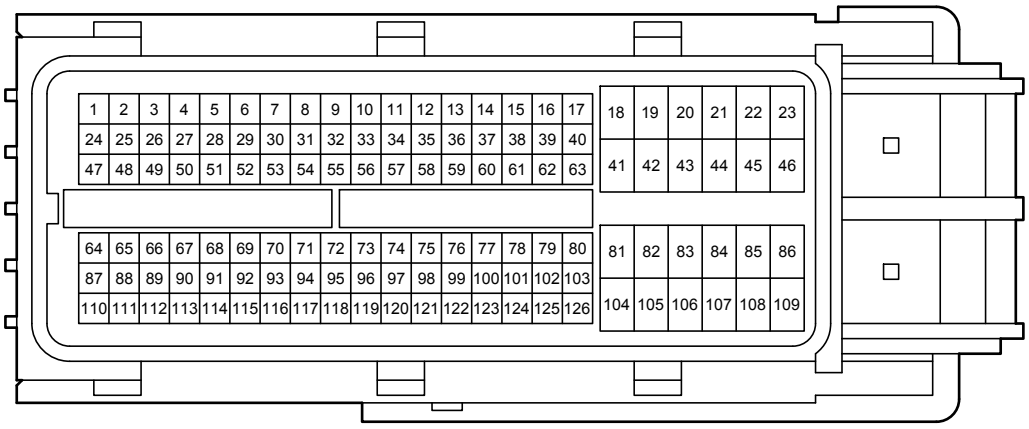


C 50
Black

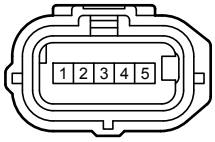

C 53
Black




C 55
Black

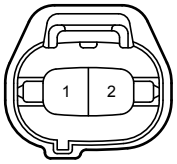


C 56
Dark Gray




C 59
Gray

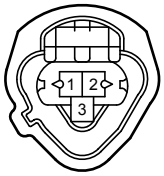


C 60
Black

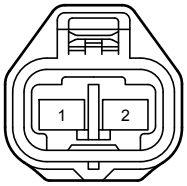


C 61
Black

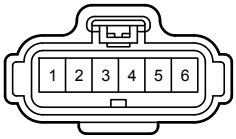


C 96
Gray

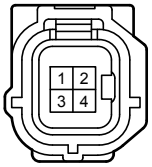


C 97
Black

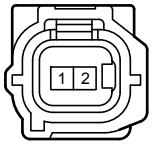


C 99
Black

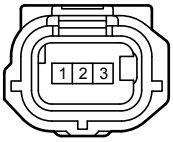

C100
Black

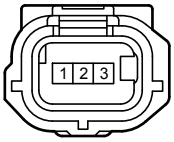

C101
Black

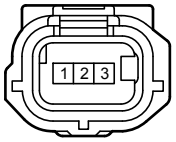


C102
Black




C103
Black




C114
Black

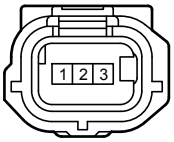

C121
Black

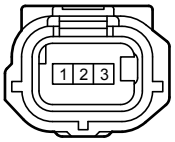

C122
Black

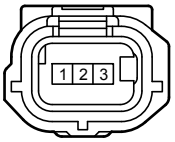


C125
Black




C126
Black



C129
Black

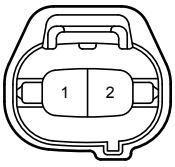


C130
Gray

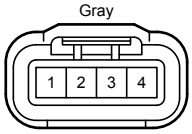

C131
Gray



C132
Gray

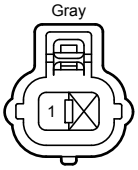


C133
Gray




C134
Gray




C135
Gray

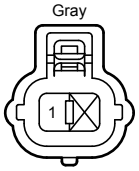


C136
Gray

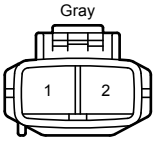


C137
Black

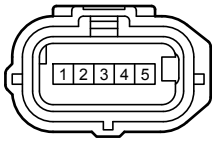


C138
Black

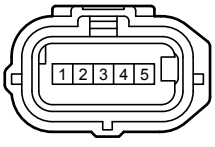


C139
Black

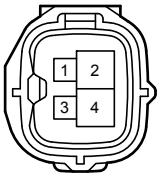

C168
Black




* 1:w/ Heated Windshield Defroster
* 2:w/o Heated Windshield Defroster

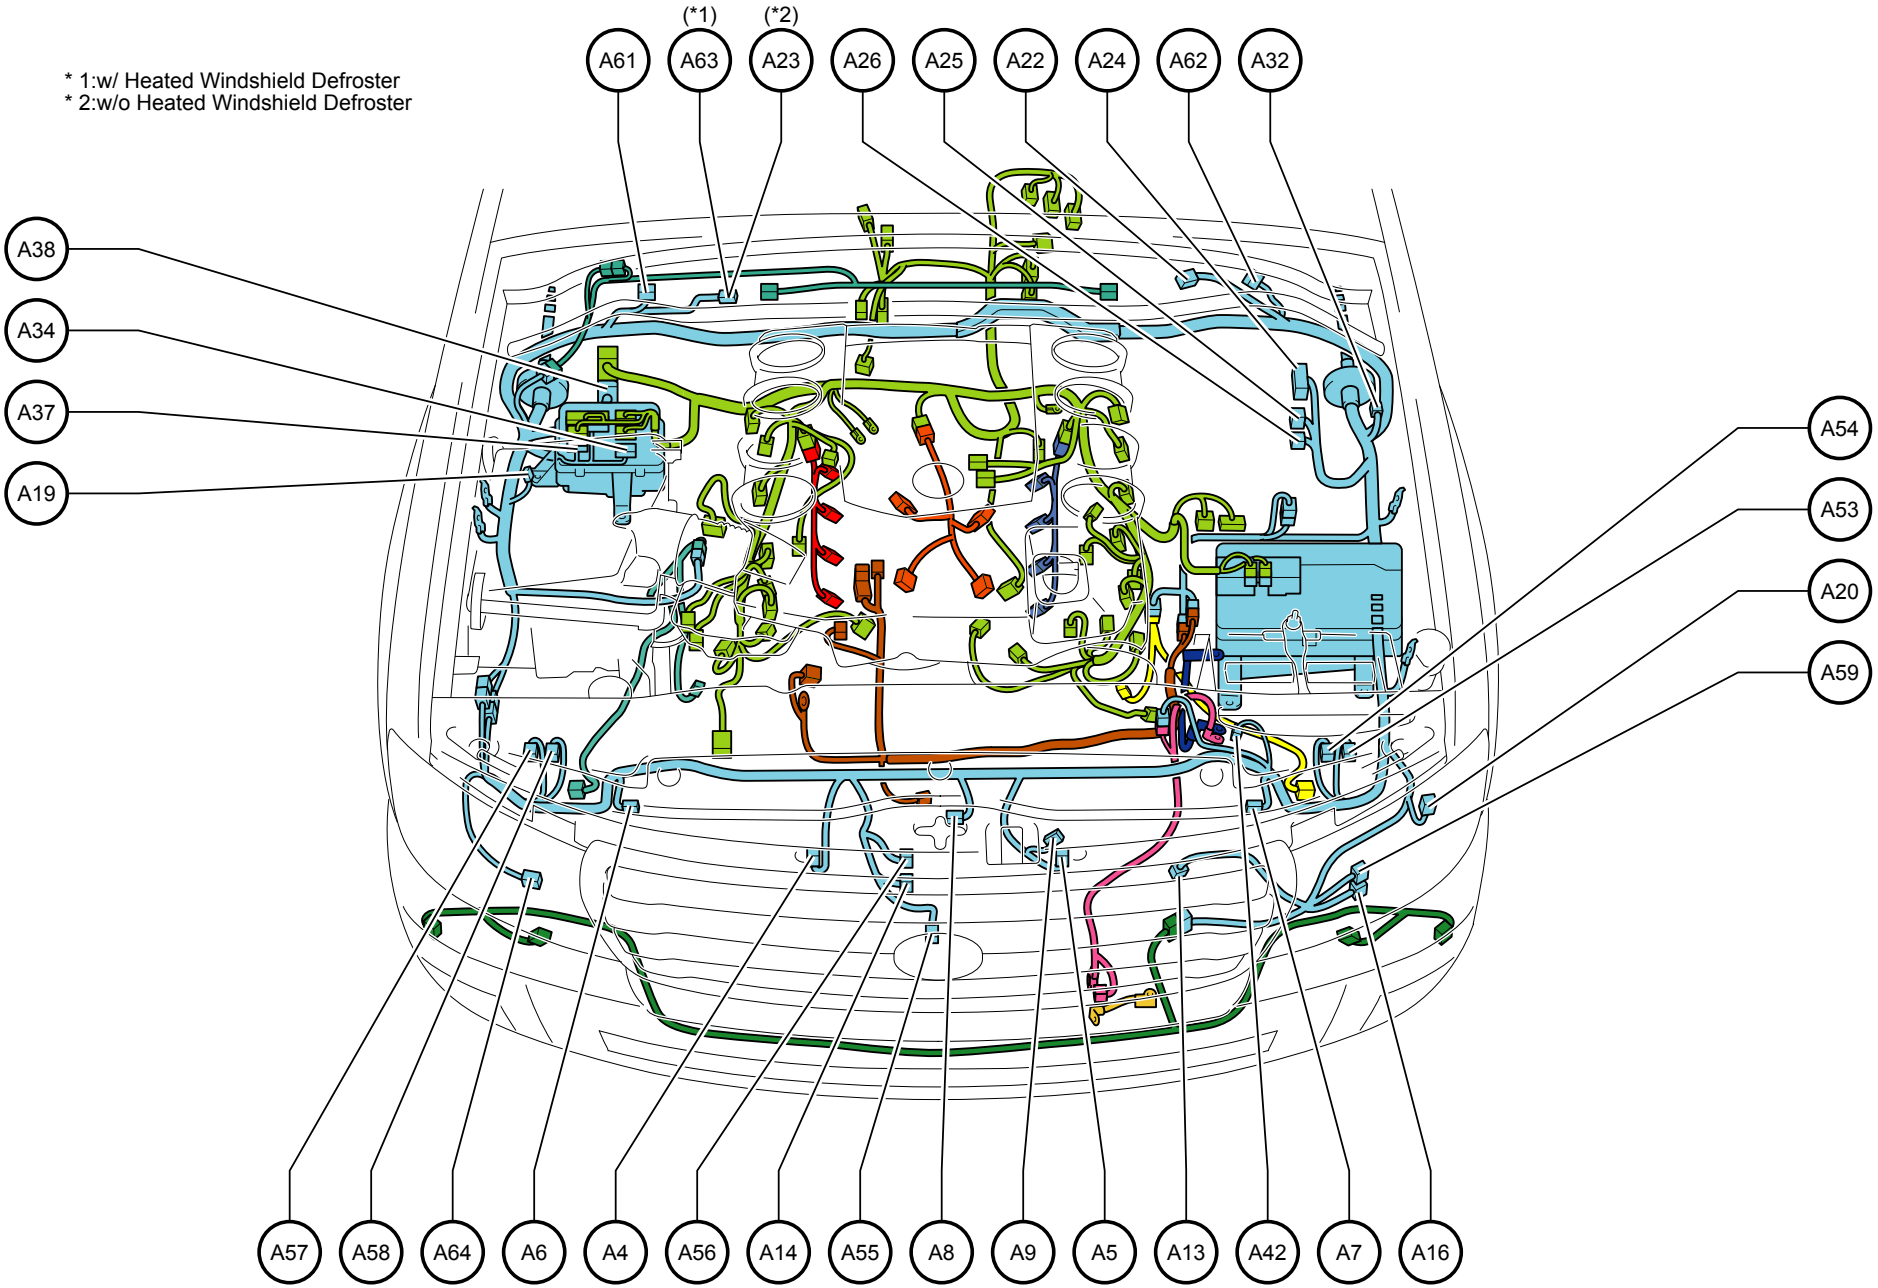

A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 23 Front Wiper Deicer (Windshield Glass)
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 38 ECM
A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
A 53 Headlight Assembly LH
A 54 Headlight Assembly LH
A 55 Front Television Camera Assembly
A 56 Millimeter Wave Radar Sensor Assembly
A 57 Headlight Assembly RH
A 58 Headlight Assembly RH
A 59 Headlight Cleaner Control Relay and Motor
A 61 Heated Windshield Defroster (Windshield Glass)
A 62 Heated Windshield Defroster (Windshield Glass)
A 63 Heated Windshield Defroster (Windshield Glass)
A 64 Front Tire Pressure Warning Antenna


A 4
Black




A 5
Black



A 6
Yellow

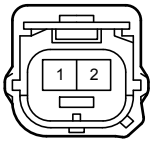

A 7
Yellow

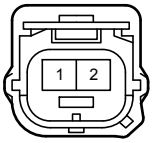

A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)

A 9
Black




A 13
Black

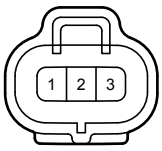


A 14
Black




A 16
Gray

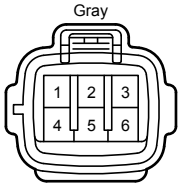


A 19
Black




A 20
Black




A 22
Black

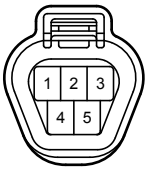


A 23
Gray




A 24
Black

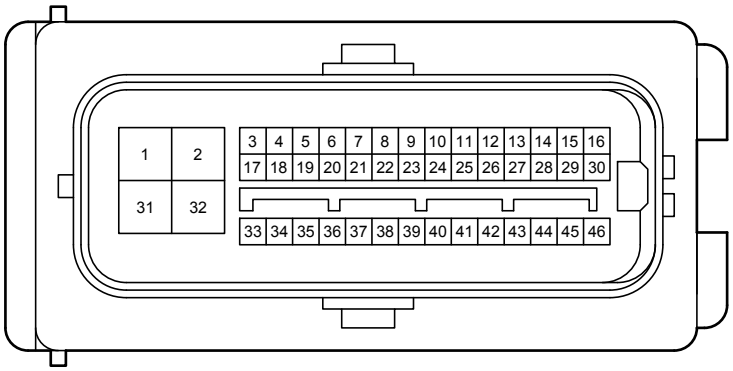


A 25
Black

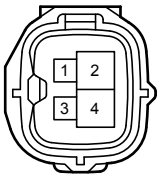


A 26
Gray

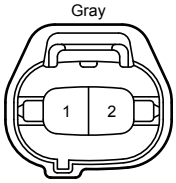


A 32
Black

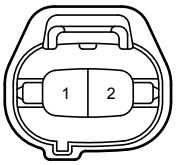


A 34
White

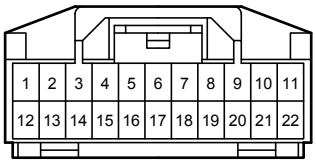


A 37
Blue

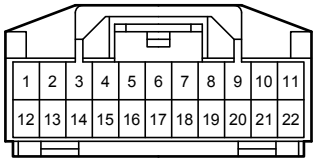

A 38
Black

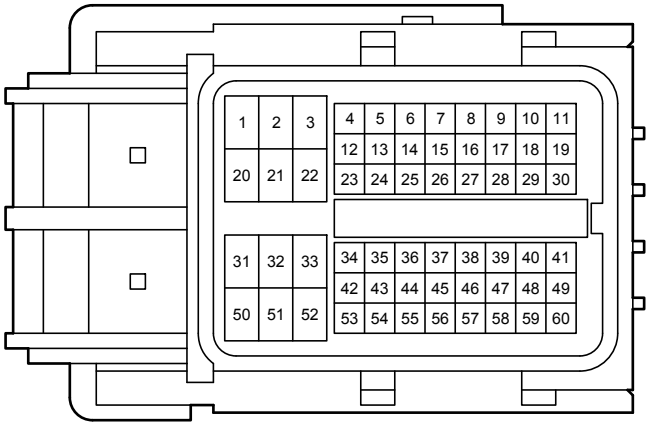


A 42
Black

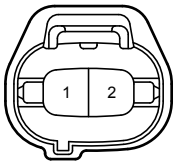


A 53
Black




A 54
Black

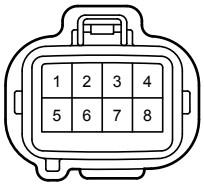

A 55
Black

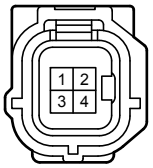


A 56
Black

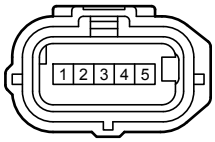

A 57
Black




A 58
Black

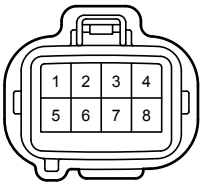


A 59
White



A 61
Black

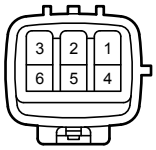

A 62
Gray

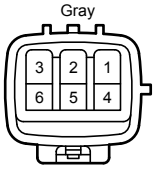


A 63
Gray



A 64
Gray



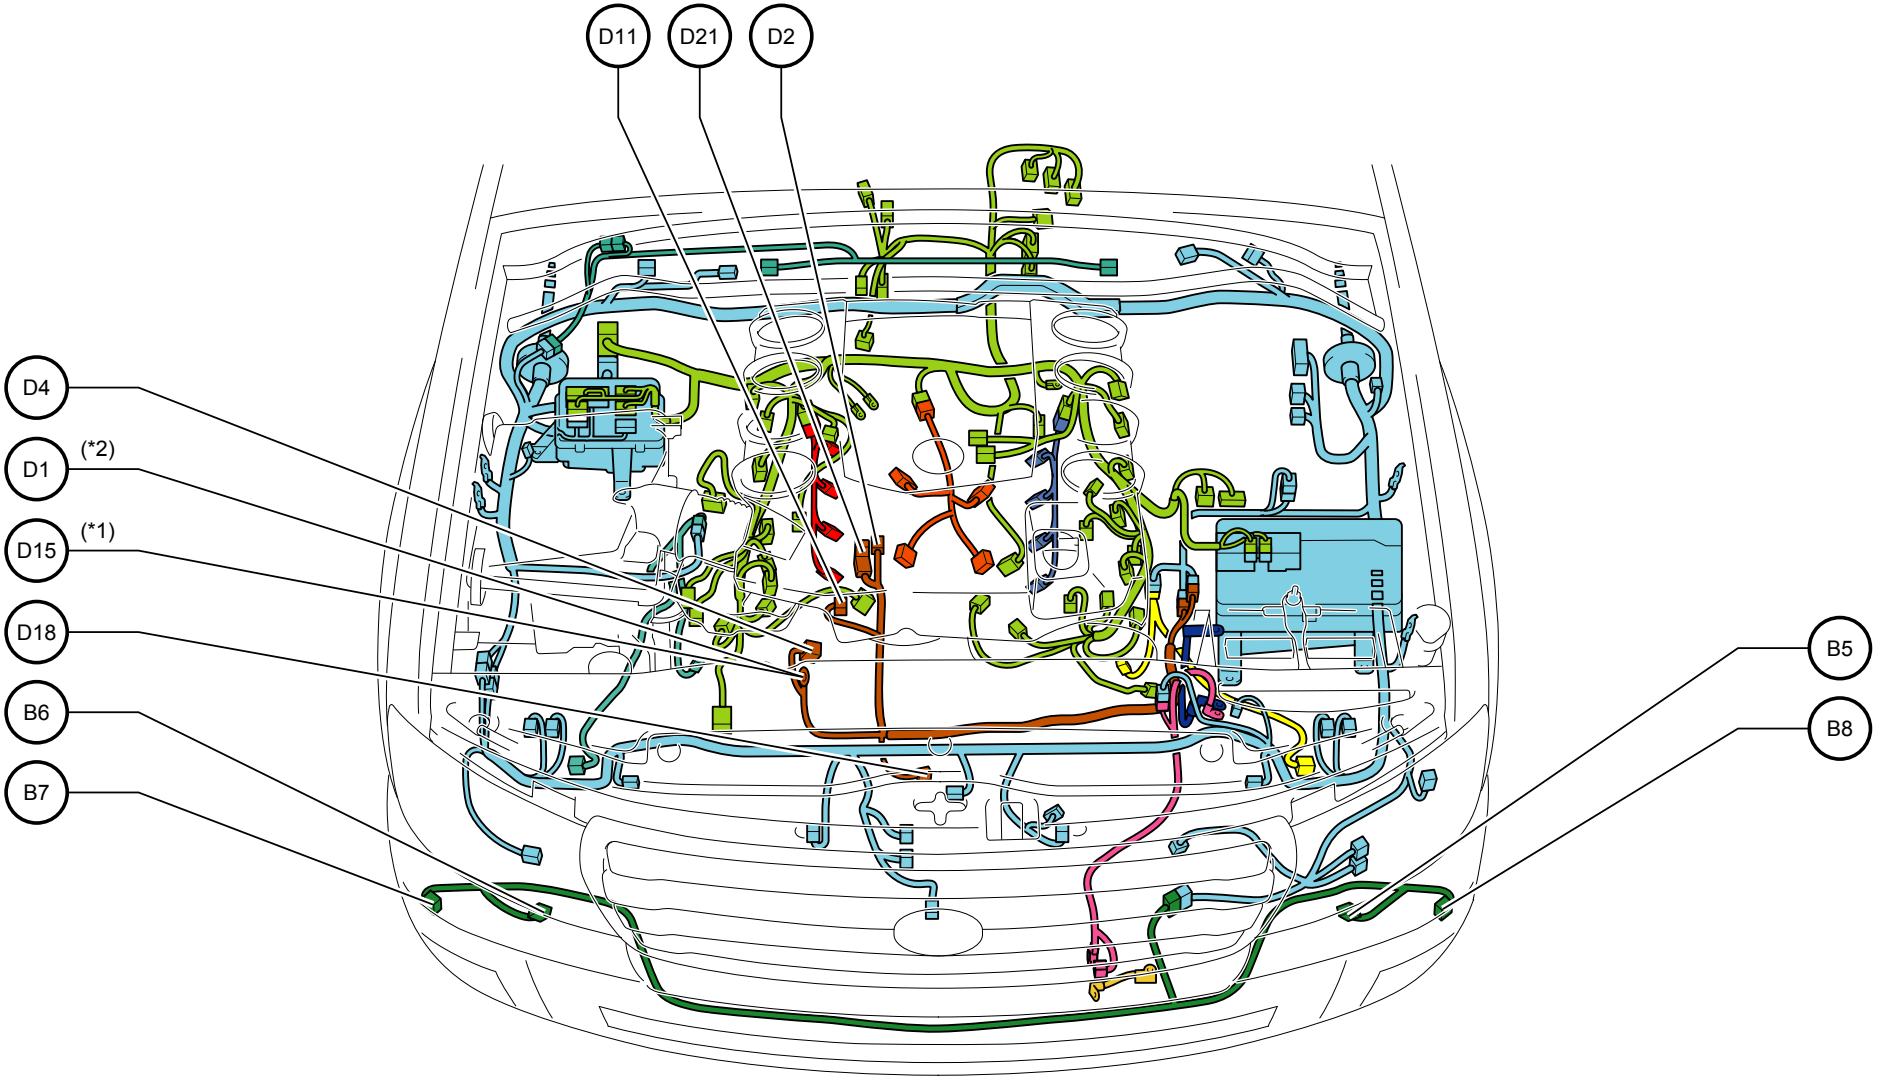


* 1:w/ Heated Windshield Defroster
* 2:w/o Heated Windshield Defroster


B 5 Fog Light Assembly LH
B 6 Fog Light Assembly RH
B 7 No.1 Ultrasonic Sensor RH
B 8 No.1 Ultrasonic Sensor LH

D 1 Generator Assembly
D 2 Starter Assembly
D 4 Generator Assembly
D 11 Engine Oil Level Sensor
D 15 Generator Assembly
D 18 Oil Pressure Sender Gage Assembly
D 21 Starter Assembly


B 5
Black

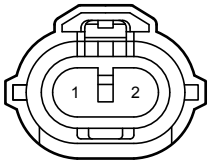


B 6
Black

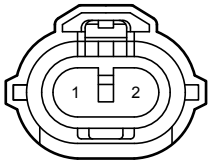


B 7
Black

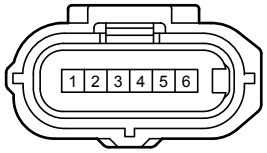

B 8
Black

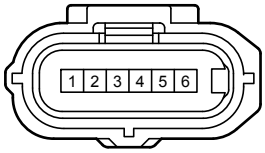

D 1




D 2
Black




D 4
Black



D 11
Gray

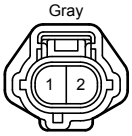


D 15




D 18
Black



D 21



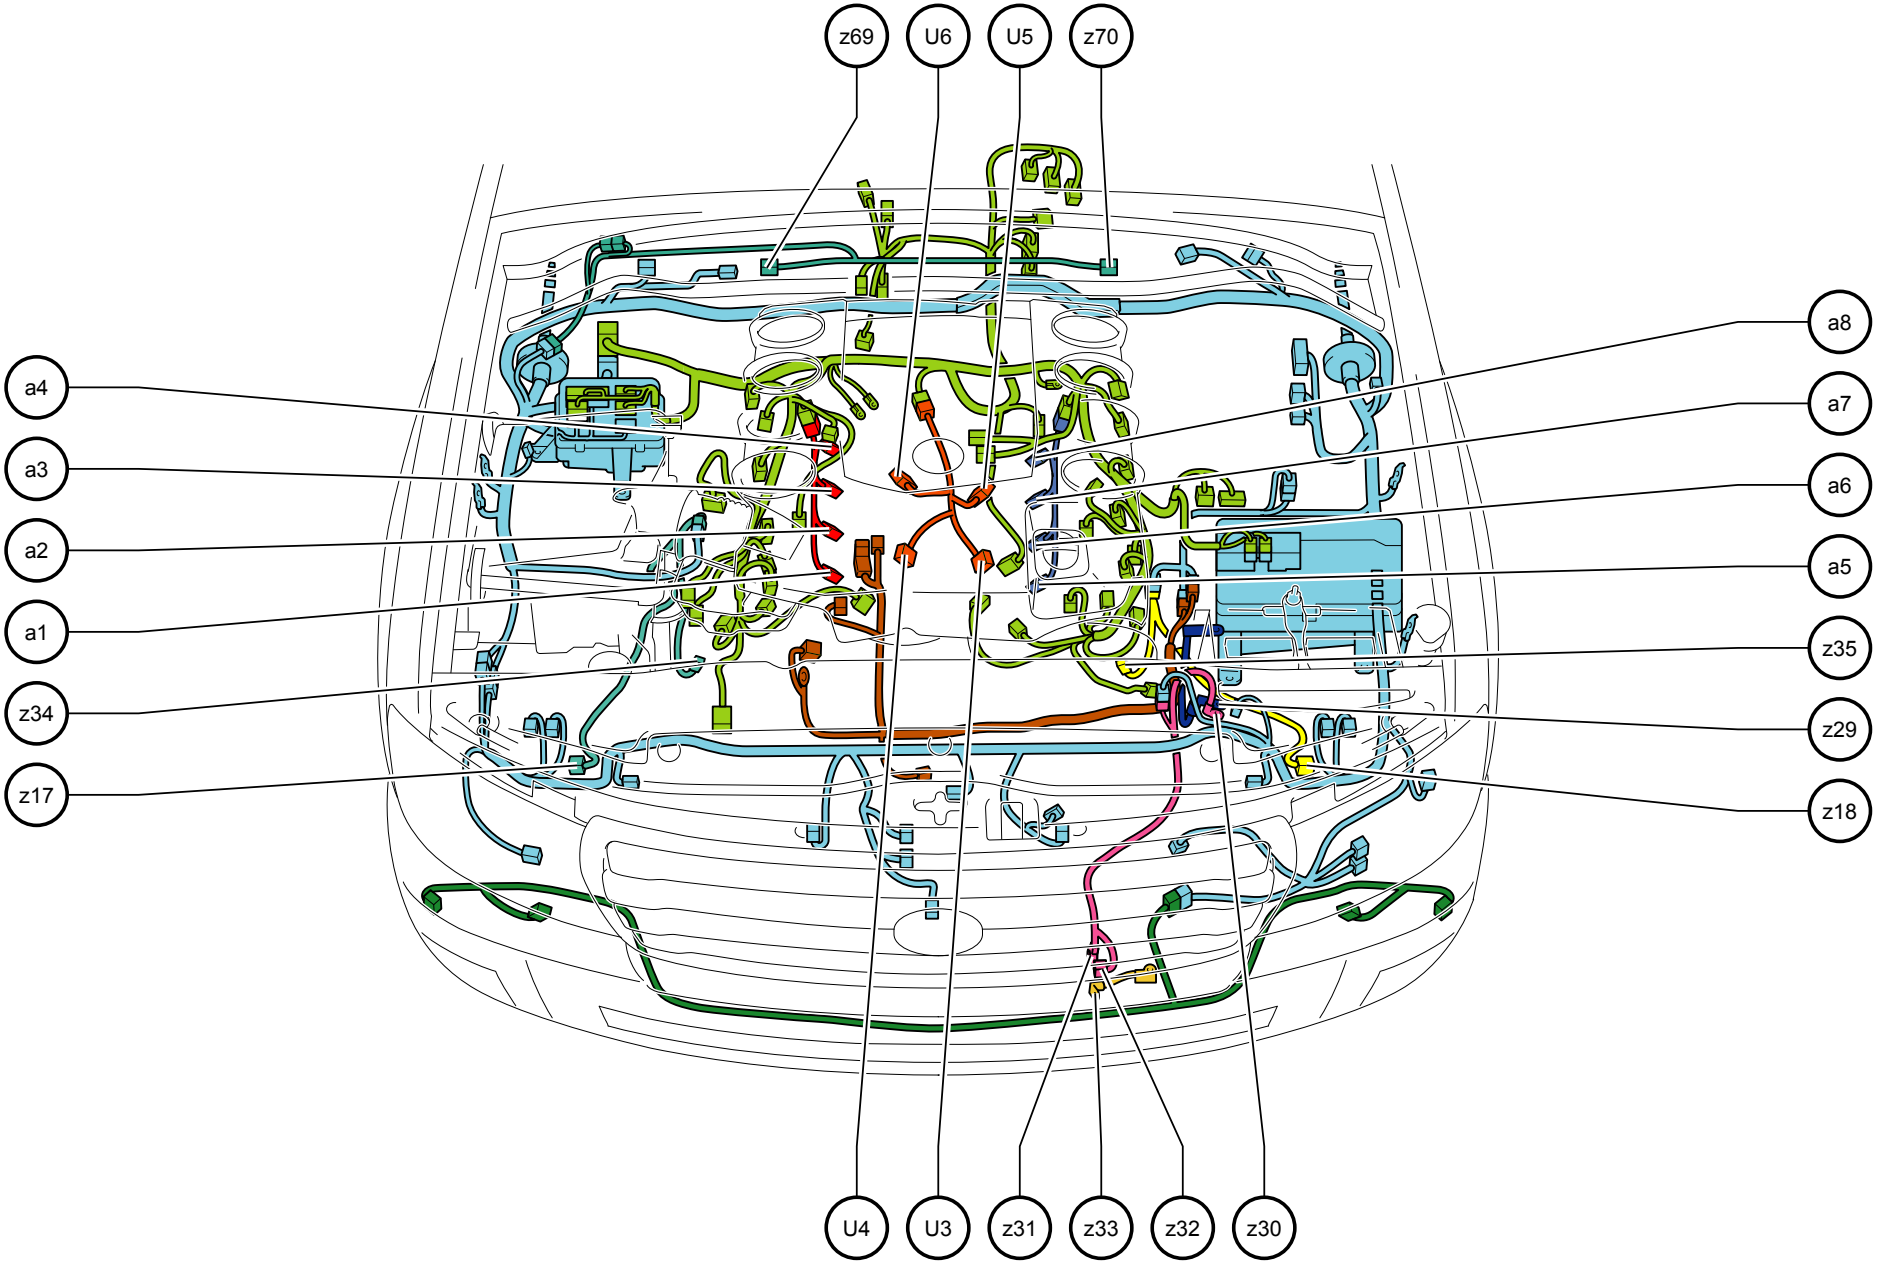

z69
U6
U5
z70
a4
a3
a2
a1
z34
z17
a8
a7
a6
a5
z35
z29
z18
U4
U3
z31
z33
z32
z30

U 3 Knock Control Sensor (Bank 1 Sensor 1)
U 4 Knock Control Sensor (Bank 2 Sensor 1)
U 5 Knock Control Sensor (Bank 1 Sensor 2)
U 6 Knock Control Sensor (Bank 2 Sensor 2)


a 1 Fuel Injector Assembly No.2
a 2 Fuel Injector Assembly No.4
a 3 Fuel Injector Assembly No.6
a 4 Fuel Injector Assembly No.8
a 5 Fuel Injector Assembly No.1
a 6 Fuel Injector Assembly No.3
a 7 Fuel Injector Assembly No.5
a 8 Fuel Injector Assembly No.7

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
z 31 With Magnet Switch Winch Motor Assembly
z 32 With Magnet Switch Winch Motor Assembly
z 33 With Magnet Switch Winch Motor Assembly
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH
z 69 Washer Nozzle Sub-Assembly RH
z 70 Washer Nozzle Sub-Assembly LH


U 3
Gray




U 4
Black




U 5
Gray




U 6
Black




a 1
Black

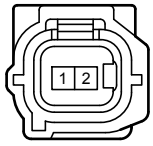


a 2
Black

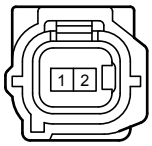


a 3
Black

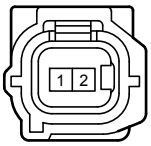


a 4
Black

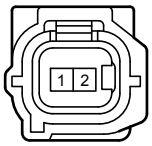


a 5
Black

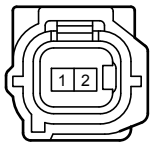


a 6
Black

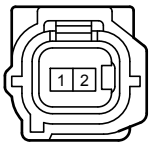

a 7
Black

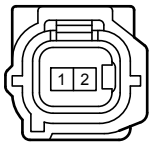

a 8
Black

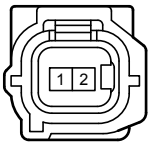


z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

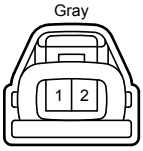


z 33




z 34
Black

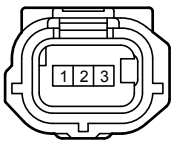


z 35
Black

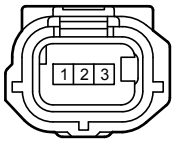


z 69
Gray

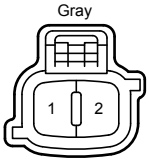


z 70
Gray

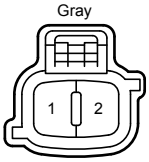


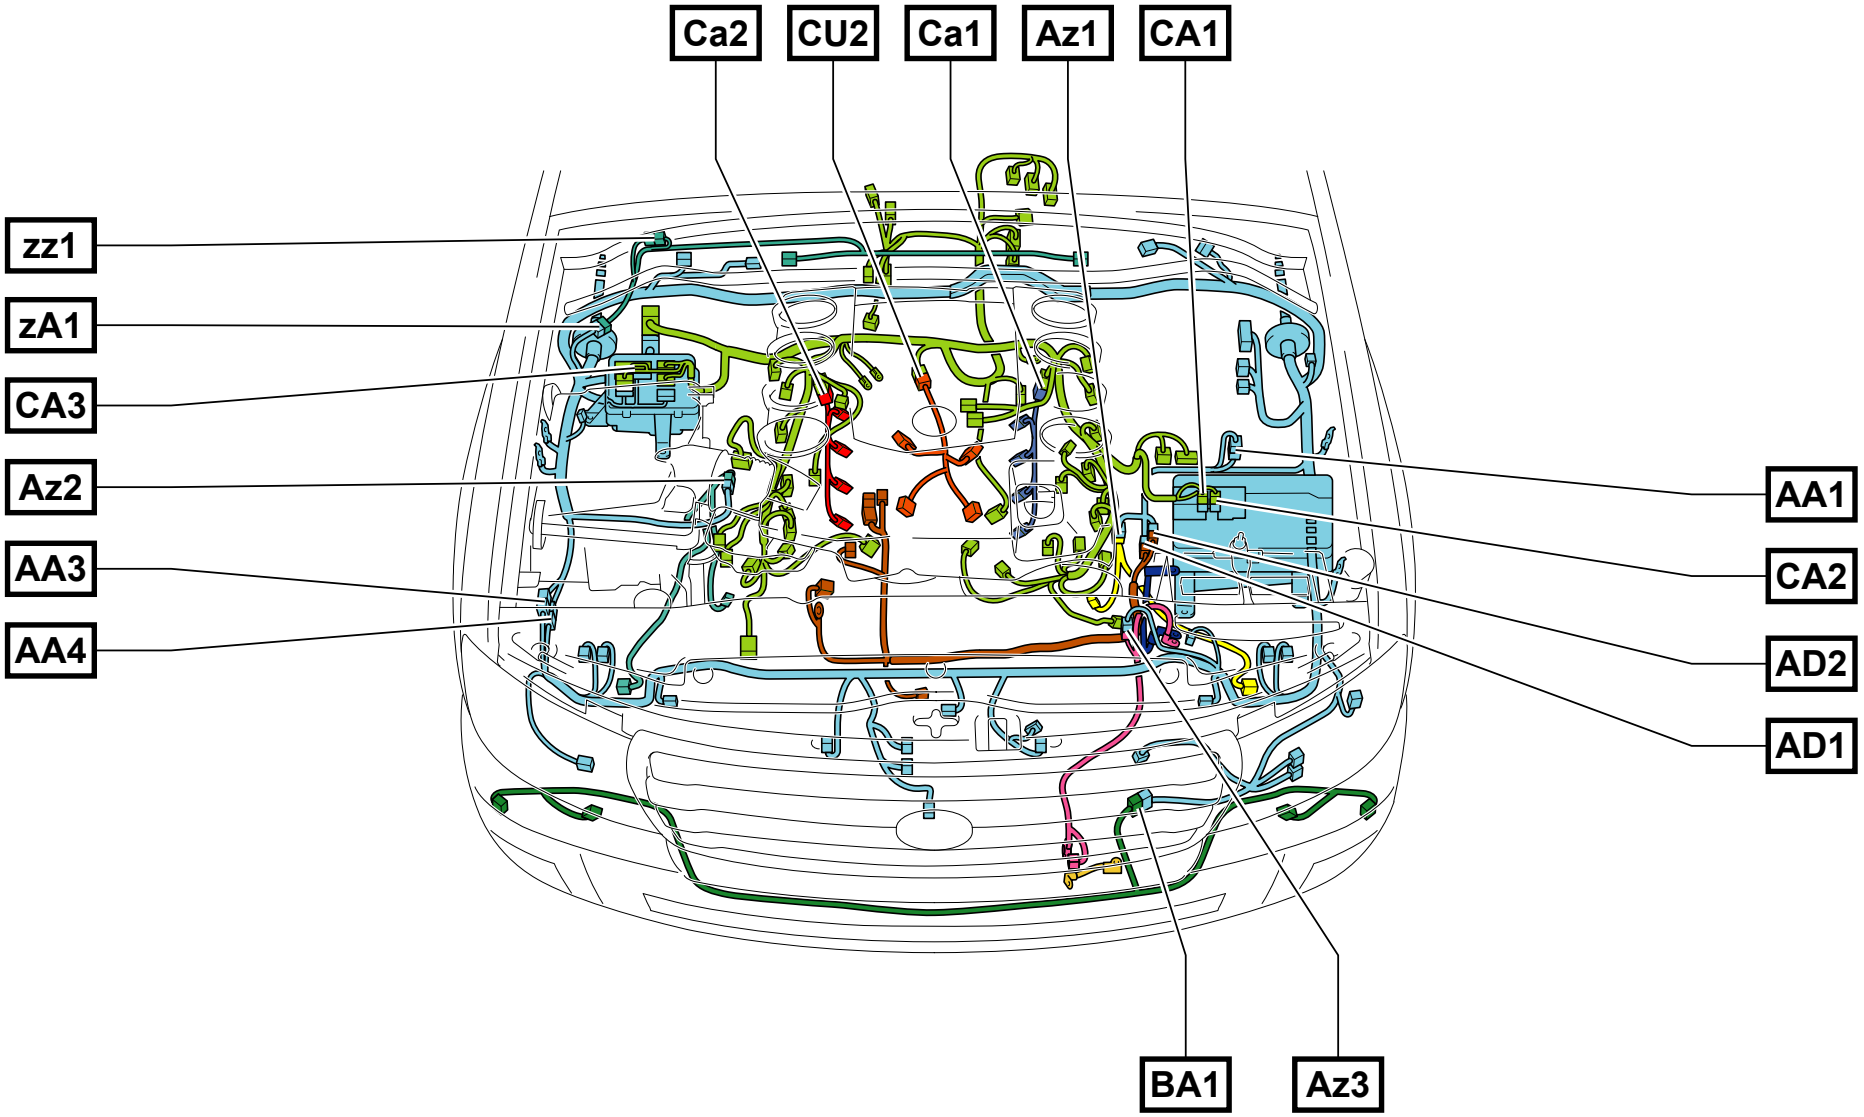
Ca2
CU2
Ca1
Az1
CA1
zz1
zA1
CA3
Az2
AA3
AA4
AA1
CA2
AD2
AD1
BA1
Az3


AA1
Gray

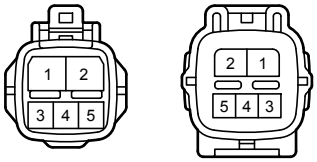


AA3
Gray

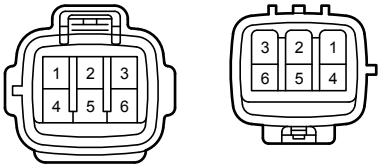


AA4
Yellow

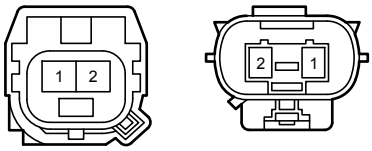


AD1
Black

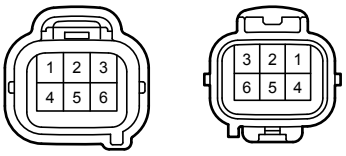


AD2
Black

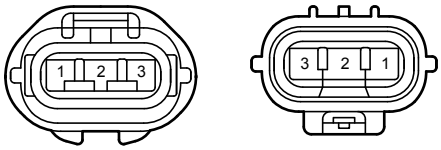


Az1
Gray

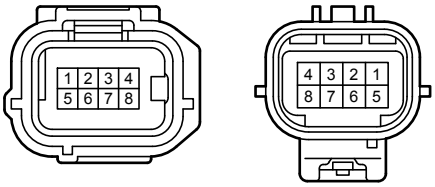


Az2
Gray

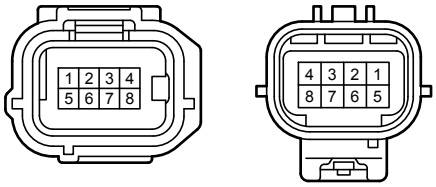



Az3
Gray

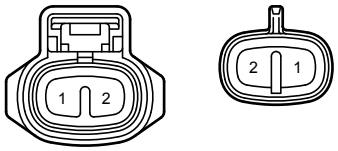



BA1
Black

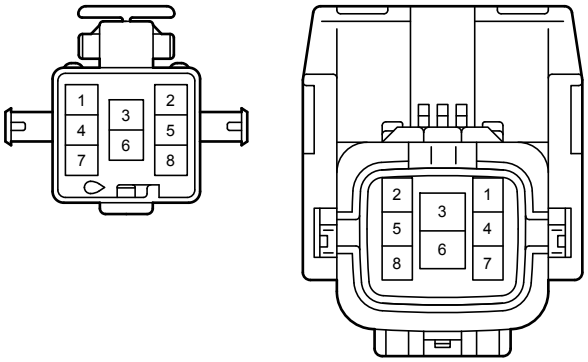


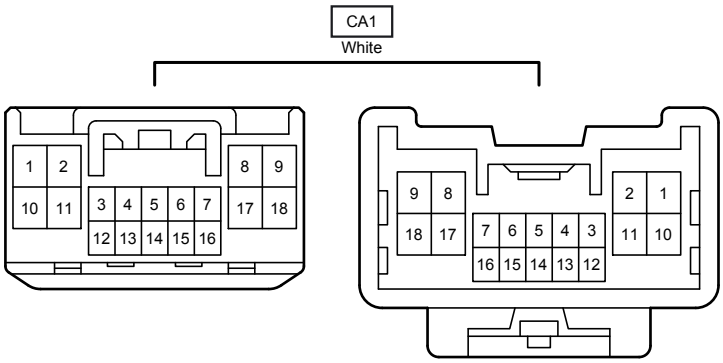

CA1
White
1 2 10 11 3 4 5 6 7 12 13 14 15 16 8 9 17 18
9 8 18 17 7 6 5 4 3 16 15 14 13 12 2 1 11 10

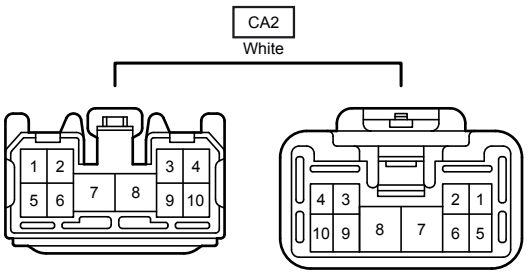

CA2
White
1 2 5 6 7 8 3 4 9 10
4 3 10 9 8 7 2 1 6 5

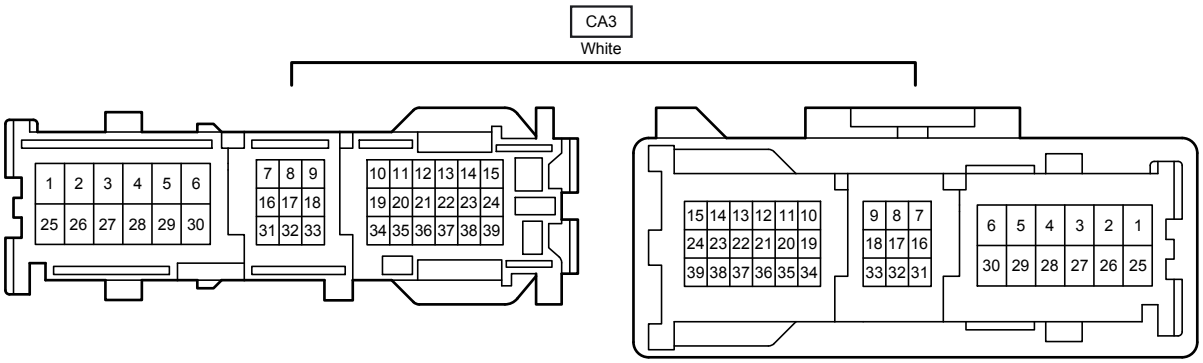

CA3
White
1 2 3 4 5 6 25 26 27 28 29 30 7 8 9 16 17 18 31 32 33 10 11 12 13 14 15 19 20 21 22 23 24 34 35 36 37 38 39
15 14 13 12 11 10 24 23 22 21 20 19 39 38 37 36 35 34 9 8 7 18 17 16 33 32 31 6 5 4 3 2 1 30 29 28 27 26 25

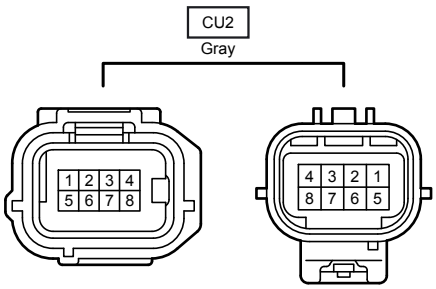

CU2
Gray
1 2 3 4 5 6 7 8
4 3 2 1 8 7 6 5

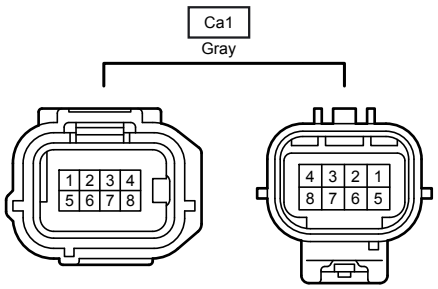

Ca1
Gray
1 2 3 4 5 6 7 8
4 3 2 1 8 7 6 5

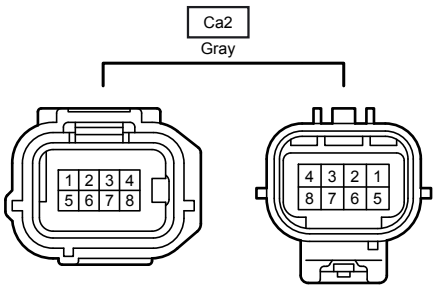
Ca2
Gray
1 2 3 4 5 6 7 8
4 3 2 1 8 7 6 5

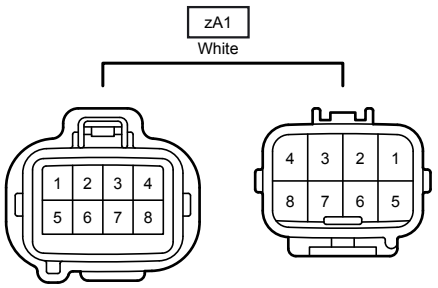
zA1
White
1 2 3 4 5 6 7 8
4 3 2 1 8 7 6 5

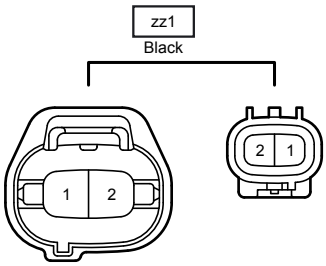
zz1
Black
1
2
2
1

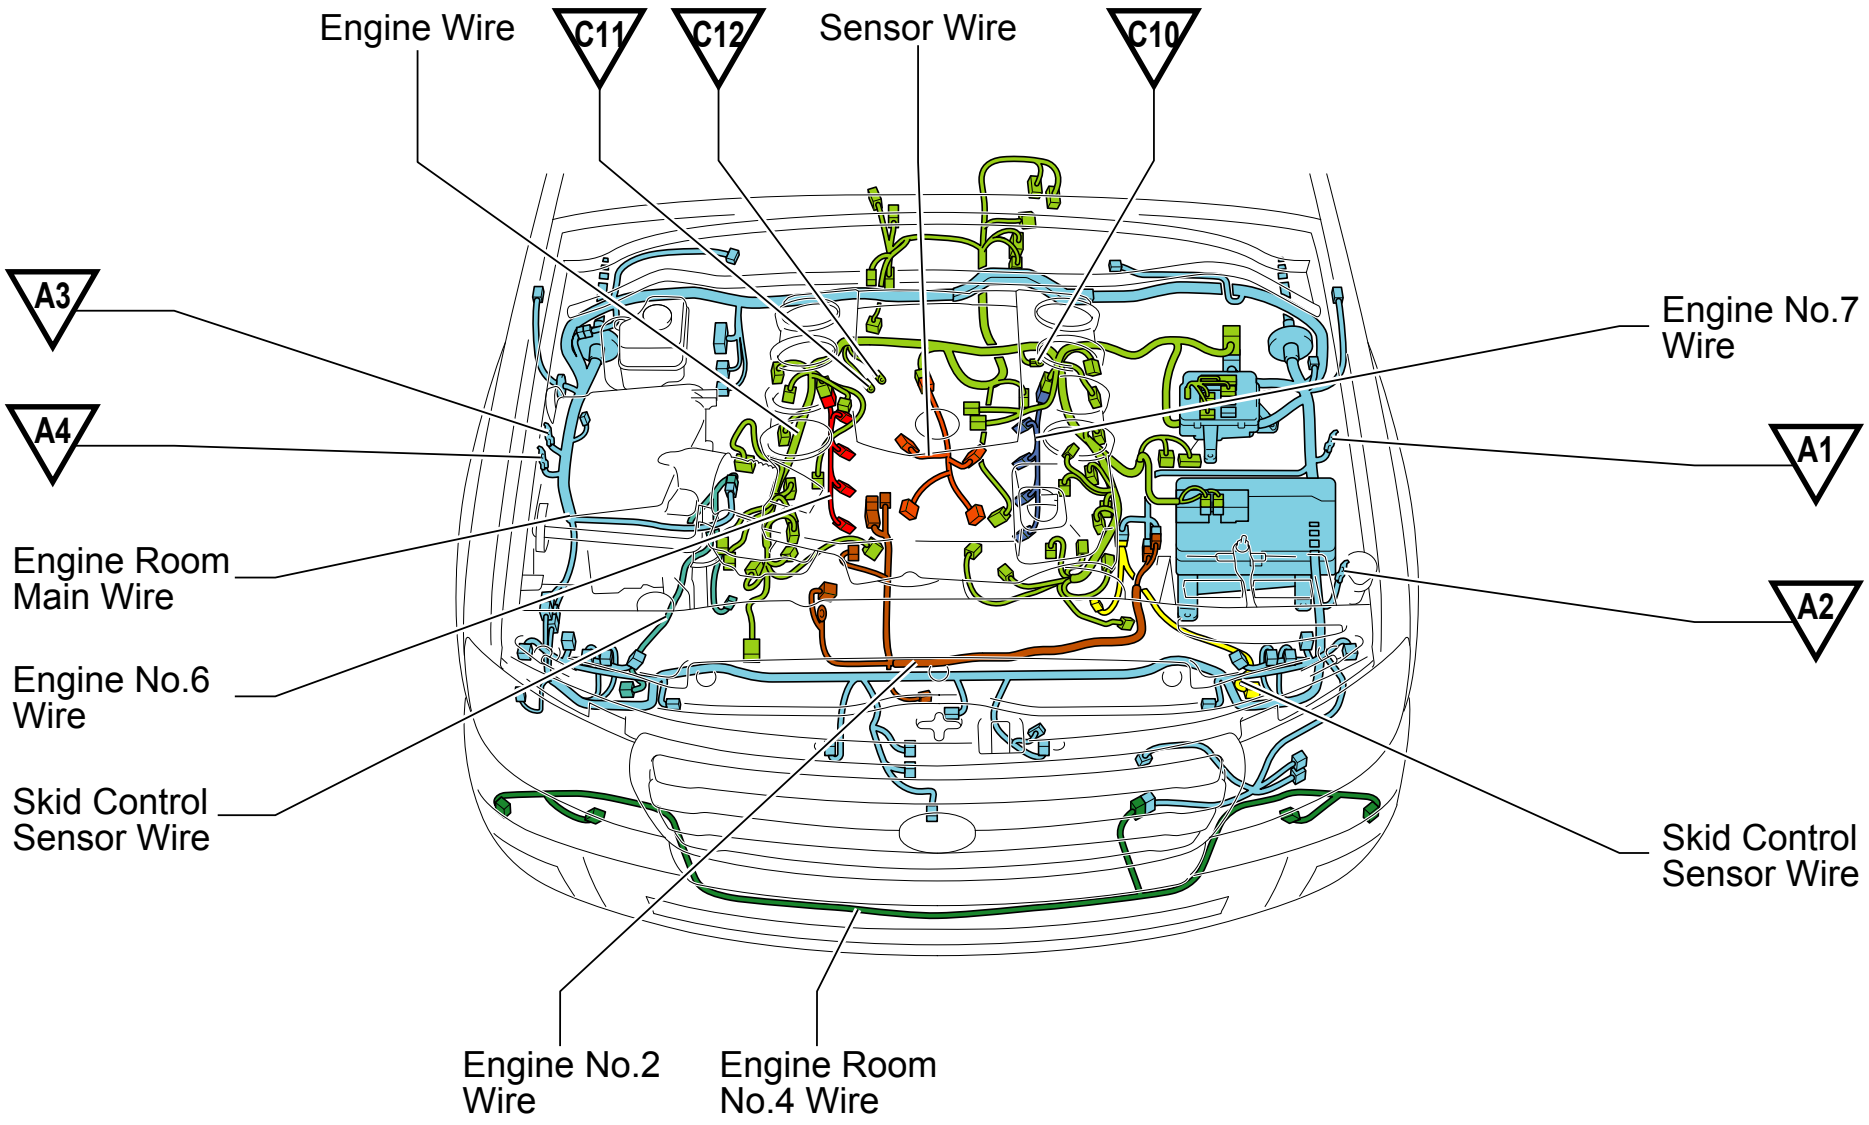

Engine Wire
C11
C12
Sensor Wire
C10
A3
A4
Engine Room Main Wire
Engine No.6 Wire
Skid Control Sensor Wire
Engine No.7 Wire
A1
A2
Skid Control Sensor Wire
Engine No.2 Wire
Engine Room No.4 Wire

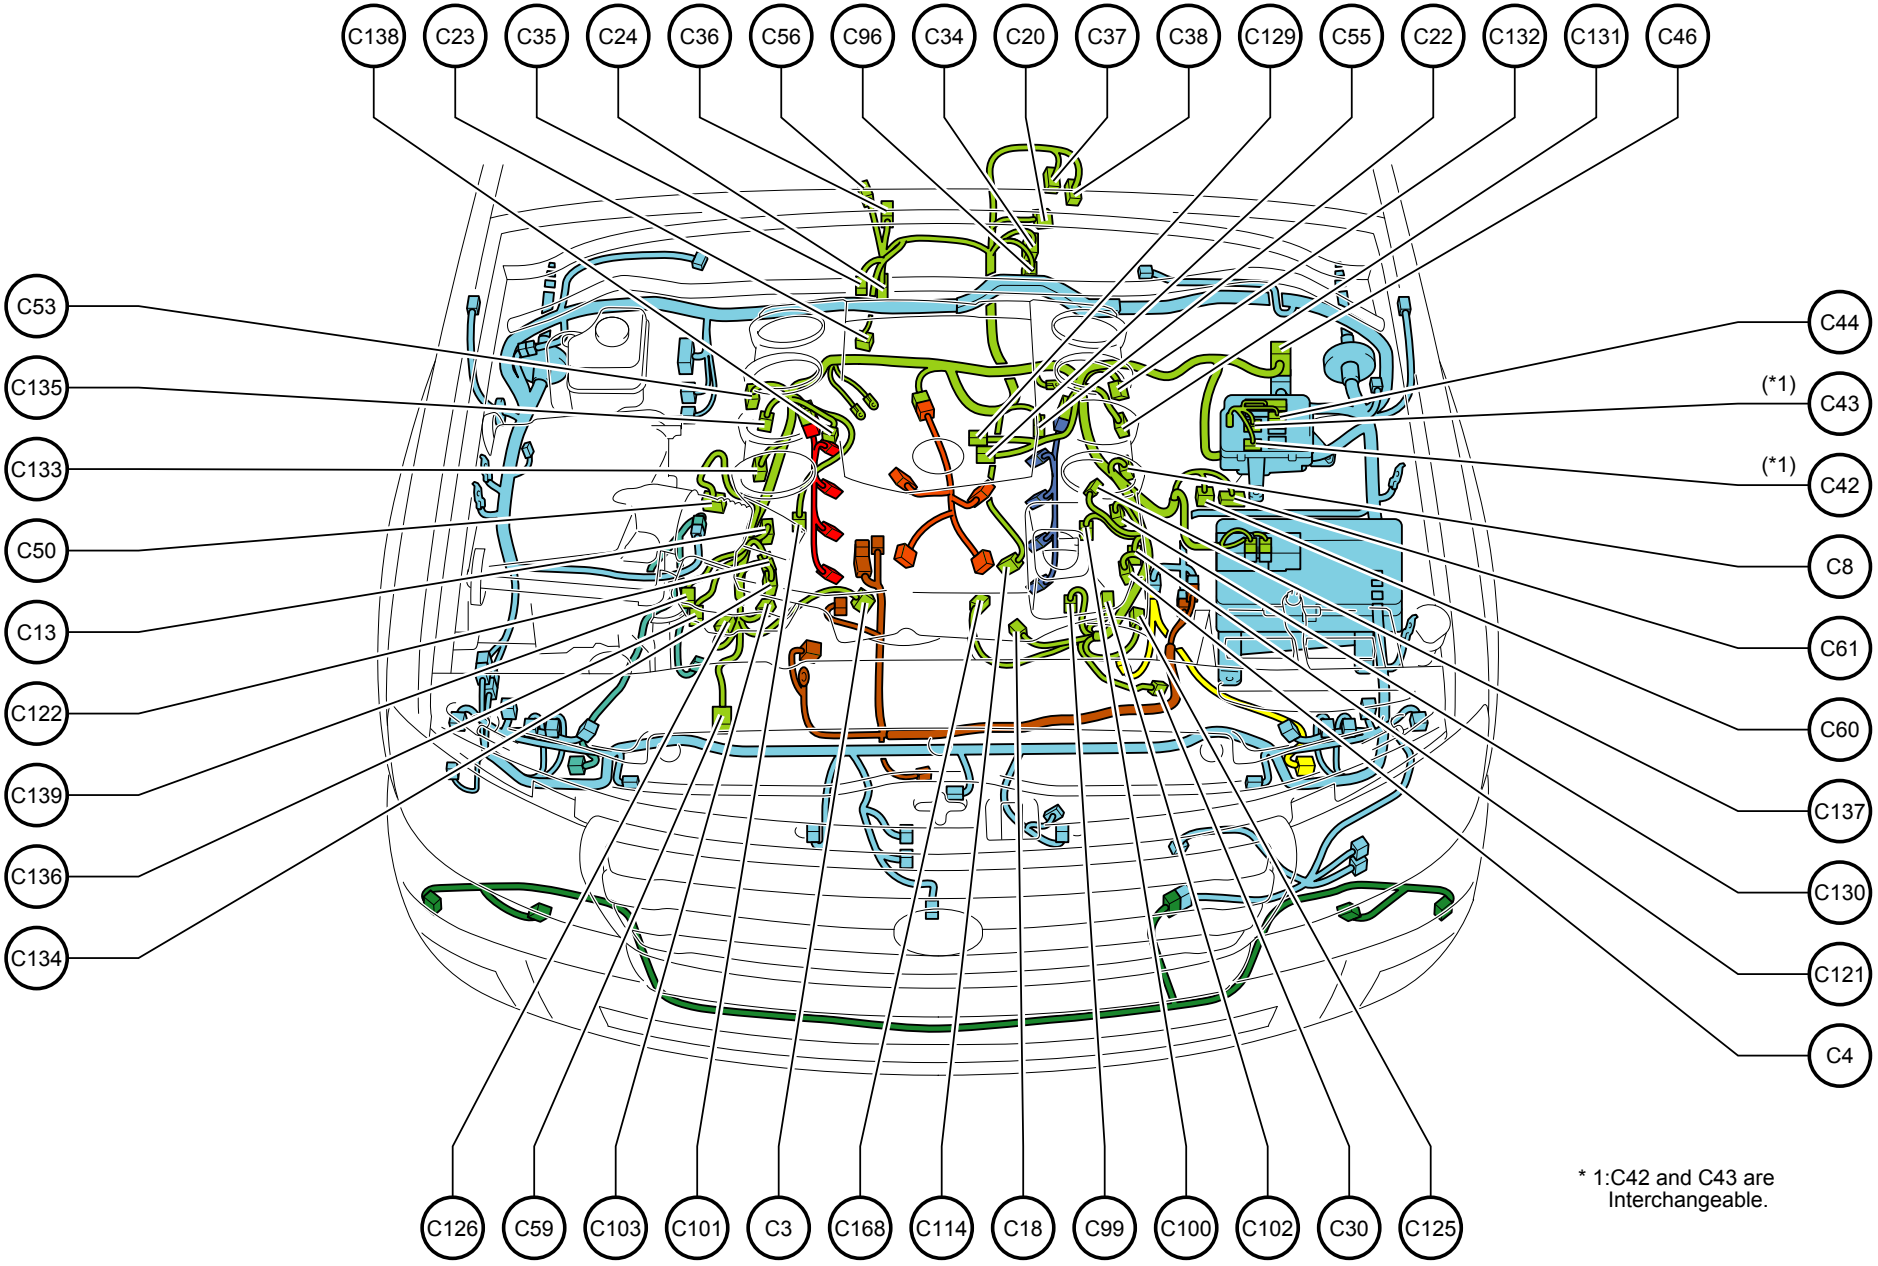


* 1:C42 and C43 are Interchangeable.

C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 8 Ignition Coil Assembly No.5
C 13 Ignition Coil Assembly No.4
C 18 E.F.I. Engine Coolant Temperature Sensor
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 30 Cooler Compressor Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 46 ECM
C 50 Mass Air Flow Meter
C 53 Ignition Coil Assembly No.8
C 55 Purge VSV
C 56 Oxygen Sensor (Bank 2 Sensor 2)
C 59 Power Steering Oil Pressure Sensor
C 60 Air Injection Control Driver
C 61 Air Injection Control Driver
C 96 Electronically Controlled Transmission Solenoid
C 99 Camshaft Position Sensor
C 100 VVT Sensor (Bank 1 Intake Side)
C 101 VVT Sensor (Bank 2 Intake Side)
C 102 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 103 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 114 Crankshaft Position Sensor
C 121 VVT Sensor (Bank 1 Exhaust Side)
C 122 VVT Sensor (Bank 2 Exhaust Side)
C 125 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C 126 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C 129 VSV (ACIS)
C 130 Ignition Coil Assembly No.3
C 131 Ignition Coil Assembly No.7
C 132 Noise Filter (Ignition Bank 1)
C 133 Ignition Coil Assembly No.6
C 134 Ignition Coil Assembly No.2
C 135 Noise Filter (Ignition Bank 2)
C 136 Air Pump Assembly
C 137 Air Switching Valve (Bank 1)
C 138 Air Switching Valve (Bank 2)
C 139 Air Pump Assembly
C 168 E.F.I. Vacuum Sensor Assembly


C 3
Black

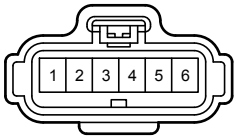


C 4
Black



C 8
Black



C 13
Black



C 18
Dark Gray



C 20
Dark Gray




C 22
Dark Gray



C 23
Dark Gray




C 24
Gray

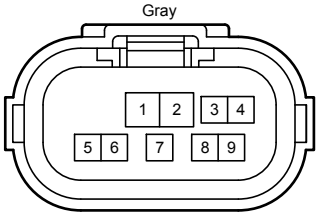


C 30
Gray




C 34
Gray

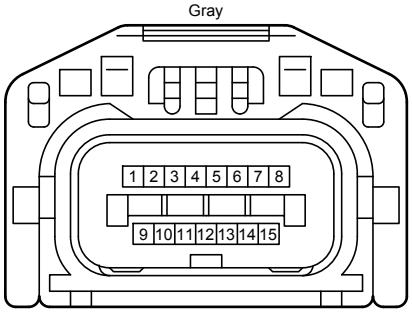


C 35
Black

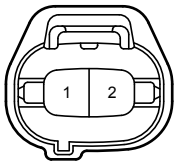


C 36
Black

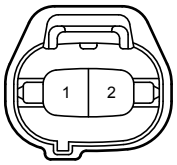


C 37
Black

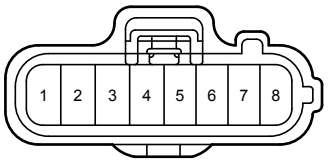


C 38
Dark Gray

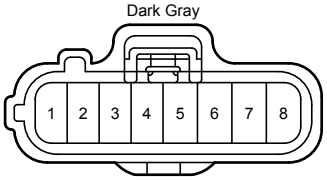


C 42
White

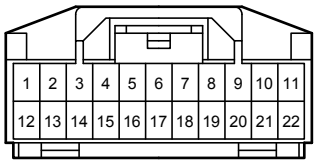


C 43
White

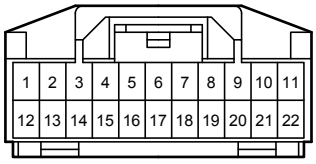


C 44
Blue

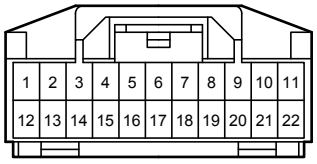


C 46
Black

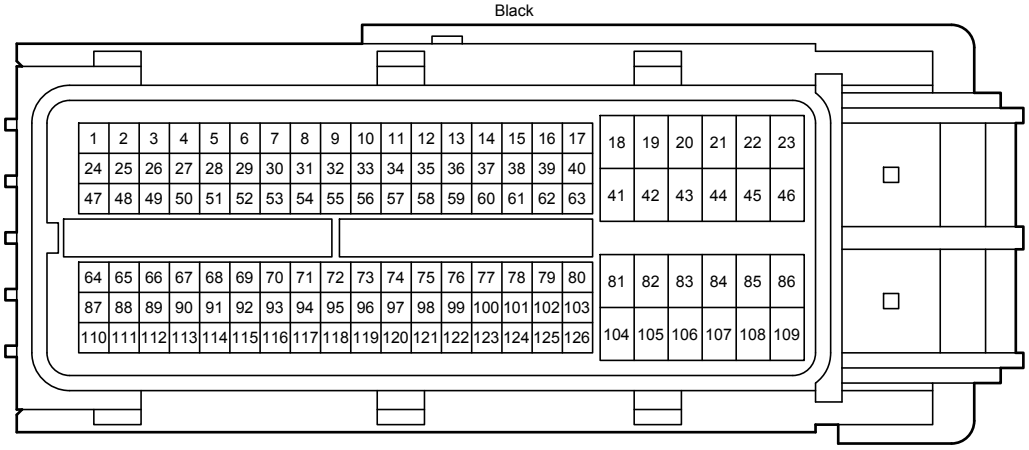


C 50
Black

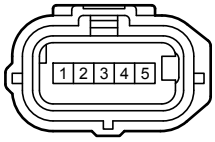

C 53
Black




C 55
Black

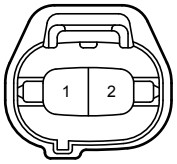


C 56
Dark Gray




C 59
Gray

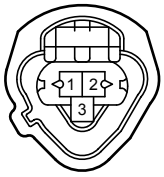


C 60
Black

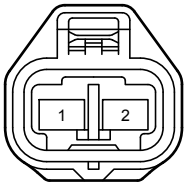


C 61
Black

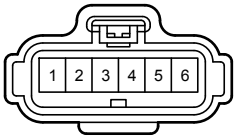


C 96
Gray

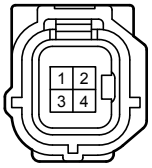


C 99
Black

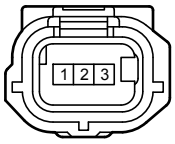

C100
Black

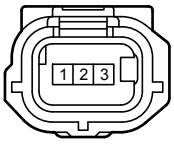

C101
Black

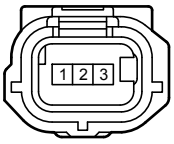


C102
Black




C103
Black




C114
Black

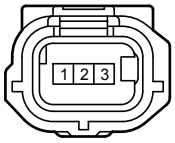

C121
Black

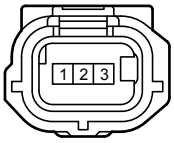

C122
Black

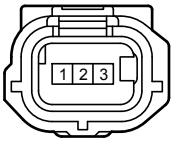


C125
Black



C126
Black



C129
Black

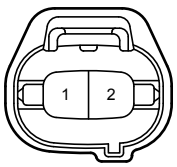


C130
Gray



C131
Gray



C132
Gray

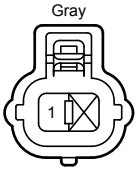


C133
Gray




C134
Gray




C135
Gray

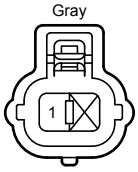


C136
Gray

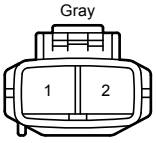


C137
Black

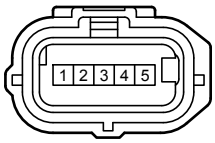


C138
Black

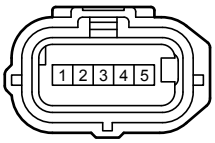


C139
Black

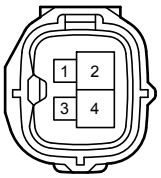


C168
Black



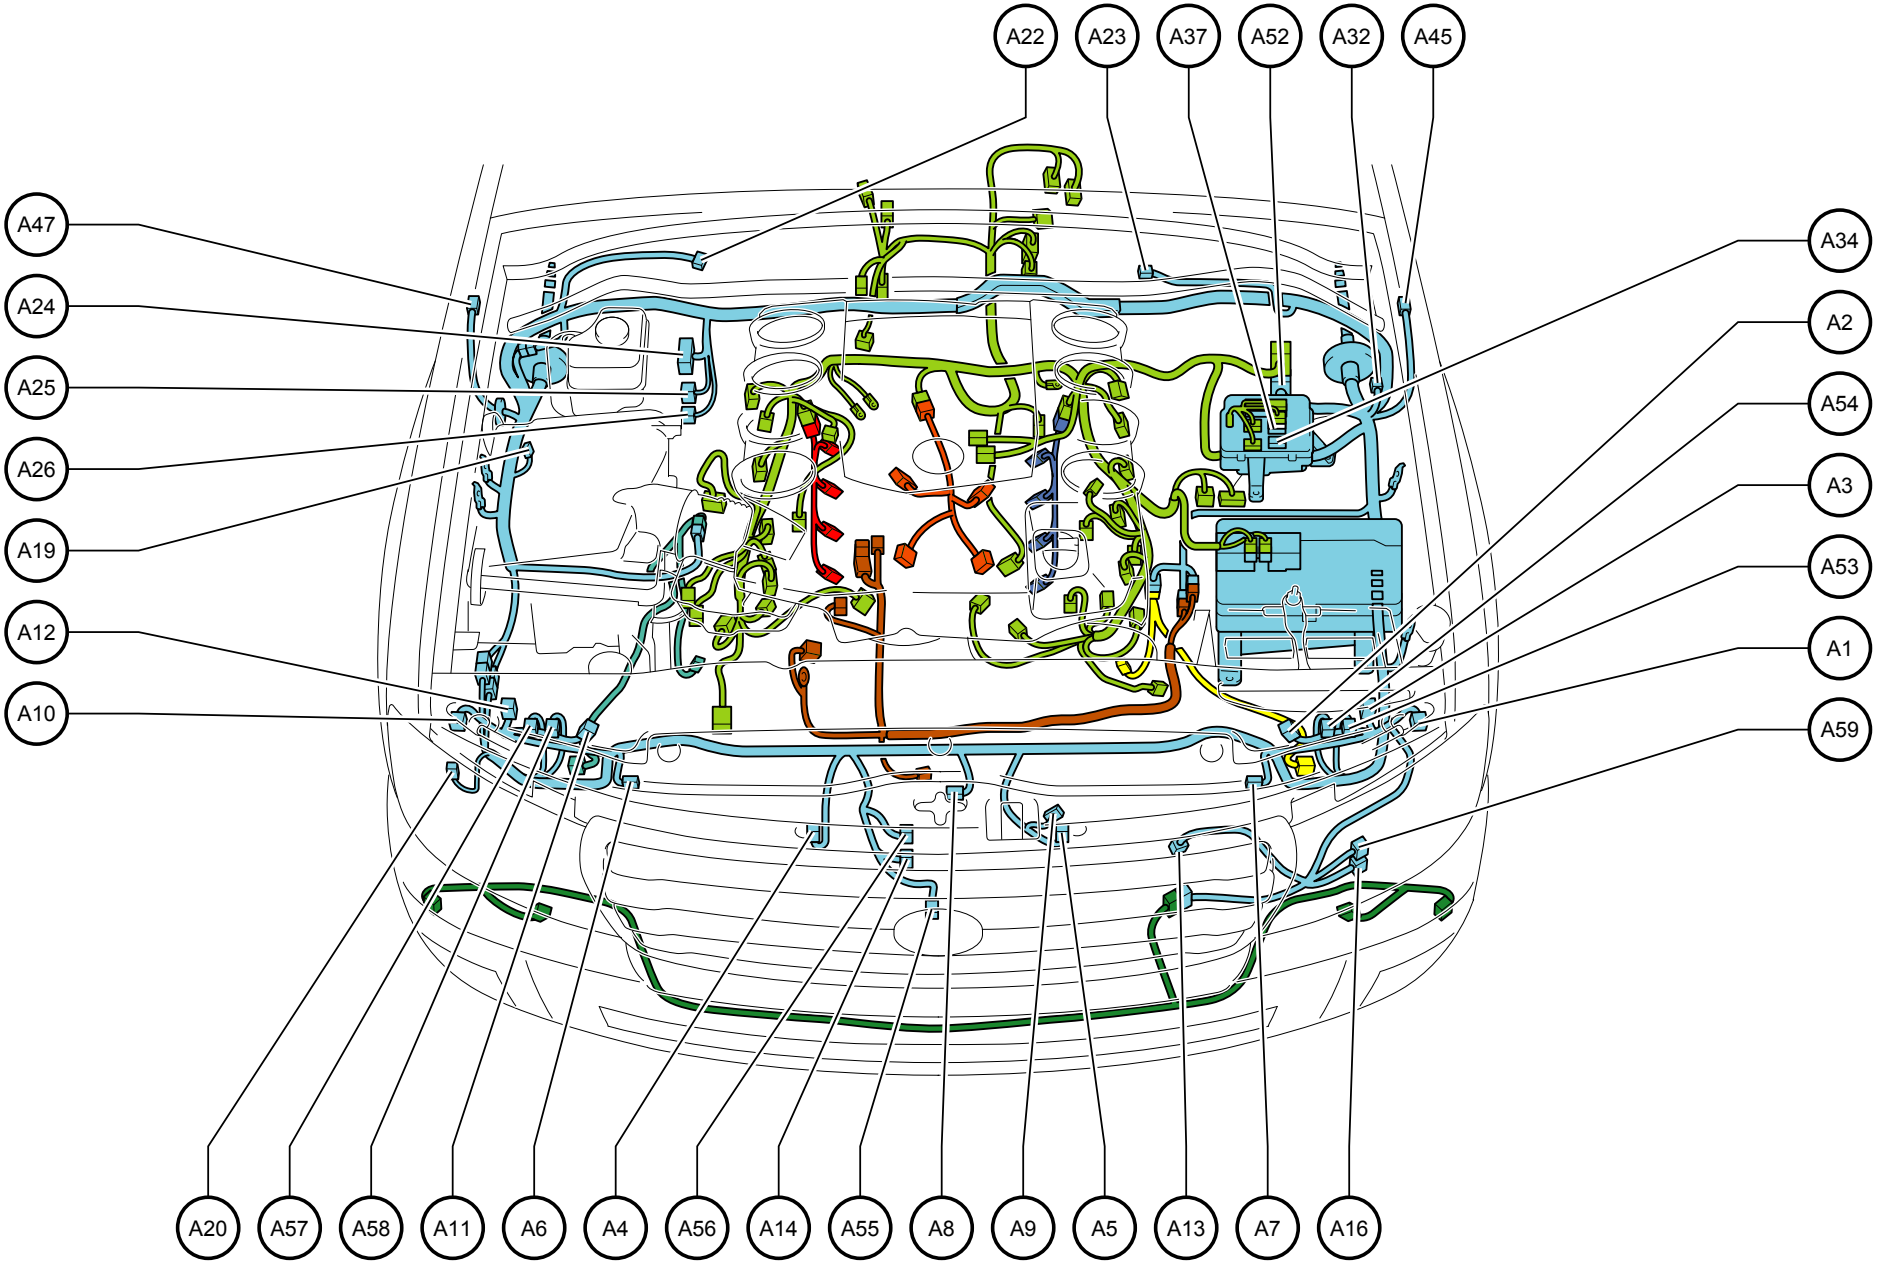

A22
A23
A37
A52
A32
A45
A47
A24
A25
A26
A19
A12
A10
A34
A2
A54
A3
A53
A1
A59
A20
A57
A58
A11
A6
A4
A56
A14
A55
A8
A9
A5
A13
A7
A16

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 23 Front Wiper Deicer (Windshield Glass)
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH
A 52 ECM
A 53 Headlight Assembly LH
A 54 Headlight Assembly LH
A 55 Front Television Camera Assembly
A 56 Millimeter Wave Radar Sensor Assembly
A 57 Headlight Assembly RH
A 58 Headlight Assembly RH
A 59 Headlight Cleaner Control Relay and Motor


A 1
Gray

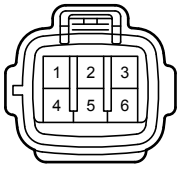


A 2
Black

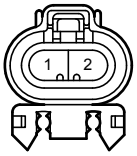


A 3
Black

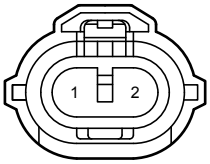


A 4
Black




A 5
Black



A 6
Yellow

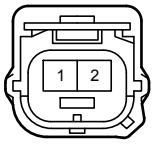

A 7
Yellow

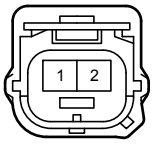


A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

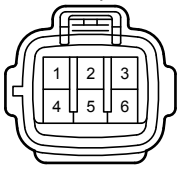


A 11
Black

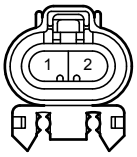

A 12
Black

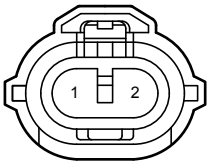

A 13
Black

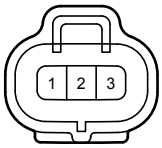


A 14
Black




A 16
Gray




A 19
Black



A 20
Black




A 22
Black

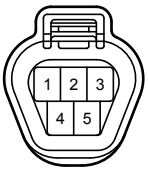


A 23
Gray




A 24
Black

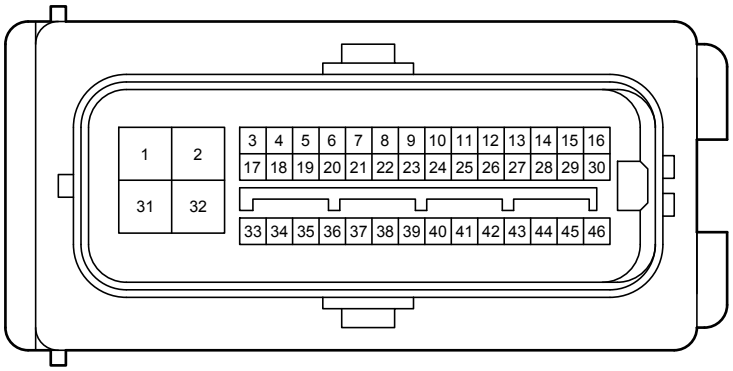


A 25
Black

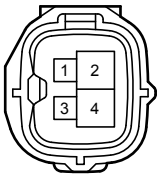


A 26
Gray

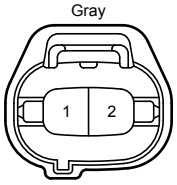


A 32
Black

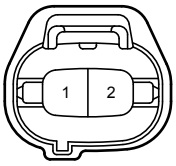

A 34
White

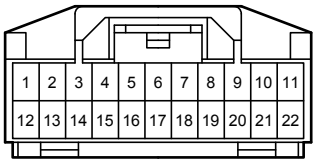

A 37
Blue

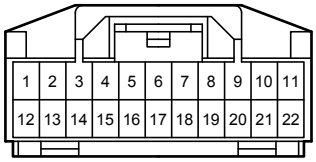


A 45
Gray



A 47
Gray




A 52
Black

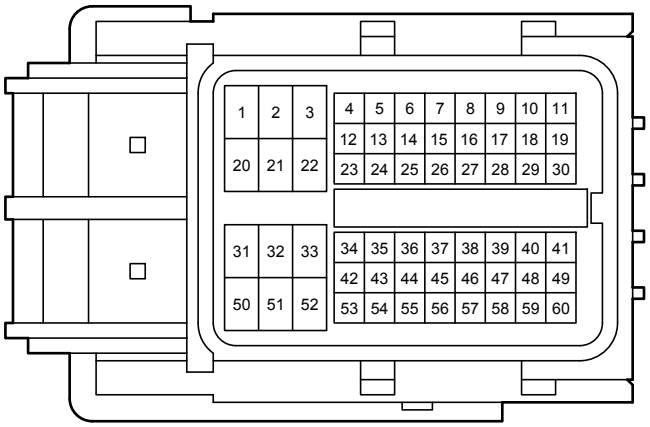


A 53
Black




A 54
Black

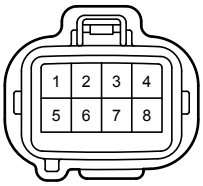

A 55
Black

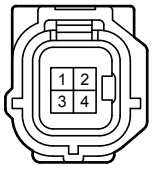


A 56
Black

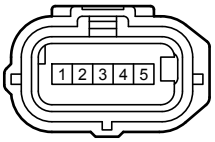

A 57
Black




A 58
Black

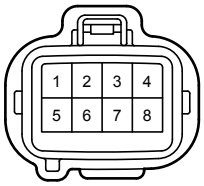

A 59
White

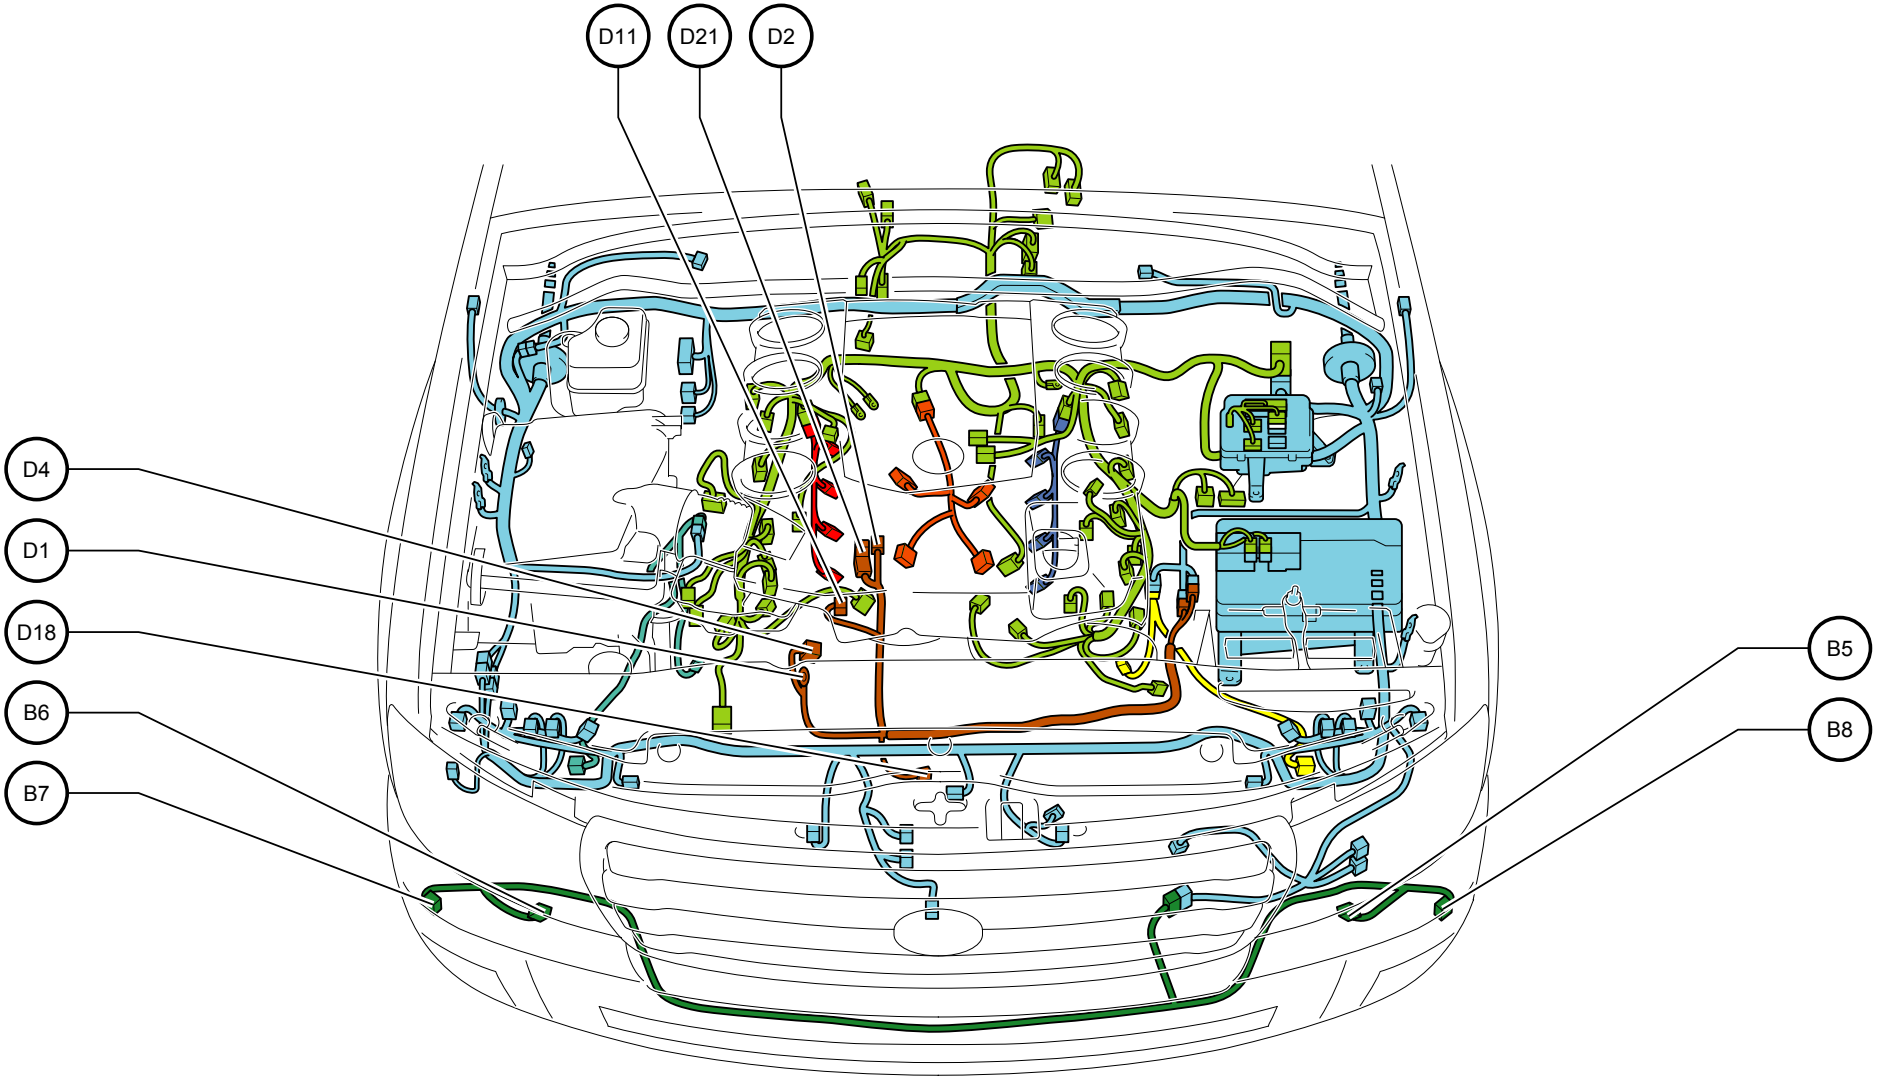



D11
D21
D2
D4
D1
D18
B6
B7
B5
B8


B 5 Fog Light Assembly LH
B 6 Fog Light Assembly RH
B 7 No.1 Ultrasonic Sensor RH
B 8 No.1 Ultrasonic Sensor LH

D 1 Generator Assembly
D 2 Starter Assembly
D 4 Generator Assembly
D 11 Engine Oil Level Sensor
D 18 Oil Pressure Sender Gage Assembly
D 21 Starter Assembly


B 5
Black

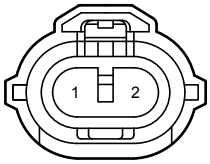


B 6
Black

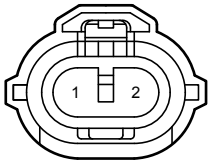


B 7
Black

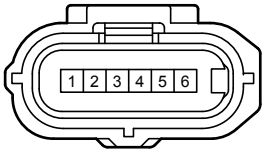

B 8
Black

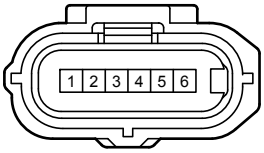


D 1




D 2
Black



D 4
Black

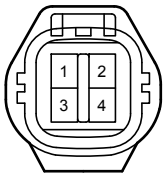


D 11
Gray

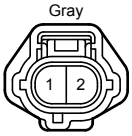


D 18
Black



D 21



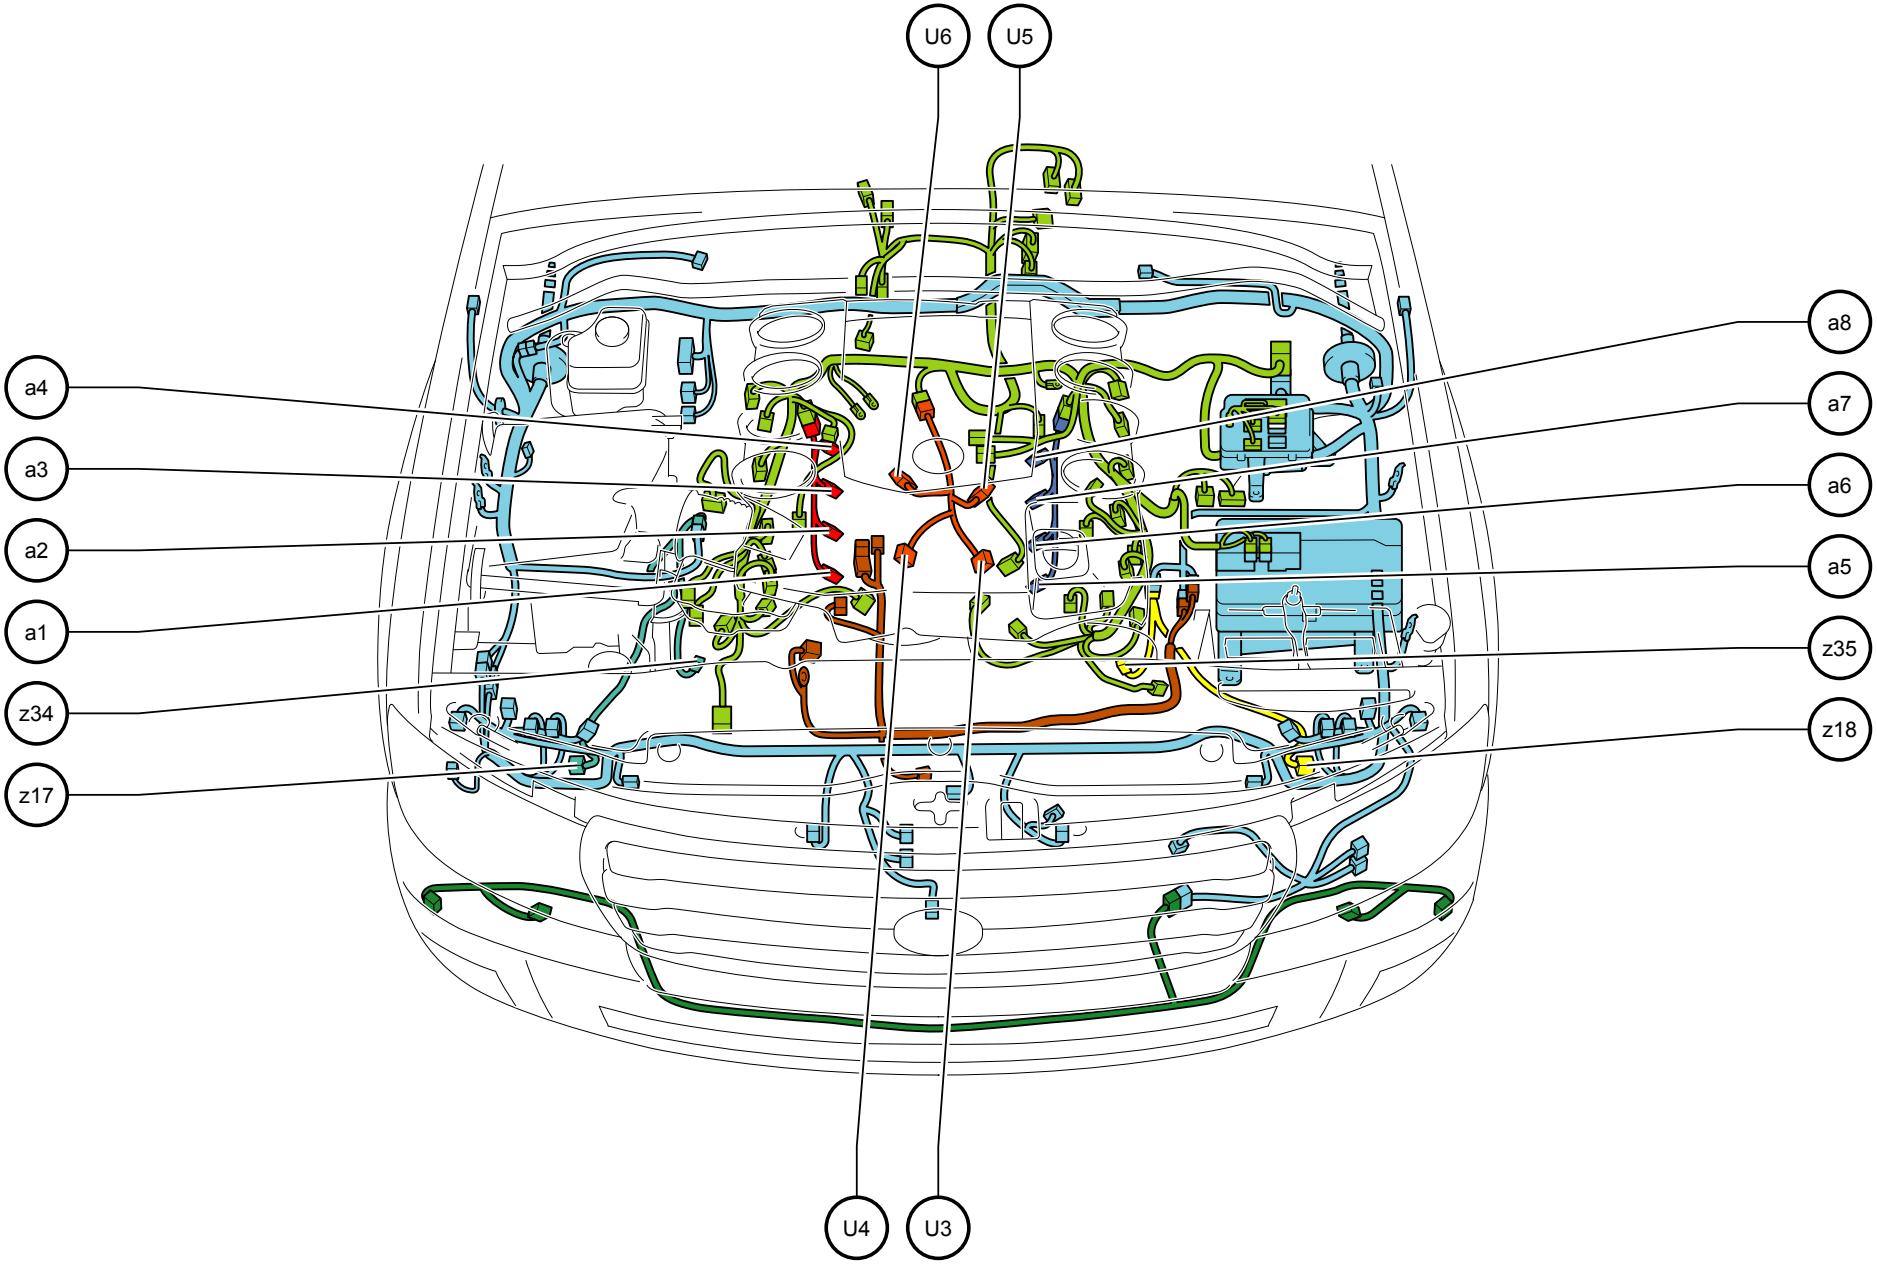

U6
U5
a4
a3
a2
a1
z34
z17
a8
a7
a6
a5
z35
z18
U4
U3

U 3 Knock Control Sensor (Bank 1 Sensor 1)
U 4 Knock Control Sensor (Bank 2 Sensor 1)
U 5 Knock Control Sensor (Bank 1 Sensor 2)
U 6 Knock Control Sensor (Bank 2 Sensor 2)


a 1 Fuel Injector Assembly No.2
a 2 Fuel Injector Assembly No.4
a 3 Fuel Injector Assembly No.6
a 4 Fuel Injector Assembly No.8
a 5 Fuel Injector Assembly No.1
a 6 Fuel Injector Assembly No.3
a 7 Fuel Injector Assembly No.5
a 8 Fuel Injector Assembly No.7

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH


U 3
Gray




U 4
Black




U 5
Gray




U 6
Black




a 1
Black

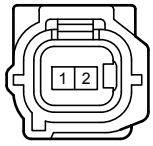


a 2
Black

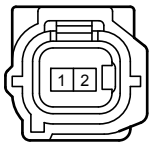


a 3
Black

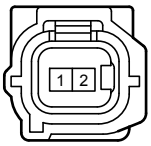


a 4
Black

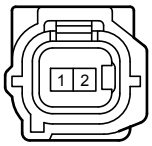


a 5
Black

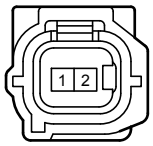


a 6
Black

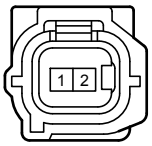

a 7
Black

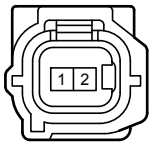

a 8
Black

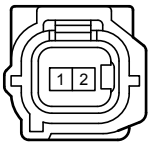


z 17
Black




z 18
Black





z 34
Black

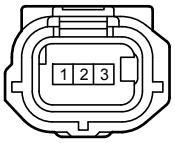



z 35
Black

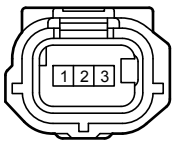


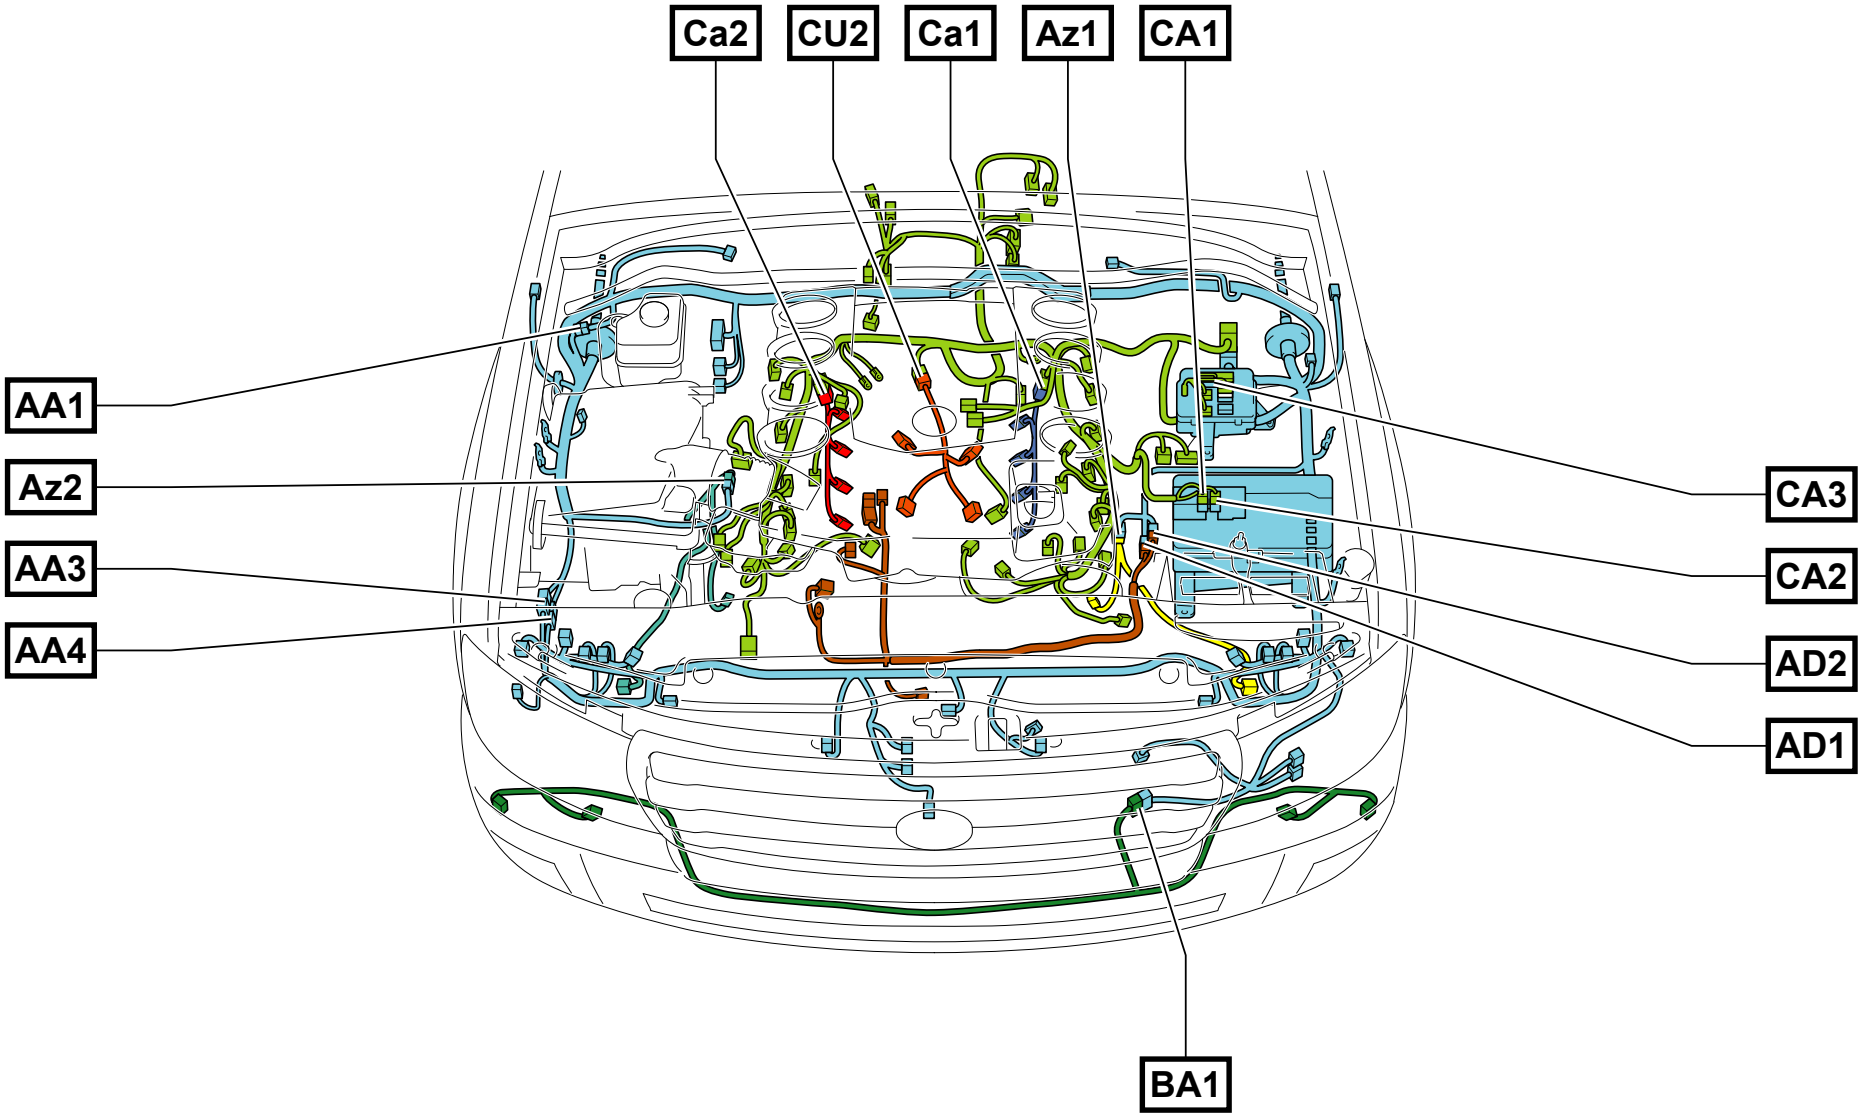

Ca2
CU2
Ca1
Az1
CA1
AA1
Az2
AA3
AA4
CA3
CA2
AD2
AD1
BA1

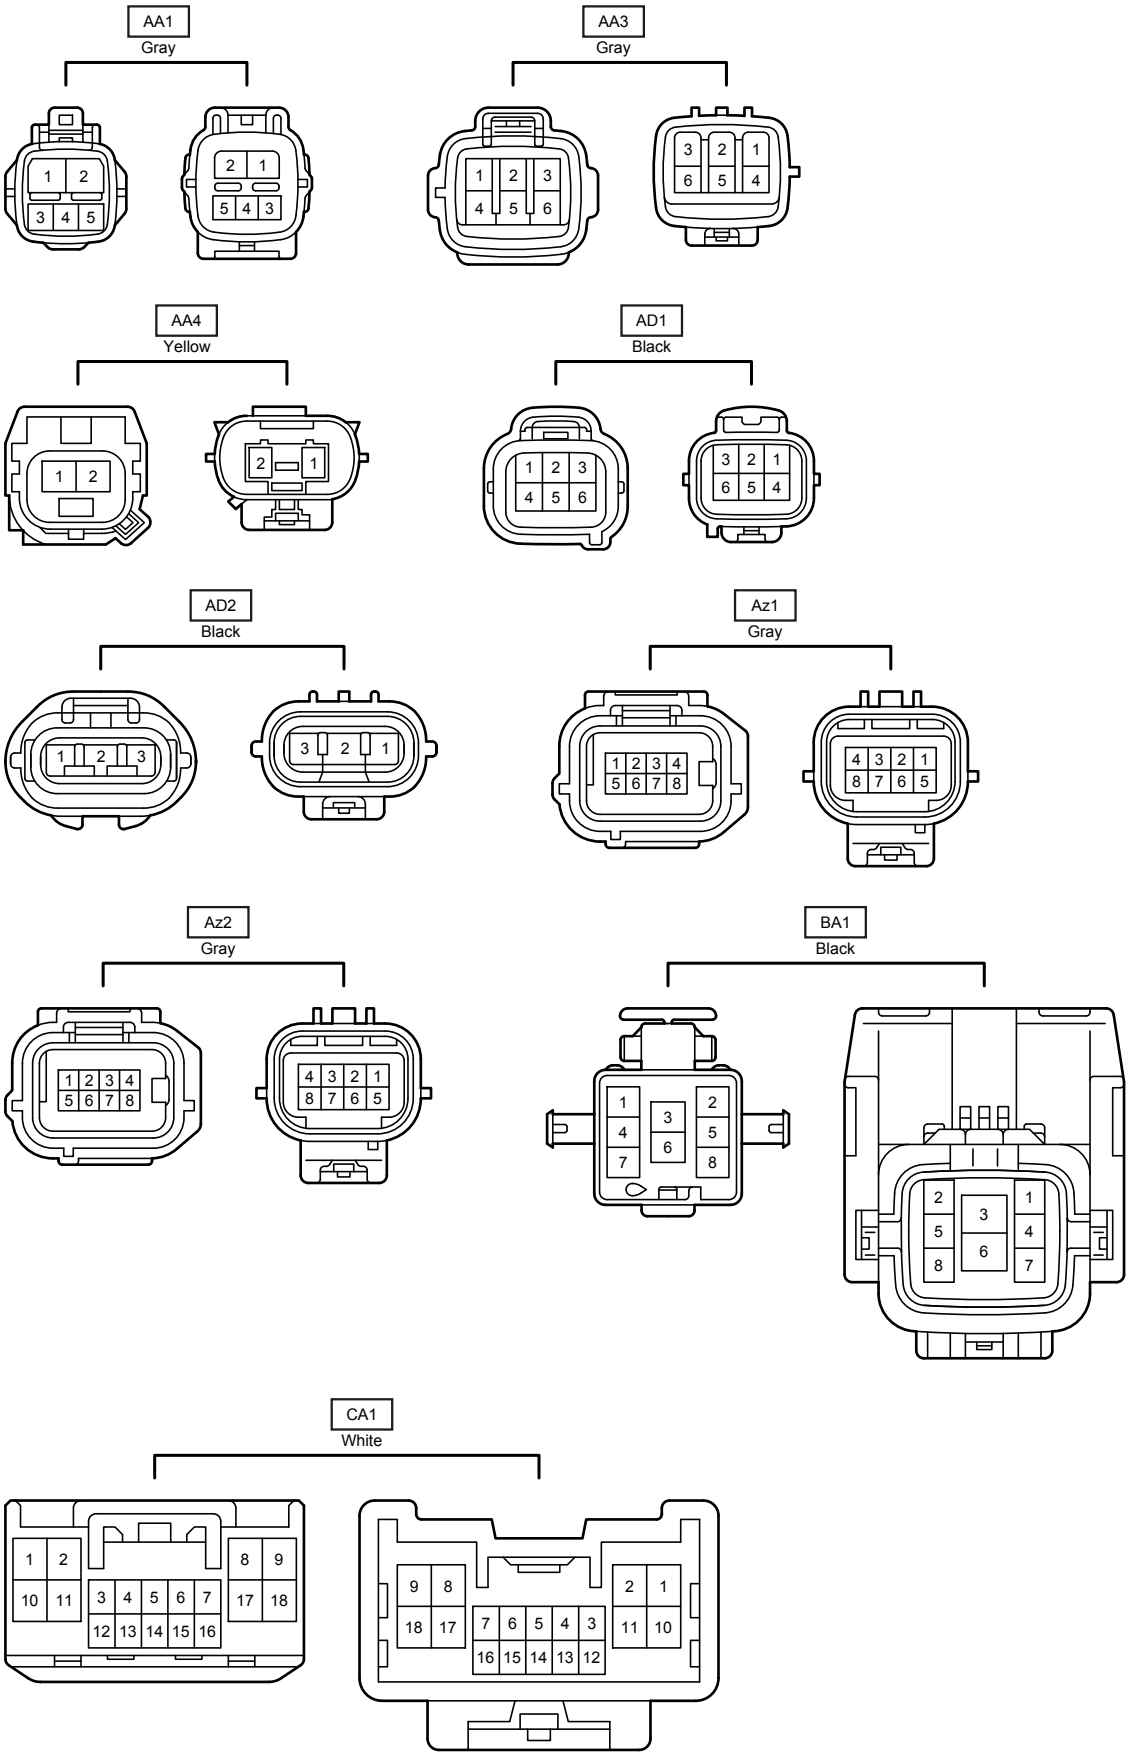

AA1
Gray
AA3
Gray
AA4
Yellow
AD1
Black
AD2
Black
Az1
Gray
Az2
Gray
BA1
Black
CA1
White

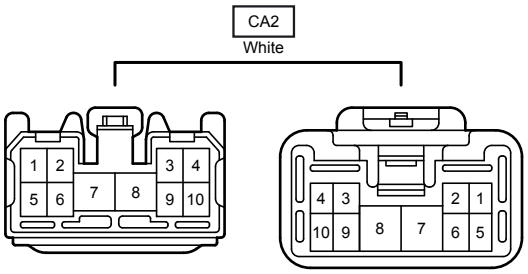

CA2
White
1 2 3 4
5 6 7 8 9 10
4 3 2 1
10 9 8 7 6 5

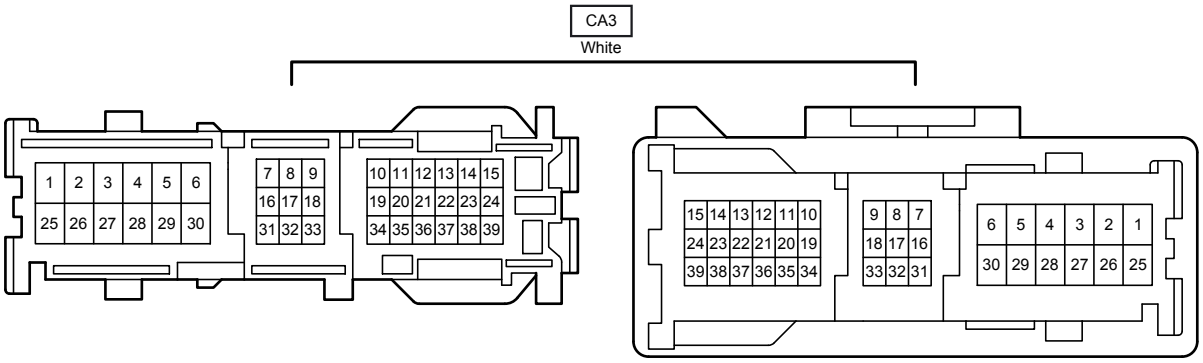

CA3
White
1 2 3 4 5 6
25 26 27 28 29 30
7 8 9
16 17 18
31 32 33
10 11 12 13 14 15
19 20 21 22 23 24
34 35 36 37 38 39
15 14 13 12 11 10
24 23 22 21 20 19
39 38 37 36 35 34
9 8 7
18 17 16
33 32 31
6 5 4 3 2 1
30 29 28 27 26 25

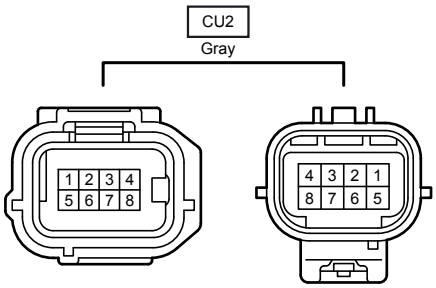
CU2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

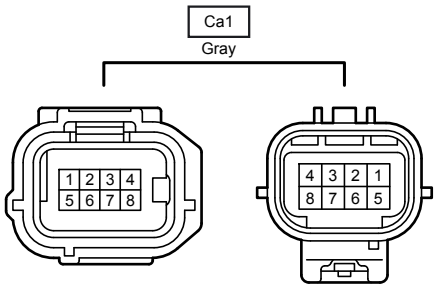
Ca1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

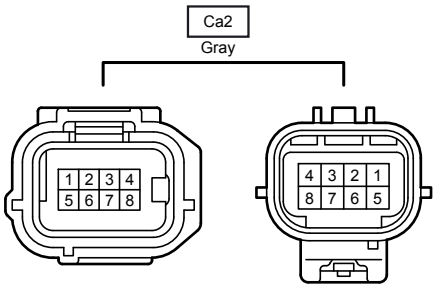

Ca2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

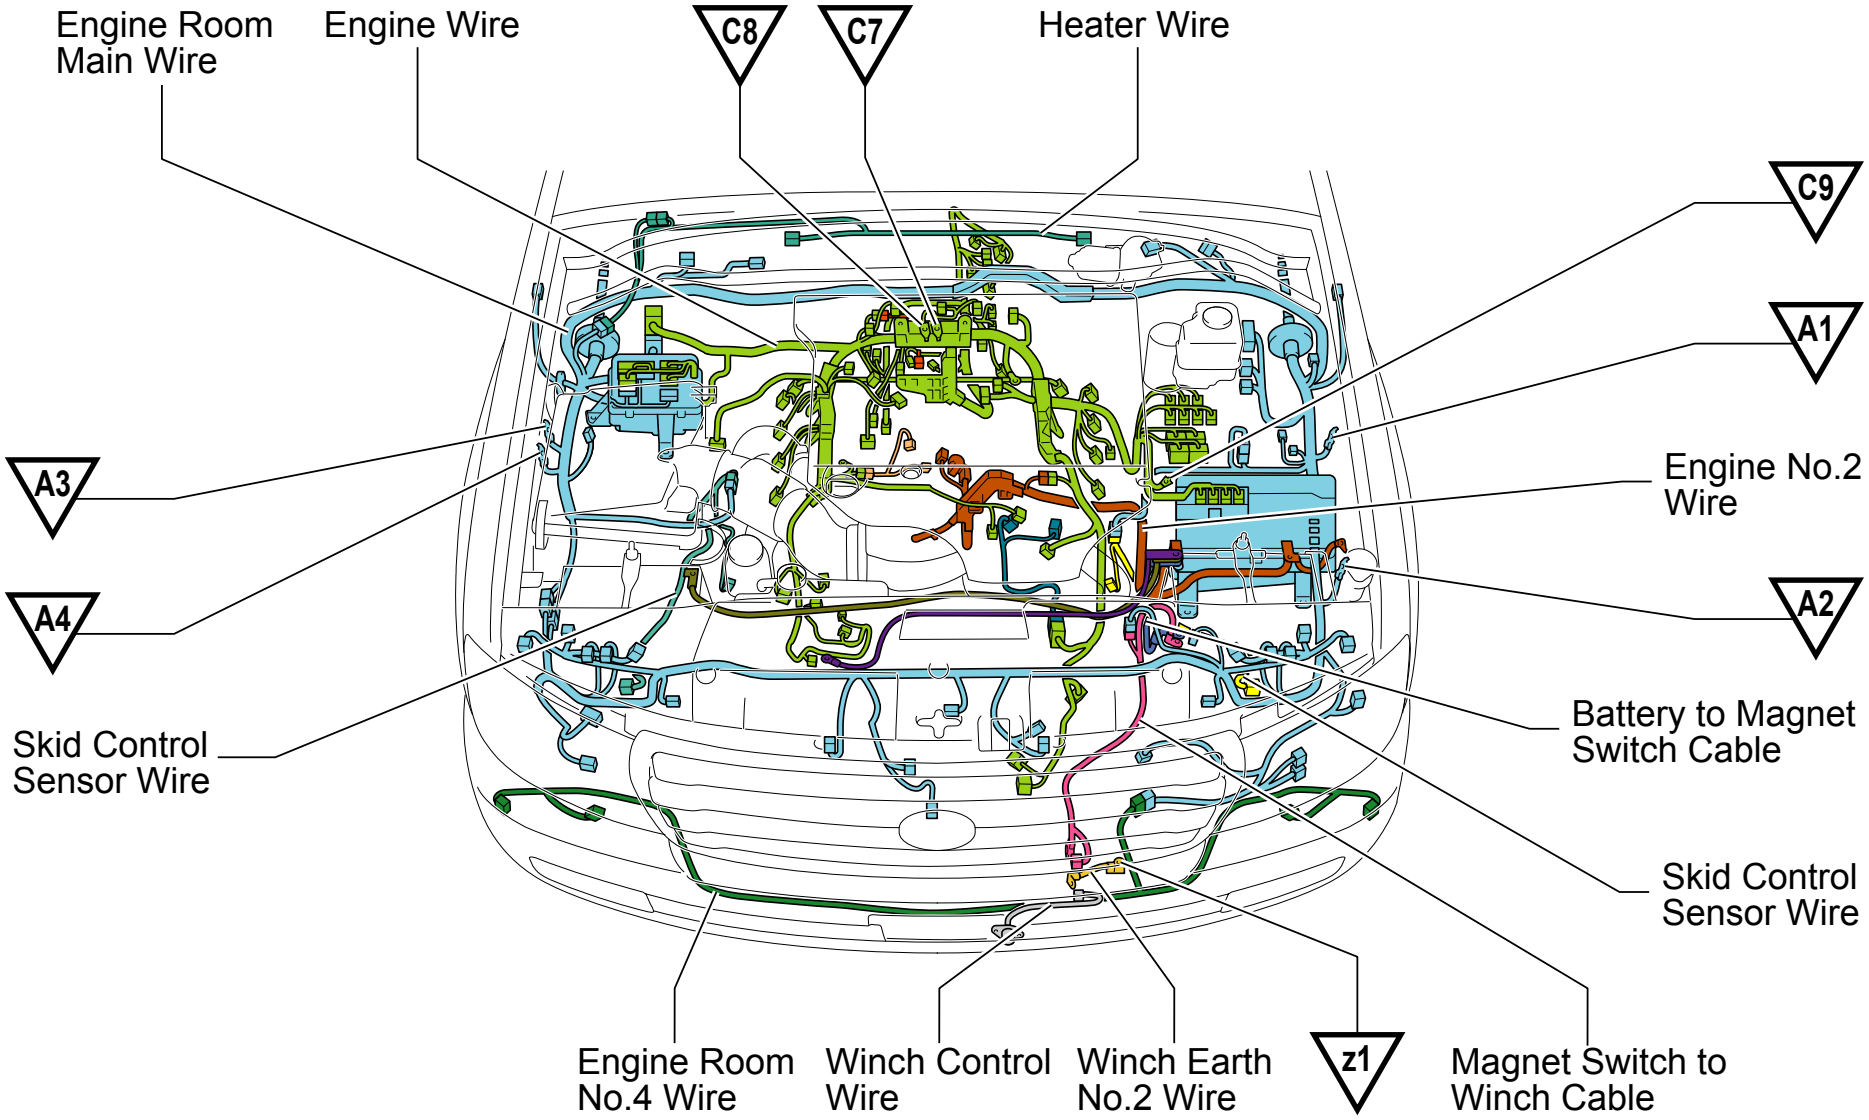
Engine Room Main Wire
Engine Wire
C8
C7
Heater Wire
C9
A1
A3
Engine No.2 Wire
A4
A2
Skid Control Sensor Wire
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine Room No.4 Wire
Winch Control Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable

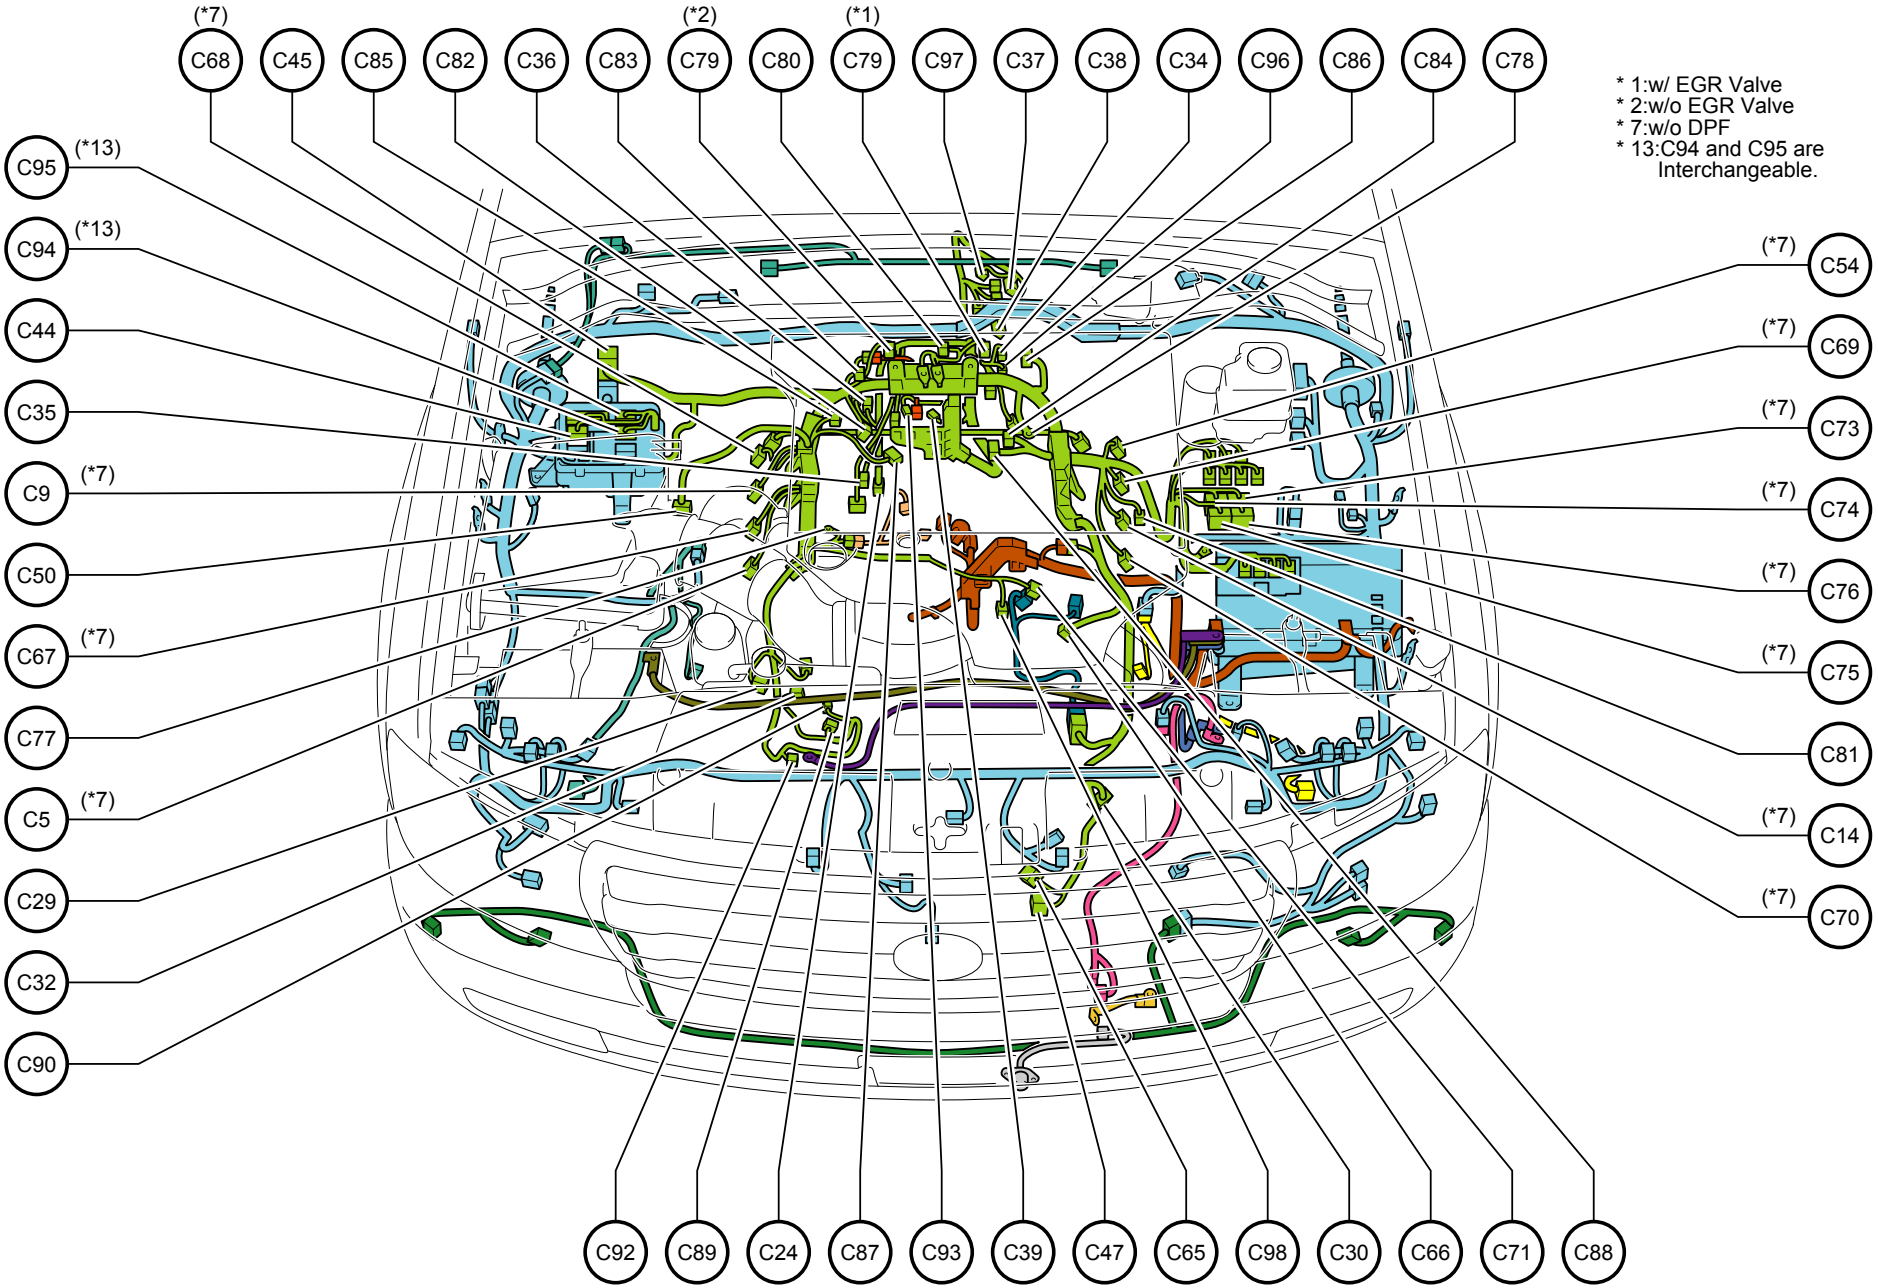

(*7) C68
C45
C85
C82
C36
C83
(*2) C79
C80
(*1) C79
C97
C37
C38
C34
C96
C86
C84
C78
* 1:w/ EGR Valve
* 2:w/o EGR Valve
* 7:w/o DPF
* 13:C94 and C95 are Interchangeable.
(*13) C95
(*13) C94
C44
C35
(*7) C9
C50
(*7) C67
C77
(*7) C5
C29
C32
C90
(*7) C54
(*7) C69
(*7) C73
(*7) C74
(*7) C76
(*7) C75
C81
(*7) C14
(*7) C70
C92
C89
C24
C87
C93
C39
C47
C65
C98
C30
C66
C71
C88

C 5 Fuel Injector Assembly No.1
C 9 Fuel Injector Assembly No.5
C 14 Fuel Injector Assembly No.4
C 24 Park/Neutral Position Switch
C 29 Power Steering Oil Pressure Switch
C 30 Cooler Compressor Assembly
C 32 Engine Oil Level Sensor
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 39 Back-Up Light Switch Assembly
C 44 Junction Connector
C 45 ECM
C 47 Oil Pressure Sender Gage Assembly
C 50 Mass Air Flow Meter
C 54 Fuel Injector Assembly No.8
C 65 Crankshaft Position Sensor
C 66 Camshaft Position Sensor
C 67 Fuel Injector Assembly No.3
C 68 Fuel Injector Assembly No.7
C 69 Fuel Injector Assembly No.6
C 70 Fuel Injector Assembly No.2
C 71 E.F.I. Engine Coolant Temperature Sensor
C 73 Injector Driver (No.1)
C 74 Injector Driver (No.1)
C 75 Injector Driver (No.2)
C 76 Injector Driver (No.2)
C 77 Glow Plug Assembly
C 78 Glow Plug Assembly
C 79 Intake Air Temperature Sensor
C 80 Diesel Turbo Pressure Sensor
C 81 VSV (ACM)
C 82 Fuel Pressure Sensor
C 83 Diesel Throttle Body Assembly RH
C 84 Diesel Throttle Body Assembly LH
C 85 Diesel Throttle Body Assembly RH
C 86 Diesel Throttle Body Assembly LH
C 87 No.1 EGR Valve Assembly
C 88 No.2 EGR Valve Assembly
C 89 DC Motor and Nozzle Vane Position Sensor RH
C 90 DC Motor and Nozzle Vane Position Sensor RH
C 92 Generator Assembly
C 93 Shift Position Switch
C 94 Junction Connector
C 95 Junction Connector
C 96 Electronically Controlled Transmission Solenoid
C 97 Transfer Shift Actuator Assembly
C 98 Viscous with Magnet Clutch Heater Assembly


C 5
Gray

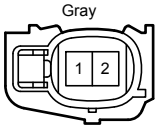


C 9
Gray

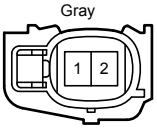

C 14
Gray

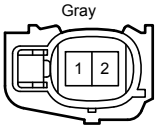


C 24
Gray

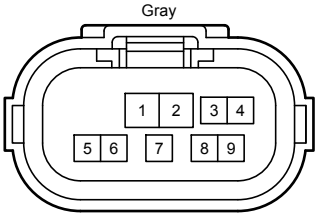

C 29
Black




C 30
Gray

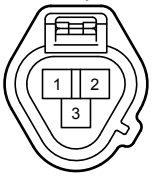


C 32
Gray




C 34
Gray

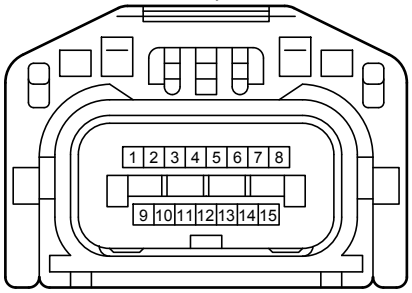


C 35
Black

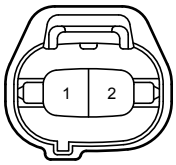


C 36
Black

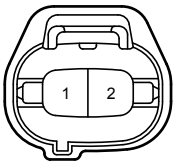


C 37
Black

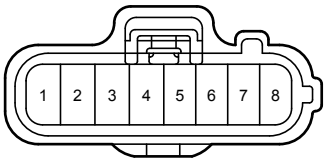


C 38
Dark Gray

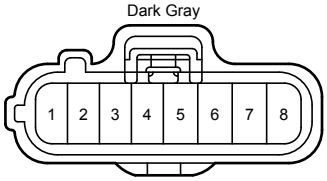


C 39
Gray

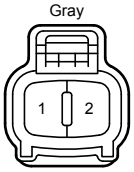

C 44
Blue

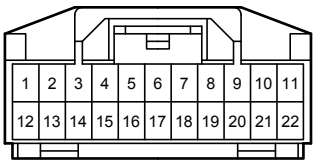


C 45
Black

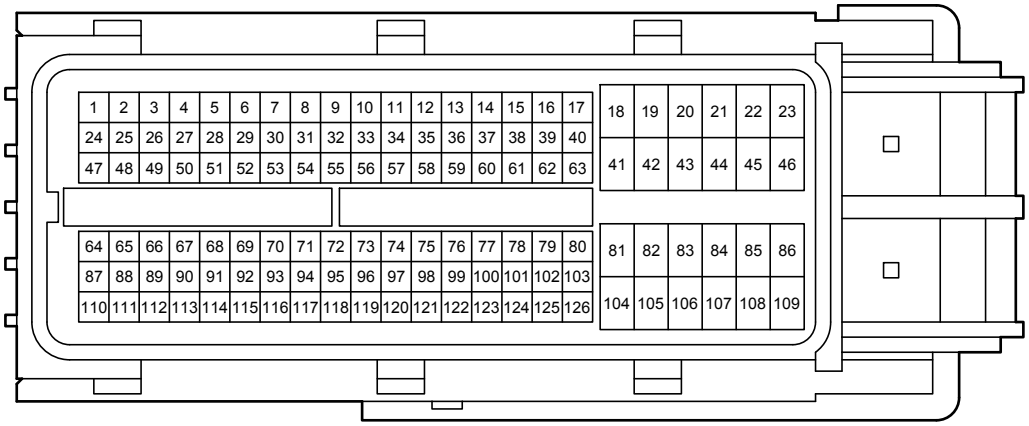


C 47
Black




C 50
Black

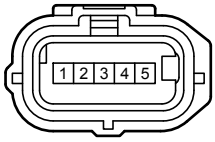

C 54
Gray




C 65
Black

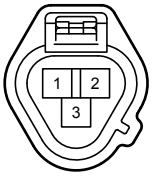


C 66
Black




C 67
Black




C 68
Black



C 69
Black




C 70
Black




C 71
Gray




C 73
Dark Gray

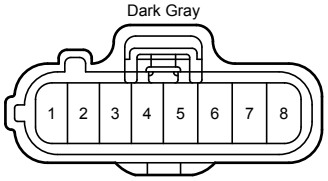


C 74
Black

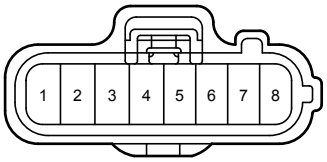


C 75
Dark Gray

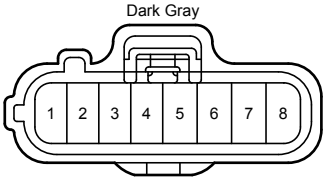


C 76
Black

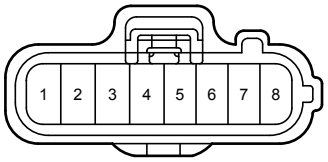

C 77




C 78




C 79
Gray




C 80
Black

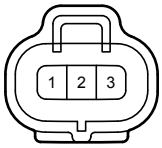

C 81
Black

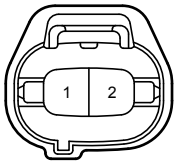

C 82
Black

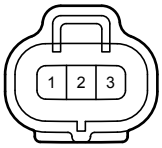

C 83
Black



C 84
Black




C 85
Black




C 86
Black




C 87
Black

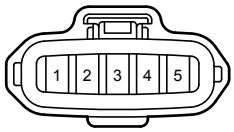


C 88
Black

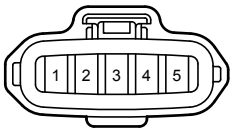


C 89
Black

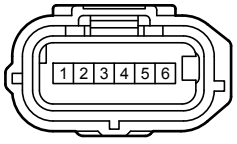


C 90
Black

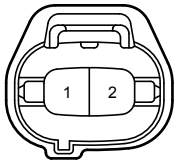


C 92
Black

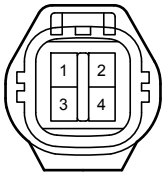


C 93
Gray

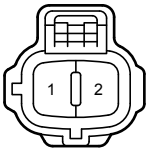


C 94
Gray

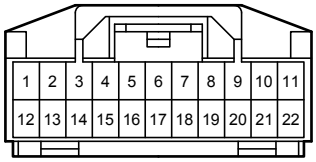


C 95
Black

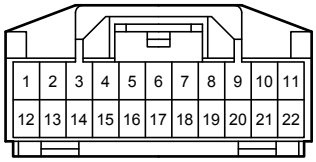

C 96
Gray

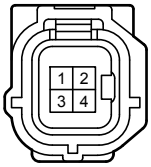


C 97
Black

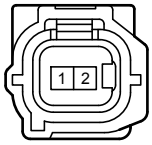


C 98
Gray

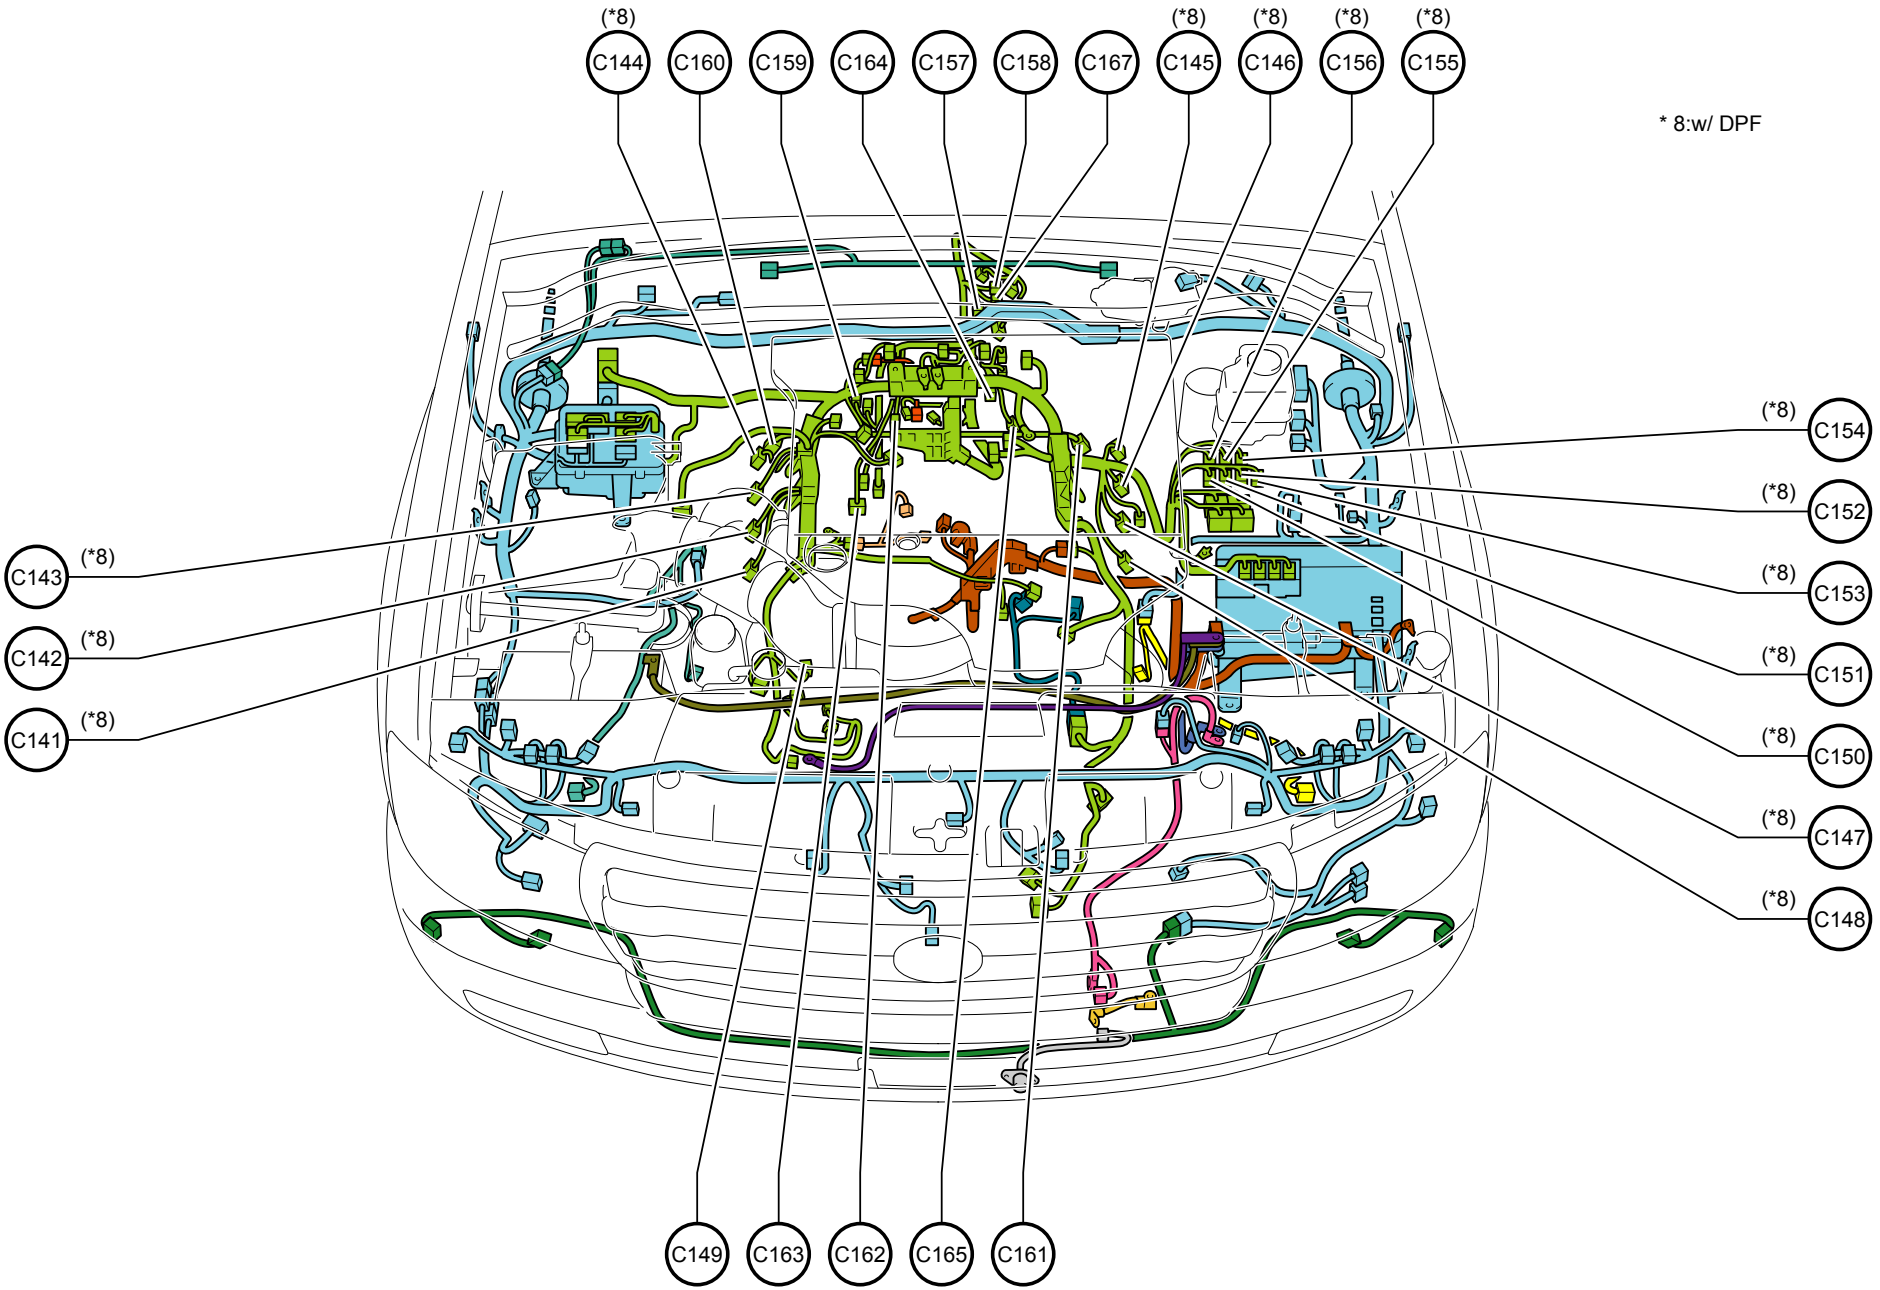



(*8)
C144
C160
C159
C164
C157
C158
C167
(*8)
C145
(*8)
C146
(*8)
C156
(*8)
C155
* 8:w/ DPF
(*8)
C154
(*8)
C152
(*8)
C153
(*8)
C151
(*8)
C150
(*8)
C147
(*8)
C148
(*8)
C143
(*8)
C142
(*8)
C141
C149
C163
C162
C165
C161

C 141 Fuel Injector Assembly No.1
C 142 Fuel Injector Assembly No.3
C 143 Fuel Injector Assembly No.5
C 144 Fuel Injector Assembly No.7
C 145 Fuel Injector Assembly No.8
C 146 Fuel Injector Assembly No.6
C 147 Fuel Injector Assembly No.4
C 148 Fuel Injector Assembly No.2
C 149 Vane Pump Assembly
C 150 Injector Driver (No.1)
C 151 Injector Driver (No.1)
C 152 Injector Driver (No.1)
C 153 Injector Driver (No.1)
C 154 Injector Driver (No.2)
C 155 Injector Driver (No.2)
C 156 Injector Driver (No.2)
C 157 Differential Pressure Sensor LH
C 158 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 159 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 160 Exhaust Fuel Addition Injector Assembly RH
C 161 Exhaust Fuel Addition Injector Assembly LH
C 162 Exhaust Gas Temperature Sensor
C 163 No.2 Exhaust Gas Temperature Sensor
C 164 No.3 Exhaust Gas Temperature Sensor
C 165 No.4 Exhaust Gas Temperature Sensor
C 167 DPF Temperature Sensor LH (Exhaust Gas Temperature Sensor)


C141
Gray

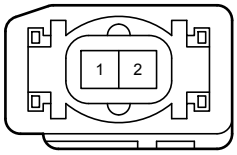


C142
Black

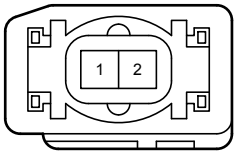


C143
Gray

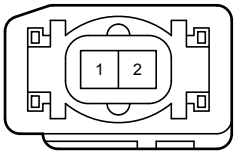


C144
Black

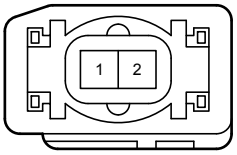


C145
Gray

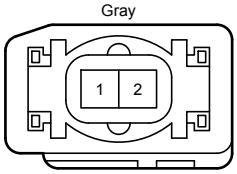


C146
Black

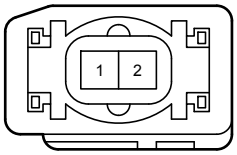


C147
Gray

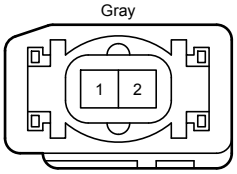


C148
Black

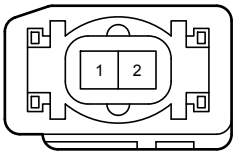


C149
Black

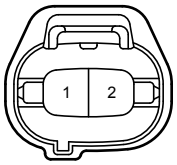


C150
Black



C151
Black

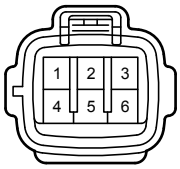


C152
Black

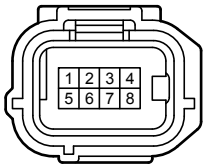


C153
Black




C154
Black

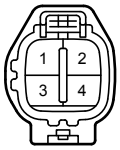


C155
Black

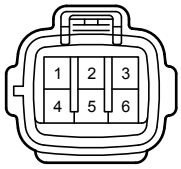

C156
Black

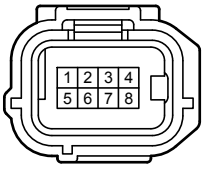

C157
Black

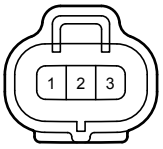

C158
Dark Gray



C159
Dark Gray



C160
Black



C161
Black



C162
Gray



C163
Gray



C164
Gray




C165
Gray




C167
Gray

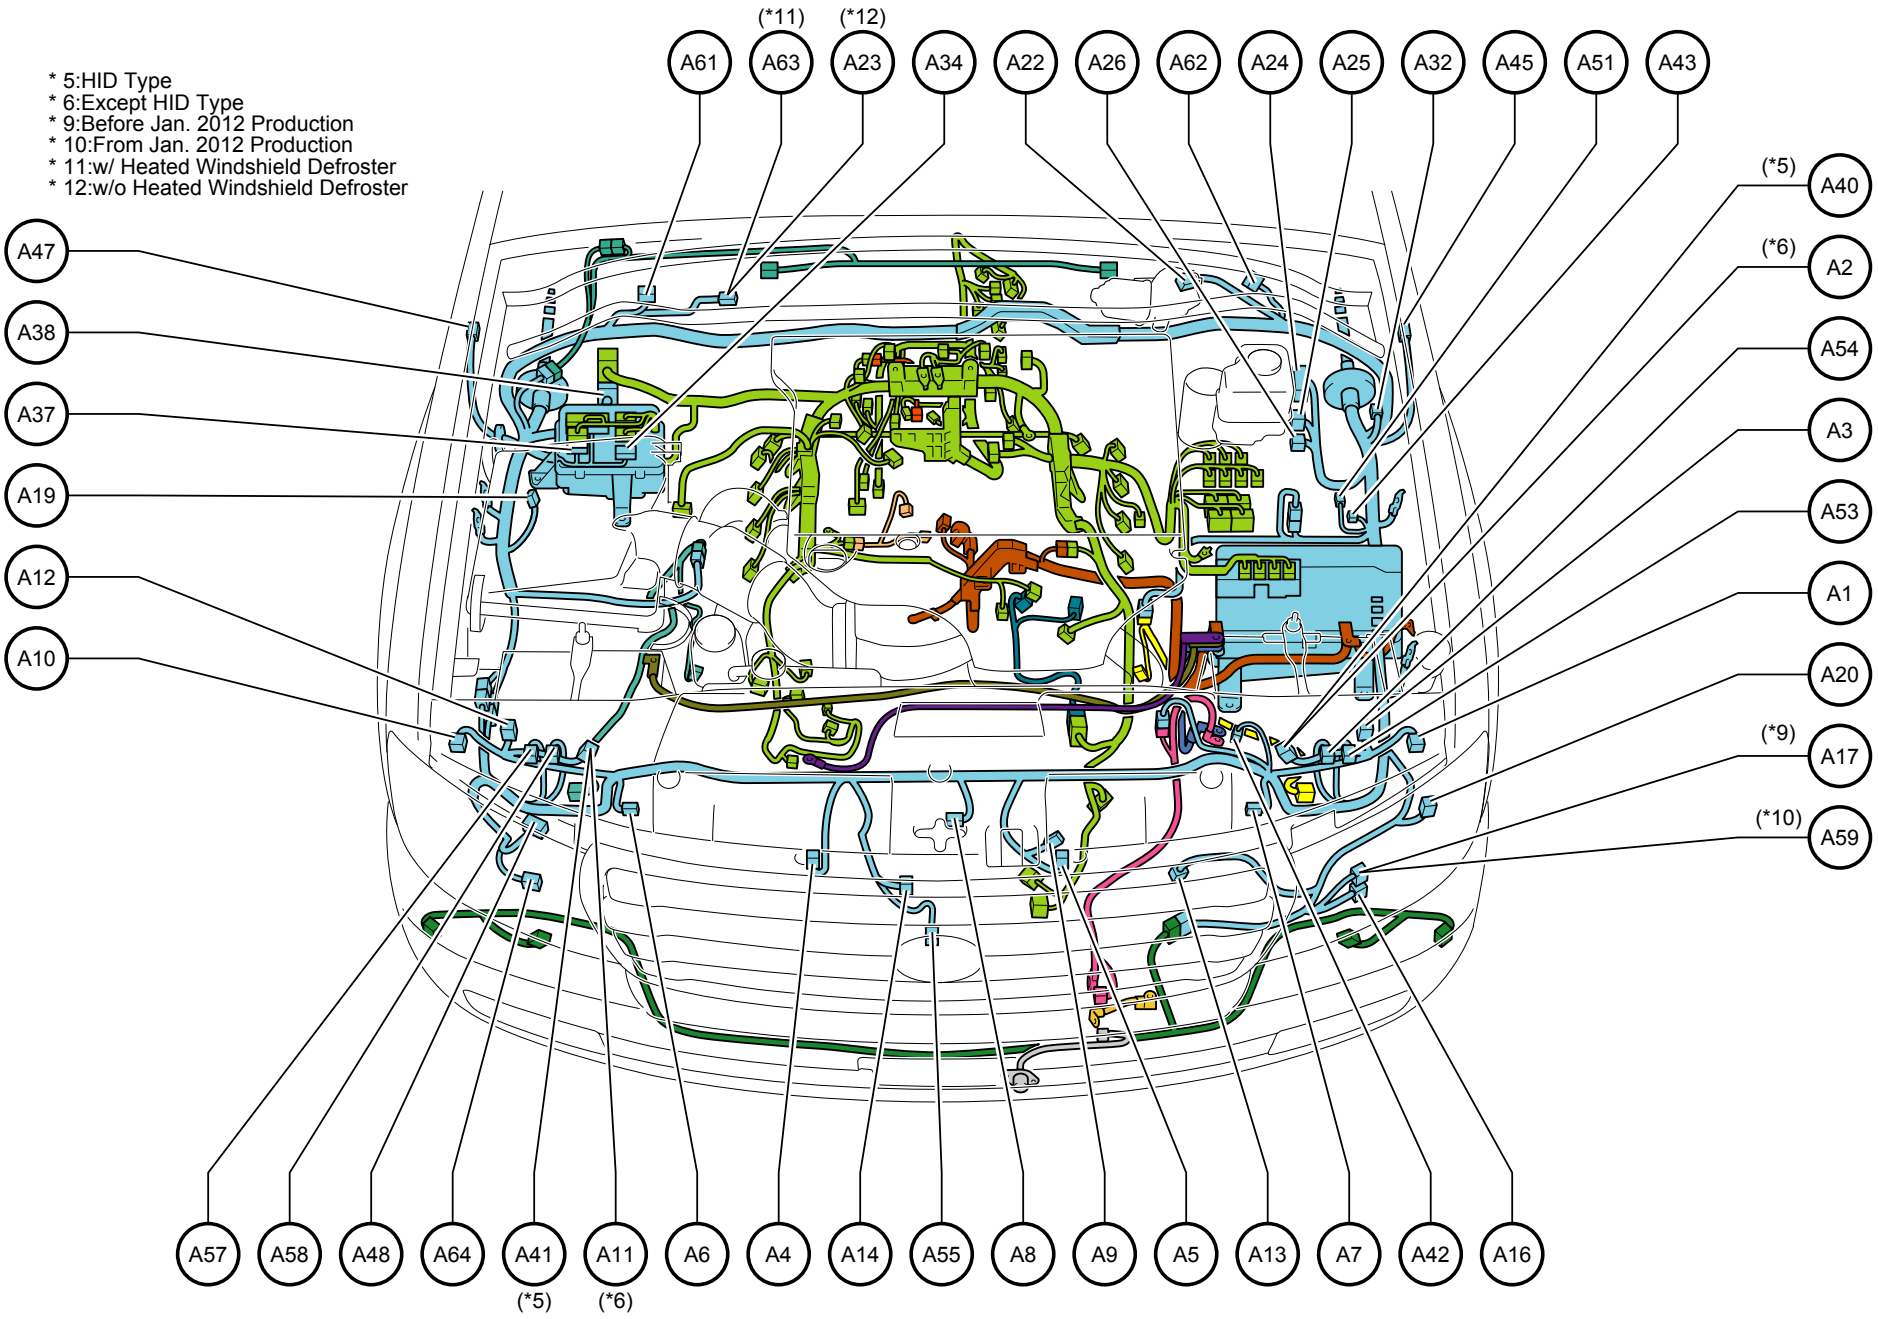



* 5:HID Type
* 6:Except HID Type
* 9:Before Jan. 2012 Production
* 10:From Jan. 2012 Production
* 11:w/ Heated Windshield Defroster
* 12:w/o Heated Windshield Defroster
A61
(*11)
A63
(*12)
A23
A34
A22
A26
A62
A24
A25
A32
A45
A51
A43
A47
A38
A37
A19
A12
A10
(*5)
A40
(*6)
A2
A54
A3
A53
A1
A20
(*9)
A17
(*10)
A59
A57
A58
A48
A64
A41
(*5)
A11
(*6)
A6
A4
A14
A55
A8
A9
A5
A13
A7
A42
A16

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 17 Headlight Cleaner Control Relay and Motor
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 23 Front Wiper Deicer (Windshield Glass)
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 38 ECM
A 40 Headlight Assembly LH
A 41 Headlight Assembly RH
A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
A 43 Level Warning Switch (Fuel Filter Assembly)
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH
A 48 Turbo Motor Driver
A 51 Clogging Switch (Fuel Filter Assembly)
A 53 Headlight Assembly LH
A 54 Headlight Assembly LH
A 55 Front Television Camera Assembly
A 57 Headlight Assembly RH
A 58 Headlight Assembly RH
A 59 Headlight Cleaner Control Relay and Motor
A 61 Heated Windshield Defroster (Windshield Glass)
A 62 Heated Windshield Defroster (Windshield Glass)
A 63 Heated Windshield Defroster (Windshield Glass)
A 64 Front Tire Pressure Warning Antenna


A 1
Gray

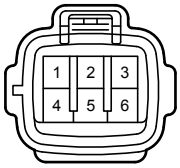


A 2
Black

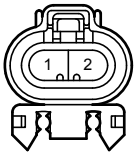


A 3
Black

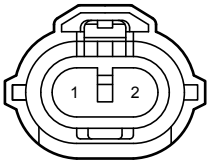


A 4
Black




A 5
Black



A 6
Yellow

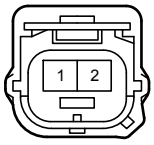

A 7
Yellow

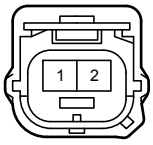


A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

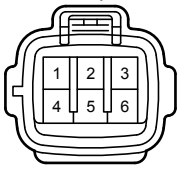


A 11
Black

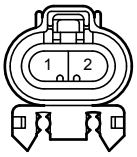

A 12
Black

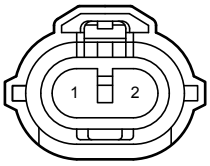

A 13
Black

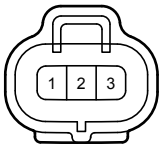

A 14
Black



A 16
Gray




A 17
Black




A 19
Black




A 20
Black




A 22
Black

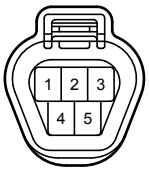


A 23
Gray




A 24
Black

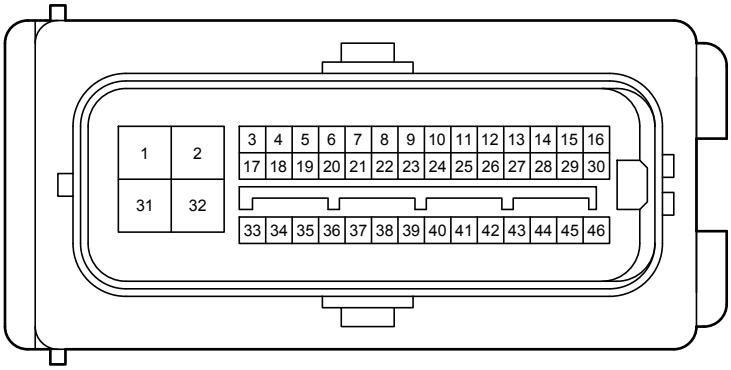


A 25
Black

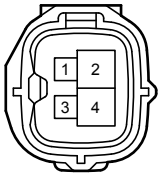


A 26
Gray

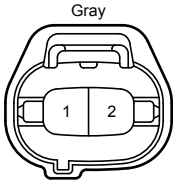


A 32
Black

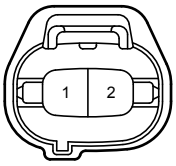


A 34
White

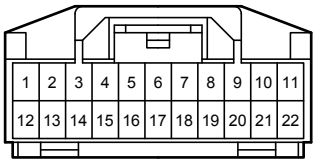

A 37
Blue

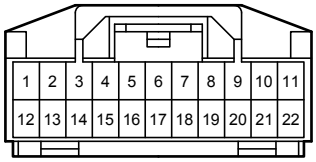

A 38
Black

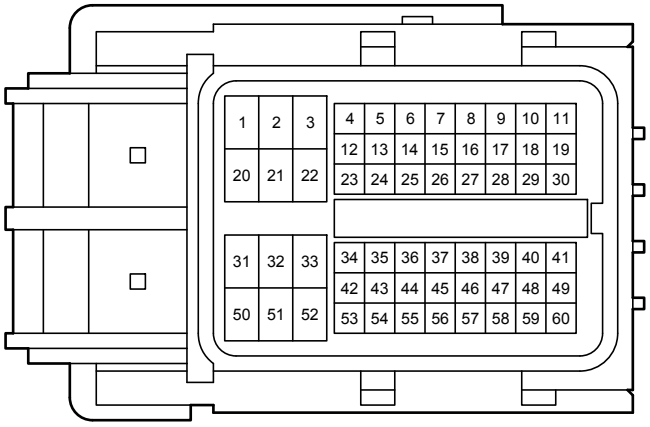


A 40
Gray



A 41
Gray



A 42
Black

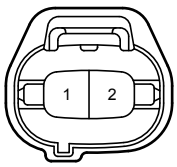

A 43
Gray




A 45
Gray




A 47
Gray



A 48
Black

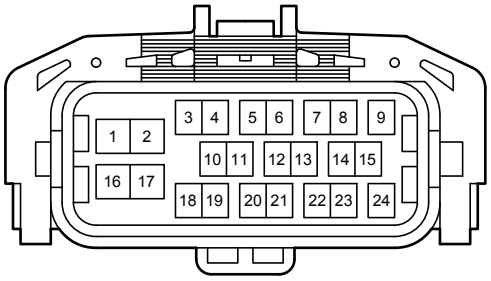


A 51
Black

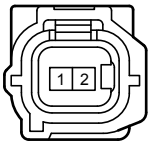


A 53
Black



A 54
Black

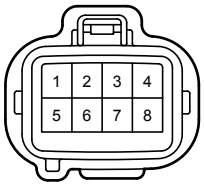


A 55
Black

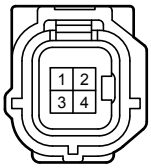

A 57
Black




A 58
Black

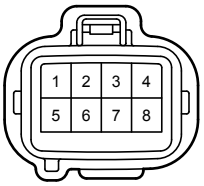


A 59
White




A 61
Black

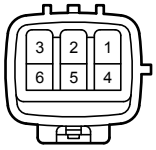


A 62
Gray

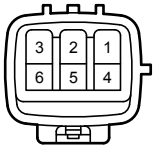


A 63
Gray

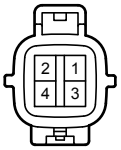

A 64
Gray

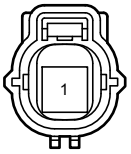

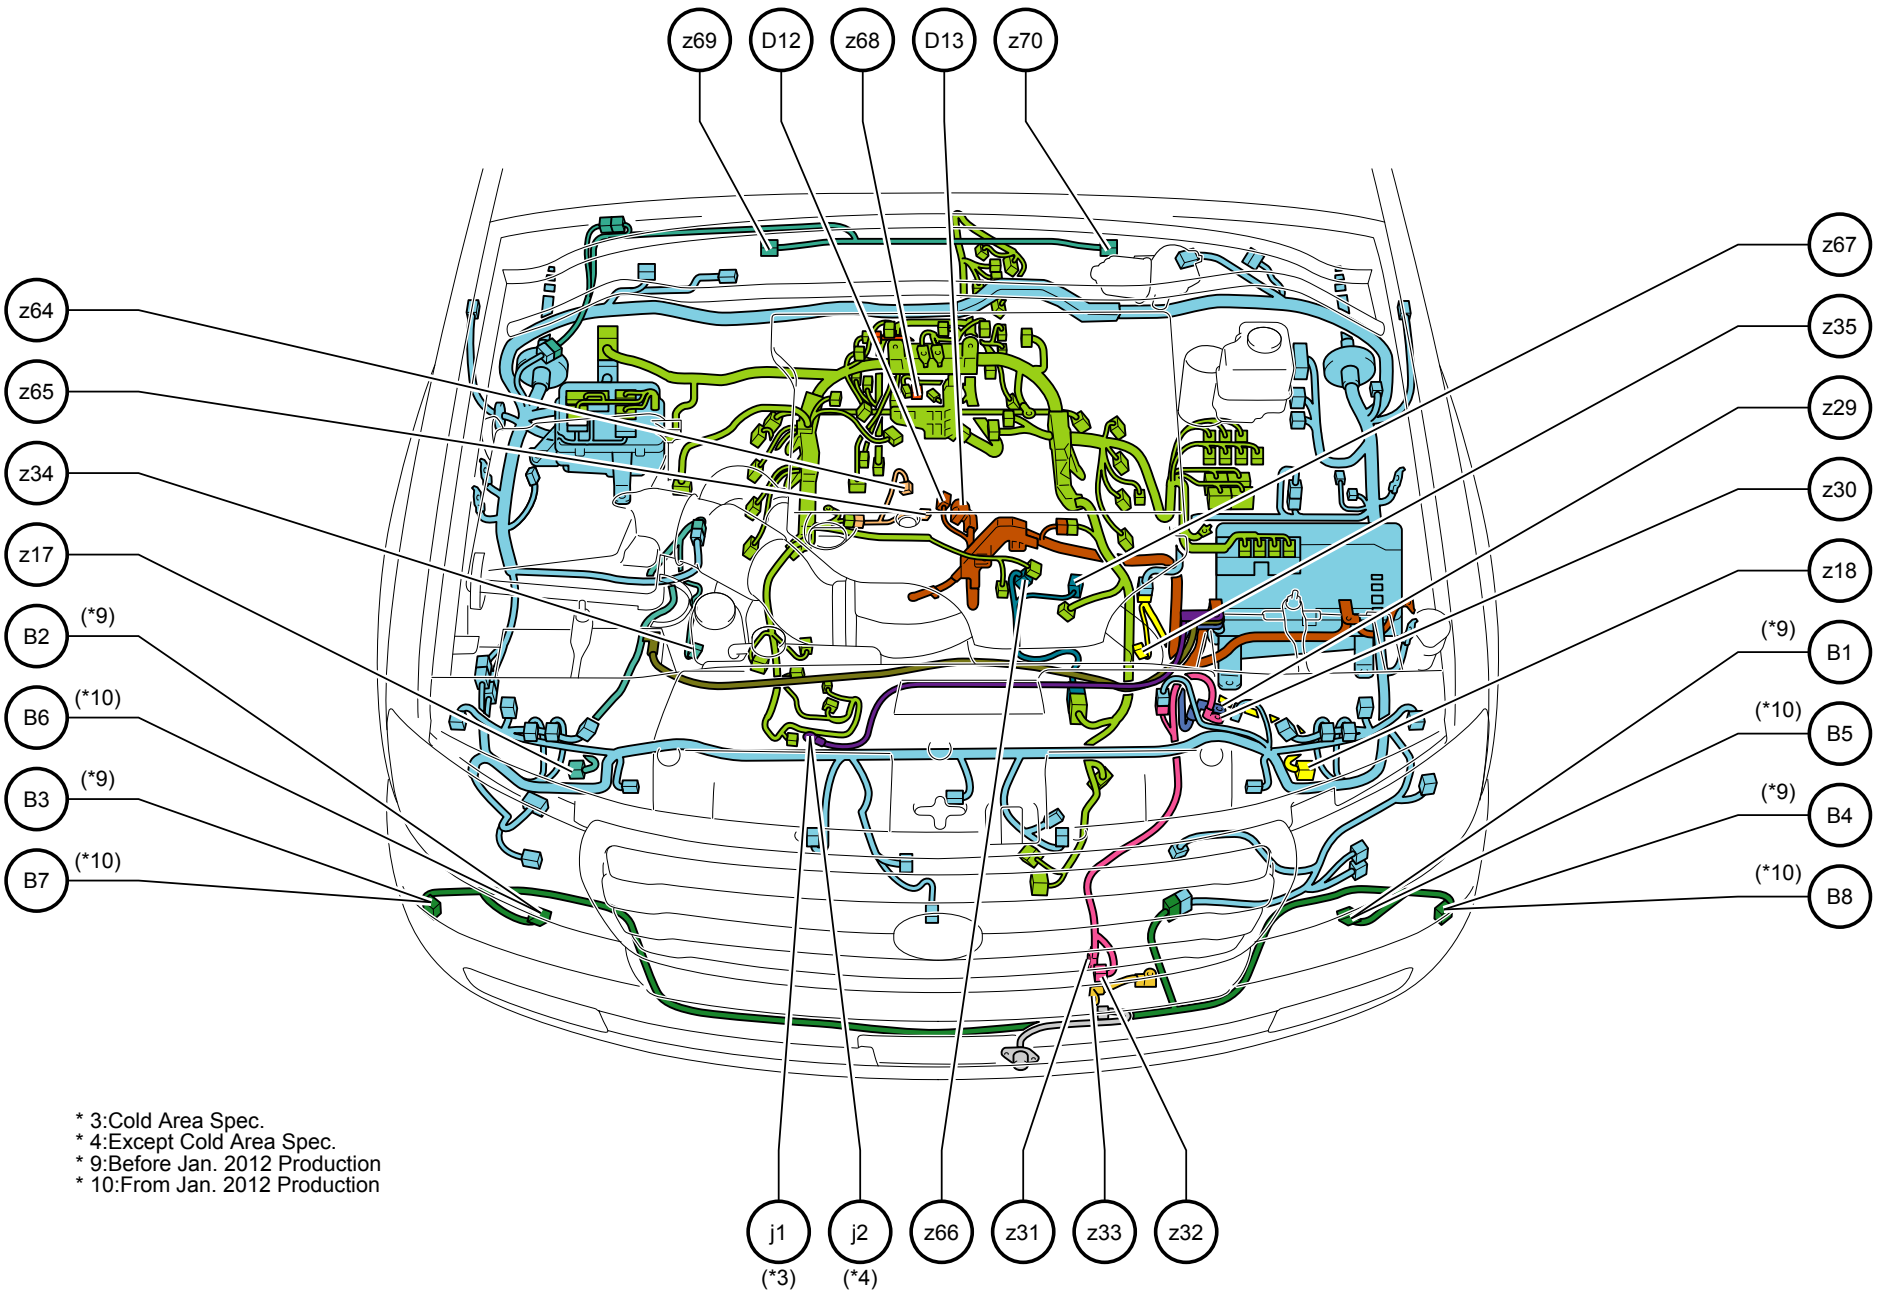

* 3:Cold Area Spec.
* 4:Except Cold Area Spec.
* 9:Before Jan. 2012 Production
* 10:From Jan. 2012 Production


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH
B 5 Fog Light Assembly LH
B 6 Fog Light Assembly RH
B 7 No.1 Ultrasonic Sensor RH
B 8 No.1 Ultrasonic Sensor LH

D 12 Starter Assembly
D 13 Starter Assembly


j 1 Generator Assembly
j 2 Generator Assembly

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
z 31 With Magnet Switch Winch Motor Assembly
z 32 With Magnet Switch Winch Motor Assembly
z 33 With Magnet Switch Winch Motor Assembly
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH
z 64 Suction Control Valve (Injection or Supply Pump Assembly)
z 65 Fuel Temperature Sensor (Injection or Supply Pump Assembly)
z 66 DC Motor and Nozzle Vane Position Sensor LH
z 67 DC Motor and Nozzle Vane Position Sensor LH
z 68 Pressure Discharge Valve
z 69 Washer Nozzle Sub-Assembly RH
z 70 Washer Nozzle Sub-Assembly LH


B 1
Brown

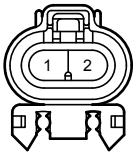


B 2
Brown

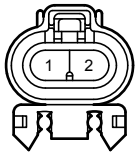


B 3
Black

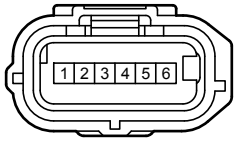


B 4
Black

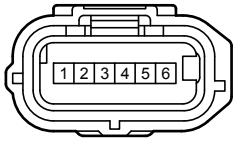


B 5
Black

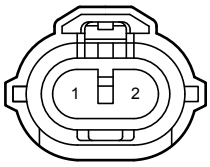


B 6
Black

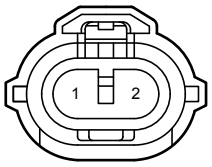

B 7
Black

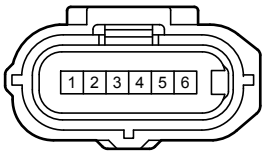


B 8
Black

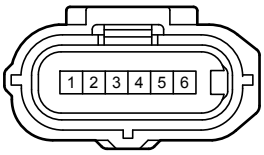


D 12
Black




D 13



j 1



j 2




z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

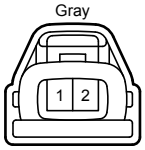


z 33



z 34
Black

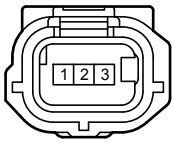

z 35
Black

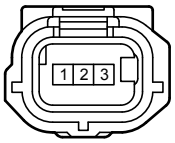


z 64
Gray




z 65
Gray




z 66
Black

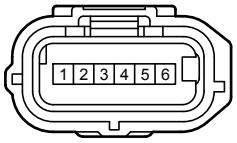


z 67
Gray

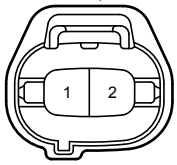


z 68
Gray

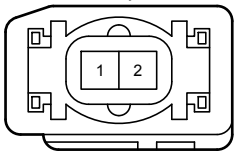



z 69
Gray

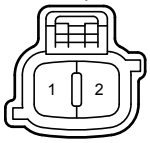



z 70
Gray

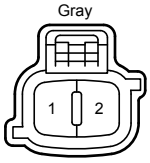


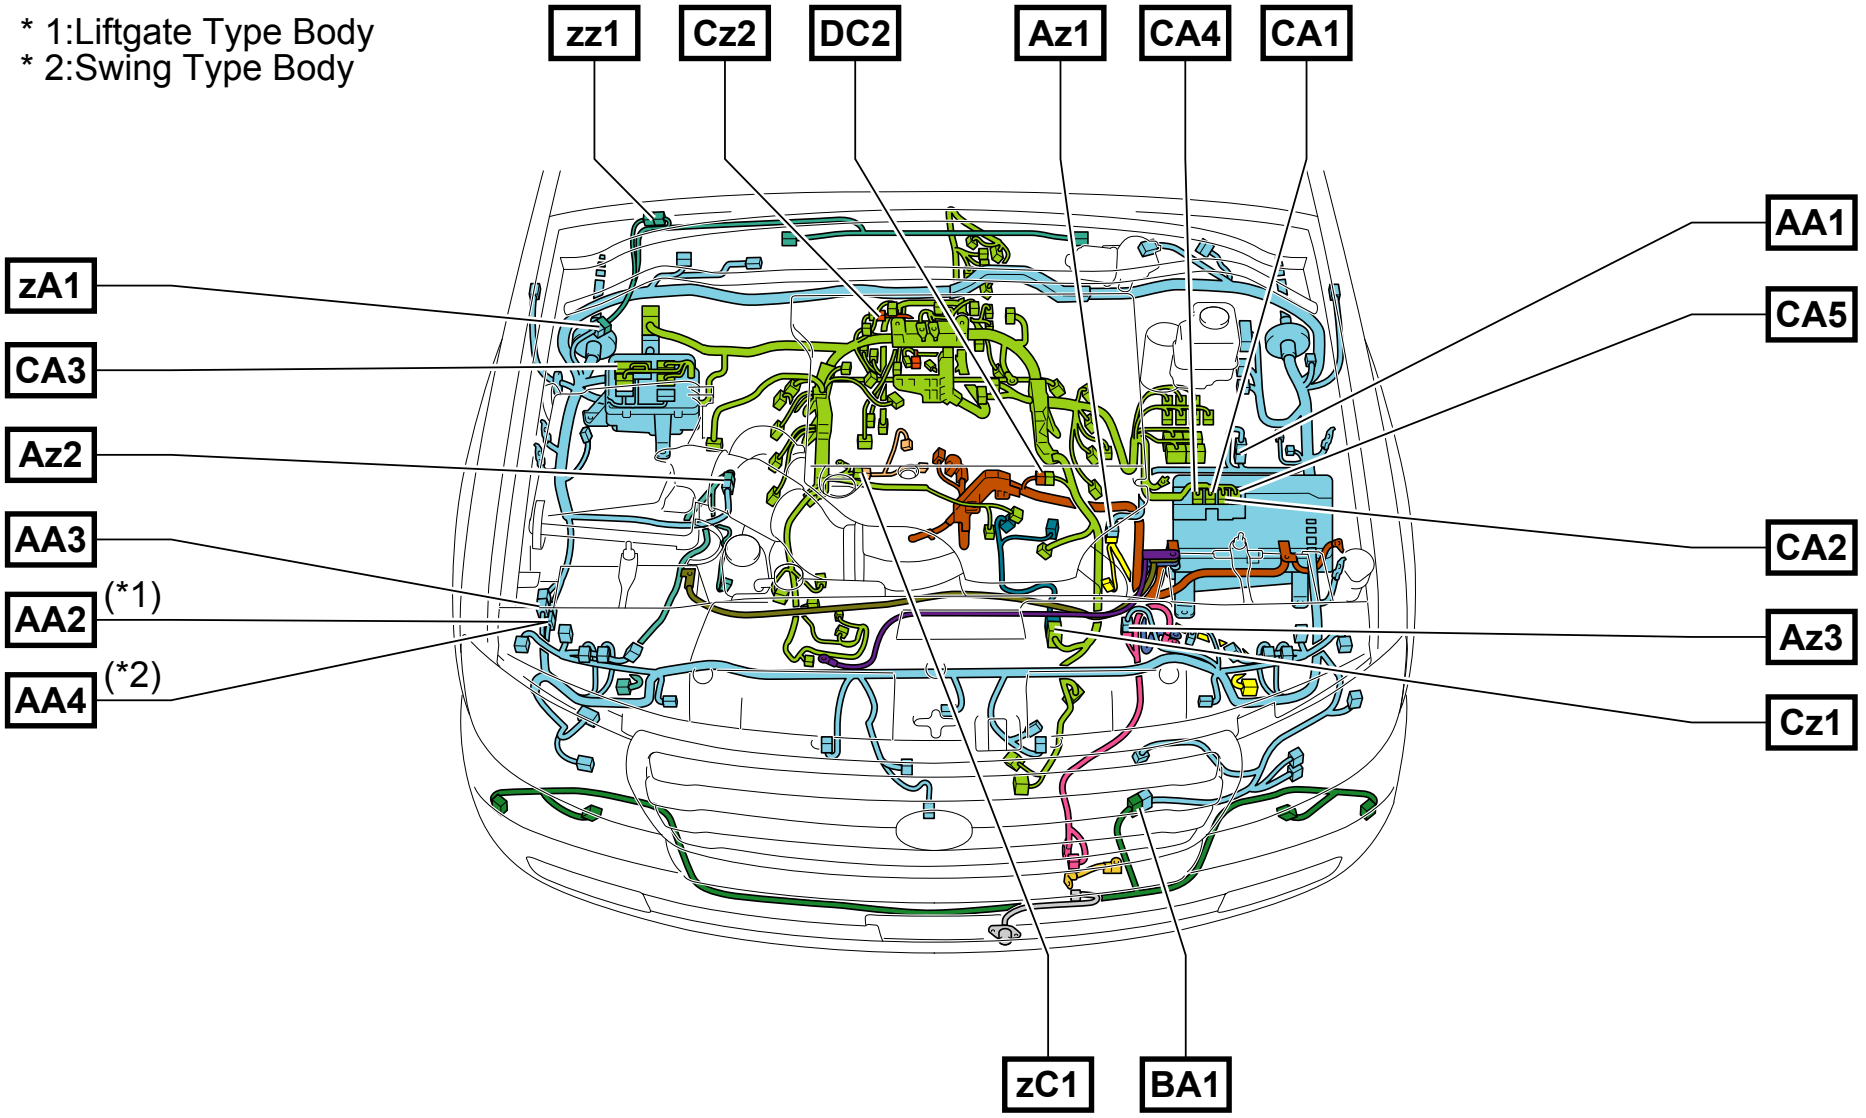

* 1:Liftgate Type Body
* 2:Swing Type Body
zz1
Cz2
DC2
Az1
CA4
CA1
zA1
CA3
Az2
AA3
AA2
(*1)
AA4
(*2)
AA1
CA5
CA2
Az3
Cz1
zC1
BA1

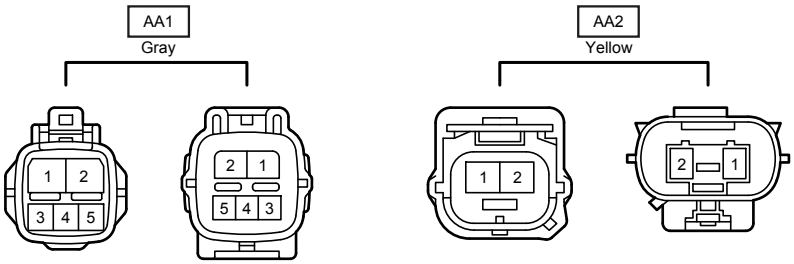
AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1

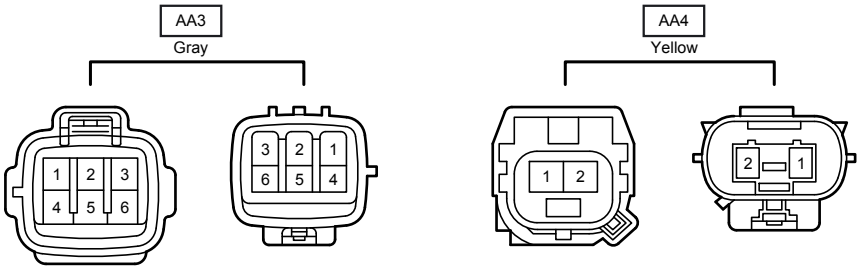

AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AA4
Yellow
1 2
2 1

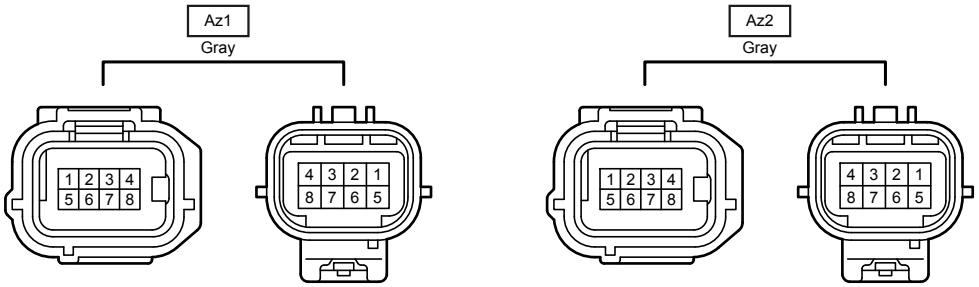
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

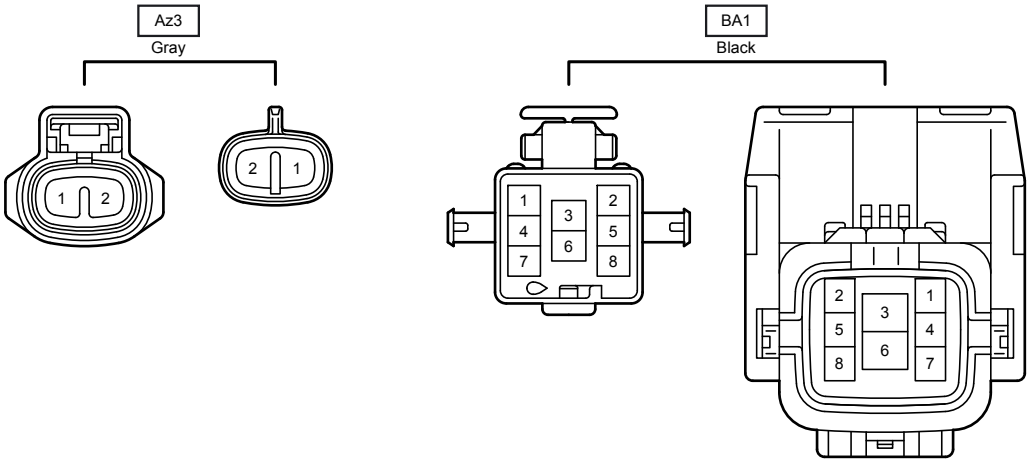

Az3
Gray
1 2
2 1
BA1
Black
1 2 3
4 5 6 7 8
2 3 1
5 4
8 6 7

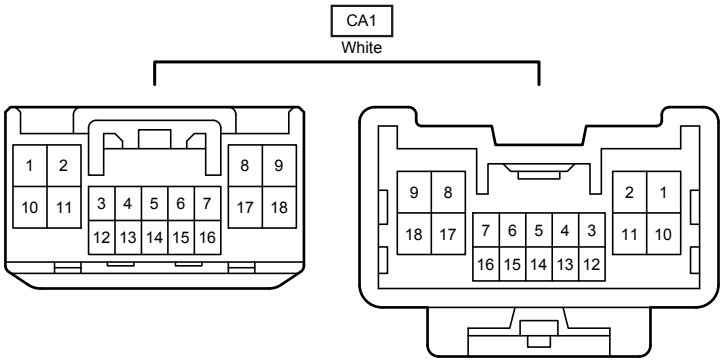
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10


CA2
White

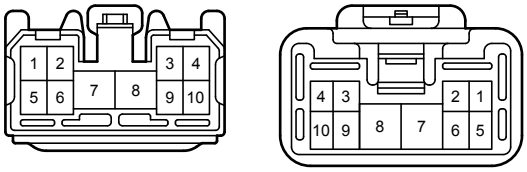


CA3
White

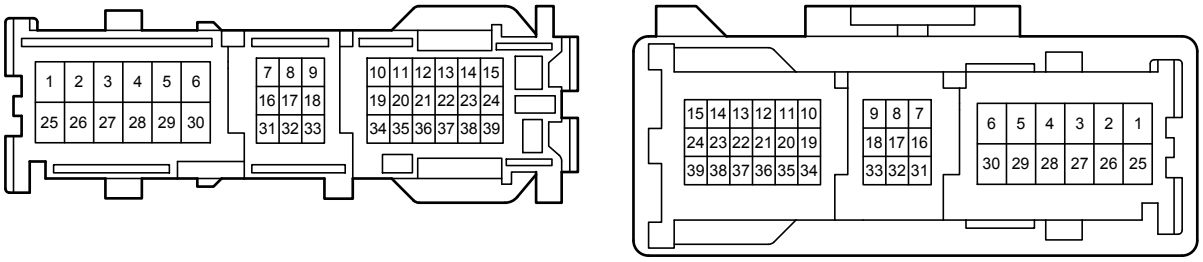


CA4
White

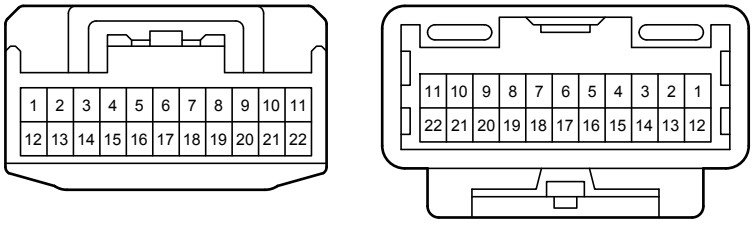


CA5
White

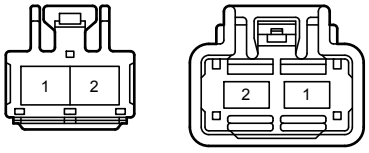


Cz1
Gray

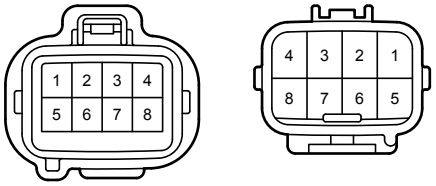


Cz2
Black




DC2
Gray

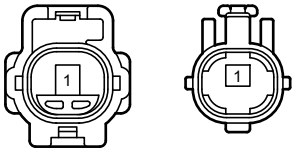


zA1
White

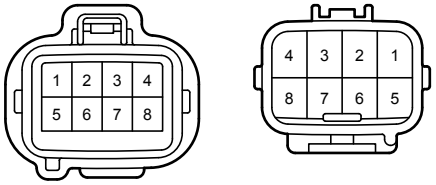



zC1
Dark Gray Gray

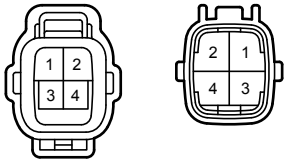

zz1
Black

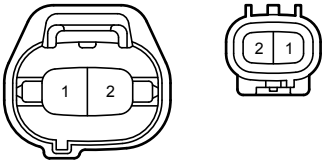


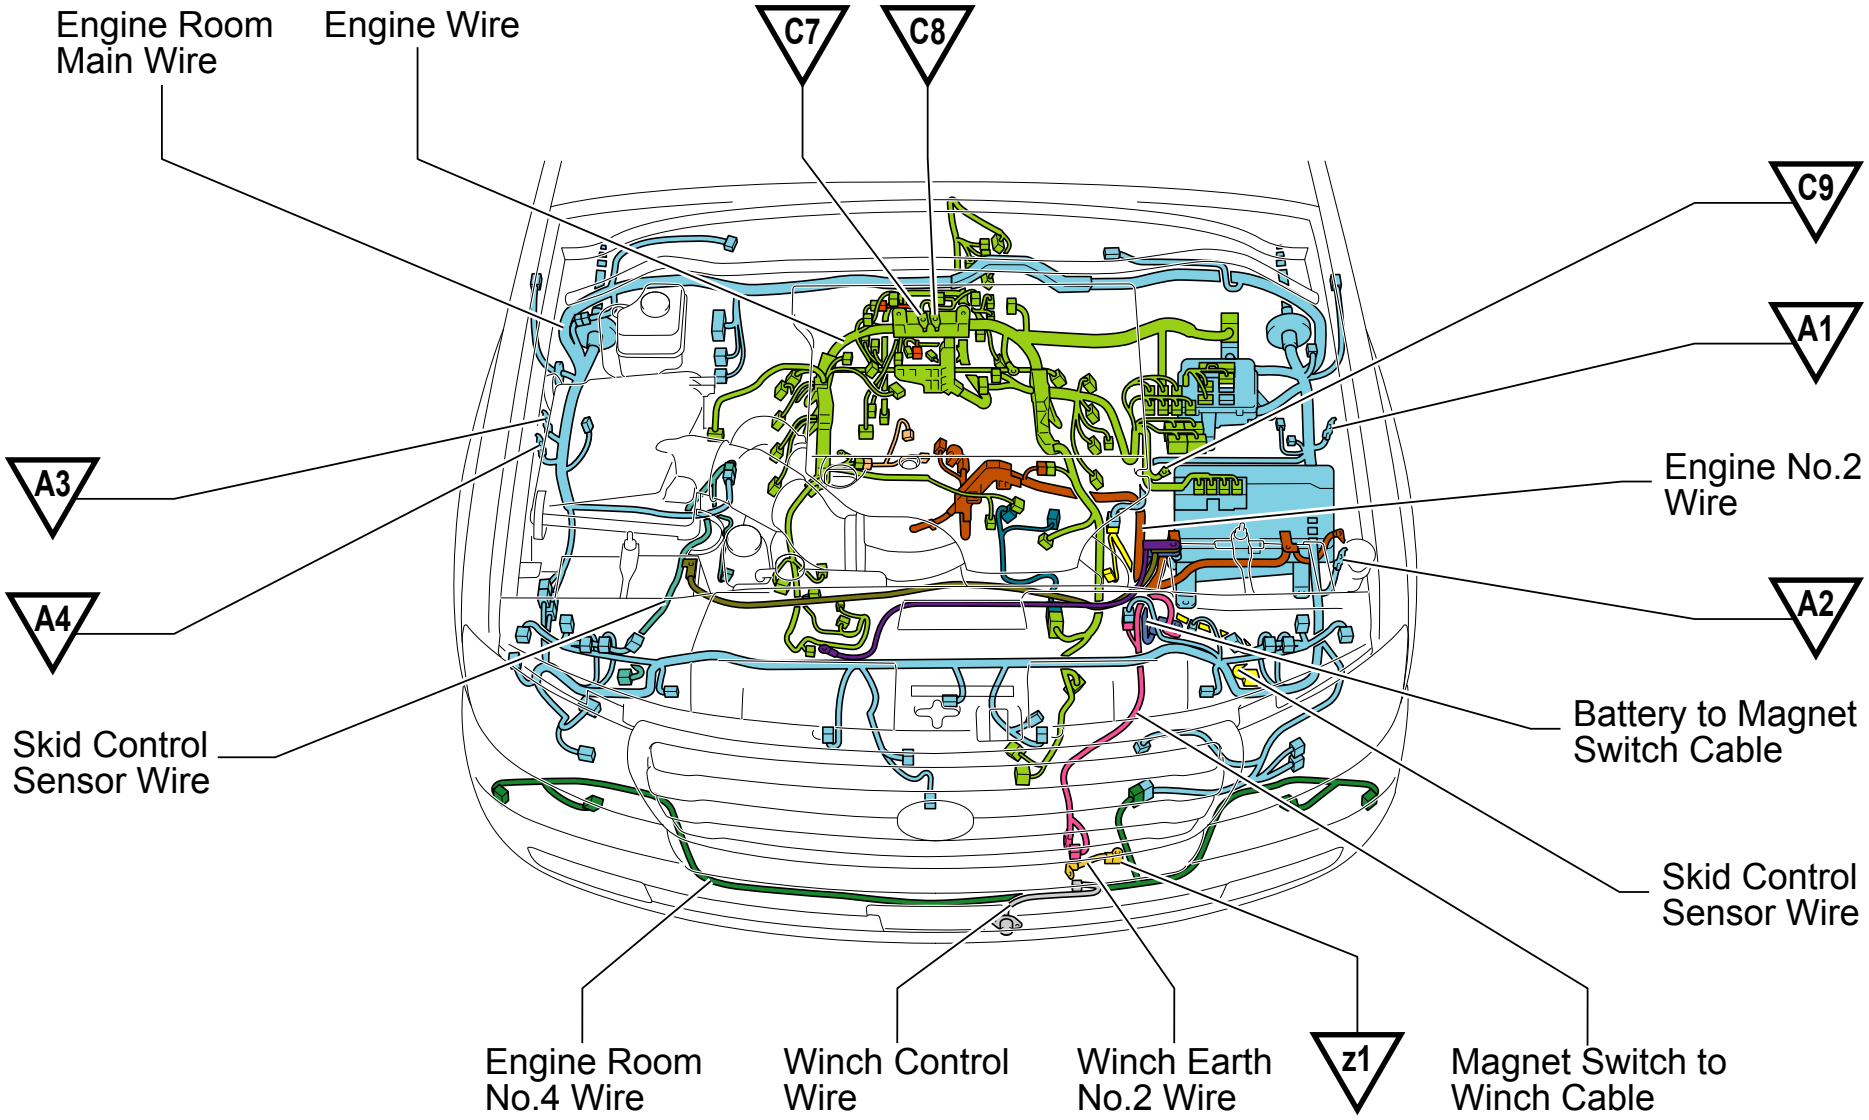
Engine Room Main Wire
Engine Wire
C7
C8
C9
A1
A3
A4
Engine No.2 Wire
A2
Skid Control Sensor Wire
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine Room No.4 Wire
Winch Control Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable

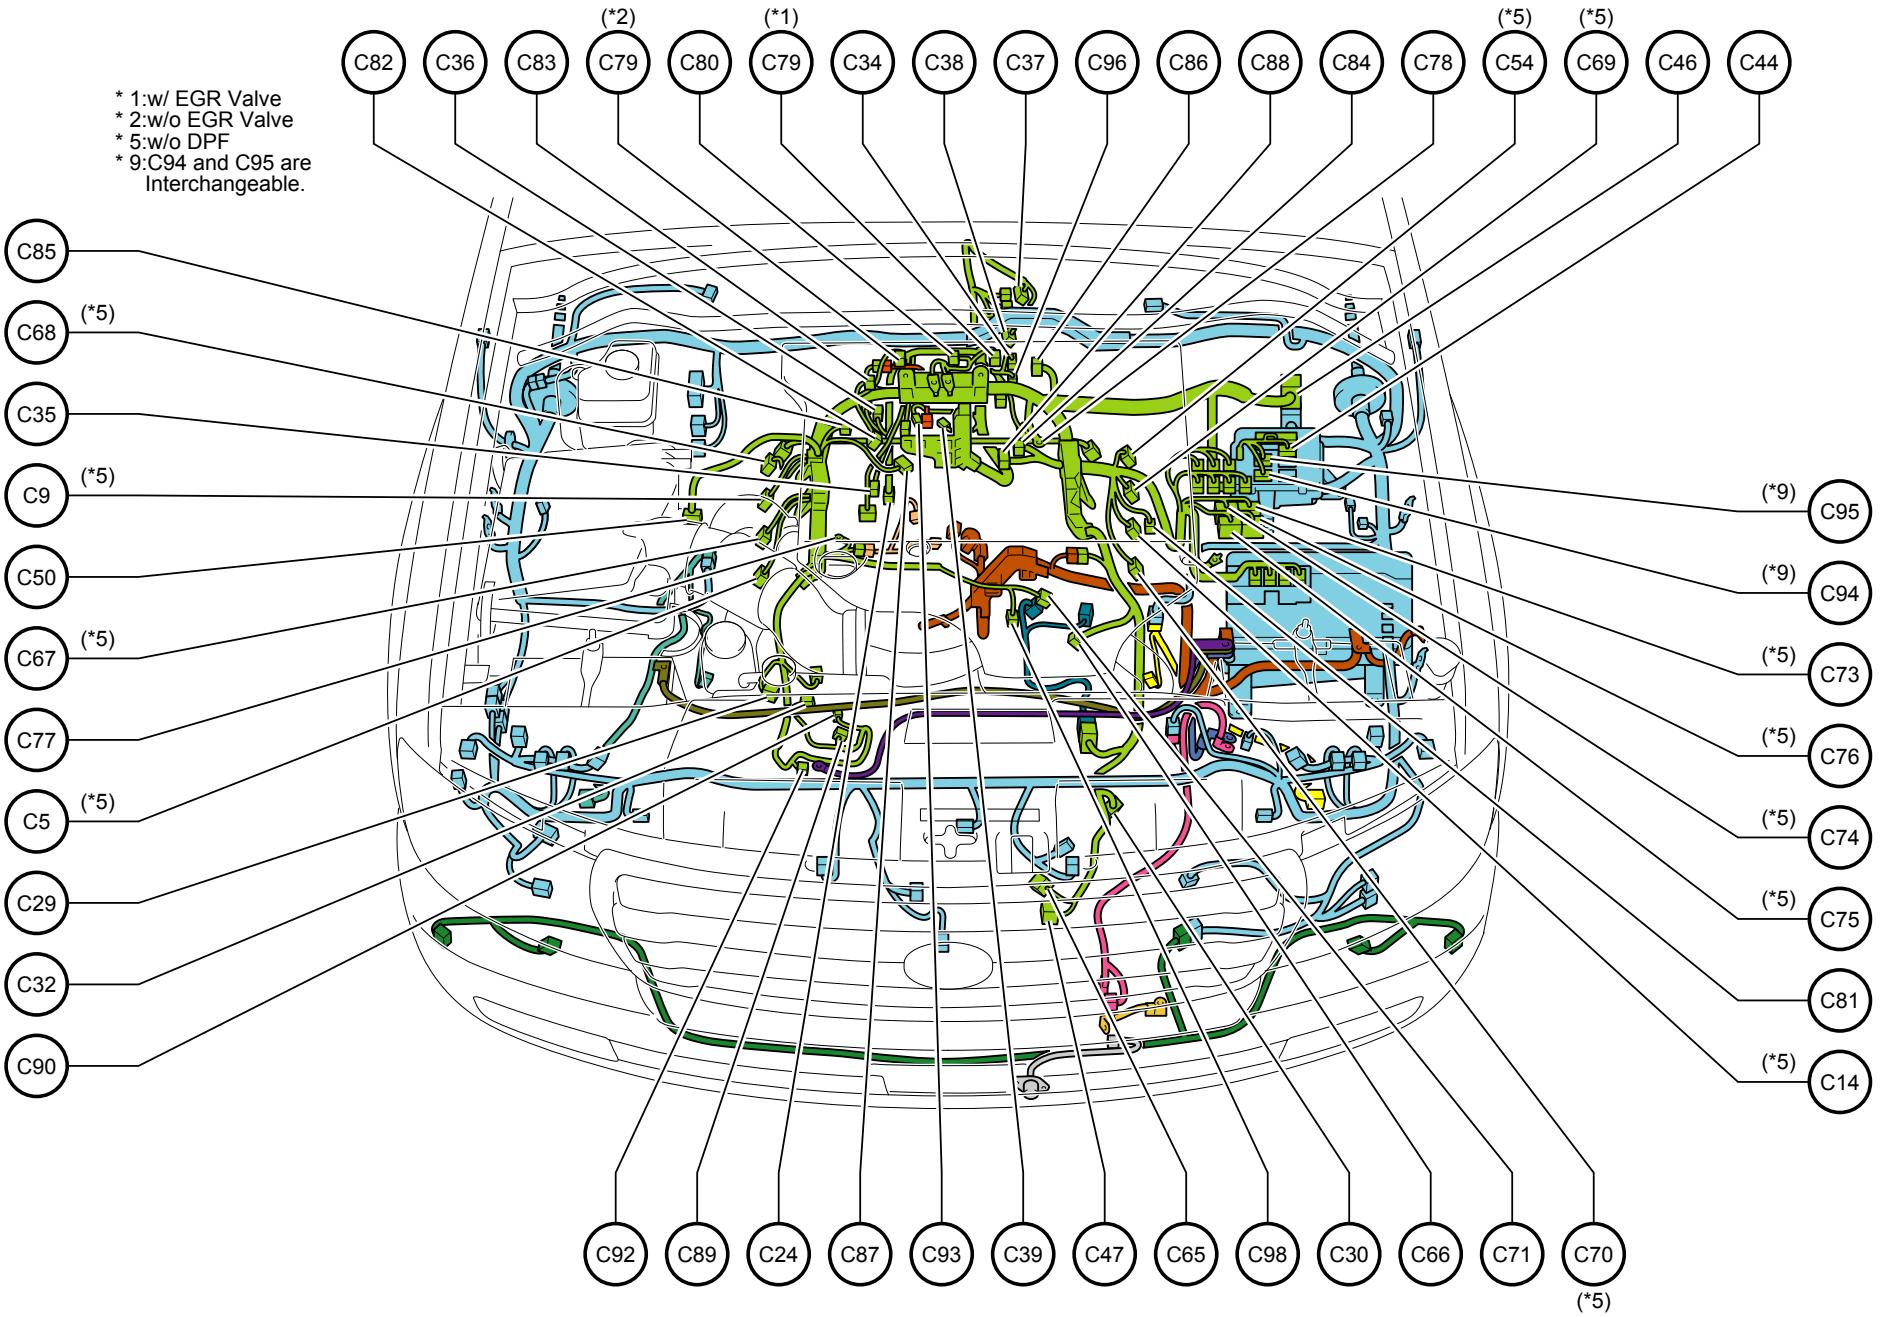

* 1:w/ EGR Valve
* 2:w/o EGR Valve
* 5:w/o DPF
* 9:C94 and C95 are Interchangeable.
C82
C36
C83
(*2)
C79
C80
(*1)
C79
C34
C38
C37
C96
C86
C88
C84
C78
(*5)
C54
(*5)
C69
C46
C44
C85
C68
(*5)
C35
C9
(*5)
C50
C67
(*5)
C77
C5
(*5)
C29
C32
C90
(*9)
C95
(*9)
C94
(*5)
C73
(*5)
C76
(*5)
C74
(*5)
C75
C81
(*5)
C14
C92
C89
C24
C87
C93
C39
C47
C65
C98
C30
C66
C71
C70
(*5)

C 5 Fuel Injector Assembly No.1
C 9 Fuel Injector Assembly No.5
C 14 Fuel Injector Assembly No.4
C 24 Park/Neutral Position Switch
C 29 Power Steering Oil Pressure Switch
C 30 Cooler Compressor Assembly
C 32 Engine Oil Level Sensor
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 39 Back-Up Light Switch Assembly
C 44 Junction Connector
C 46 ECM
C 47 Oil Pressure Sender Gage Assembly
C 50 Mass Air Flow Meter
C 54 Fuel Injector Assembly No.8
C 65 Crankshaft Position Sensor
C 66 Camshaft Position Sensor
C 67 Fuel Injector Assembly No.3
C 68 Fuel Injector Assembly No.7
C 69 Fuel Injector Assembly No.6
C 70 Fuel Injector Assembly No.2
C 71 E.F.I. Engine Coolant Temperature Sensor
C 73 Injector Driver (No.1)
C 74 Injector Driver (No.1)
C 75 Injector Driver (No.2)
C 76 Injector Driver (No.2)
C 77 Glow Plug Assembly
C 78 Glow Plug Assembly
C 79 Intake Air Temperature Sensor
C 80 Diesel Turbo Pressure Sensor
C 81 VSV (ACM)
C 82 Fuel Pressure Sensor
C 83 Diesel Throttle Body Assembly RH
C 84 Diesel Throttle Body Assembly LH
C 85 Diesel Throttle Body Assembly RH
C 86 Diesel Throttle Body Assembly LH
C 87 No.1 EGR Valve Assembly
C 88 No.2 EGR Valve Assembly
C 89 DC Motor and Nozzle Vane Position Sensor RH
C 90 DC Motor and Nozzle Vane Position Sensor RH
C 92 Generator Assembly
C 93 Shift Position Switch
C 94 Junction Connector
C 95 Junction Connector
C 96 Electronically Controlled Transmission Solenoid
C 98 Viscous with Magnet Clutch Heater Assembly


C 5
Gray

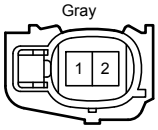


C 9
Gray

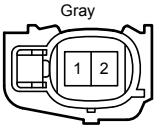

C 14
Gray

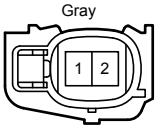


C 24
Gray

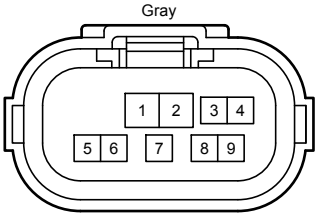

C 29
Black




C 30
Gray

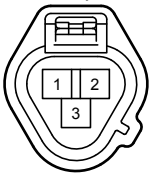


C 32
Gray




C 34
Gray

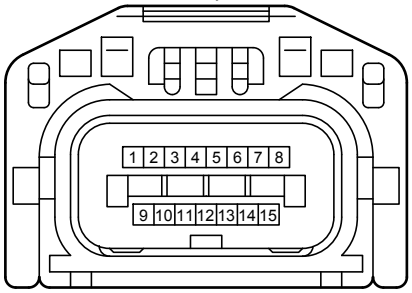


C 35
Black

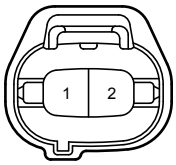


C 36
Black

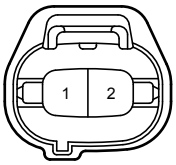


C 37
Black

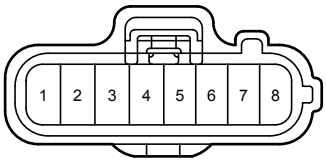


C 38
Dark Gray

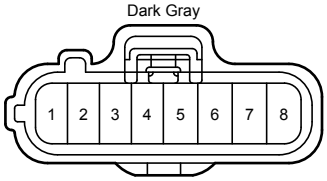


C 39
Gray

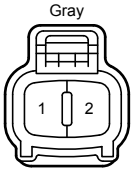

C 44
Blue

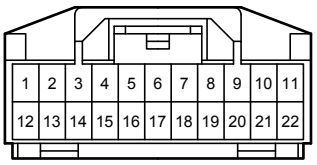


C 46
Black

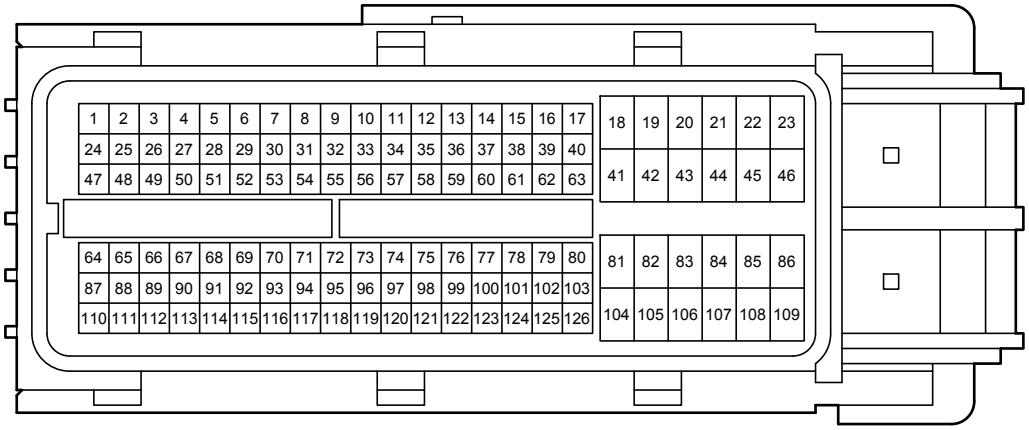


C 47
Black




C 50
Black

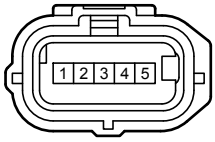

C 54
Gray




C 65
Black

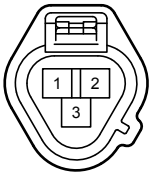


C 66
Black




C 67
Black




C 68
Black



C 69
Black




C 70
Black




C 71
Gray




C 73
Dark Gray

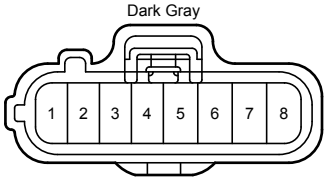


C 74
Black

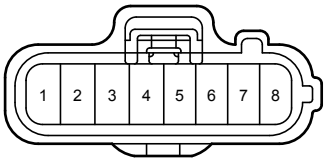


C 75
Dark Gray

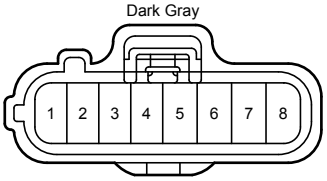


C 76
Black

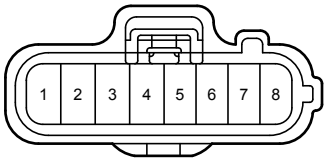

C 77




C 78




C 79
Gray




C 80
Black

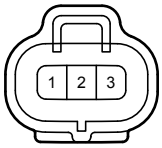

C 81
Black

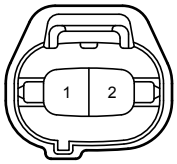

C 82
Black

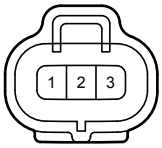

C 83
Black



C 84
Black




C 85
Black




C 86
Black




C 87
Black

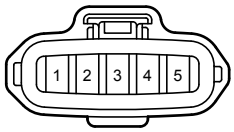


C 88
Black

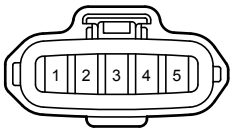


C 89
Black

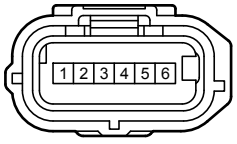


C 90
Black

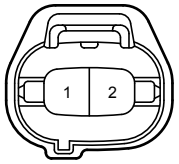


C 92
Black

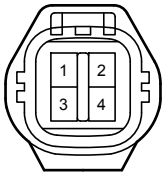


C 93
Gray

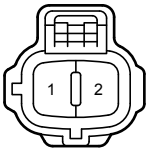


C 94
Gray

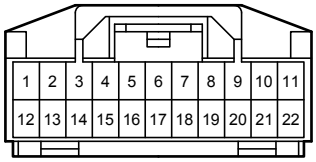

C 95
Black

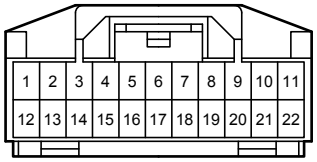


C 96
Gray

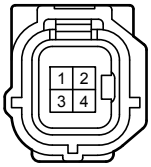


C 98
Gray

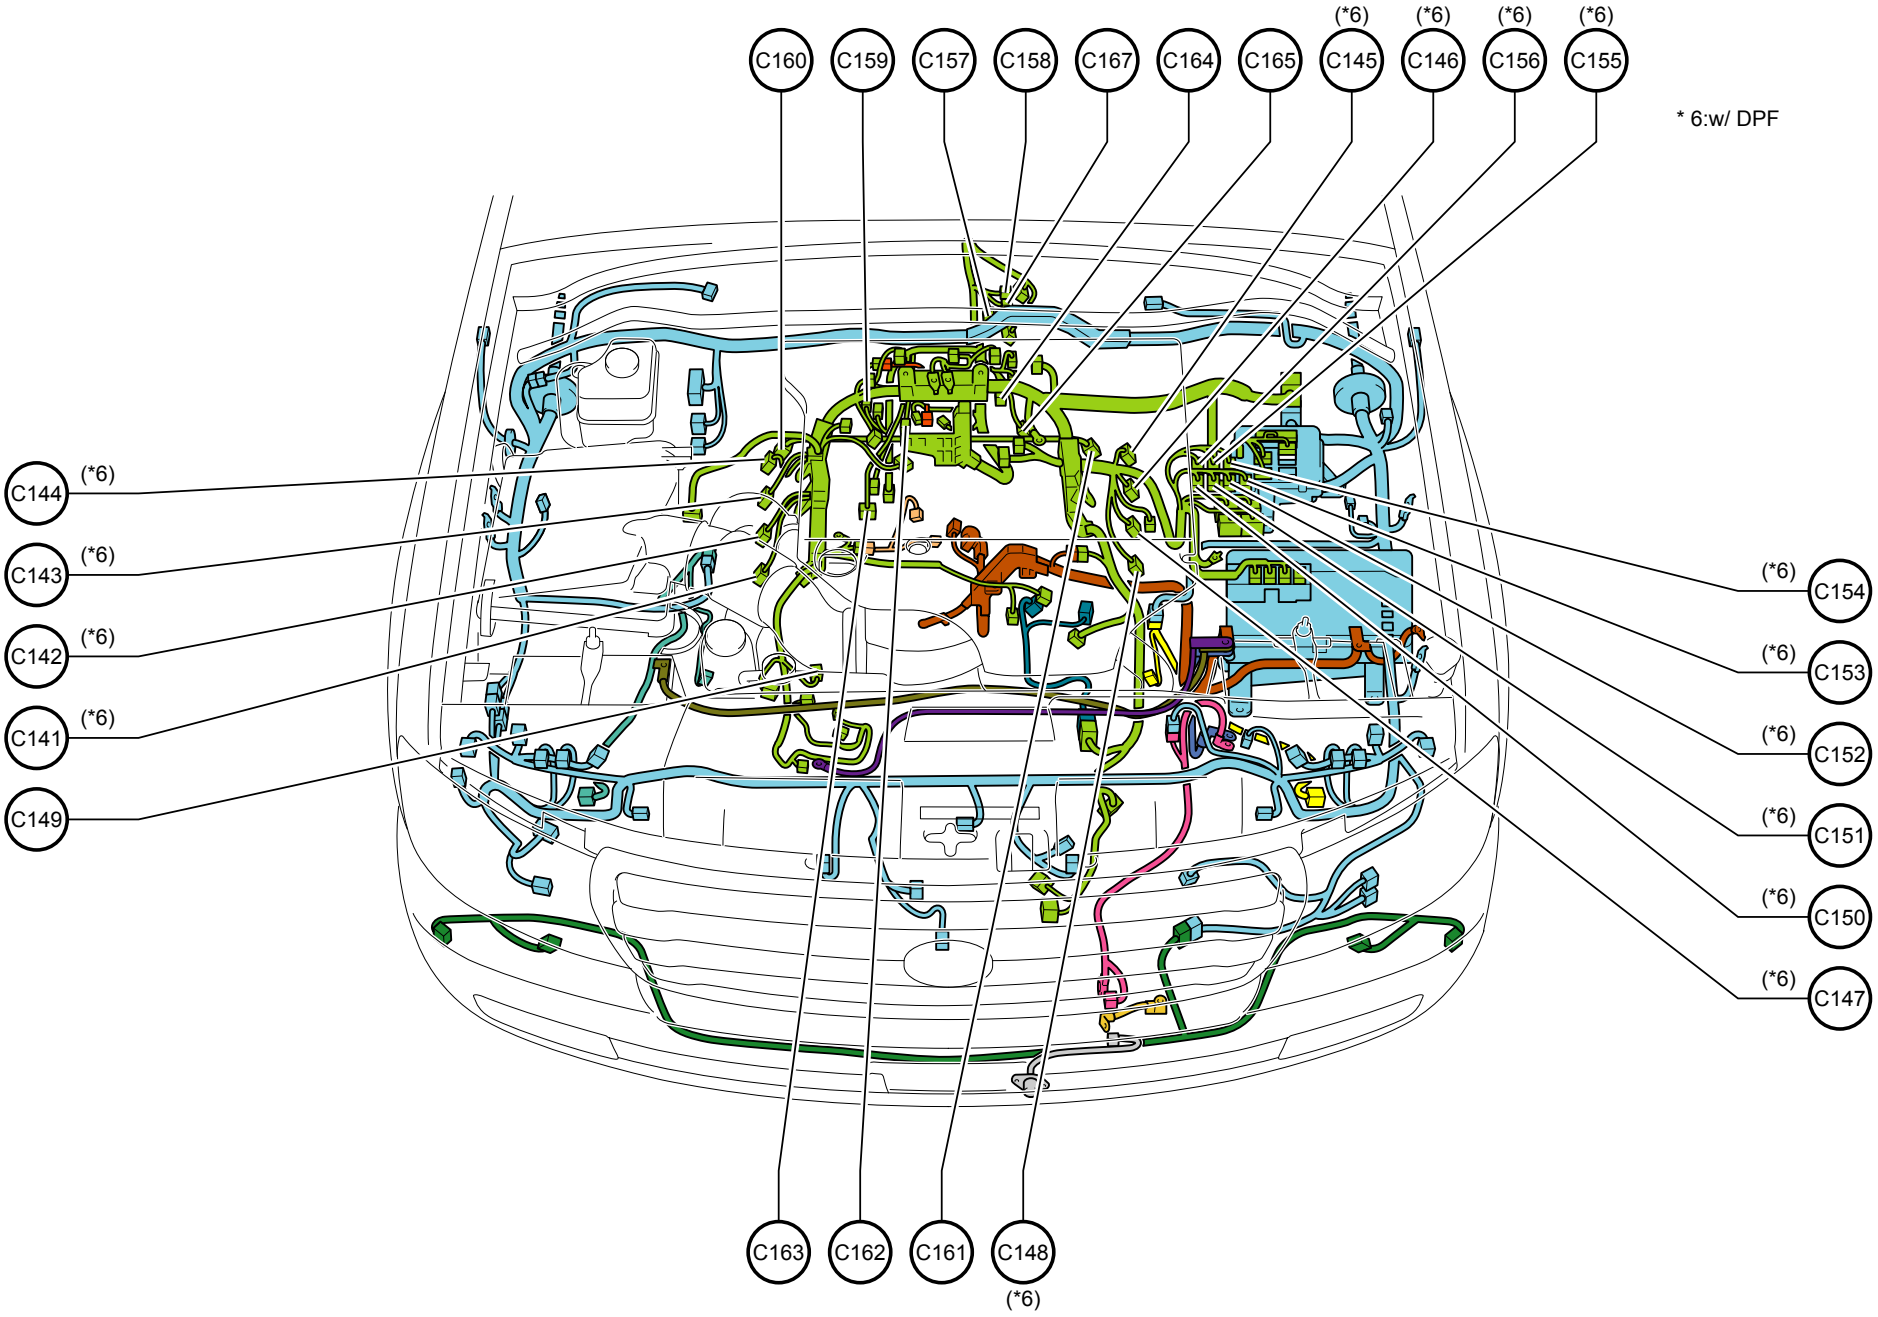



C160
C159
C157
C158
C167
C164
C165
(*6)
C145
(*6)
C146
(*6)
C156
(*6)
C155
* 6:w/ DPF
C144
(*6)
C143
(*6)
C142
(*6)
C141
(*6)
C149
(*6)
C154
(*6)
C153
(*6)
C152
(*6)
C151
(*6)
C150
(*6)
C147
C163
C162
C161
C148
(*6)

C 141 Fuel Injector Assembly No.1
C 142 Fuel Injector Assembly No.3
C 143 Fuel Injector Assembly No.5
C 144 Fuel Injector Assembly No.7
C 145 Fuel Injector Assembly No.8
C 146 Fuel Injector Assembly No.6
C 147 Fuel Injector Assembly No.4
C 148 Fuel Injector Assembly No.2
C 149 Vane Pump Assembly
C 150 Injector Driver (No.1)
C 151 Injector Driver (No.1)
C 152 Injector Driver (No.1)
C 153 Injector Driver (No.1)
C 154 Injector Driver (No.2)
C 155 Injector Driver (No.2)
C 156 Injector Driver (No.2)
C 157 Differential Pressure Sensor LH
C 158 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 159 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 160 Exhaust Fuel Addition Injector Assembly RH
C 161 Exhaust Fuel Addition Injector Assembly LH
C 162 Exhaust Gas Temperature Sensor
C 163 No.2 Exhaust Gas Temperature Sensor
C 164 No.3 Exhaust Gas Temperature Sensor
C 165 No.4 Exhaust Gas Temperature Sensor
C 167 DPF Temperature Sensor LH (Exhaust Gas Temperature Sensor)


C141
Gray

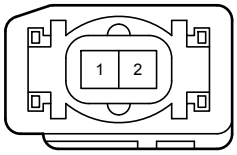


C142
Black

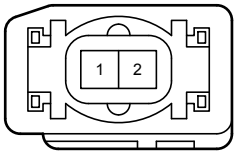


C143
Gray

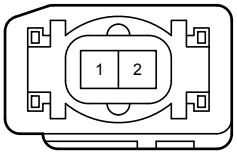


C144
Black

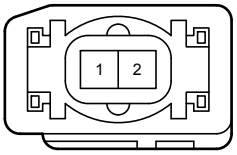


C145
Gray

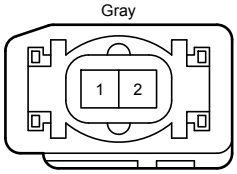


C146
Black

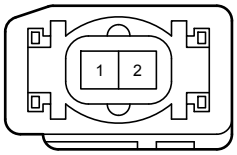


C147
Gray

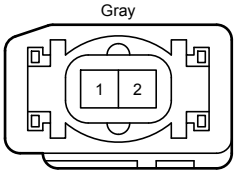


C148
Black

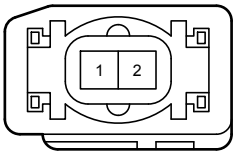


C149
Black

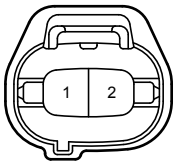


C150
Black



C151
Black

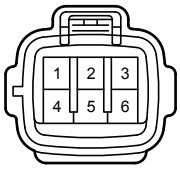


C152
Black

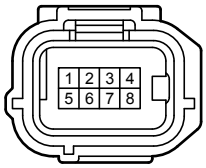


C153
Black




C154
Black

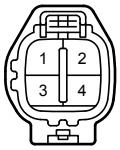


C155
Black

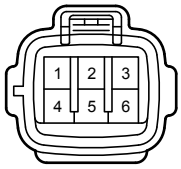

C156
Black

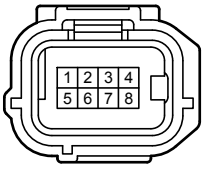

C157
Black

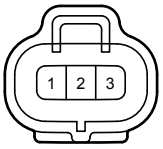

C158
Dark Gray



C159
Dark Gray



C160
Black



C161
Black



C162
Gray



C163
Gray



C164
Gray




C165
Gray



C167
Gray




* 7:Before Jan. 2012 Production
* 8:From Jan. 2012 Production

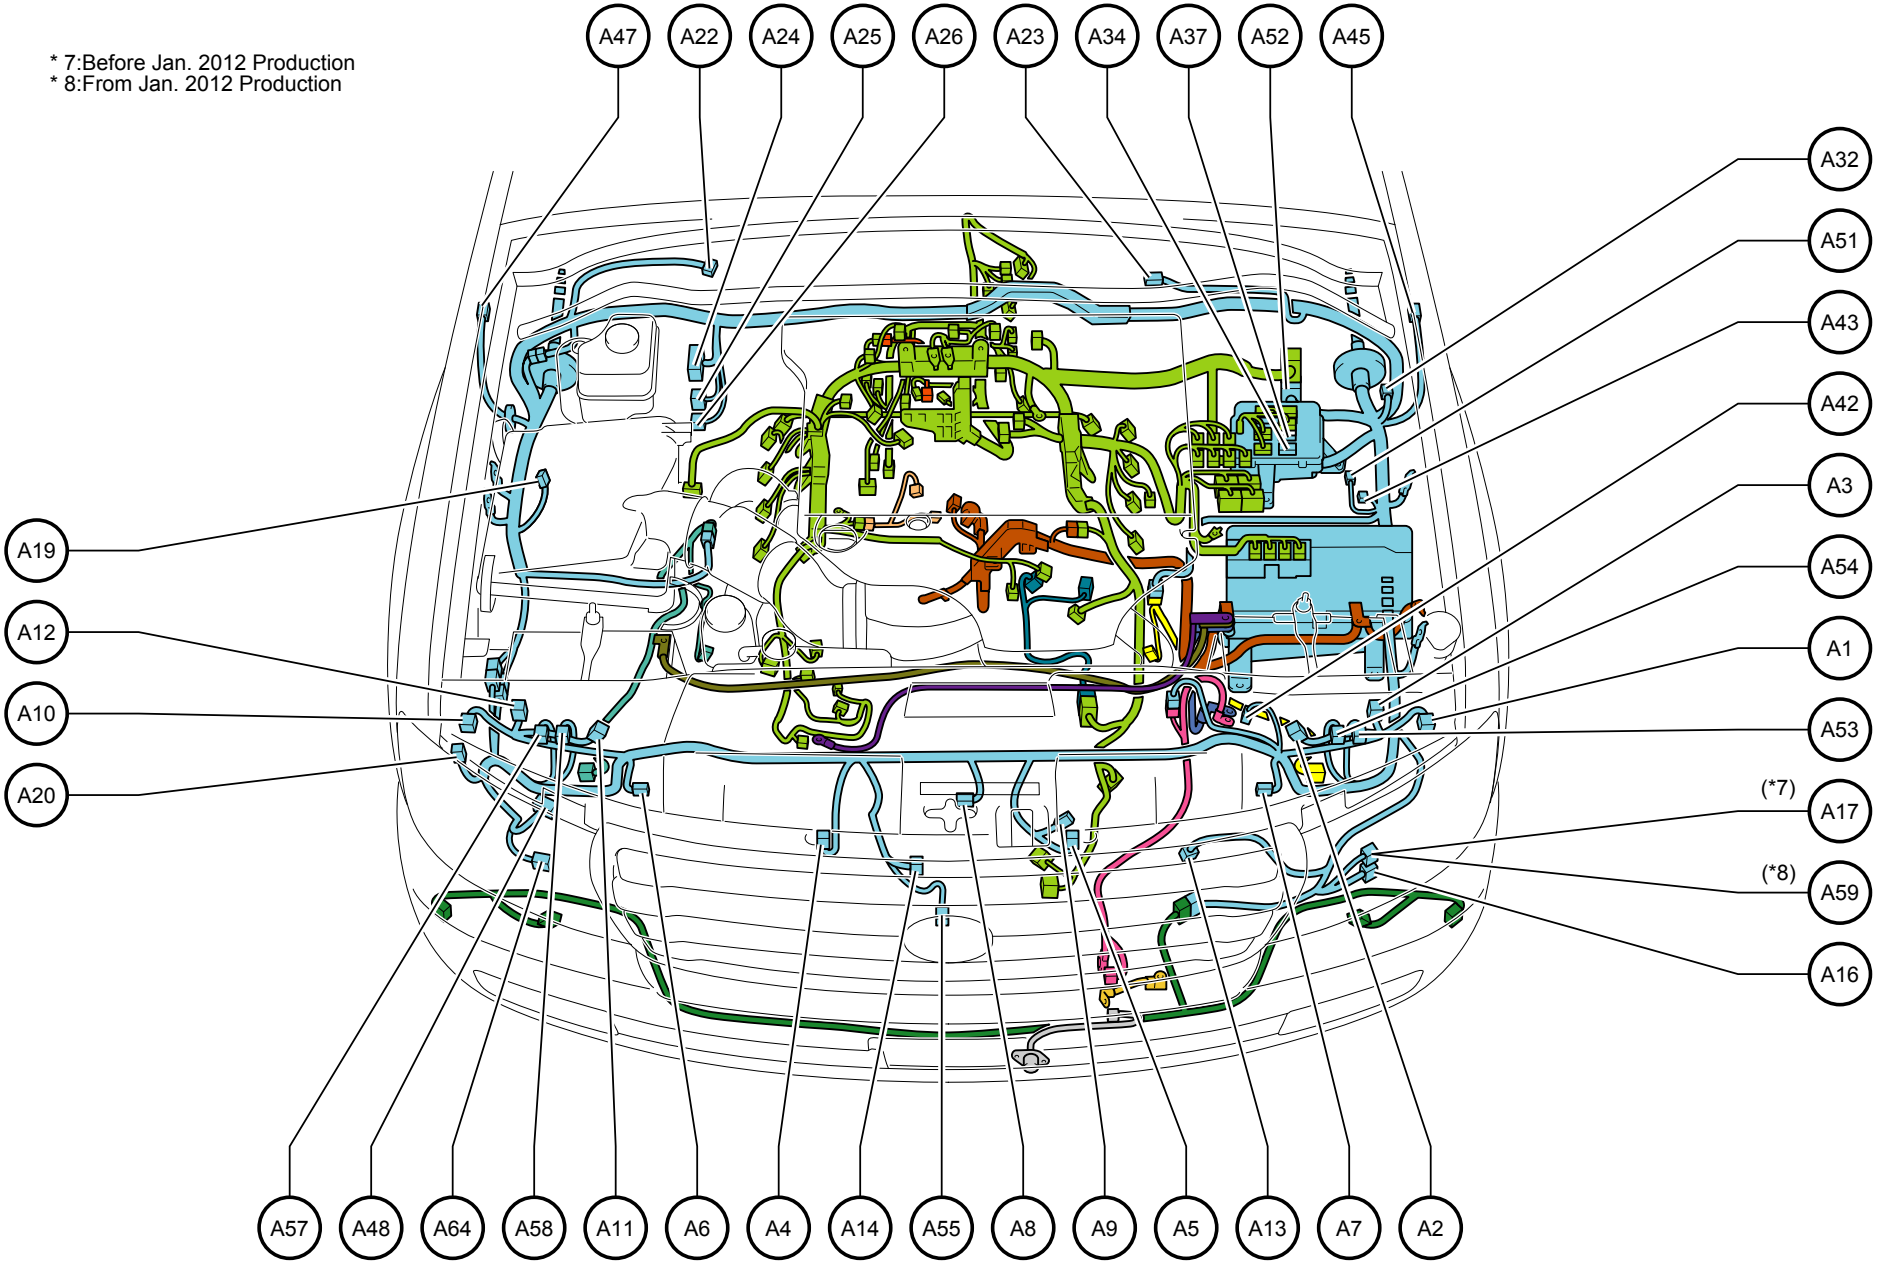


A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 17 Headlight Cleaner Control Relay and Motor
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 23 Front Wiper Deicer (Windshield Glass)
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
A 43 Level Warning Switch (Fuel Filter Assembly)
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH
A 48 Turbo Motor Driver
A 51 Clogging Switch (Fuel Filter Assembly)
A 52 ECM
A 53 Headlight Assembly LH
A 54 Headlight Assembly LH
A 55 Front Television Camera Assembly
A 57 Headlight Assembly RH
A 58 Headlight Assembly RH
A 59 Headlight Cleaner Control Relay and Motor
A 64 Front Tire Pressure Warning Antenna


A 1
Gray

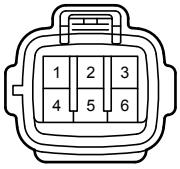


A 2
Black

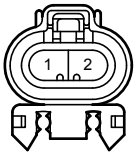


A 3
Black

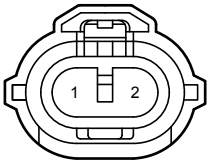


A 4
Black




A 5
Black




A 6
Yellow

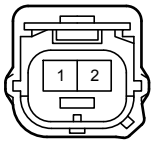

A 7
Yellow

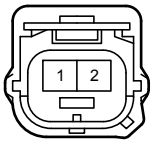

A 8
Dark Gray



(U.K.)

A 8
Black




(Except U.K.)


A 9
Black




A 10
Gray

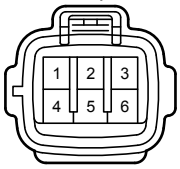


A 11
Black

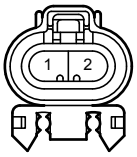

A 12
Black

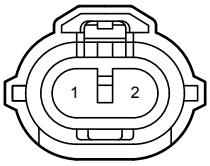

A 13
Black

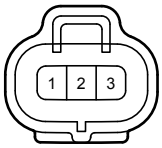

A 14
Black



A 16
Gray




A 17
Black




A 19
Black




A 20
Black




A 22
Black

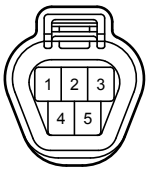


A 23
Gray




A 24
Black

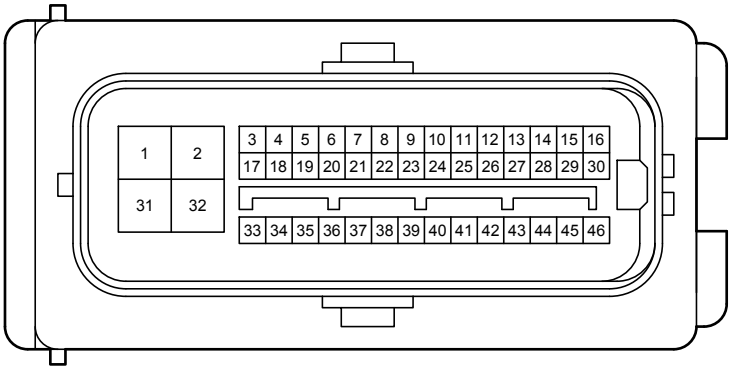


A 25
Black

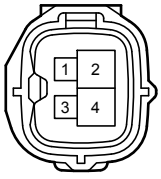


A 26
Gray

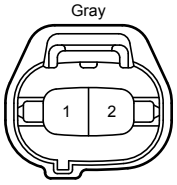


A 32
Black

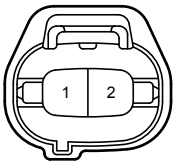


A 34
White

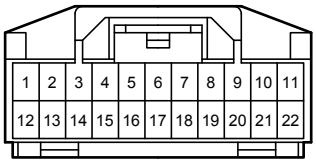


A 37
Blue

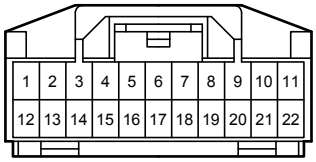

A 42
Black

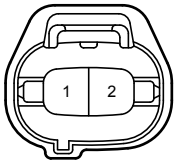

A 43
Gray

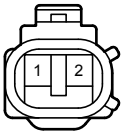


A 45
Gray




A 47
Gray




A 48
Black

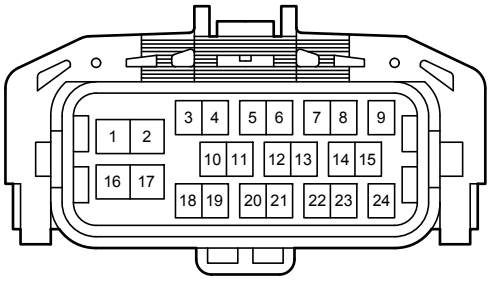

A 51
Black

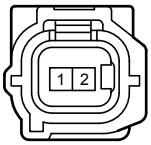


A 52
Black

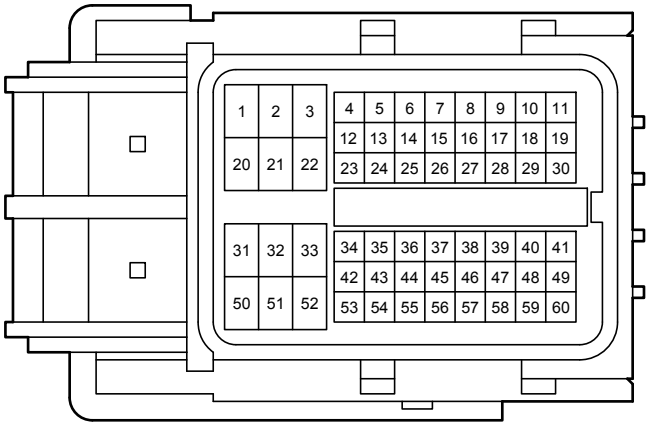


A 53
Black



A 54
Black

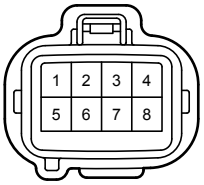


A 55
Black

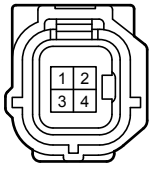

A 57
Black




A 58
Black

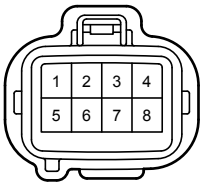


A 59
White



A 64
Gray

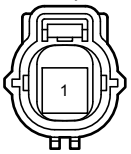

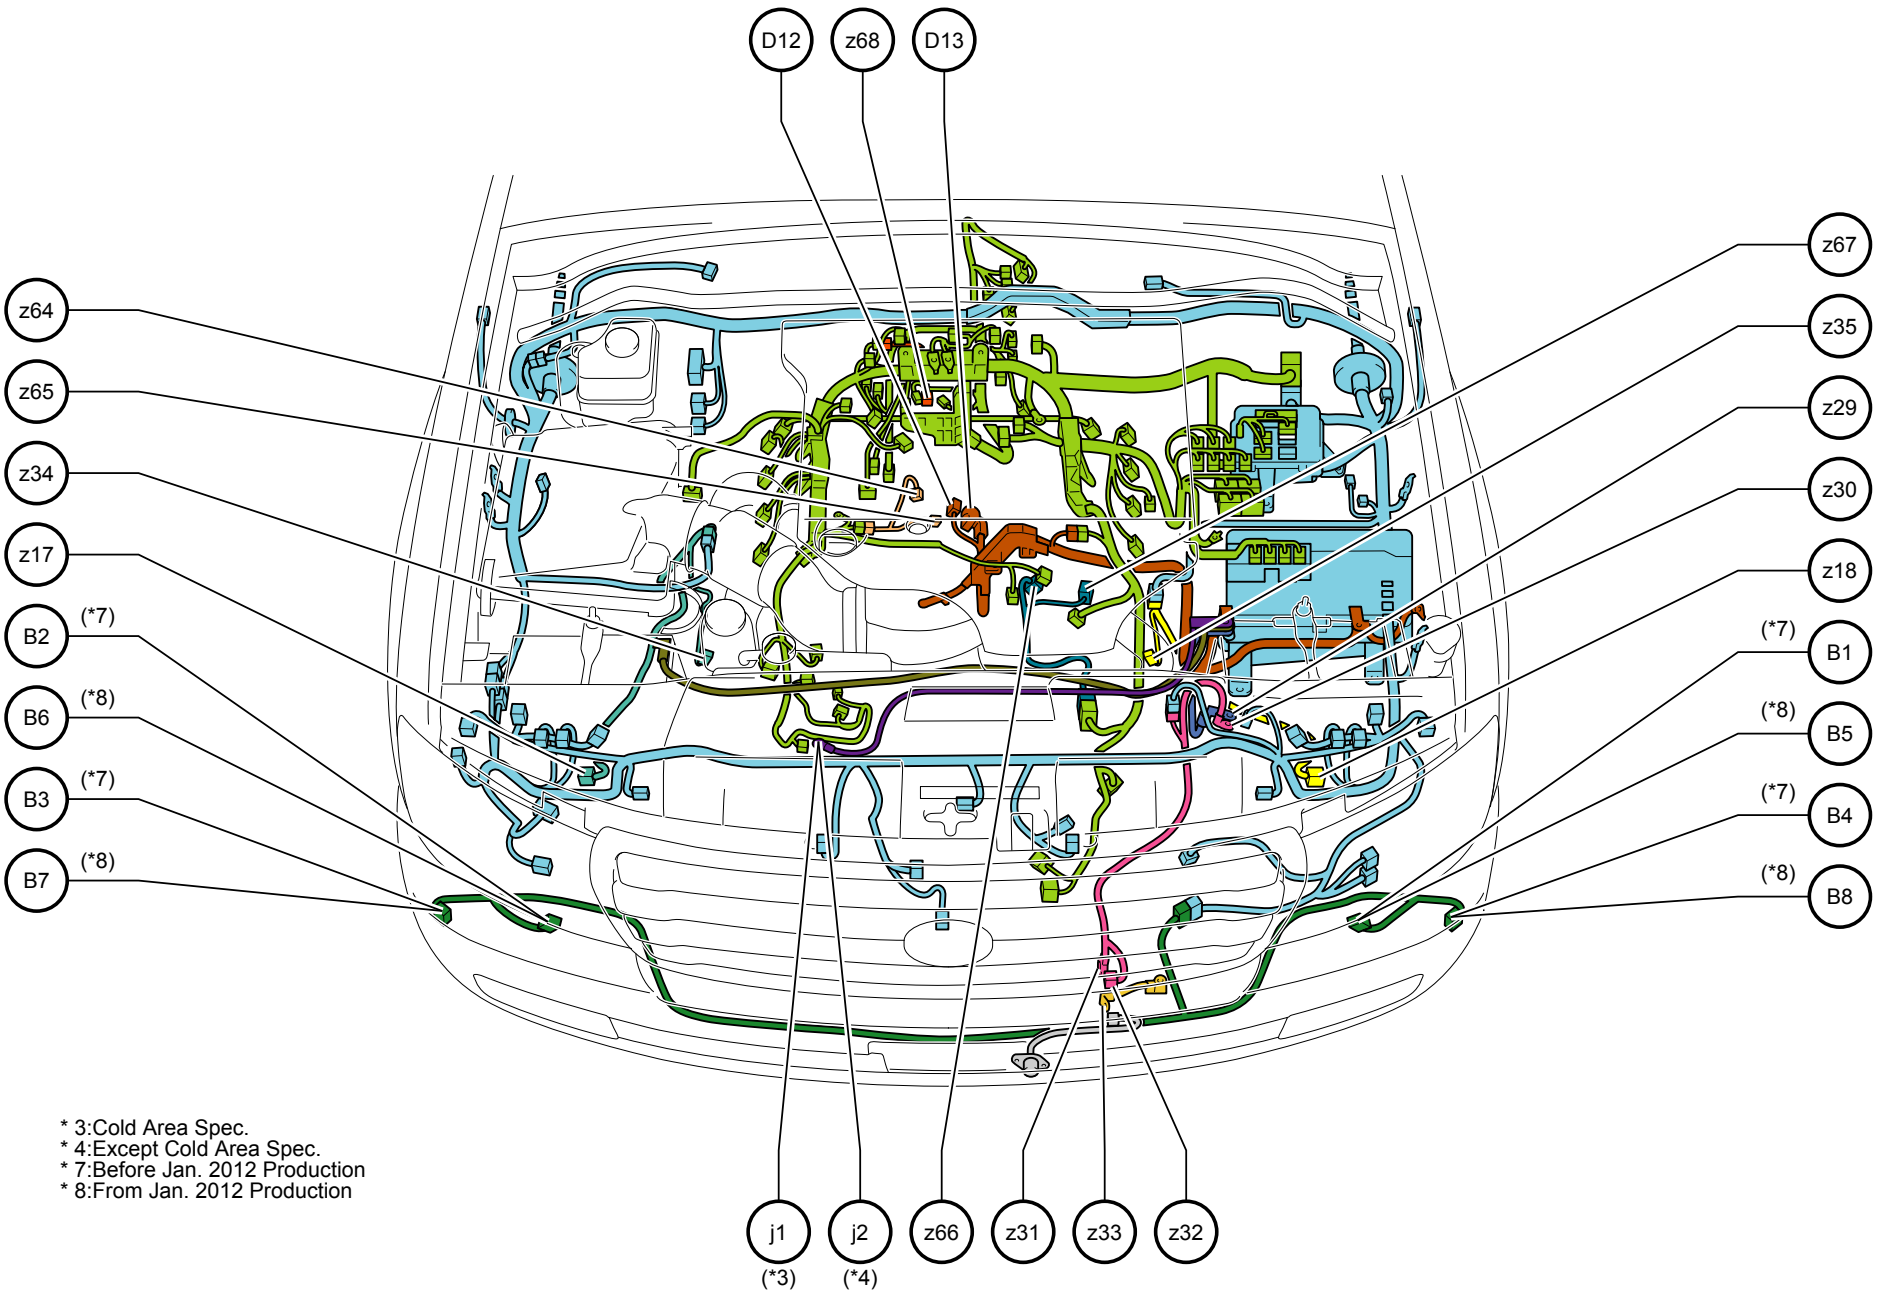

* 3:Cold Area Spec.
* 4:Except Cold Area Spec.
* 7:Before Jan. 2012 Production
* 8:From Jan. 2012 Production


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH
B 5 Fog Light Assembly LH
B 6 Fog Light Assembly RH
B 7 No.1 Ultrasonic Sensor RH
B 8 No.1 Ultrasonic Sensor LH

D 12 Starter Assembly
D 13 Starter Assembly


j 1 Generator Assembly
j 2 Generator Assembly

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
z 31 With Magnet Switch Winch Motor Assembly
z 32 With Magnet Switch Winch Motor Assembly
z 33 With Magnet Switch Winch Motor Assembly
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH
z 64 Suction Control Valve (Injection or Supply Pump Assembly)
z 65 Fuel Temperature Sensor (Injection or Supply Pump Assembly)
z 66 DC Motor and Nozzle Vane Position Sensor LH
z 67 DC Motor and Nozzle Vane Position Sensor LH
z 68 Pressure Discharge Valve


B 1
Brown

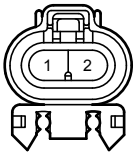


B 2
Brown

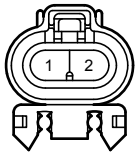


B 3
Black

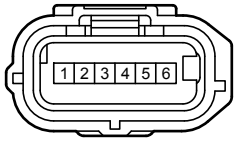


B 4
Black

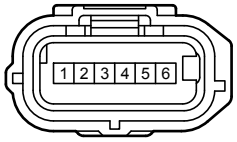


B 5
Black

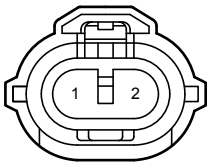


B 6
Black

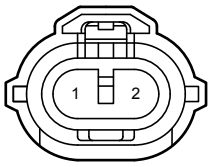

B 7
Black

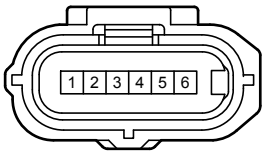


B 8
Black

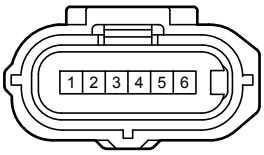


D 12
Black




D 13



j 1



j 2




z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

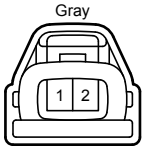


z 33



z 34
Black

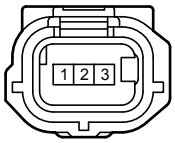

z 35
Black

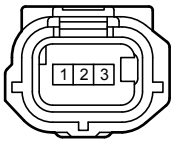


z 64
Gray




z 65
Gray




z 66
Black

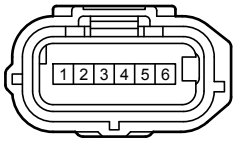


z 67
Gray

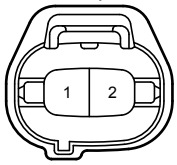



z 68
Gray

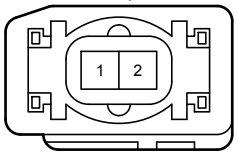



* 1:Liftgate Type Body
* 2:Swing Type Body

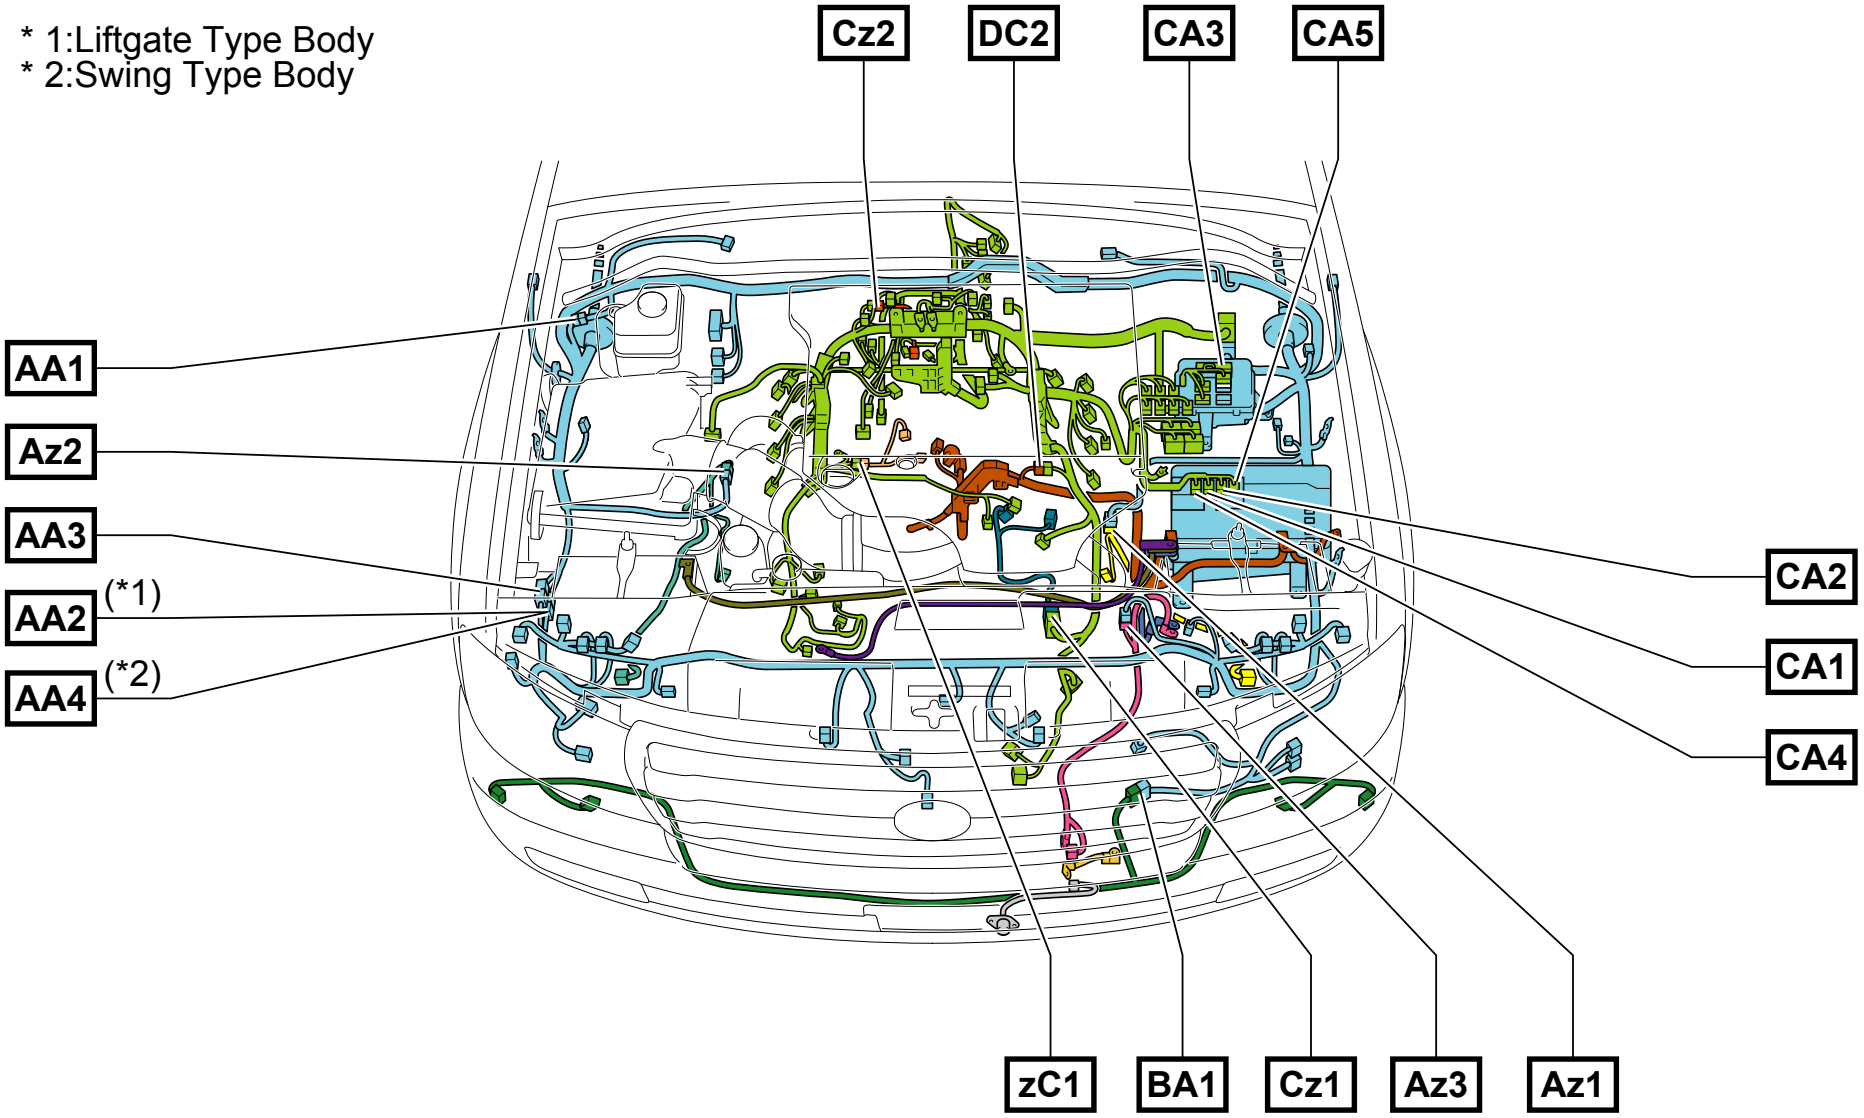


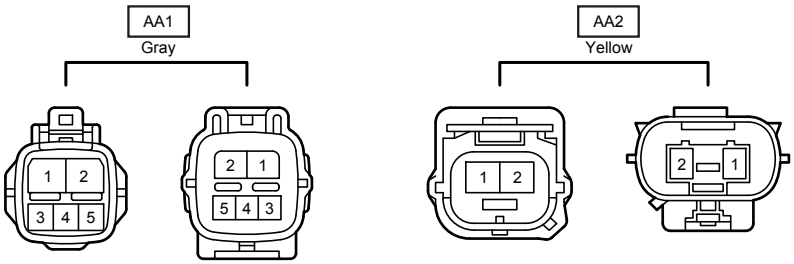
AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1

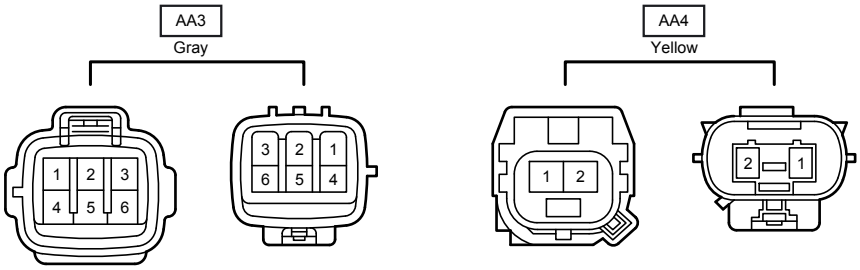

AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AA4
Yellow
1 2
2 1

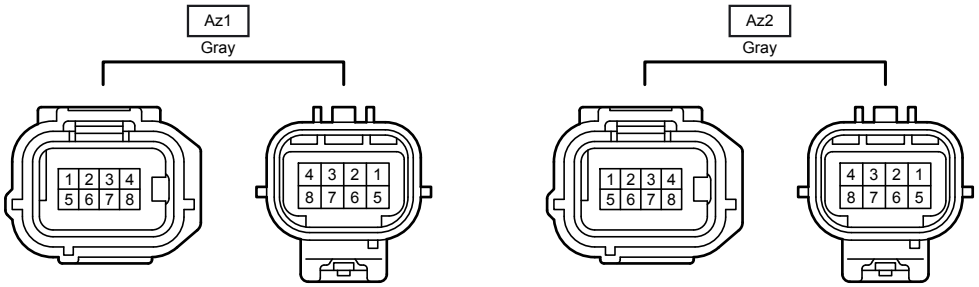
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

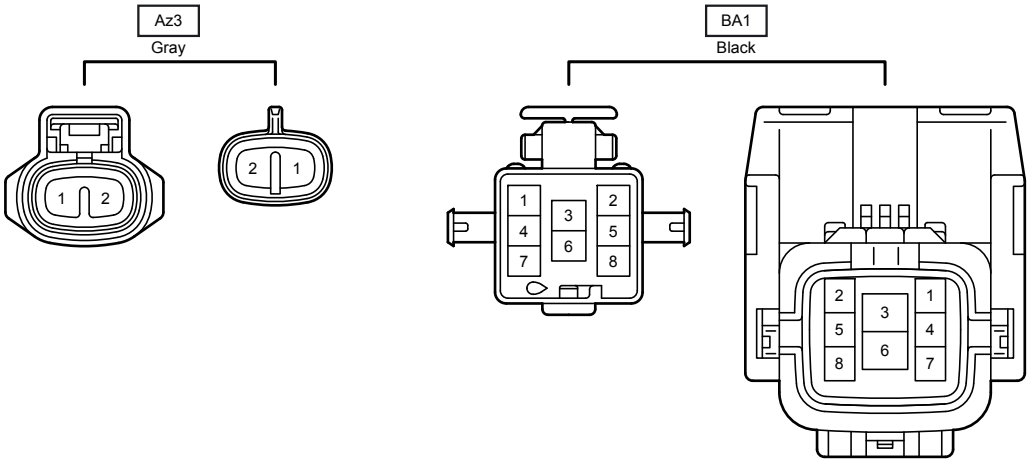

Az3
Gray
1 2
2 1
BA1
Black
1 4 7
3 6
2 5 8
2 5 8
3 6
1 4 7

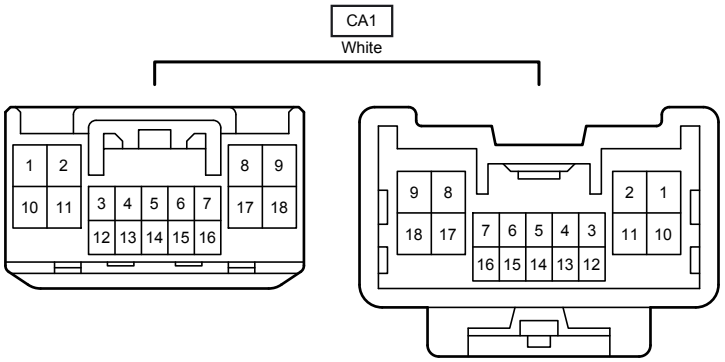
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10


CA2
White

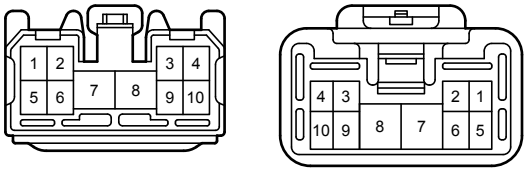


CA3
White

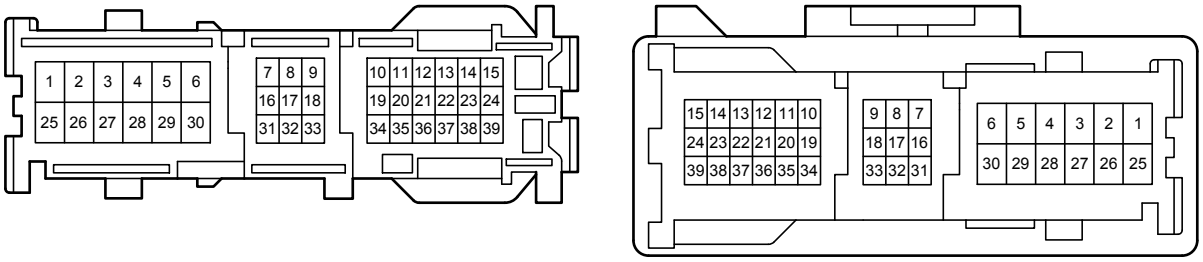


CA4
White

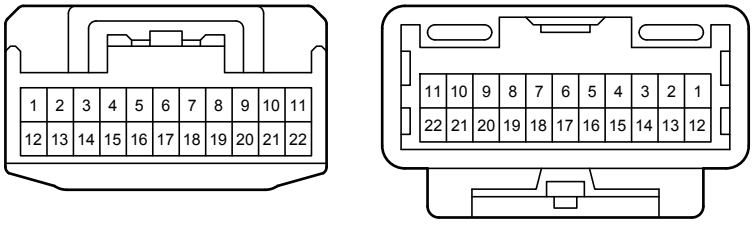


CA5
White

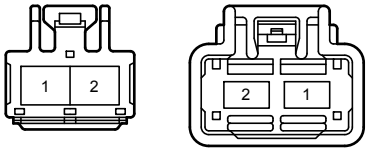


Cz1
Gray

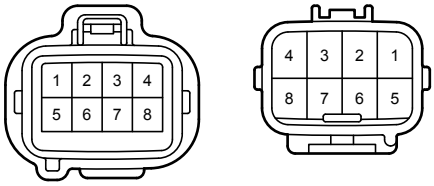


Cz2
Black





DC2
Gray

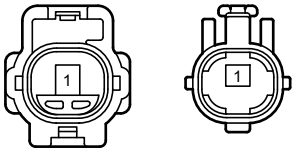

zC1
Dark Gray Gray

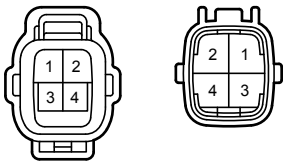

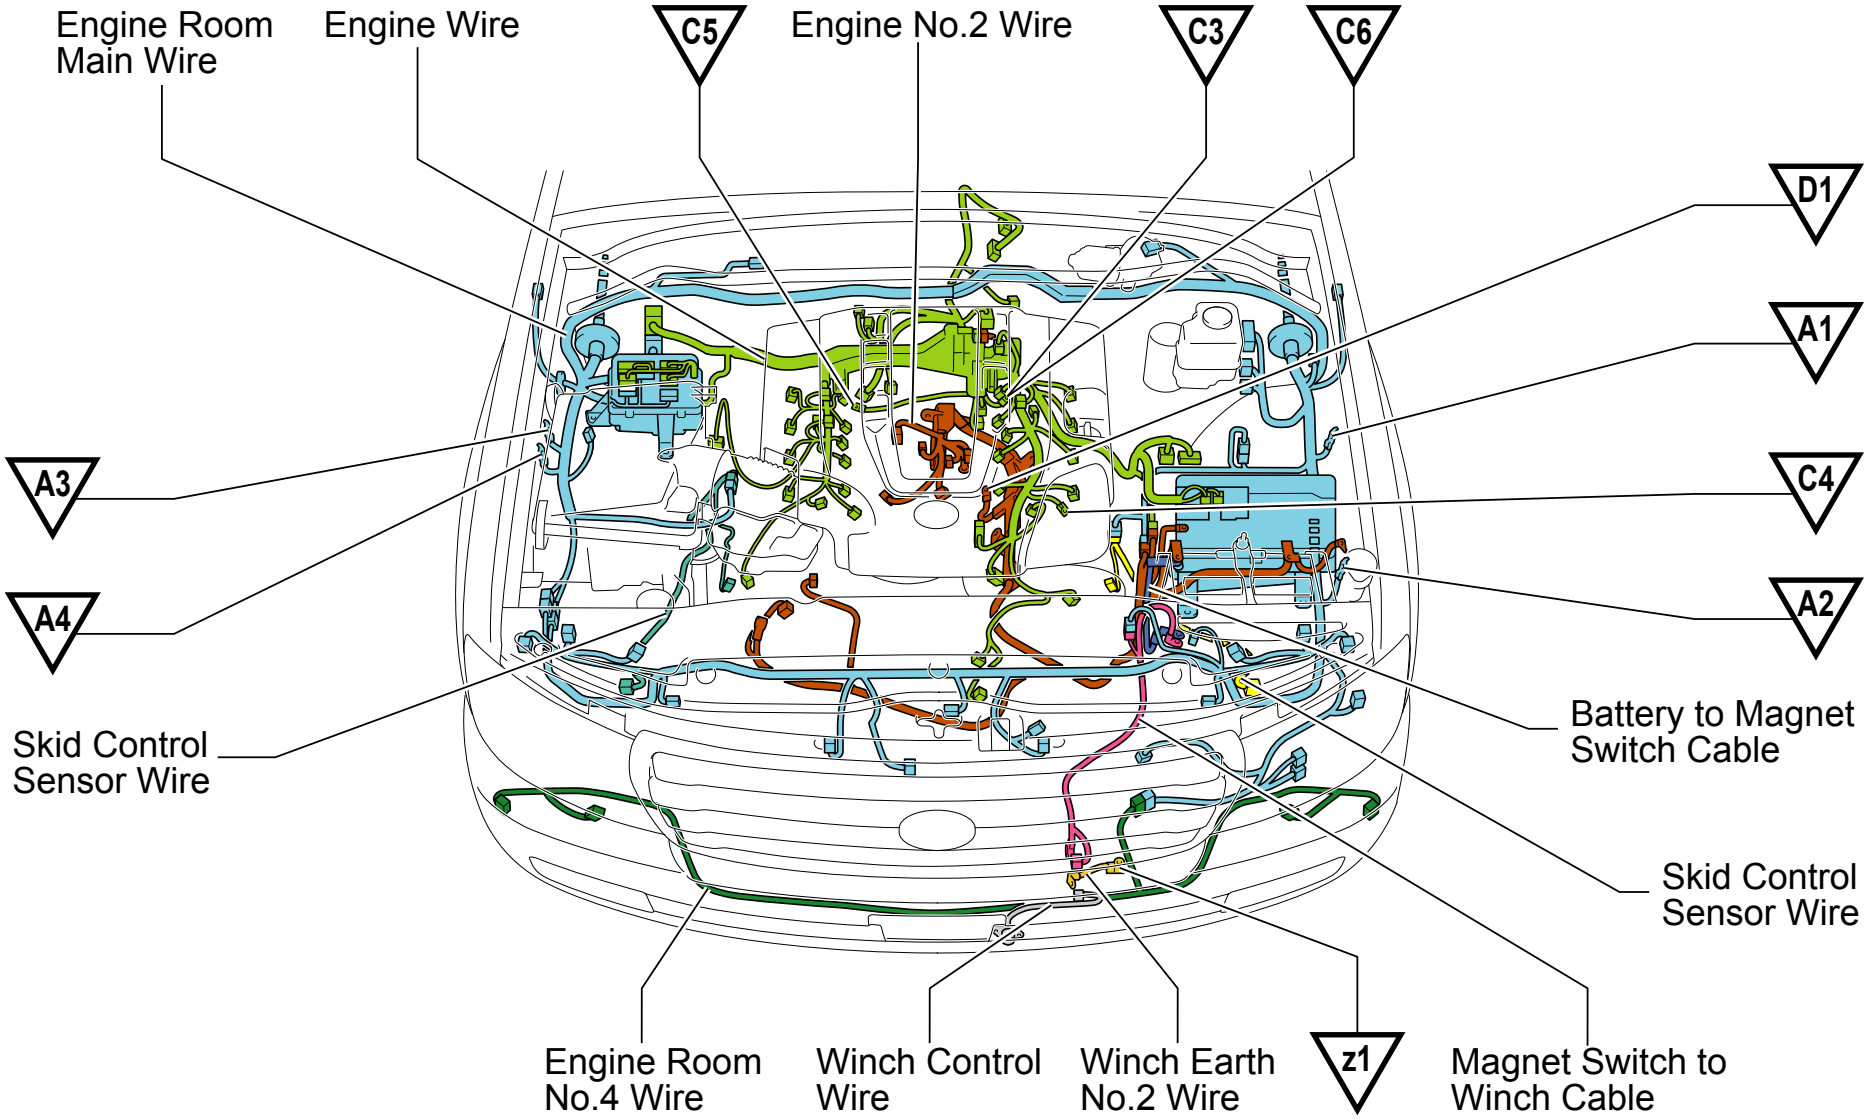

Engine Room Main Wire
Engine Wire
C5
Engine No.2 Wire
C3
C6
D1
A1
A3
C4
A4
A2
Skid Control Sensor Wire
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine Room No.4 Wire
Winch Control Wire
Winch Earth No.2 Wire
z1
Magnet Switch to Winch Cable

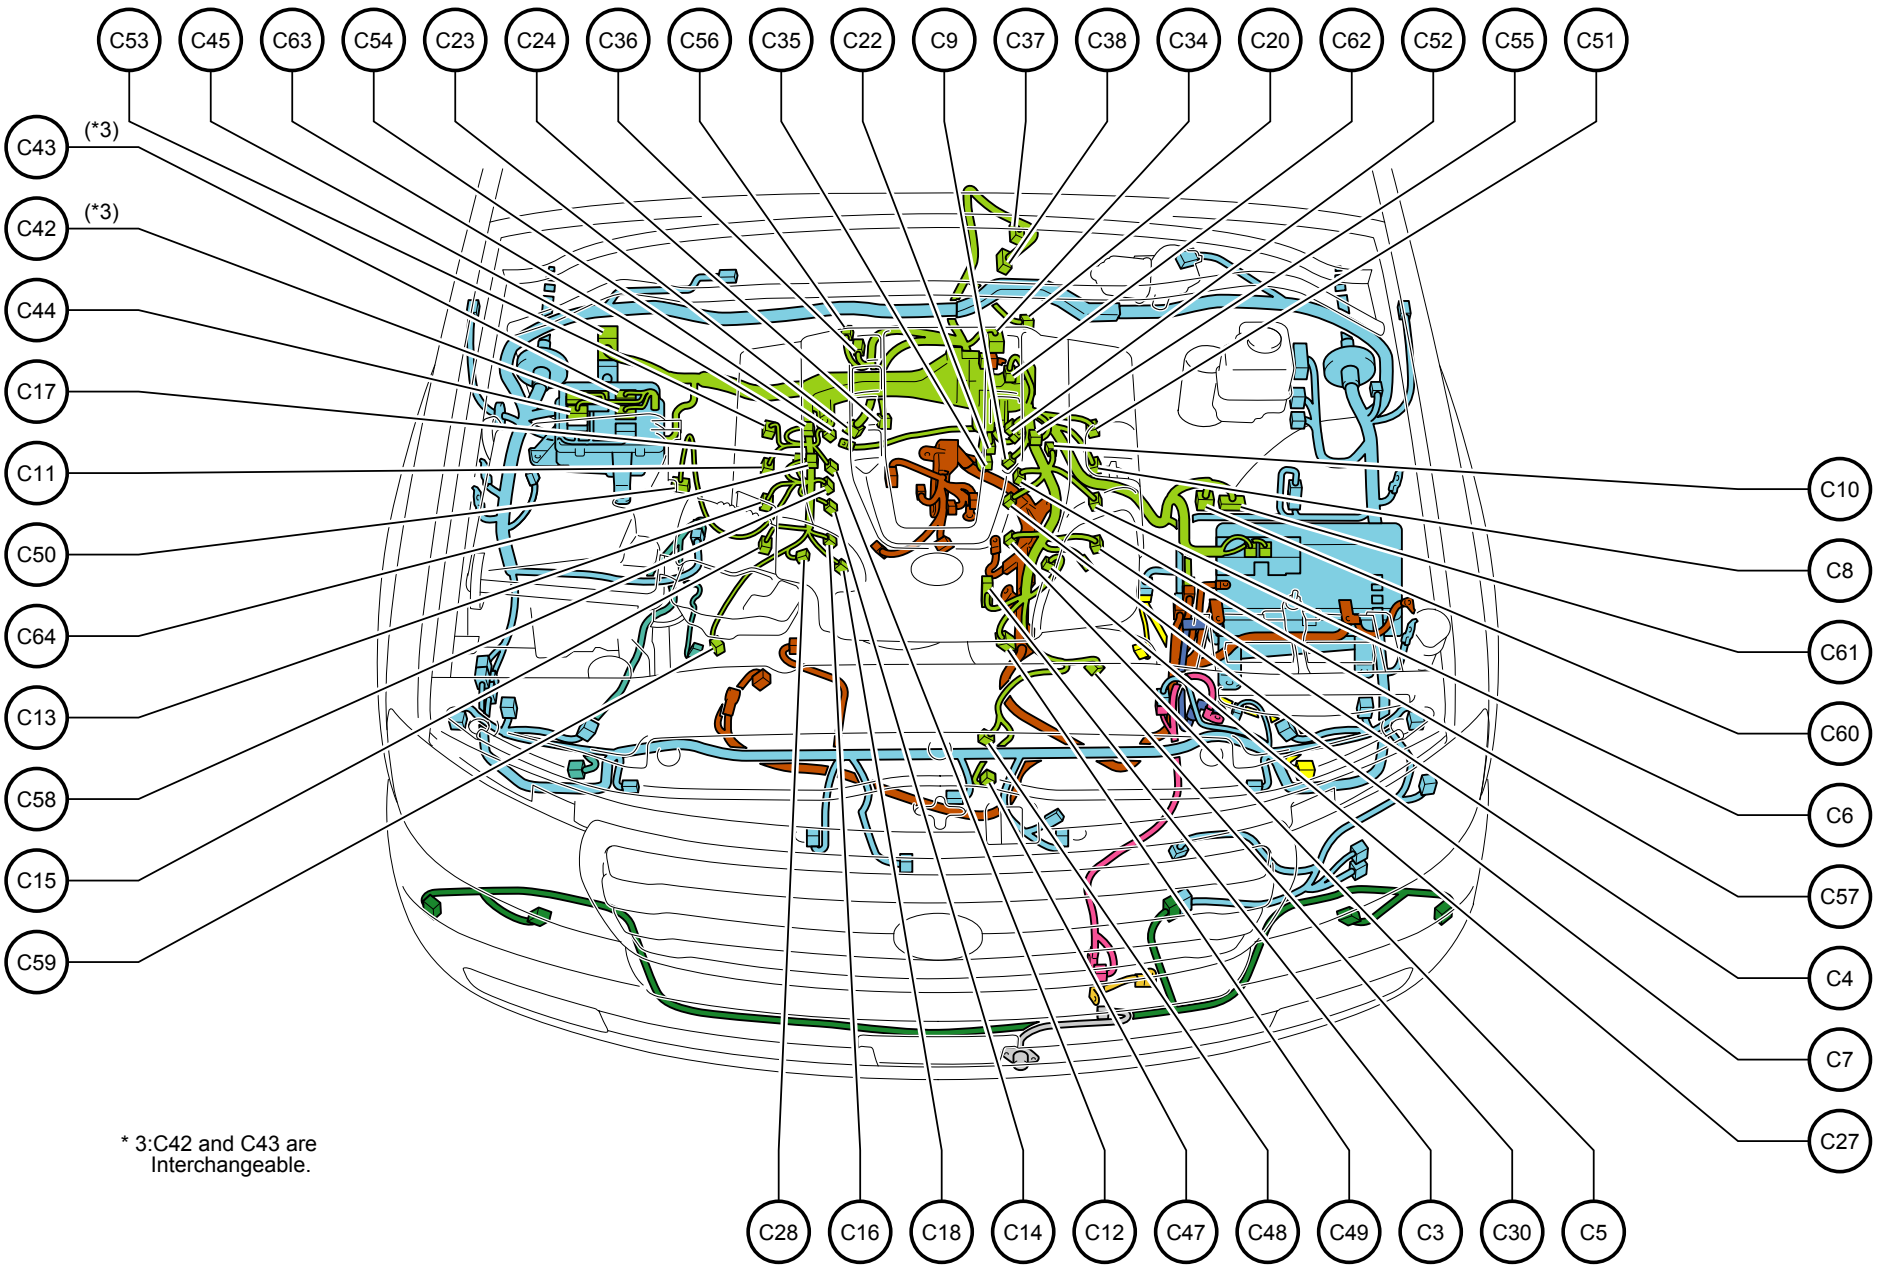


* 3:C42 and C43 are Interchangeable.

C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 5 Fuel Injector Assembly No.1
C 6 Ignition Coil Assembly No.3
C 7 Fuel Injector Assembly No.3
C 8 Ignition Coil Assembly No.5
C 9 Fuel Injector Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 12 Fuel Injector Assembly No.6
C 13 Ignition Coil Assembly No.4
C 14 Fuel Injector Assembly No.4
C 15 Ignition Coil Assembly No.2
C 16 Fuel Injector Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 27 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 28 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 30 Cooler Compressor Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 45 ECM
C 47 Oil Pressure Sender Gage Assembly
C 48 Crankshaft Position Sensor
C 49 Camshaft Position Sensor
C 50 Mass Air Flow Meter
C 51 Ignition Coil Assembly No.7
C 52 Fuel Injector Assembly No.7
C 53 Ignition Coil Assembly No.8
C 54 Fuel Injector Assembly No.8
C 55 Purge VSV
C 56 Oxygen Sensor (Bank 2 Sensor 2)
C 57 VVT Sensor (Bank 1)
C 58 VVT Sensor (Bank 2)
C 59 Power Steering Oil Pressure Sensor
C 60 Air Injection Control Driver
C 61 Air Injection Control Driver
C 62 VSV (ACIS)
C 63 VSV (for No.1 Air Switching Valve)
C 64 VSV (for No.2 Air Switching Valve)


C 3
Black

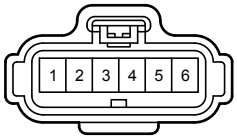


C 4
Black




C 5
Gray




C 6
Black




C 7
Gray

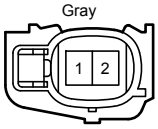

C 8
Black




C 9
Gray

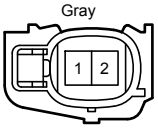


C 10
Gray




C 11
Black




C 12
Gray

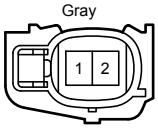


C 13
Black




C 14
Gray

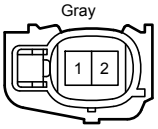

C 15
Black



C 16
Gray

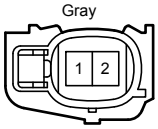

C 17
Gray



C 18
Dark Gray



C 20
Dark Gray




C 22
Dark Gray



C 23
Dark Gray



C 24
Gray

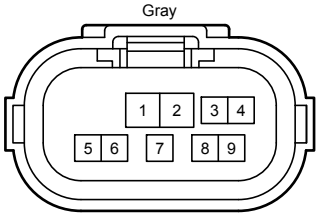

C 27
Black




C 28
Black




C 30
Gray




C 34
Gray

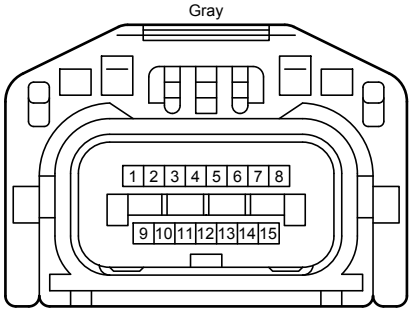


C 35
Black

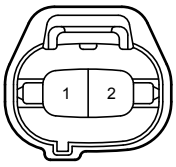


C 36
Black

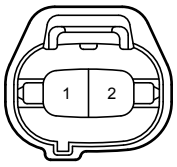


C 37
Black

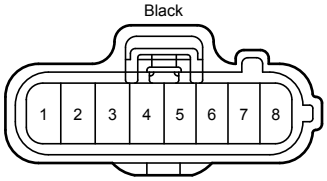


C 38
Dark Gray

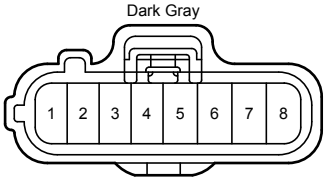


C 42
White

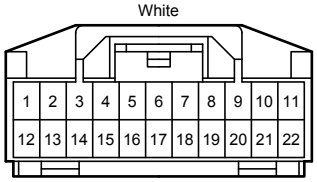


C 43
White

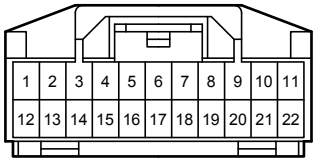

C 44
Blue

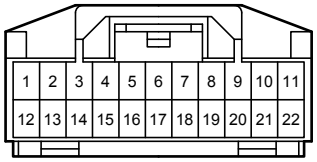

C 45
Black

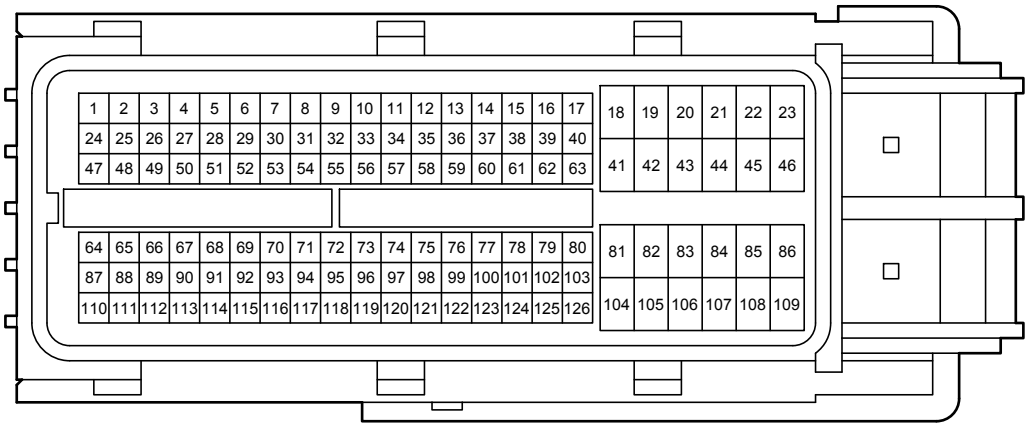

C 47
Black




C 48
Dark Gray




C 49
Gray




C 50
Black

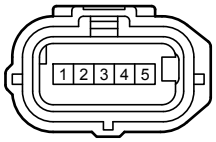


C 51
Black




C 52
Gray

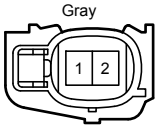


C 53
Black



C 54
Gray

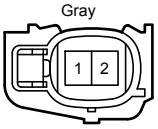


C 55
Black

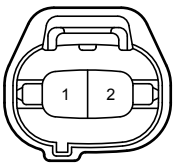

C 56
Dark Gray




C 57
Dark Gray

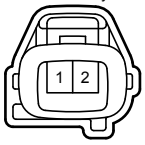


C 58
Dark Gray




C 59
Gray

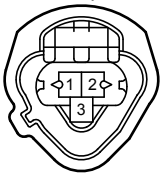


C 60
Black

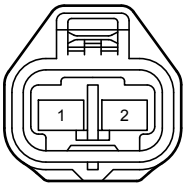


C 61
Black

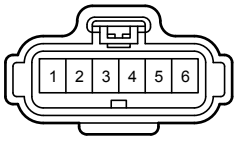


C 62
Black

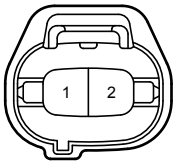


C 63
Brown

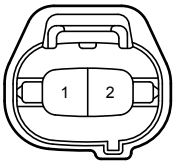

C 64
Brown

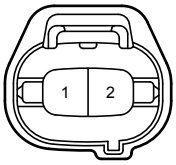


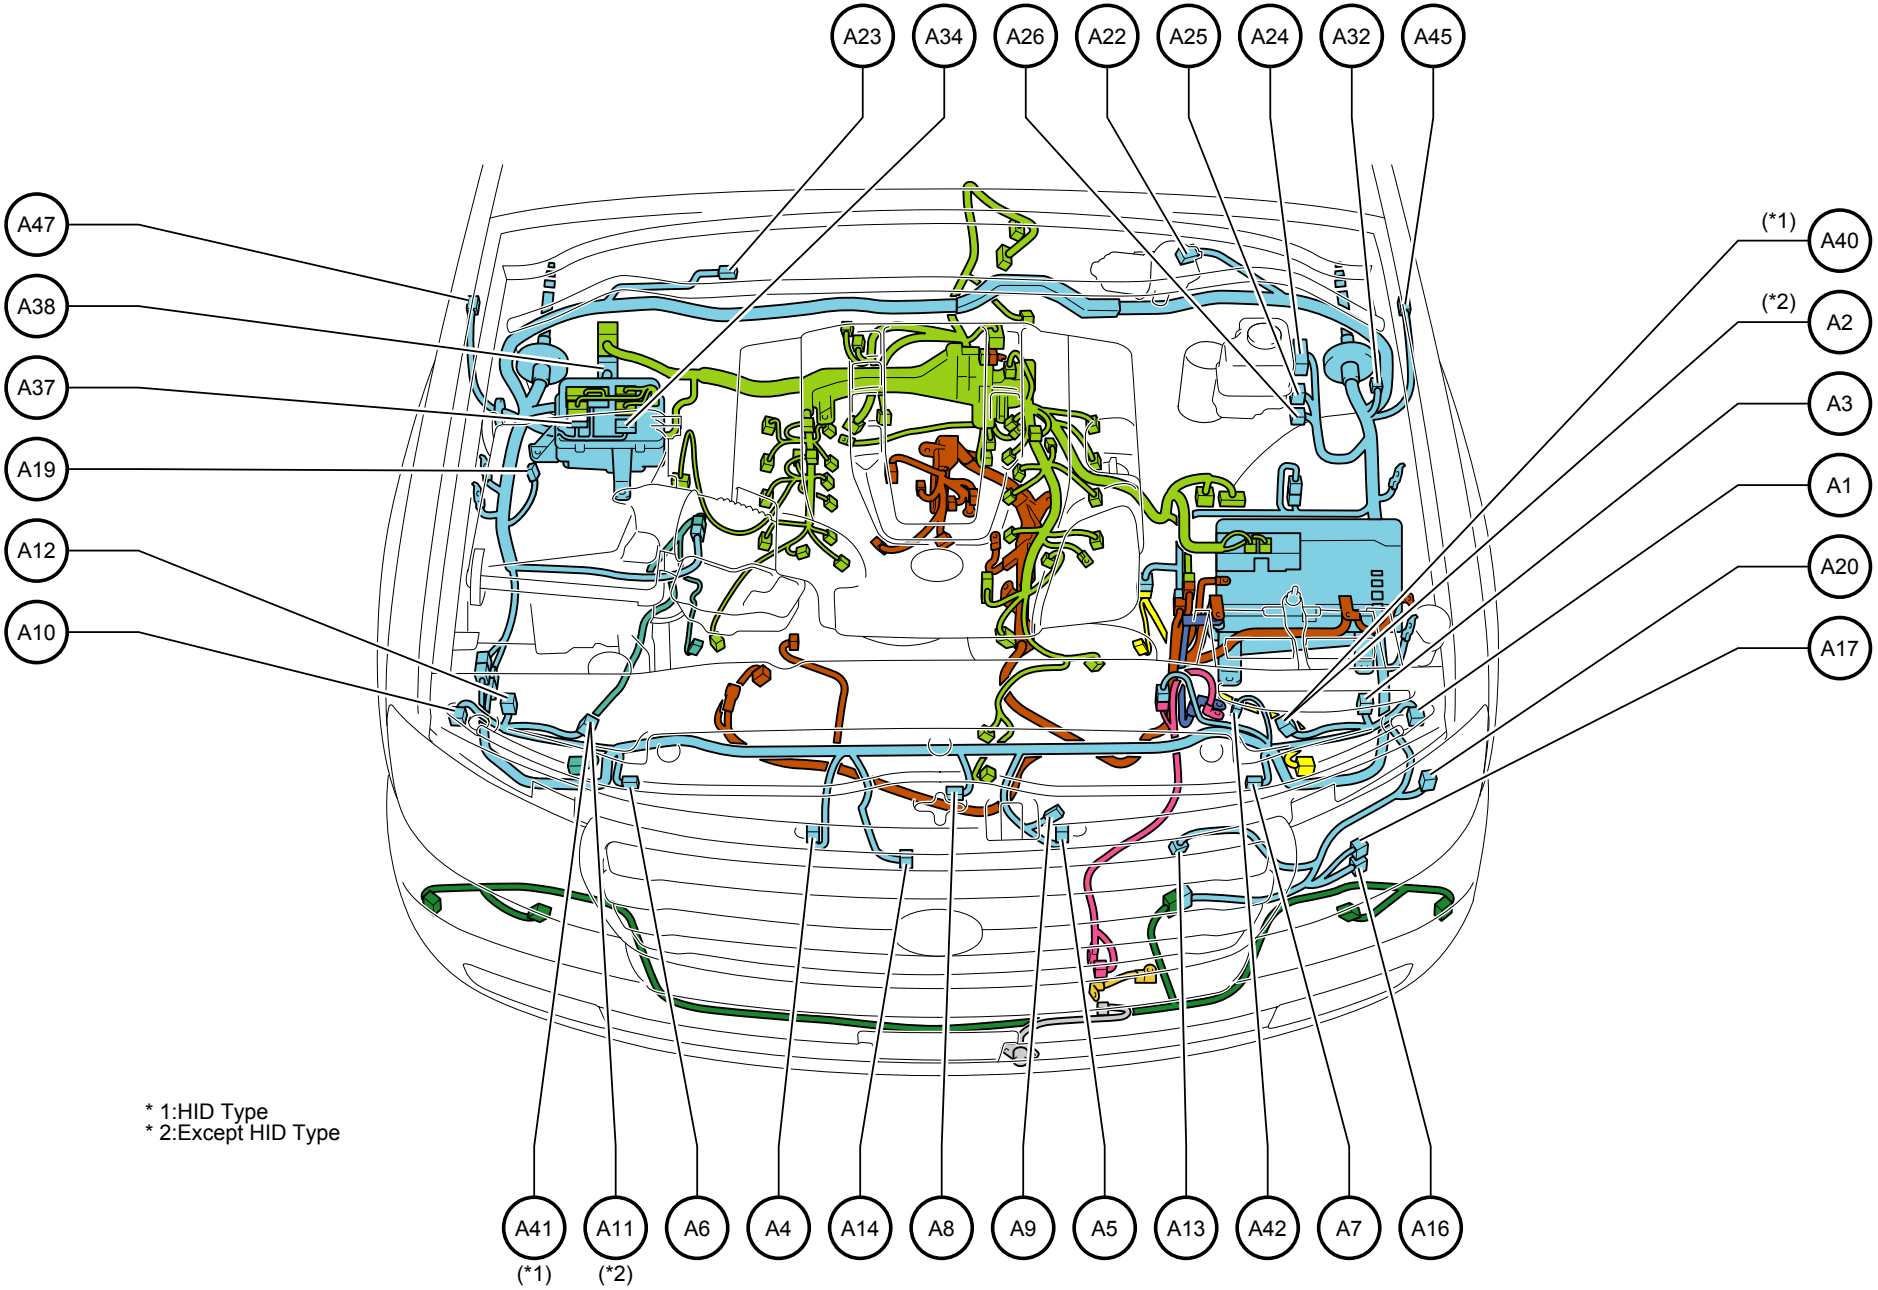


* 1:HID Type
* 2:Except HID Type

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 17 Headlight Cleaner Control Relay and Motor
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 23 Front Wiper Deicer (Windshield Glass)
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 38 ECM
A 40 Headlight Assembly LH
A 41 Headlight Assembly RH
A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH


A 1
Gray

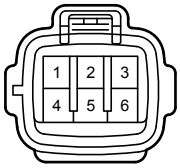


A 2
Black

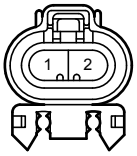


A 3
Black

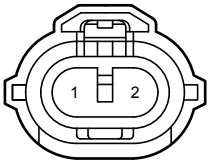


A 4
Black




A 5
Black



A 6
Yellow

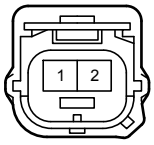

A 7
Yellow

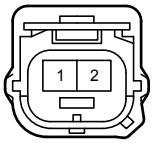


A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

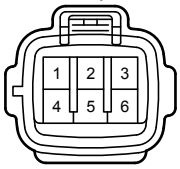


A 11
Black

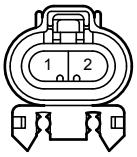

A 12
Black

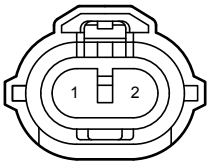

A 13
Black

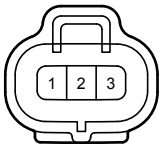

A 14
Black



A 16
Gray




A 17
Black




A 19
Black




A 20
Black




A 22
Black

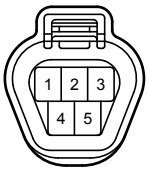


A 23
Gray




A 24
Black

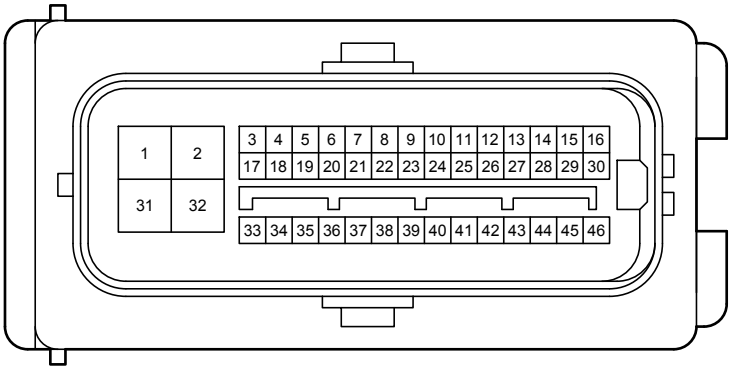


A 25
Black

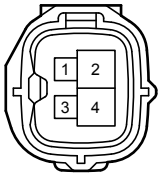


A 26
Gray

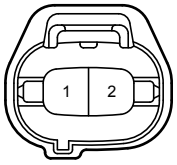


A 32
Black

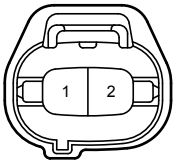


A 34
White

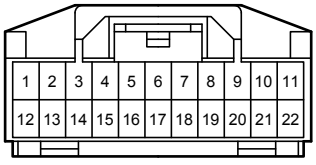

A 37
Blue

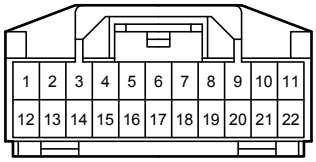

A 38
Black

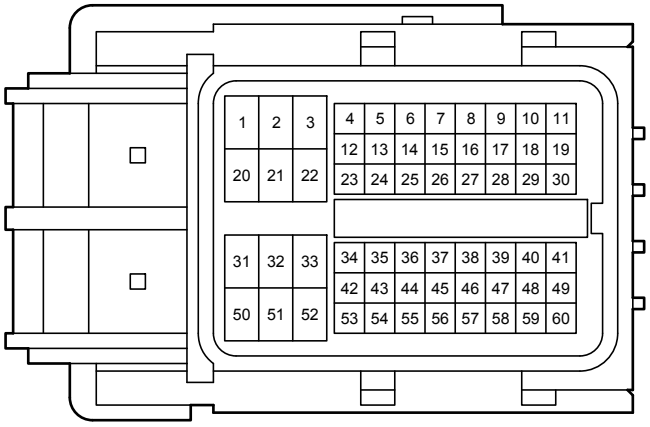


A 40
Gray



A 41
Gray



A 42
Black

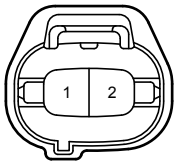


A 45
Gray



A 47
Gray

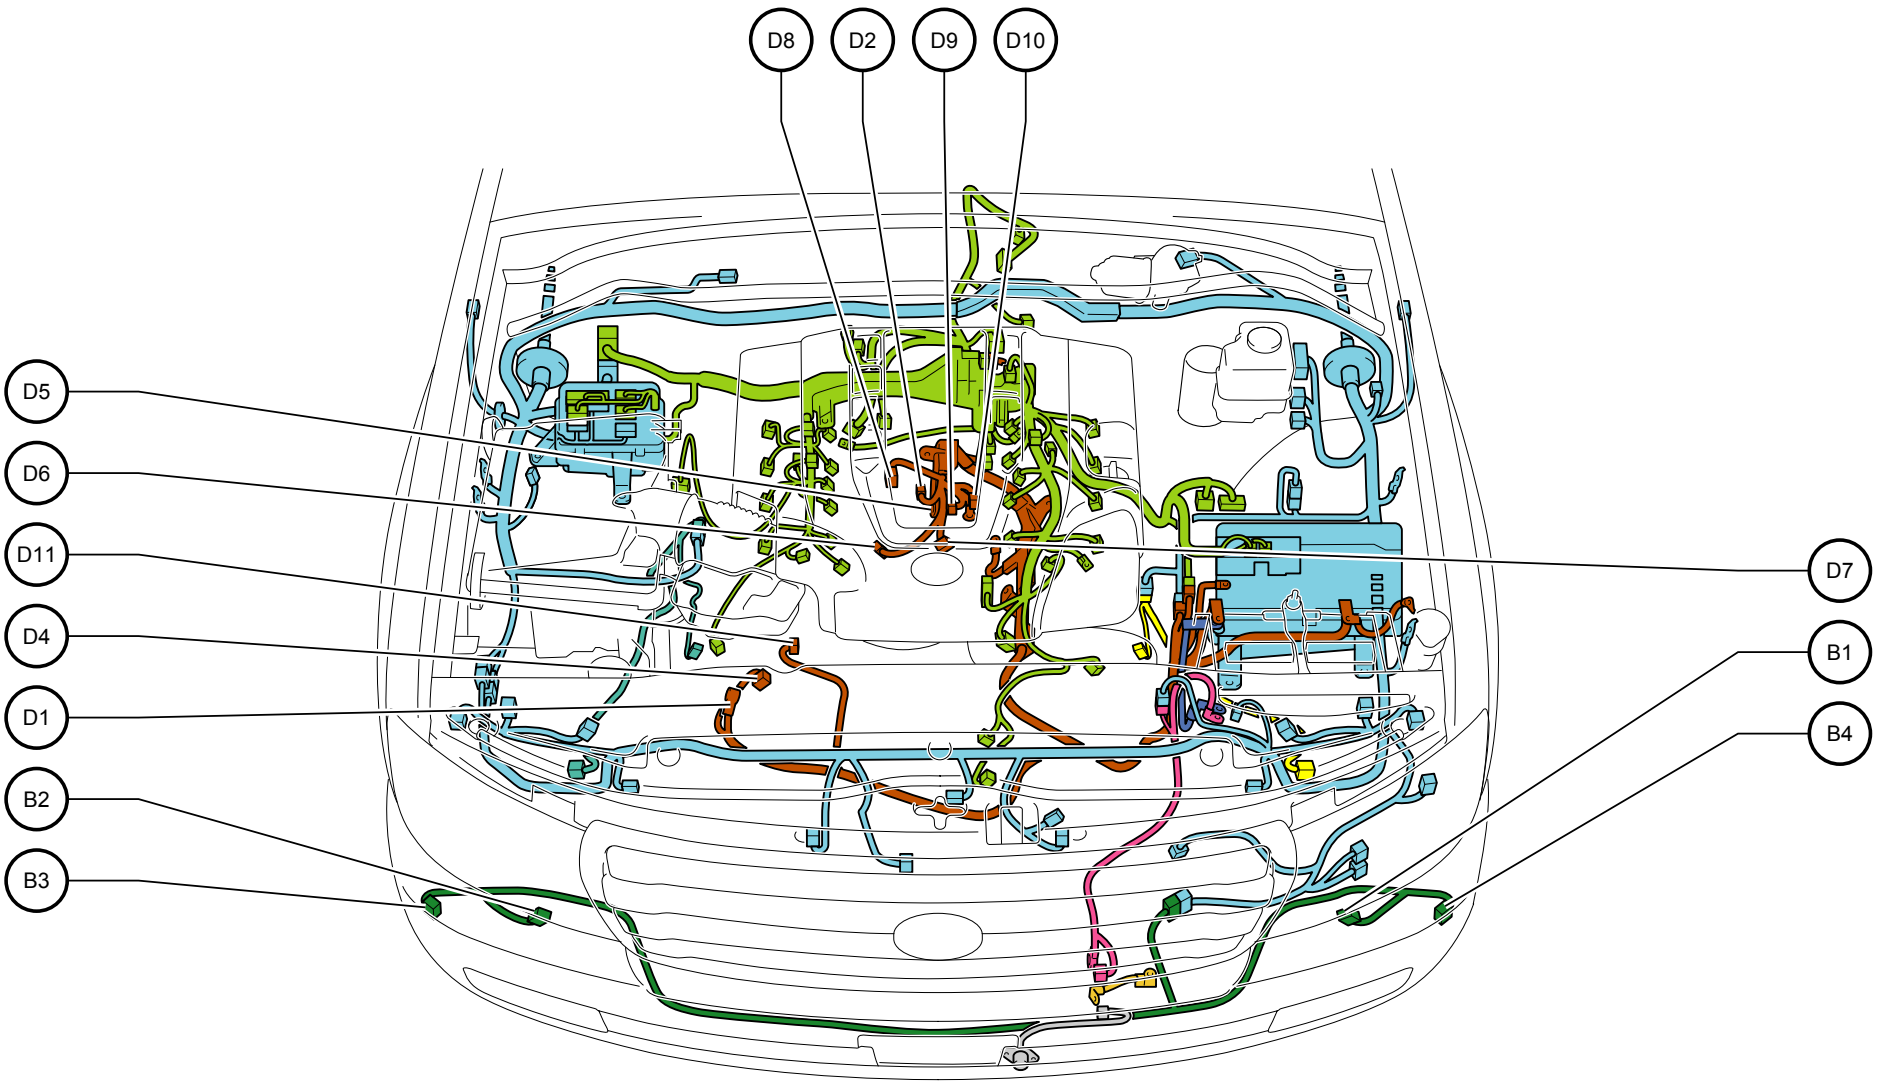



D8
D2
D9
D10
D5
D6
D11
D4
D1
B2
B3
D7
B1
B4


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH

D 1 Generator Assembly
D 2 Starter Assembly
D 4 Generator Assembly
D 5 Starter Assembly
D 6 Knock Control Sensor (Bank 2)
D 7 Knock Control Sensor (Bank 1)
D 8 Air Pump Assembly
D 9 Air Pressure Sensor
D 10 Air Switching Valve
D 11 Engine Oil Level Sensor


B 1
Brown

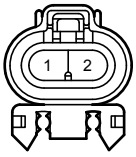


B 2
Brown

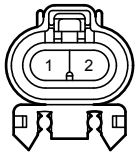


B 3
Black

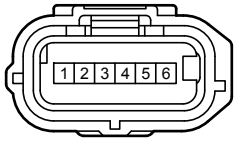

B 4
Black

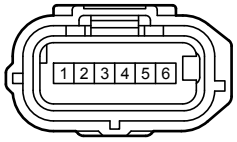


D 1




D 2
Black




D 4
Black

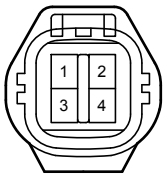


D 5




D 6
Gray

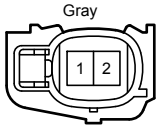


D 7
Black




D 8
Gray

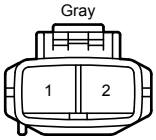


D 9
Black

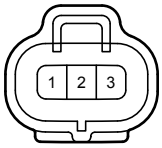


D 10
Black

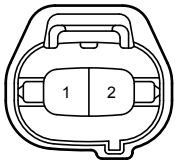

D 11
Gray

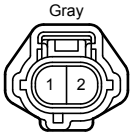

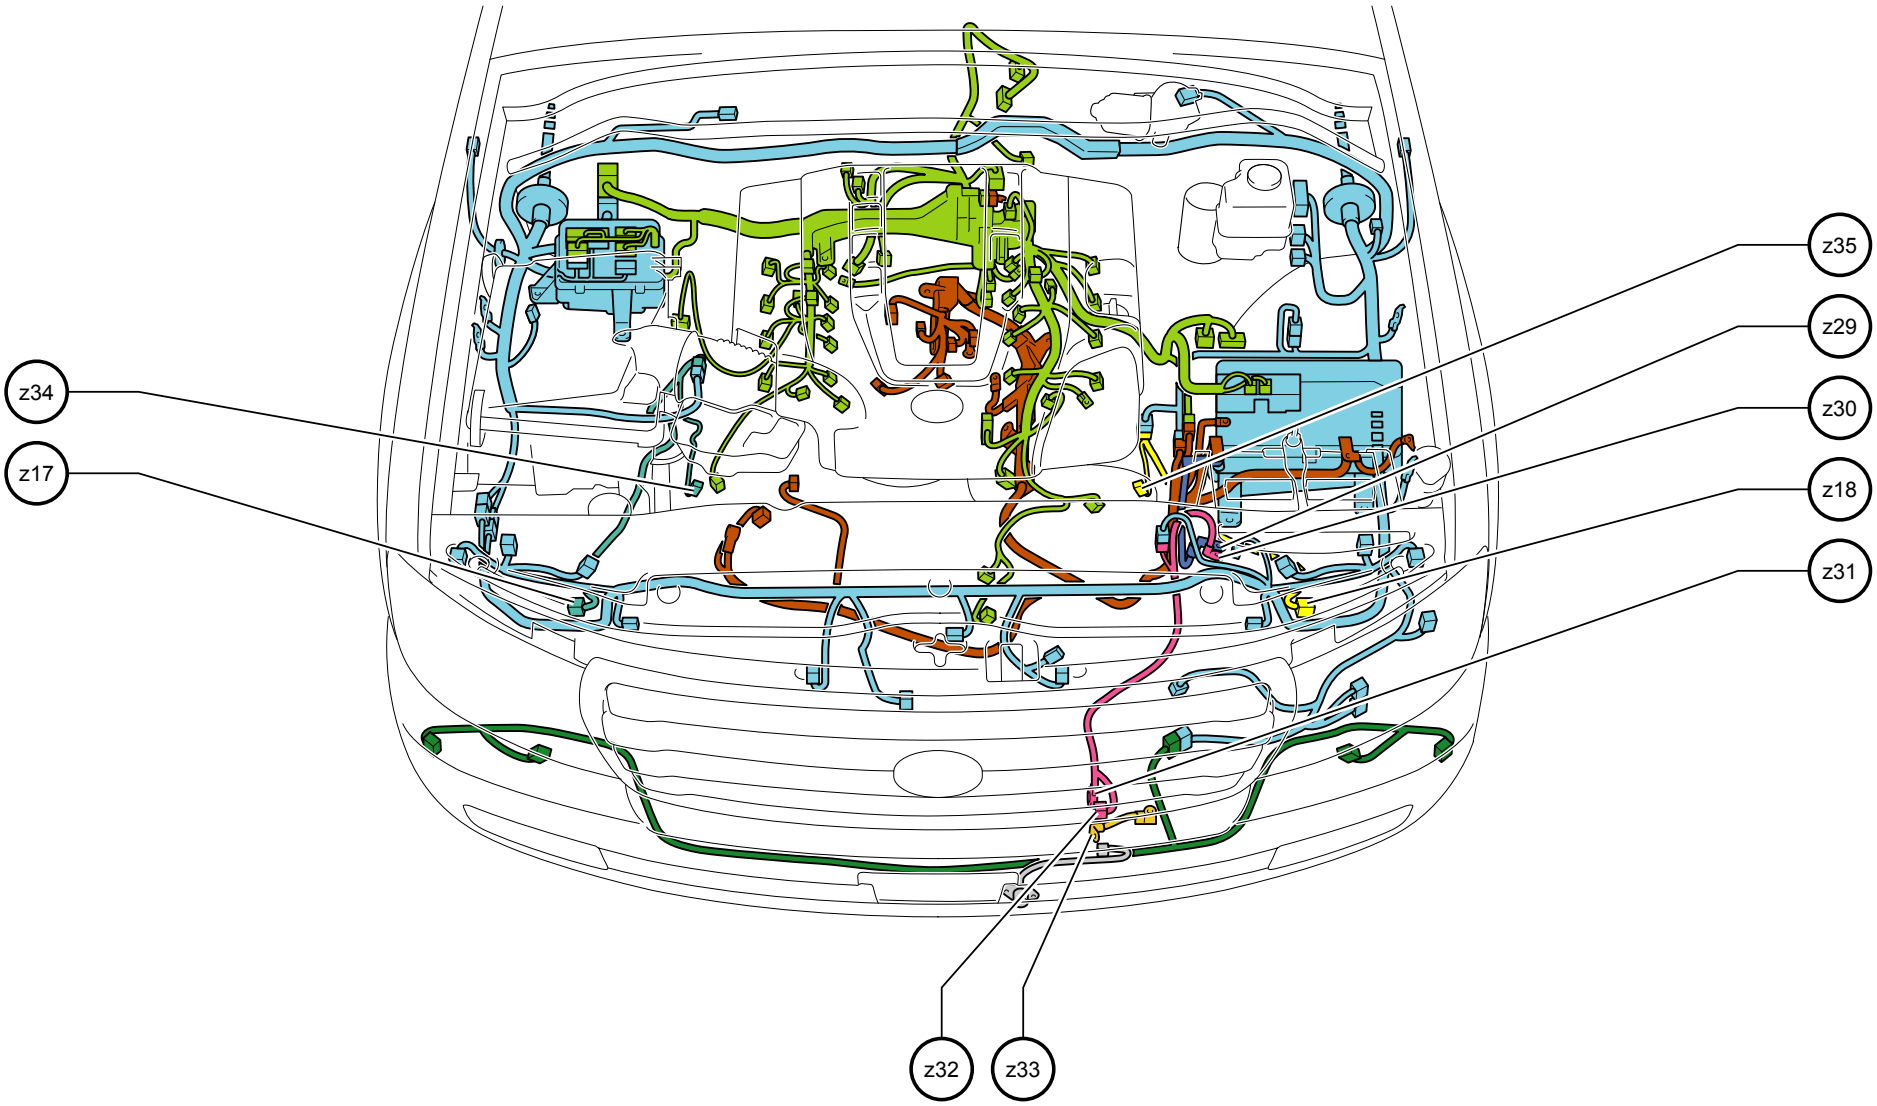
z34
z17
z35
z29
z30
z18
z31
z32
z33

- z 17 Front Speed Sensor RH
- z 18 Front Speed Sensor LH
- z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 31 With Magnet Switch Winch Motor Assembly
- z 32 With Magnet Switch Winch Motor Assembly
- z 33 With Magnet Switch Winch Motor Assembly
- z 34 Front Height Control Sensor Sub-Assembly RH
- z 35 Front Height Control Sensor Sub-Assembly LH


z 17
Black




z 18
Black




z 29




z 30




z 31




z 32
Gray

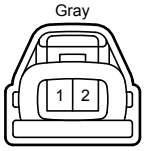


z 33





z 34
Black

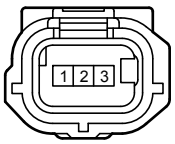



z 35
Black

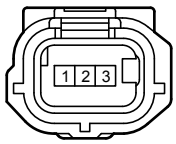


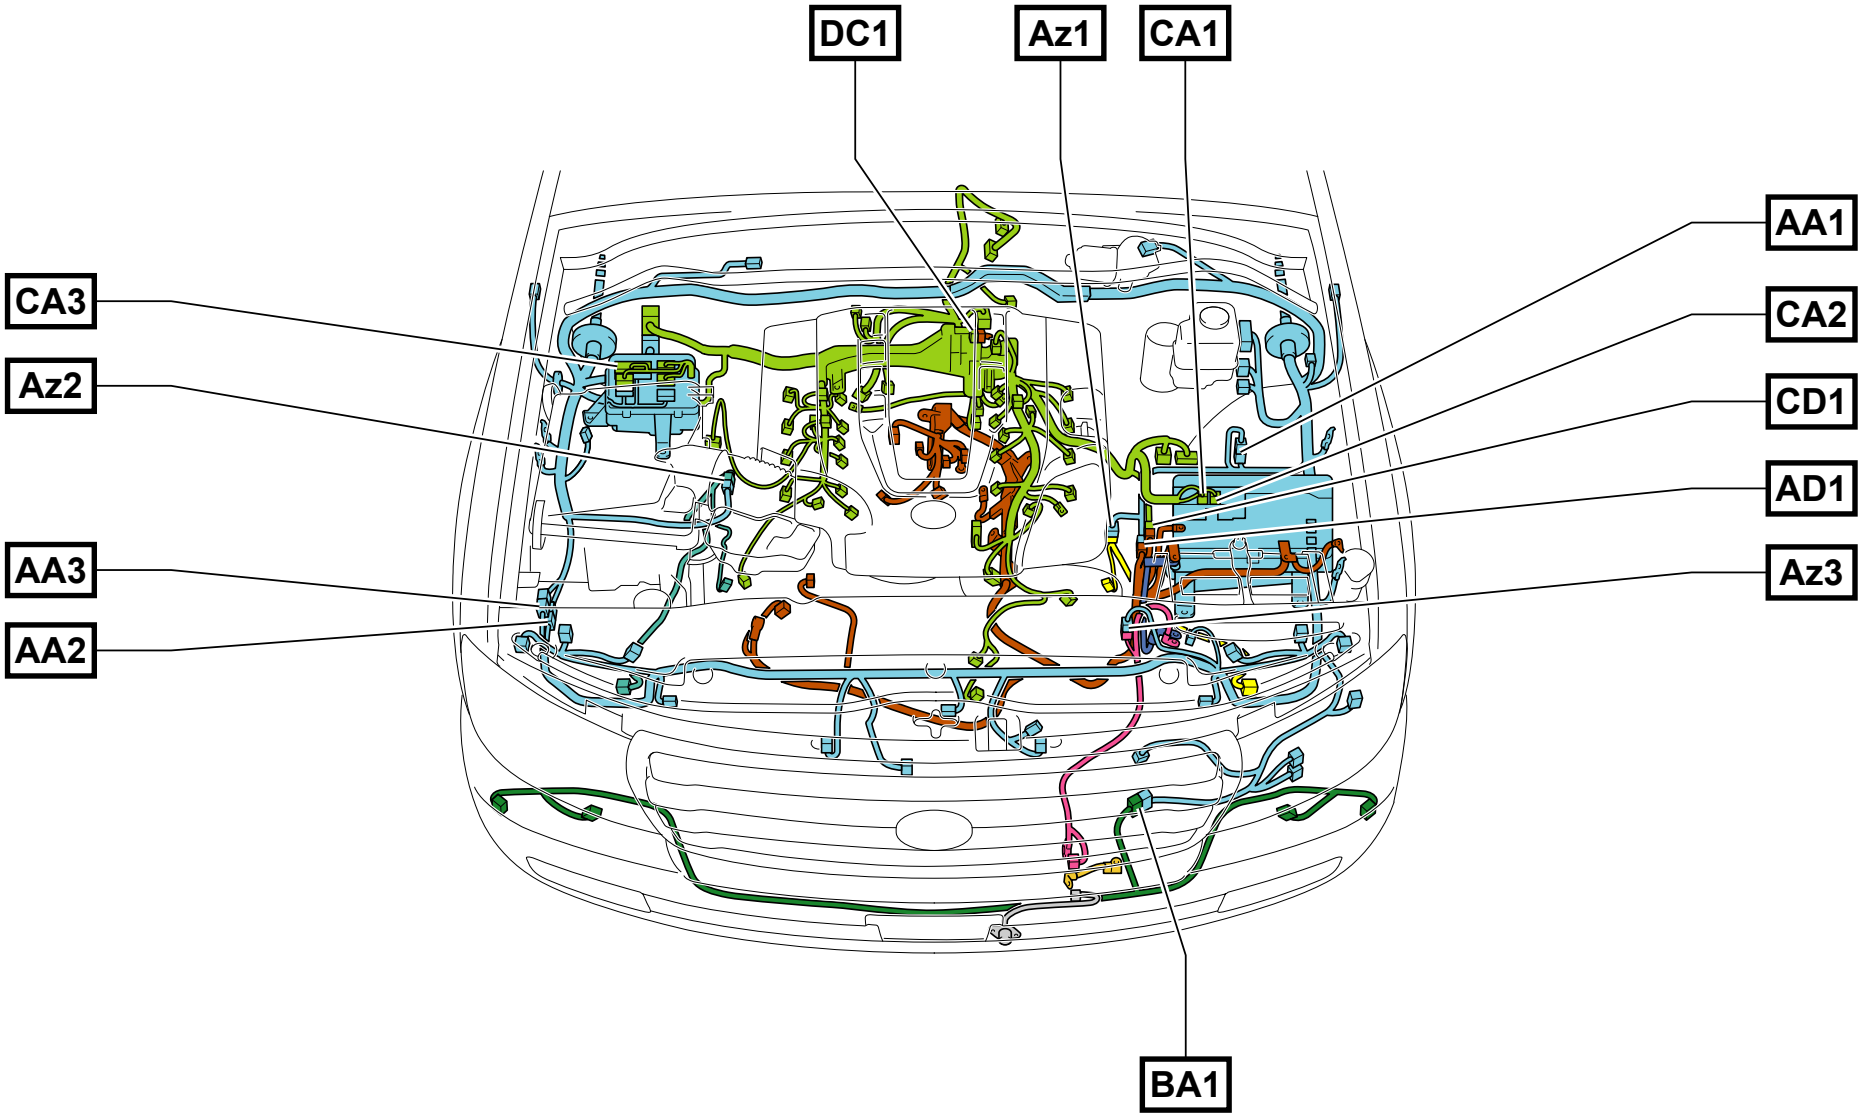

DC1
Az1
CA1
AA1
CA3
CA2
Az2
CD1
AD1
AA3
Az3
AA2
BA1

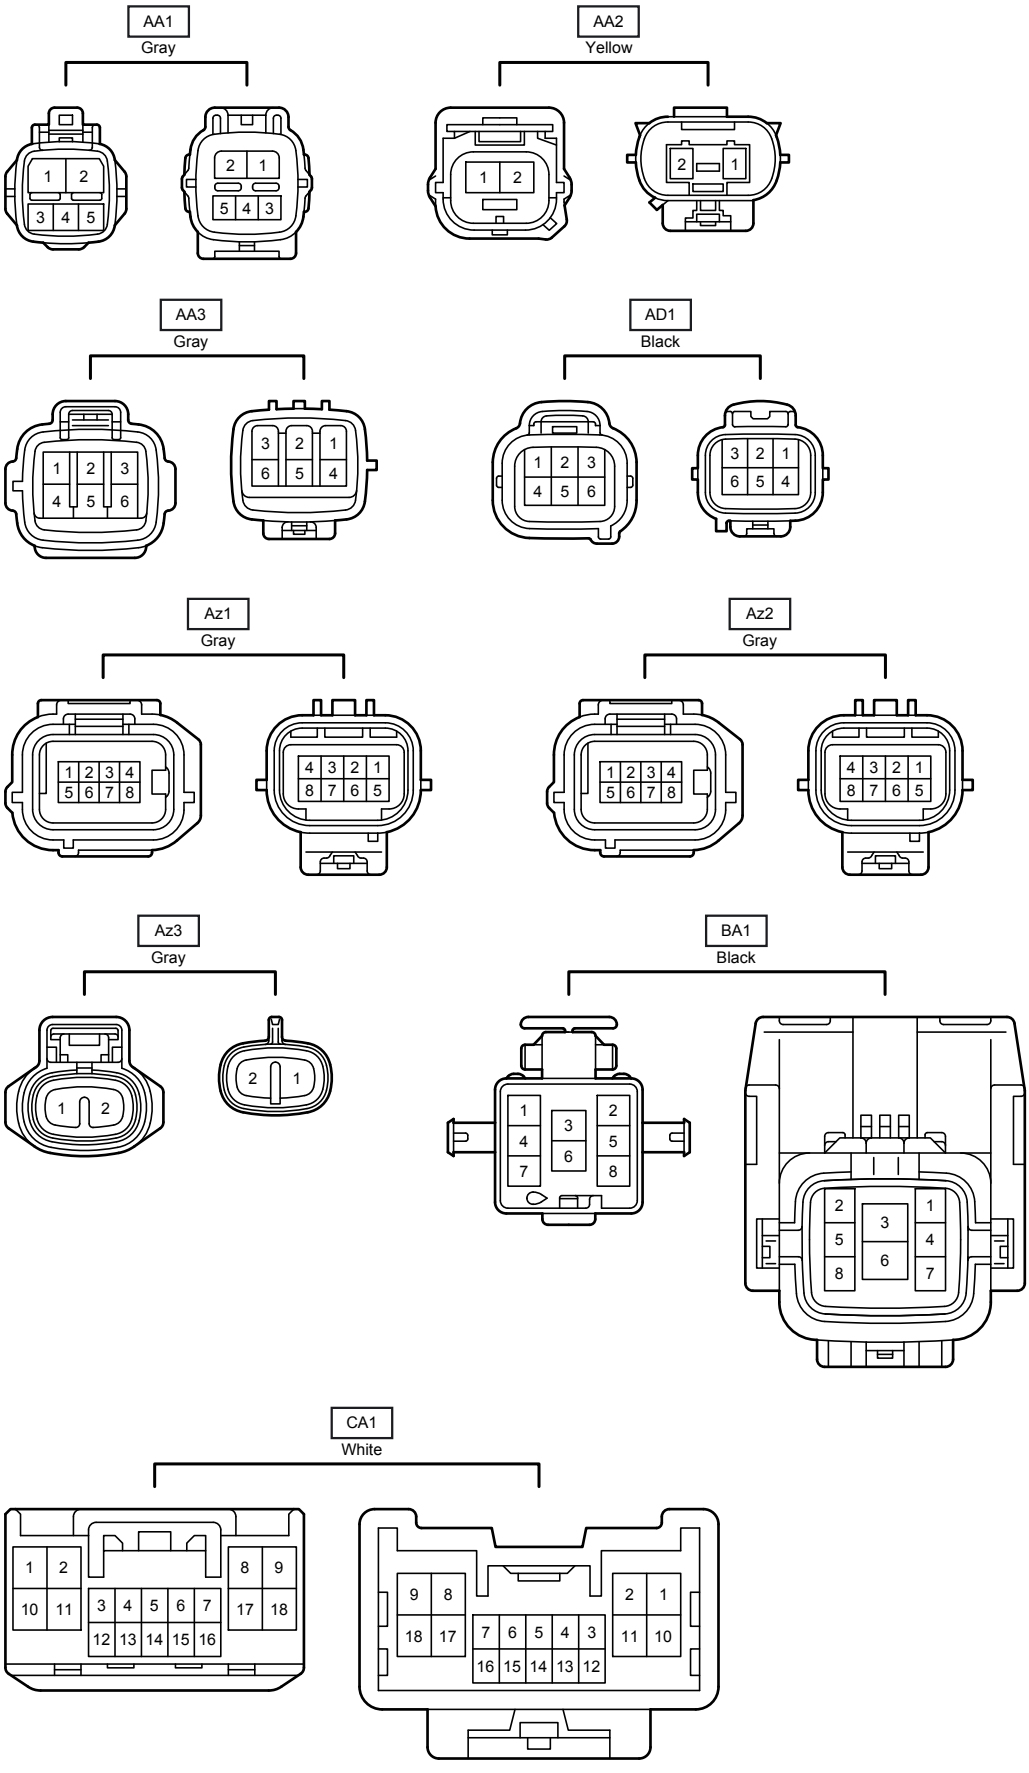

AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1
AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AD1
Black
1 2 3
4 5 6
3 2 1
6 5 4
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az3
Gray
1 2
2 1
BA1
Black
1 4 7
3 6
2 5 8
2 5 8
3 6
1 4 7
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

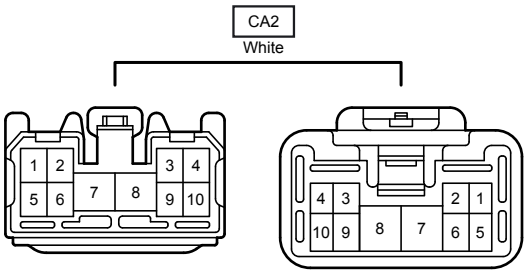
CA2
White
1 2 3 4
5 6 7 8 9 10
4 3 2 1
10 9 8 7 6 5

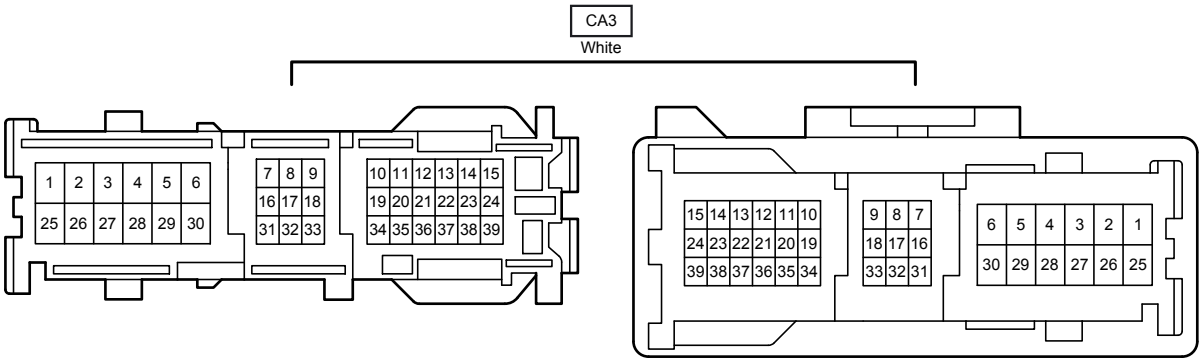
CA3
White
1 2 3 4 5 6
25 26 27 28 29 30
7 8 9
16 17 18
31 32 33
10 11 12 13 14 15
19 20 21 22 23 24
34 35 36 37 38 39
15 14 13 12 11 10
24 23 22 21 20 19
39 38 37 36 35 34
9 8 7
18 17 16
33 32 31
6 5 4 3 2 1
30 29 28 27 26 25

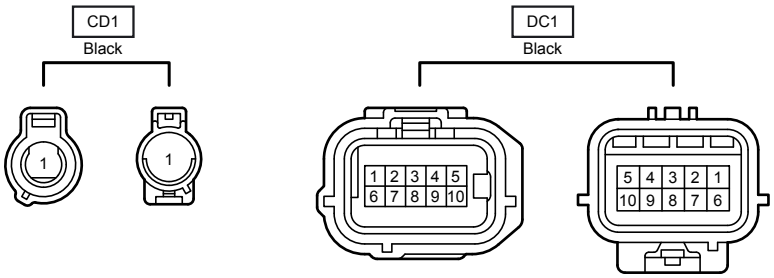
CD1
Black
1
1
DC1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

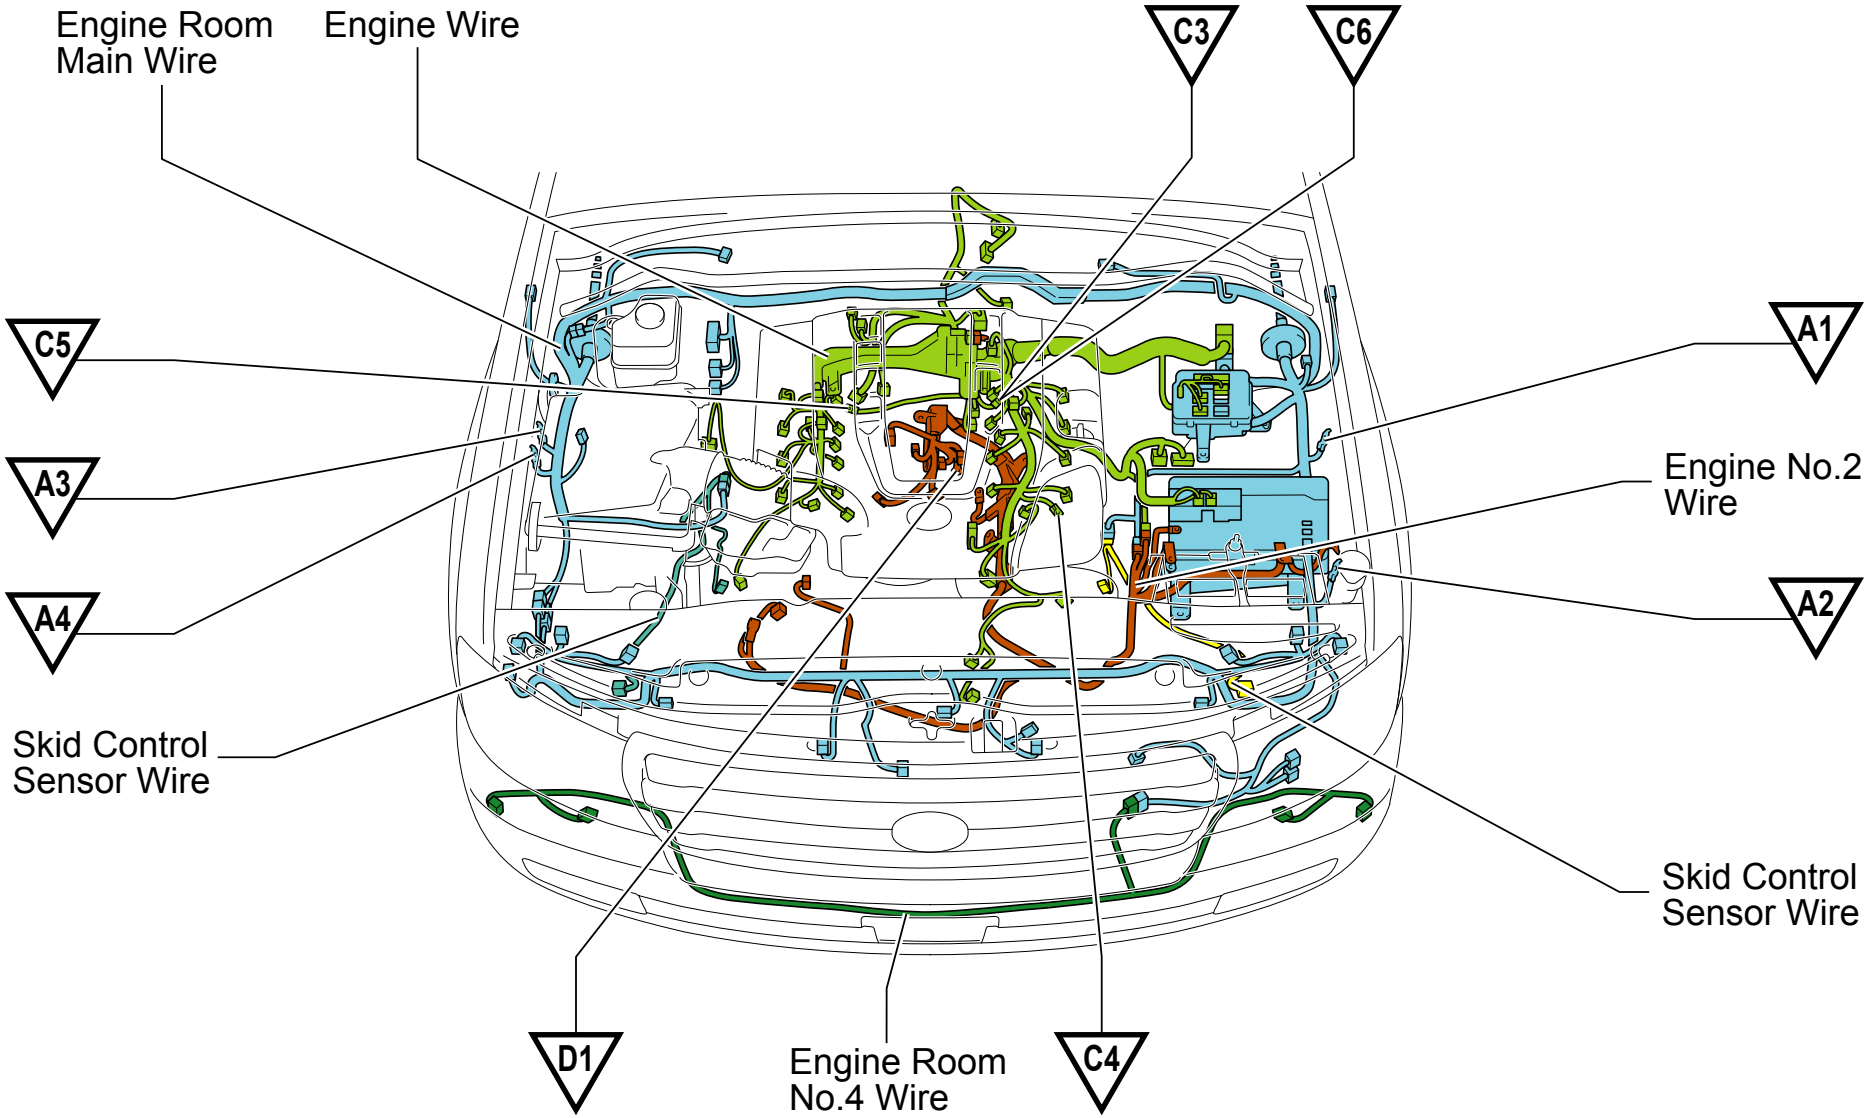

Engine Room
Main Wire
Engine Wire
C3
C6
C5
A1
A3
Engine No.2
Wire
A4
A2
Skid Control
Sensor Wire
Skid Control
Sensor Wire
D1
Engine Room
No.4 Wire
C4

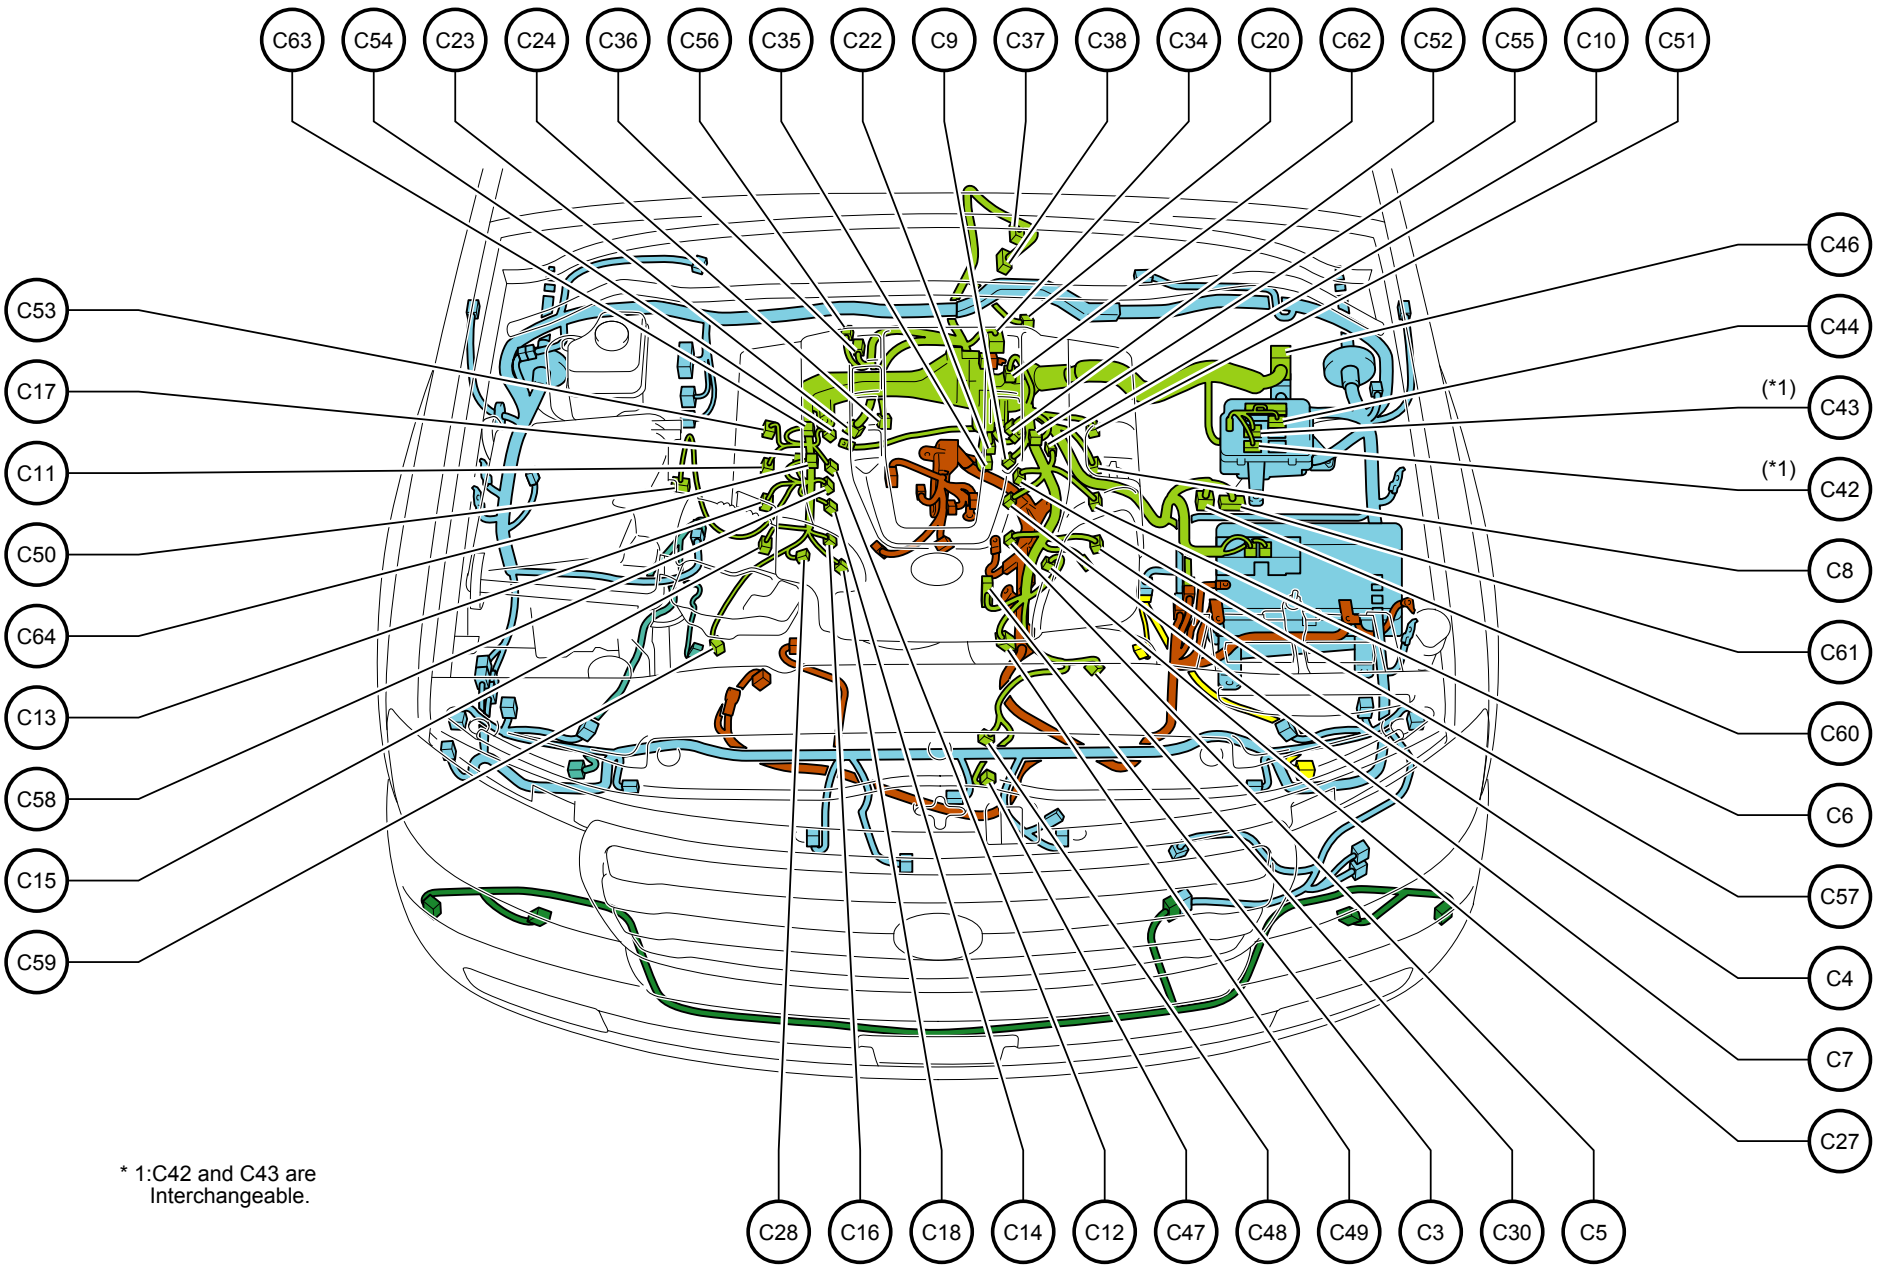


* 1:C42 and C43 are Interchangeable.

C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 5 Fuel Injector Assembly No.1
C 6 Ignition Coil Assembly No.3
C 7 Fuel Injector Assembly No.3
C 8 Ignition Coil Assembly No.5
C 9 Fuel Injector Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 12 Fuel Injector Assembly No.6
C 13 Ignition Coil Assembly No.4
C 14 Fuel Injector Assembly No.4
C 15 Ignition Coil Assembly No.2
C 16 Fuel Injector Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 27 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 28 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 30 Cooler Compressor Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 46 ECM
C 47 Oil Pressure Sender Gage Assembly
C 48 Crankshaft Position Sensor
C 49 Camshaft Position Sensor
C 50 Mass Air Flow Meter
C 51 Ignition Coil Assembly No.7
C 52 Fuel Injector Assembly No.7
C 53 Ignition Coil Assembly No.8
C 54 Fuel Injector Assembly No.8
C 55 Purge VSV
C 56 Oxygen Sensor (Bank 2 Sensor 2)
C 57 VVT Sensor (Bank 1)
C 58 VVT Sensor (Bank 2)
C 59 Power Steering Oil Pressure Sensor
C 60 Air Injection Control Driver
C 61 Air Injection Control Driver
C 62 VSV (ACIS)
C 63 VSV (for No.1 Air Switching Valve)
C 64 VSV (for No.2 Air Switching Valve)


C 3
Black

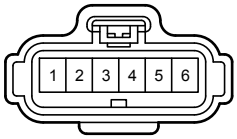


C 4
Black




C 5
Gray




C 6
Black




C 7
Gray

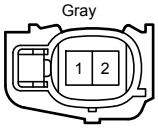

C 8
Black




C 9
Gray

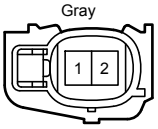


C 10
Gray




C 11
Black




C 12
Gray

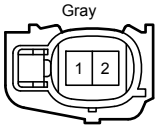


C 13
Black




C 14
Gray

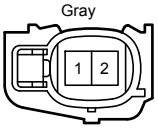

C 15
Black



C 16
Gray

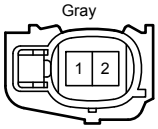

C 17
Gray



C 18
Dark Gray



C 20
Dark Gray




C 22
Dark Gray



C 23
Dark Gray



C 24
Gray

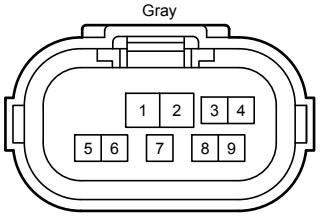

C 27
Black




C 28
Black




C 30
Gray




C 34
Gray

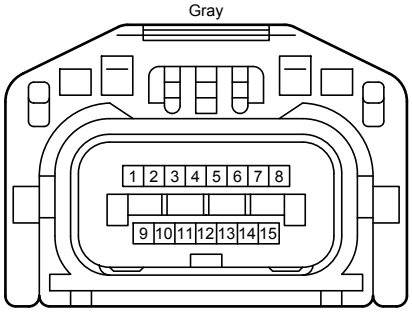


C 35
Black

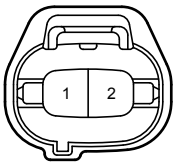


C 36
Black

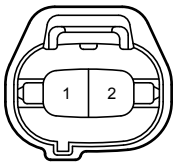


C 37
Black

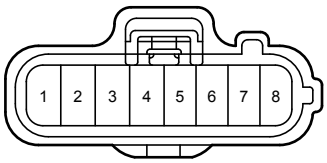


C 38
Dark Gray

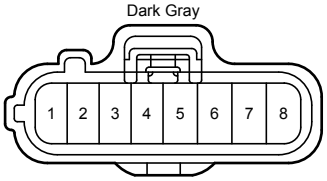


C 42
White

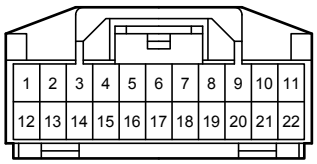


C 43
White

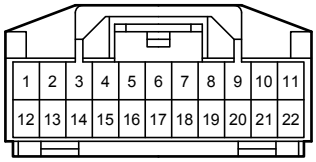

C 44
Blue

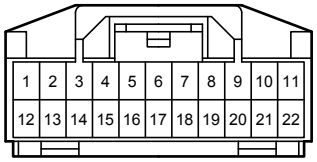

C 46
Black

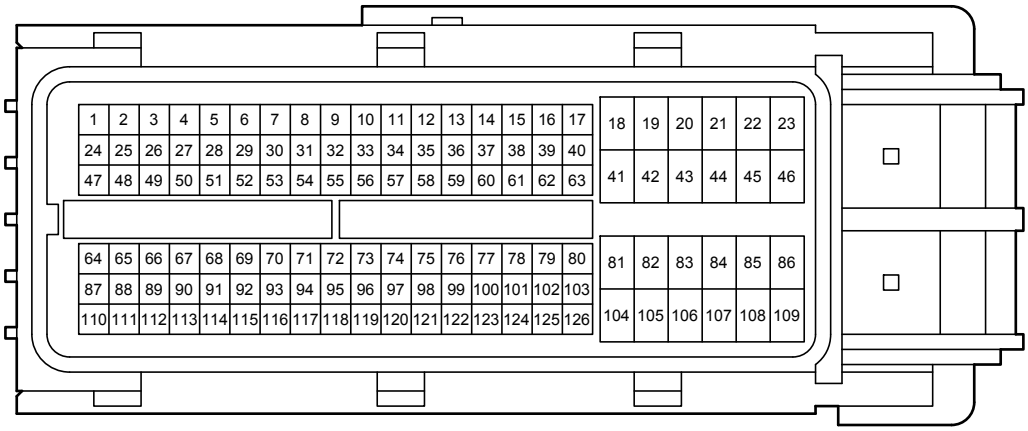

C 47
Black




C 48
Dark Gray




C 49
Gray




C 50
Black

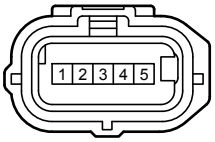


C 51
Black




C 52
Gray

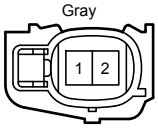


C 53
Black



C 54
Gray

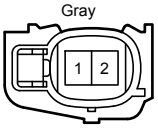

C 55
Black

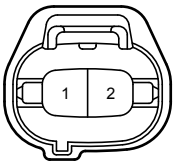

C 56
Dark Gray




C 57
Dark Gray




C 58
Dark Gray




C 59
Gray

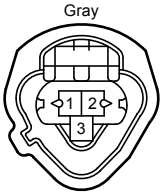


C 60
Black

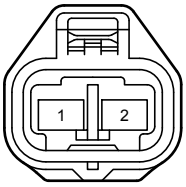


C 61
Black

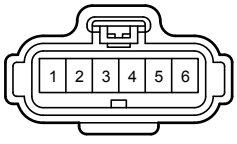


C 62
Black

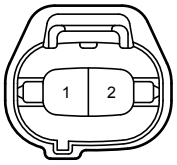


C 63
Brown

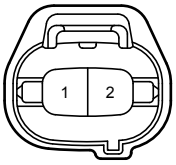


C 64
Brown

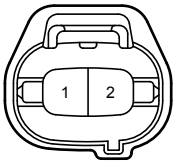

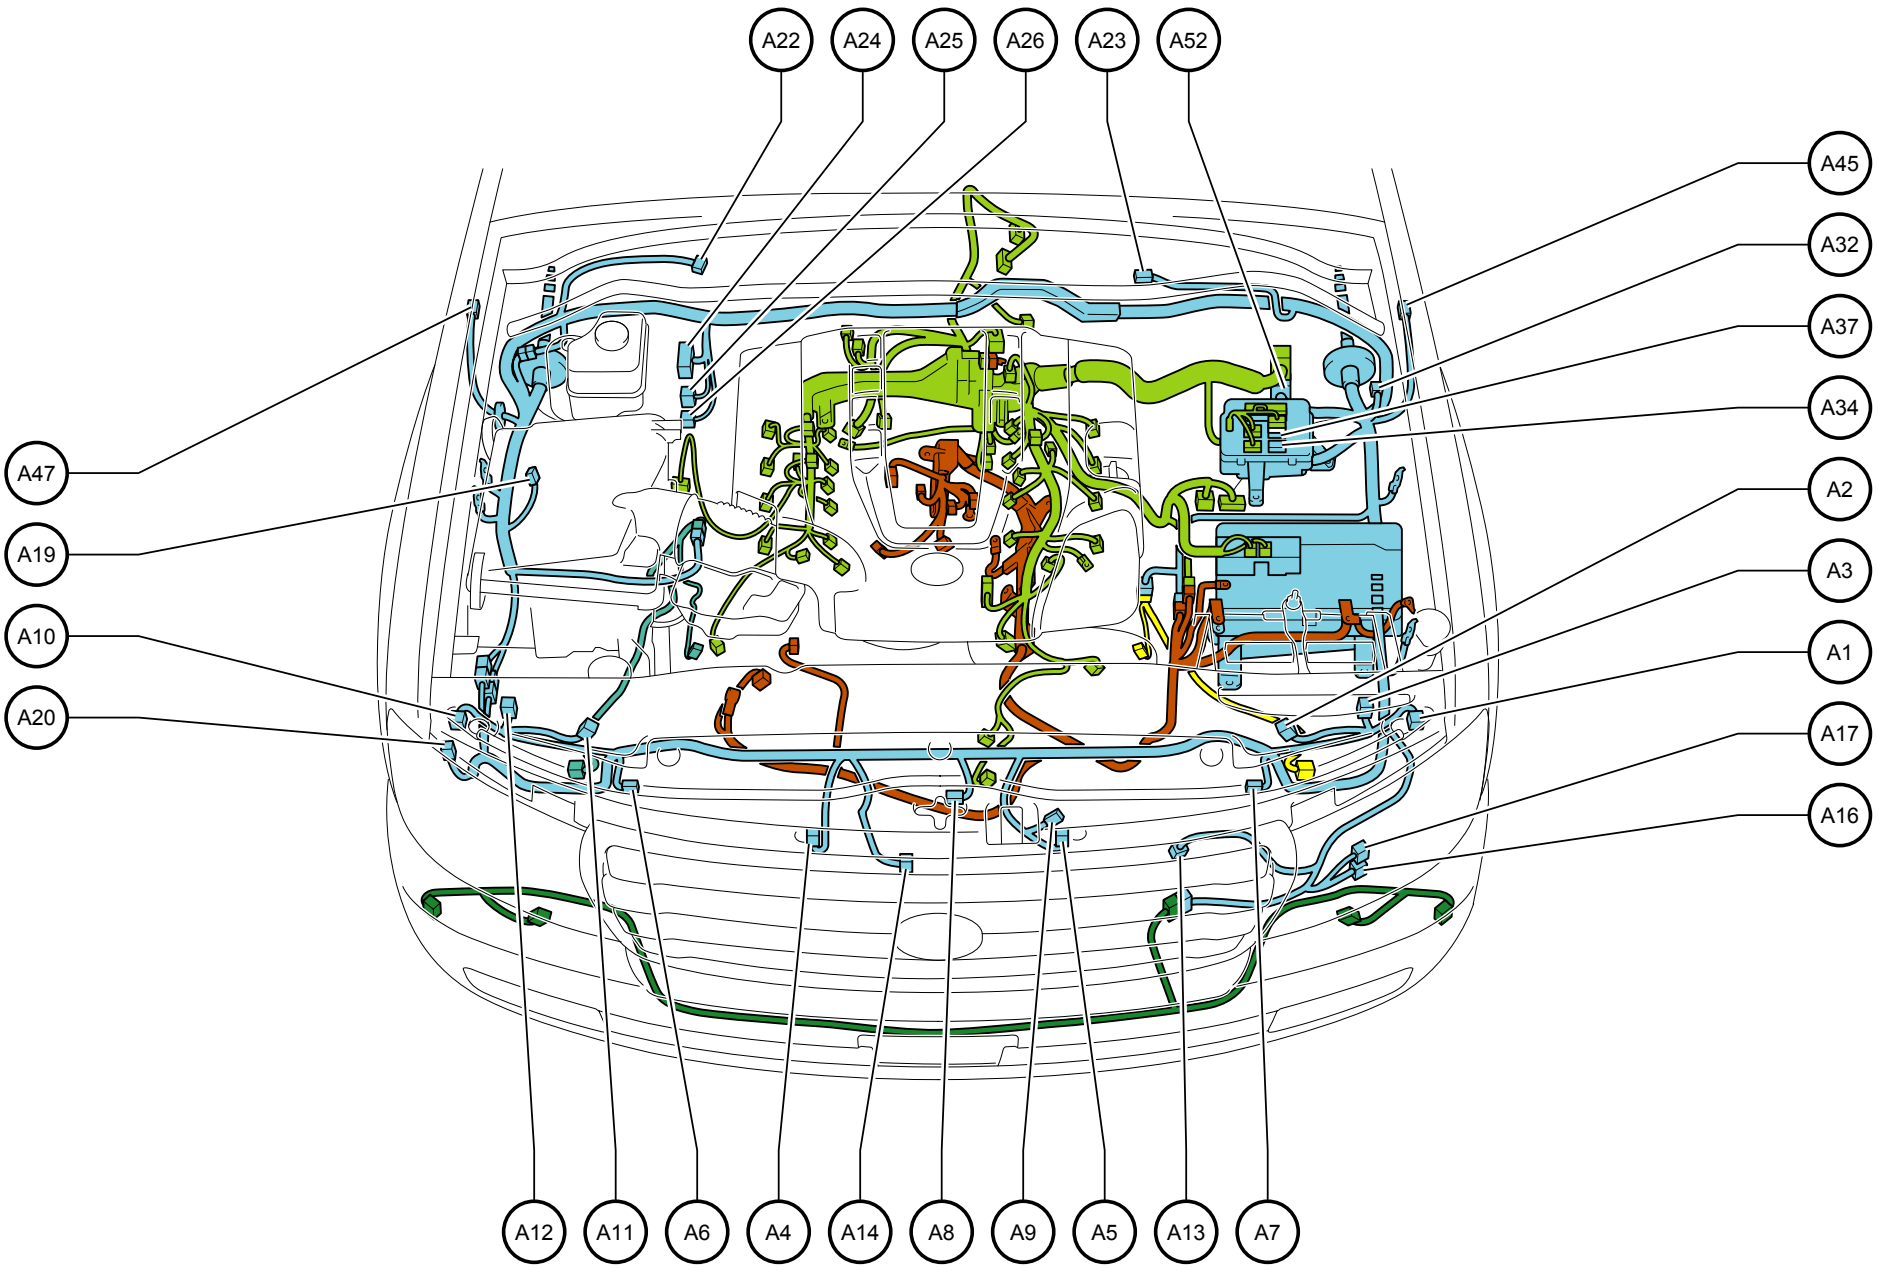

A22
A24
A25
A26
A23
A52
A45
A32
A37
A34
A47
A2
A19
A3
A10
A1
A20
A17
A16
A12
A11
A6
A4
A14
A8
A9
A5
A13
A7

A 1 Headlight Assembly LH
A 2 Headlight Assembly LH
A 3 Headlight Assembly LH
A 4 High Pitched Horn Assembly
A 5 Low Pitched Horn Assembly
A 6 Front Airbag Sensor RH
A 7 Front Airbag Sensor LH
A 8 Engine Hood Courtesy Switch
A 8 Engine Hood Courtesy Switch
A 9 Condenser Blower Motor Assembly
A 10 Headlight Assembly RH
A 11 Headlight Assembly RH
A 12 Headlight Assembly RH
A 13 A/C Pressure Sensor
A 14 Ambient Temperature Sensor
A 16 Windshield Washer Motor and Pump Assembly
A 17 Headlight Cleaner Control Relay and Motor
A 19 Security Horn Assembly
A 20 Wireless Door Lock Buzzer
A 22 Windshield Wiper Motor Assembly
A 23 Front Wiper Deicer (Windshield Glass)
A 24 Skid Control ECU with Actuator Assembly
A 25 Skid Control ECU with Actuator Assembly
A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32 Noise Filter
A 34 Junction Connector
A 37 Junction Connector
A 45 Side Turn Signal Light Assembly LH
A 47 Side Turn Signal Light Assembly RH
A 52 ECM


A 1
Gray

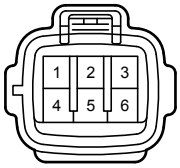


A 2
Black

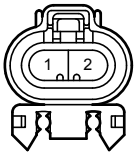


A 3
Black

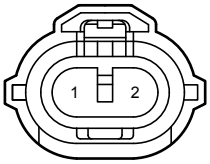


A 4
Black




A 5
Black



A 6
Yellow

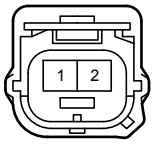

A 7
Yellow

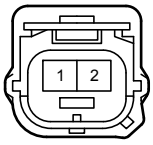


A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

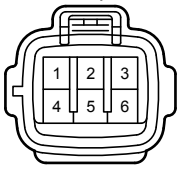


A 11
Black

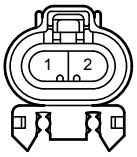

A 12
Black

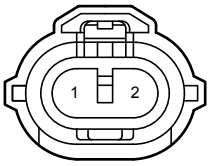

A 13
Black

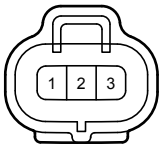

A 14
Black



A 16
Gray




A 17
Black




A 19
Black




A 20
Black




A 22
Black

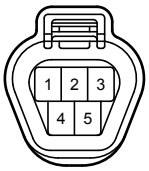


A 23
Gray




A 24
Black

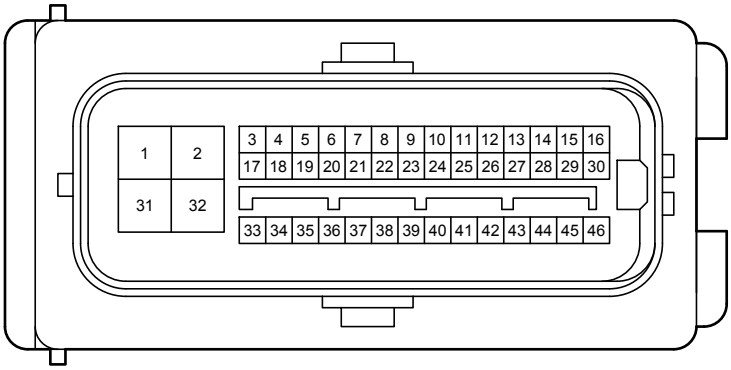


A 25
Black

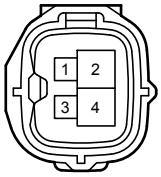


A 26
Gray

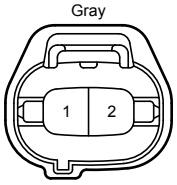


A 32
Black

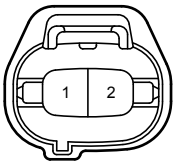

A 34
White

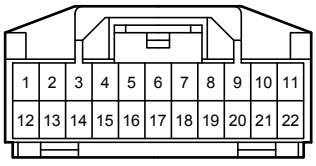

A 37
Blue

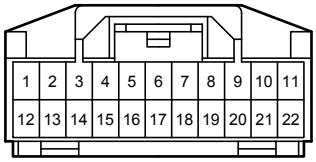


A 45
Gray




A 47
Gray




A 52
Black

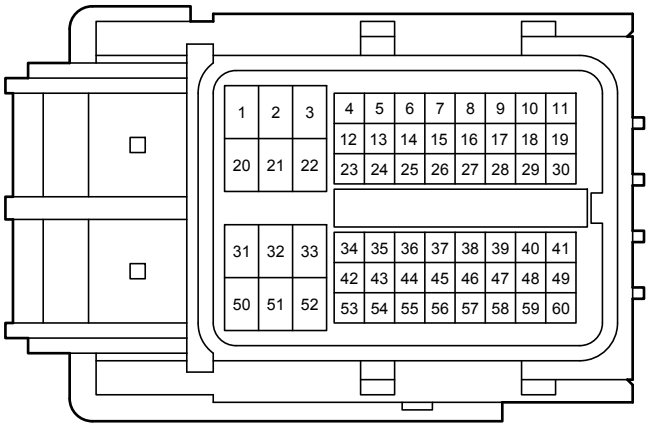

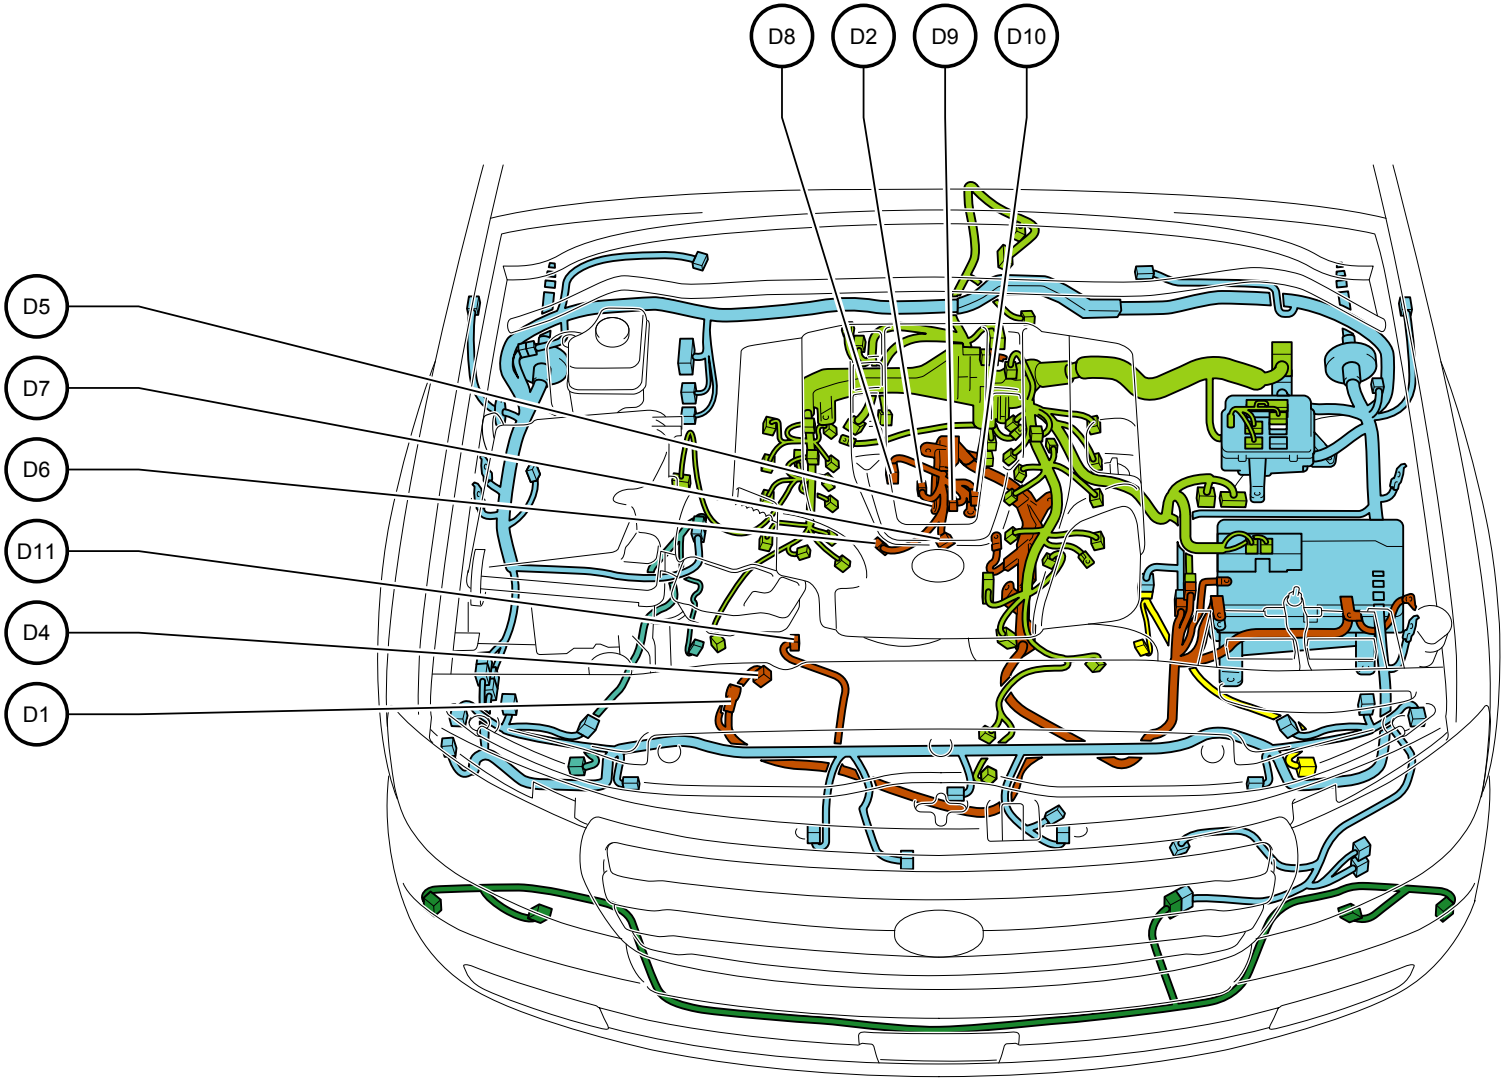
D8
D2
D9
D10
D5
D7
D6
D11
D4
D1

D 1 Generator Assembly
D 2 Starter Assembly
D 4 Generator Assembly
D 5 Starter Assembly
D 6 Knock Control Sensor (Bank 2)
D 7 Knock Control Sensor (Bank 1)
D 8 Air Pump Assembly
D 9 Air Pressure Sensor
D 10 Air Switching Valve
D 11 Engine Oil Level Sensor

D 1




D 2
Black




D 4
Black




D 5




D 6
Gray




D 7
Black




D 8
Gray

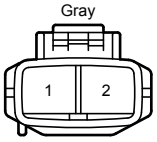


D 9
Black

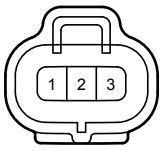


D 10
Black

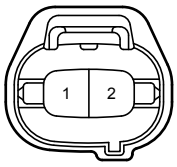

D 11
Gray

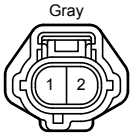


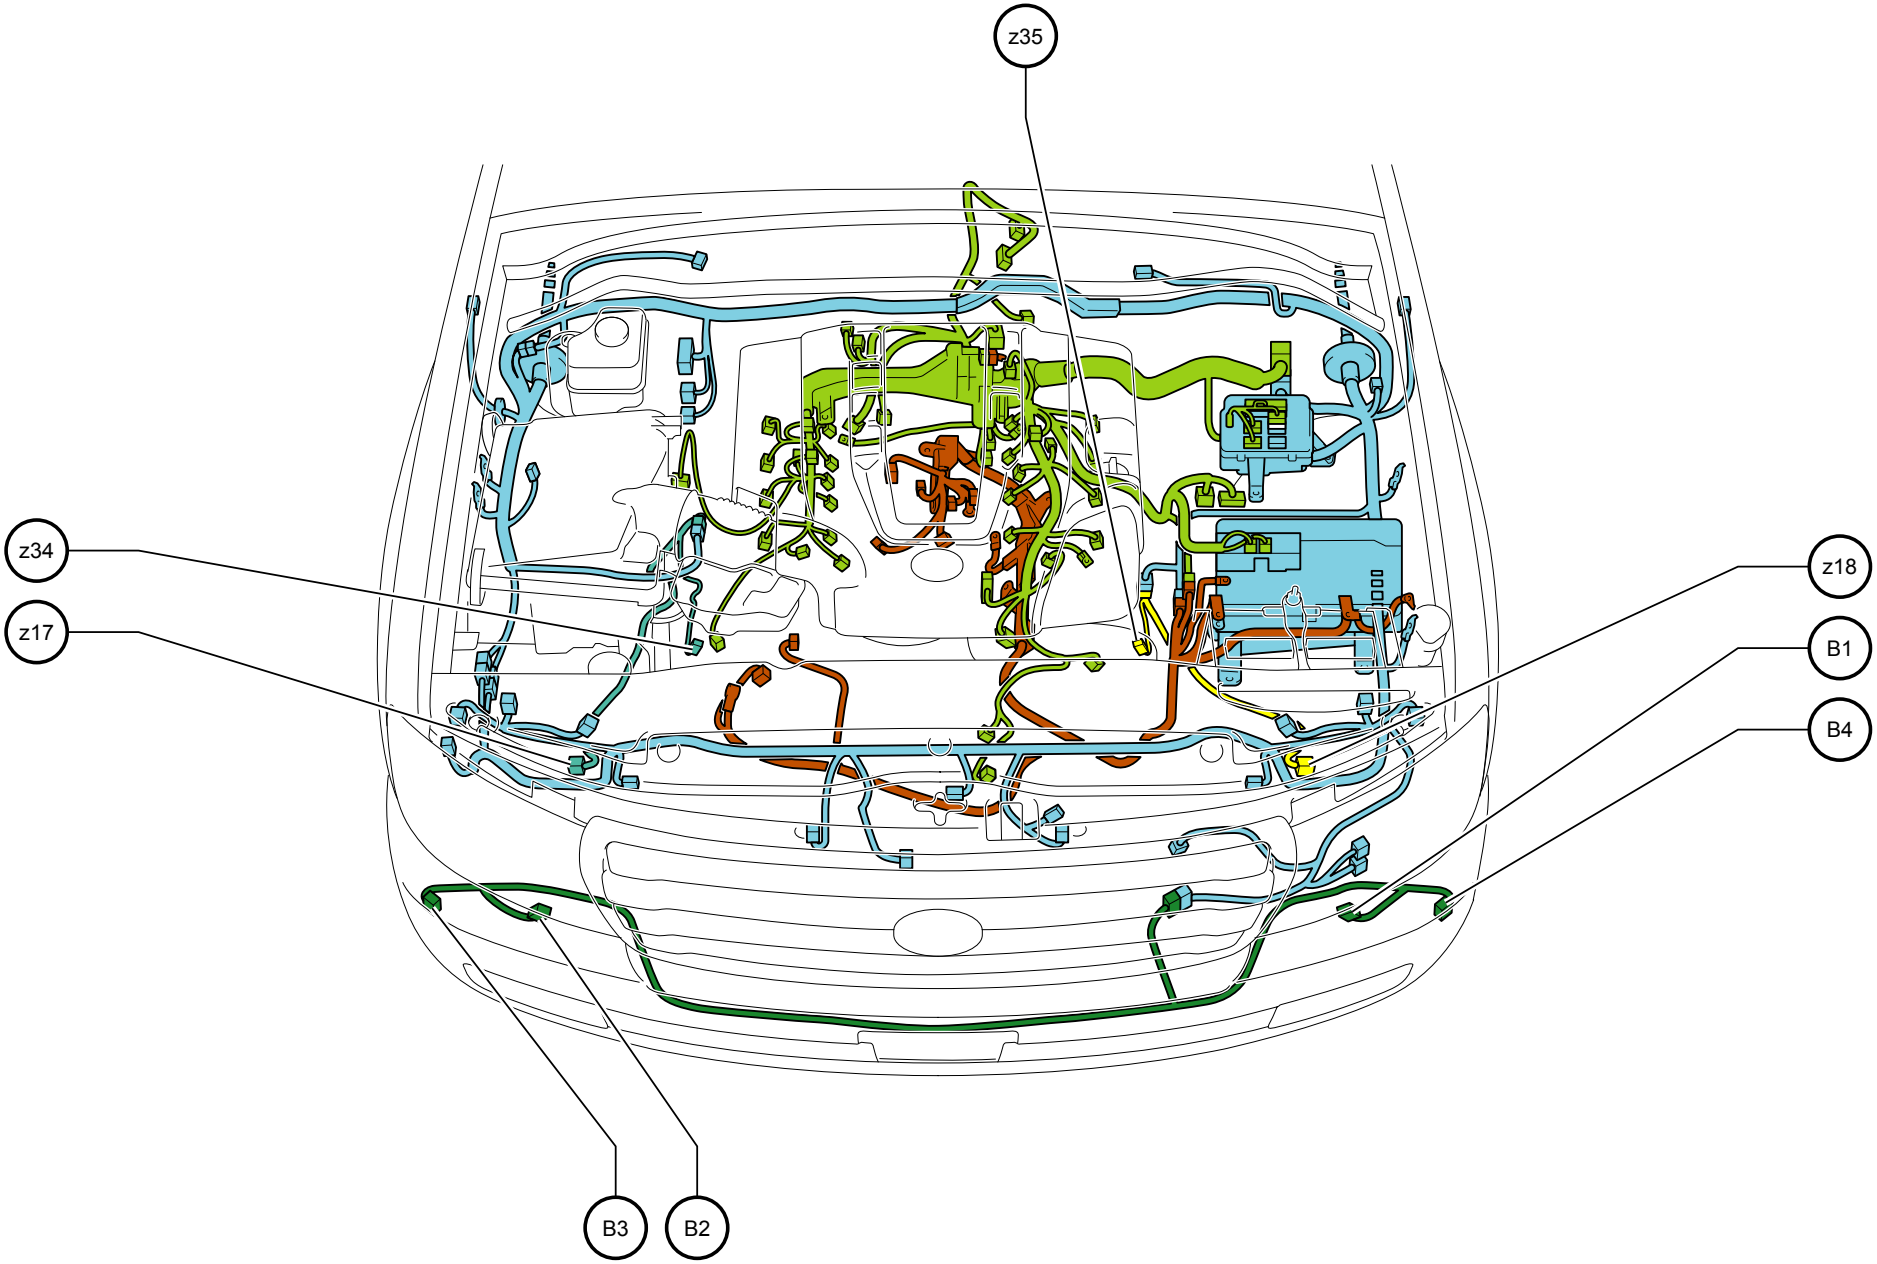
z35
z34
z17
z18
B1
B4
B3
B2


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH


B 1
Brown

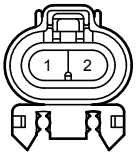


B 2
Brown

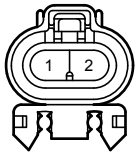

B 3
Black

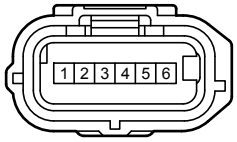

B 4
Black

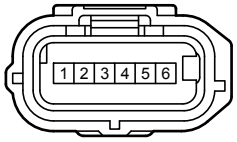


z 17
Black




z 18
Black





z 34
Black

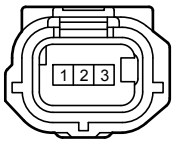



z 35
Black

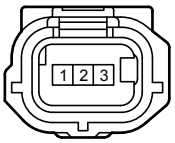


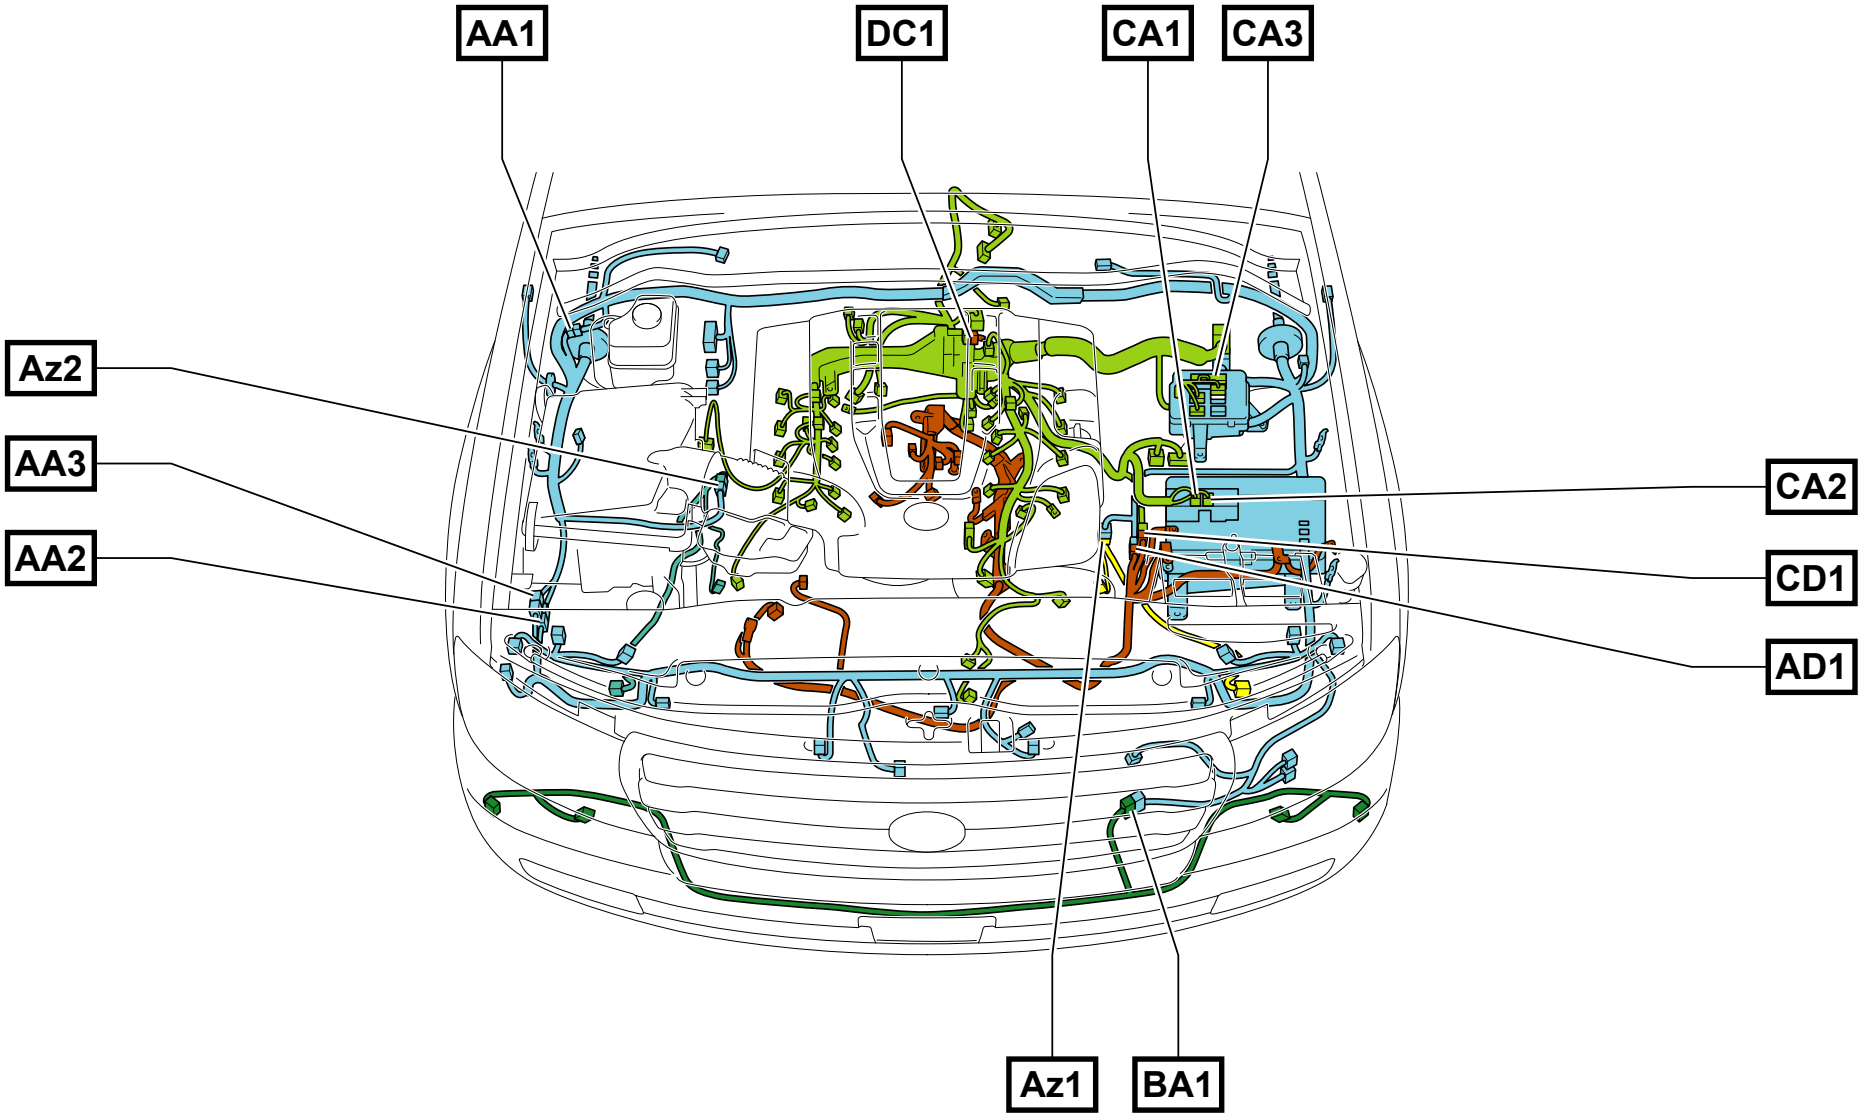

AA1
DC1
CA1
CA3
Az2
AA3
AA2
CA2
CD1
AD1
Az1
BA1

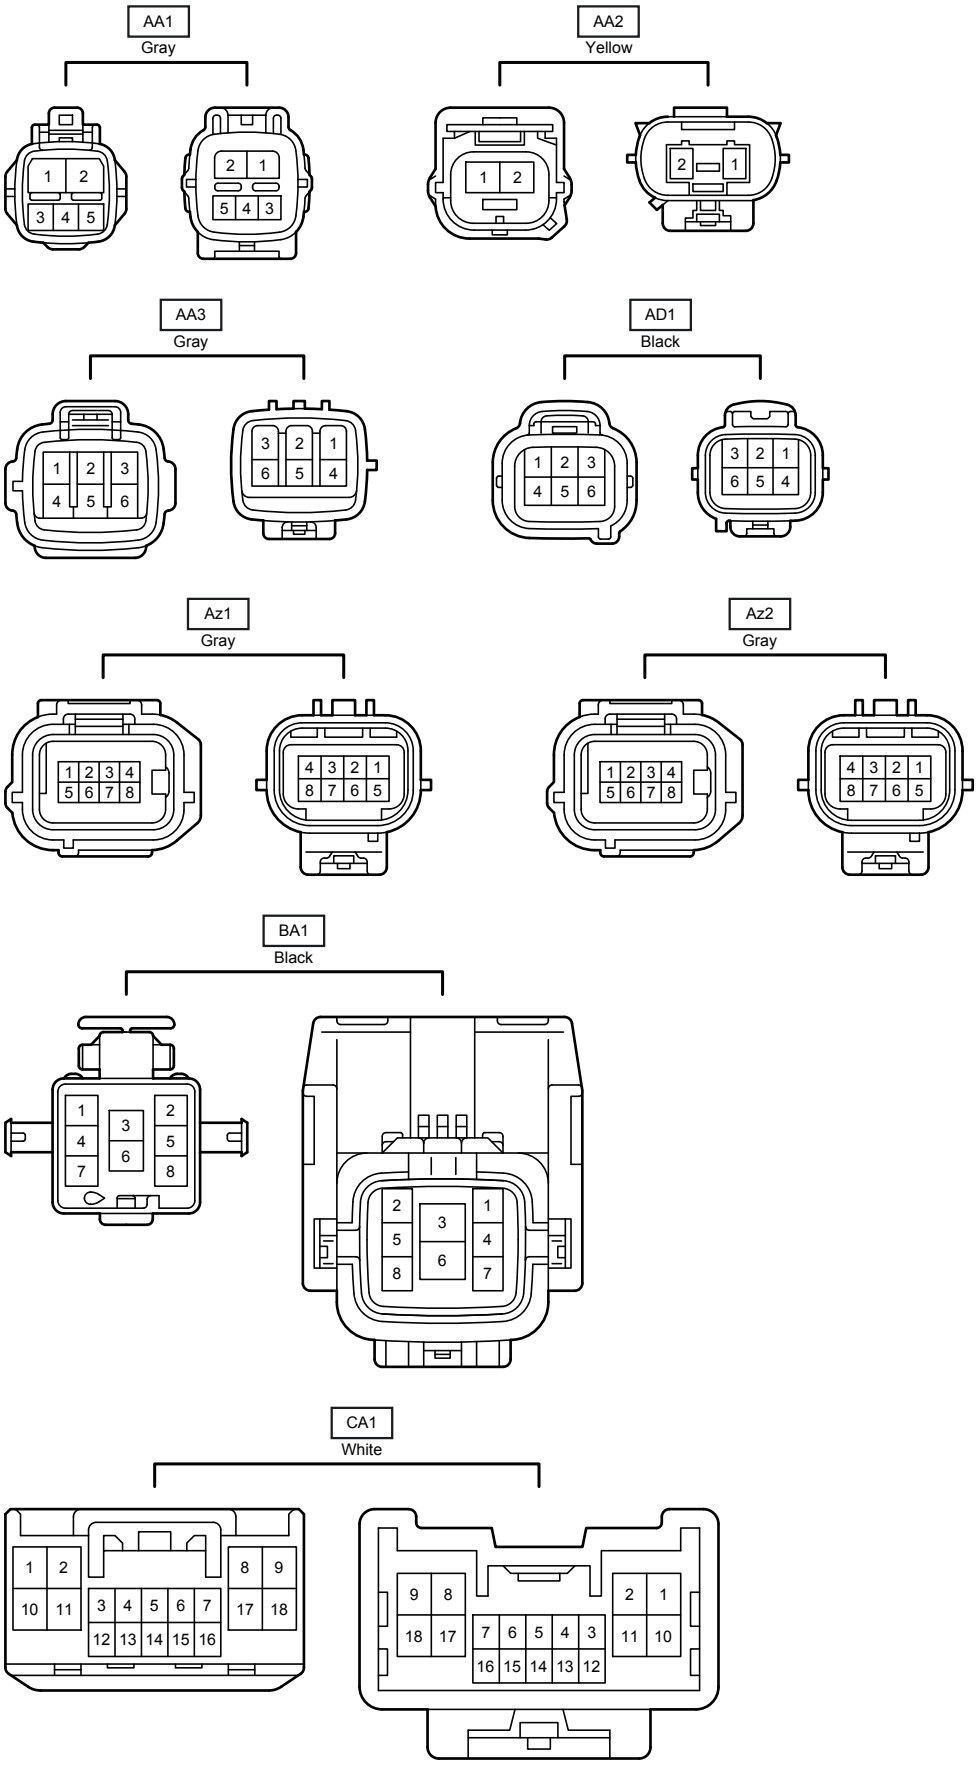

AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1
AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AD1
Black
1 2 3
4 5 6
3 2 1
6 5 4
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
BA1
Black
1 2
4 3 5
7 6 8
2 1
5 3 4
8 6 7
CA1
White
1 2 8 9
10 11 3 4 5 6 7 17 18
12 13 14 15 16
9 8 2 1
18 17 7 6 5 4 3 11 10
16 15 14 13 12

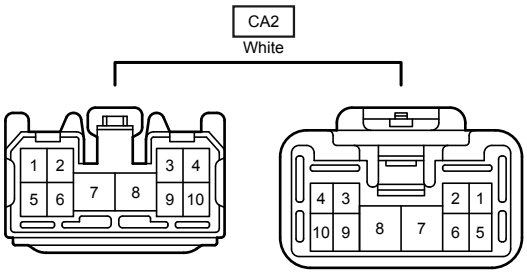
CA2
White
1 2 3 4
5 6 7 8 9 10
4 3 2 1
10 9 8 7 6 5

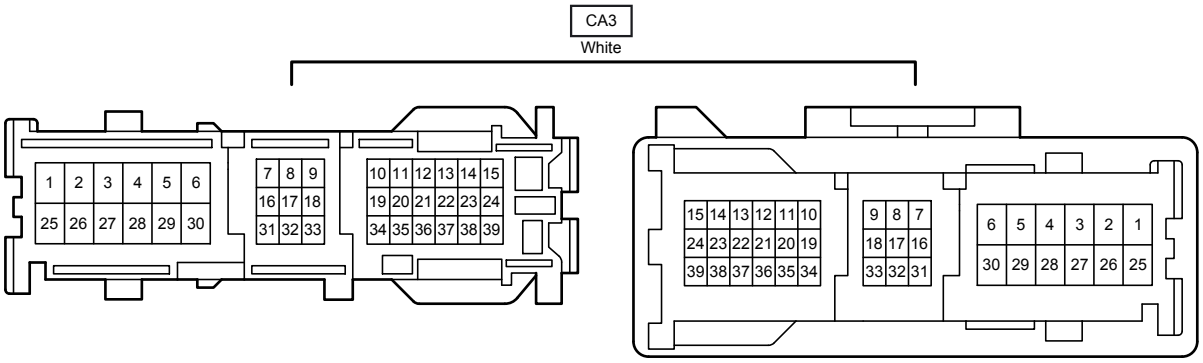
CA3
White
1 2 3 4 5 6
25 26 27 28 29 30
7 8 9
16 17 18
31 32 33
10 11 12 13 14 15
19 20 21 22 23 24
34 35 36 37 38 39
15 14 13 12 11 10
24 23 22 21 20 19
39 38 37 36 35 34
9 8 7
18 17 16
33 32 31
6 5 4 3 2 1
30 29 28 27 26 25

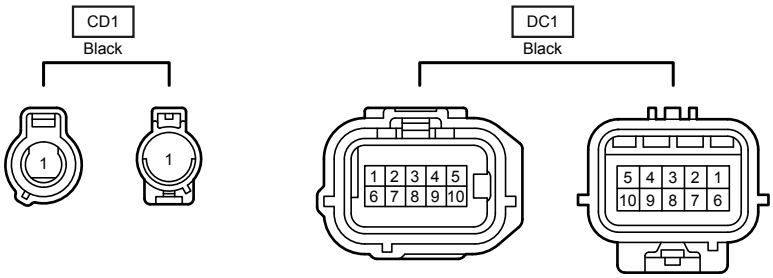
CD1
Black
1
1
DC1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

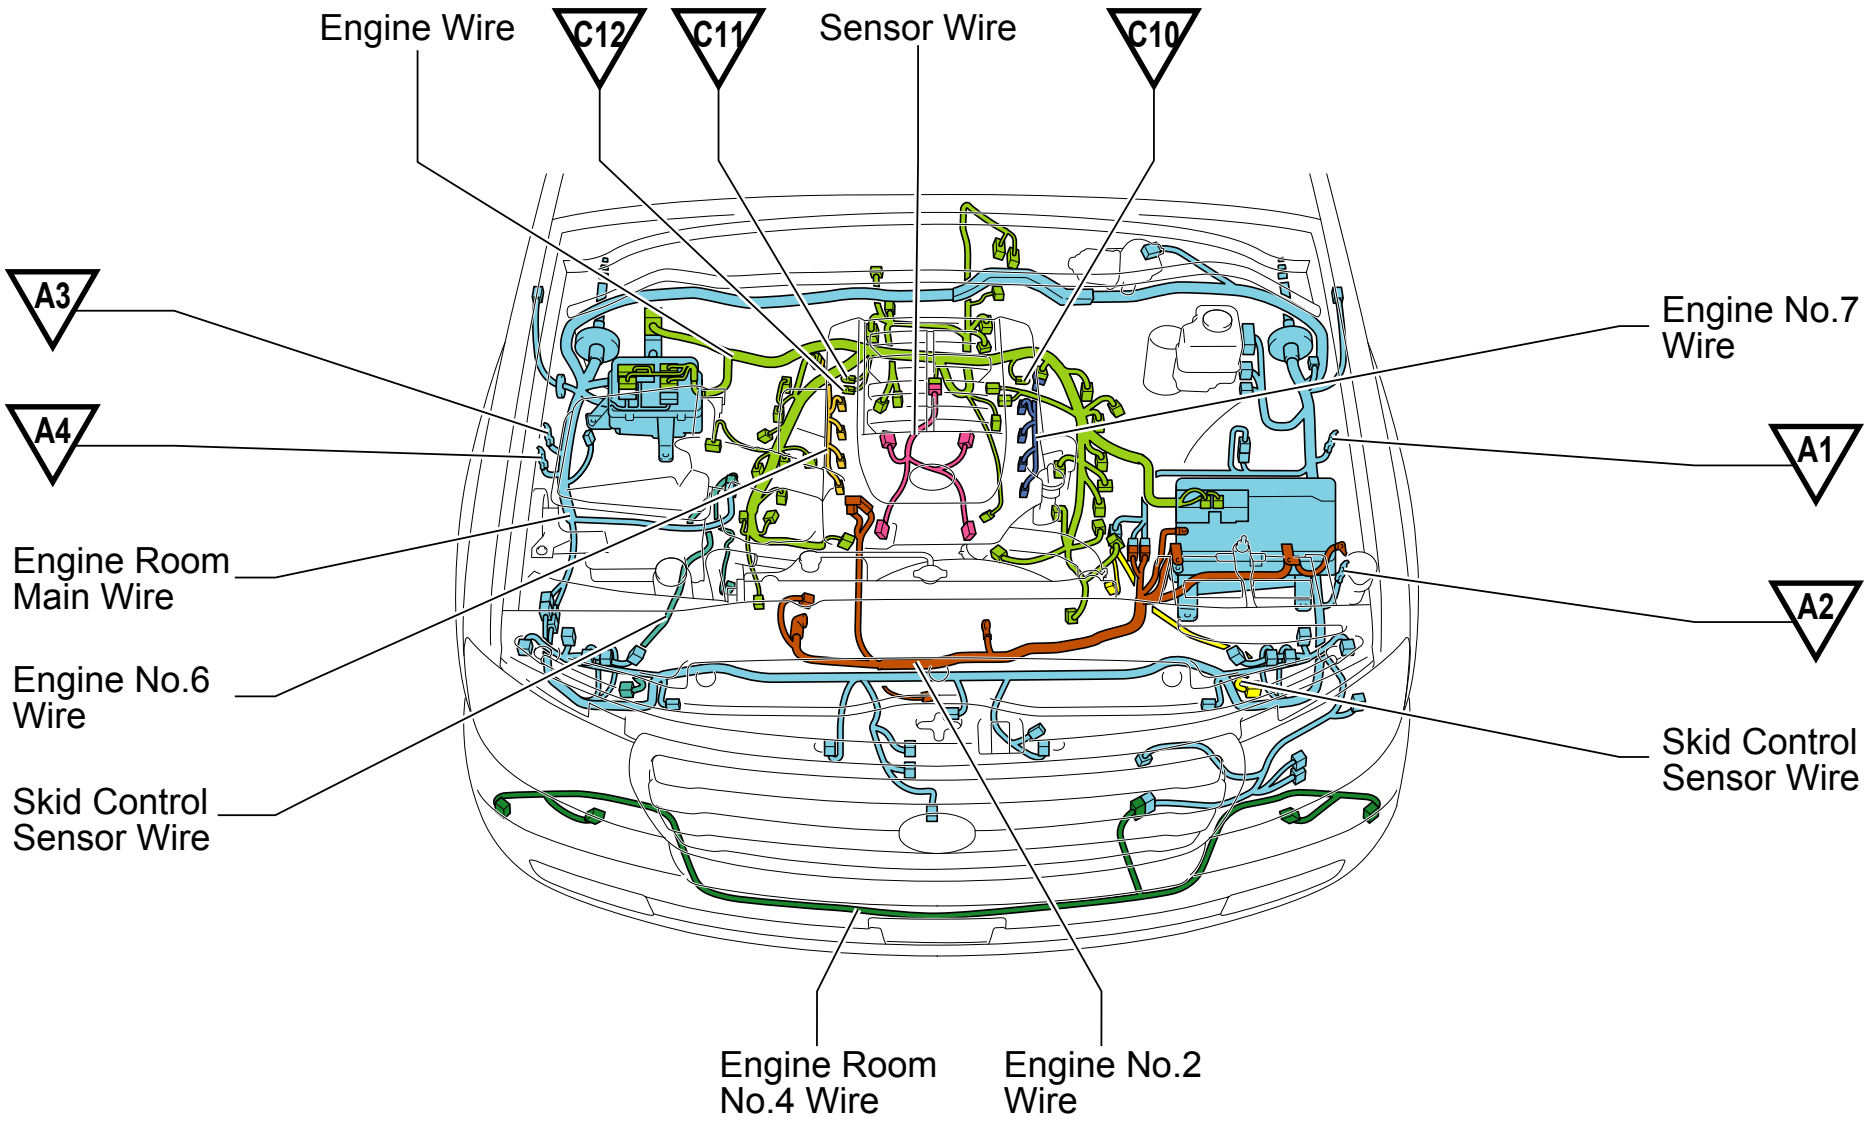

Engine Wire
C12
C11
Sensor Wire
C10
A3
A4
Engine Room Main Wire
Engine No.6 Wire
Skid Control Sensor Wire
Engine No.7 Wire
A1
A2
Skid Control Sensor Wire
Engine Room No.4 Wire
Engine No.2 Wire

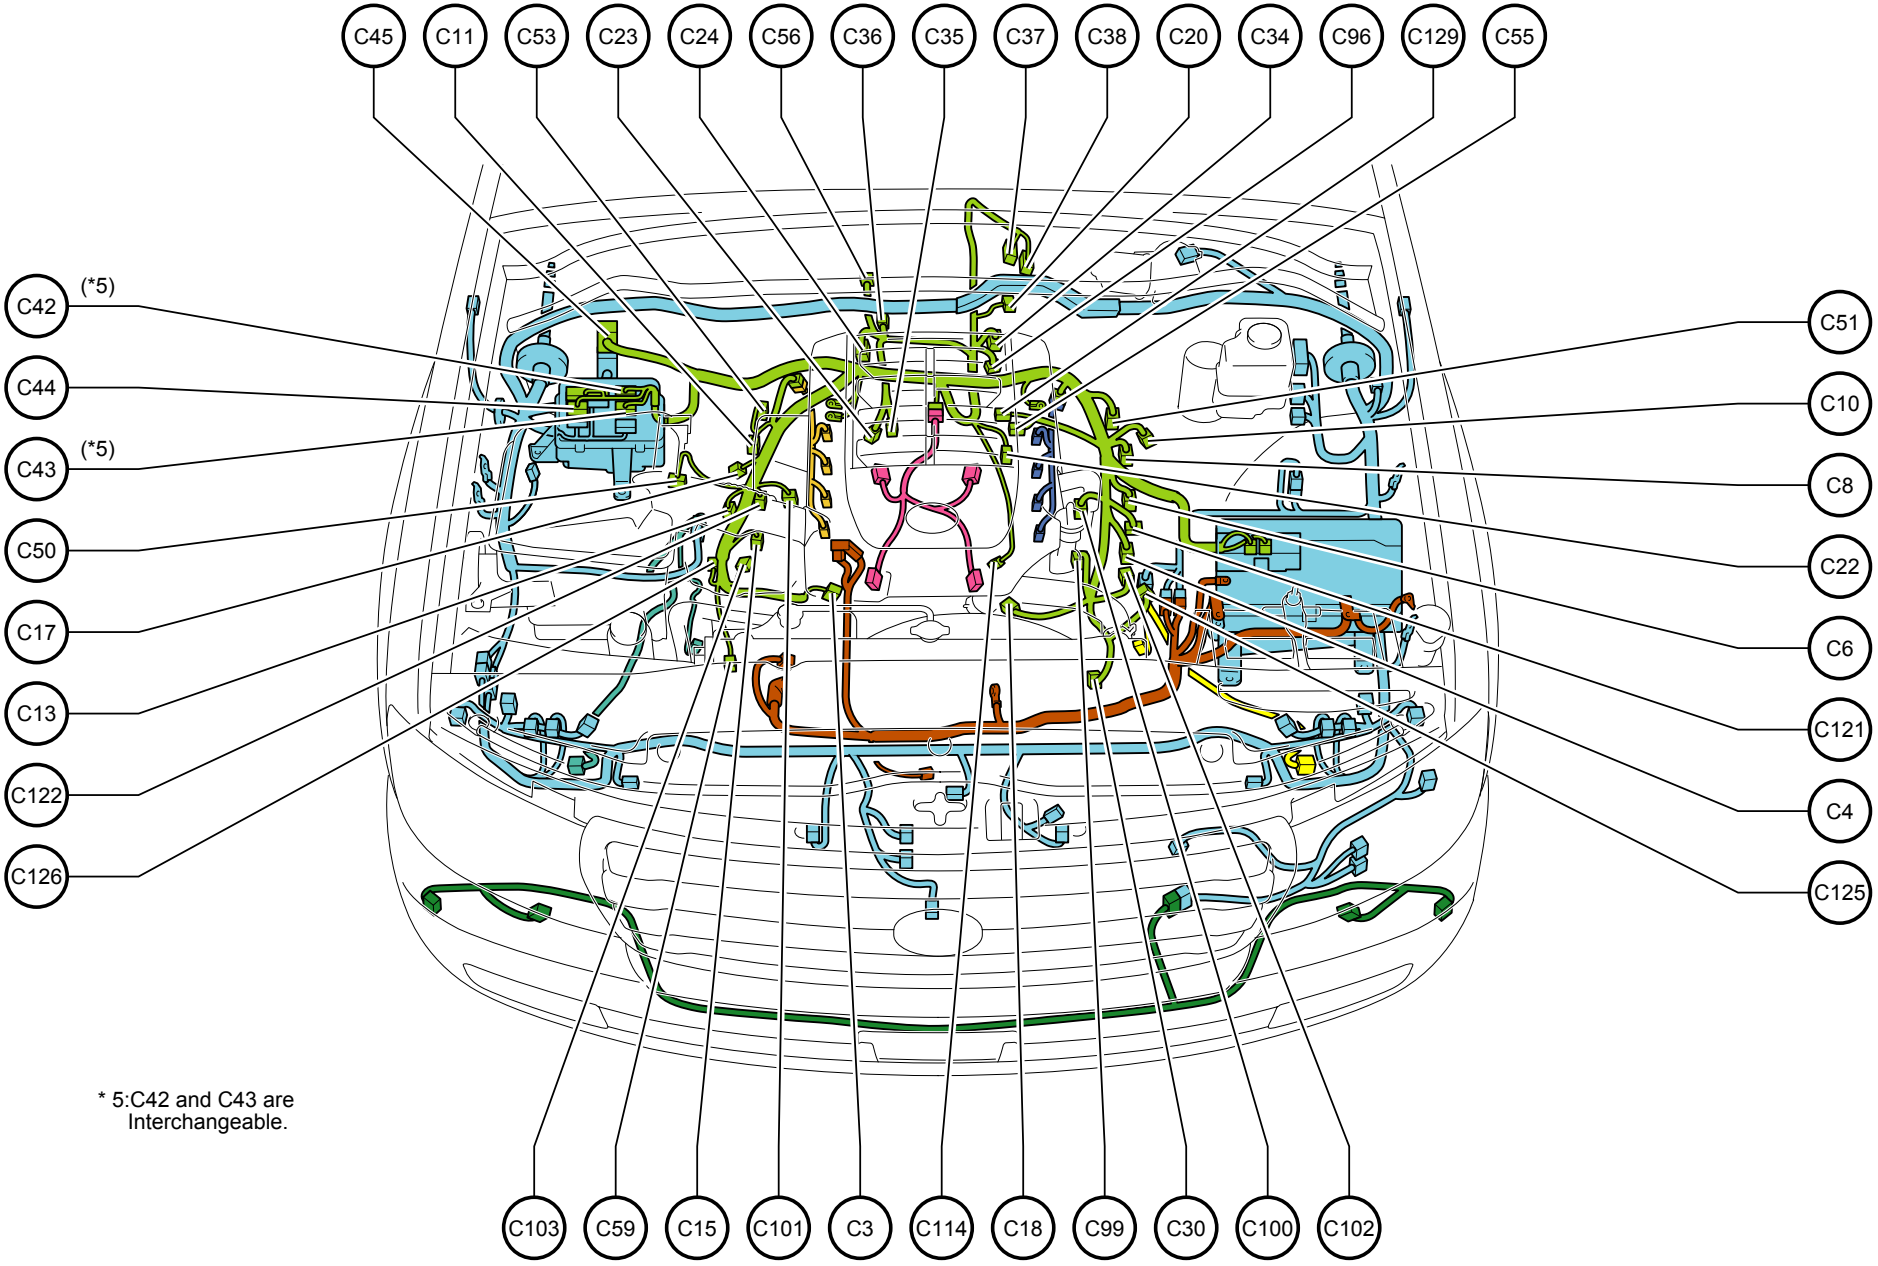


* 5:C42 and C43 are Interchangeable.

C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 6 Ignition Coil Assembly No.3
C 8 Ignition Coil Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 13 Ignition Coil Assembly No.4
C 15 Ignition Coil Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24 Park/Neutral Position Switch
C 30 Cooler Compressor Assembly
C 34 Electronically Controlled Transmission Solenoid
C 35 Transmission Revolution Sensor (Turbine)
C 36 Transmission Revolution Sensor (Counter Gear)
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 45 ECM
C 50 Mass Air Flow Meter
C 51 Ignition Coil Assembly No.7
C 53 Ignition Coil Assembly No.8
C 55 Purge VSV
C 56 Oxygen Sensor (Bank 2 Sensor 2)
C 59 Power Steering Oil Pressure Sensor
C 96 Electronically Controlled Transmission Solenoid
C 99 Camshaft Position Sensor
C 100 VVT Sensor (Bank 1 Intake Side)
C 101 VVT Sensor (Bank 2 Intake Side)
C 102 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 103 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 114 Crankshaft Position Sensor
C 121 VVT Sensor (Bank 1 Exhaust Side)
C 122 VVT Sensor (Bank 2 Exhaust Side)
C 125 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C 126 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C 129 VSV (ACIS)


C 3
Black

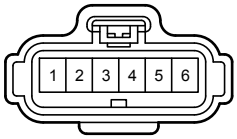


C 4
Black



C 6
Black




C 8
Black




C 10
Gray




C 11
Black



C 13
Black



C 15
Black



C 17
Gray



C 18
Dark Gray



C 20
Dark Gray




C 22
Dark Gray



C 23
Dark Gray




C 24
Gray

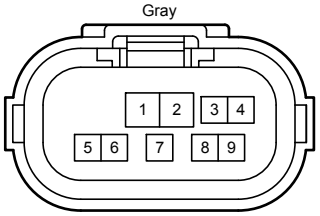


C 30
Gray




C 34
Gray

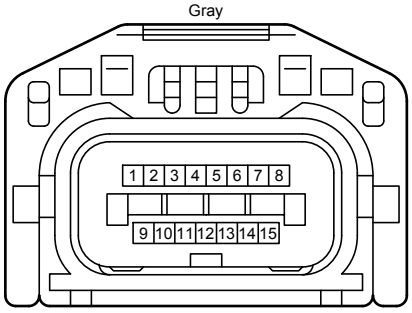


C 35
Black

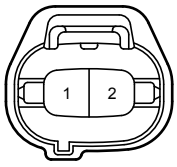


C 36
Black

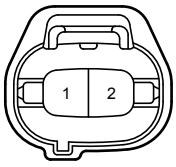


C 37
Black

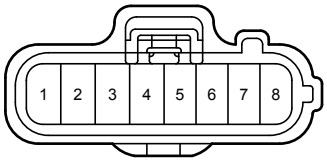


C 38
Dark Gray

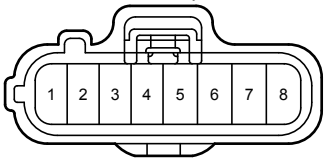


C 42
White

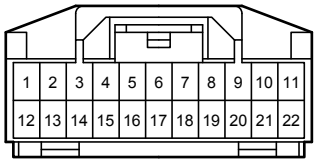


C 43
White

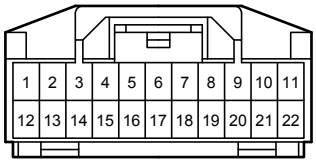


C 44
Blue

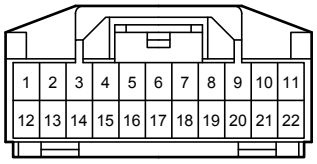


C 45
Black

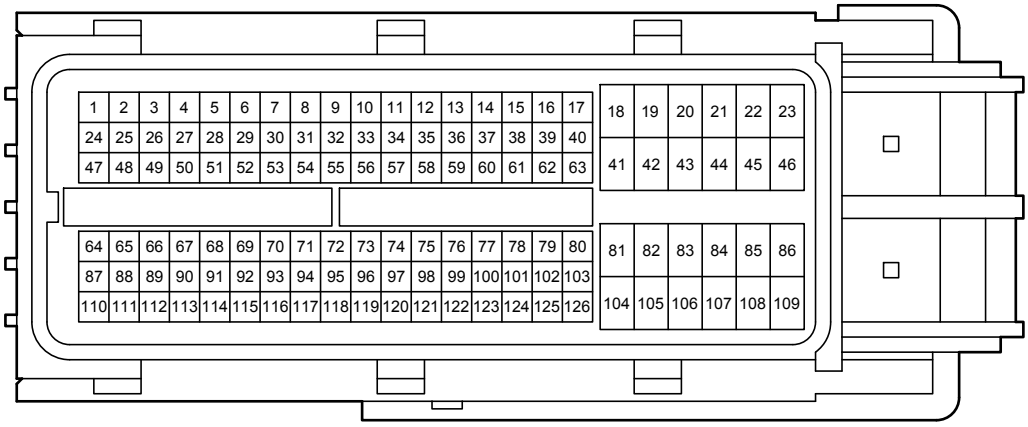


C 50
Black

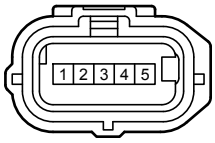


C 51
Black



C 53
Black




C 55
Black

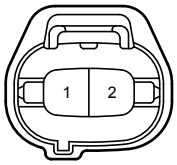


C 56
Dark Gray




C 59
Gray

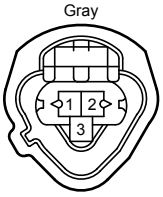


C 96
Gray

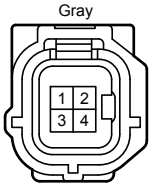


C 99
Black

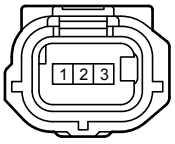

C100
Black

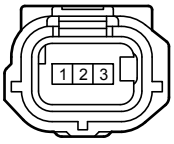

C101
Black

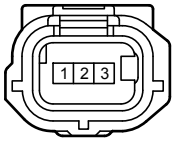


C102
Black




C103
Black




C114
Black

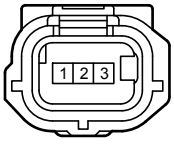

C121
Black

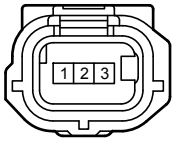

C122
Black

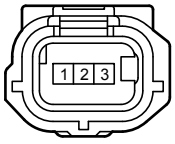


C125
Black




C126
Black



C129
Black

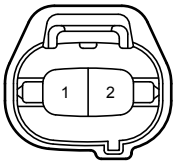


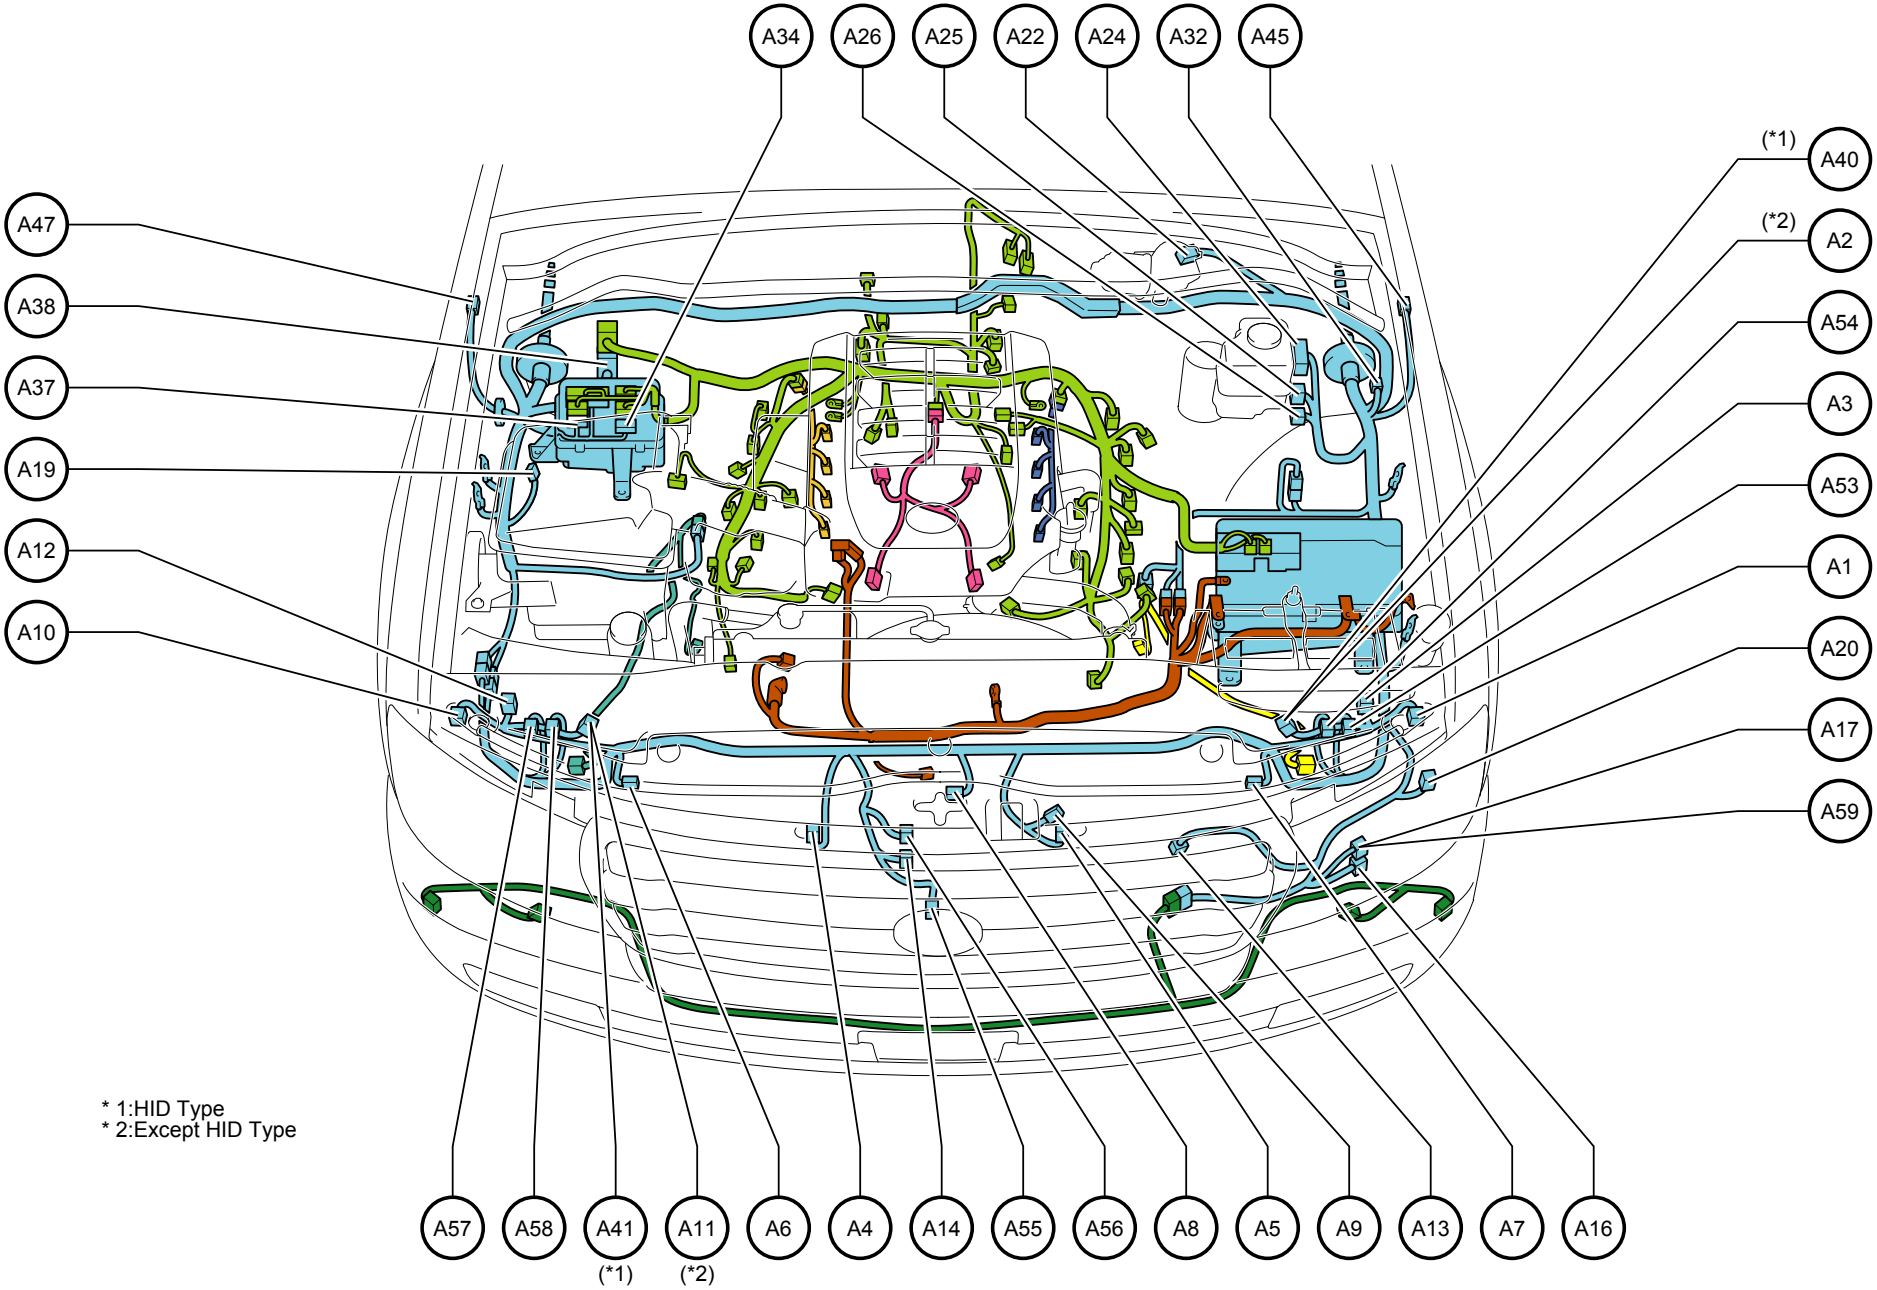


* 1:HID Type
* 2:Except HID Type

A	1	Headlight Assembly LH
A	2	Headlight Assembly LH
A	3	Headlight Assembly LH
A	4	High Pitched Horn Assembly
A	5	Low Pitched Horn Assembly
A	6	Front Airbag Sensor RH
A	7	Front Airbag Sensor LH
A	8	Engine Hood Courtesy Switch
A	8	Engine Hood Courtesy Switch
A	9	Condenser Blower Motor Assembly
A	10	Headlight Assembly RH
A	11	Headlight Assembly RH
A	12	Headlight Assembly RH
A	13	A/C Pressure Sensor
A	14	Ambient Temperature Sensor
A	16	Windshield Washer Motor and Pump Assembly
A	17	Headlight Cleaner Control Relay and Motor
A	19	Security Horn Assembly
A	20	Wireless Door Lock Buzzer
A	22	Windshield Wiper Motor Assembly
A	24	Skid Control ECU with Actuator Assembly
A	25	Skid Control ECU with Actuator Assembly
A	26	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A	32	Noise Filter
A	34	Junction Connector
A	37	Junction Connector
A	38	ECM
A	40	Headlight Assembly LH
A	41	Headlight Assembly RH
A	45	Side Turn Signal Light Assembly LH
A	47	Side Turn Signal Light Assembly RH
A	53	Headlight Assembly LH
A	54	Headlight Assembly LH
A	55	Front Television Camera Assembly
A	56	Millimeter Wave Radar Sensor Assembly
A	57	Headlight Assembly RH
A	58	Headlight Assembly RH
A	59	Headlight Cleaner Control Relay and Motor


A 1
Gray

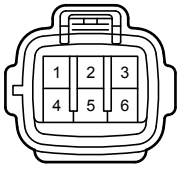


A 2
Black

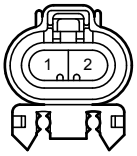


A 3
Black

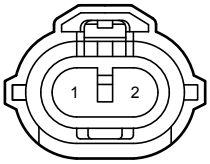


A 4
Black




A 5
Black



A 6
Yellow

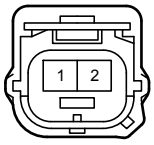

A 7
Yellow

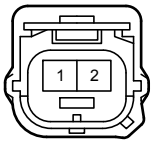


A 8
Black



(Except U.K.)

A 8
Dark Gray




(U.K.)


A 9
Black




A 10
Gray

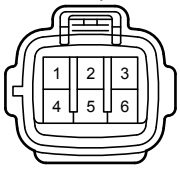


A 11
Black

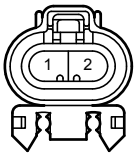

A 12
Black

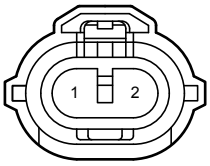

A 13
Black

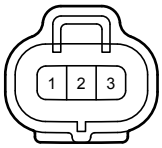

A 14
Black



A 16
Gray




A 17
Black




A 19
Black




A 20
Black




A 22
Black

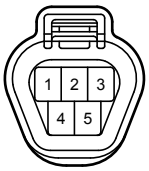


A 24
Black

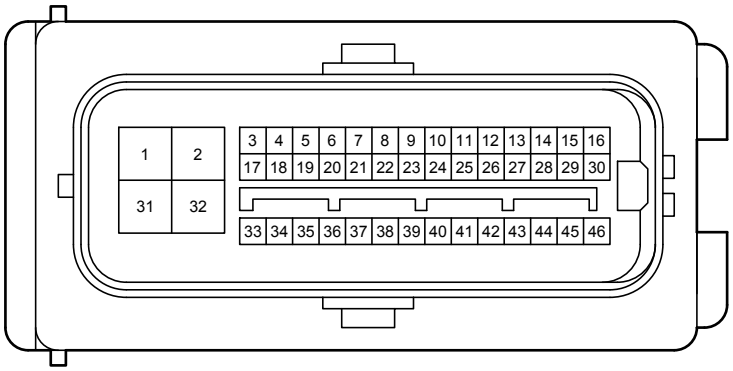


A 25
Black

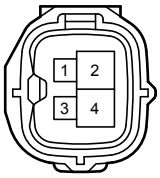


A 26
Gray

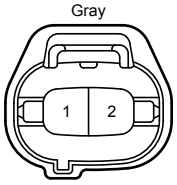


A 32
Black

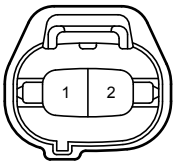


A 34
White

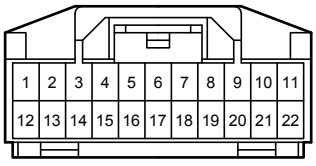

A 37
Blue

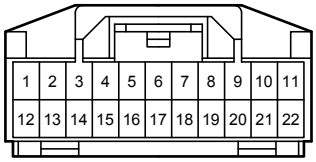

A 38
Black

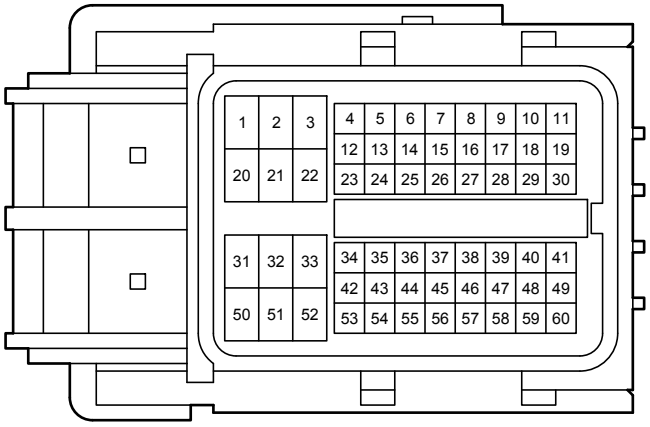

A 40
Gray



A 41
Gray



A 45
Gray




A 47
Gray




A 53
Black




A 54
Black

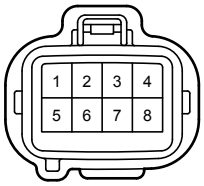

A 55
Black

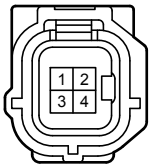


A 56
Black

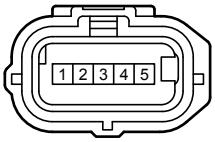

A 57
Black




A 58
Black

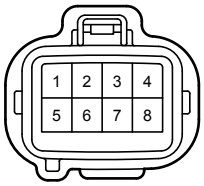

A 59
White

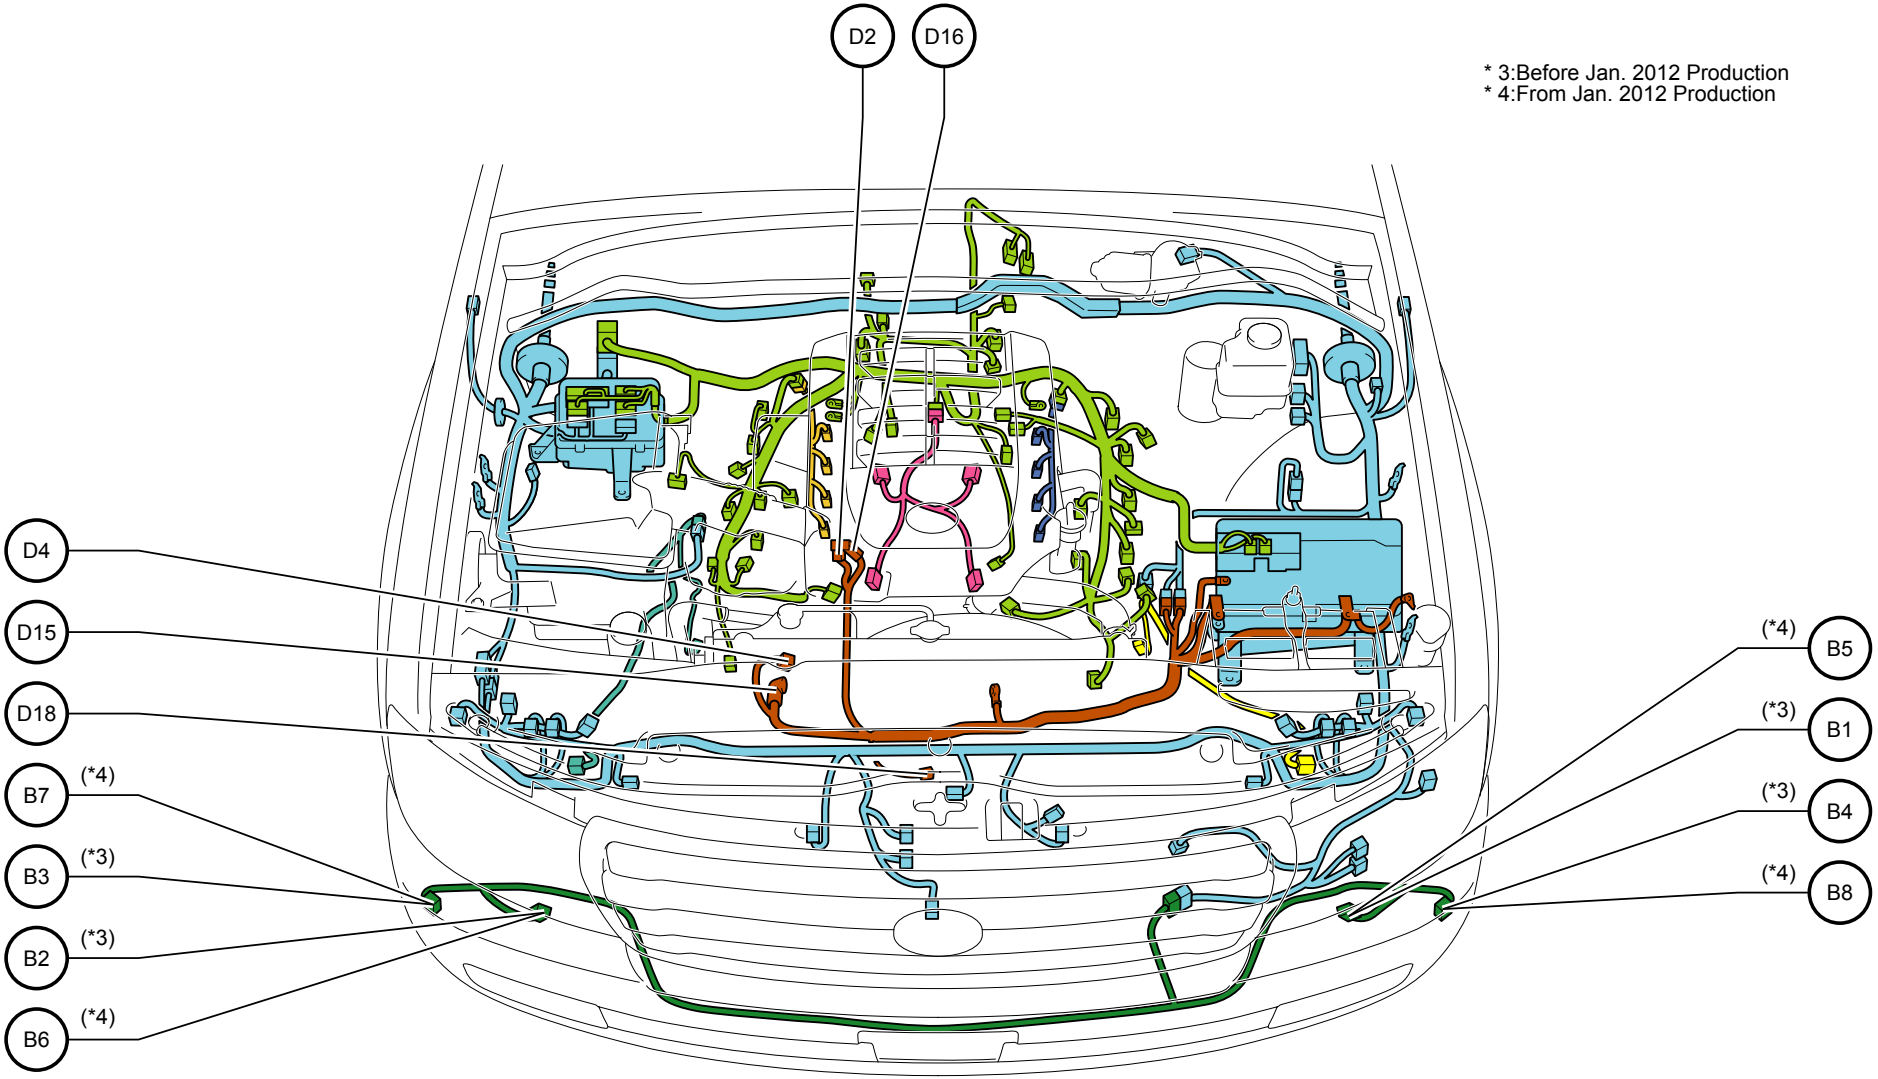



D2
D16
* 3:Before Jan. 2012 Production
* 4:From Jan. 2012 Production
D4
D15
D18
(*4)
B7
(*3)
B3
(*3)
B2
(*4)
B6
(*4)
B5
(*3)
B1
(*3)
B4
(*4)
B8


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH
B 5 Fog Light Assembly LH
B 6 Fog Light Assembly RH
B 7 No.1 Ultrasonic Sensor RH
B 8 No.1 Ultrasonic Sensor LH

D 2 Starter Assembly
D 4 Generator Assembly
D 15 Generator Assembly
D 16 Starter Assembly
D 18 Oil Pressure Sender Gage Assembly


B 1
Brown

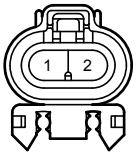


B 2
Brown

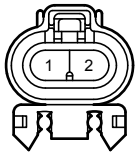


B 3
Black

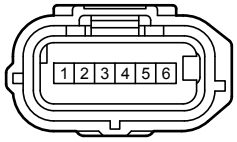


B 4
Black

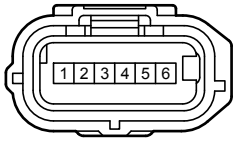


B 5
Black

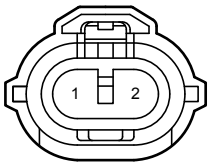


B 6
Black

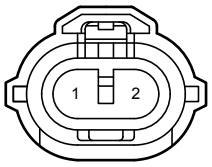

B 7
Black

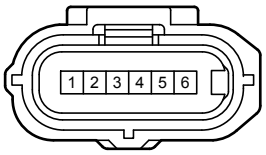

B 8
Black

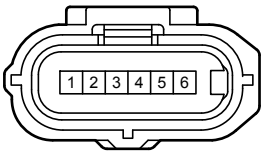


D 2
Black




D 4
Black



D 15




D 16



D 18
Black

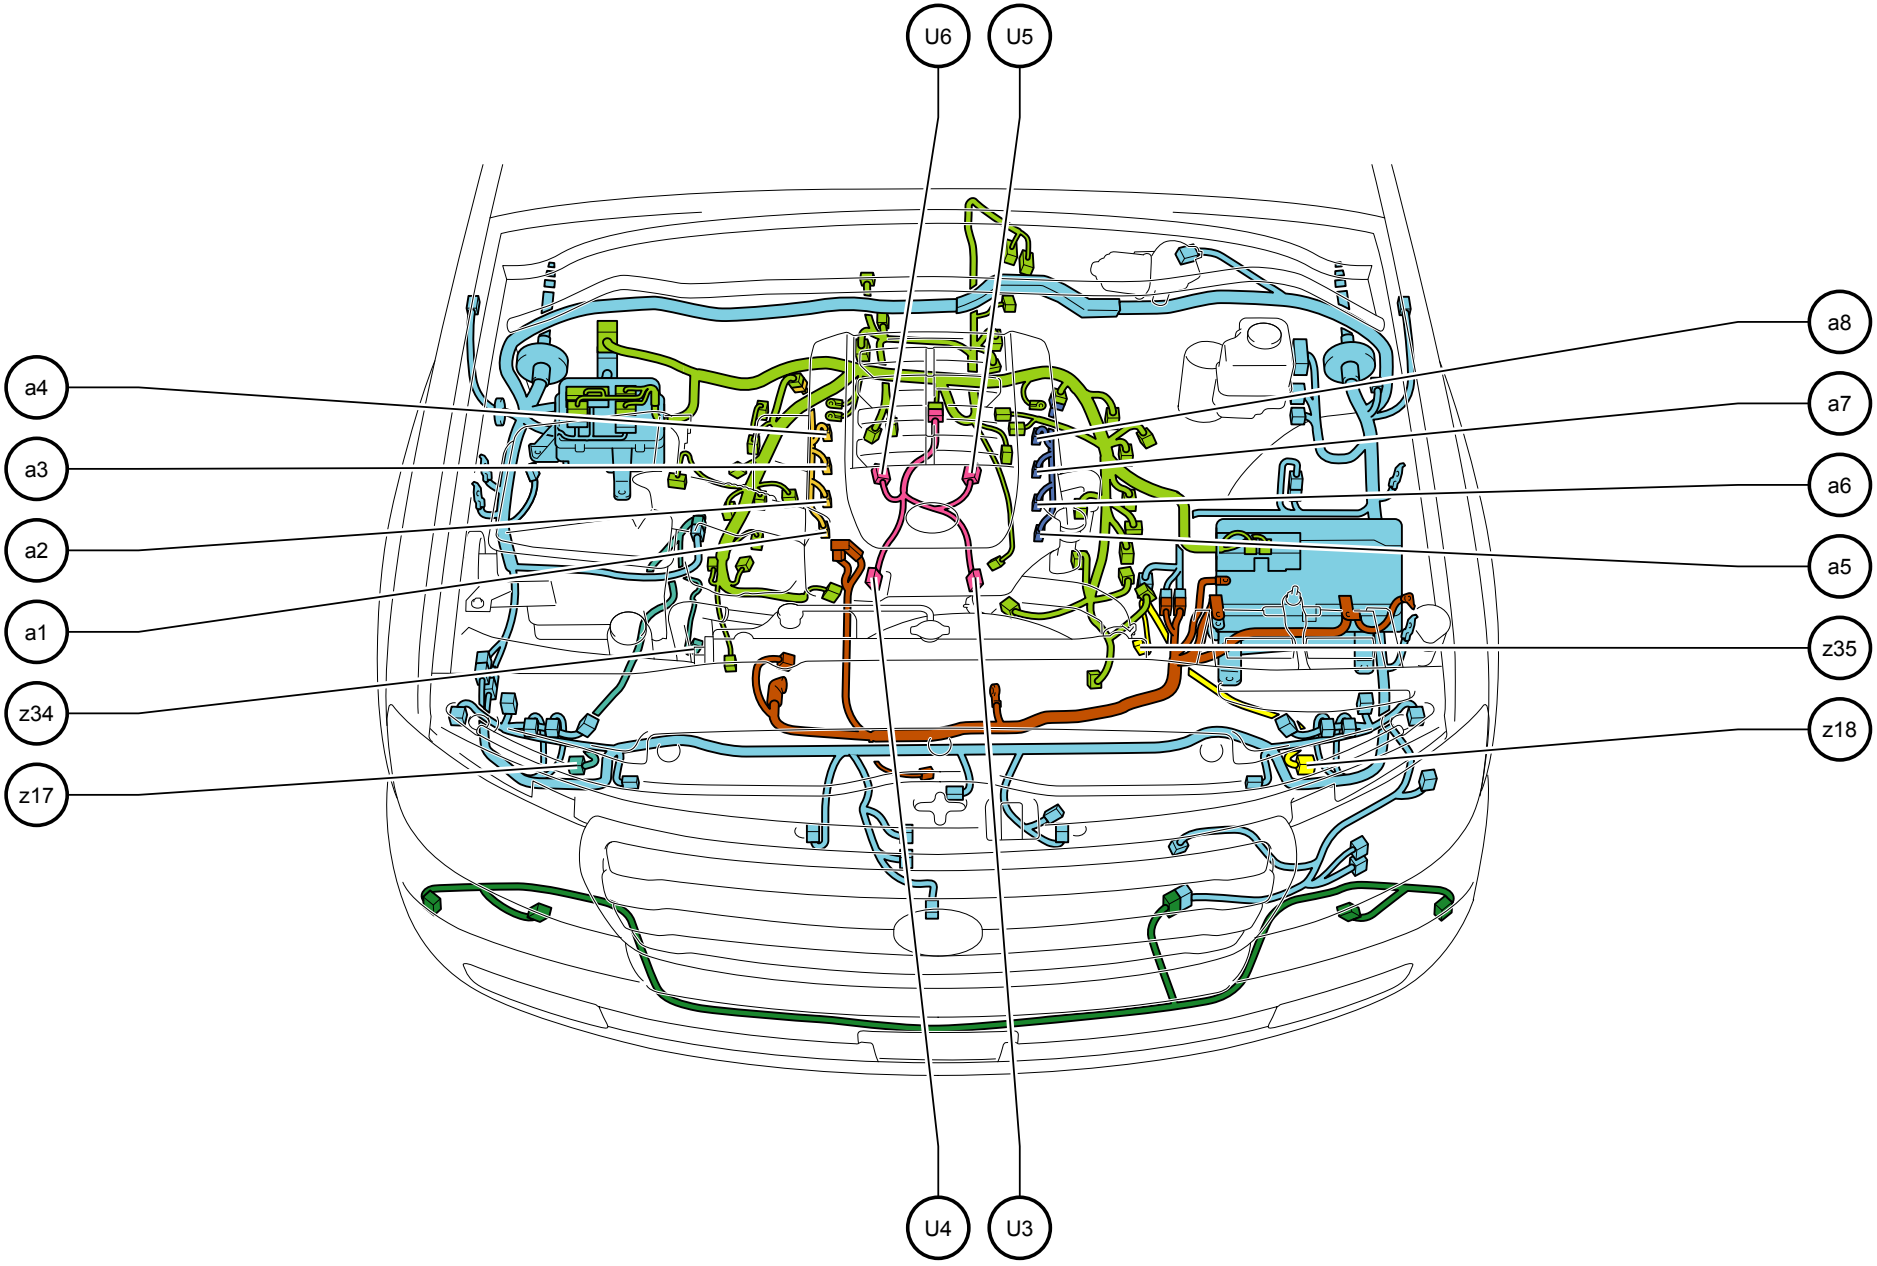



U6
U5
a4
a3
a2
a1
z34
z17
a8
a7
a6
a5
z35
z18
U4
U3

U 3 Knock Control Sensor (Bank 1 Sensor 1)
U 4 Knock Control Sensor (Bank 2 Sensor 1)
U 5 Knock Control Sensor (Bank 1 Sensor 2)
U 6 Knock Control Sensor (Bank 2 Sensor 2)


a 1 Fuel Injector Assembly No.2
a 2 Fuel Injector Assembly No.4
a 3 Fuel Injector Assembly No.6
a 4 Fuel Injector Assembly No.8
a 5 Fuel Injector Assembly No.1
a 6 Fuel Injector Assembly No.3
a 7 Fuel Injector Assembly No.5
a 8 Fuel Injector Assembly No.7

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH


U 3
Gray




U 4
Black




U 5
Gray




U 6
Black




a 1
Black

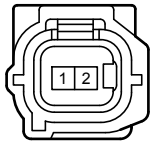


a 2
Black

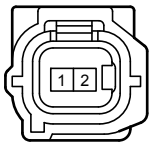


a 3
Black

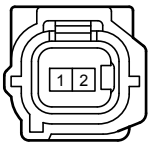


a 4
Black

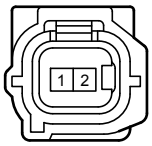


a 5
Black

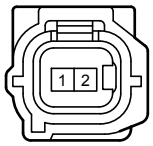


a 6
Black

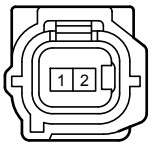

a 7
Black

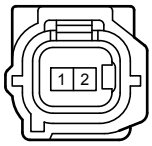

a 8
Black

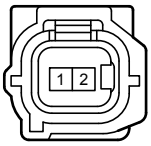


z 17
Black




z 18
Black




z 34
Black

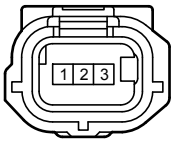



z 35
Black

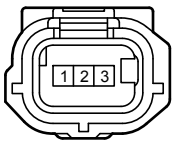



* 1:Liftgate Type Body
* 2:Swing Type Body

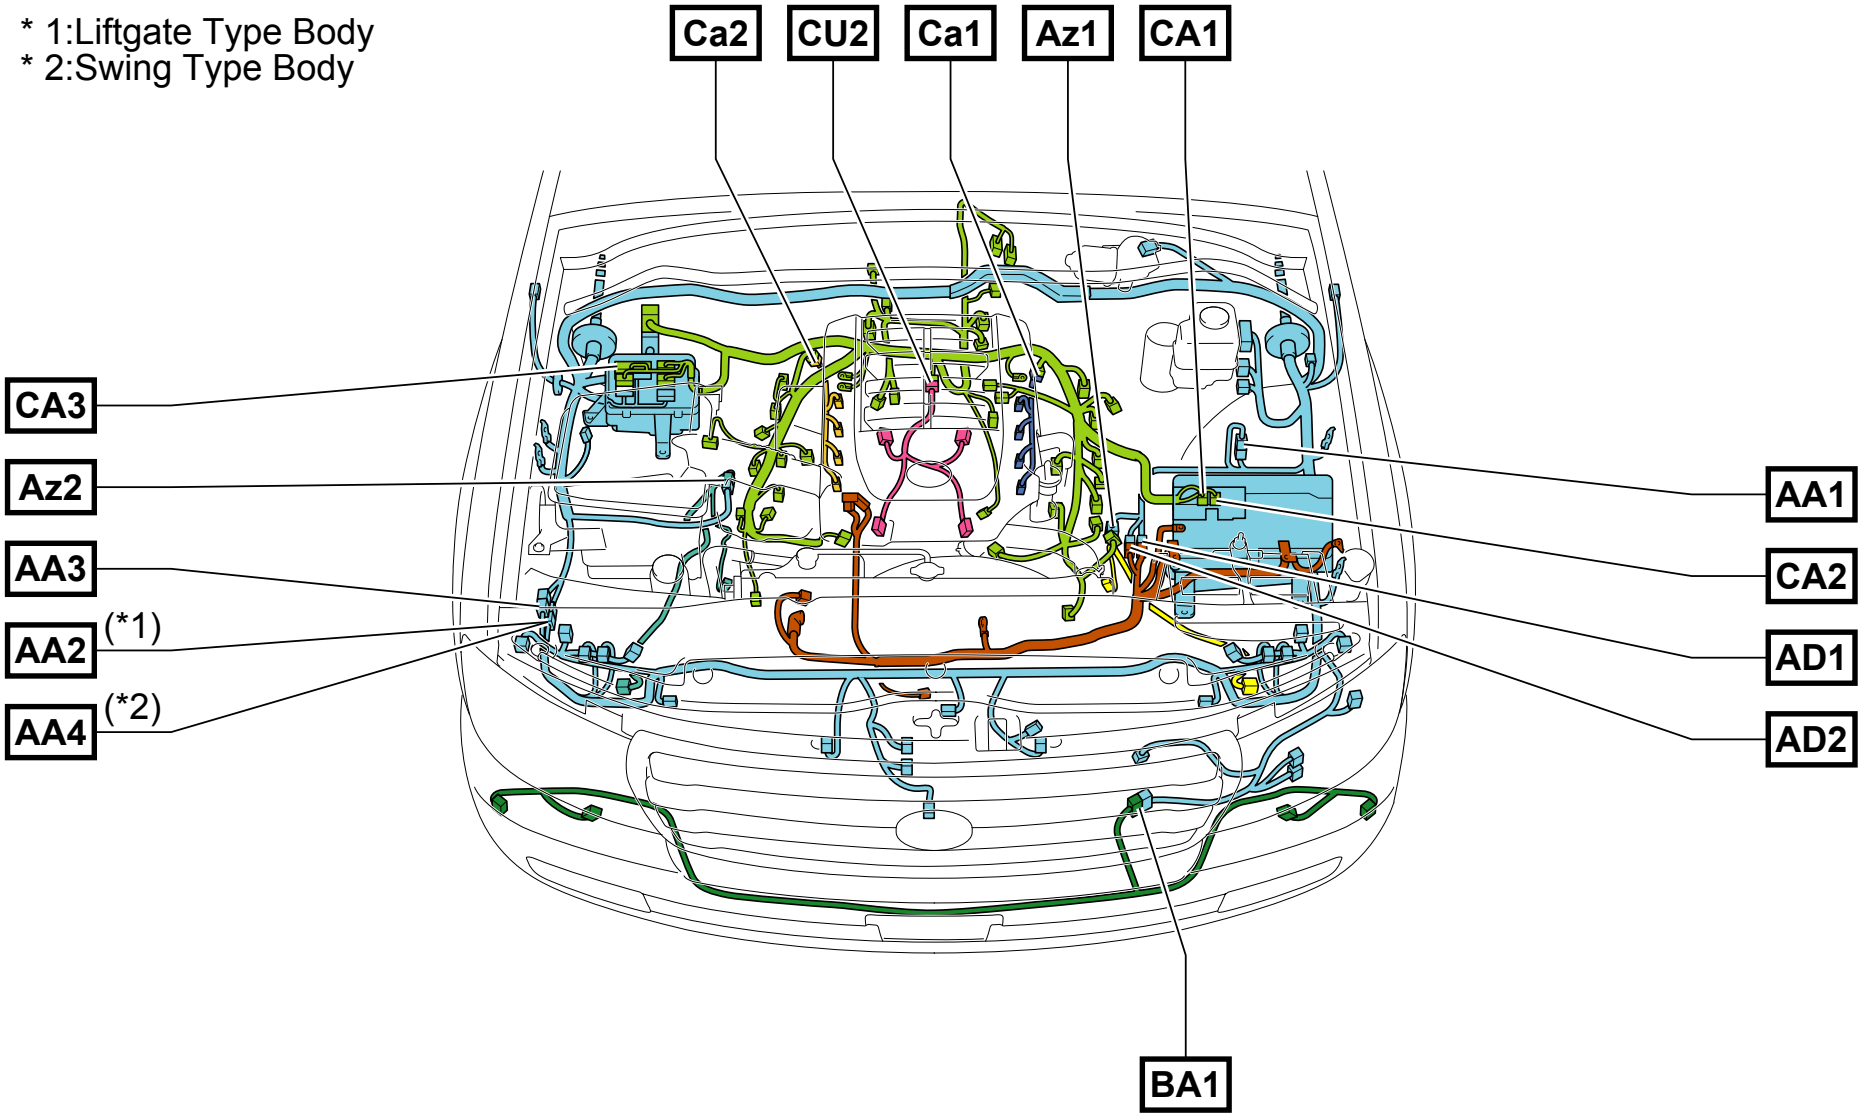


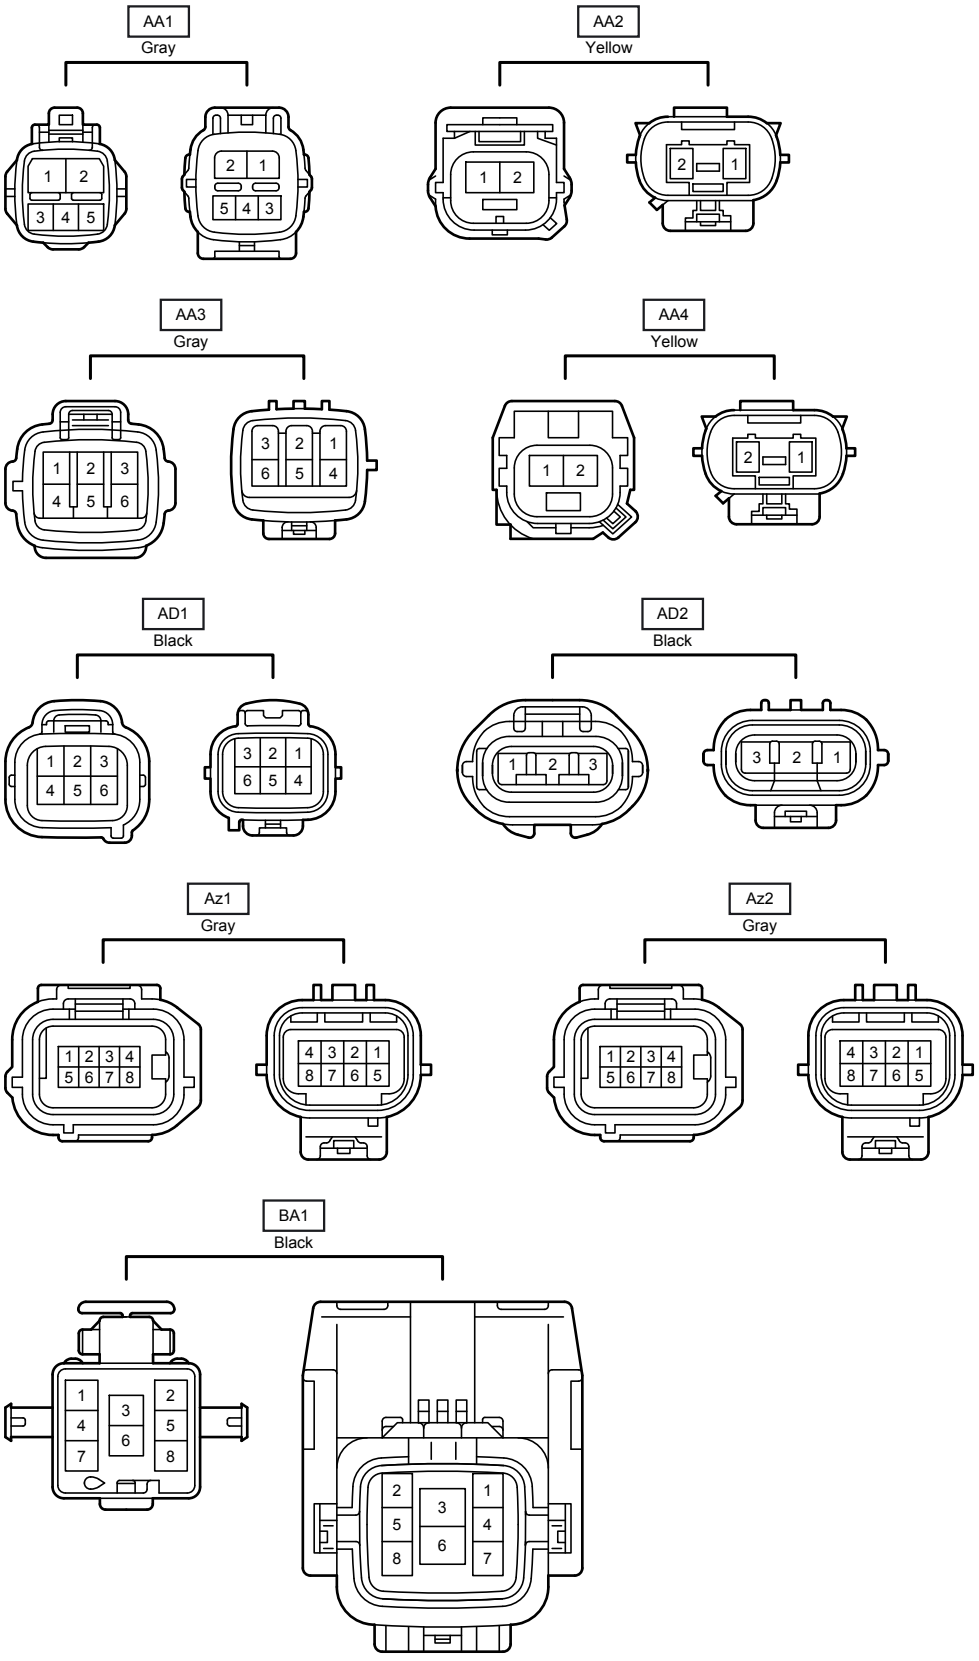

AA1
Gray
1 2
3 4 5
2 1
5 4 3
AA2
Yellow
1 2
2 1
AA3
Gray
1 2 3
4 5 6
3 2 1
6 5 4
AA4
Yellow
1 2
2 1
AD1
Black
1 2 3
4 5 6
3 2 1
6 5 4
AD2
Black
1 2 3
3 2 1
Az1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Az2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
BA1
Black
1 2
4 3 5
7 6 8
2 1
5 3 4
8 6 7

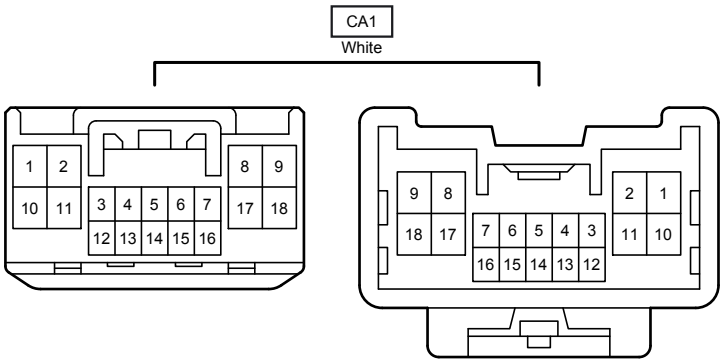

CA1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10

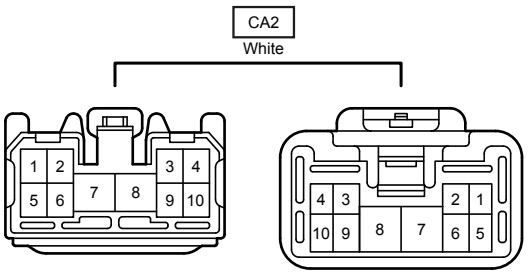

CA2
White
1 2 3 4 5 6 7 8 9 10
4 3 2 1 10 9 8 7 6 5

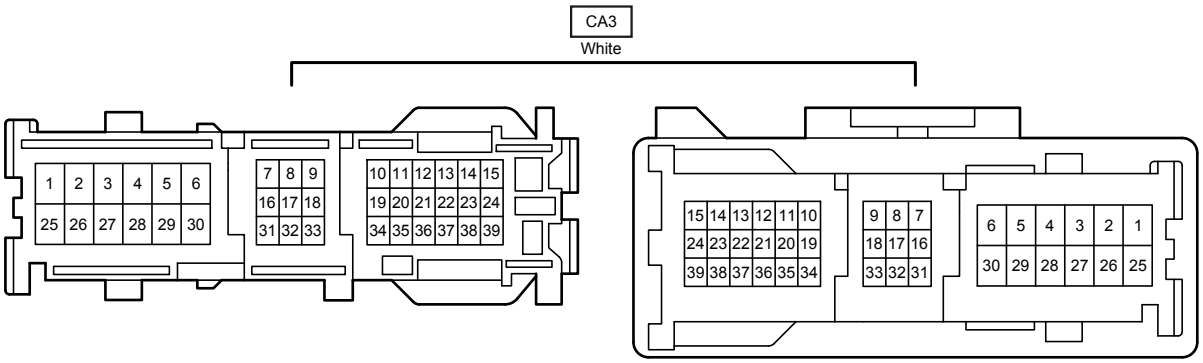
CA3
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
25 26 27 28 29 30 16 17 18 19 20 21 22 23 24
31 32 33 34 35 36 37 38 39
15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
24 23 22 21 20 19 18 17 16 30 29 28 27 26 25
39 38 37 36 35 34 33 32 31

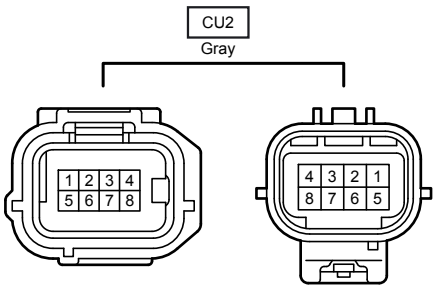
CU2
Gray
1 2 3 4 5 6 7 8
4 3 2 1 8 7 6 5

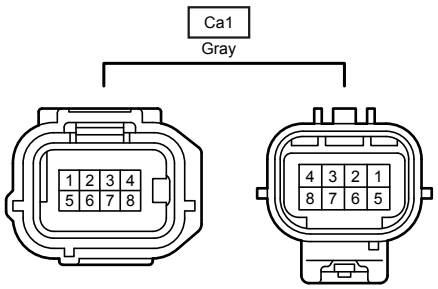
Ca1
Gray
1 2 3 4 5 6 7 8
4 3 2 1 8 7 6 5

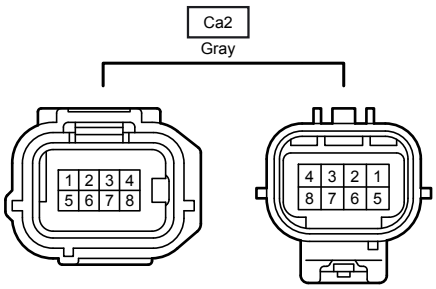
Ca2
Gray
1 2 3 4 5 6 7 8
4 3 2 1 8 7 6 5

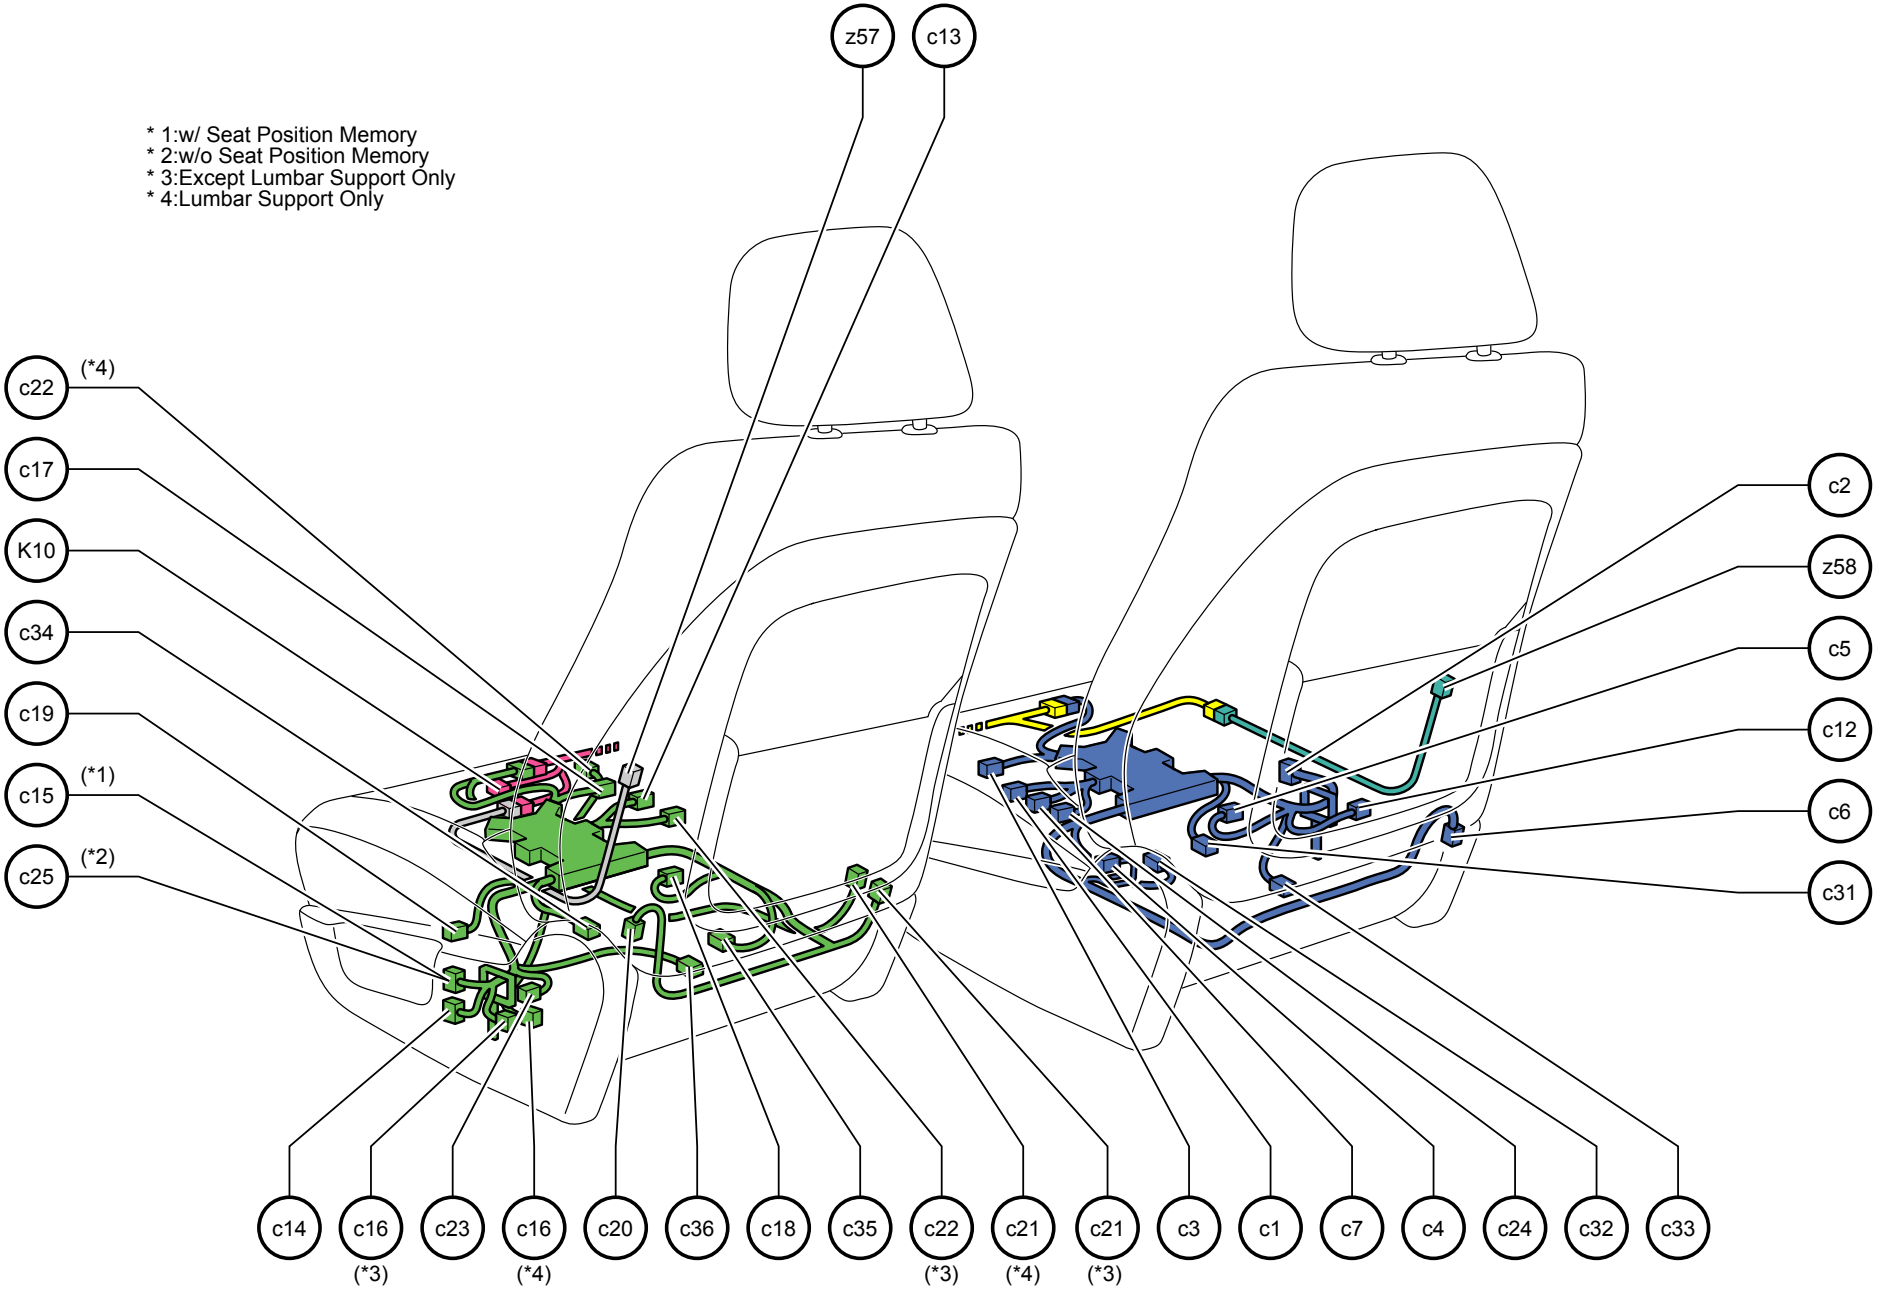

* 1:w/ Seat Position Memory
* 2:w/o Seat Position Memory
* 3:Except Lumbar Support Only
* 4:Lumbar Support Only
z57
c13
c22
(*4)
c17
K10
c34
c19
c15
(*1)
c25
(*2)
c2
z58
c5
c12
c6
c31
c14
c16
(*3)
c23
c16
(*4)
c20
c36
c18
c35
c22
(*3)
c21
(*4)
c21
(*3)
c3
c1
c7
c4
c24
c32
c33

K 10 Front Seat Inner Belt Assembly LH


c 1 Front Seat Heater Assembly RH
c 2 Front Power Seat Switch Assembly RH
c 3 Front Power Seat Slide Position Motor Assembly RH
c 4 Front Power Seat Lift Position Motor Assembly RH
c 5 Front Power Seat Vertical Position Motor Assembly RH
c 6 Front Power Seat Reclining Position Motor Assembly RH
c 7 Front Seat Inner Belt Assembly RH
c 12 Junction Connector
c 13 Front Seat Heater Assembly LH
c 14 Front Position Control ECU and Switch Assembly LH
c 15 Front Position Control ECU and Switch Assembly LH
c 16 Front Power Seat Switch Assembly LH
c 17 Front Power Seat Slide Position Motor Assembly LH
c 18 Front Power Seat Lift Position Motor Assembly LH
c 19 Front Power Seat Vertical Position Motor Assembly LH
c 20 Front Power Seat Reclining Position Motor Assembly LH
c 21 Front Lumbar Support Forward and Back Motor Assembly LH
c 22 Front Seat Inner Belt Assembly LH
c 23 Junction Connector
c 24 Front Seat Inner Belt Assembly RH
c 25 Front Power Seat Switch Assembly LH
c 31 Seat Climate Control Blower RH
c 32 Seat Climate Control ECU RH
c 33 Front Seat Cushion Heater Assembly RH
c 34 Seat Climate Control Blower LH
c 35 Seat Climate Control ECU LH
c 36 Front Seat Cushion Heater Assembly LH

z 57 Front Side Airbag Squib Circuit LH
z 58 Front Side Airbag Squib Circuit RH


K 10
Gray

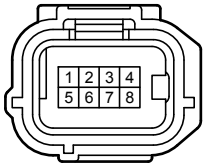


c 1
White

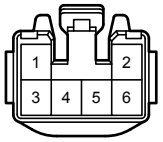


c 2
Black

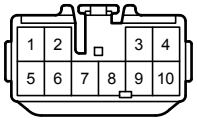


c 3
White




c 4
White




c 5
White




c 6
White




c 7
White

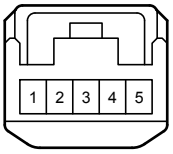


c 12
White




c 13
White

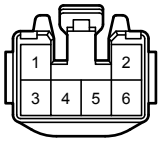


c 14
Gray

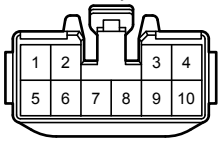


c 15
White

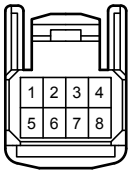


c 16
White

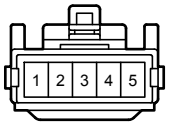


c 17
White




c 18
White




c 19
White




c 20
White




c 21
White




c 22
White

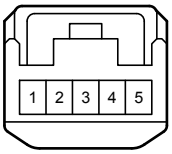


c 23
White




c 24
Gray

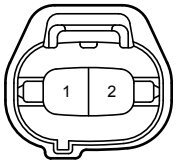


c 25
Black

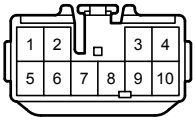


c 31
White

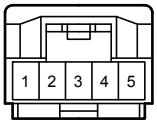


c 32
White

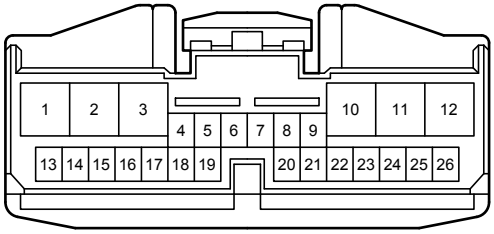


c 33
White




c 34
White

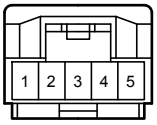


c 35
White

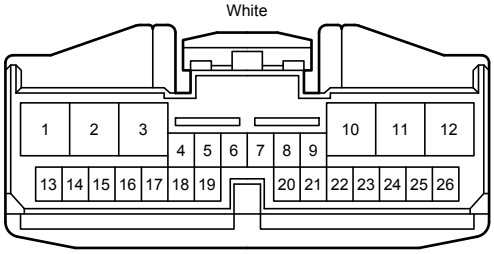


c 36
White





z 57
White





z 58
White




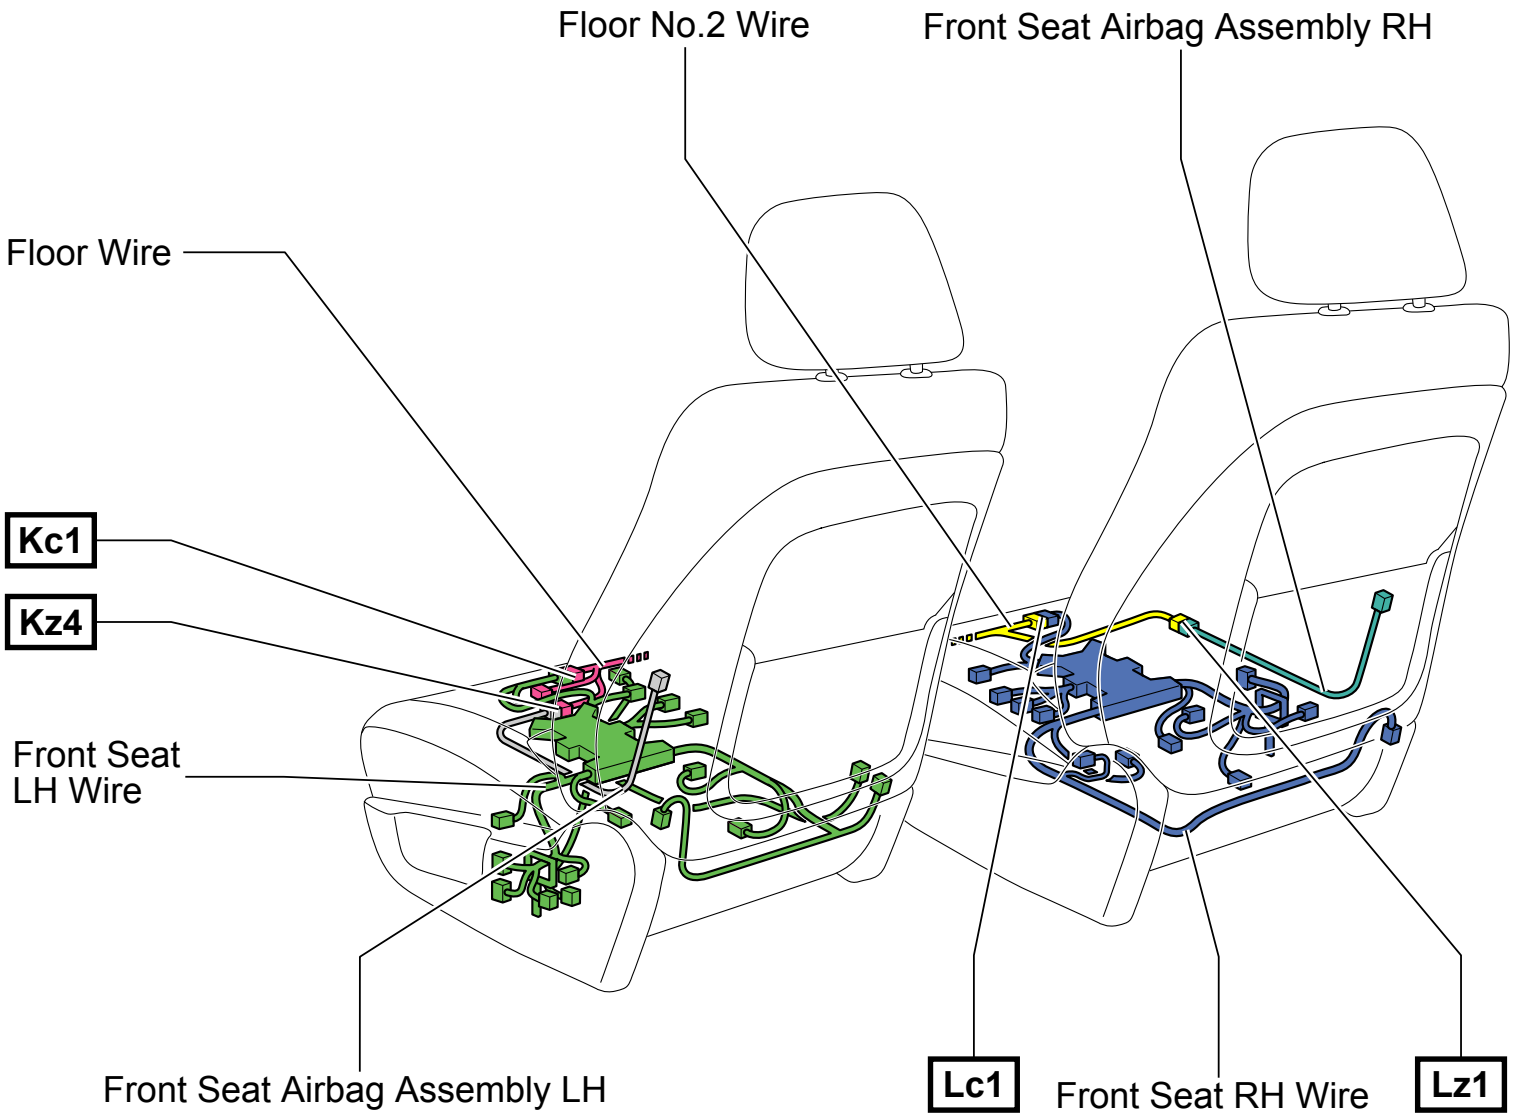

Floor No.2 Wire
Front Seat Airbag Assembly RH
Floor Wire
Kc1
Kz4
Front Seat
LH Wire
Front Seat Airbag Assembly LH
Lc1
Front Seat RH Wire
Lz1

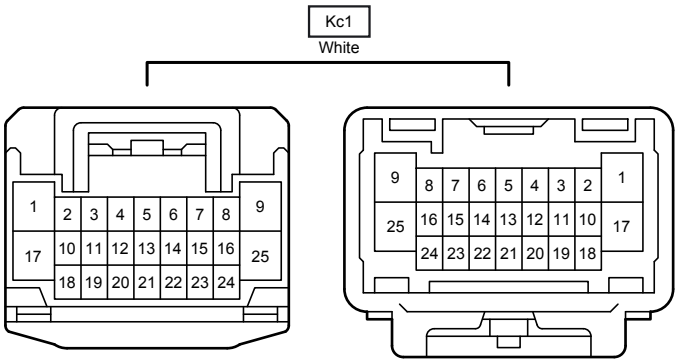
Kc1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

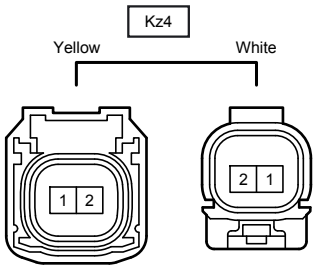
Kz4
Yellow
White
1 2
2 1

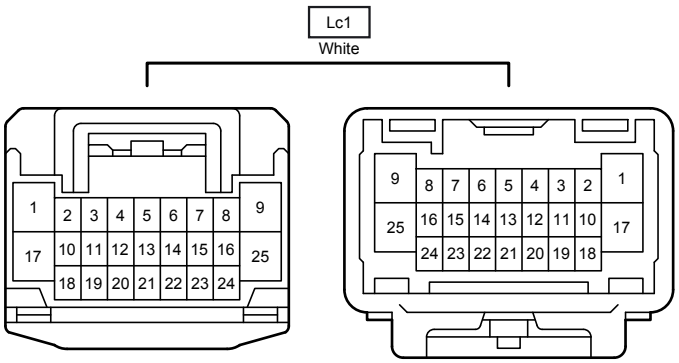
Lc1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

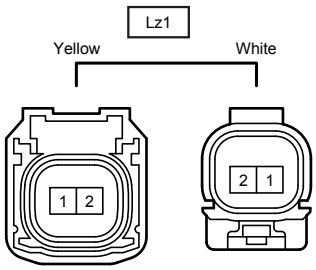
Lz1
Yellow
White
1 2
2 1

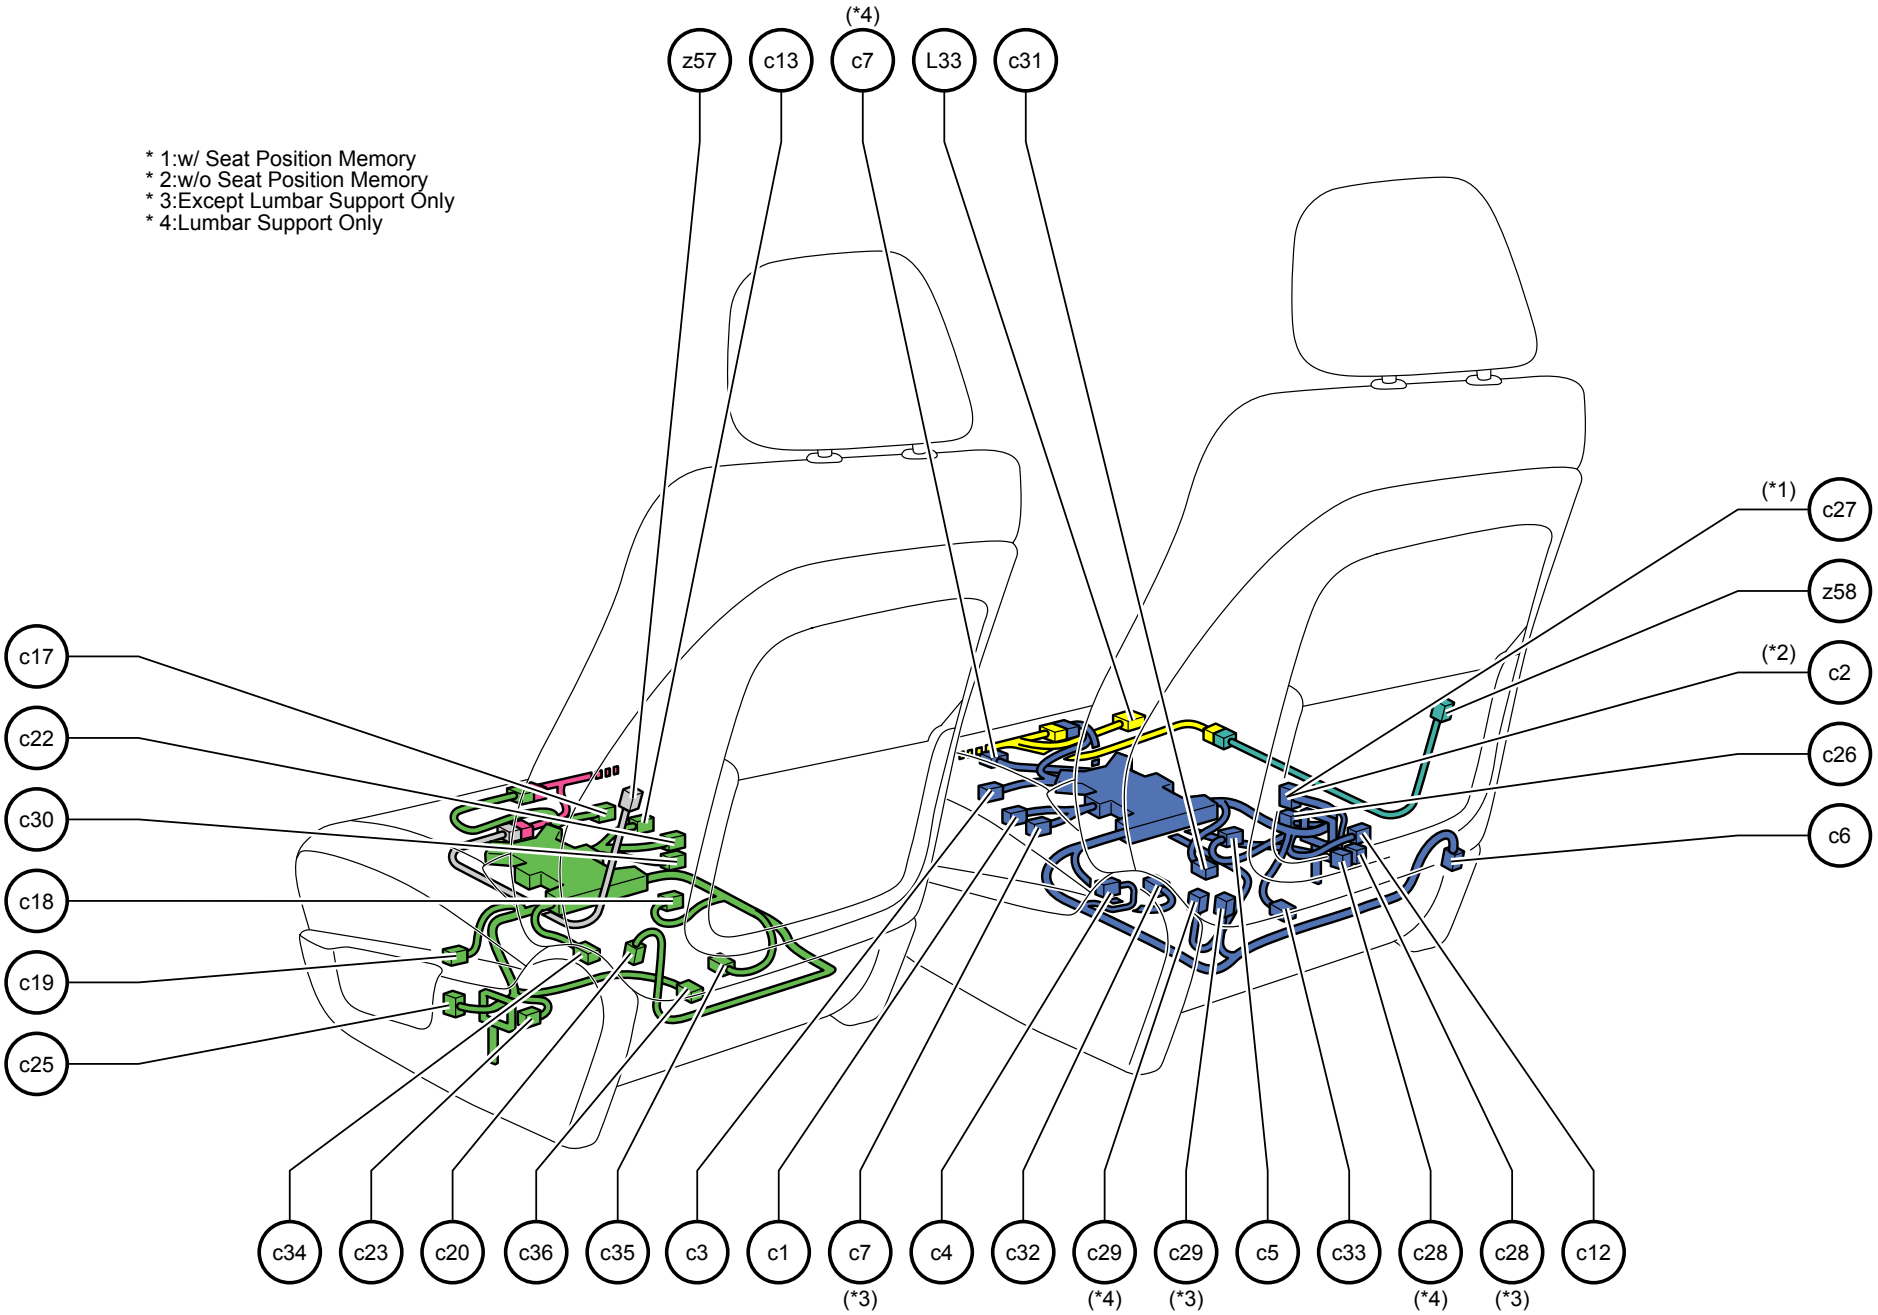

* 1:w/ Seat Position Memory
* 2:w/o Seat Position Memory
* 3:Except Lumbar Support Only
* 4:Lumbar Support Only
(*4)
z57
c13
c7
L33
c31
(*1)
c27
z58
(*2)
c2
c26
c6
c17
c22
c30
c18
c19
c25
c34
c23
c20
c36
c35
c3
c1
c7
(*3)
c4
c32
c29
(*4)
c29
(*3)
c5
c33
c28
(*4)
c28
(*3)
c12

L 33 Front Seat Inner Belt Assembly RH


c 1 Front Seat Heater Assembly RH
c 2 Front Power Seat Switch Assembly RH
c 3 Front Power Seat Slide Position Motor Assembly RH
c 4 Front Power Seat Lift Position Motor Assembly RH
c 5 Front Power Seat Vertical Position Motor Assembly RH
c 6 Front Power Seat Reclining Position Motor Assembly RH
c 7 Front Seat Inner Belt Assembly RH
c 12 Junction Connector
c 13 Front Seat Heater Assembly LH
c 17 Front Power Seat Slide Position Motor Assembly LH
c 18 Front Power Seat Lift Position Motor Assembly LH
c 19 Front Power Seat Vertical Position Motor Assembly LH
c 20 Front Power Seat Reclining Position Motor Assembly LH
c 22 Front Seat Inner Belt Assembly LH
c 23 Junction Connector
c 25 Front Power Seat Switch Assembly LH
c 26 Front Position Control ECU and Switch Assembly RH
c 27 Front Position Control ECU and Switch Assembly RH
c 28 Front Power Seat Switch Assembly RH
c 29 Front Lumbar Support Forward and Back Motor Assembly RH
c 30 Front Seat Inner Belt Assembly LH
c 31 Seat Climate Control Blower RH
c 32 Seat Climate Control ECU RH
c 33 Front Seat Cushion Heater Assembly RH
c 34 Seat Climate Control Blower LH
c 35 Seat Climate Control ECU LH
c 36 Front Seat Cushion Heater Assembly LH

z 57 Front Side Airbag Squib Circuit LH
z 58 Front Side Airbag Squib Circuit RH


L 33
Gray

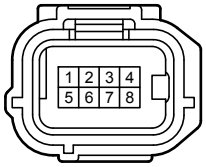


c 1
White

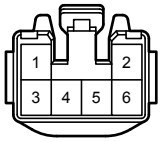


c 2
Black

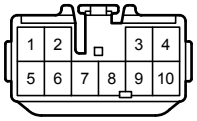


c 3
White




c 4
White




c 5
White




c 6
White




c 7
White

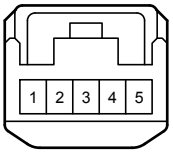


c 12
White




c 13
White

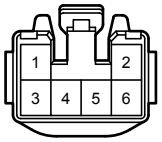


c 17
White




c 18
White




c 19
White




c 20
White




c 22
White

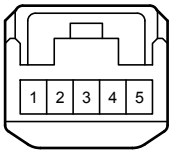


c 23
White




c 25
Black

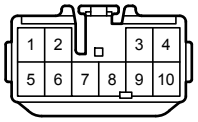


c 26
Gray

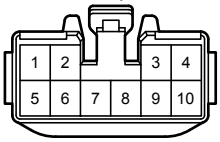


c 27
White

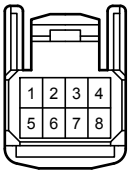


c 28
White

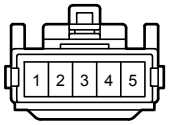


c 29
White




c 30
White

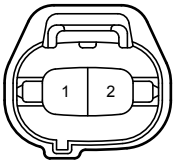


c 31
White

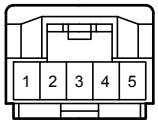


c 32
White

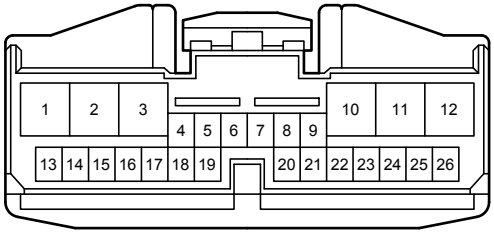


c 33
White




c 34
White

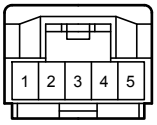


c 35
White

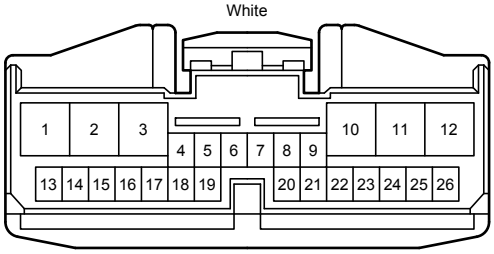


c 36
White





z 57
White





z 58
White




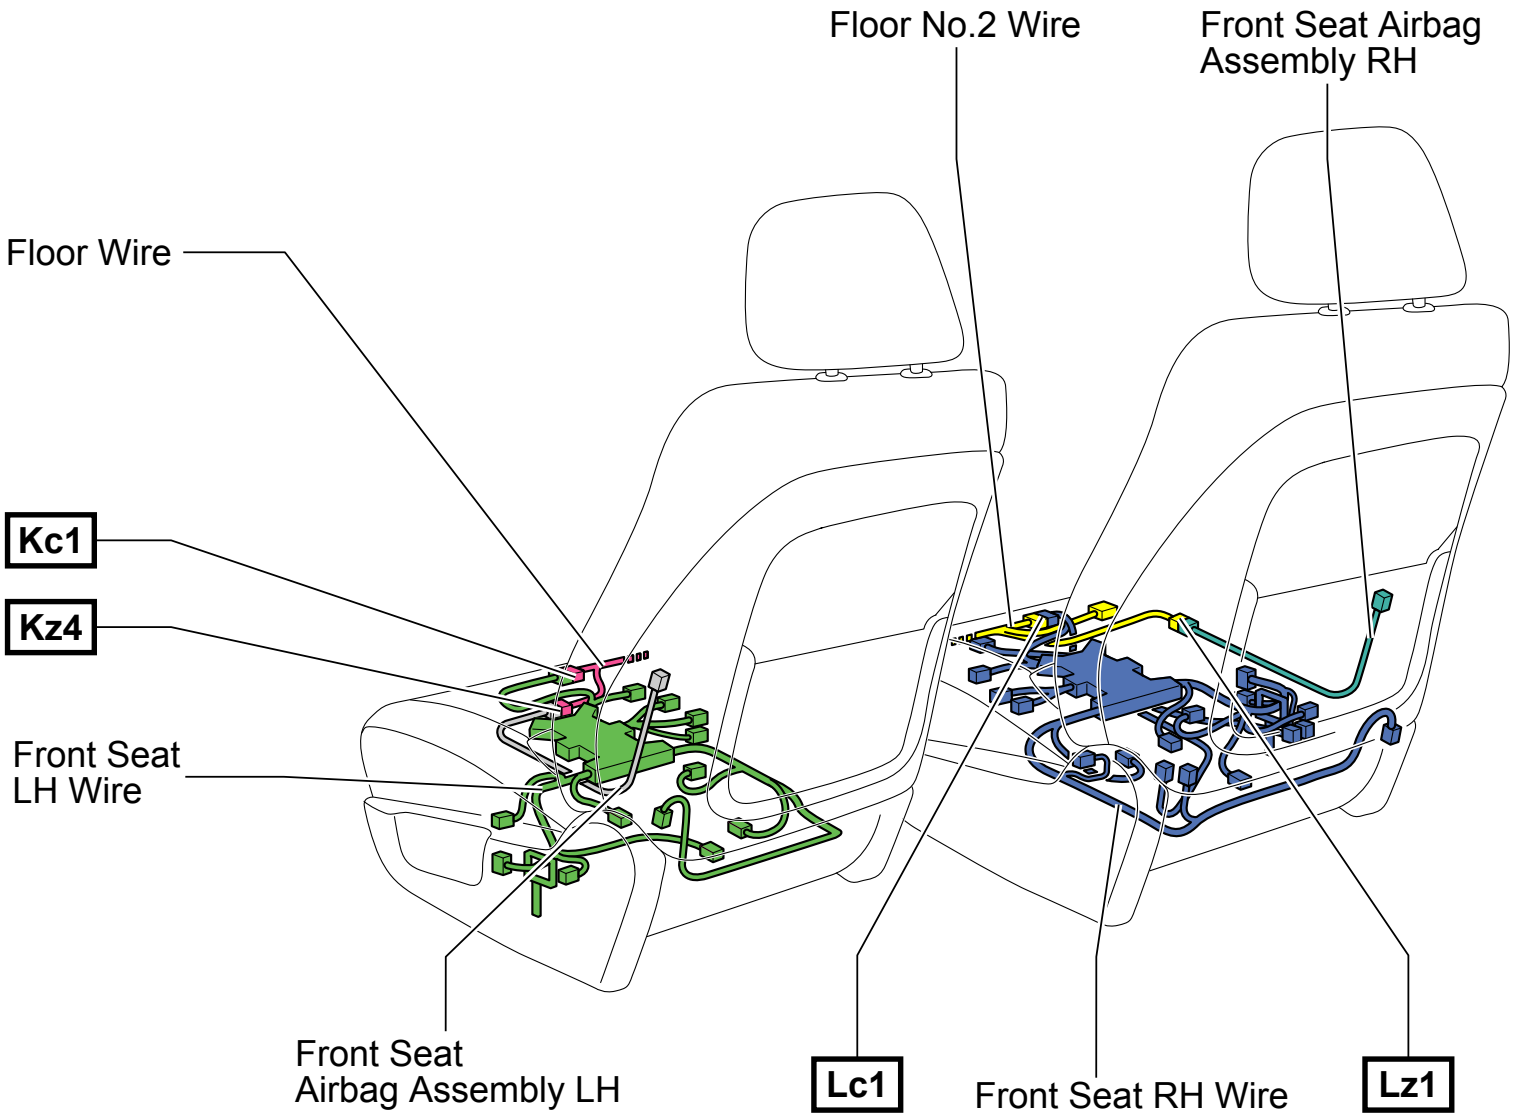

Floor No.2 Wire
Front Seat Airbag Assembly RH
Floor Wire
Kc1
Kz4
Front Seat LH Wire
Front Seat Airbag Assembly LH
Lc1
Front Seat RH Wire
Lz1

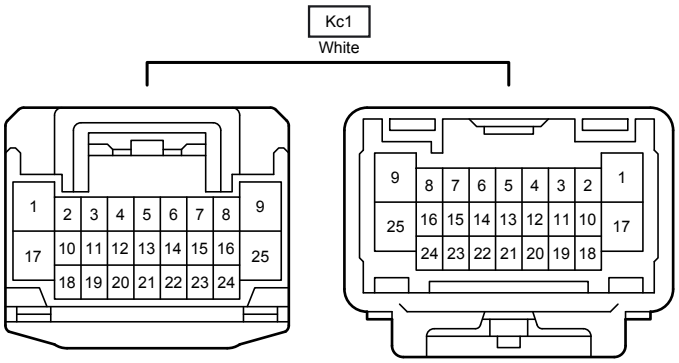

Kc1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

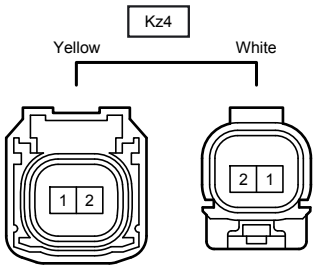
Kz4
Yellow
White
1 2
2 1

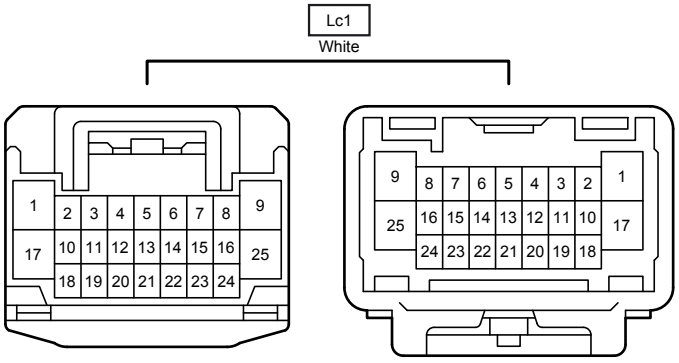
Lc1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

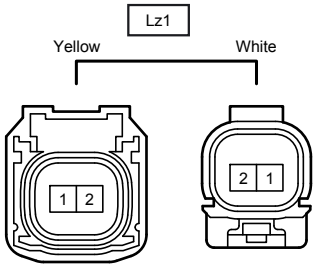

Lz1
Yellow
White
1 2
2 1

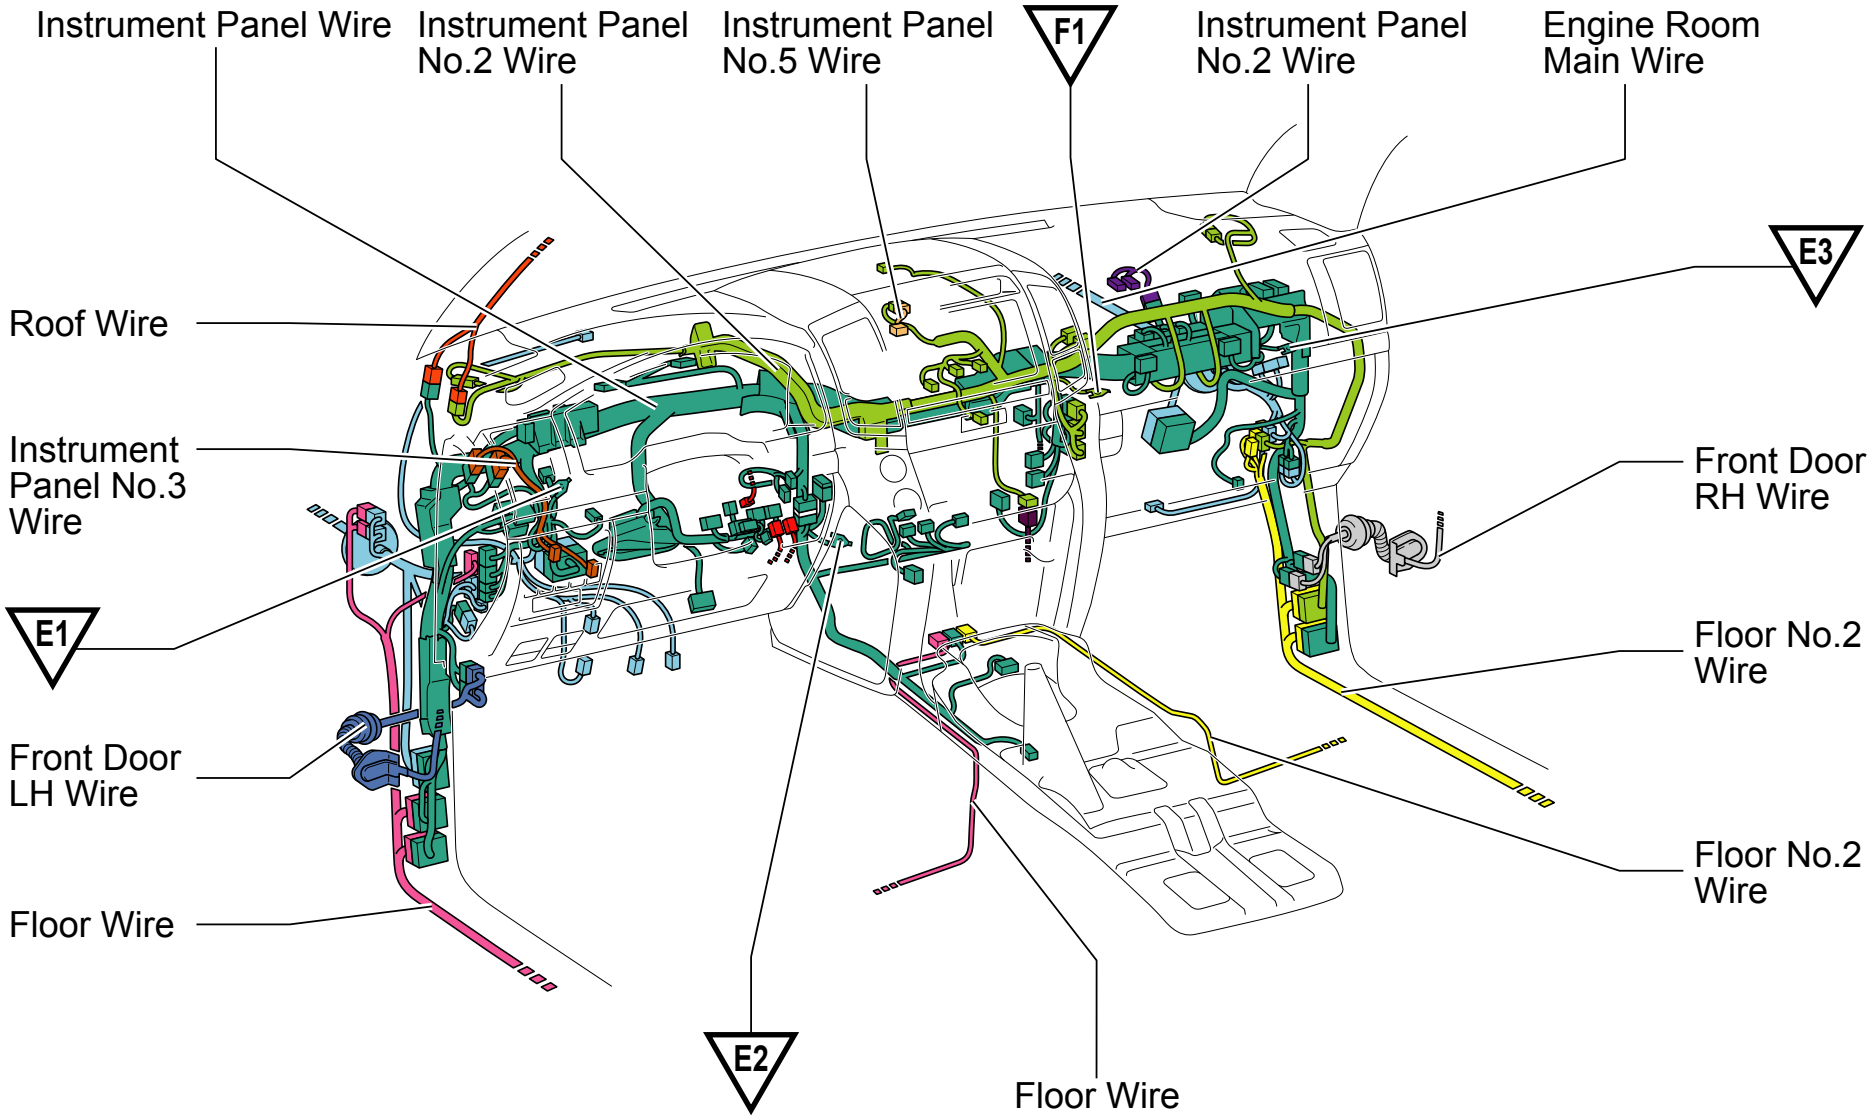
Instrument Panel Wire
Instrument Panel No.2 Wire
Instrument Panel No.5 Wire
F1
Instrument Panel No.2 Wire
Engine Room Main Wire
E3
Roof Wire
Instrument Panel No.3 Wire
Front Door RH Wire
E1
Floor No.2 Wire
Front Door LH Wire
Floor No.2 Wire
Floor Wire
E2
Floor Wire

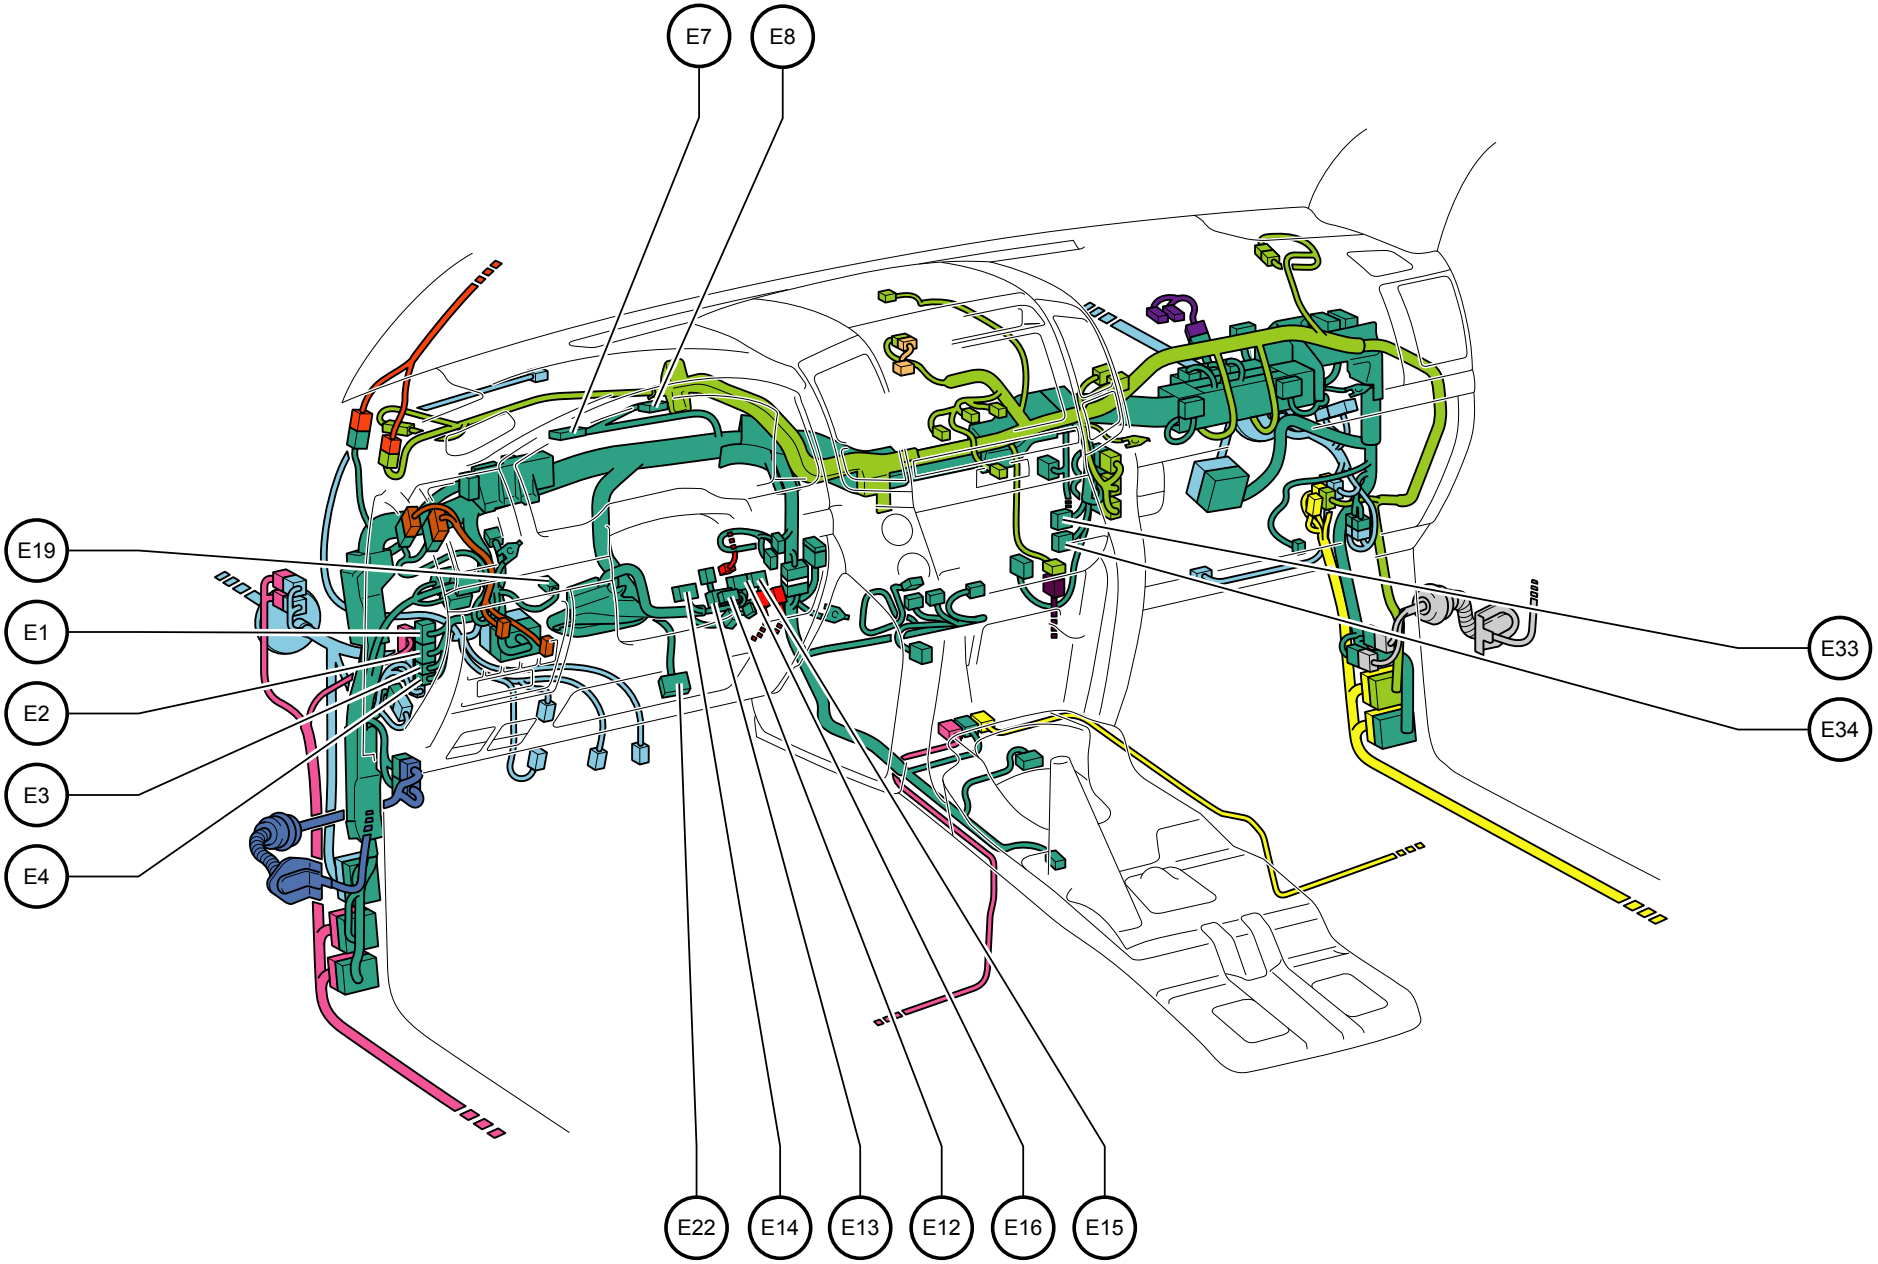

E7
E8
E19
E1
E2
E3
E4
E33
E34
E22
E14
E13
E12
E16
E15

E	1	Main Body ECU
E	2	Main Body ECU
E	3	Main Body ECU
E	4	Main Body ECU
E	7	Combination Meter Assembly
E	8	Combination Meter Assembly
E	12	Spiral Cable Sub-Assembly
E	13	Spiral Cable Sub-Assembly
E	14	Headlight Dimmer Switch Assembly
E	15	Windshield Wiper Switch Assembly
E	16	Windshield Wiper Switch Assembly
E	19	Turn Signal Flasher Assembly
E	22	DLC3
E	33	Quick Heater Assembly
E	34	Quick Heater Assembly


E 1
White

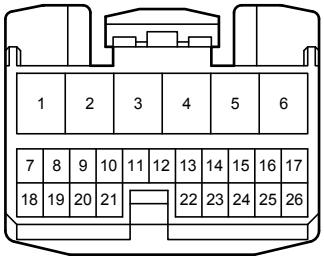


E 2
White

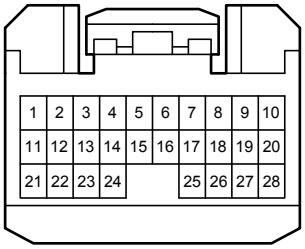


E 3
White

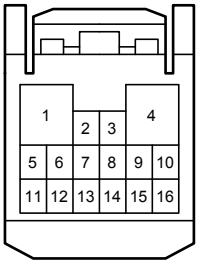


E 4
White

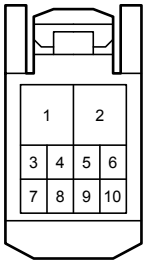


E 7
White

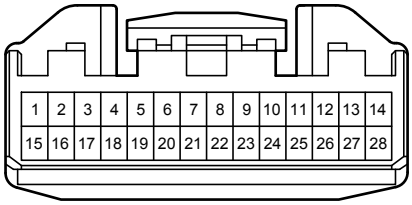


E 8
Black

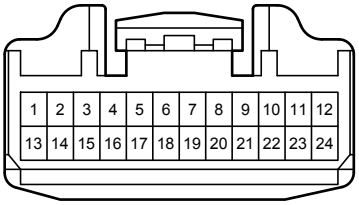


E 12
Black

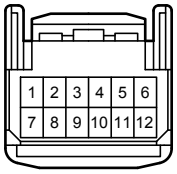


E 13
Yellow

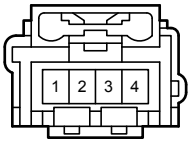


E 14
White

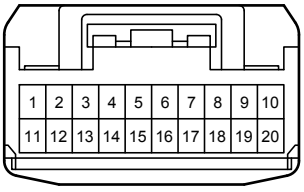


E 15
White

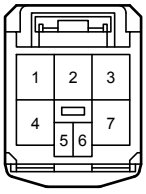


E 16
White

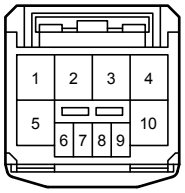


E 19
Black




E 22
White

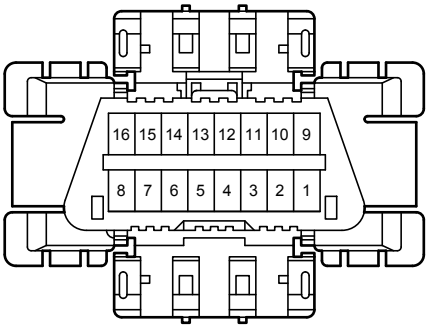


E 33
White

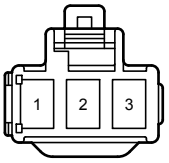

E 34
White

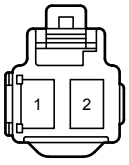


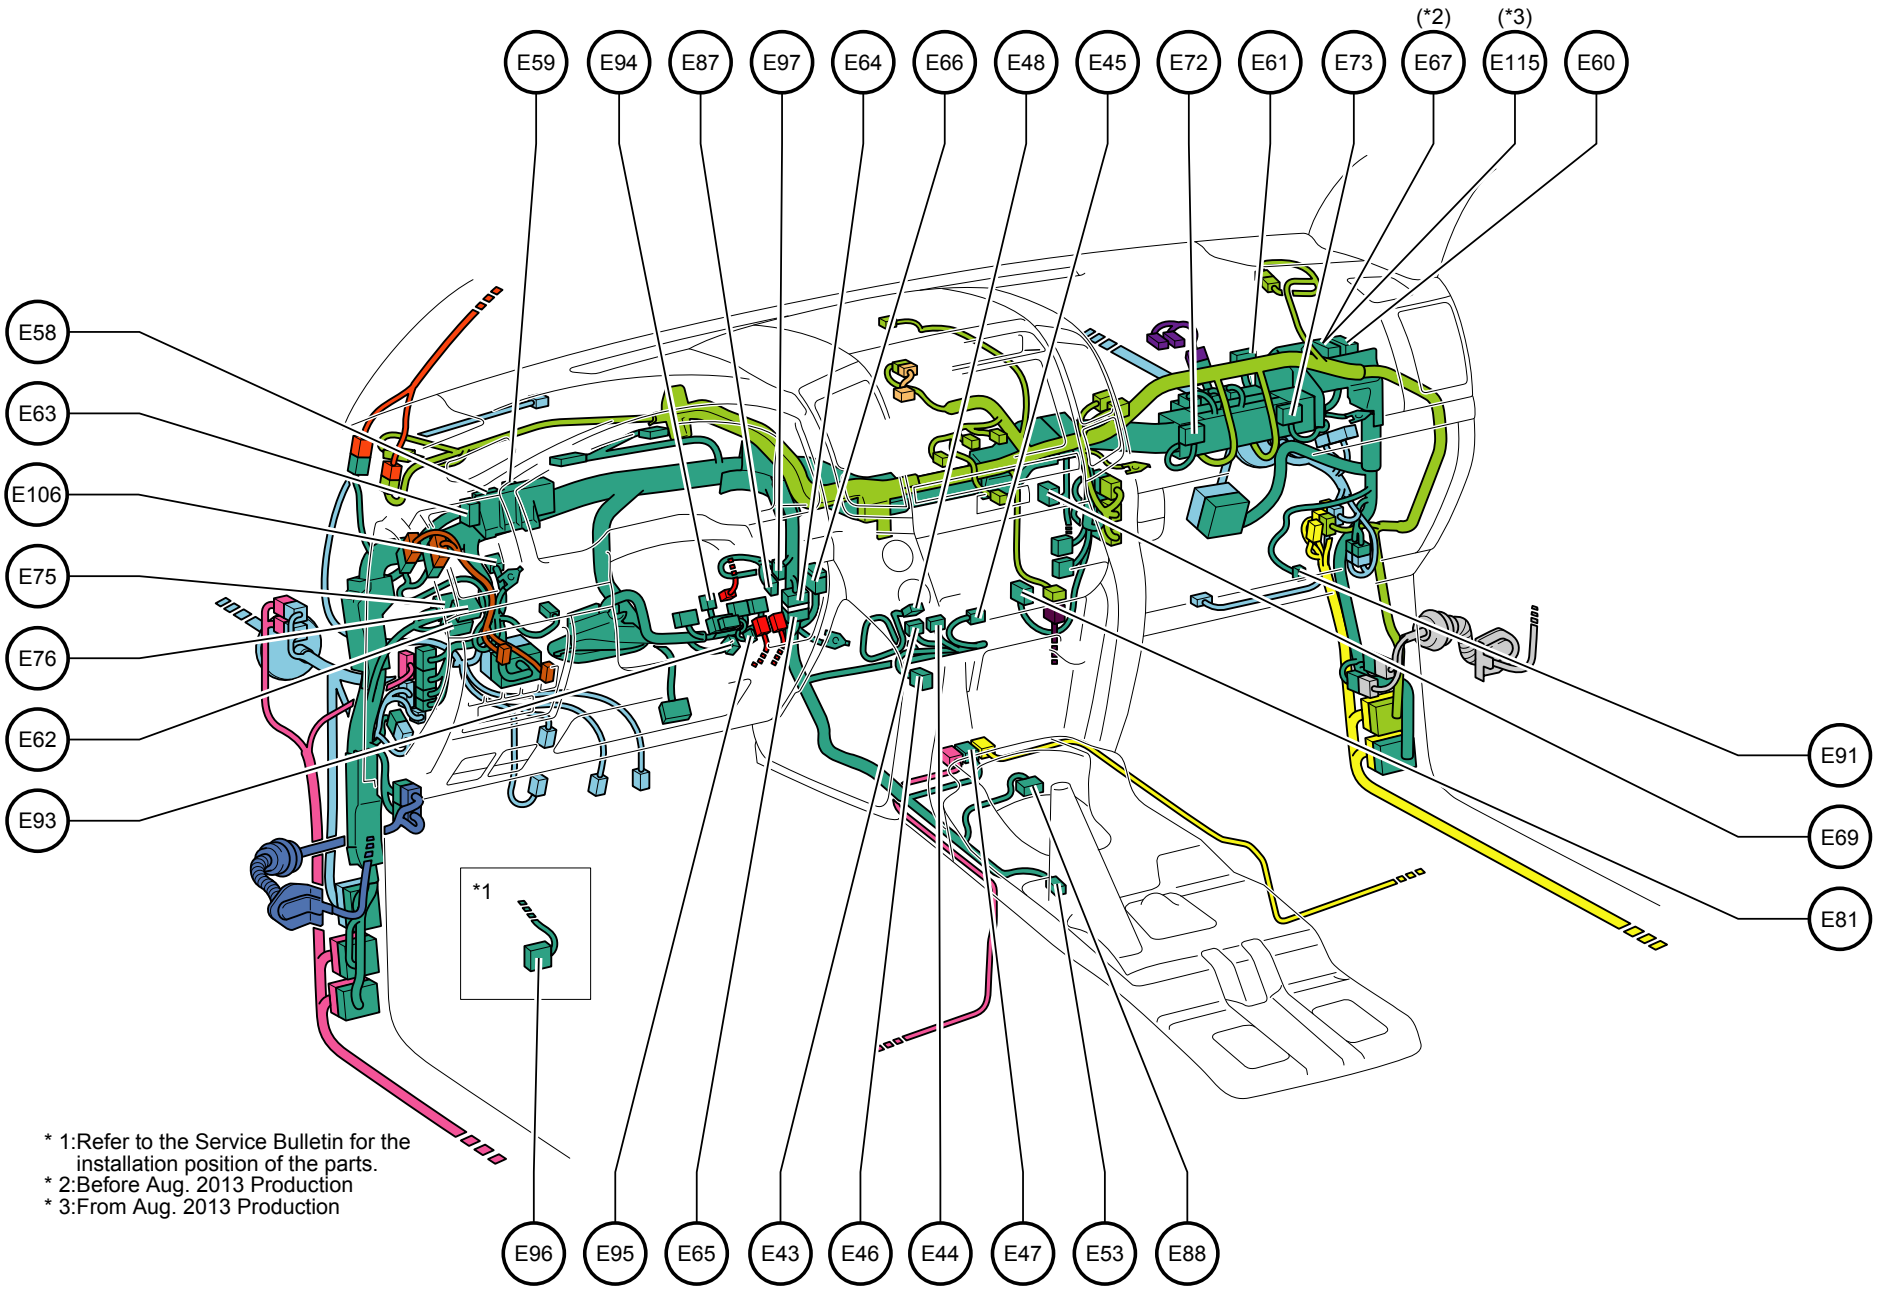

* 1:Refer to the Service Bulletin for the installation position of the parts.
* 2:Before Aug. 2013 Production
* 3:From Aug. 2013 Production

E 43 Cigarette Lighter Assembly
E 44 Cigarette Lighter Illumination Assembly
E 45 Ash Receptacle Light Sub-Assembly
E 46 Front Power Outlet Socket Assembly
E 47 Center Airbag Sensor Assembly
E 48 Transfer Position Switch
E 53 Parking Brake Switch Assembly
E 58 Junction Connector
E 59 Junction Connector
E 60 Junction Connector
E 61 Junction Connector
E 62 Junction Connector
E 63 Junction Connector
E 64 Junction Connector
E 65 Junction Connector
E 66 Junction Connector
E 67 Junction Connector
E 69 Junction Connector
E 72 Junction Connector
E 73 Junction Connector
E 75 Junction Connector
E 76 Junction Connector
E 81 A/C Amplifier Assembly
E 87 Differential Lock Switch
E 88 Deceleration Sensor
E 91 Option Connector (Parking Assist-Sensor)
E 93 Ignition or Starter Switch Assembly
E 94 Un-Lock Warning Switch Assembly
E 95 Transponder Key Amplifier
E 96 Transponder Key ECU Assembly
E 97 Idle Up Switch
E 106 Junction Connector
E 115 Junction Connector


E 43
White




E 44
Gray




E 45
White




E 46
White



E 47
Yellow

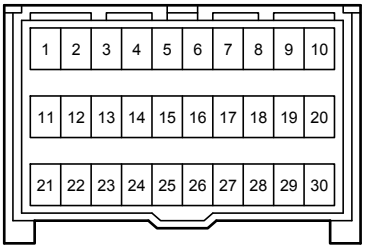


E 48
Black

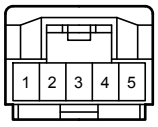


E 53
White




E 58

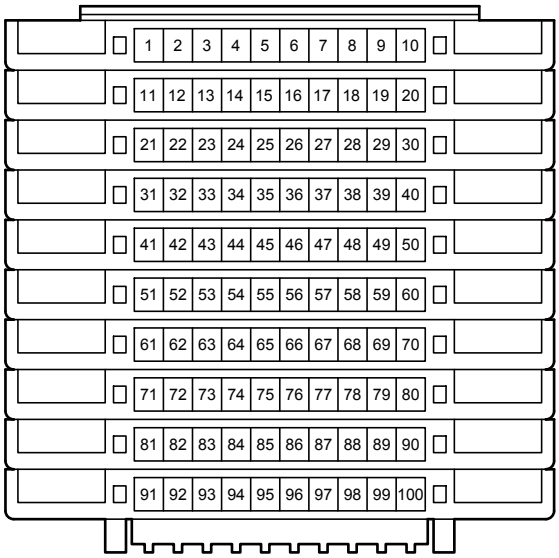


E 59

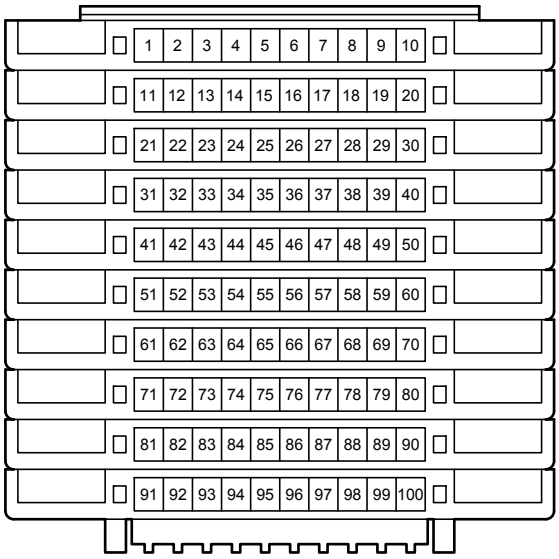


E 60

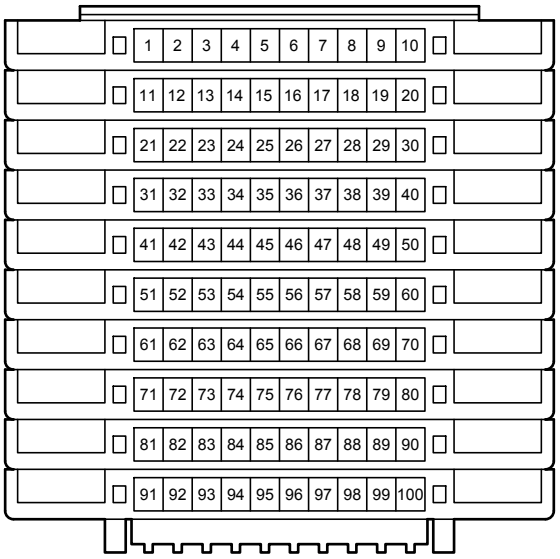


E 61

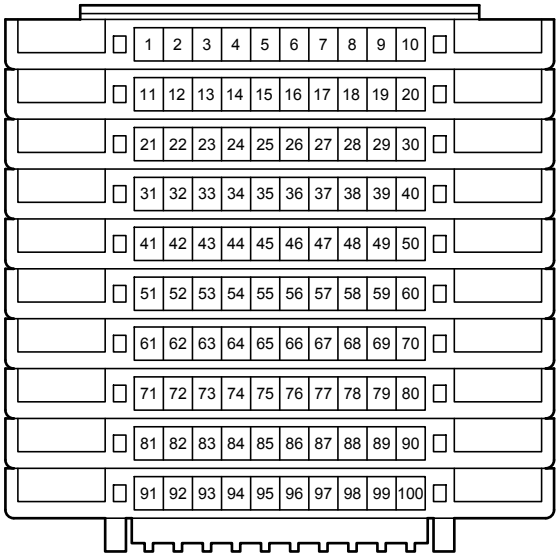


E 62
White

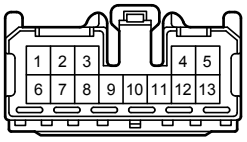


E 63
Gray




E 64
Black

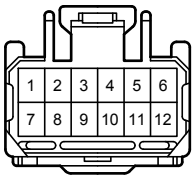


E 65
Black

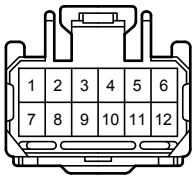


E 66
White

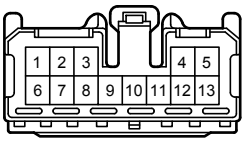


E 67
White

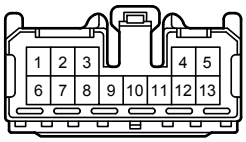


E 69
Gray

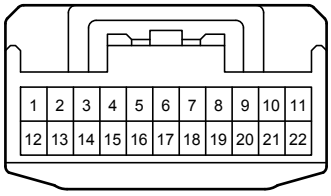


E 72
Gray

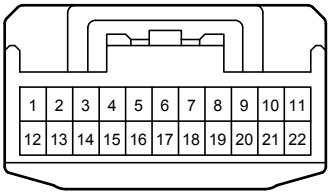


E 73
Gray

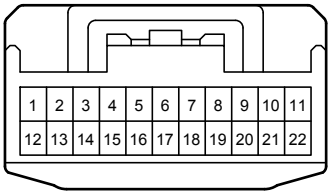


E 75
Gray

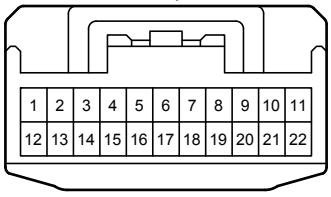

E 76
Gray

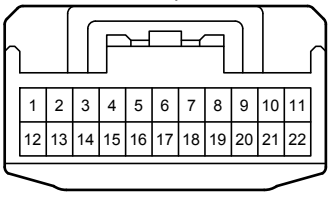


E 81
White

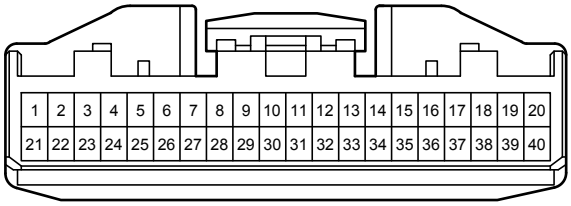


E 87
White




E 88
Black

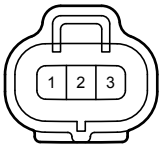

E 91
White

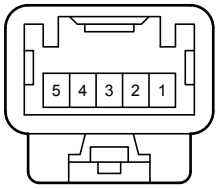


E 93
White

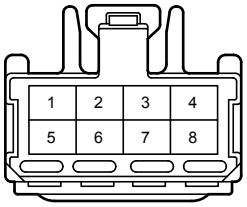


E 94
White




E 95
Black

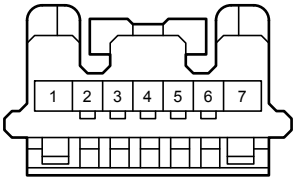


E 96
Black

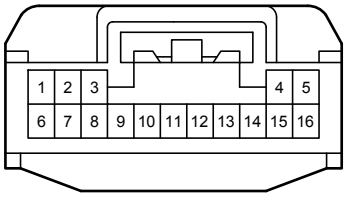


E 97
Black

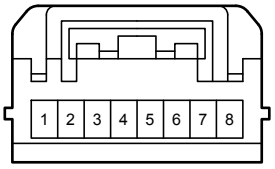


E106
White



E115
White

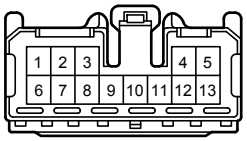

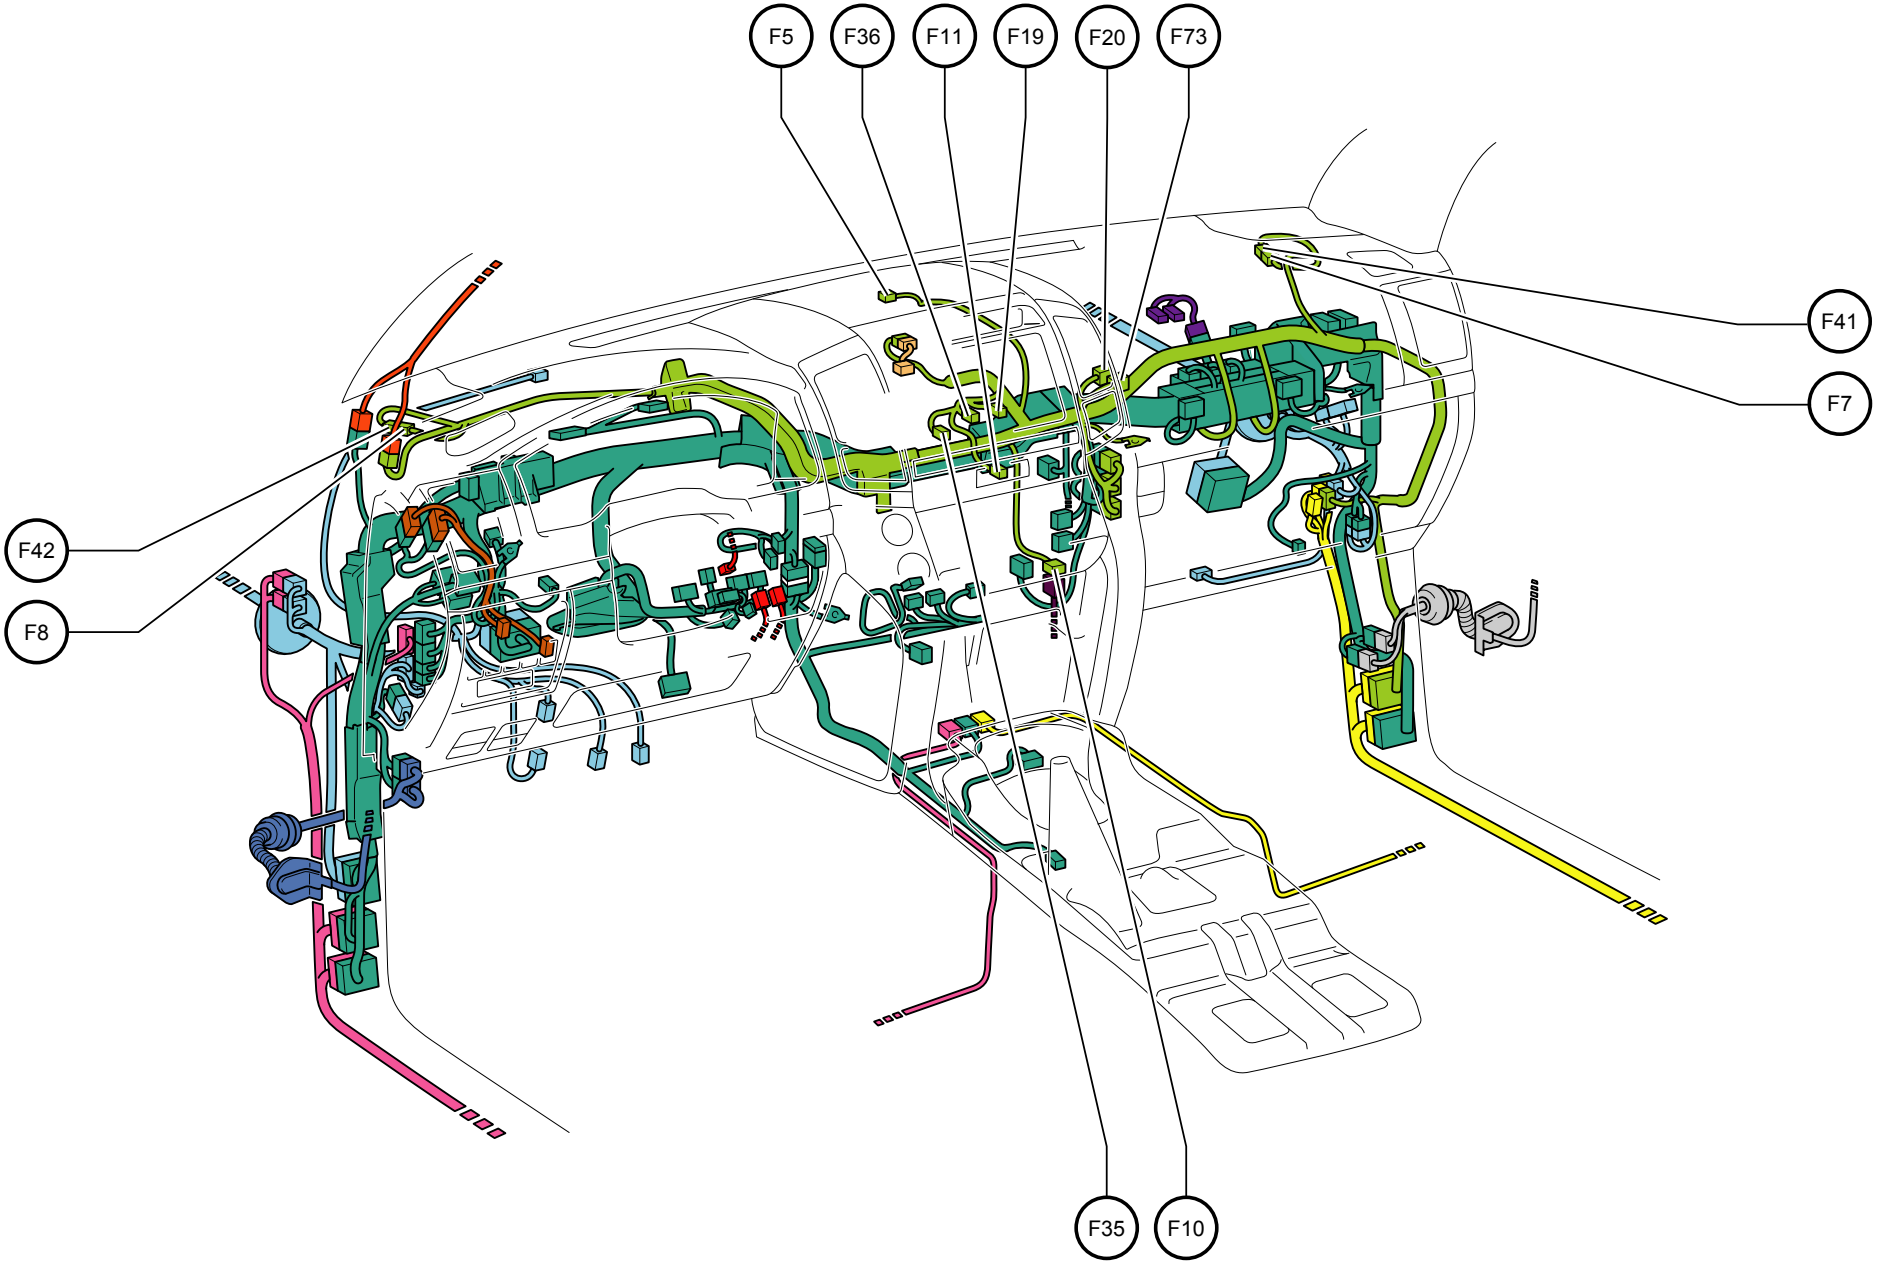

F5
F36
F11
F19
F20
F73
F41
F7
F42
F8
F35
F10

F 5 Amplifier Antenna Assembly
F 7 Front No.2 Speaker Assembly RH , Short Connector
F 8 Front No.2 Speaker Assembly LH , Short Connector
F 10 A/C Control Assembly
F 11 Hazard Warning Signal Switch Assembly
F 19 Radio Receiver Assembly
F 20 Junction Connector
F 35 Radio Receiver Assembly
F 36 Radio Receiver Assembly
F 41 Short Connector
F 42 Short Connector
F 73 Junction Connector


F 5
White




F 7
White




F 8
White




F 10
White

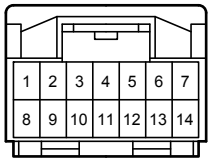


F 11
Gray

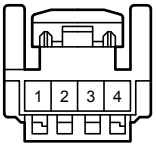


F 19
White

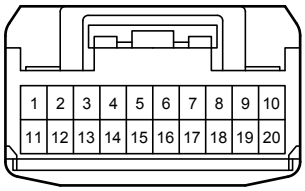

F 20
Gray

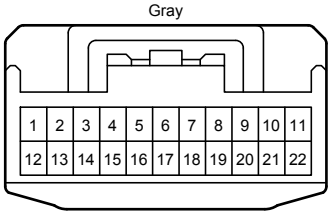


F 35
White

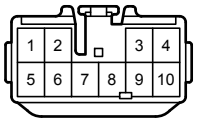


F 36
White




F 41
White




F 42
White



F 73
Blue

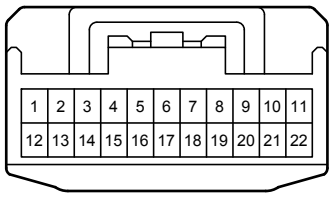

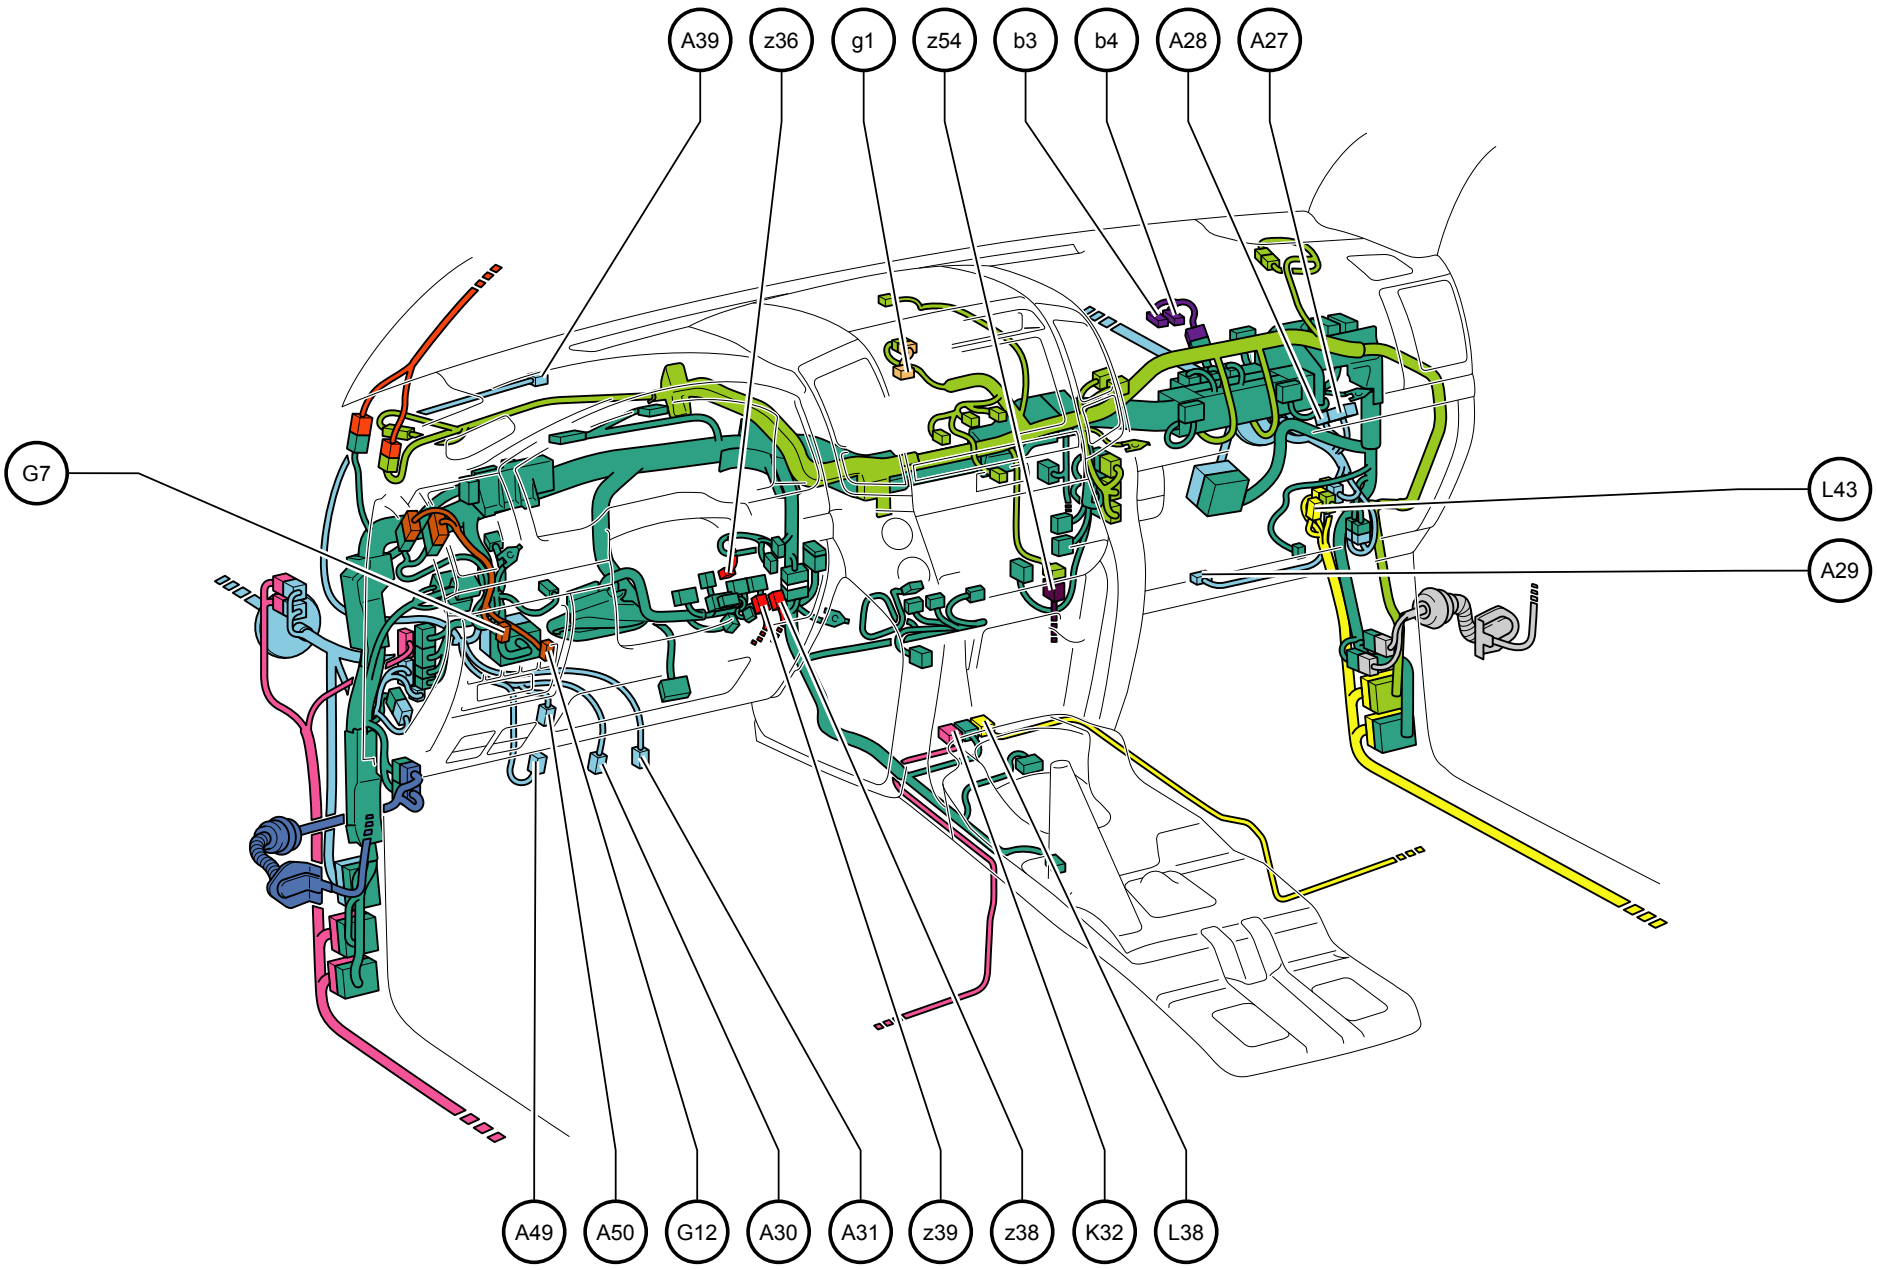
A39
z36
g1
z54
b3
b4
A28
A27
G7
L43
A29
A49
A50
G12
A30
A31
z39
z38
K32
L38

A 27 Four Wheel Drive Control ECU
A 28 Four Wheel Drive Control ECU
A 29 Front Blower with Fan Motor Sub-Assembly
A 30 Stop Light Switch Assembly
A 31 Accelerator Pedal Sensor Assembly
A 39 Stop Light Control Relay Assembly
A 49 Clutch Start Switch Assembly
A 50 Clutch Switch Assembly

G 7 Outer Mirror Switch Assembly
G 12 Center Differential Lock Switch

K 32 Center Airbag Sensor Assembly


L 38 Center Airbag Sensor Assembly
L 43 Option Connector (Parking Assist-Sensor)

b 3 Front Passenger Side Squib Circuit
b 4 Front Passenger Side Squib Circuit


g 1 Clock Assembly

z 36 Spiral Cable Sub-Assembly , Steering Pad Switch
z 38 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
z 39 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z 54 A/C Amplifier Assembly , A/C Blower Assembly


A 27
Black

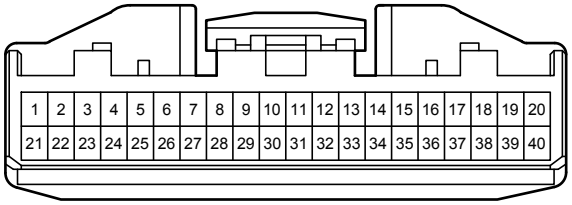


A 28
Black

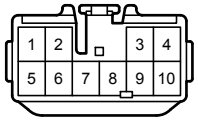


A 29
White

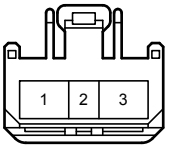


A 30
Gray




A 31
Black

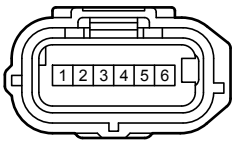


A 39
Black




A 49
Black




A 50
White




G 7
White

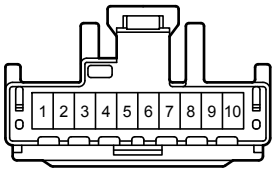


G 12
White

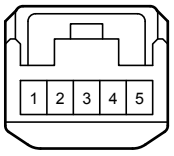


K 32
Yellow

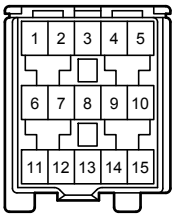


L 38
Yellow

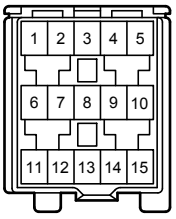


L 43
White

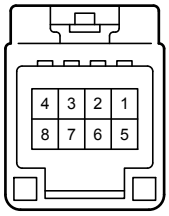


b 3
Orange




b 4
Black




g 1
White

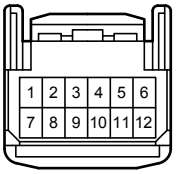


z 36
White

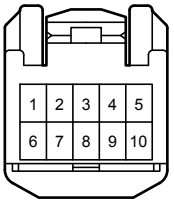


z 38
Black




z 39
Orange




z 54
White

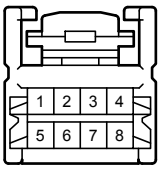


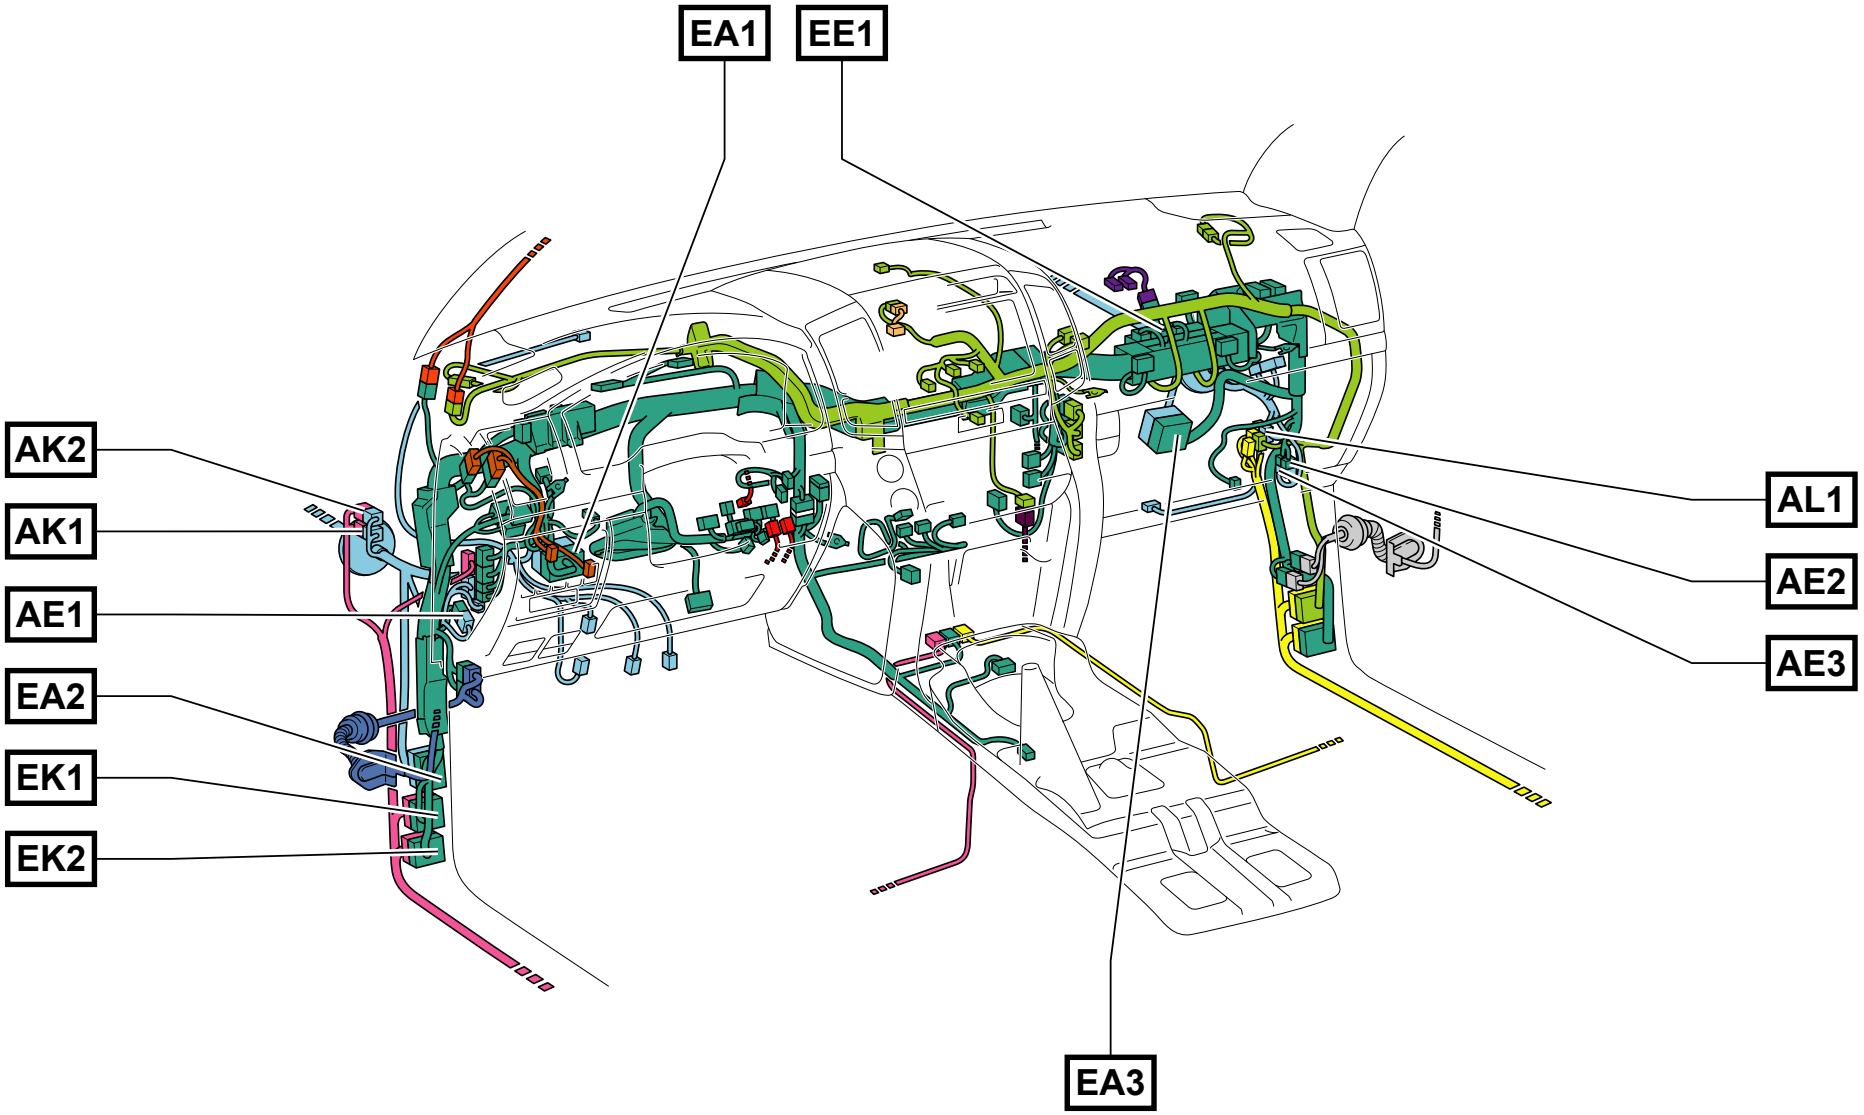
EA1
EE1
AK2
AK1
AE1
EA2
EK1
EK2
AL1
AE2
AE3
EA3


AE1
Yellow

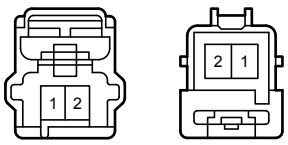


AE2
Yellow

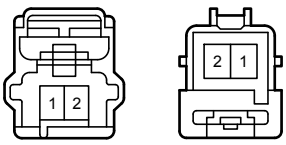


AE3
Gray

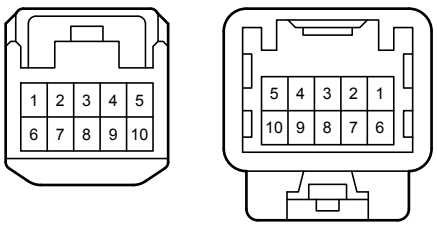


AK1
Blue

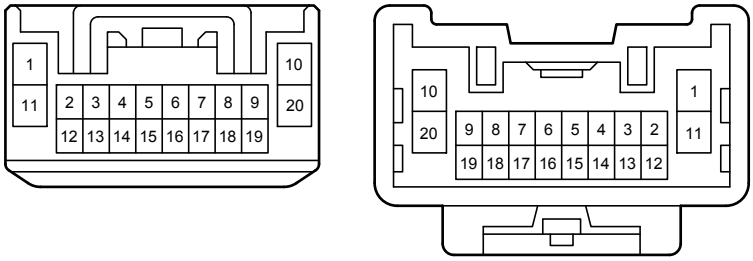


AK2
Gray

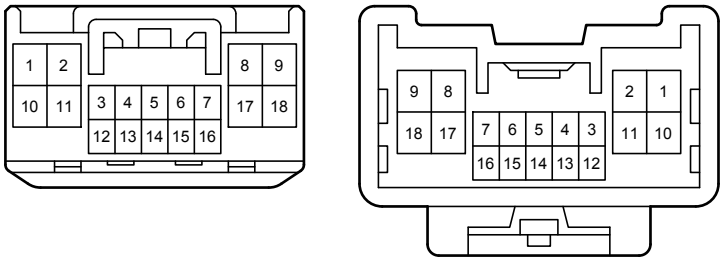

AL1
White

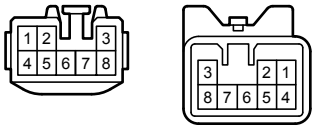


EA1
White

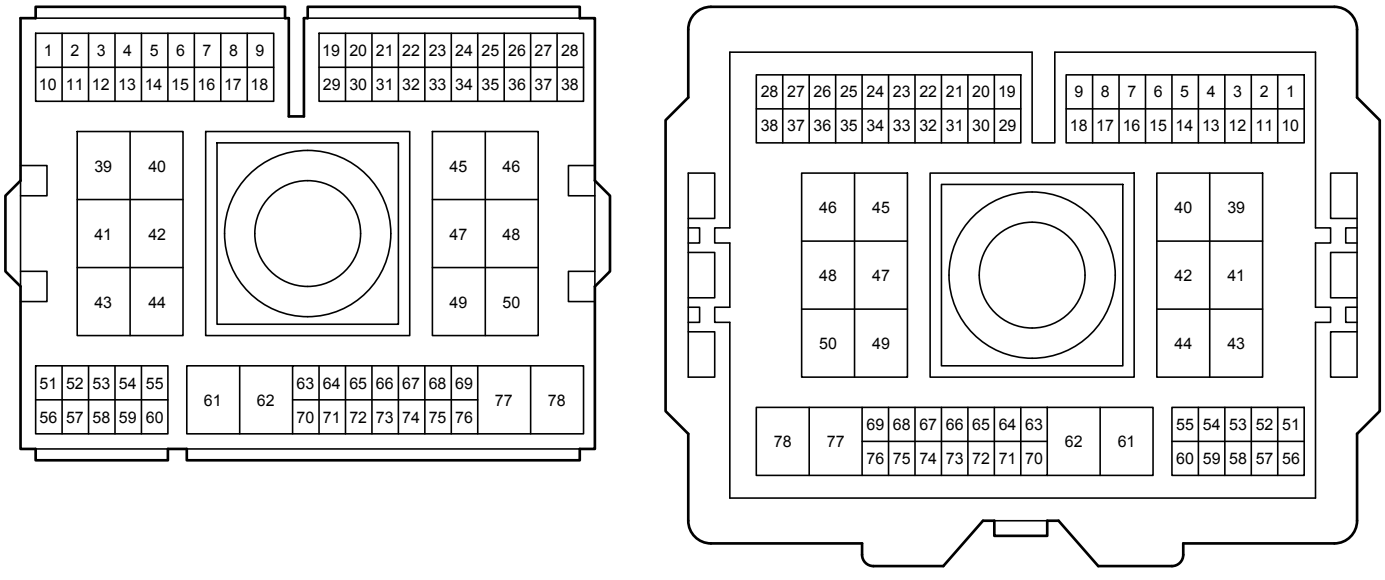


EA2

White

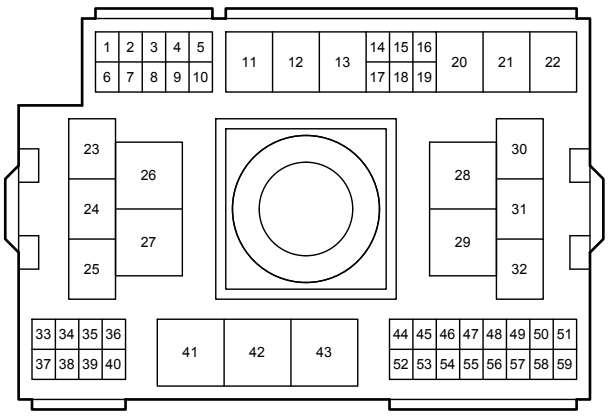



Gray

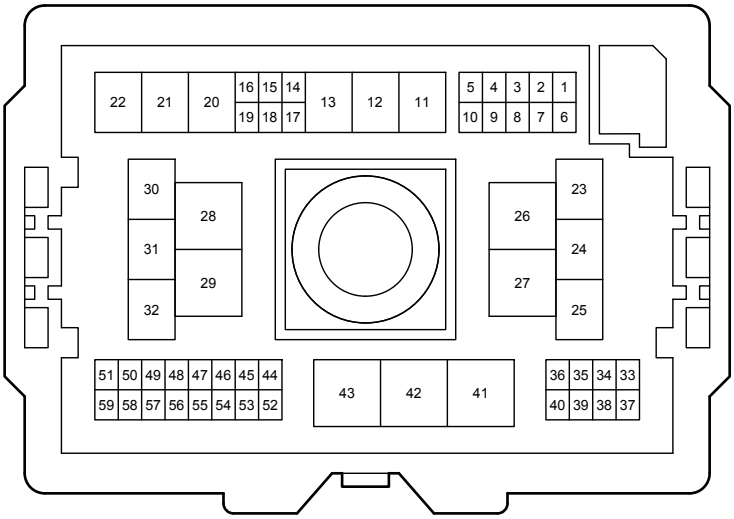

EA3


White

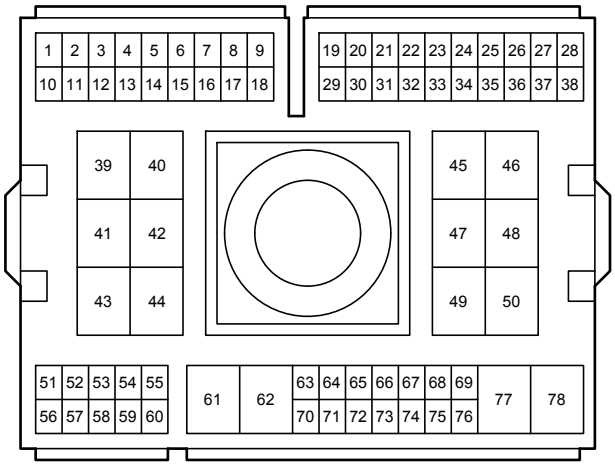

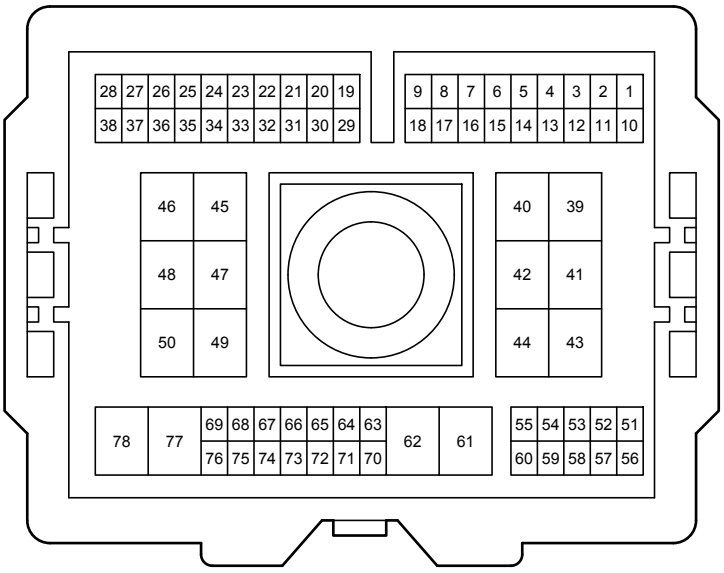


EE1

White

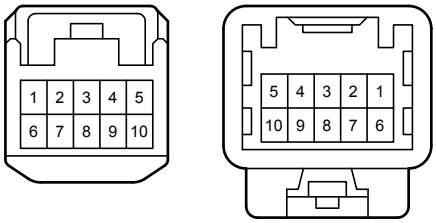


EK1

White

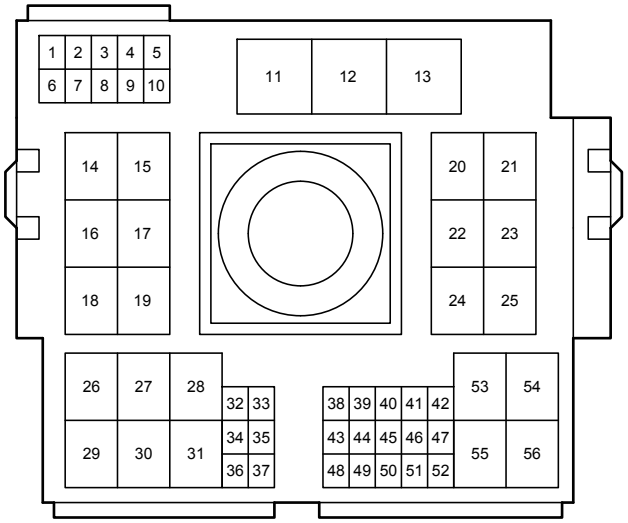



Blue

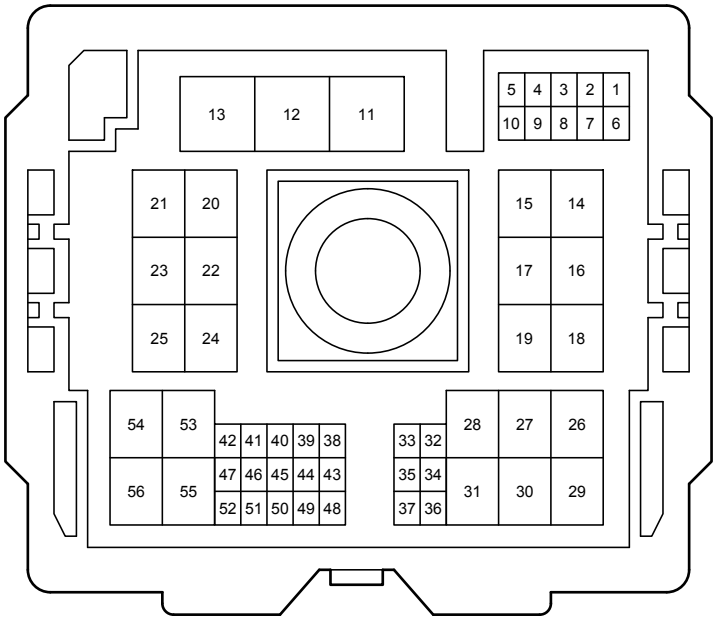


EK2


White

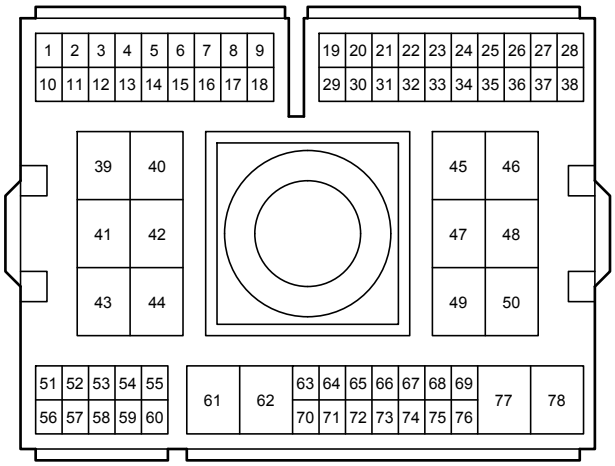

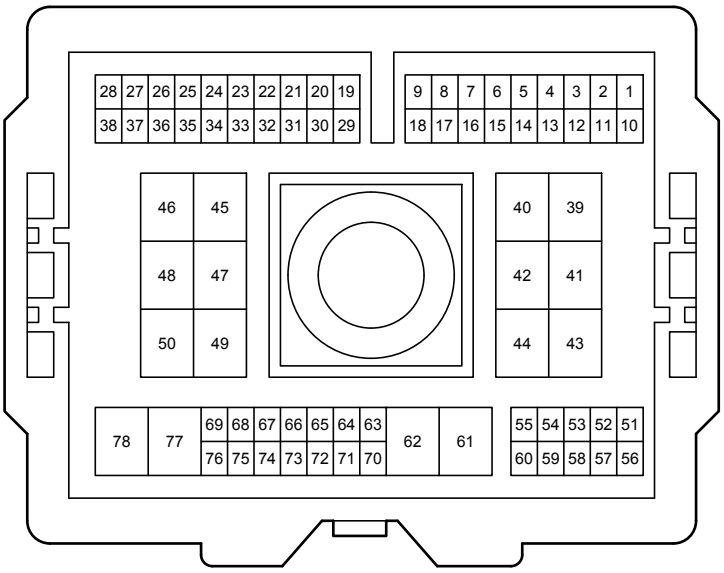


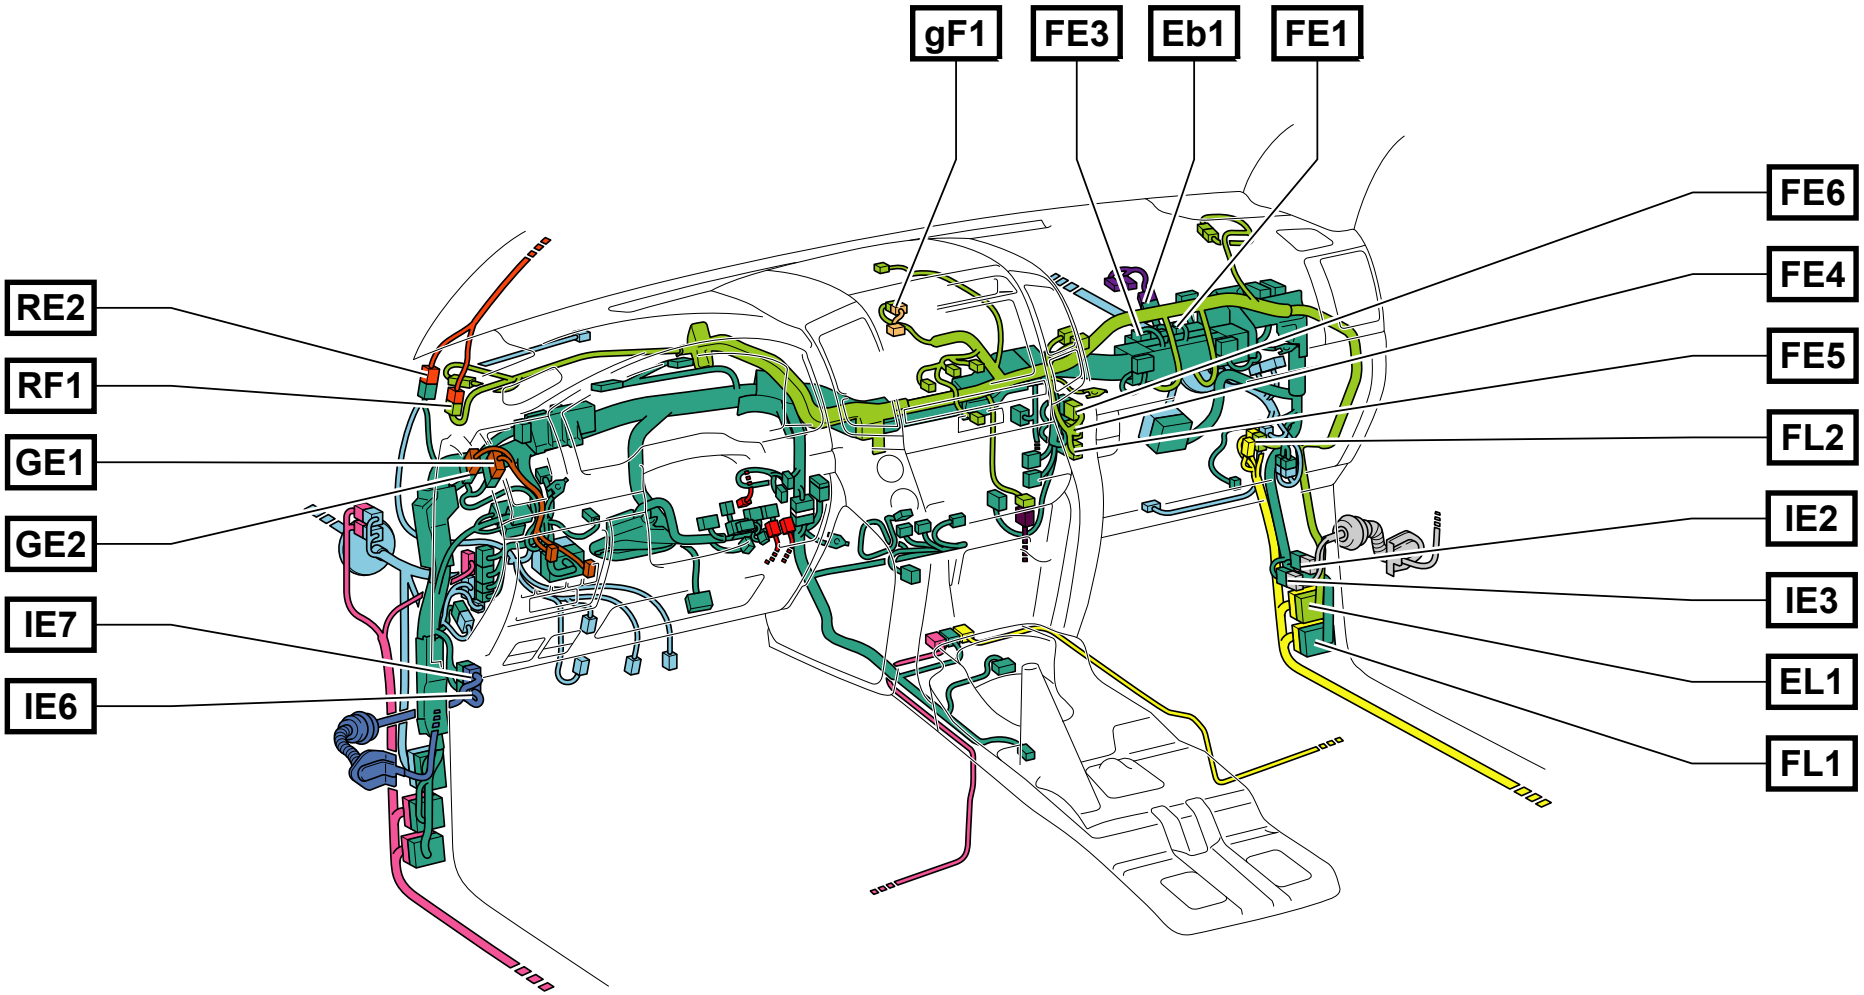
gF1
FE3
Eb1
FE1
FE6
FE4
FE5
FL2
IE2
IE3
EL1
FL1
RE2
RF1
GE1
GE2
IE7
IE6


EL1
White

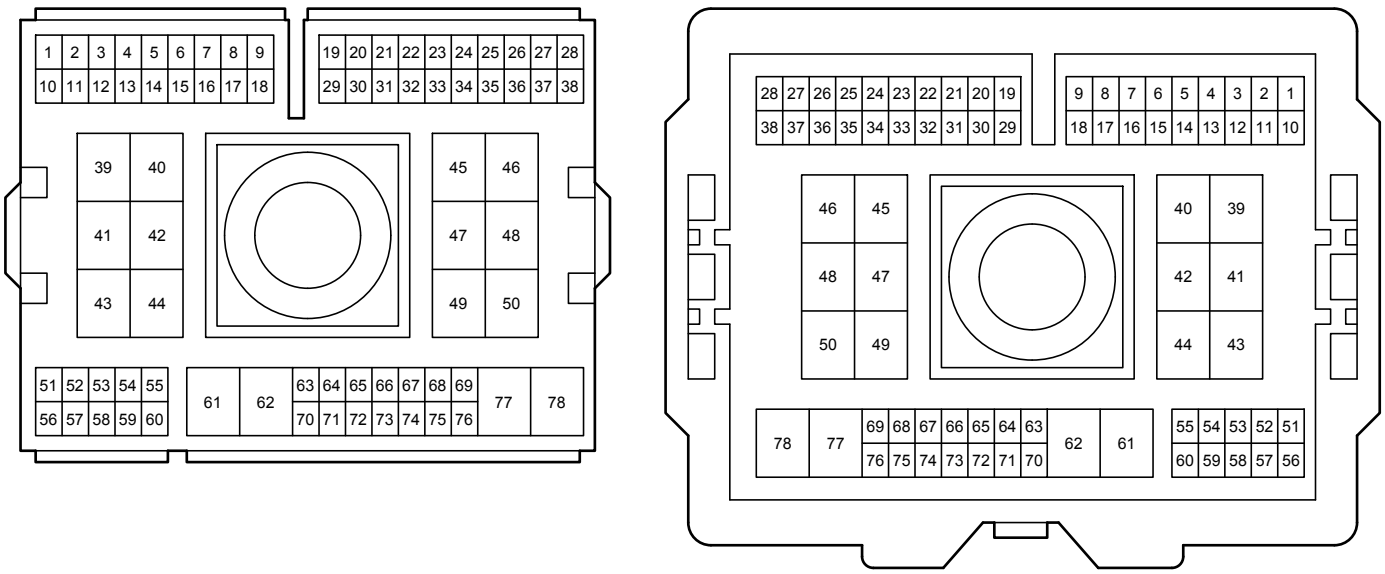


Eb1
Yellow

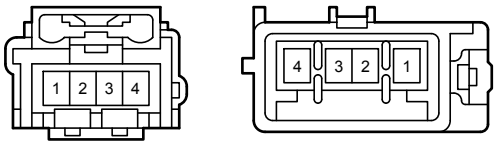


FE1
White

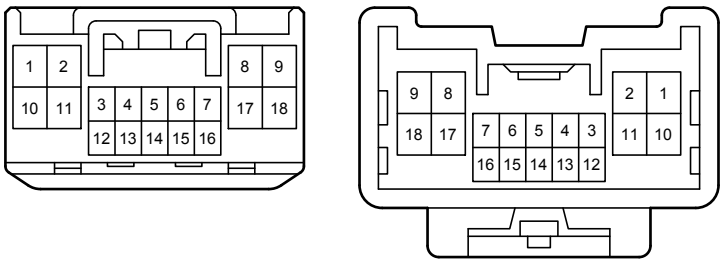


FE3
White

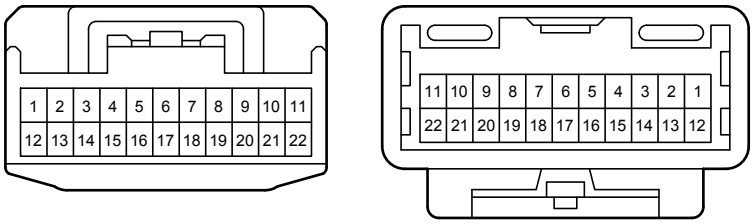


FE4
White

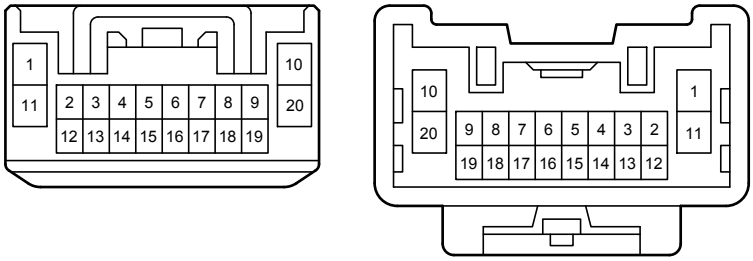


FE5
White

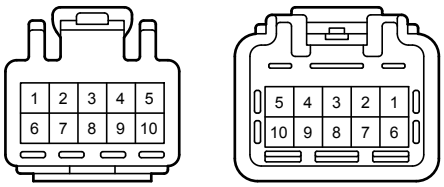


FE6
White

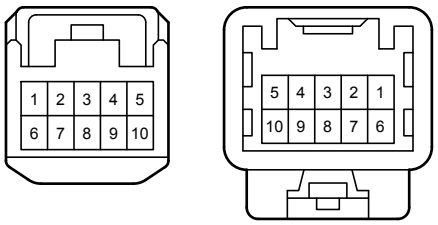



FL1
White Blue

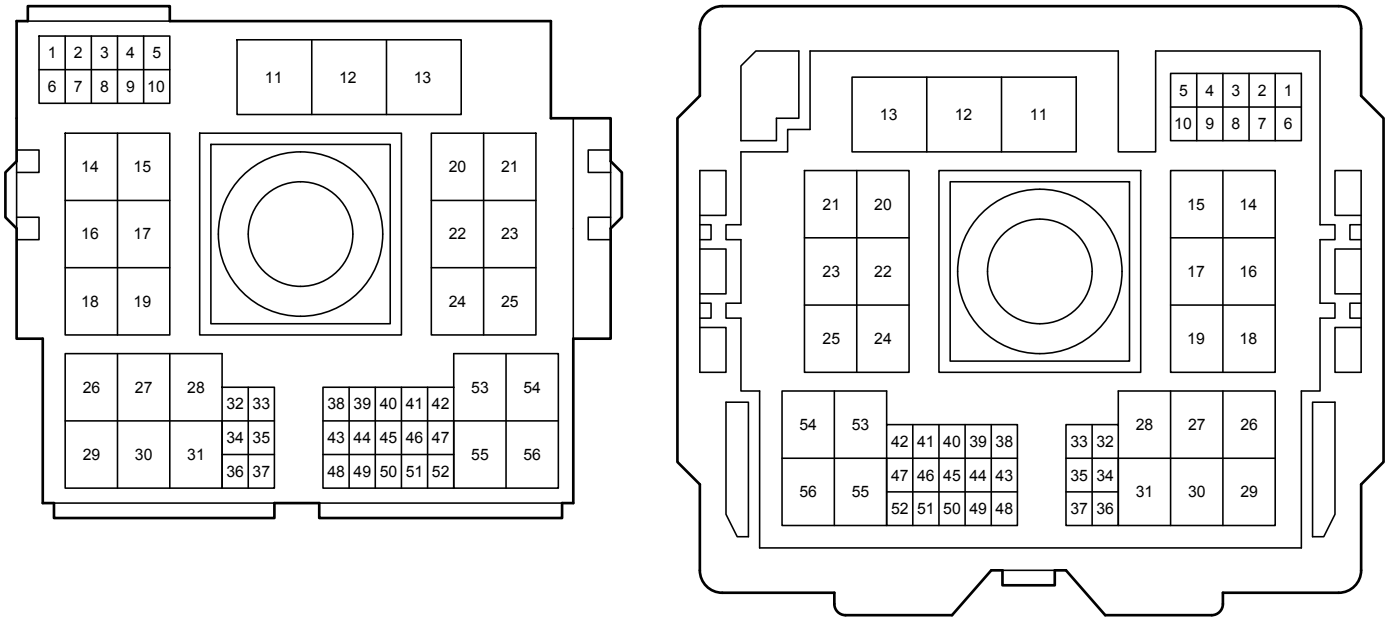



FL2
Blue

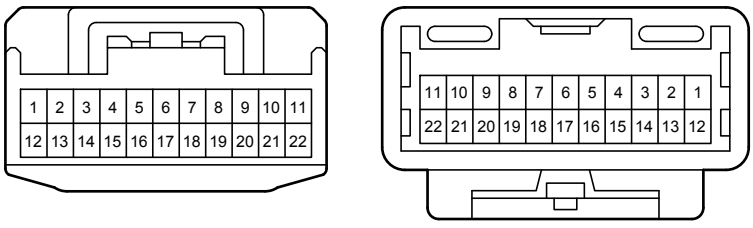


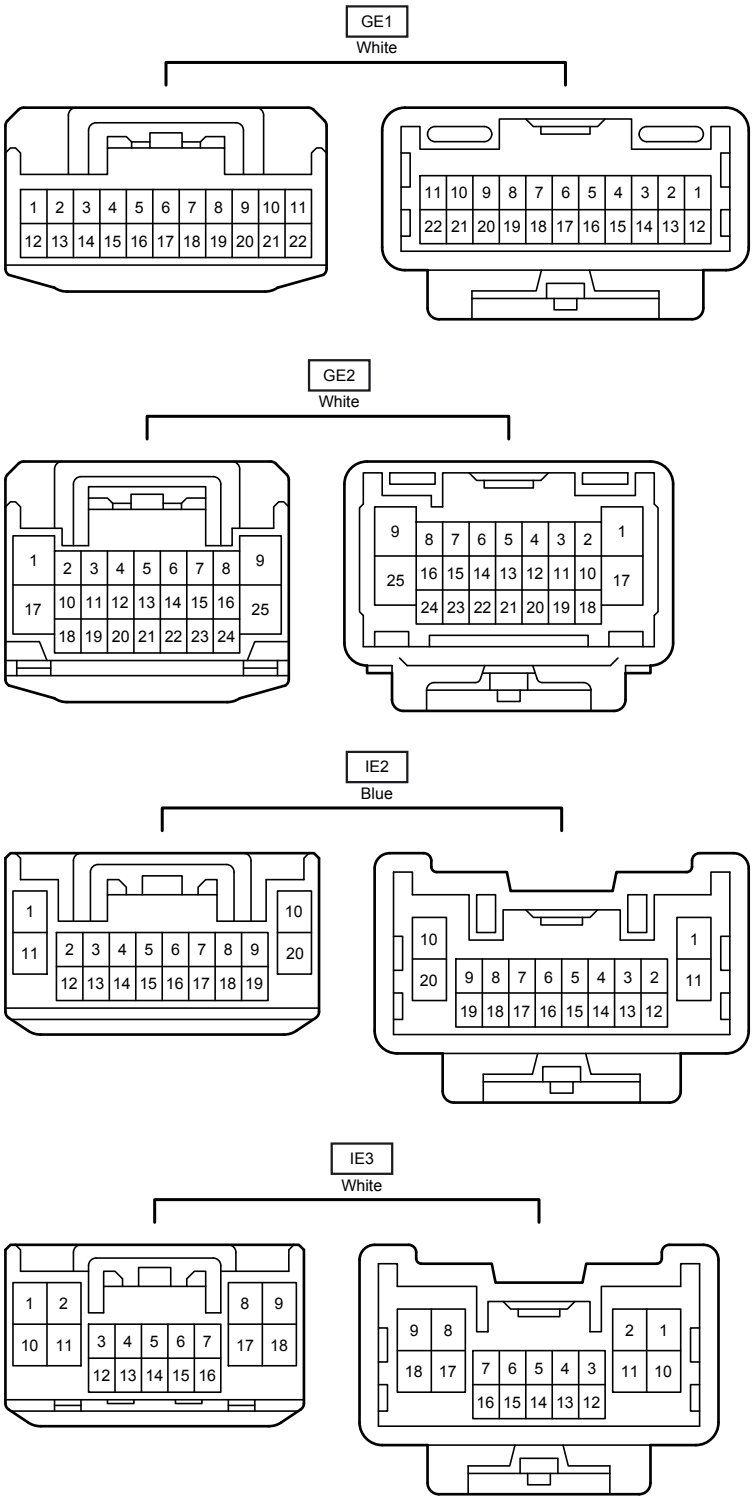

GE1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
GE2
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18
IE2
Blue
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11
IE3
White
1 2 8 9
10 11 3 4 5 6 7 17 18
12 13 14 15 16
9 8 2 1
18 17 7 6 5 4 3 11 10
16 15 14 13 12

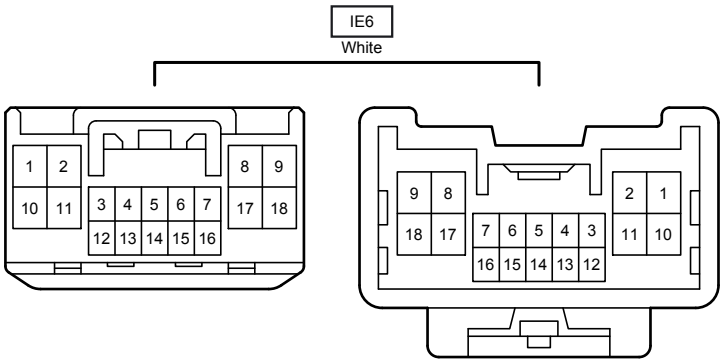

IE6
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

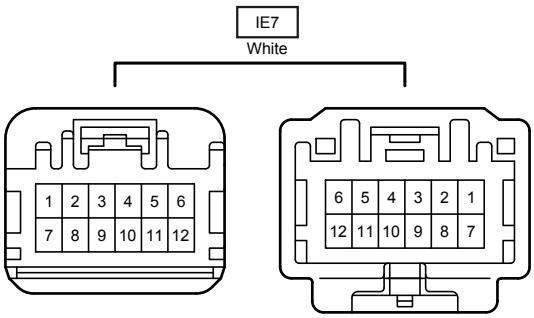

IE7
White
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7

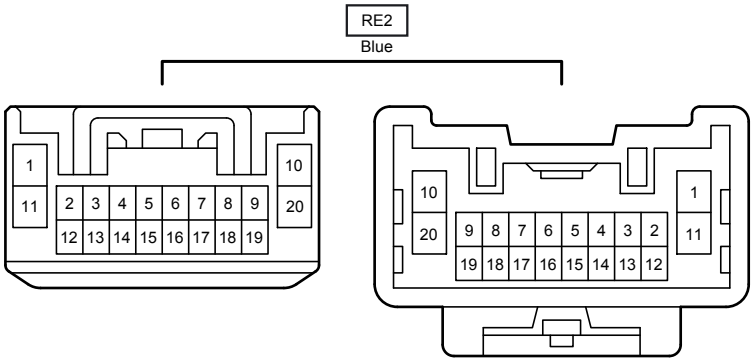
RE2
Blue
1
11
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
10
20
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12
1
11

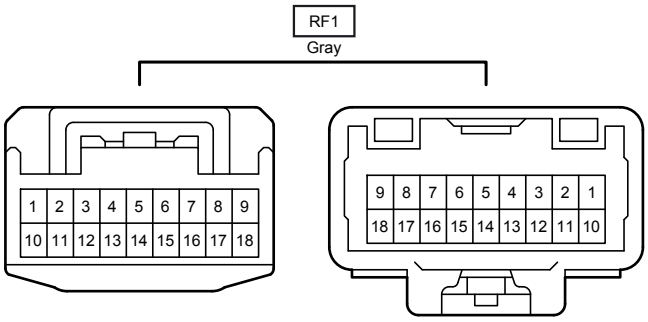
RF1
Gray
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10

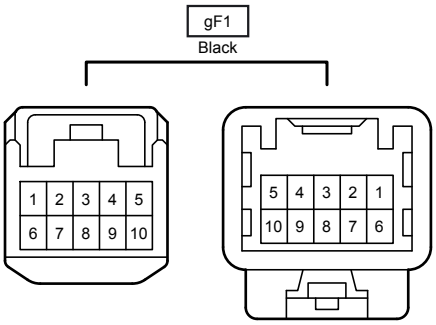

gF1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

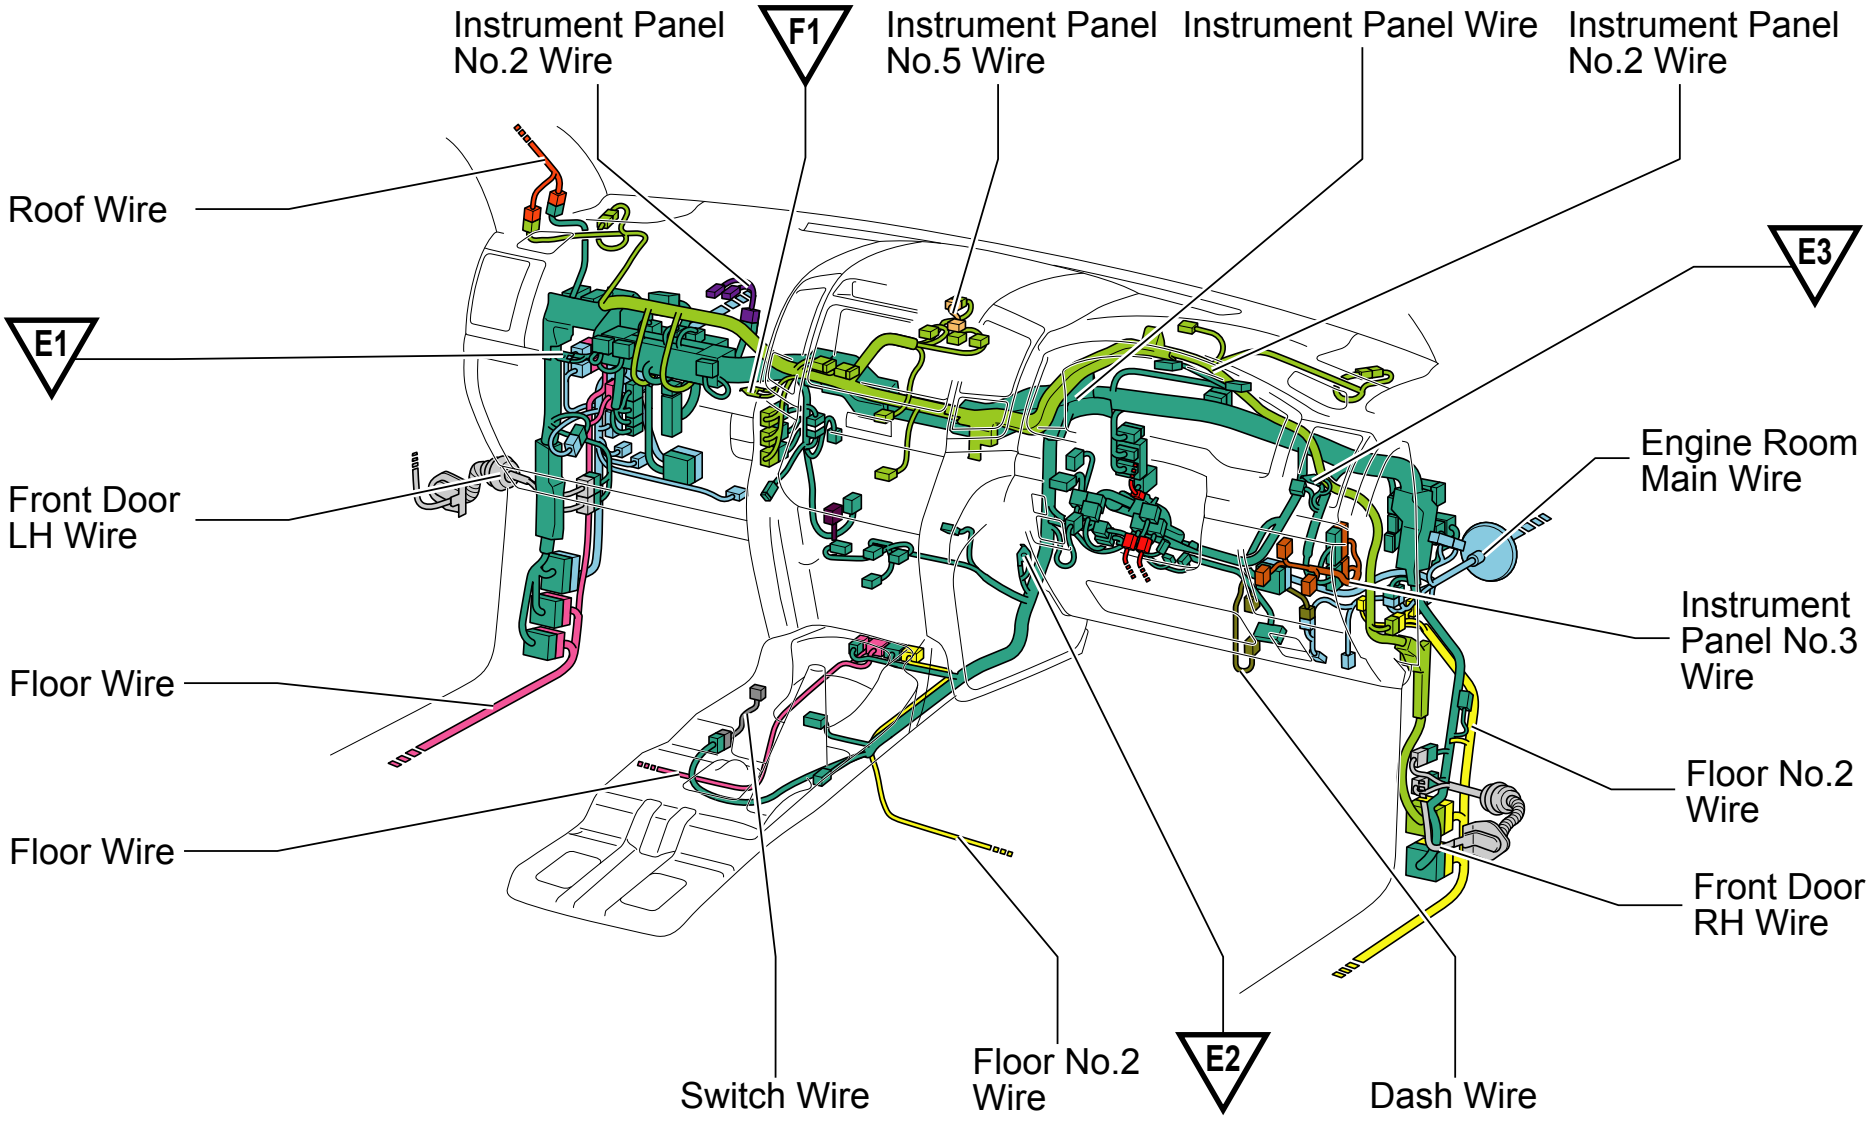
Instrument Panel No.2 Wire
F1
Instrument Panel No.5 Wire
Instrument Panel Wire
Instrument Panel No.2 Wire
Roof Wire
E3
E1
Engine Room Main Wire
Front Door LH Wire
Instrument Panel No.3 Wire
Floor Wire
Floor No.2 Wire
Floor Wire
Front Door RH Wire
Switch Wire
Floor No.2 Wire
E2
Dash Wire

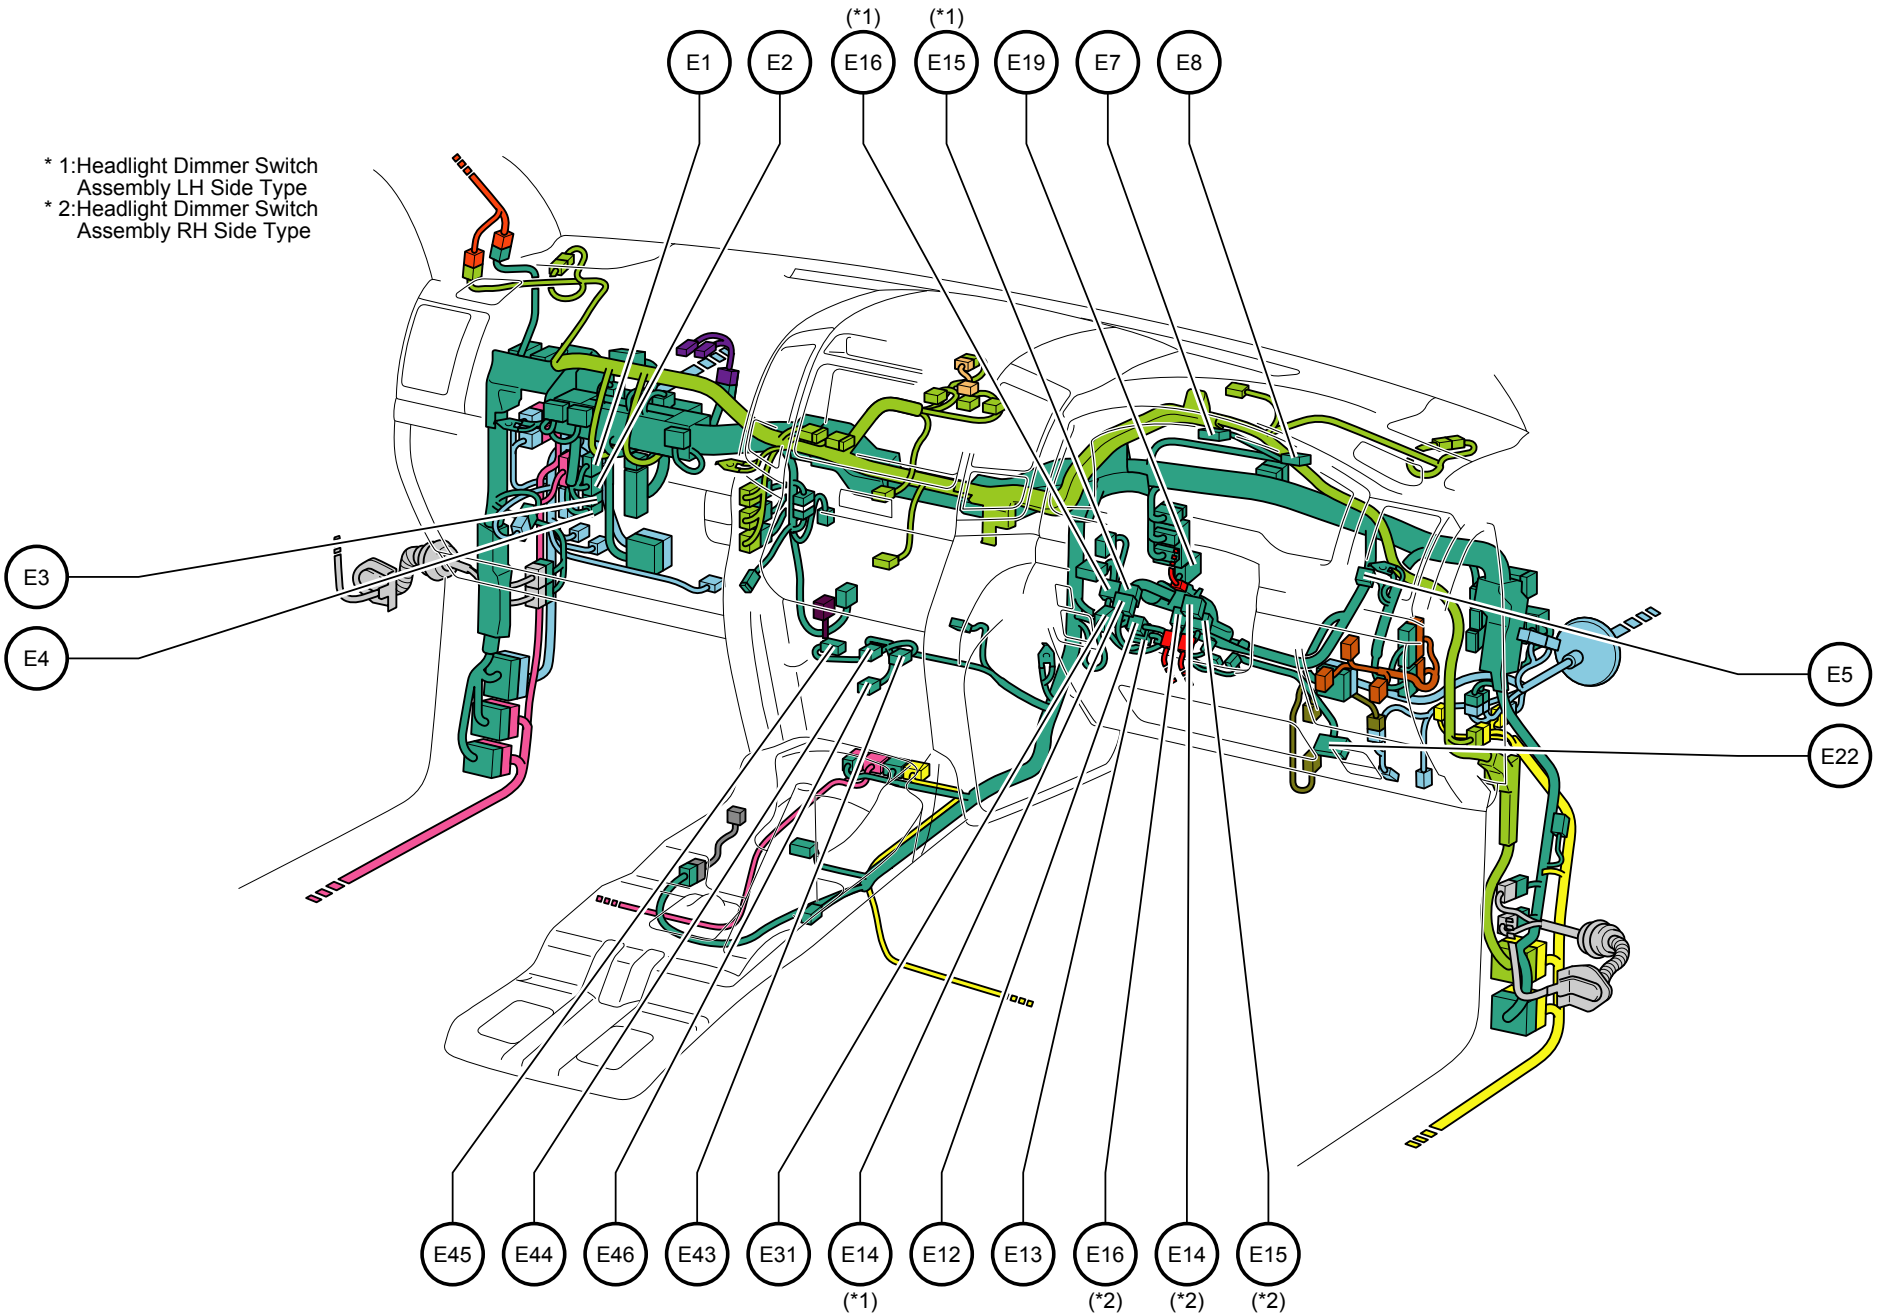

* 1:Headlight Dimmer Switch Assembly LH Side Type
* 2:Headlight Dimmer Switch Assembly RH Side Type
(*1)
(*1)
E1
E2
E16
E15
E19
E7
E8
E3
E4
E5
E22
E45
E44
E46
E43
E31
E14
(*1)
E12
E13
E16
(*2)
E14
(*2)
E15
(*2)

E	1	Main Body ECU
E	2	Main Body ECU
E	3	Main Body ECU
E	4	Main Body ECU
E	5	Skid Control Buzzer Assembly
E	7	Combination Meter Assembly
E	8	Combination Meter Assembly
E	12	Spiral Cable Sub-Assembly
E	13	Spiral Cable Sub-Assembly
E	14	Headlight Dimmer Switch Assembly
E	15	Windshield Wiper Switch Assembly
E	16	Windshield Wiper Switch Assembly
E	19	Turn Signal Flasher Assembly
E	22	DLC3
E	31	Network Gateway ECU
E	43	Cigarette Lighter Assembly
E	44	Cigarette Lighter Illumination Assembly
E	45	Ash Receptacle Light Sub-Assembly
E	46	Front Power Outlet Socket Assembly


E 1
White

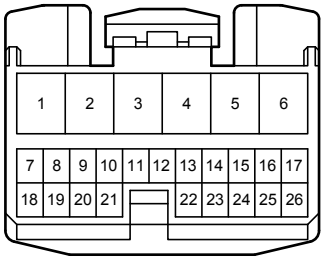


E 2
White

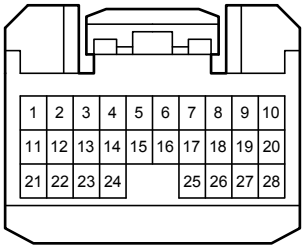


E 3
White

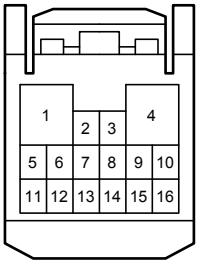


E 4
White

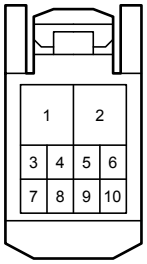


E 5
Blue




E 7
White

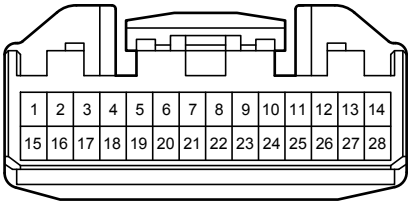


E 8
Black

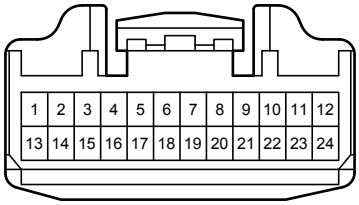


E 12
Black

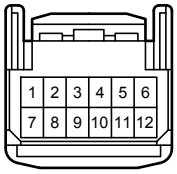


E 13
Yellow

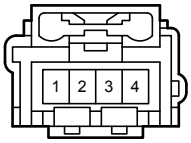


E 14
White

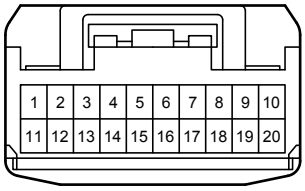


E 15
White

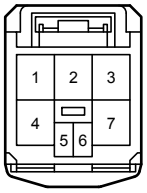


E 16
White

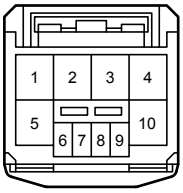


E 19
Black




E 22
White

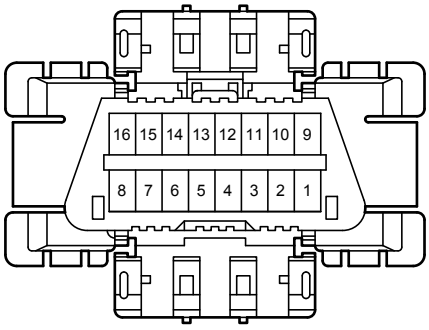

E 31
White

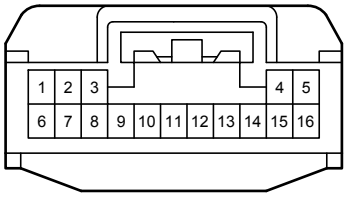


E 43
White




E 44
Gray




E 45
White




E 46
White



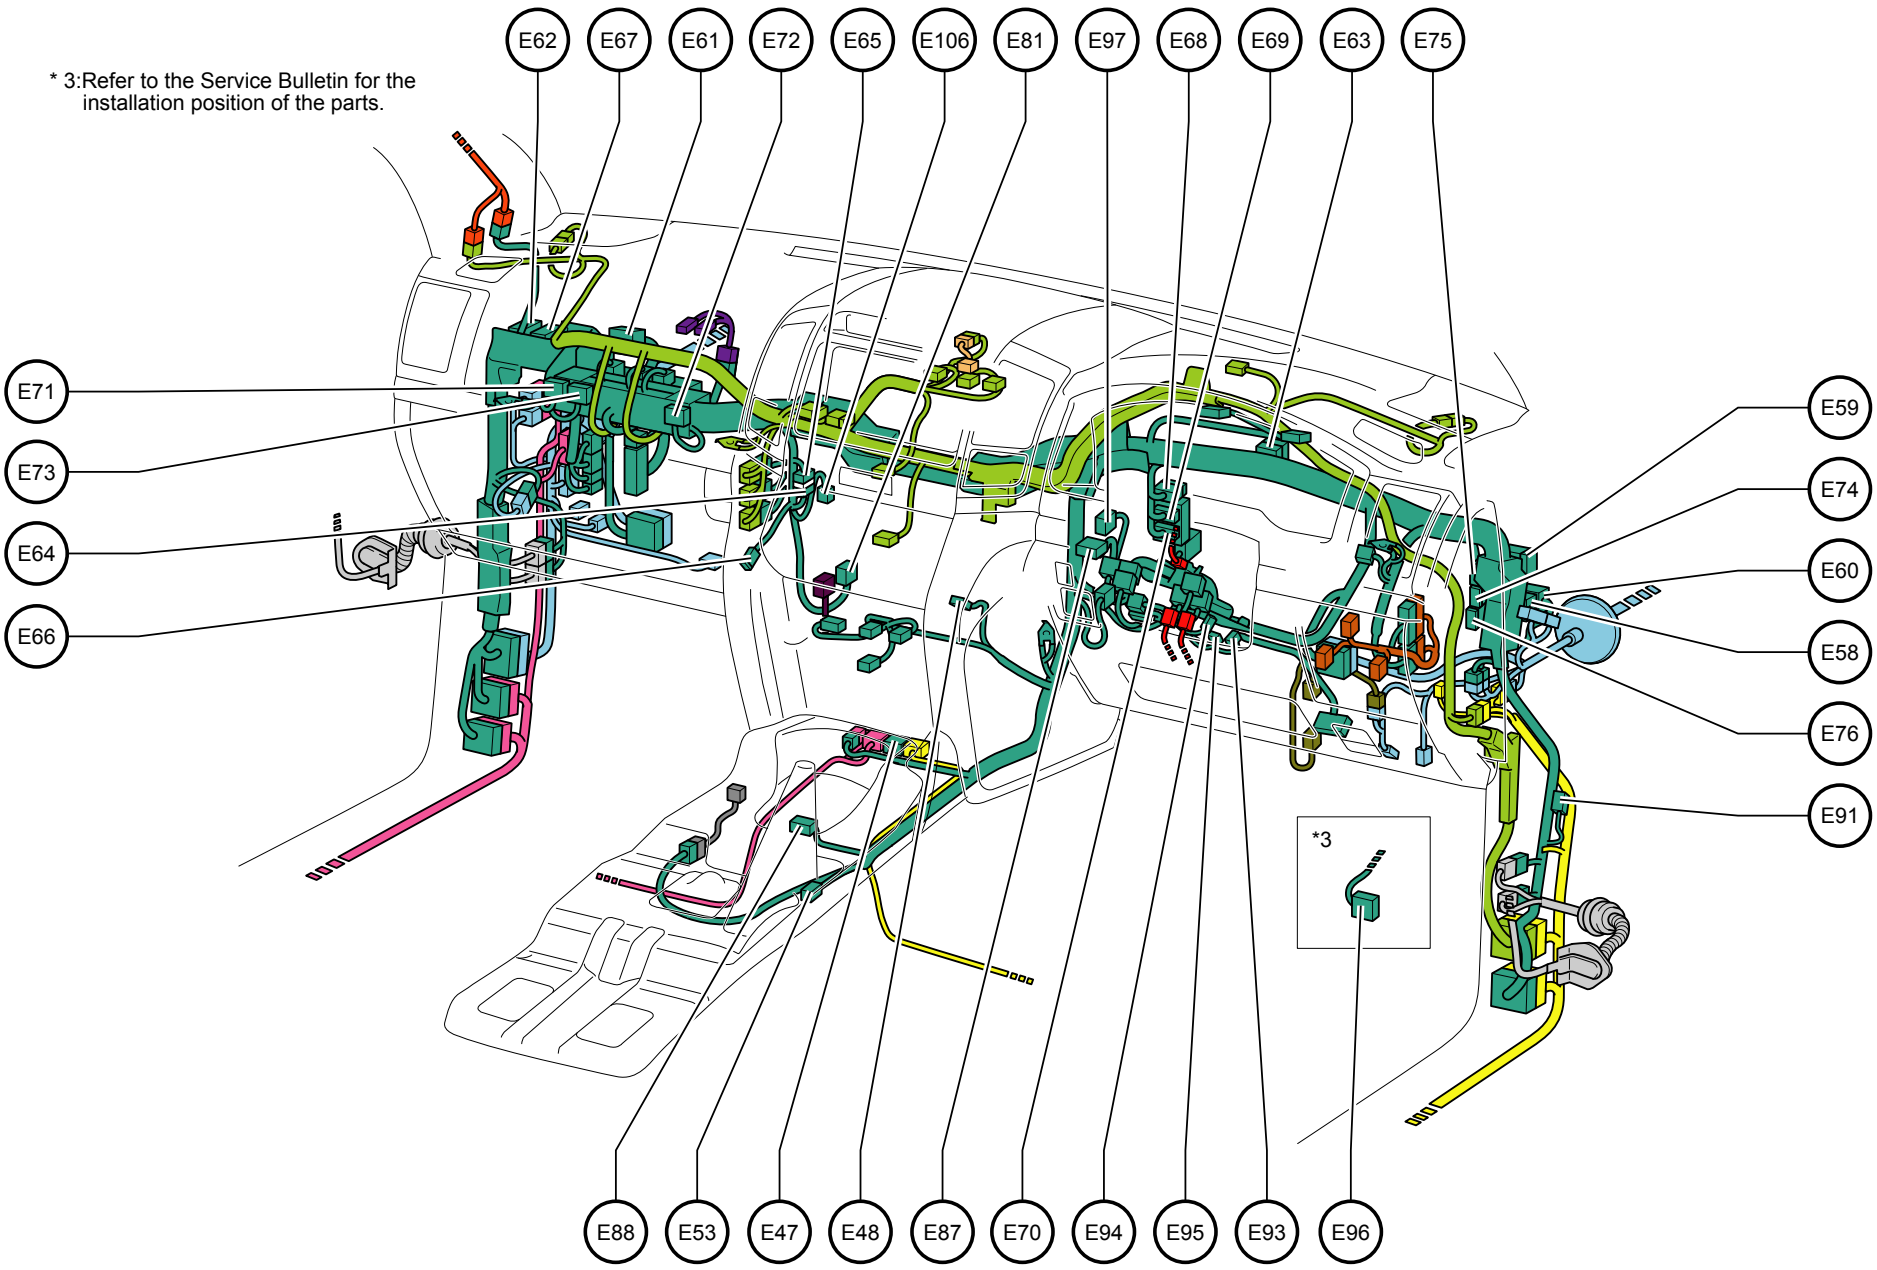

* 3:Refer to the Service Bulletin for the installation position of the parts.
E62
E67
E61
E72
E65
E106
E81
E97
E68
E69
E63
E75
E71
E73
E64
E66
E59
E74
E60
E58
E76
E91
*3
E88
E53
E47
E48
E87
E70
E94
E95
E93
E96

E 47 Center Airbag Sensor Assembly
E 48 Transfer Position Switch
E 53 Parking Brake Switch Assembly
E 58 Junction Connector
E 59 Junction Connector
E 60 Junction Connector
E 61 Junction Connector
E 62 Junction Connector
E 63 Junction Connector
E 64 Junction Connector
E 65 Junction Connector
E 66 Junction Connector
E 67 Junction Connector
E 68 Junction Connector
E 69 Junction Connector
E 70 Junction Connector
E 71 Junction Connector
E 72 Junction Connector
E 73 Junction Connector
E 74 Junction Connector
E 75 Junction Connector
E 76 Junction Connector
E 81 A/C Amplifier Assembly
E 87 Differential Lock Switch
E 88 Deceleration Sensor
E 91 Option Connector (Parking Assist-Sensor)
E 93 Ignition or Starter Switch Assembly
E 94 Un-Lock Warning Switch Assembly
E 95 Transponder Key Amplifier
E 96 Transponder Key ECU Assembly
E 97 Idle Up Switch
E 106 Junction Connector

E 47
Yellow

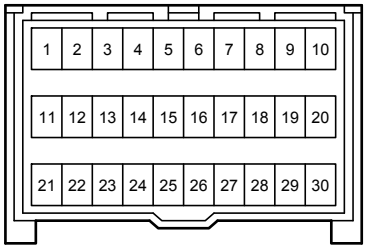


E 48
Black

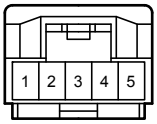


E 53
White




E 58

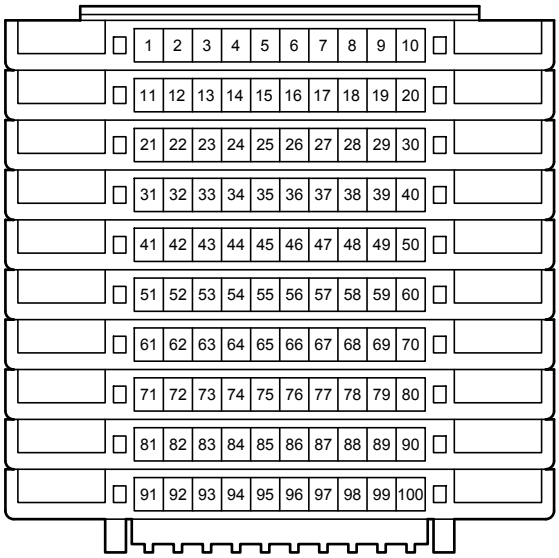


E 59

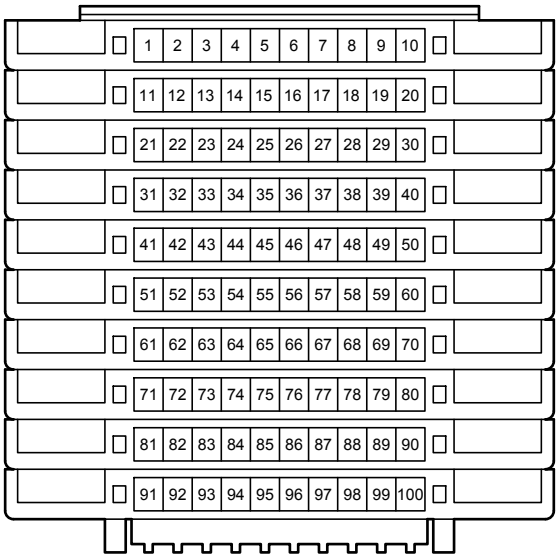


E 60

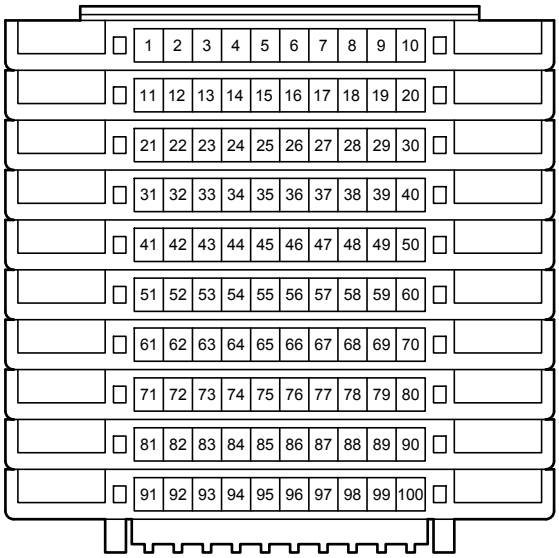


E 61

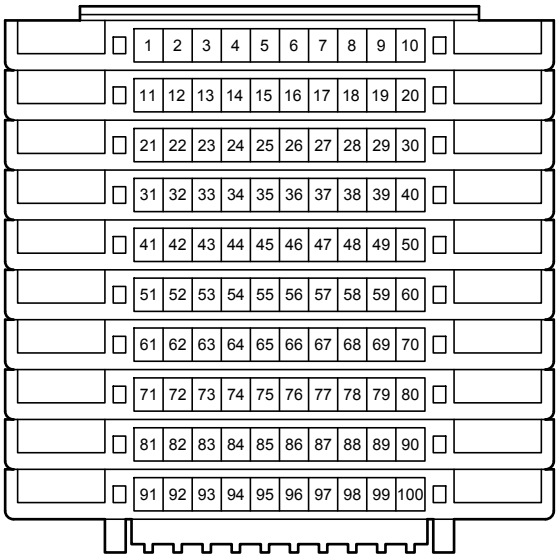


E 62
White

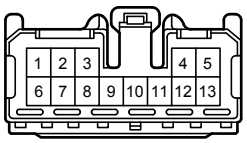


E 63
Gray




E 64
Black

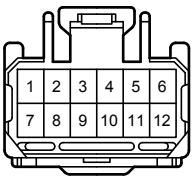


E 65
Black

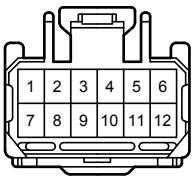


E 66
White

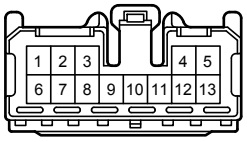


E 67
White

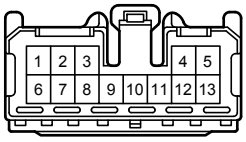


E 68
Gray

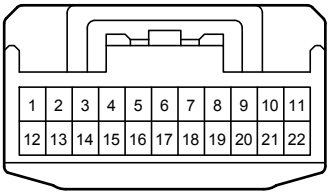


E 69
Gray

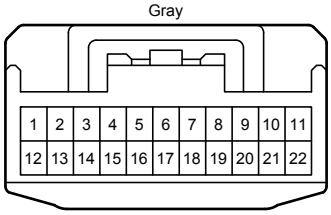


E 70
Gray

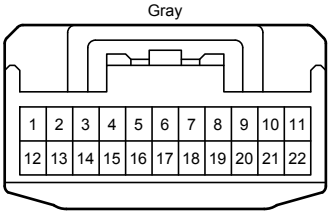


E 71
Gray

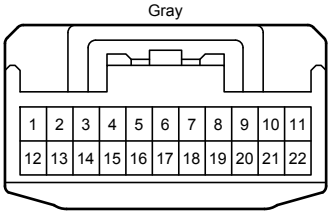


E 72
Gray

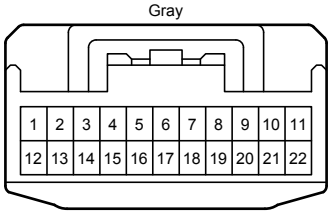


E 73
Gray

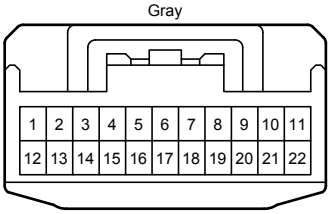


E 74
Gray

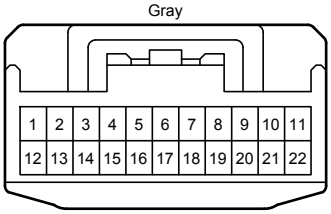


E 75
Gray

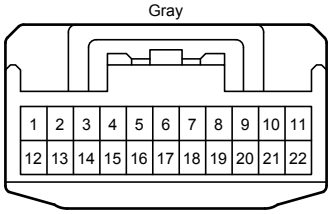


E 76
Gray

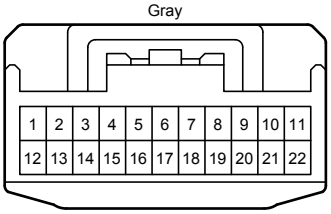


E 81
White

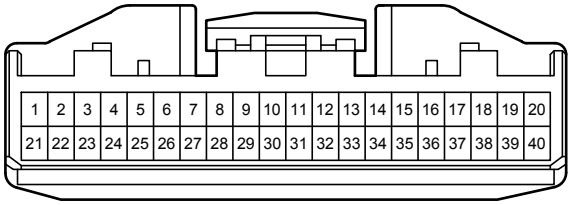


E 87
White




E 88
Black

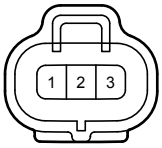


E 91
White

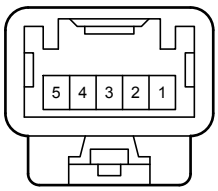


E 93
White

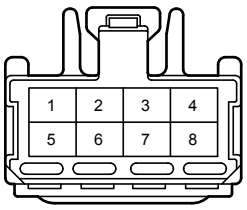


E 94
White




E 95
Black

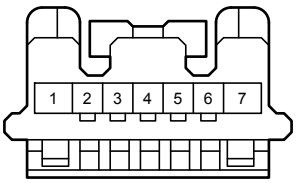


E 96
Black

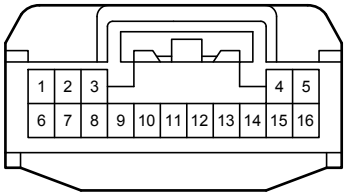


E 97
Black

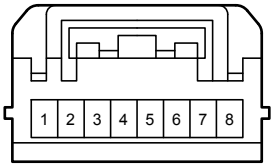

E106
White




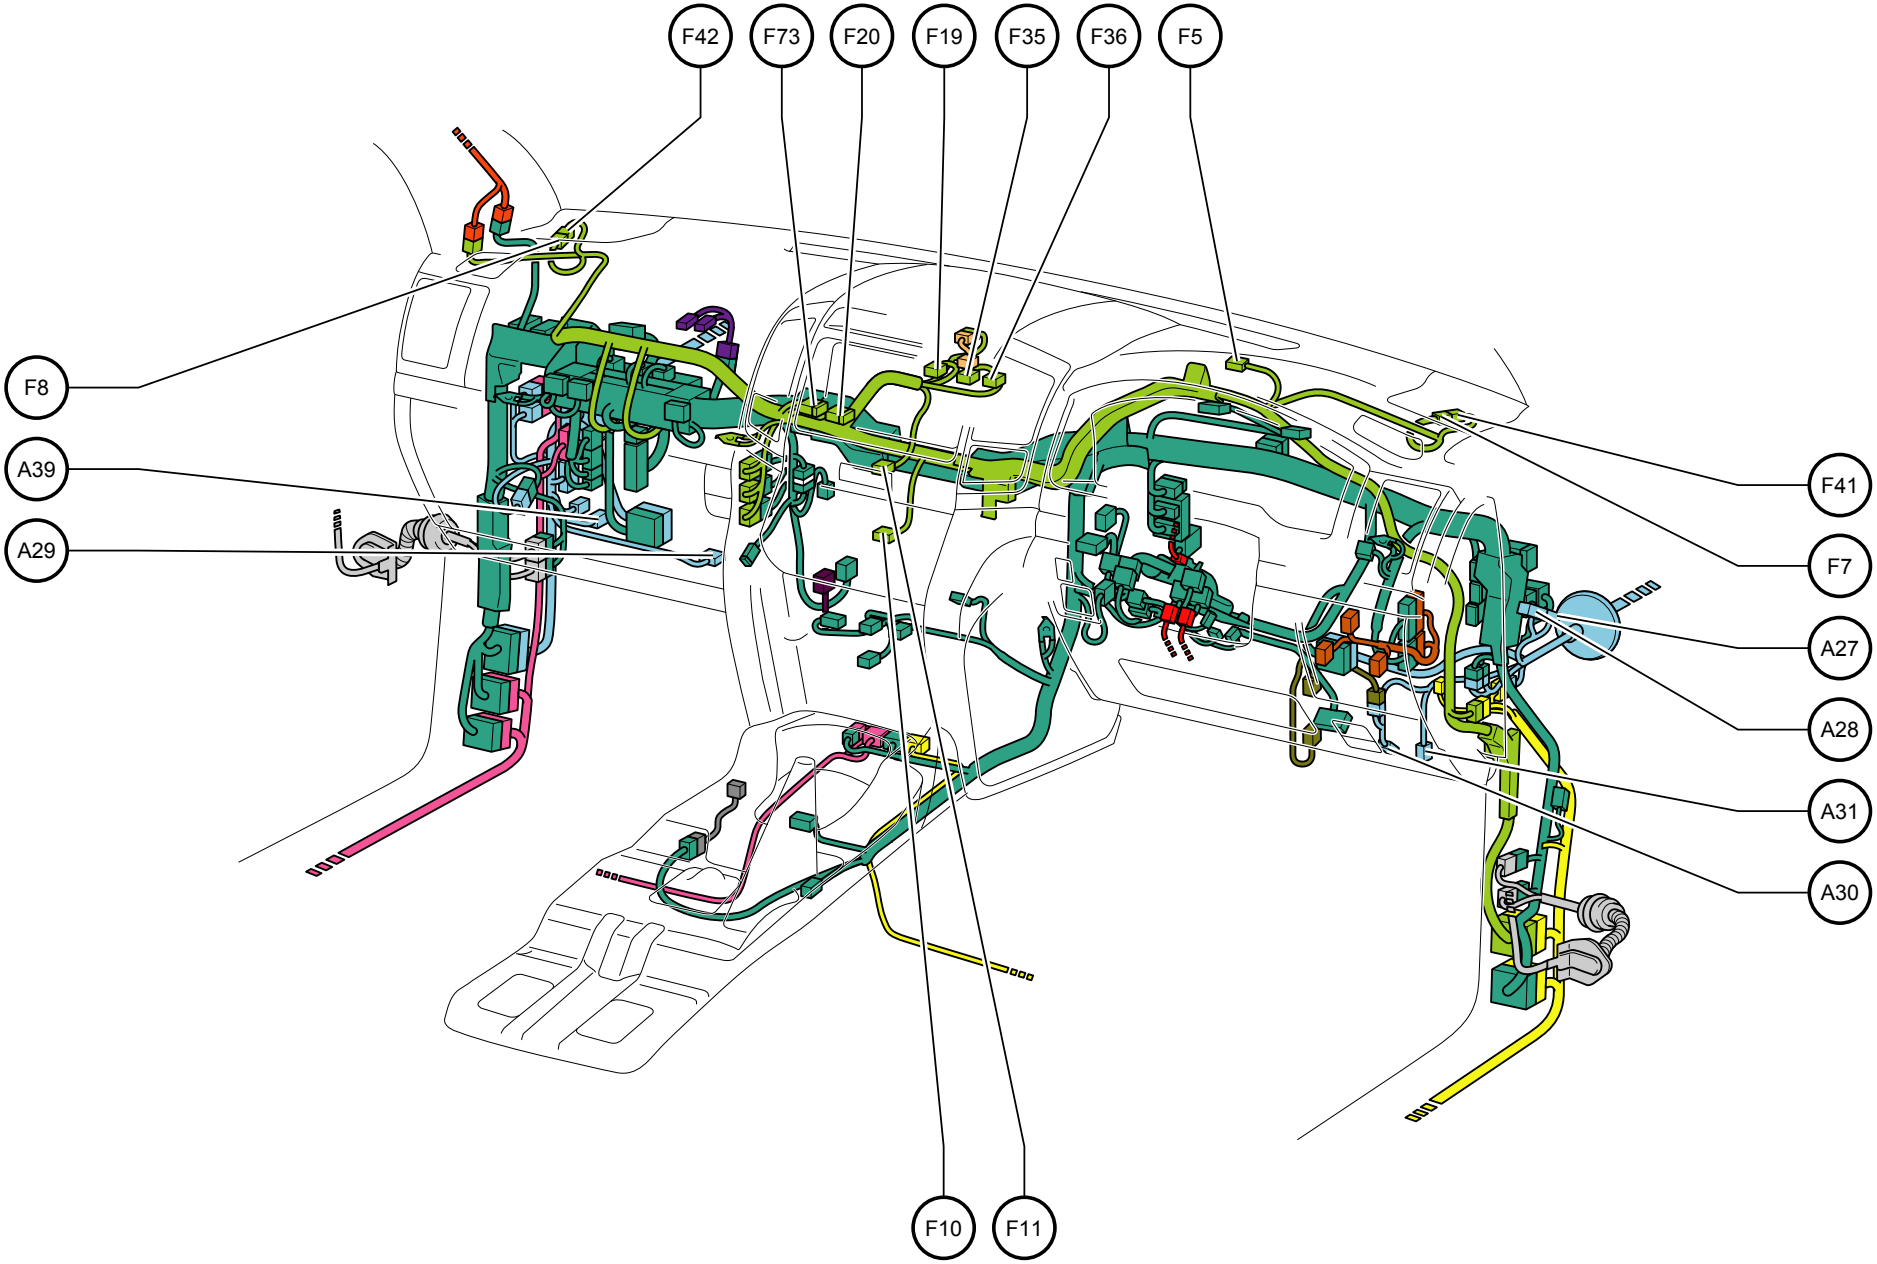
F42
F73
F20
F19
F35
F36
F5
F8
A39
A29
F41
F7
A27
A28
A31
A30
F10
F11


A 27 Four Wheel Drive Control ECU
A 28 Four Wheel Drive Control ECU
A 29 Front Blower with Fan Motor Sub-Assembly
A 30 Stop Light Switch Assembly
A 31 Accelerator Pedal Sensor Assembly
A 39 Stop Light Control Relay Assembly

F 5 Amplifier Antenna Assembly
F 7 Front No.2 Speaker Assembly RH , Short Connector
F 8 Front No.2 Speaker Assembly LH , Short Connector
F 10 A/C Control Assembly
F 11 Hazard Warning Signal Switch Assembly
F 19 Radio Receiver Assembly
F 20 Junction Connector
F 35 Radio Receiver Assembly
F 36 Radio Receiver Assembly
F 41 Short Connector
F 42 Short Connector
F 73 Junction Connector


A 27
Black

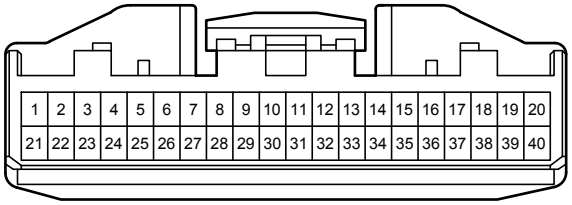


A 28
Black

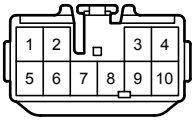


A 29
White

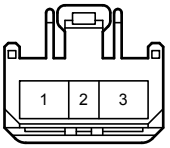


A 30
Gray



A 31
Black

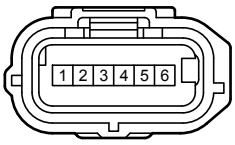


A 39
Black




F 5
White




F 7
White




F 8
White




F 10
White

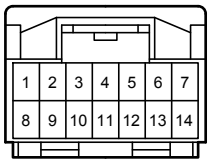


F 11
Gray

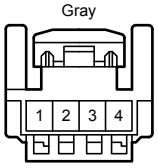


F 19
White

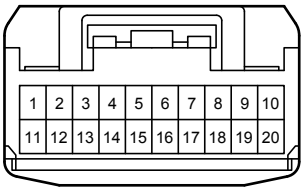

F 20
Gray

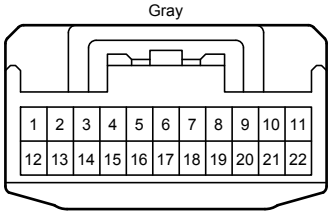


F 35
White

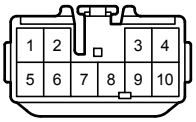


F 36
White




F 41
White




F 42
White



F 73
Blue

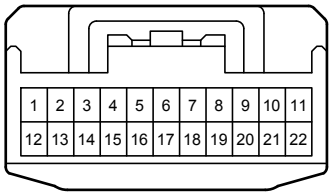

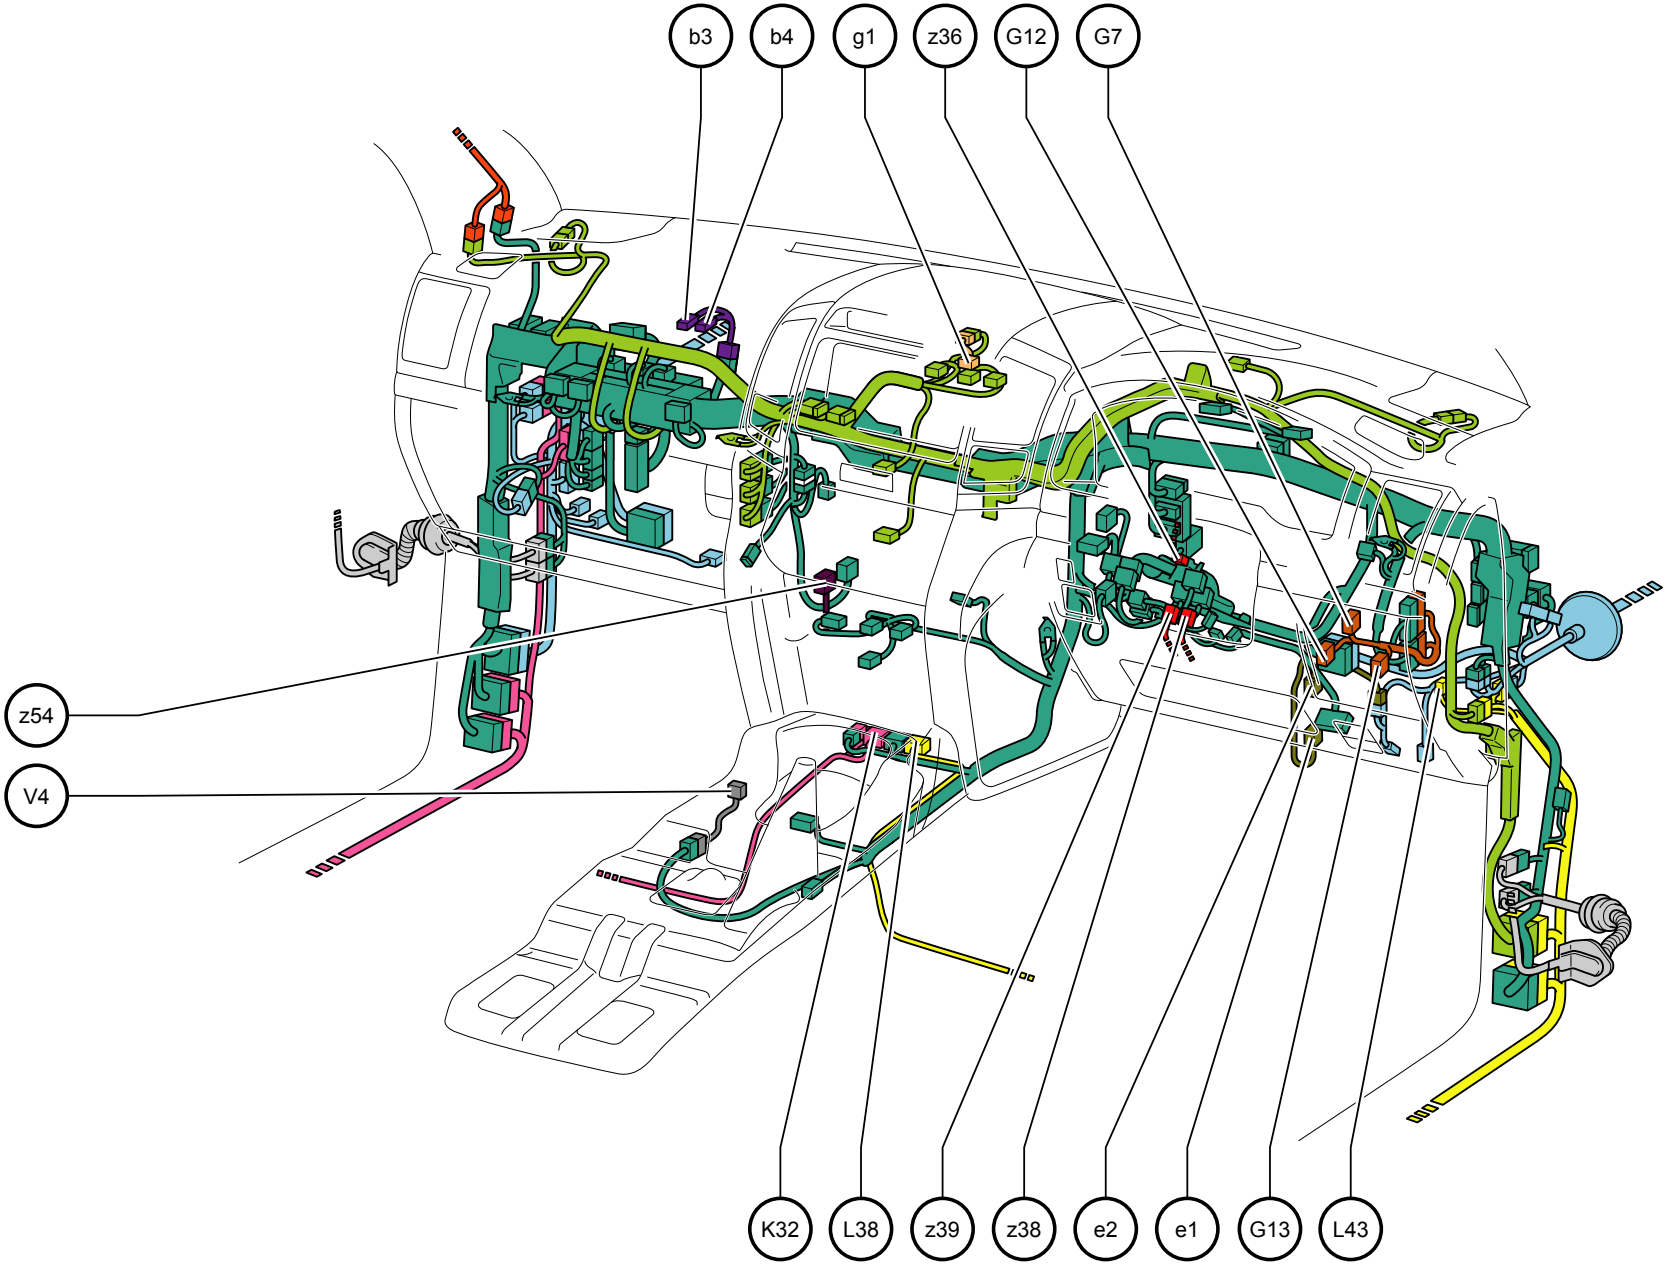
b3
b4
g1
z36
G12
G7
z54
V4
K32
L38
z39
z38
e2
e1
G13
L43

G 7 Outer Mirror Switch Assembly
G 12 Center Differential Lock Switch
G 13 VSC Off Switch

K 32 Center Airbag Sensor Assembly

L 38 Center Airbag Sensor Assembly
L 43 Option Connector (Parking Assist-Sensor)

V 4 Suspension Control Switch


b 3 Front Passenger Side Squib Circuit
b 4 Front Passenger Side Squib Circuit

e 1 Clutch Start Switch Assembly
e 2 Clutch Switch Assembly


g 1 Clock Assembly

z 36 Spiral Cable Sub-Assembly , Steering Pad Switch
z 38 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
z 39 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z 54 A/C Amplifier Assembly , A/C Blower Assembly


G 7
White

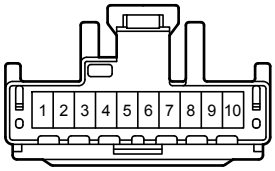


G 12
White

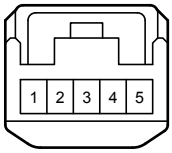


G 13
Black

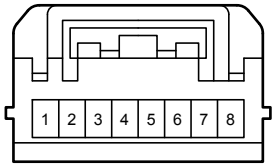


K 32
Yellow

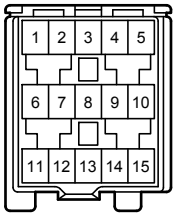


L 38
Yellow

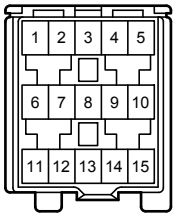


L 43
White

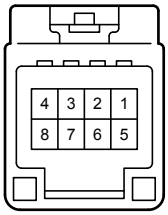


V 4
White

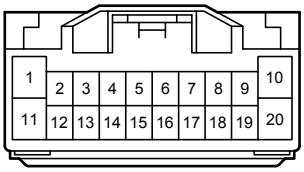


b 3
Orange




b 4
Black



e 1
Black




e 2
White




g 1
White




z 36
White

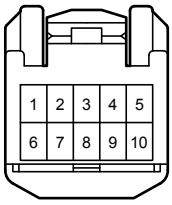


z 38
Black




z 39
Orange




z 54
White

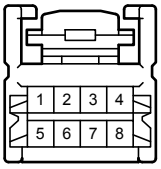


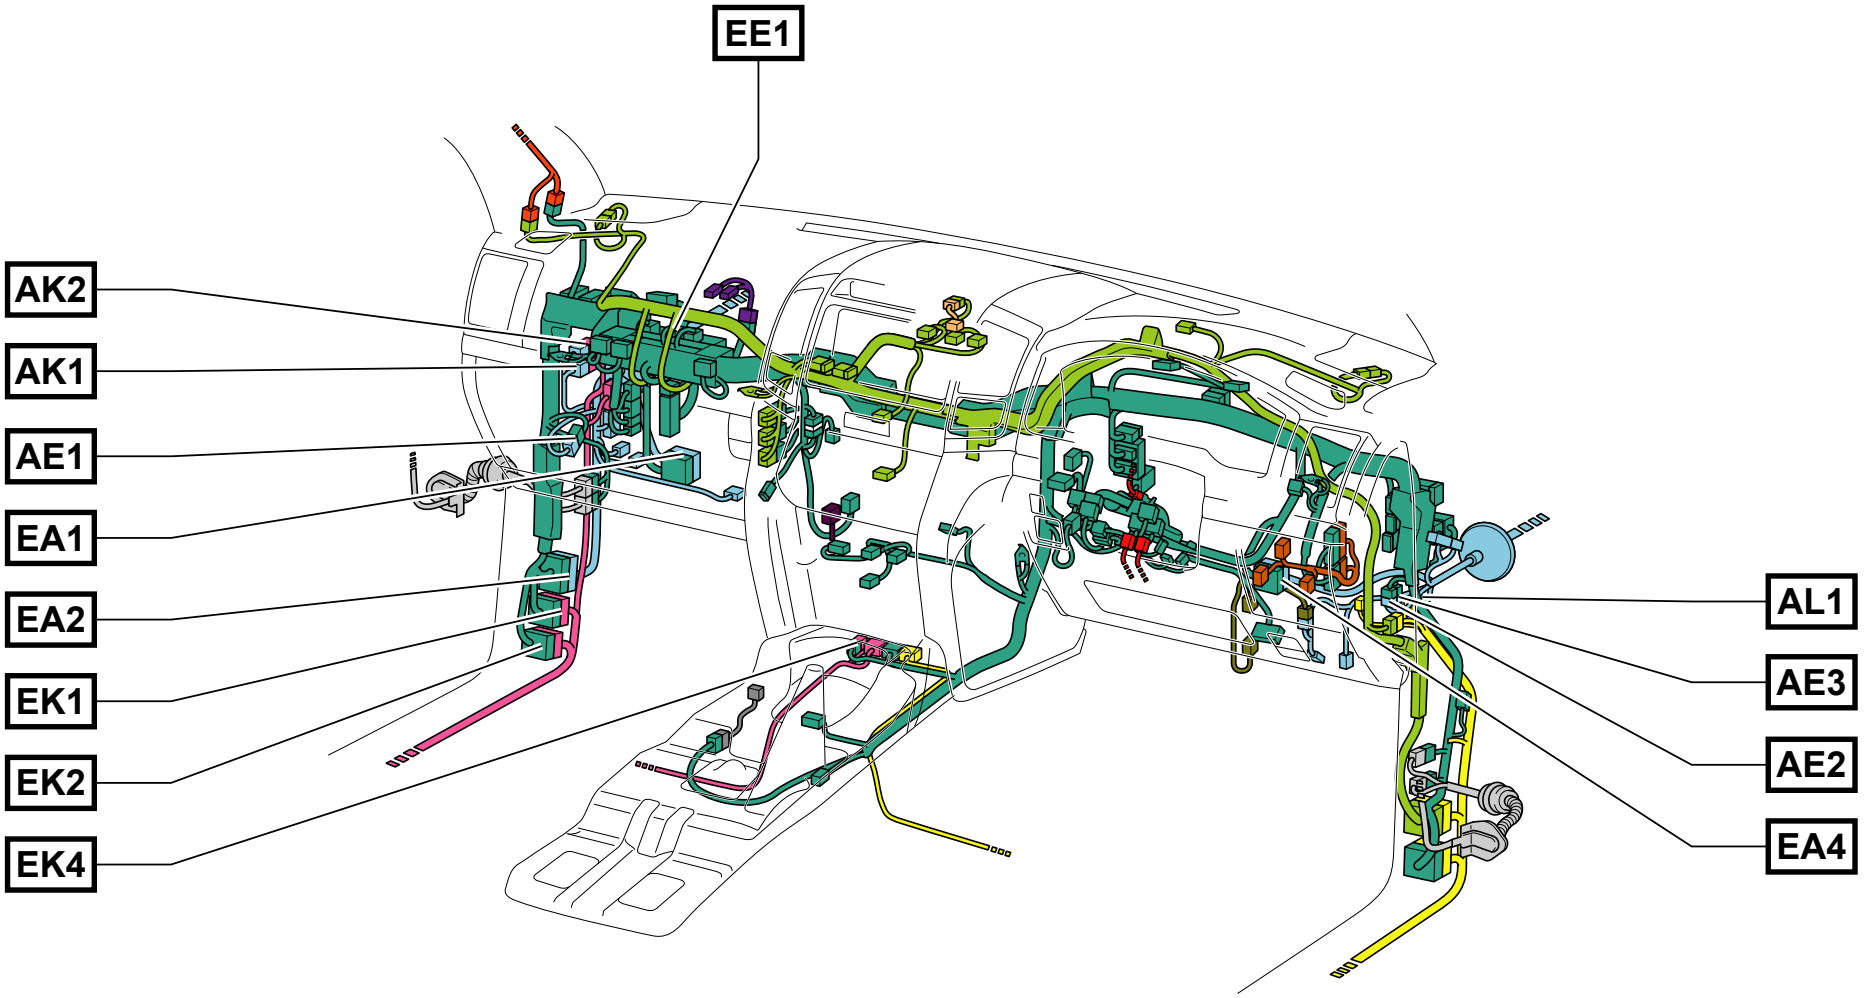
EE1
AK2
AK1
AE1
EA1
EA2
EK1
EK2
EK4
AL1
AE3
AE2
EA4


AE1
Yellow

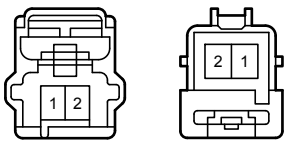


AE2
Yellow

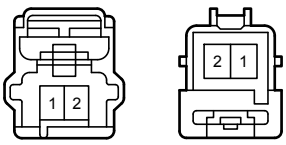


AE3
Gray

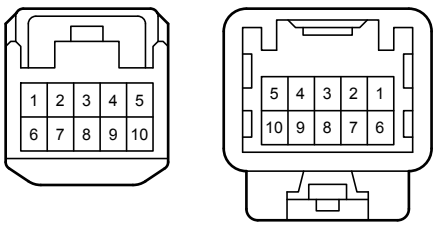


AK1
Blue

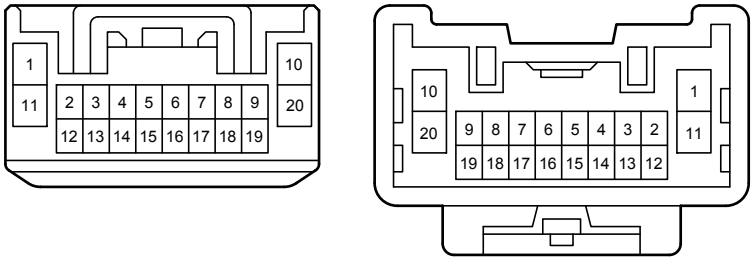


AK2
Gray

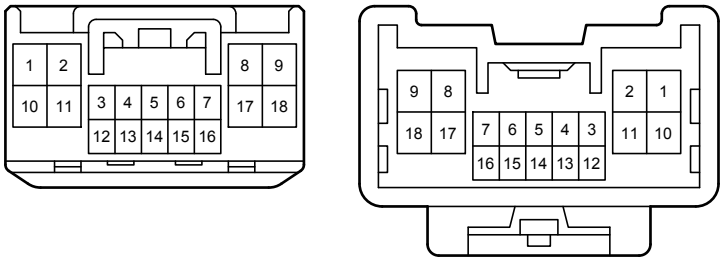

AL1
White

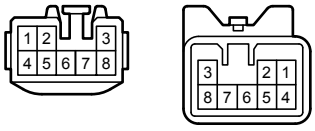


EA1
White

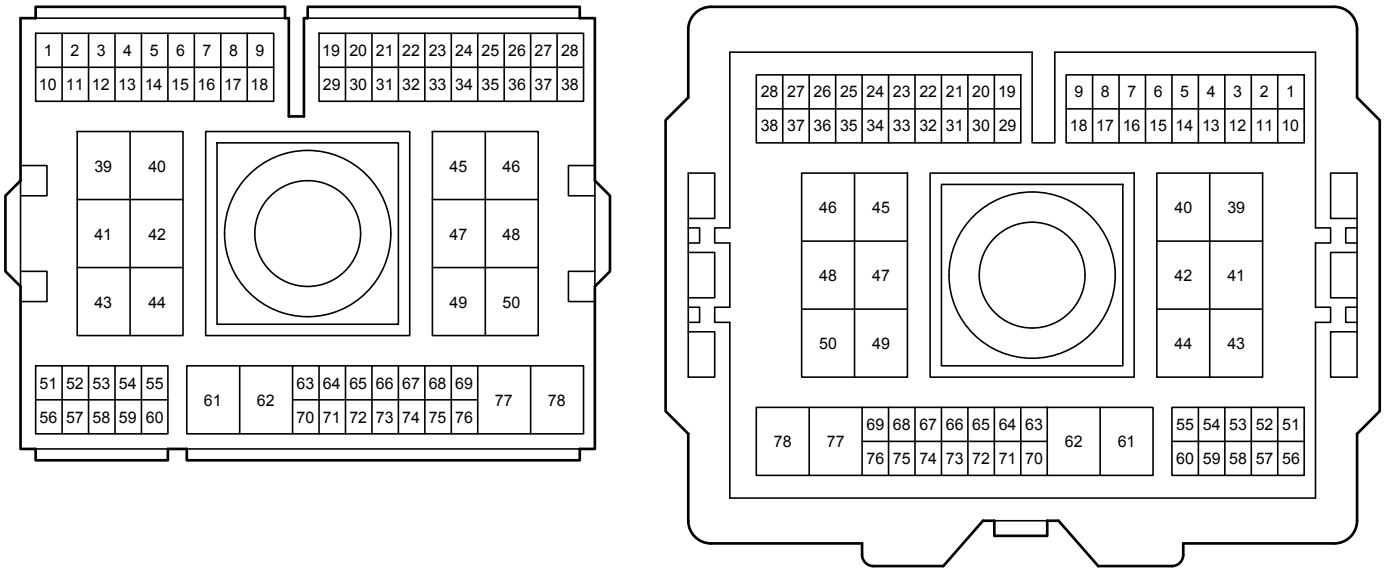


EA2

White


Gray

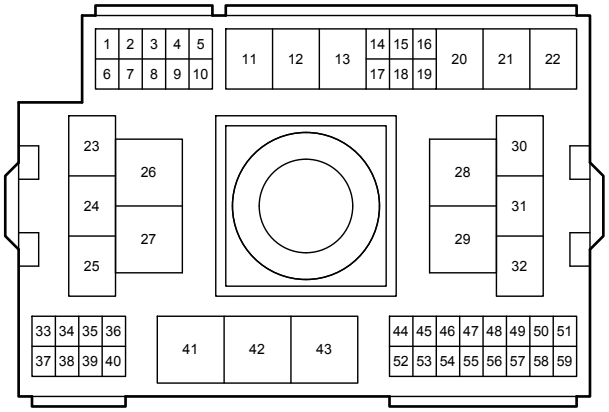


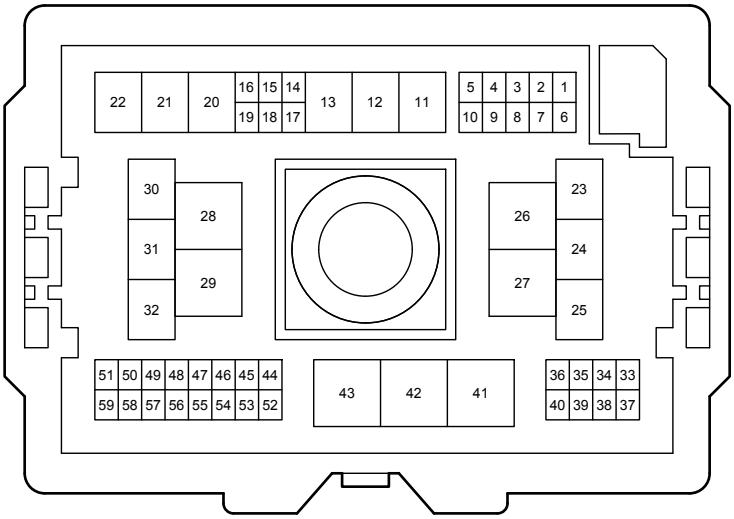

EA4


White

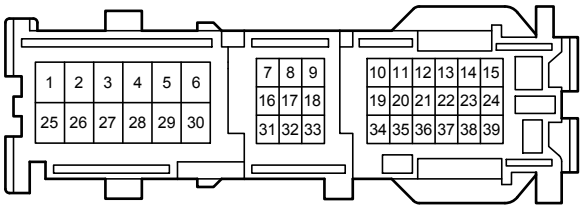

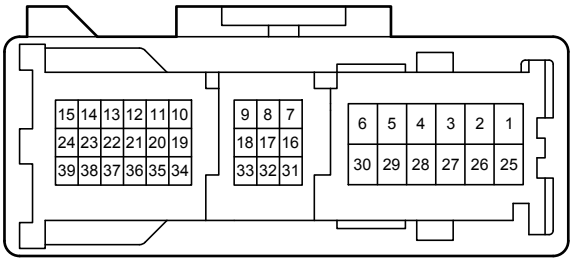


EE1

White

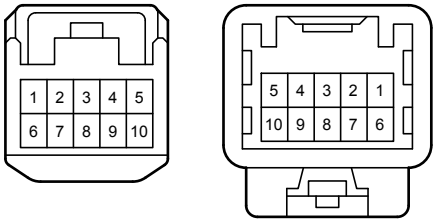


EK1

White

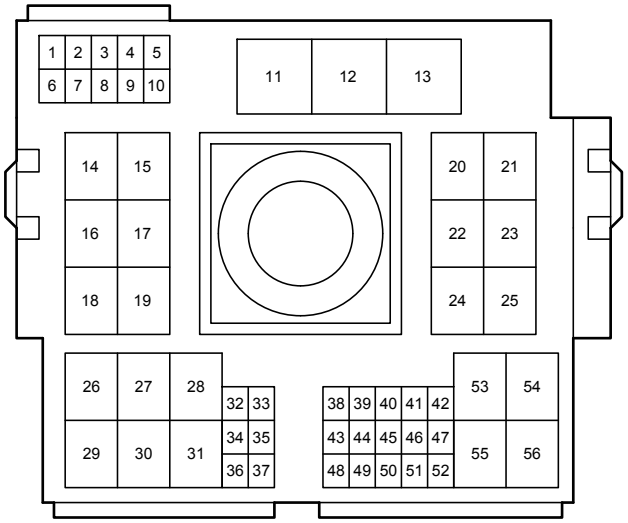



Blue

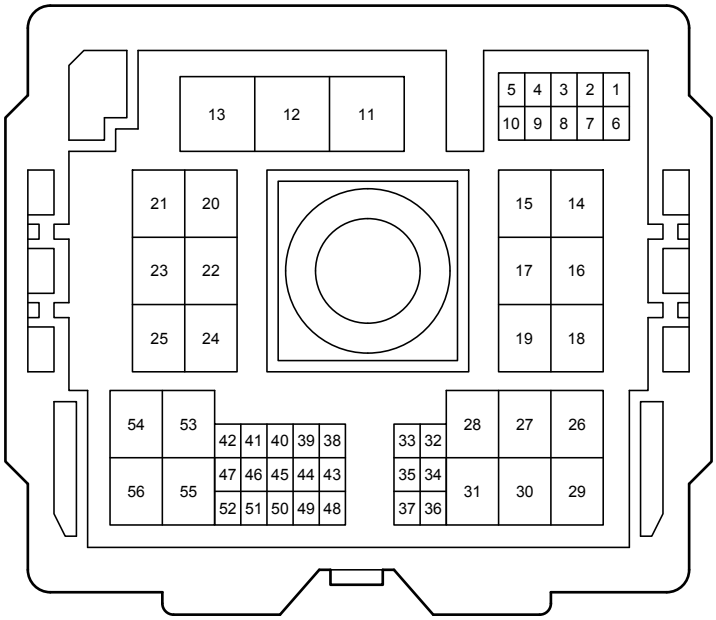

EK2


White

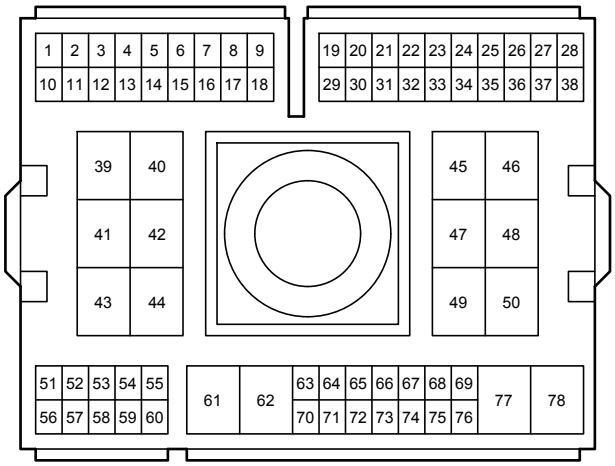


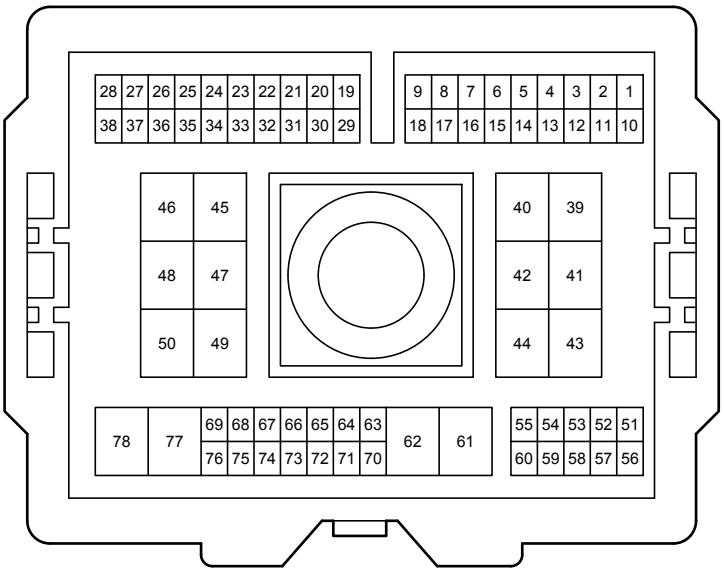


EK4

White

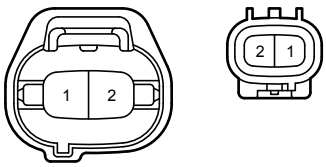


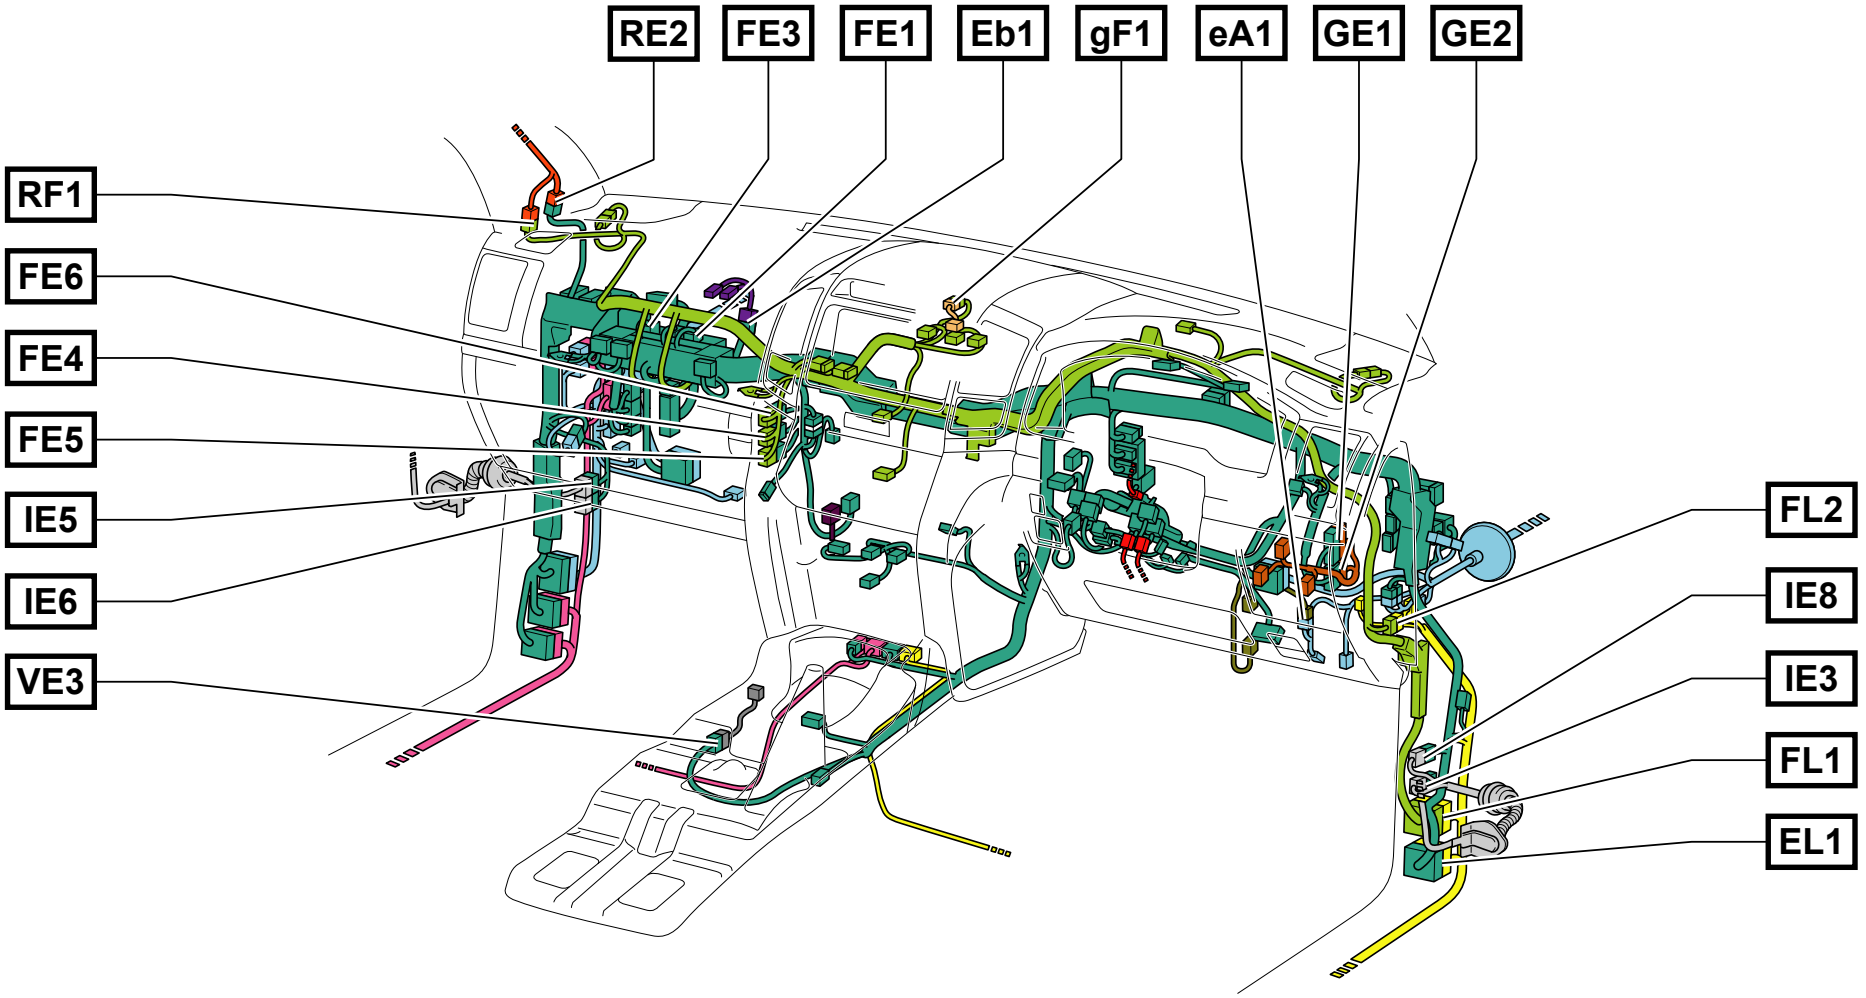
RE2
FE3
FE1
Eb1
gF1
eA1
GE1
GE2
RF1
FE6
FE4
FE5
IE5
IE6
VE3
FL2
IE8
IE3
FL1
EL1


EL1
White

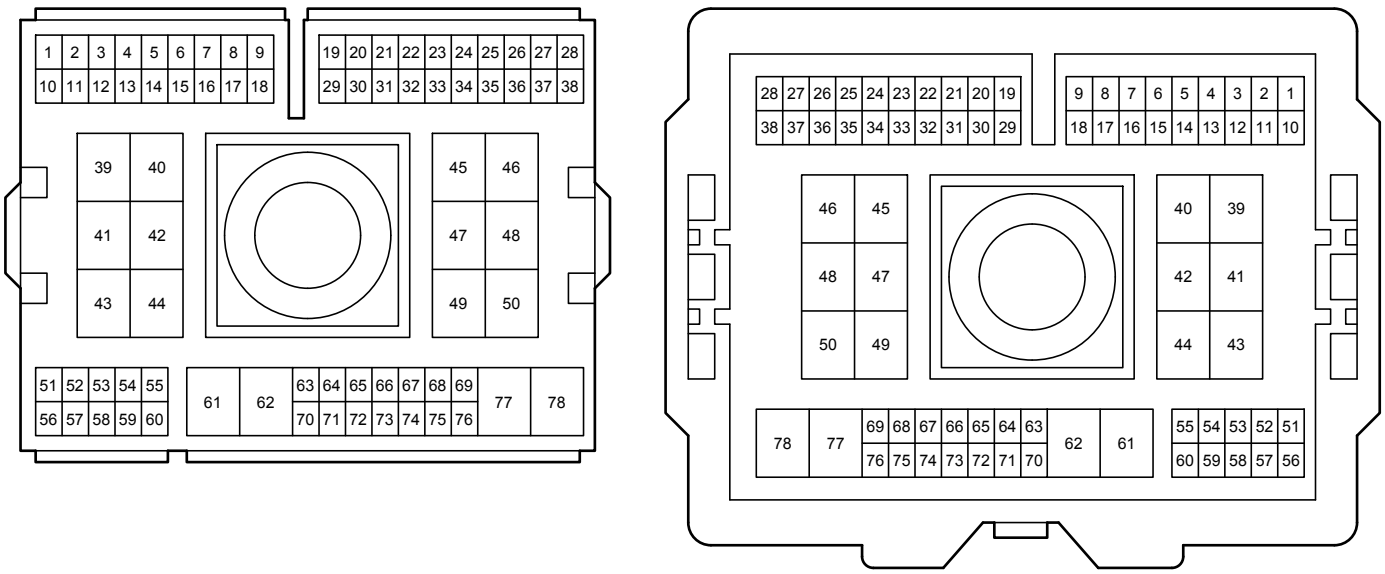


Eb1
Yellow

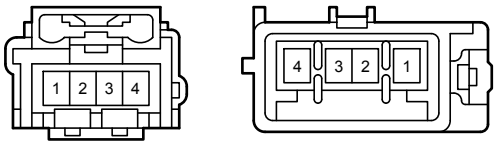


FE1
White

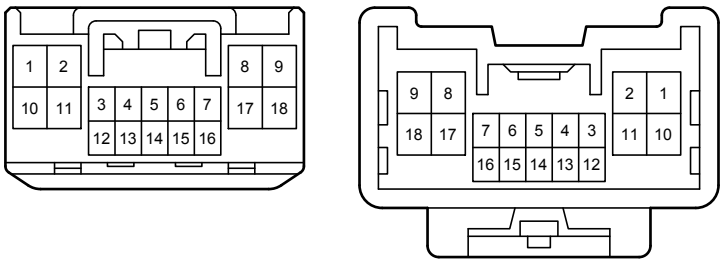


FE3
White

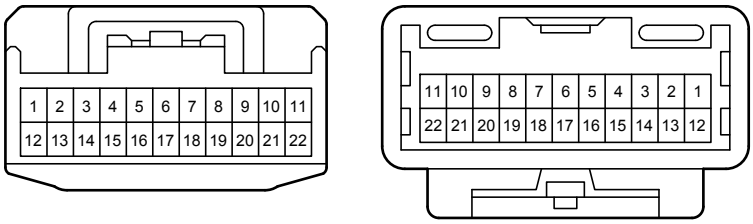


FE4
White

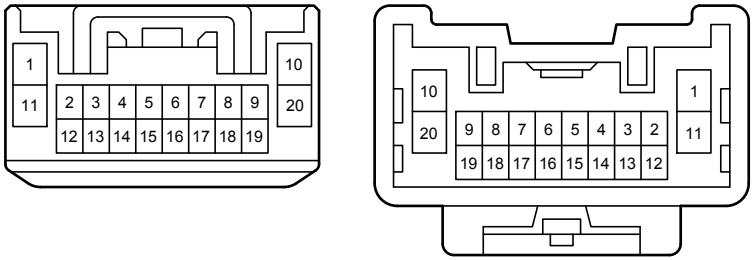


FE5
White

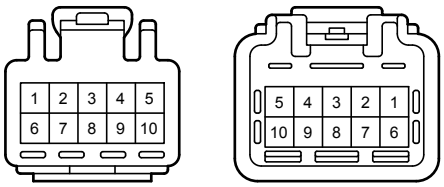


FE6
White

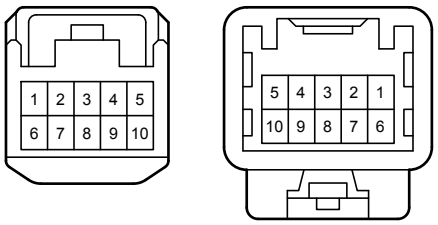


FL1
White Blue

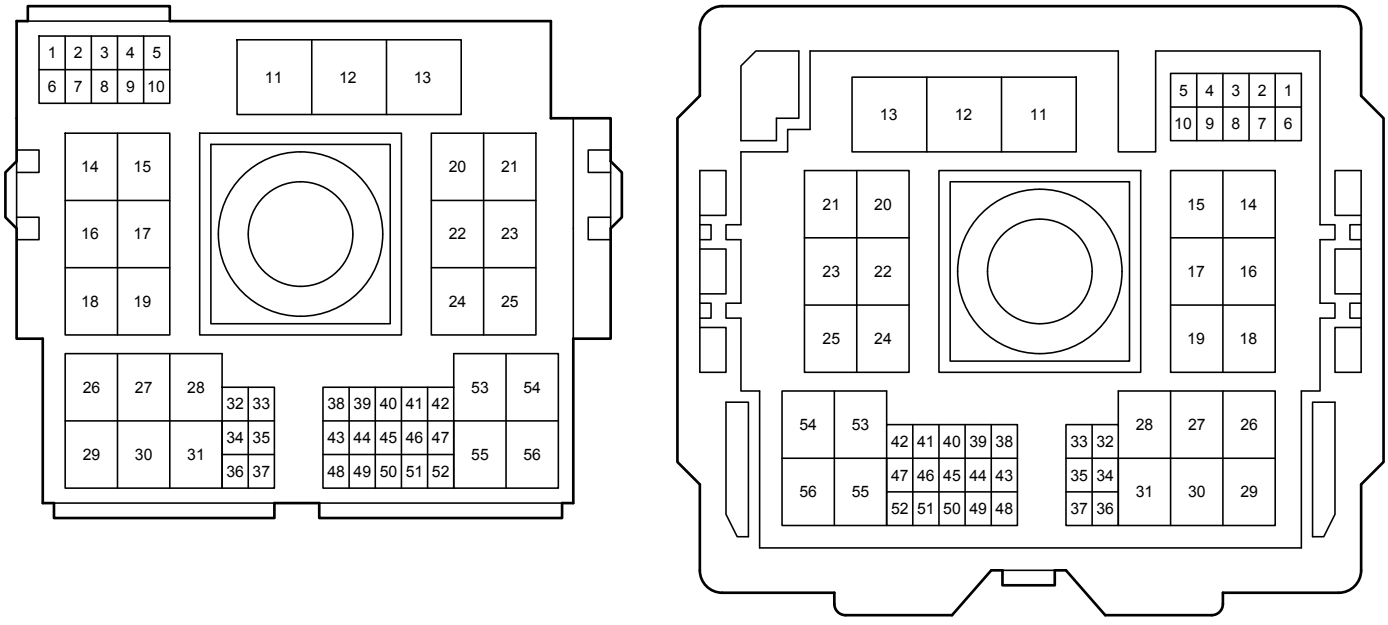


FL2
Blue

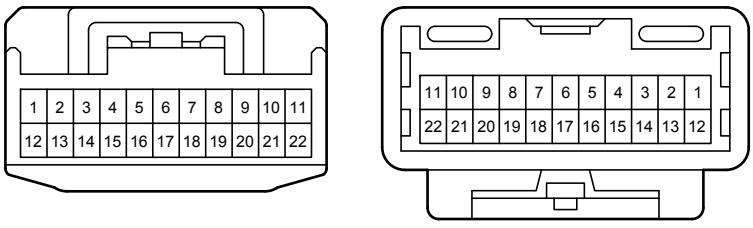


GE1
White

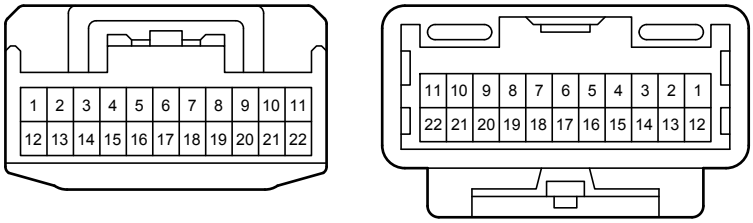


GE2
White

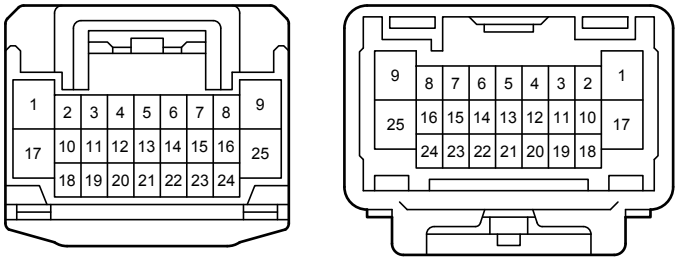


IE3
White

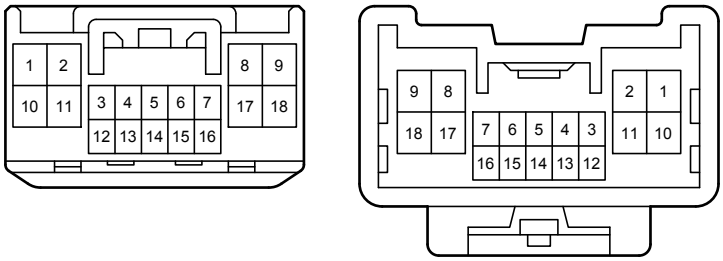


IE5
Blue

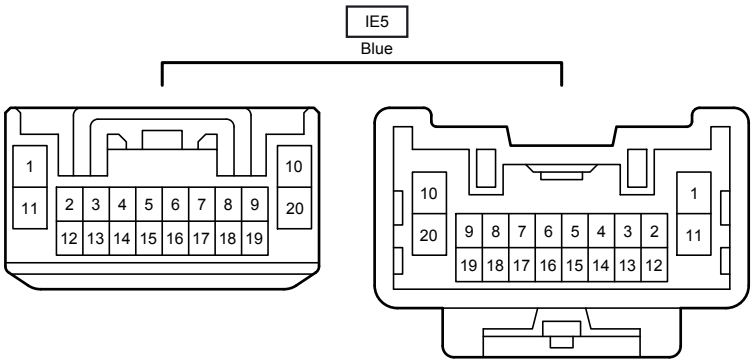


IE6
White

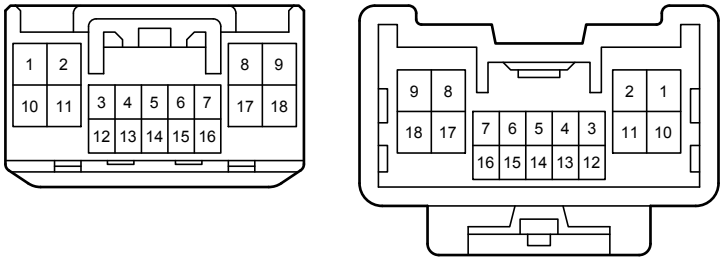


IE8
White

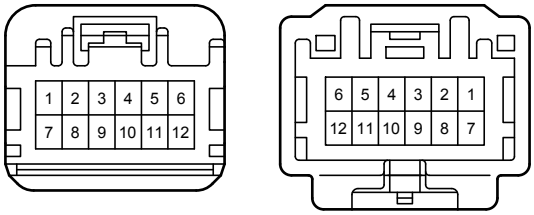


RE2
Blue

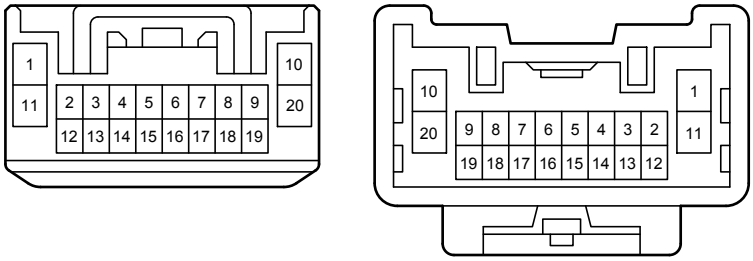


RF1
Gray

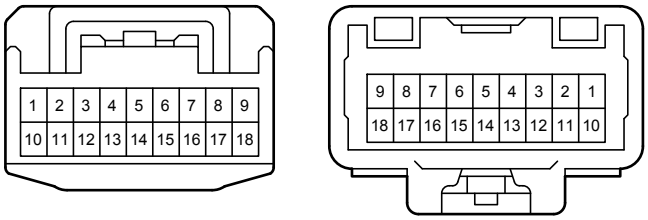



VE3
Gray

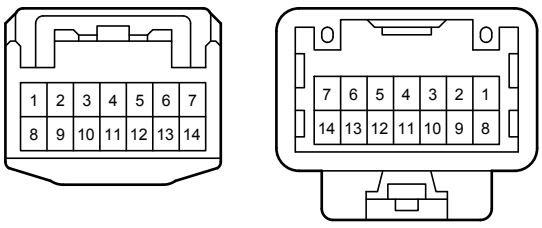


eA1
White

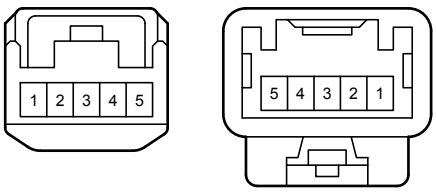

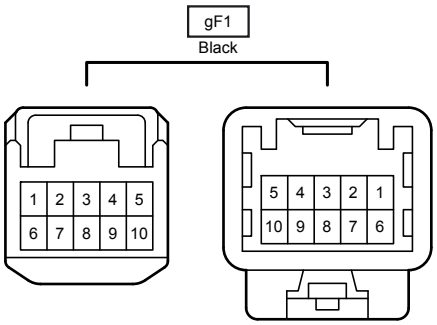

gF1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

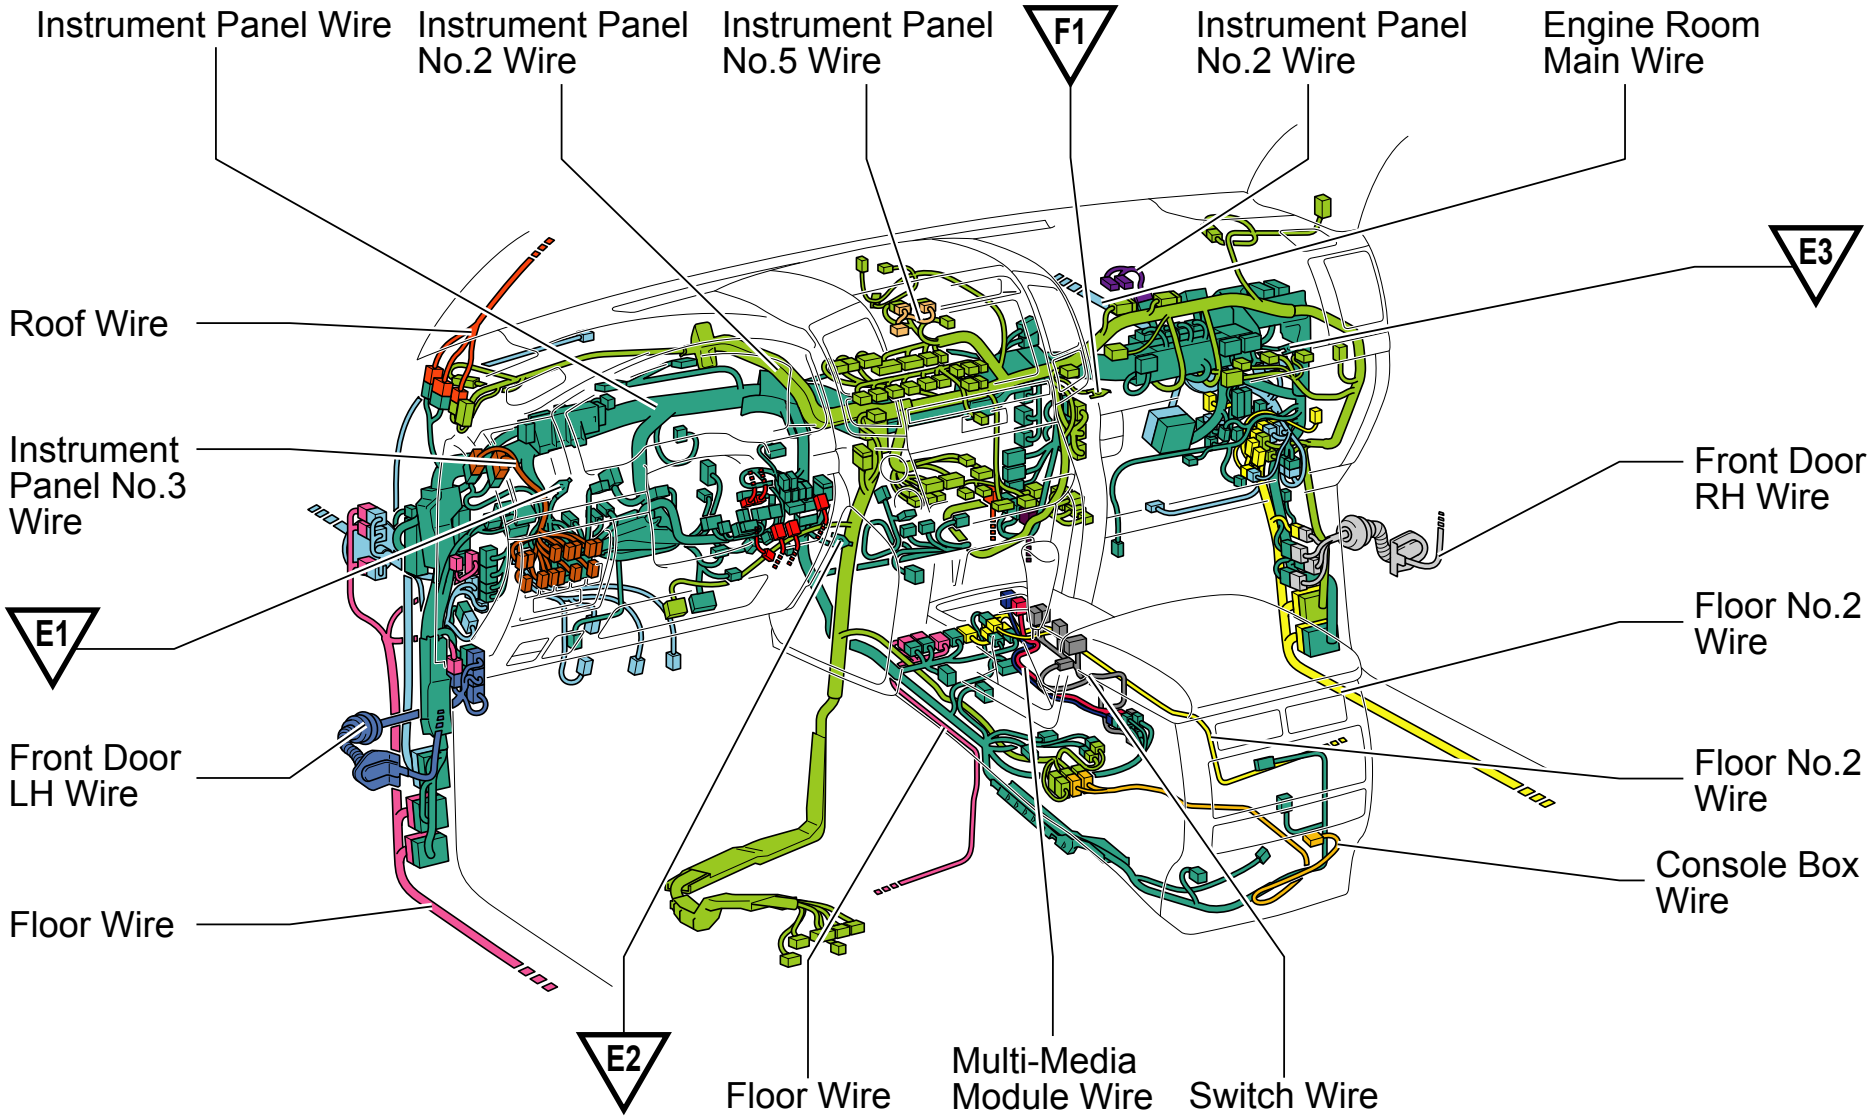
Instrument Panel Wire
Instrument Panel No.2 Wire
Instrument Panel No.5 Wire
F1
Instrument Panel No.2 Wire
Engine Room Main Wire
E3
Roof Wire
Instrument Panel No.3 Wire
Front Door RH Wire
E1
Floor No.2 Wire
Front Door LH Wire
Floor No.2 Wire
Console Box Wire
Floor Wire
E2
Floor Wire
Multi-Media Module Wire
Switch Wire

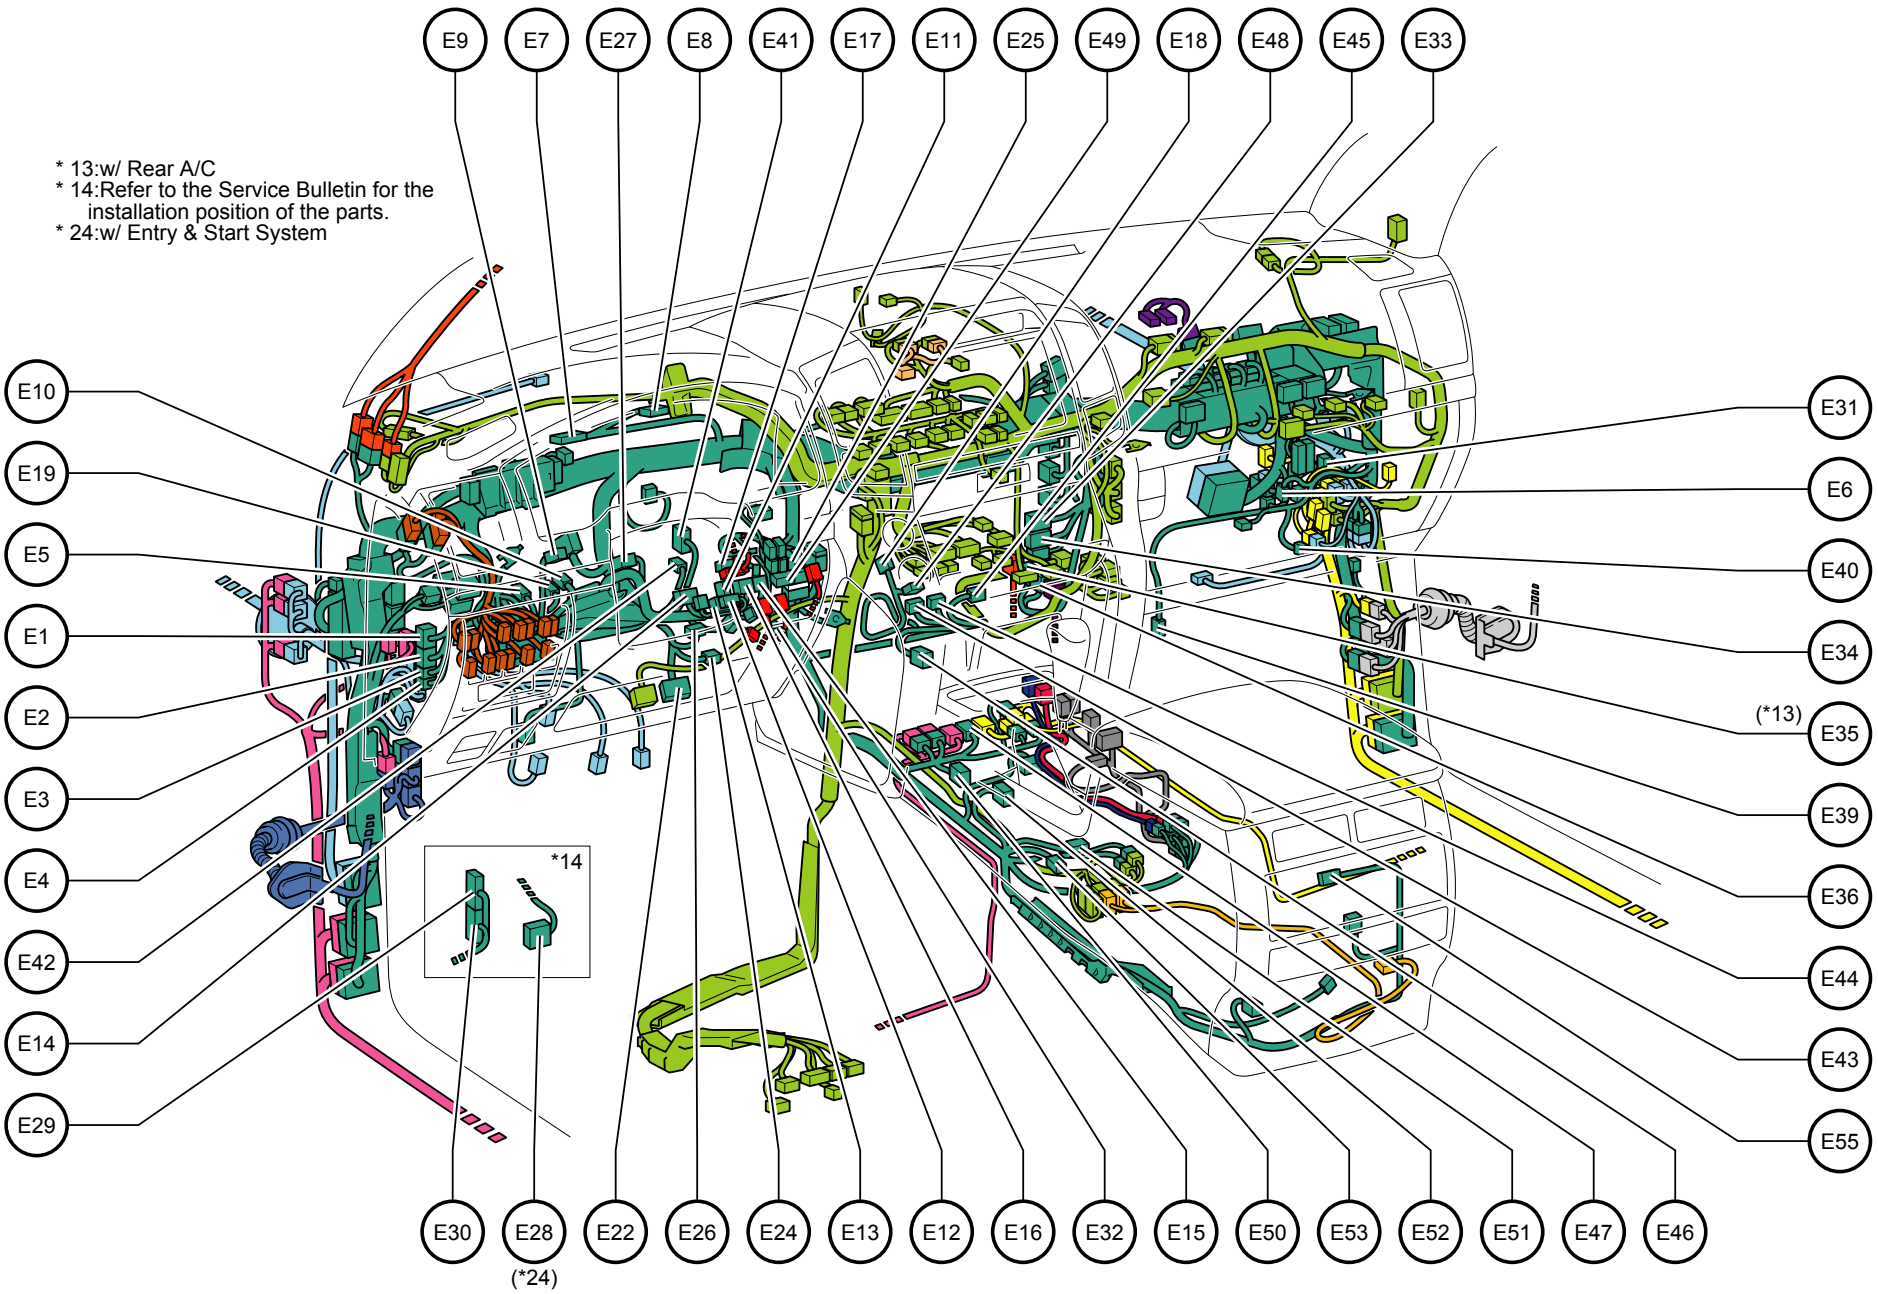

* 13:w/ Rear A/C
* 14:Refer to the Service Bulletin for the installation position of the parts.
* 24:w/ Entry & Start System
E9
E7
E27
E8
E41
E17
E11
E25
E49
E18
E48
E45
E33
E10
E19
E5
E1
E2
E3
E4
E42
E14
E29
E31
E6
E40
E34
(*13)
E35
E39
E36
E44
E43
E55
*14
E30
E28
(*24)
E22
E26
E24
E13
E12
E16
E32
E15
E50
E53
E52
E51
E47
E46

E 1 Main Body ECU
E 2 Main Body ECU
E 3 Main Body ECU
E 4 Main Body ECU
E 5 Skid Control Buzzer Assembly
E 6 Option Connector (Bus Buffer)
E 7 Combination Meter Assembly
E 8 Combination Meter Assembly
E 9 Light Control Rheostat
E 10 No.1 Clearance Warning Buzzer
E 11 Steering Sensor
E 12 Spiral Cable Sub-Assembly
E 13 Spiral Cable Sub-Assembly
E 14 Headlight Dimmer Switch Assembly
E 15 Windshield Wiper Switch Assembly
E 16 Windshield Wiper Switch Assembly
E 17 Power Tilt Motor
E 18 Engine Switch
E 19 Turn Signal Flasher Assembly
E 22 DLC3
E 24 Lower No.1 Instrument Panel Airbag Assembly
E 25 VSC Off Switch
E 26 Steering Lock Actuator Assembly
E 27 Multiplex Tilt and Telescopic ECU
E 28 ID Code Box
E 29 Certification ECU Assembly
E 30 Certification ECU Assembly
E 31 Network Gateway ECU
E 32 Room Temperature Sensor
E 33 Quick Heater Assembly
E 34 Quick Heater Assembly
E 35 A/C Amplifier Assembly
E 36 A/C Amplifier Assembly
E 39 Glove Box Light Assembly
E 40 Lower No.2 Instrument Panel Airbag Assembly
E 41 Seat Belt Control ECU
E 42 Seat Belt Control ECU
E 43 Cigarette Lighter Assembly
E 44 Cigarette Lighter Illumination Assembly
E 45 Ash Receptacle Light Sub-Assembly
E 46 Front Power Outlet Socket Assembly
E 47 Center Airbag Sensor Assembly
E 48 Transfer Position Switch
E 49 Center Differential Lock Switch
E 50 Yaw Rate Sensor Assembly
E 51 Shift Lock Control ECU Sub-Assembly
E 52 Transmission Control Switch
E 53 Parking Brake Switch Assembly
E 55 No.2 A/C Control Assembly


E 1
White

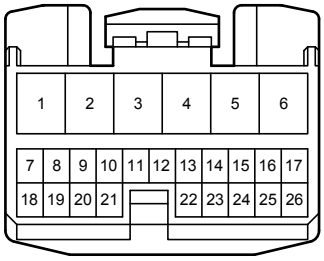


E 2
White

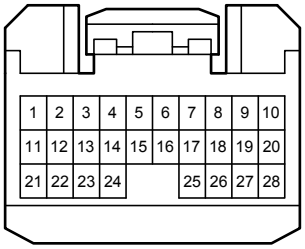


E 3
White

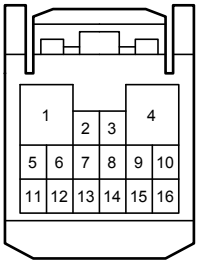


E 4
White

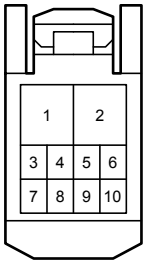


E 5
Blue




E 6
White




E 7
White

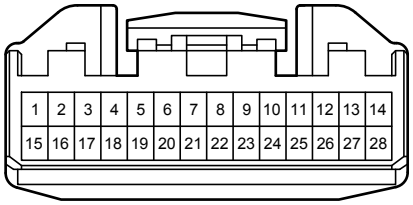


E 8
Black

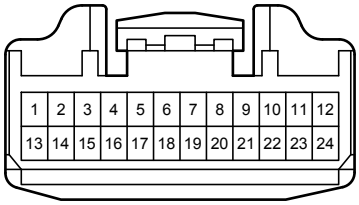


E 9
White

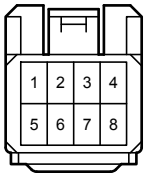


E 10
Black




E 11
Gray

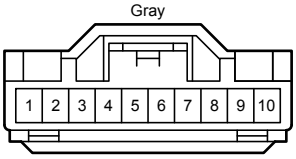


E 12
Black

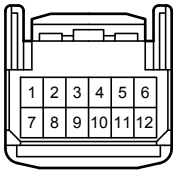


E 13
Yellow

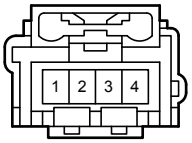


E 14
White

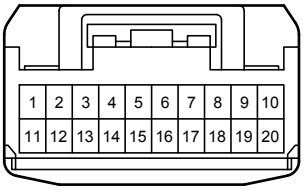


E 15
White

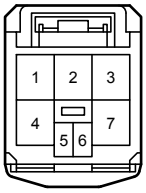


E 16
White

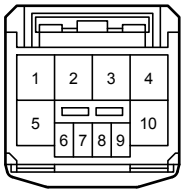


E 17
White

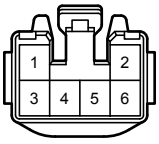


E 18
Black

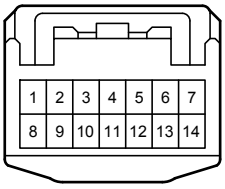


E 19
Black




E 22
White

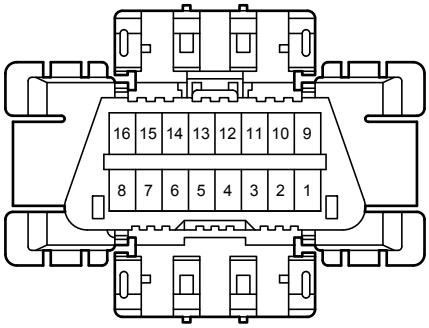


E 24
Black




E 25
Black

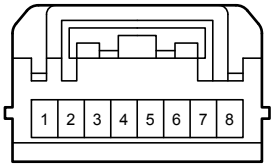


E 26
Black

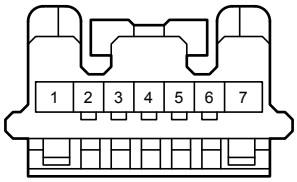


E 27
White

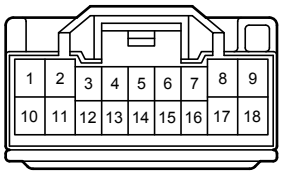


E 28
White

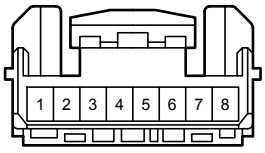


E 29
White

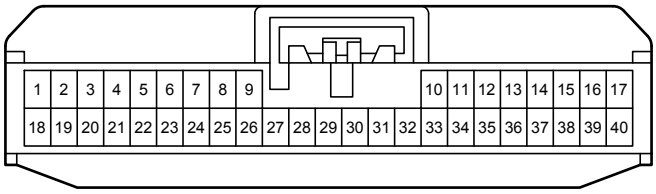


E 30
White

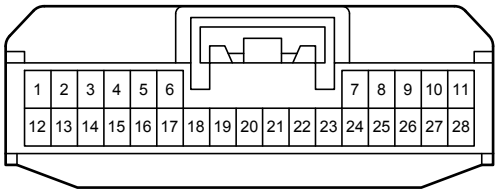


E 31
White

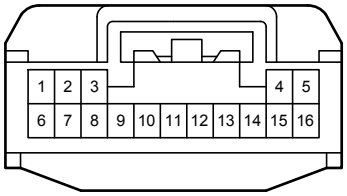


E 32
Black




E 33
White

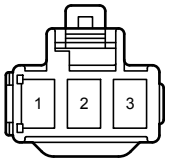


E 34
White

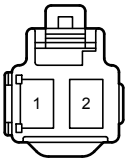

E 35
White

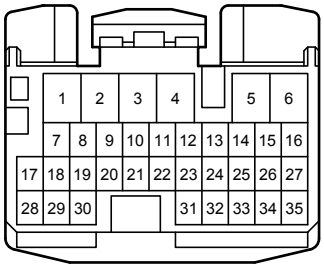


E 36
White

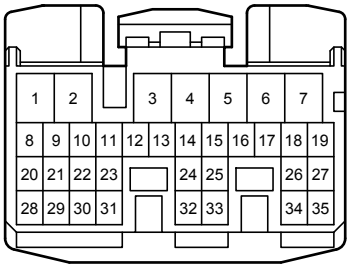


E 39
Black




E 40
Black




E 41
White

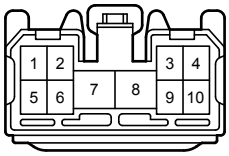

E 42
White

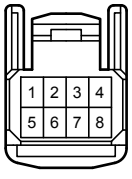


E 43
White




E 44
Gray




E 45
White




E 46
White




E 47
Yellow

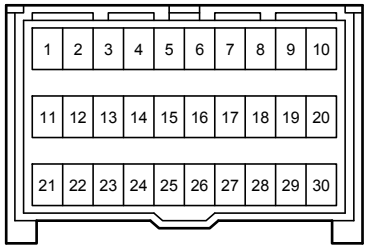


E 48
Black

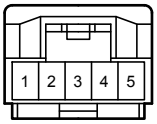


E 49
White

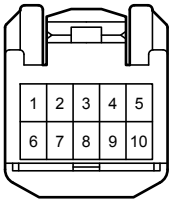


E 50
Black

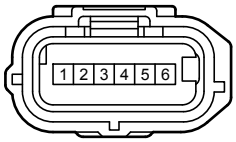

E 51
White

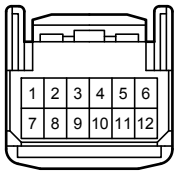

E 52
White

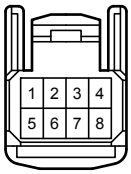


E 53
White



E 55
White




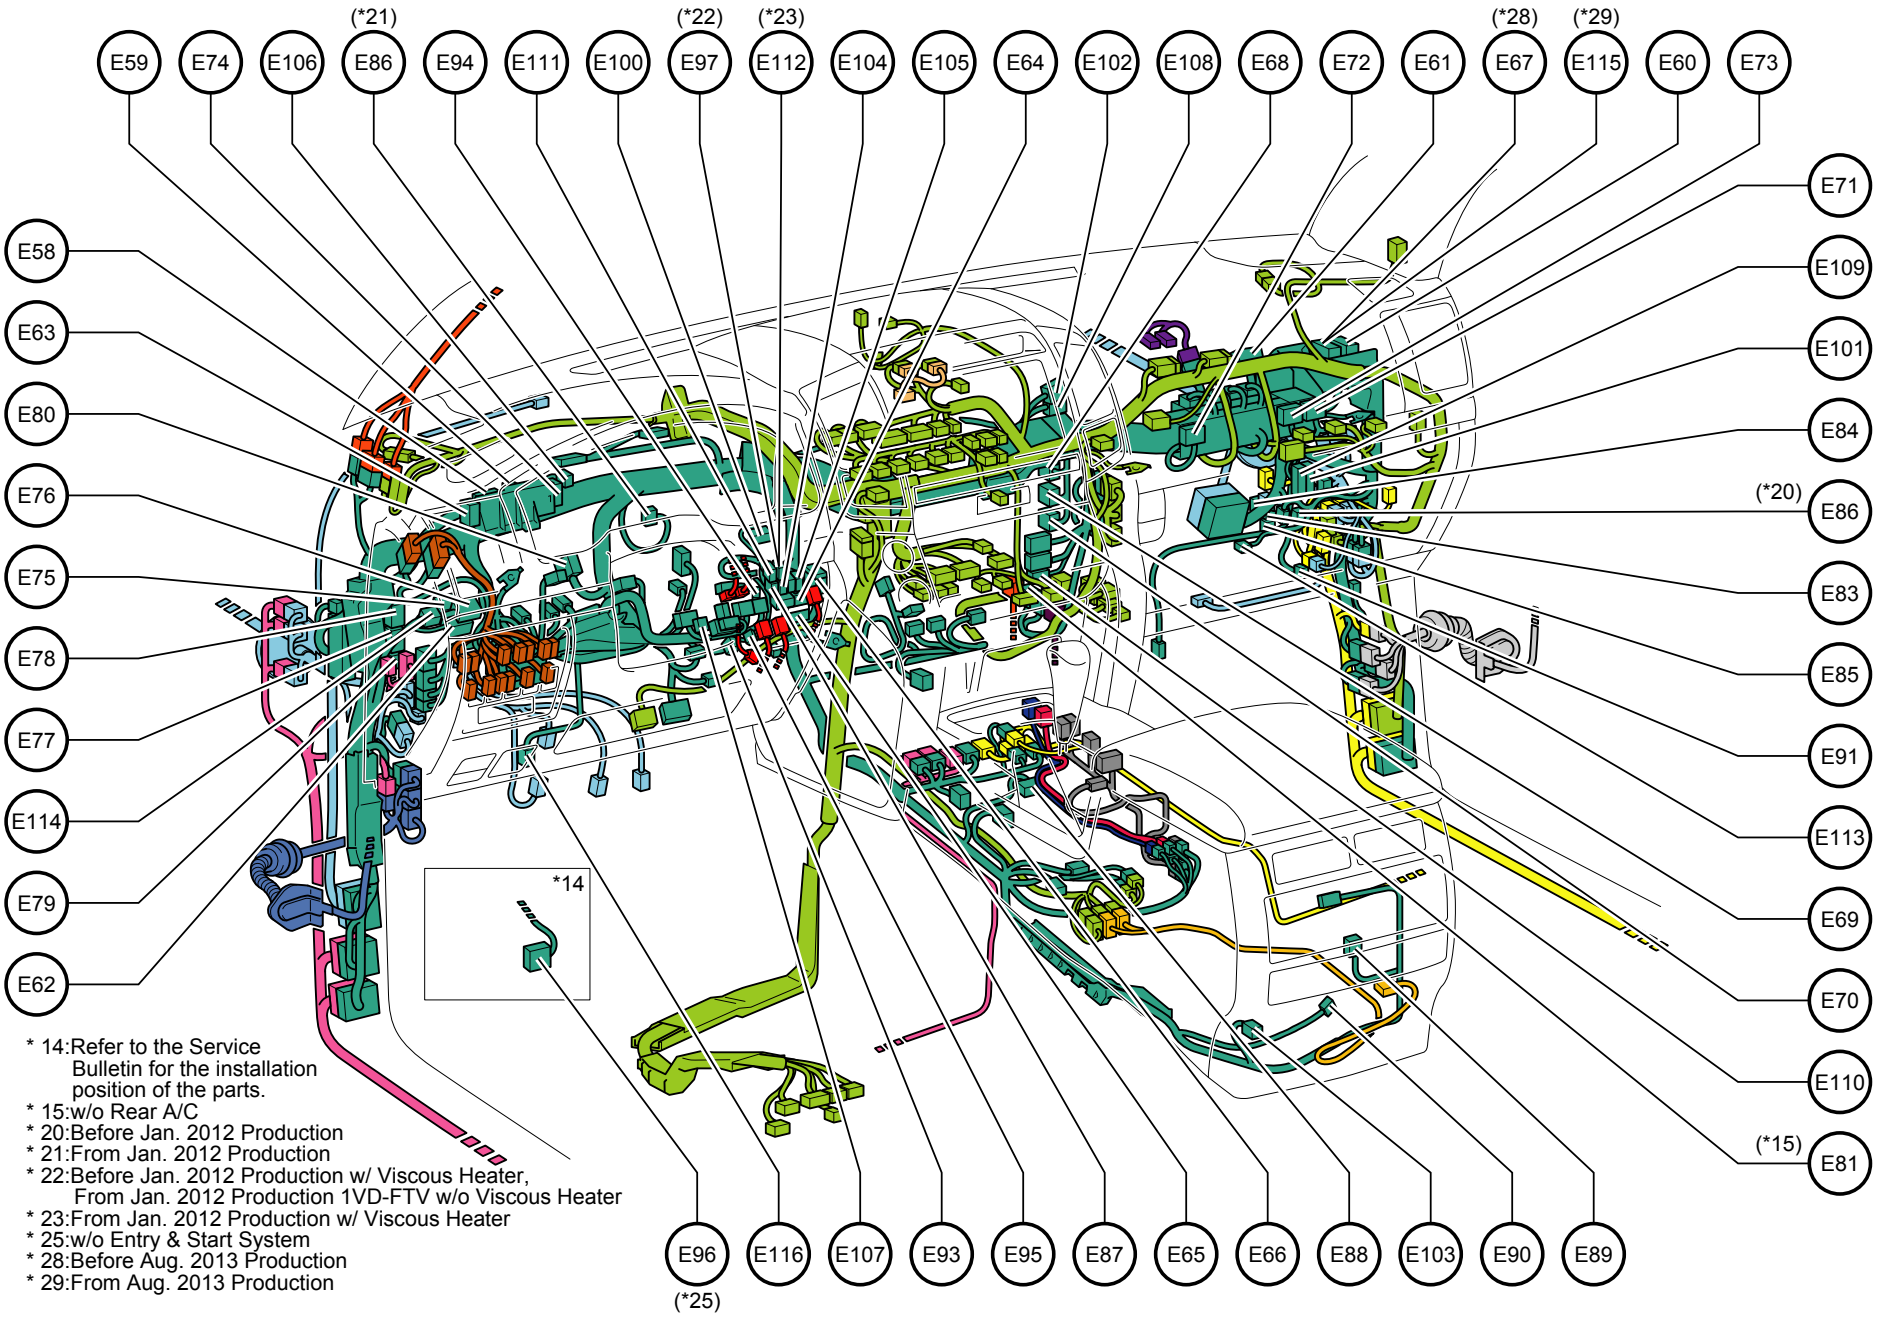


* 14:Refer to the Service Bulletin for the installation position of the parts.
* 15:w/o Rear A/C
* 20:Before Jan. 2012 Production
* 21:From Jan. 2012 Production
* 22:Before Jan. 2012 Production w/ Viscous Heater, From Jan. 2012 Production 1VD-FTV w/o Viscous Heater
* 23:From Jan. 2012 Production w/ Viscous Heater
* 25:w/o Entry & Start System
* 28:Before Aug. 2013 Production
* 29:From Aug. 2013 Production

E 58 Junction Connector
E 59 Junction Connector
E 60 Junction Connector
E 61 Junction Connector
E 62 Junction Connector
E 63 Junction Connector
E 64 Junction Connector
E 65 Junction Connector
E 66 Junction Connector
E 67 Junction Connector
E 68 Junction Connector
E 69 Junction Connector
E 70 Junction Connector
E 71 Junction Connector
E 72 Junction Connector
E 73 Junction Connector
E 74 Junction Connector
E 75 Junction Connector
E 76 Junction Connector
E 77 Steering Control ECU
E 78 Steering Control ECU
E 79 Steering Control ECU
E 80 Steering Actuator Assembly
E 81 A/C Amplifier Assembly
E 83 Windshield Wiper ECU , Short Connector
E 84 Short Connector
E 85 Windshield Wiper ECU
E 86 Double Lock Door Control Relay Assembly
E 87 Differential Lock Switch
E 88 Deceleration Sensor
E 89 Heater Blower Switch
E 90 Cooling Box Assembly
E 91 Option Connector (Parking Assist-Sensor)
E 93 Ignition or Starter Switch Assembly
E 94 Un-Lock Warning Switch Assembly
E 95 Transponder Key Amplifier
E 96 Transponder Key ECU Assembly
E 97 Idle Up Switch
E 100 Main Switch Assembly
E 101 Headlight Leveling ECU Assembly
E 102 Power Steering ECU Assembly
E 103 Rear Power Outlet Socket Assembly
E 104 Back Door Control Switch
E 105 Power Back Door Main Switch
E 106 Junction Connector
E 107 Spiral Cable Sub-Assembly , Steering Wheel Heater Control Assembly
E 108 Distance Control ECU Assembly
E 109 Headlight Leveling ECU Assembly
E 110 Quick Heater Assembly
E 111 DPF Switch Assembly
E 112 Heater Switch Assembly
E 113 Option Connector (Remote Engine Starter)
E 114 Option Connector (Floor Illumination)
E 115 Junction Connector
E 116 Tire Pressure Warning Reset Switch


E 58

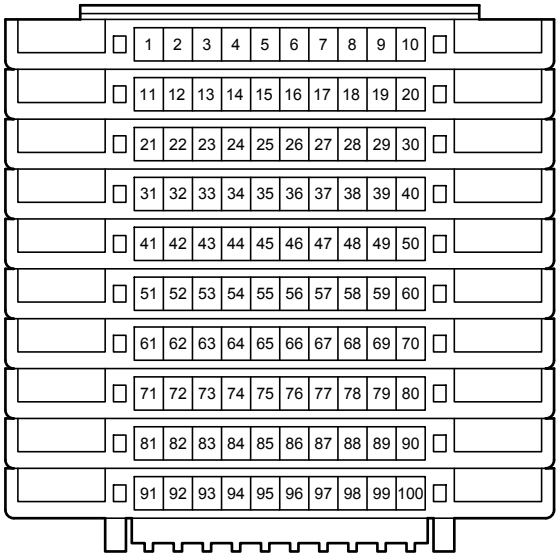


E 59

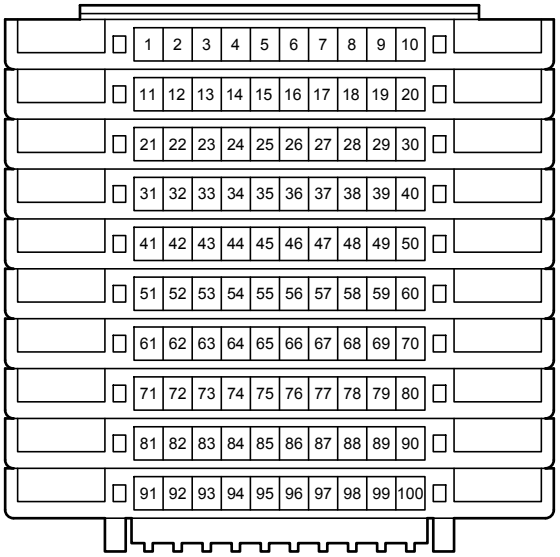


E 60

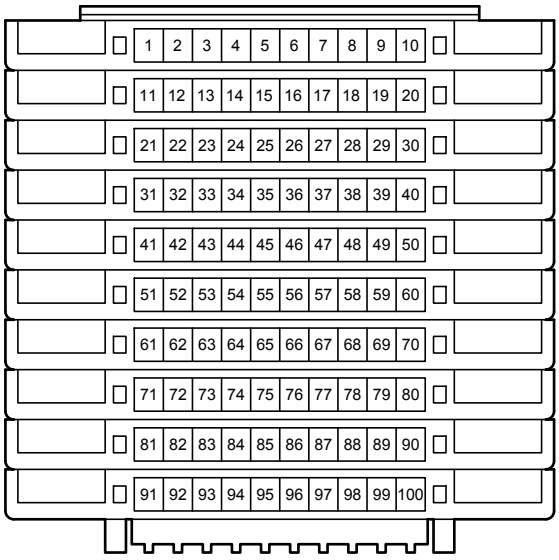


E 61

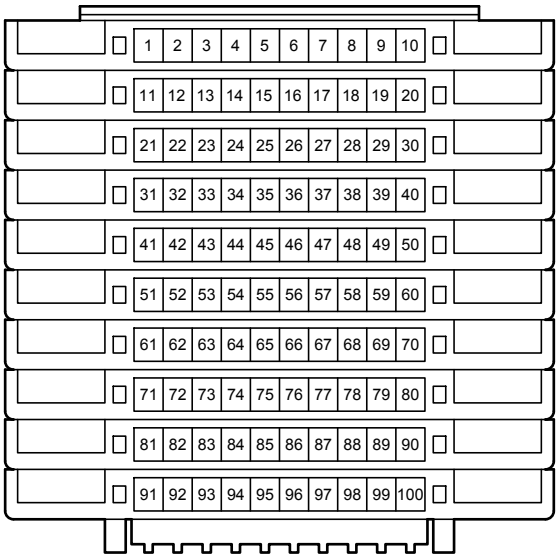


E 62
White

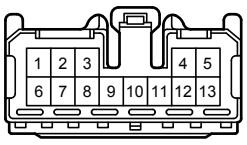


E 63
Gray




E 64
Black

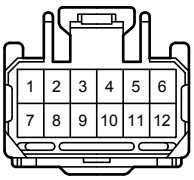


E 65
Black

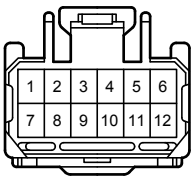


E 66
White

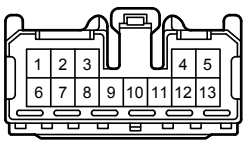


E 67
White

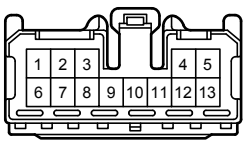


E 68
Gray

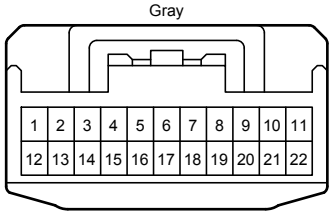


E 69
Gray

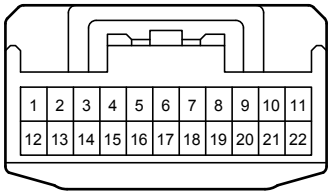


E 70
Gray

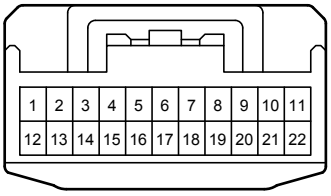


E 71
Gray

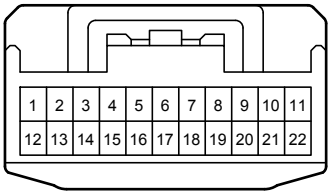


E 72
Gray

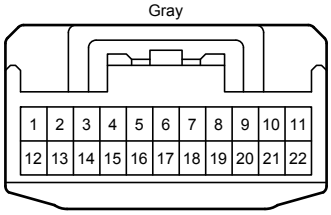


E 73
Gray

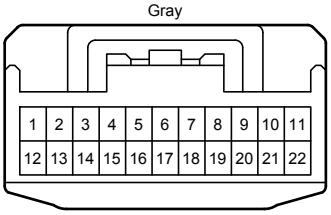


E 74
Gray

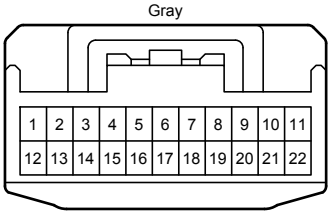


E 75
Gray

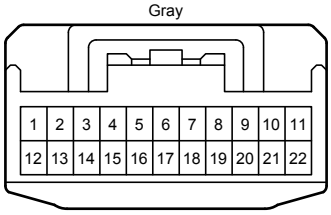


E 76
Gray

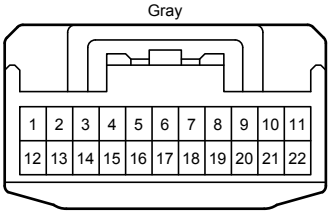


E 77
White

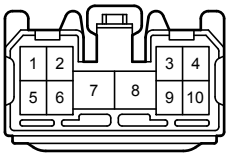


E 78
White

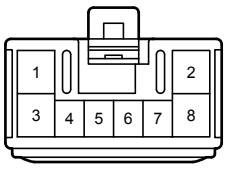


E 79
White

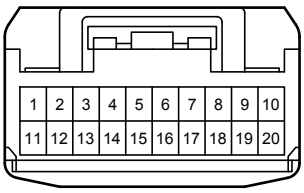


E 80
White

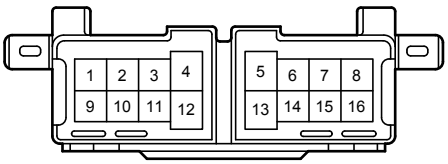


E 81
White

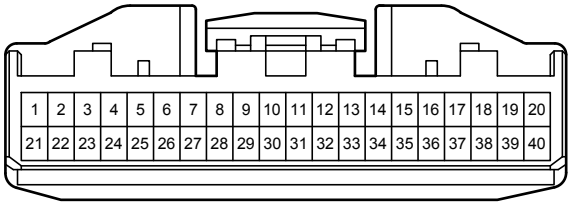


E 83
Blue

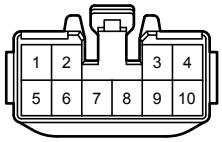


E 84
Blue

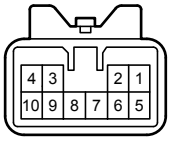


E 85
White

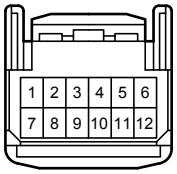


E 86
White




E 87
White




E 88
Black

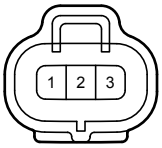


E 89
Black

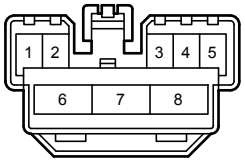


E 90
White




E 91
White

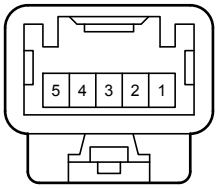


E 93
White

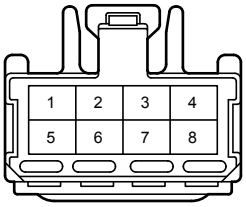


E 94
White




E 95
Black

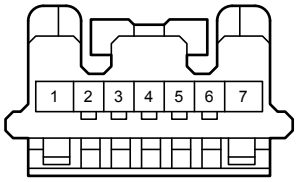


E 96
Black

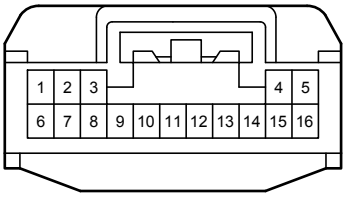


E 97
Black

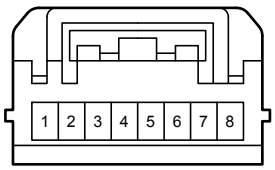


E100
White




E101
White

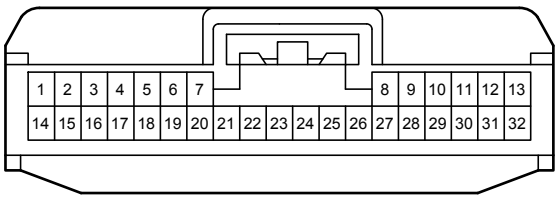


E102
White

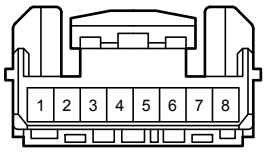


E103
White

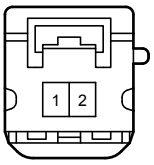


E104
Black

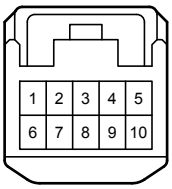


E105
Black

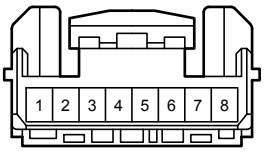


E106
White




E107
Black




E108
White

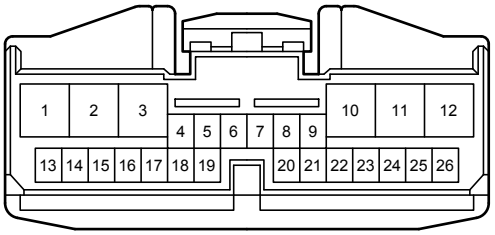


E109
White

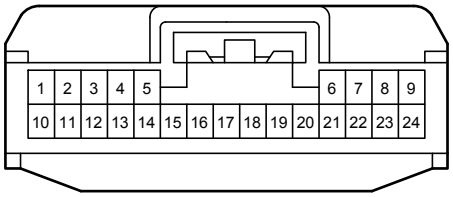


E110
White




E111
Black

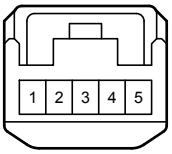


E112
Black

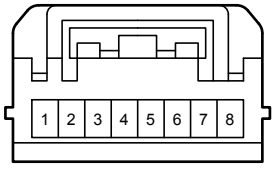


E113
White

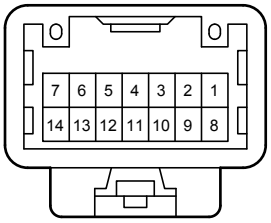


E114
White

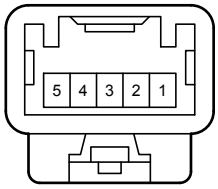


E115
White

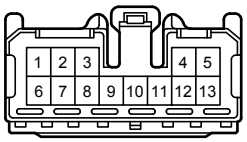


E116
Black



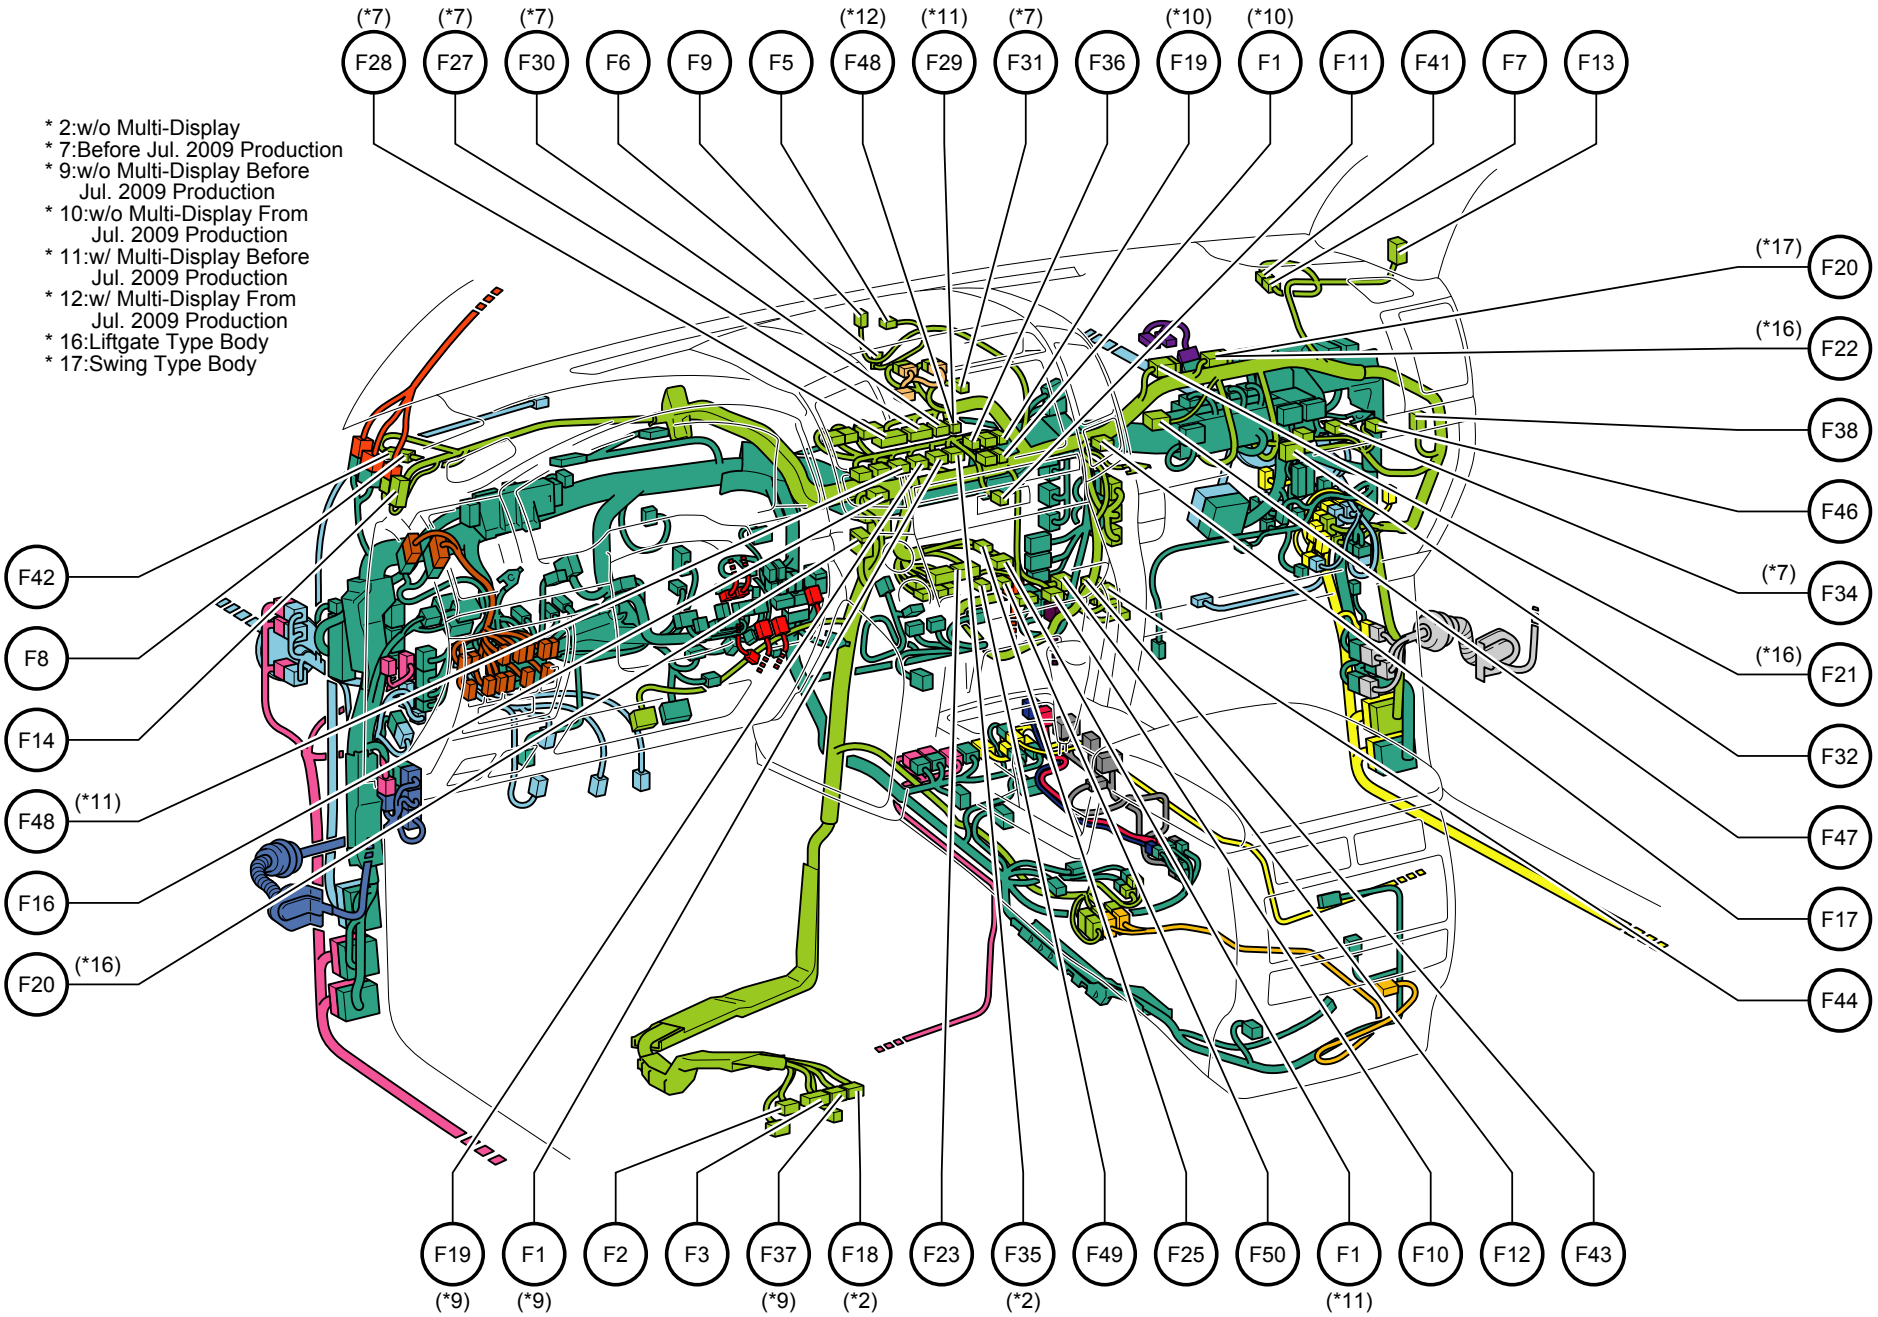

* 2:w/o Multi-Display
* 7:Before Jul. 2009 Production
* 9:w/o Multi-Display Before Jul. 2009 Production
* 10:w/o Multi-Display From Jul. 2009 Production
* 11:w/ Multi-Display Before Jul. 2009 Production
* 12:w/ Multi-Display From Jul. 2009 Production
* 16:Liftgate Type Body
* 17:Swing Type Body
(*7) F28
(*7) F27
(*7) F30
F6
F9
F5
(*12) F48
(*11) F29
(*7) F31
F36
(*10) F19
(*10) F1
F11
F41
F7
F13
(*17) F20
(*16) F22
F38
F46
(*7) F34
(*16) F21
F32
F47
F17
F44
F42
F8
F14
(*11) F48
F16
(*16) F20
F19 (*9)
F1 (*9)
F2
F3
F37 (*9)
F18 (*2)
F23
F35 (*2)
F49
F25
F50
F1 (*11)
F10
F12
F43

F 1 Radio Receiver Assembly
F 2 Stereo Component Amplifier Assembly
F 3 Stereo Component Amplifier Assembly
F 5 Amplifier Antenna Assembly
F 6 Front No.4 Speaker Assembly
F 7 Front No.2 Speaker Assembly RH , Short Connector
F 8 Front No.2 Speaker Assembly LH , Short Connector
F 9 Automatic Light Control Sensor
F 10 A/C Control Assembly
F 11 Hazard Warning Signal Switch Assembly
F 12 Clearance Warning ECU Assembly
F 13 Front No.3 Speaker Assembly RH
F 14 Front No.3 Speaker Assembly LH
F 16 Temperature Control Switch Assembly LH
F 17 Temperature Control Switch Assembly RH
F 18 Stereo Component Amplifier Assembly
F 19 Radio Receiver Assembly
F 20 Junction Connector
F 21 Junction Connector
F 22 Junction Connector
F 23 Radio Receiver Assembly
F 25 Radio Receiver Assembly
F 27 Multi-Display
F 28 Multi-Display
F 29 Multi-Display
F 30 Multi-Display
F 31 Multi-Display
F 32 Navigation ECU
F 34 Navigation ECU
F 35 Radio Receiver Assembly
F 36 Radio Receiver Assembly
F 37 Stereo Component Amplifier Assembly
F 38 Airbag Cut Off Switch Cylinder Sub-Assembly
F 41 Short Connector
F 42 Short Connector
F 43 Parking Assist ECU
F 44 Parking Assist ECU
F 46 Navigation ECU
F 47 Navigation Antenna Assembly
F 48 Multi-Display
F 49 Parking Assist ECU
F 50 Parking Assist ECU


F 1
White

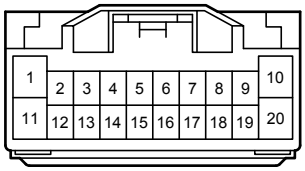

F 2
White

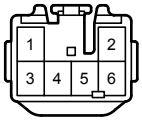


F 3
White

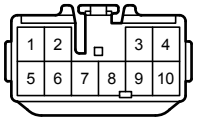


F 5
White




F 6
White




F 7
White




F 8
White




F 9
Black

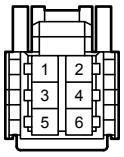


F 10
White

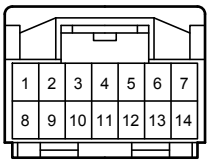

F 11
Gray

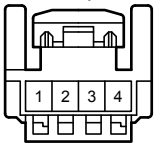


F 12
White

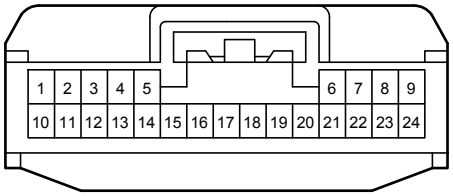


(Before Aug. 2007 Production)

F 12
Gray

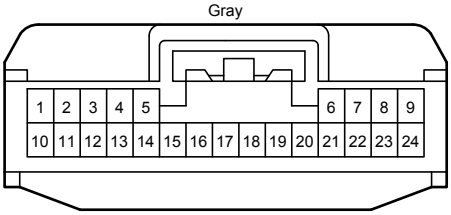


(From Aug. 2007 Production)


F 13
White




F 14
White




F 16
White




F 17
White




F 18
White

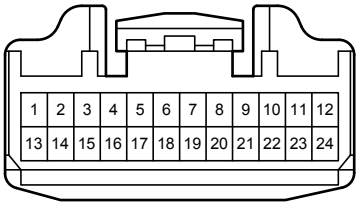


F 19
White

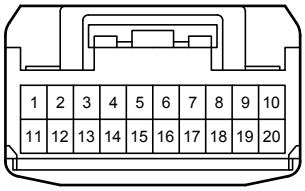


F 20
Gray

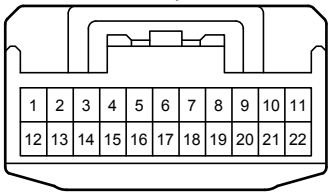


F 21
Black

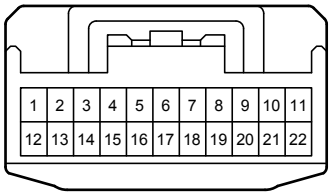


F 22
White

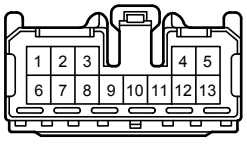


F 23
White

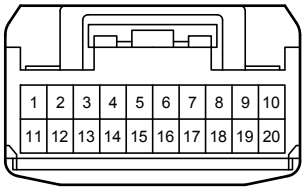


F 25
White

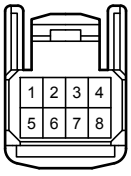


F 27
White

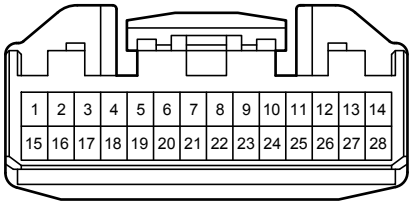


F 28
White

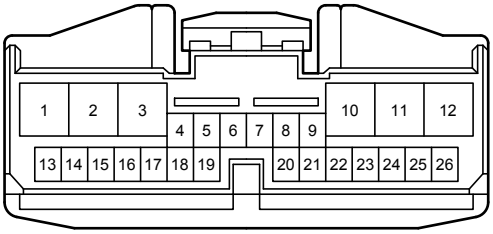


F 29
Blue

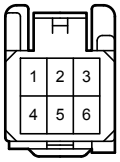


F 30
White

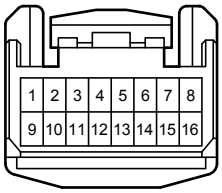


F 31
White

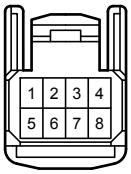


F 32
White

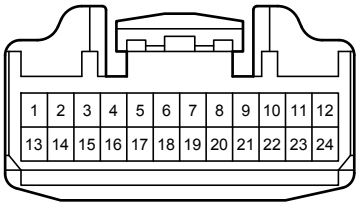


F 34
White

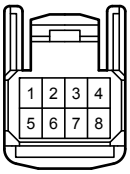


F 35
White

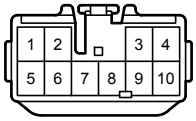

F 36
White

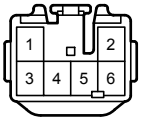


F 37
White

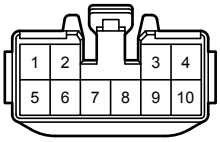


F 38
White




F 41
White




F 42
White




F 43
White

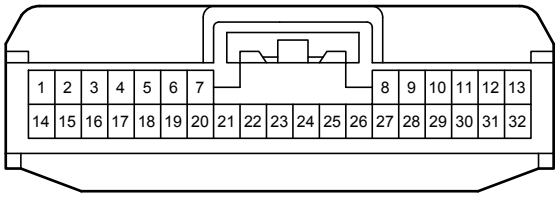


F 44
White

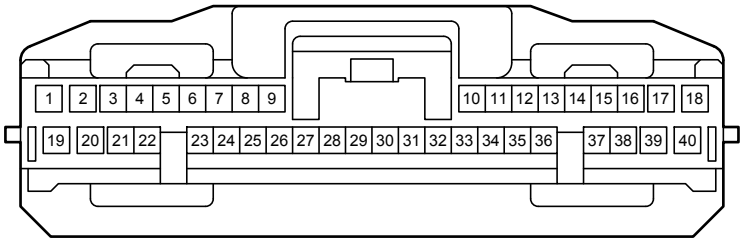

F 46
Gray



F 47
Gray



F 48
Blue




F 49
White



F 50
Blue

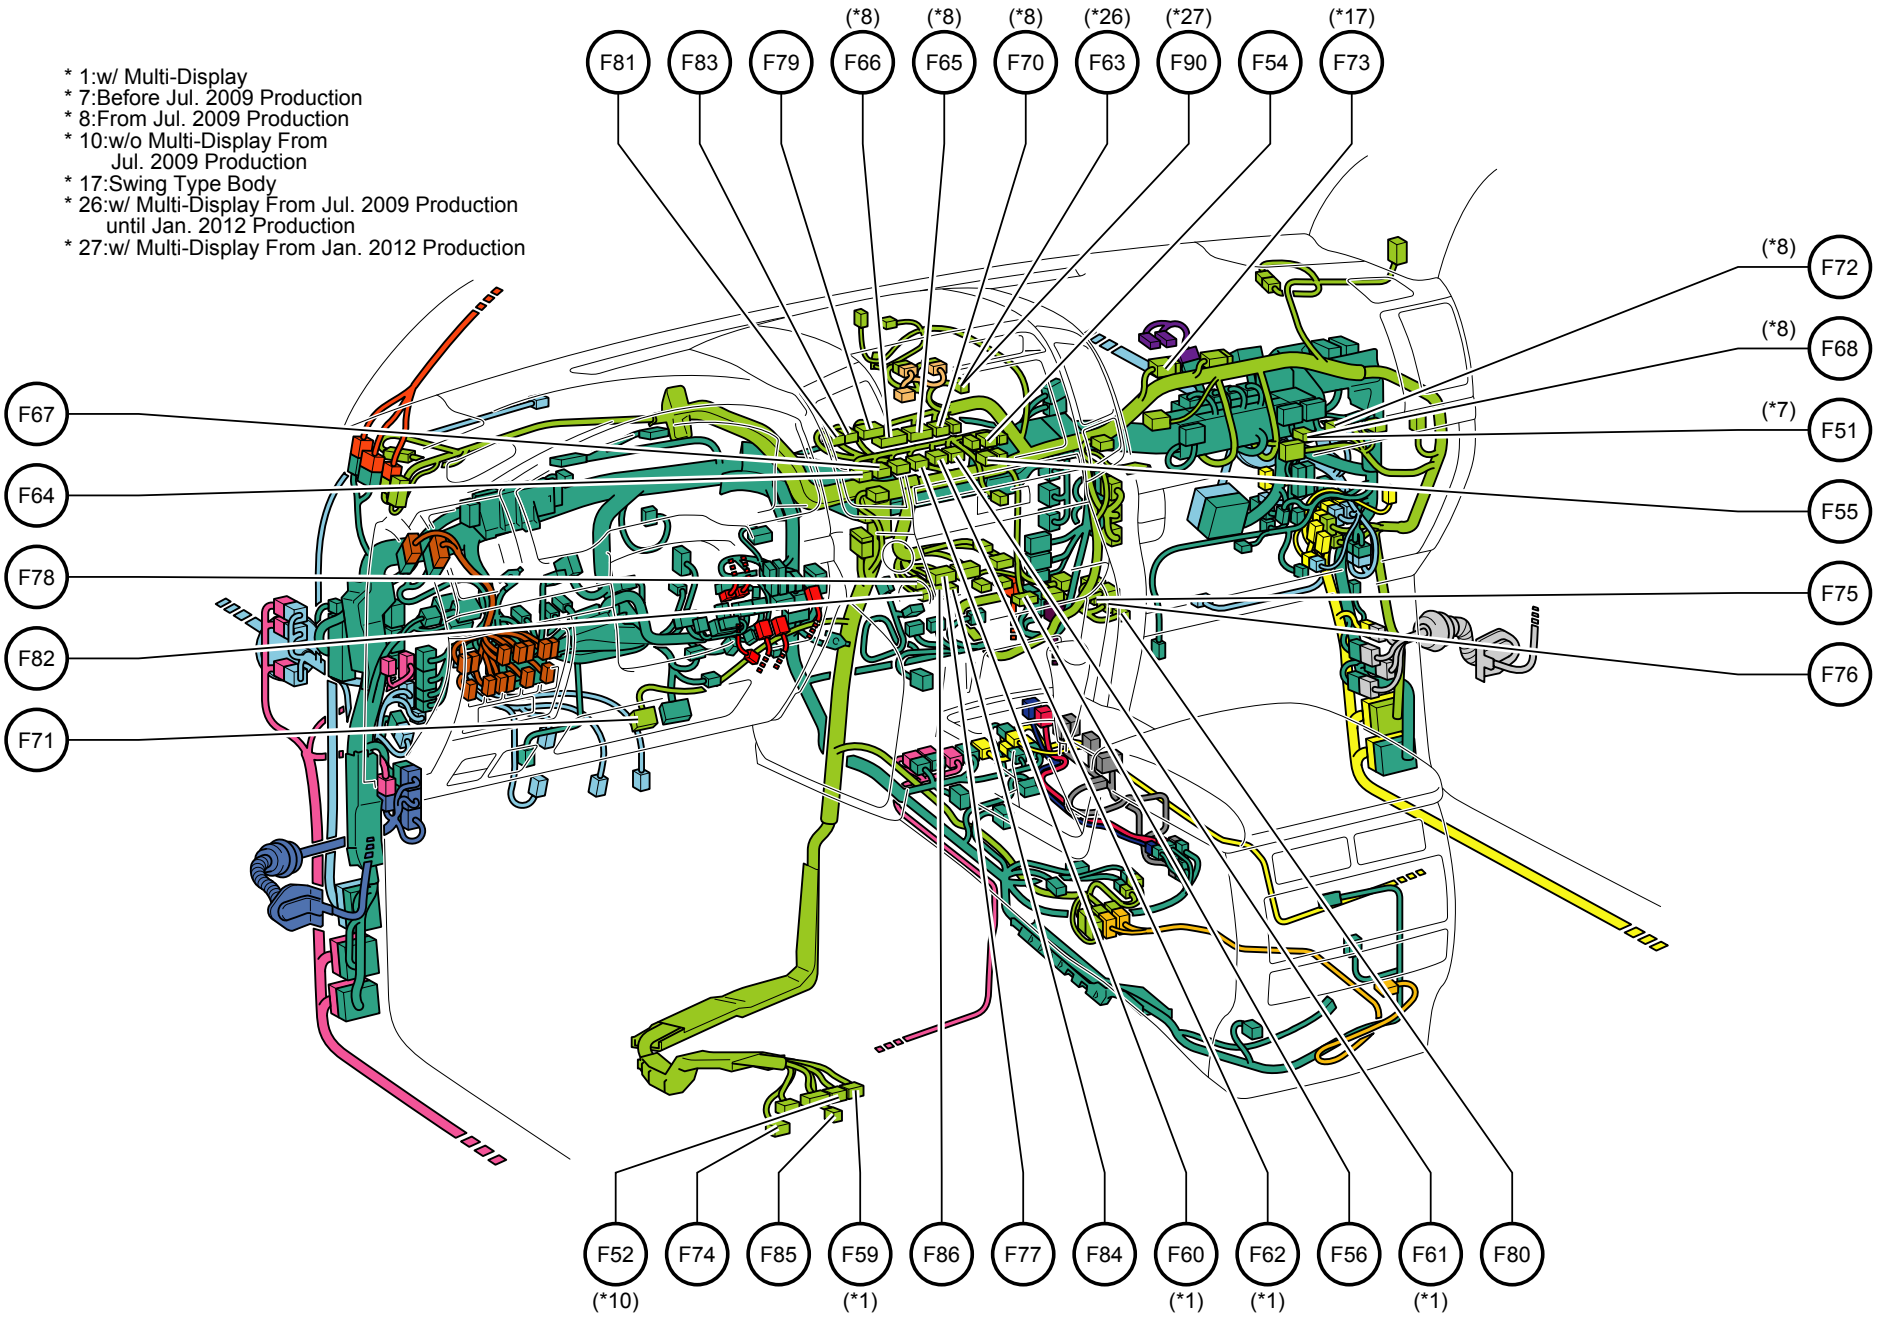



* 1:w/ Multi-Display
* 7:Before Jul. 2009 Production
* 8:From Jul. 2009 Production
* 10:w/o Multi-Display From Jul. 2009 Production
* 17:Swing Type Body
* 26:w/ Multi-Display From Jul. 2009 Production until Jan. 2012 Production
* 27:w/ Multi-Display From Jan. 2012 Production
F81
F83
F79
(*8) F66
(*8) F65
(*8) F70
(*26) F63
(*27) F90
F54
(*17) F73
(*8) F72
(*8) F68
(*7) F51
F55
F75
F76
F67
F64
F78
F82
F71
F52 (*10)
F74
F85
F59 (*1)
F86
F77
F84
F60 (*1)
F62 (*1)
F56
F61 (*1)
F80

F 51 Navigation ECU
F 52 Stereo Component Amplifier Assembly
F 54 Radio Receiver Assembly
F 55 Radio Receiver Assembly
F 56 Radio Receiver Assembly
F 59 Stereo Component Amplifier Assembly
F 60 Display & Navigation Module Display
F 61 Display & Navigation Module Display
F 62 Display & Navigation Module Display
F 63 Display & Navigation Module Display
F 64 Display & Navigation Module Display
F 65 Display & Navigation Module Display
F 66 Display & Navigation Module Display
F 67 Display & Navigation Module Display
F 68 Multi-Media Module Navigation Assembly
F 70 Display & Navigation Module Display
F 71 IEEE Connector
F 72 Multi-Media Module Navigation Assembly
F 73 Junction Connector
F 74 Stereo Component Amplifier Assembly
F 75 Parking Assist ECU
F 76 Parking Assist ECU
F 77 Multi-Media Module Receiver Assembly
F 78 Multi-Media Module Receiver Assembly
F 79 Multi-Display Assembly
F 80 Multi-Display Assembly
F 81 Parking Assist ECU
F 82 Multi-Media Module Receiver Assembly
F 83 Multi-Display Assembly
F 84 Multi-Media Module Receiver Assembly
F 85 Stereo Component Amplifier Assembly
F 86 Multi-Media Module Receiver Assembly
F 90 Multi-Display Assembly


F 51
White




F 52
White




F 54
White

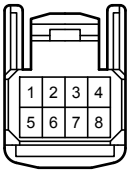


F 55
White

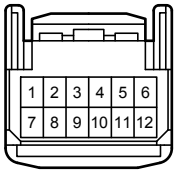


F 56
White

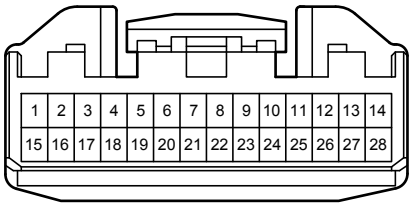


F 59
White

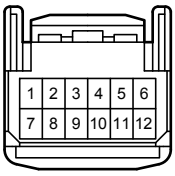


F 60
White

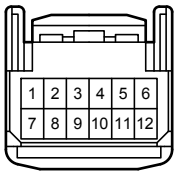


F 61
White

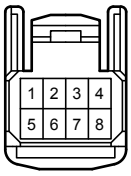


F 62
Blue




F 63
White

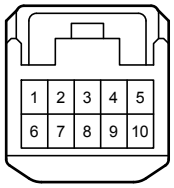


F 64
White

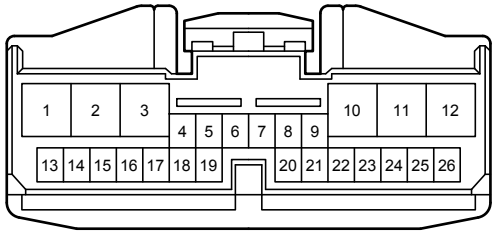


F 65
Black

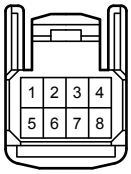


F 66
White

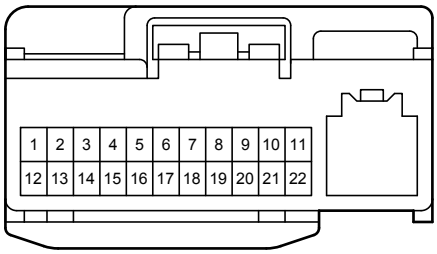

F 67
White




F 68
White

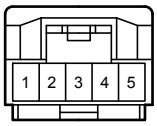

F 70
Gray




F 71
Gray

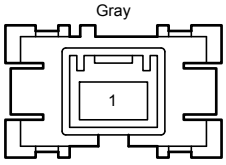


F 72
Gray




F 73
Blue

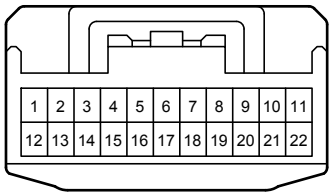


F 74
White

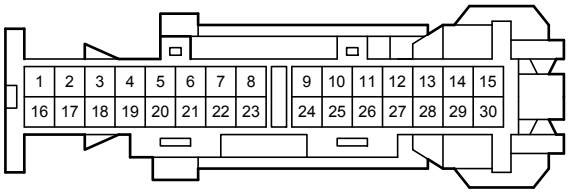


F 75
White

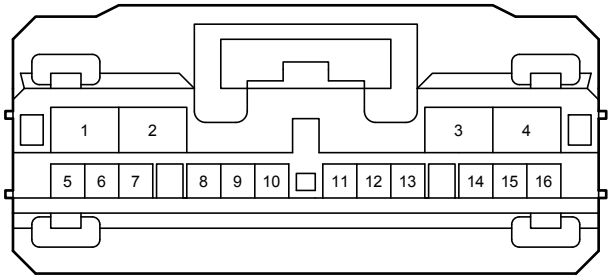


F 76
Black

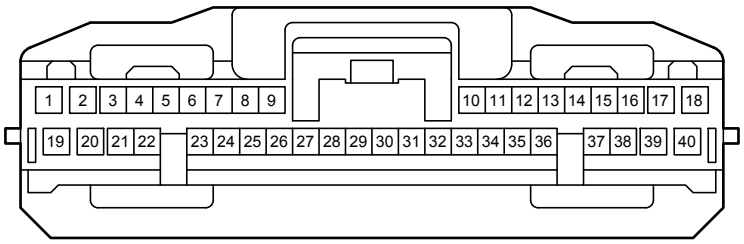


F 77
White

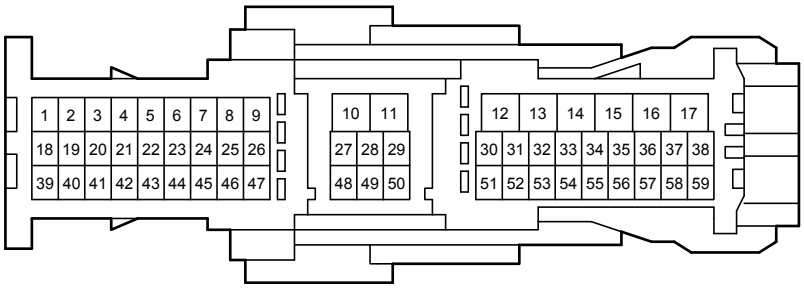


F 78
White

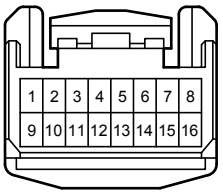

F 79
White

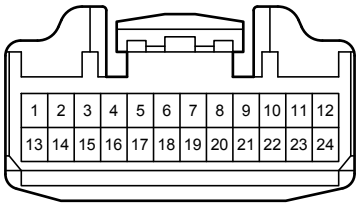


F 80
Gray

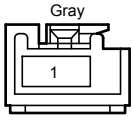

F 81
White




F 82
Blue




F 83
Blue




F 84
White

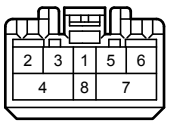


F 85
White

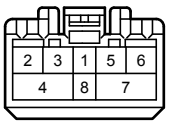


F 86
Gray

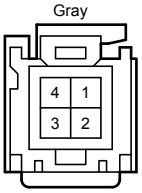

F 90
White

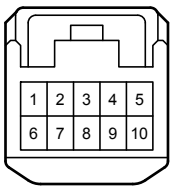

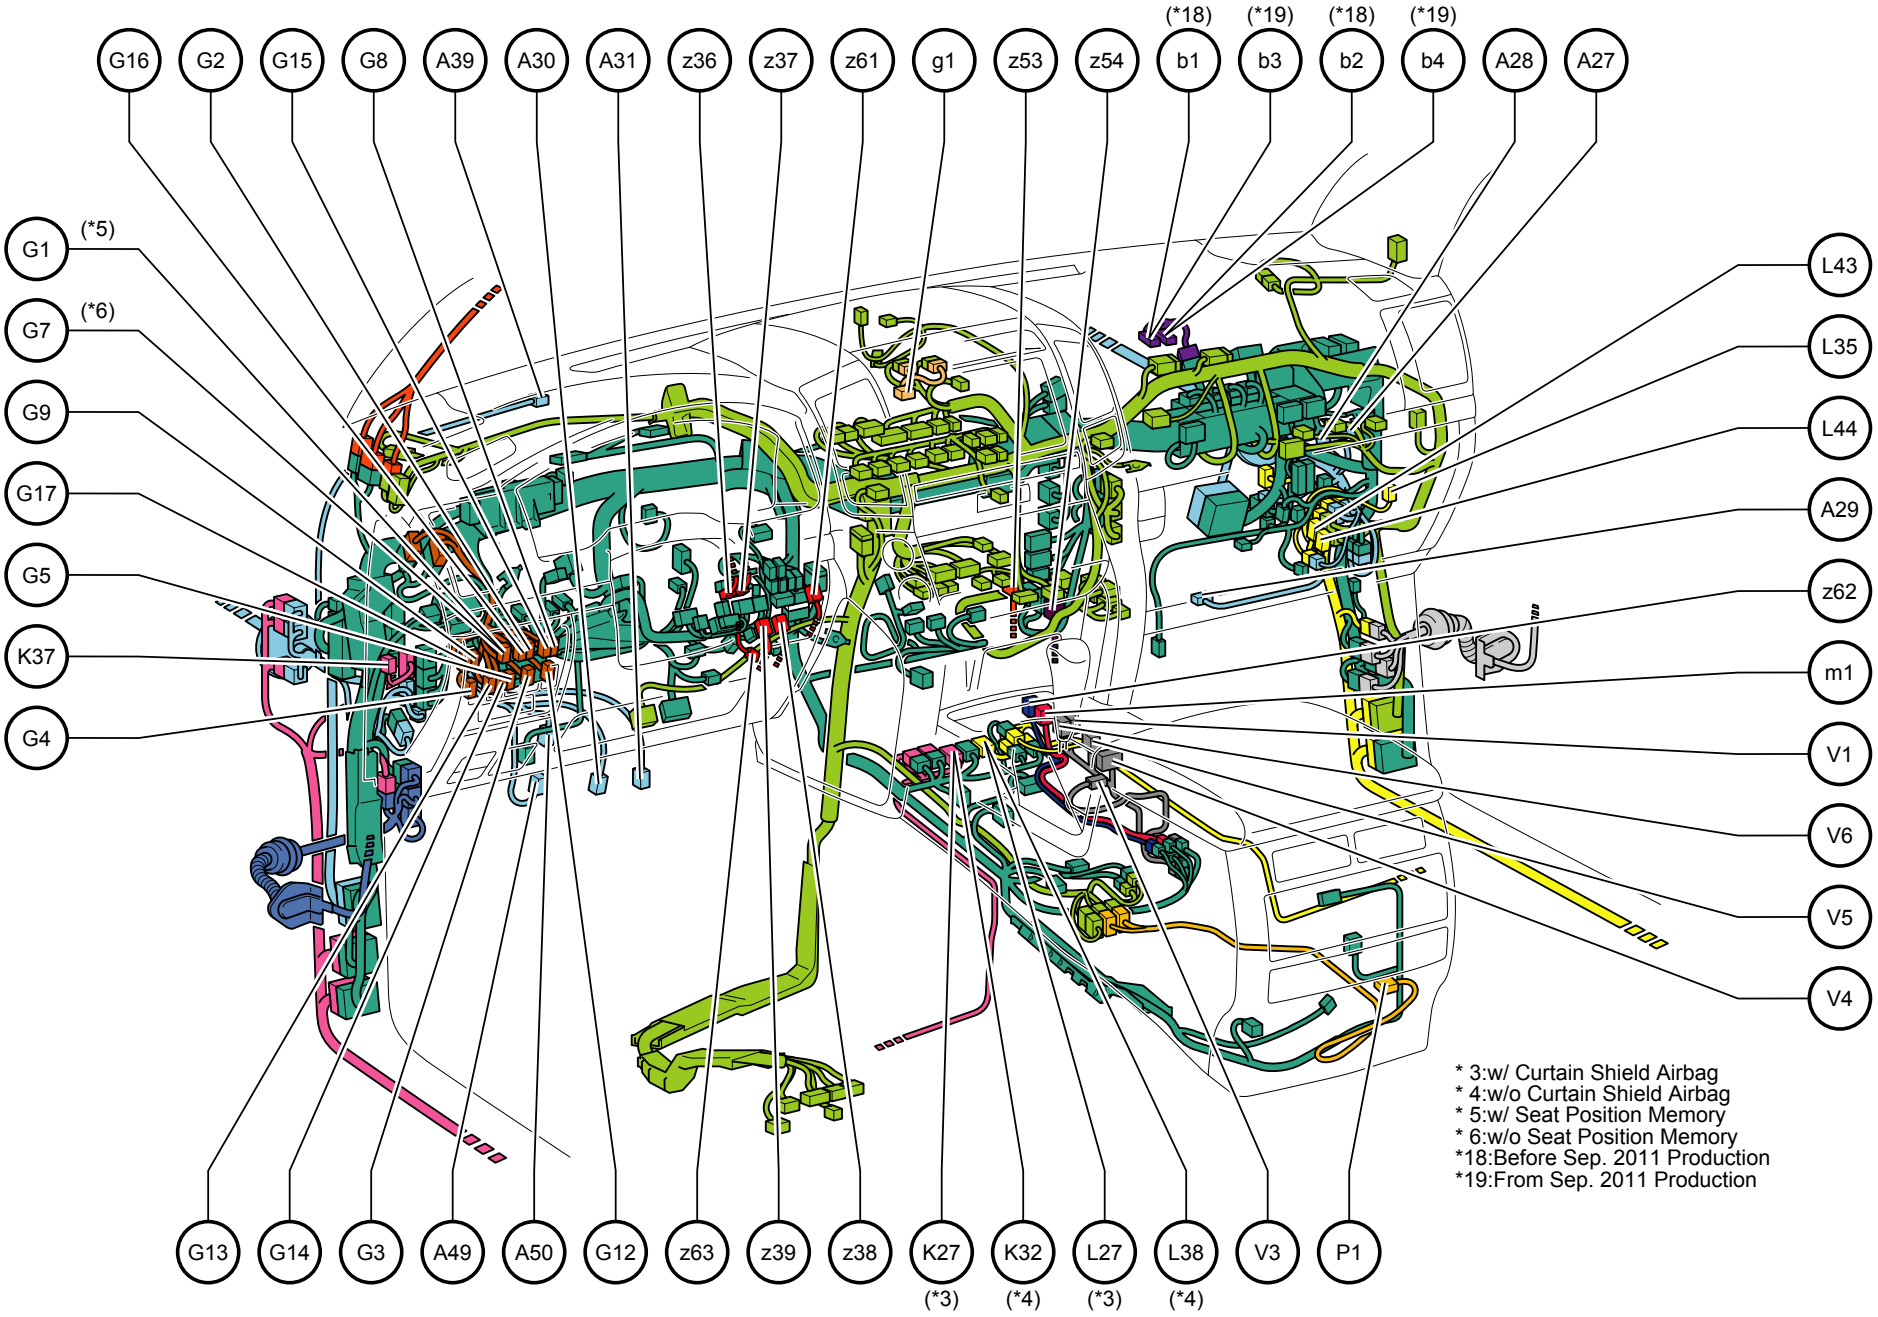
G16
G2
G15
G8
A39
A30
A31
z36
z37
z61
g1
z53
z54
(*18)
b1
(*19)
b3
(*18)
b2
(*19)
b4
A28
A27
G1
(*5)
G7
(*6)
G9
G17
G5
K37
G4
L43
L35
L44
A29
z62
m1
V1
V6
V5
V4
G13
G14
G3
A49
A50
G12
z63
z39
z38
K27
(*3)
K32
(*4)
L27
(*3)
L38
(*4)
V3
P1
* 3:w/ Curtain Shield Airbag
* 4:w/o Curtain Shield Airbag
* 5:w/ Seat Position Memory
* 6:w/o Seat Position Memory
*18:Before Sep. 2011 Production
*19:From Sep. 2011 Production

A 27 Four Wheel Drive Control ECU
A 28 Four Wheel Drive Control ECU
A 29 Front Blower with Fan Motor Sub-Assembly
A 30 Stop Light Switch Assembly
A 31 Accelerator Pedal Sensor Assembly
A 39 Stop Light Control Relay Assembly
A 49 Clutch Start Switch Assembly
A 50 Clutch Switch Assembly

G 1 Outer Mirror Switch Assembly
G 2 Outer Mirror Switch Assembly
G 3 Curtain Airbag Cutoff Switch
G 4 Headlight Cleaner Switch Assembly
G 5 Back Sonar or Clearance Sonar Switch Assembly
G 7 Outer Mirror Switch Assembly
G 8 Idle Up Switch
G 9 Headlight Leveling Switch
G 12 Center Differential Lock Switch
G 13 VSC Off Switch
G 14 Steering Heater Switch
G 15 Back Sonar or Clearance Sonar Switch Assembly
G 16 Outer Mirror Switch Assembly
G 17 Headlight Leveling Switch

K 27 Center Airbag Sensor Assembly
K 32 Center Airbag Sensor Assembly
K 37 Acceleration Sensor LH

L 27 Center Airbag Sensor Assembly
L 35 Acceleration Sensor RH
L 38 Center Airbag Sensor Assembly
L 43 Option Connector (Parking Assist-Sensor)
L 44 Option Connector (Parking Assist-Sensor)

P 1 Headphone Terminal

V 1 Seat Heater Switch
V 3 Front Indoor Electrical Key Oscillator
V 4 Suspension Control Switch
V 5 Suspension Control Switch
V 6 Seat Heater Switch

b 1 Front Passenger Side Squib Circuit
b 2 Front Passenger Side Squib Circuit
b 3 Front Passenger Side Squib Circuit
b 4 Front Passenger Side Squib Circuit


g 1 Clock Assembly

m 1 No.1 Stereo Jack Adapter Assembly


z 36 Spiral Cable Sub-Assembly , Steering Pad Switch
z 37 Cruise Control Main Switch , Spiral Cable Sub-Assembly
z 38 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
z 39 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z 53 A/C Amplifier Assembly , A/C Blower Assembly
z 54 A/C Amplifier Assembly , A/C Blower Assembly
z 61 Cruise Control Main Switch , Spiral Cable Sub-Assembly
z 62 No.1 Stereo Jack Adapter Assembly

z 63 Steering Wheel Heater Control Assembly


A 27
Black

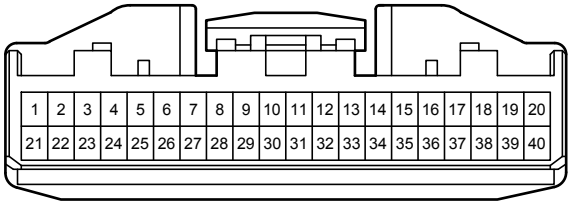


A 28
Black

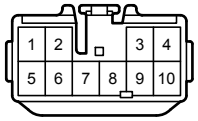


A 29
White

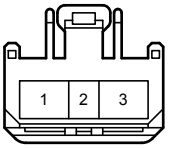


A 30
Gray




A 31
Black

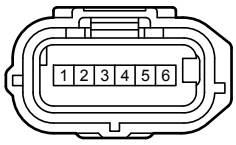


A 39
Black




A 49
Black




A 50
White




G 1
Black

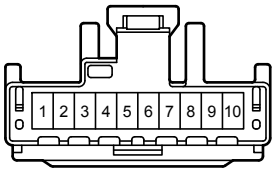


G 2
Black

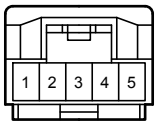


G 3
Gray

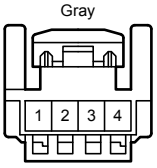


G 4
Black

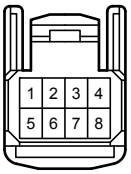


G 5
Black

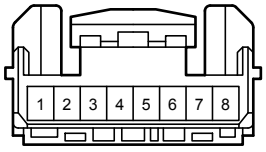


G 7
White

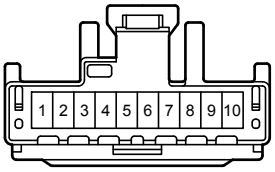


G 8
Black

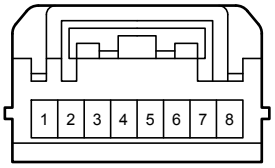


G 9
White




G 12
White

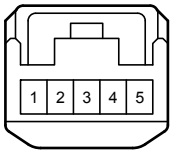


G 13
Black

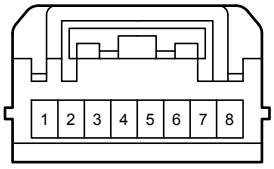


G 14
Black

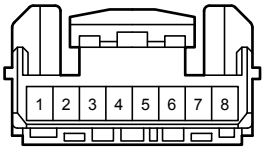


G 15
White

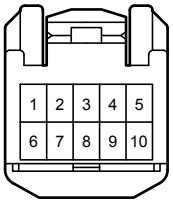


G 16
Black

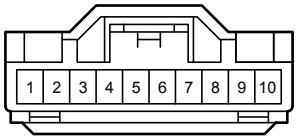


G 17
Black

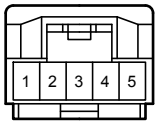


K 27
Yellow

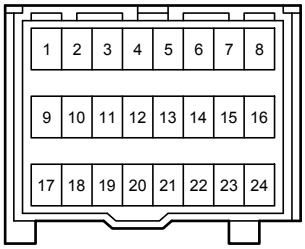


K 32
Yellow

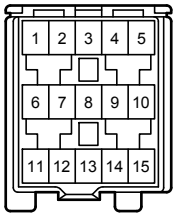


K 37
Black

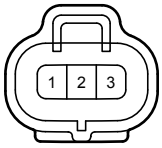


L 27
Yellow

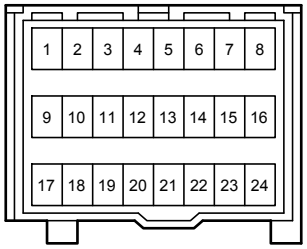


L 35
Black

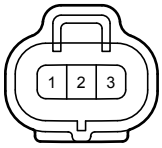


L 38
Yellow

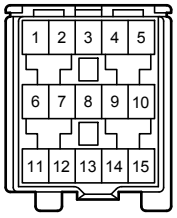


L 43
White

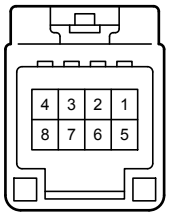


L 44
White

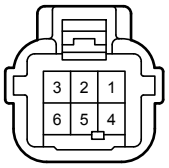


P 1
White

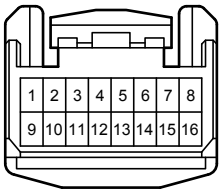


V 1
White

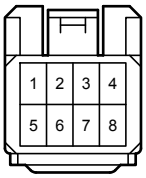


V 3
White

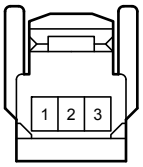

V 4
White

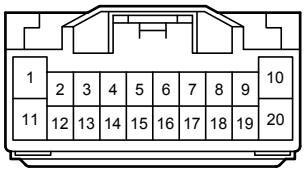


V 5
Gray

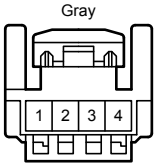


V 6
White




b 1
Orange




b 2
Black




b 3
Orange




b 4
Black




g 1
White

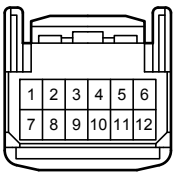


m 1
Black

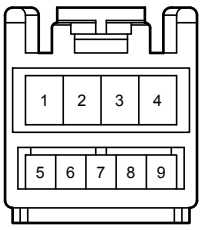


z 36
White

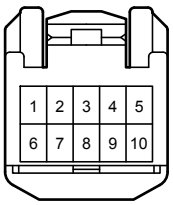


z 37
White




z 38
Black




z 39
Orange




z 53
White

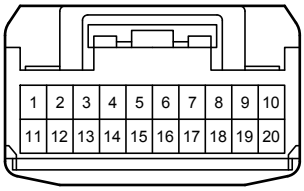


z 54
White

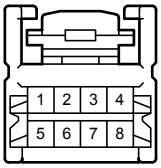


z 61
White

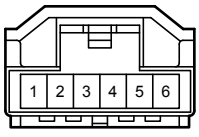


z 62
Black

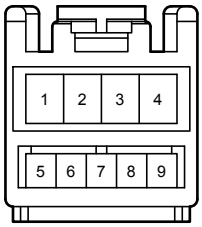


z 63
White




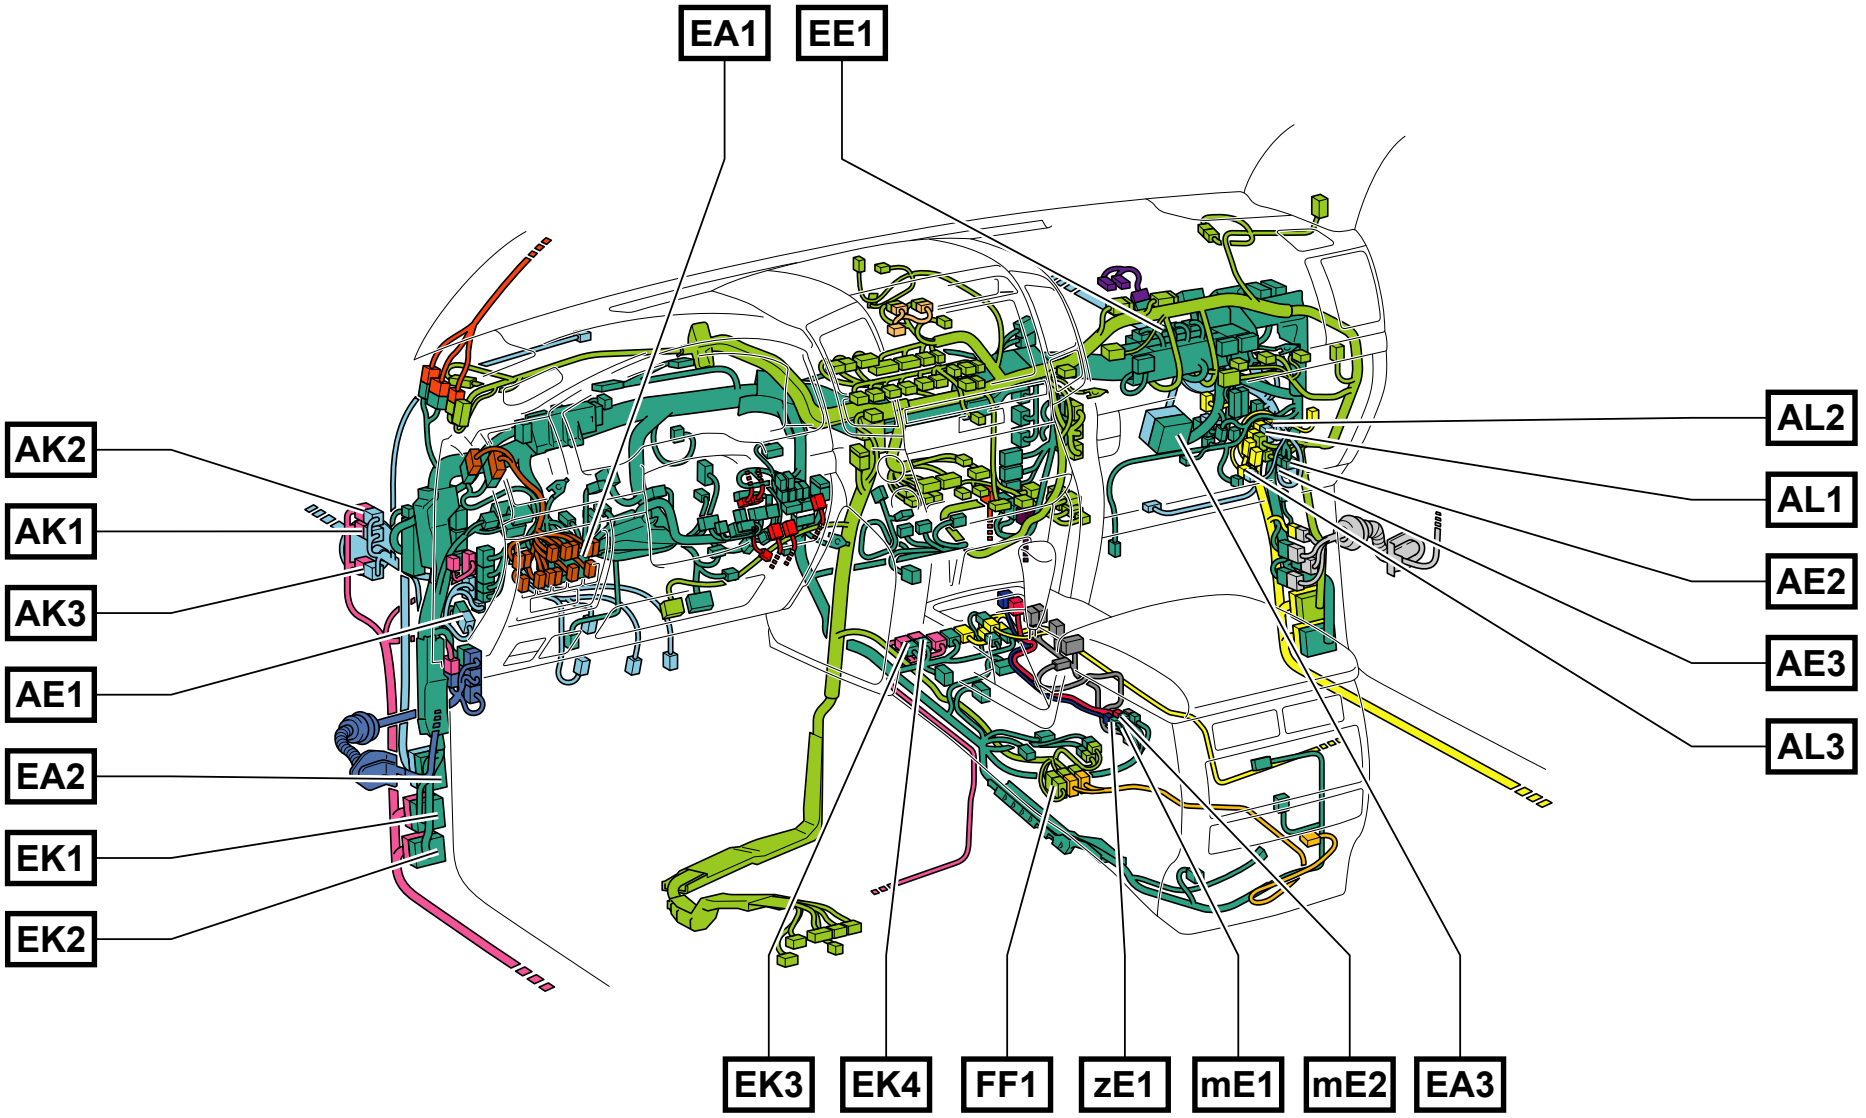
EA1
EE1
AK2
AK1
AK3
AE1
EA2
EK1
EK2
AL2
AL1
AE2
AE3
AL3
EK3
EK4
FF1
zE1
mE1
mE2
EA3


AE1
Yellow

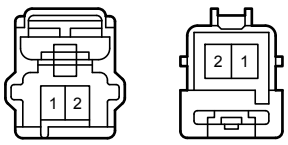


AE2
Yellow

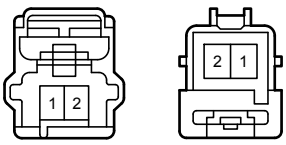


AE3
Gray

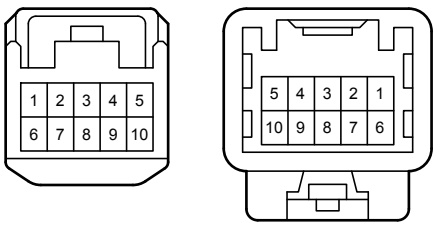


AK1
Blue

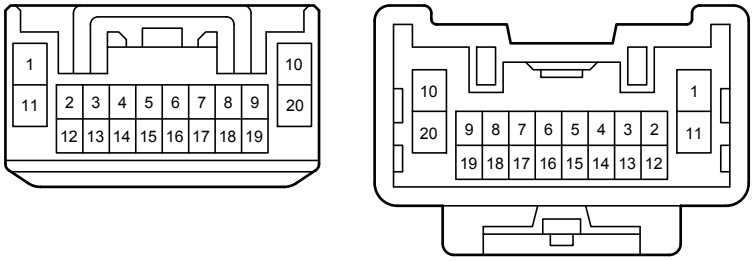


AK2
Gray

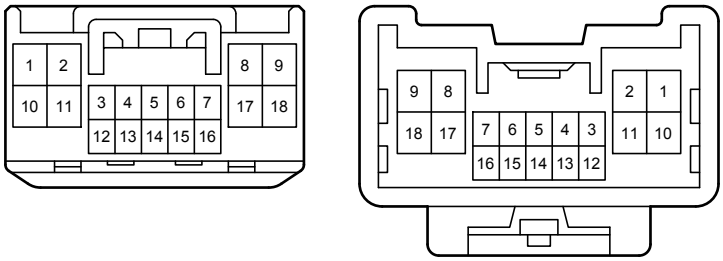


AK3
White

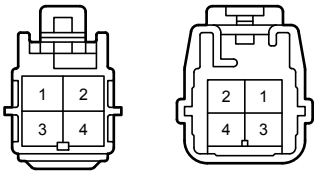


AL1
White

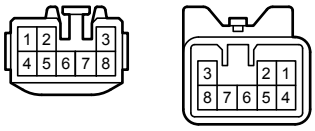

AL2
White

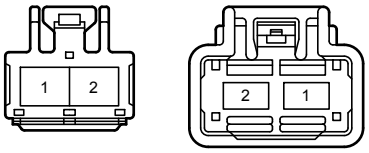


AL3
Blue

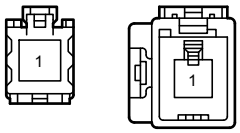

EA1


White

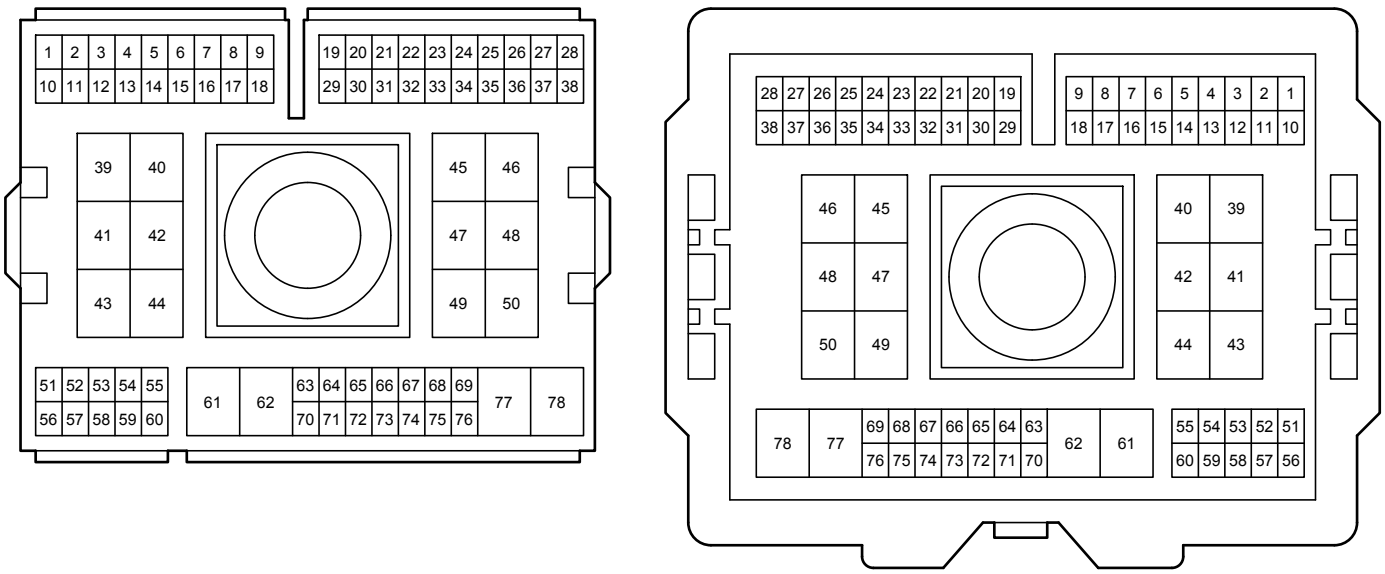

EA2


White

Gray

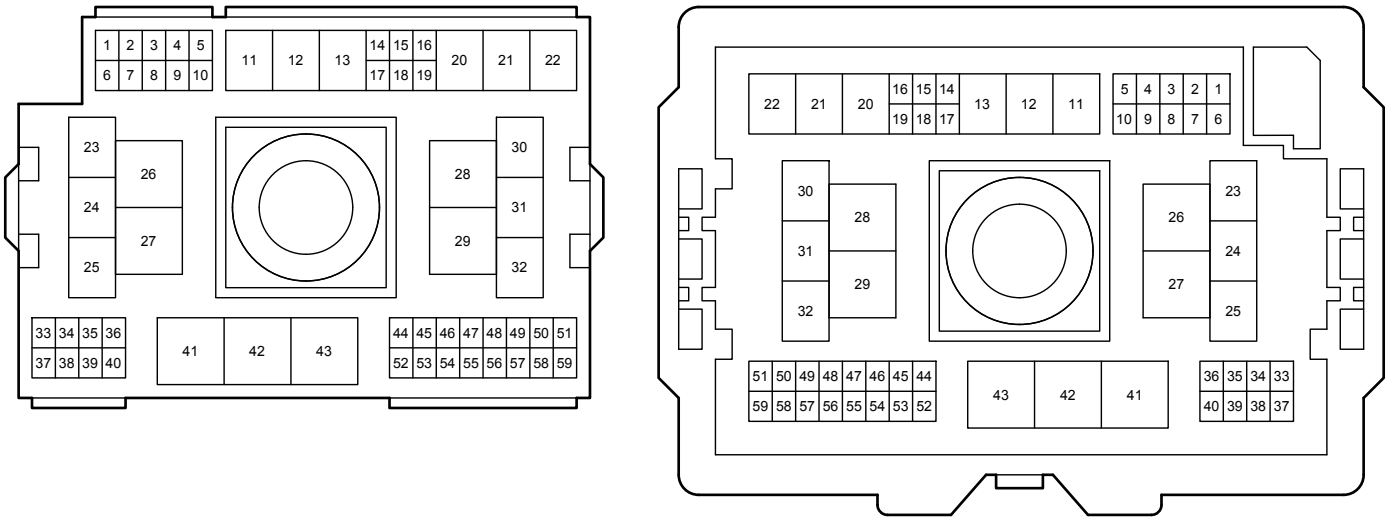


EA3

White

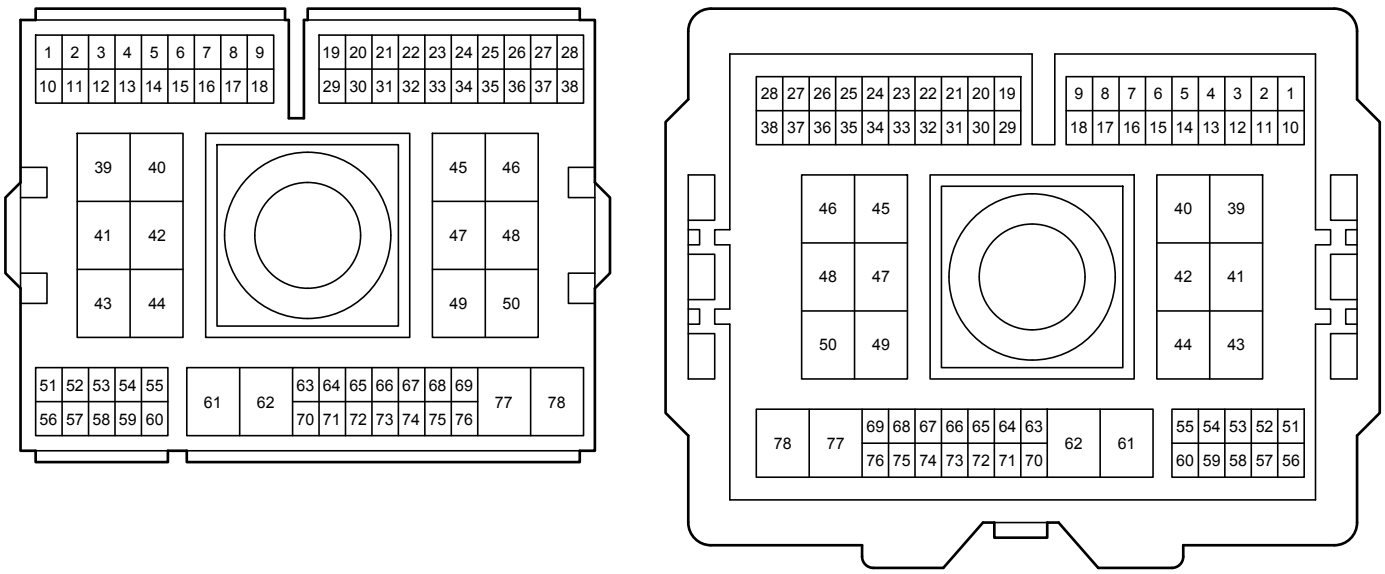

EE1


White

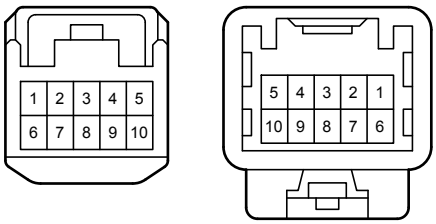


EK1

White


Blue

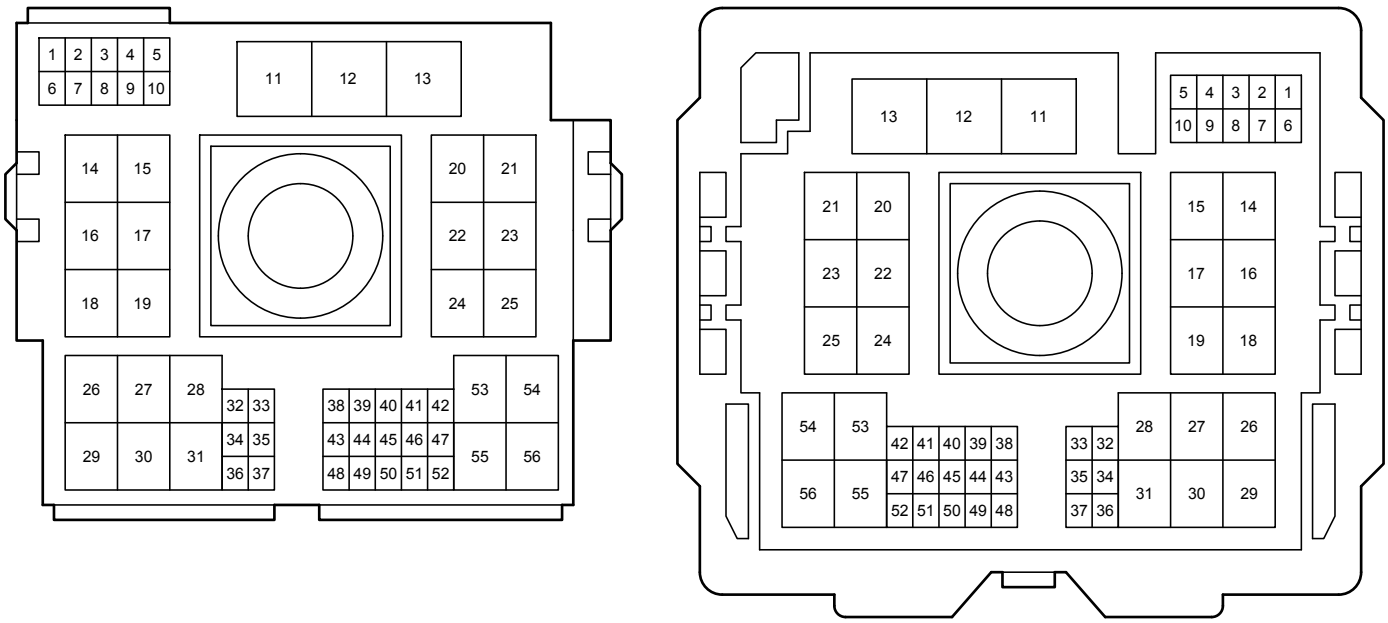


EK2
White

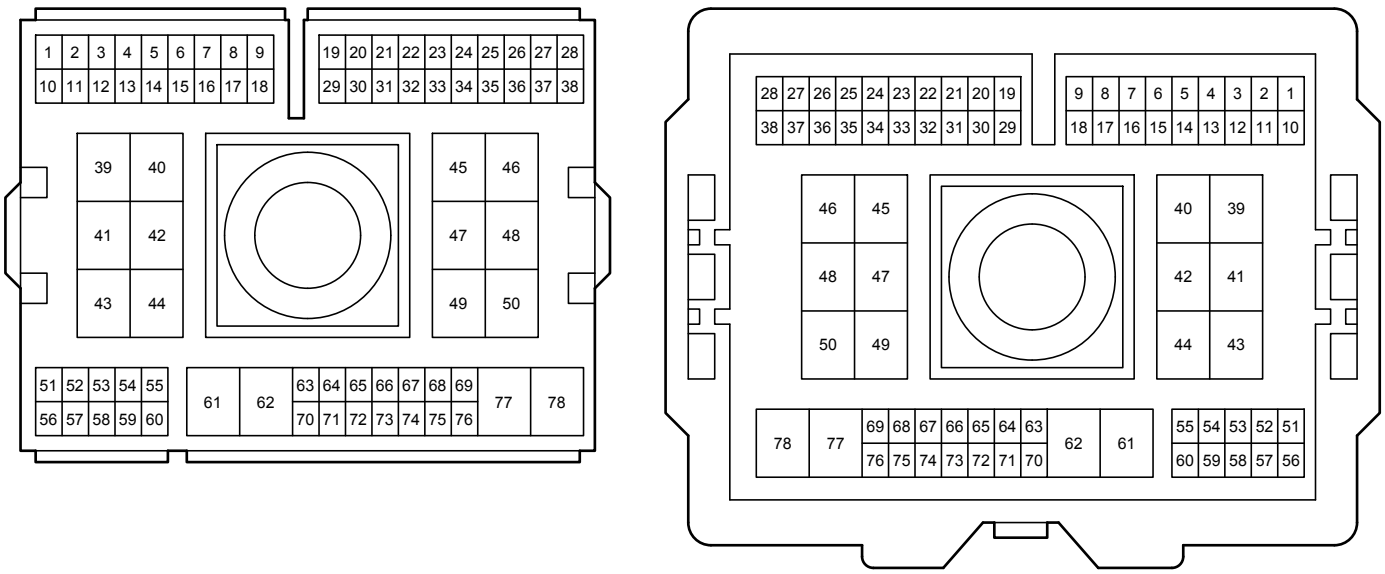


EK3
Black

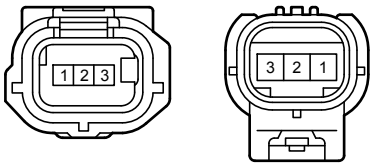


EK4
White

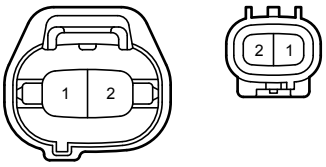


FF1
White

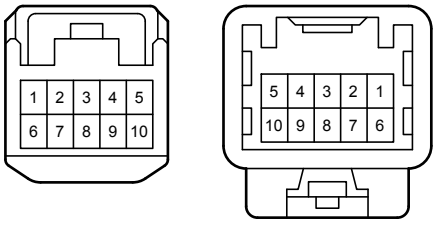


mE1
White

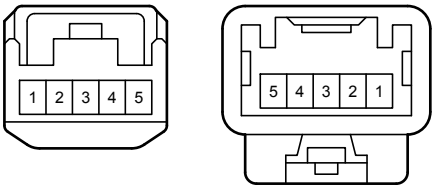


mE2
Brown

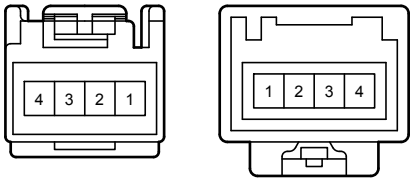


zE1
Brown

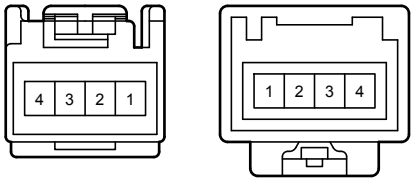


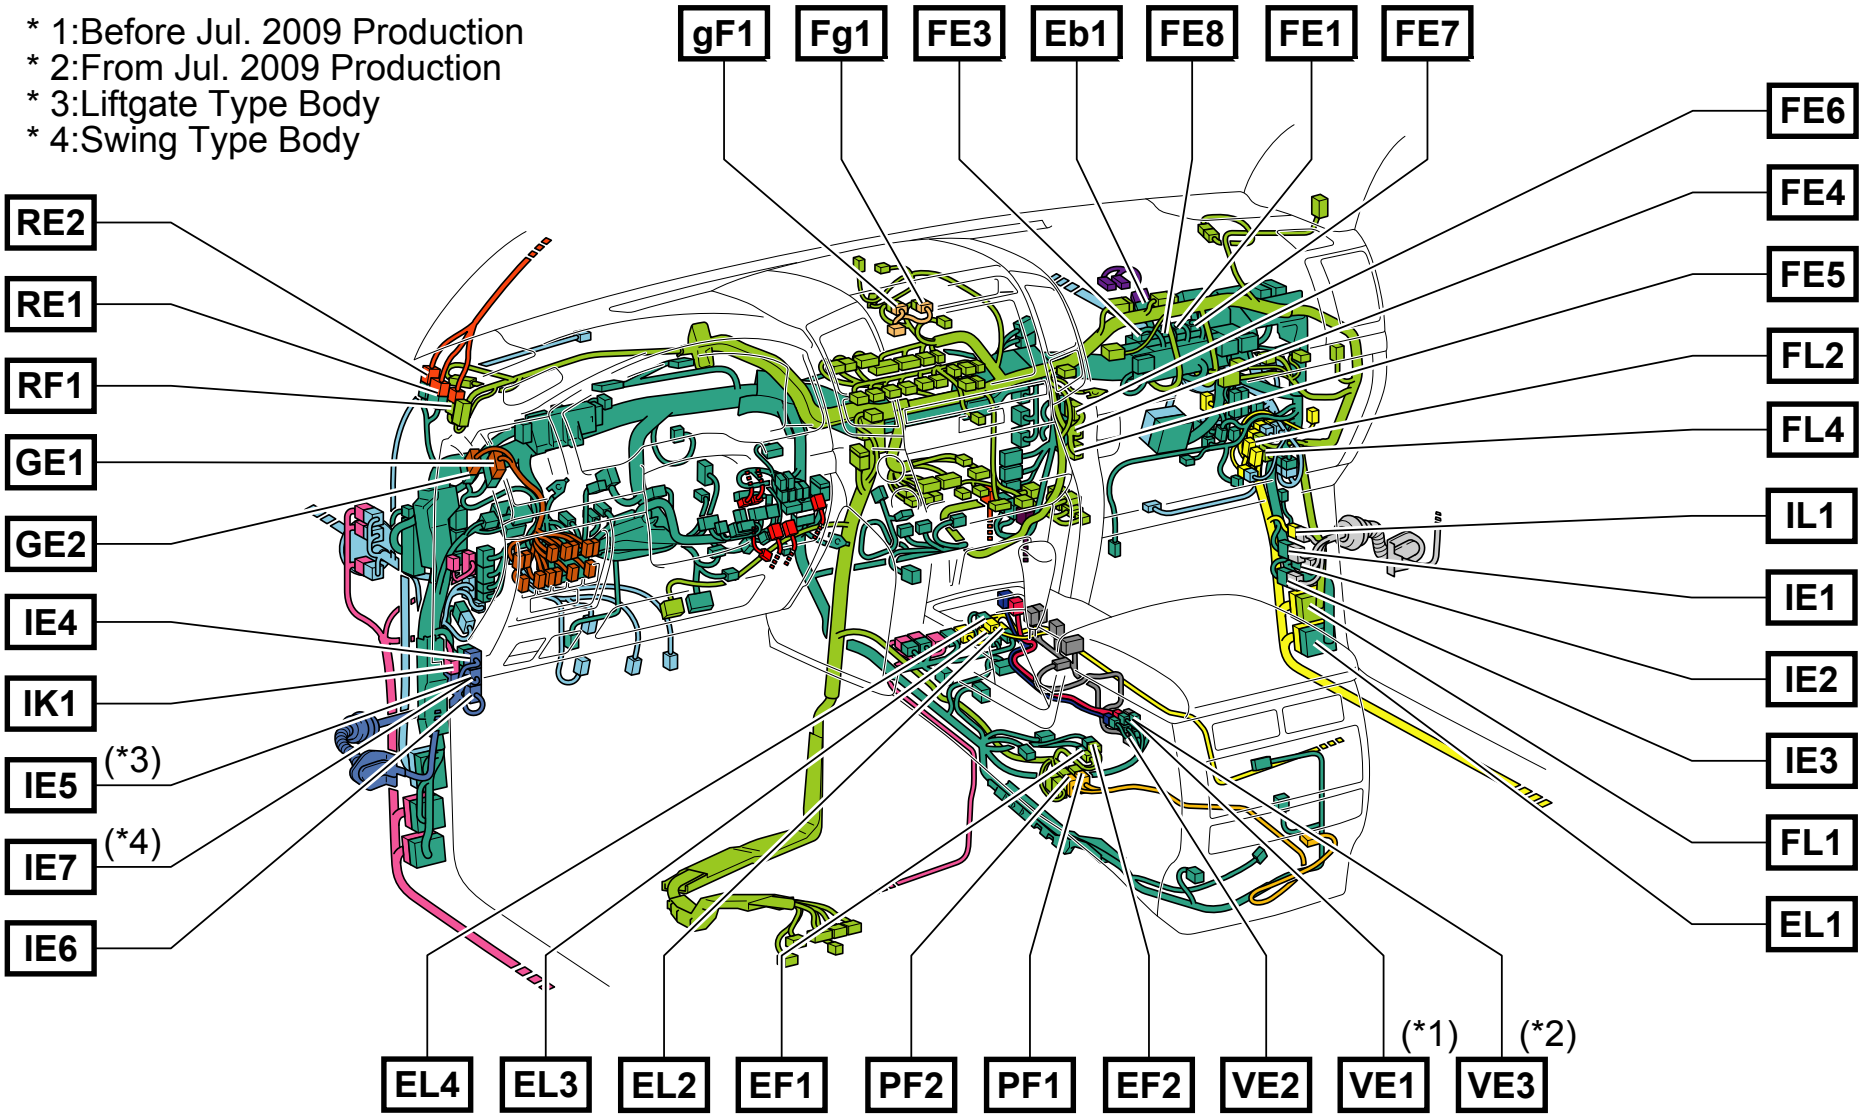
* 1:Before Jul. 2009 Production
* 2:From Jul. 2009 Production
* 3:Liftgate Type Body
* 4:Swing Type Body
gF1
Fg1
FE3
Eb1
FE8
FE1
FE7
FE6
FE4
FE5
FL2
FL4
IL1
IE1
IE2
IE3
FL1
EL1
RE2
RE1
RF1
GE1
GE2
IE4
IK1
IE5
(*3)
IE7
(*4)
IE6
EL4
EL3
EL2
EF1
PF2
PF1
EF2
VE2
VE1
(*1)
VE3
(*2)


EF1
White

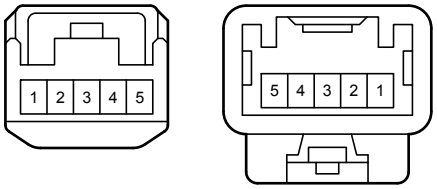


EF2
Brown

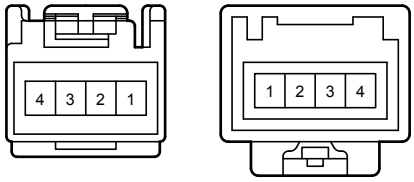


EL1
White

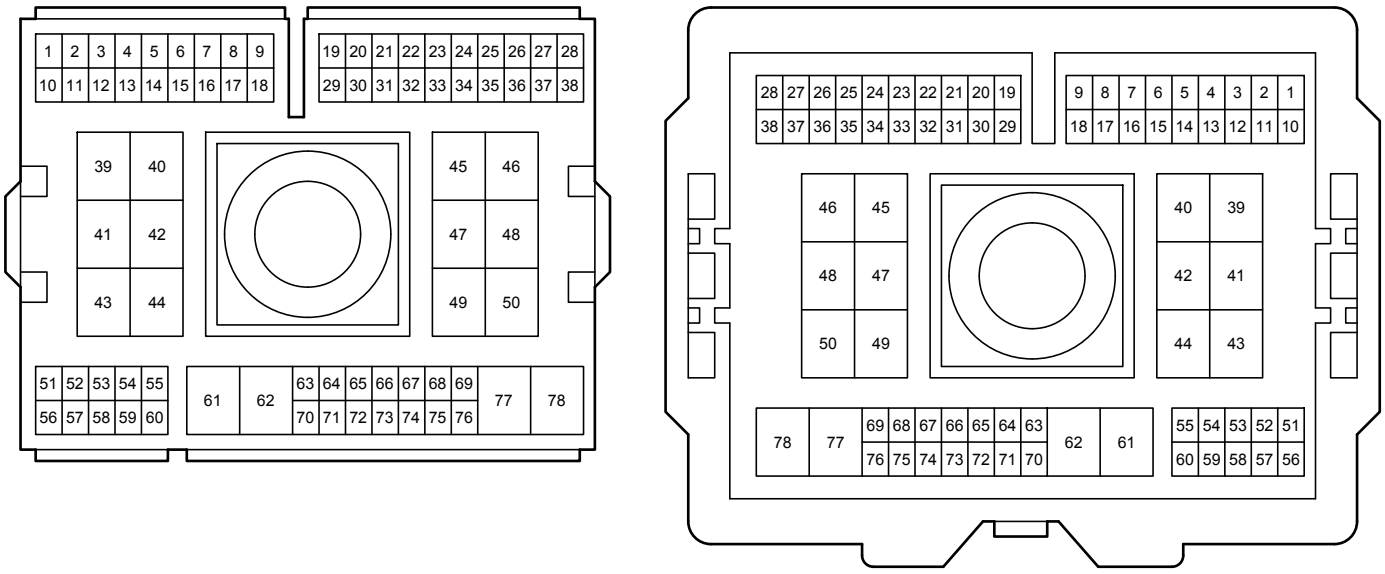


EL2
Gray

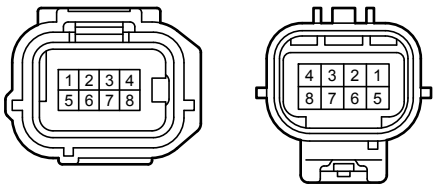


EL3
Brown

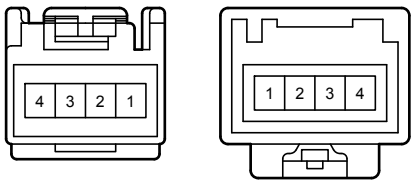


EL4
Brown

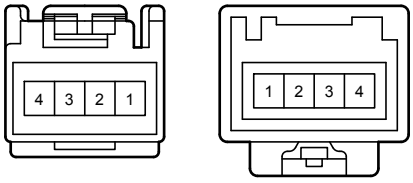


Eb1
Yellow

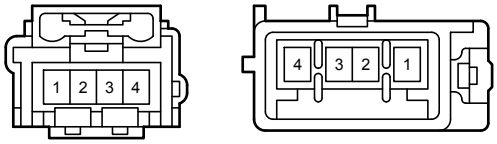


FE1
White

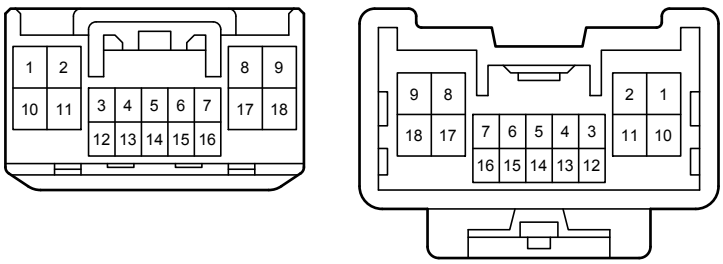


FE3
White

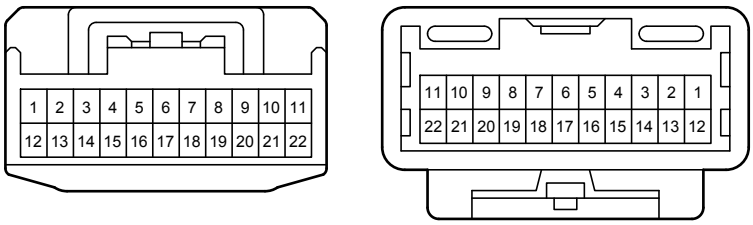


FE4
White

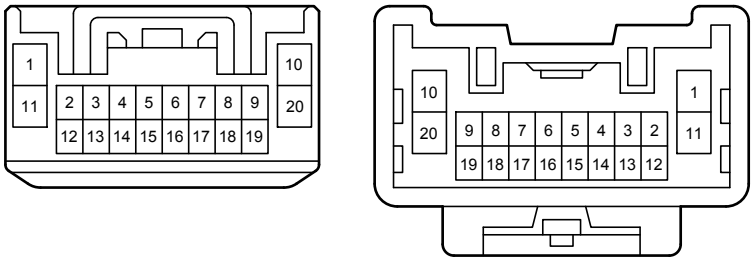


FE5
White

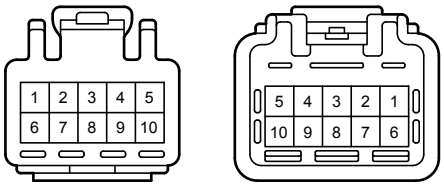


FE6
White

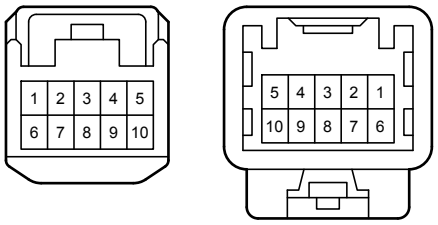


FE7
White

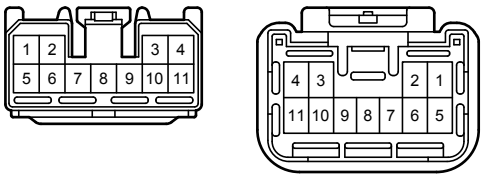


FE8
White

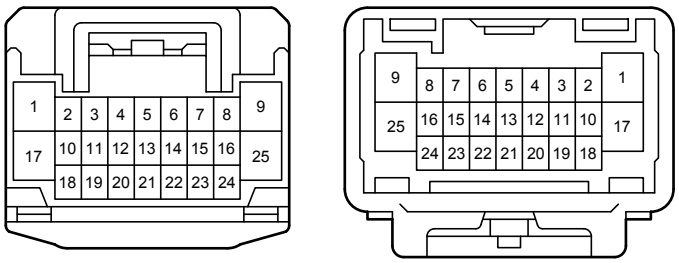


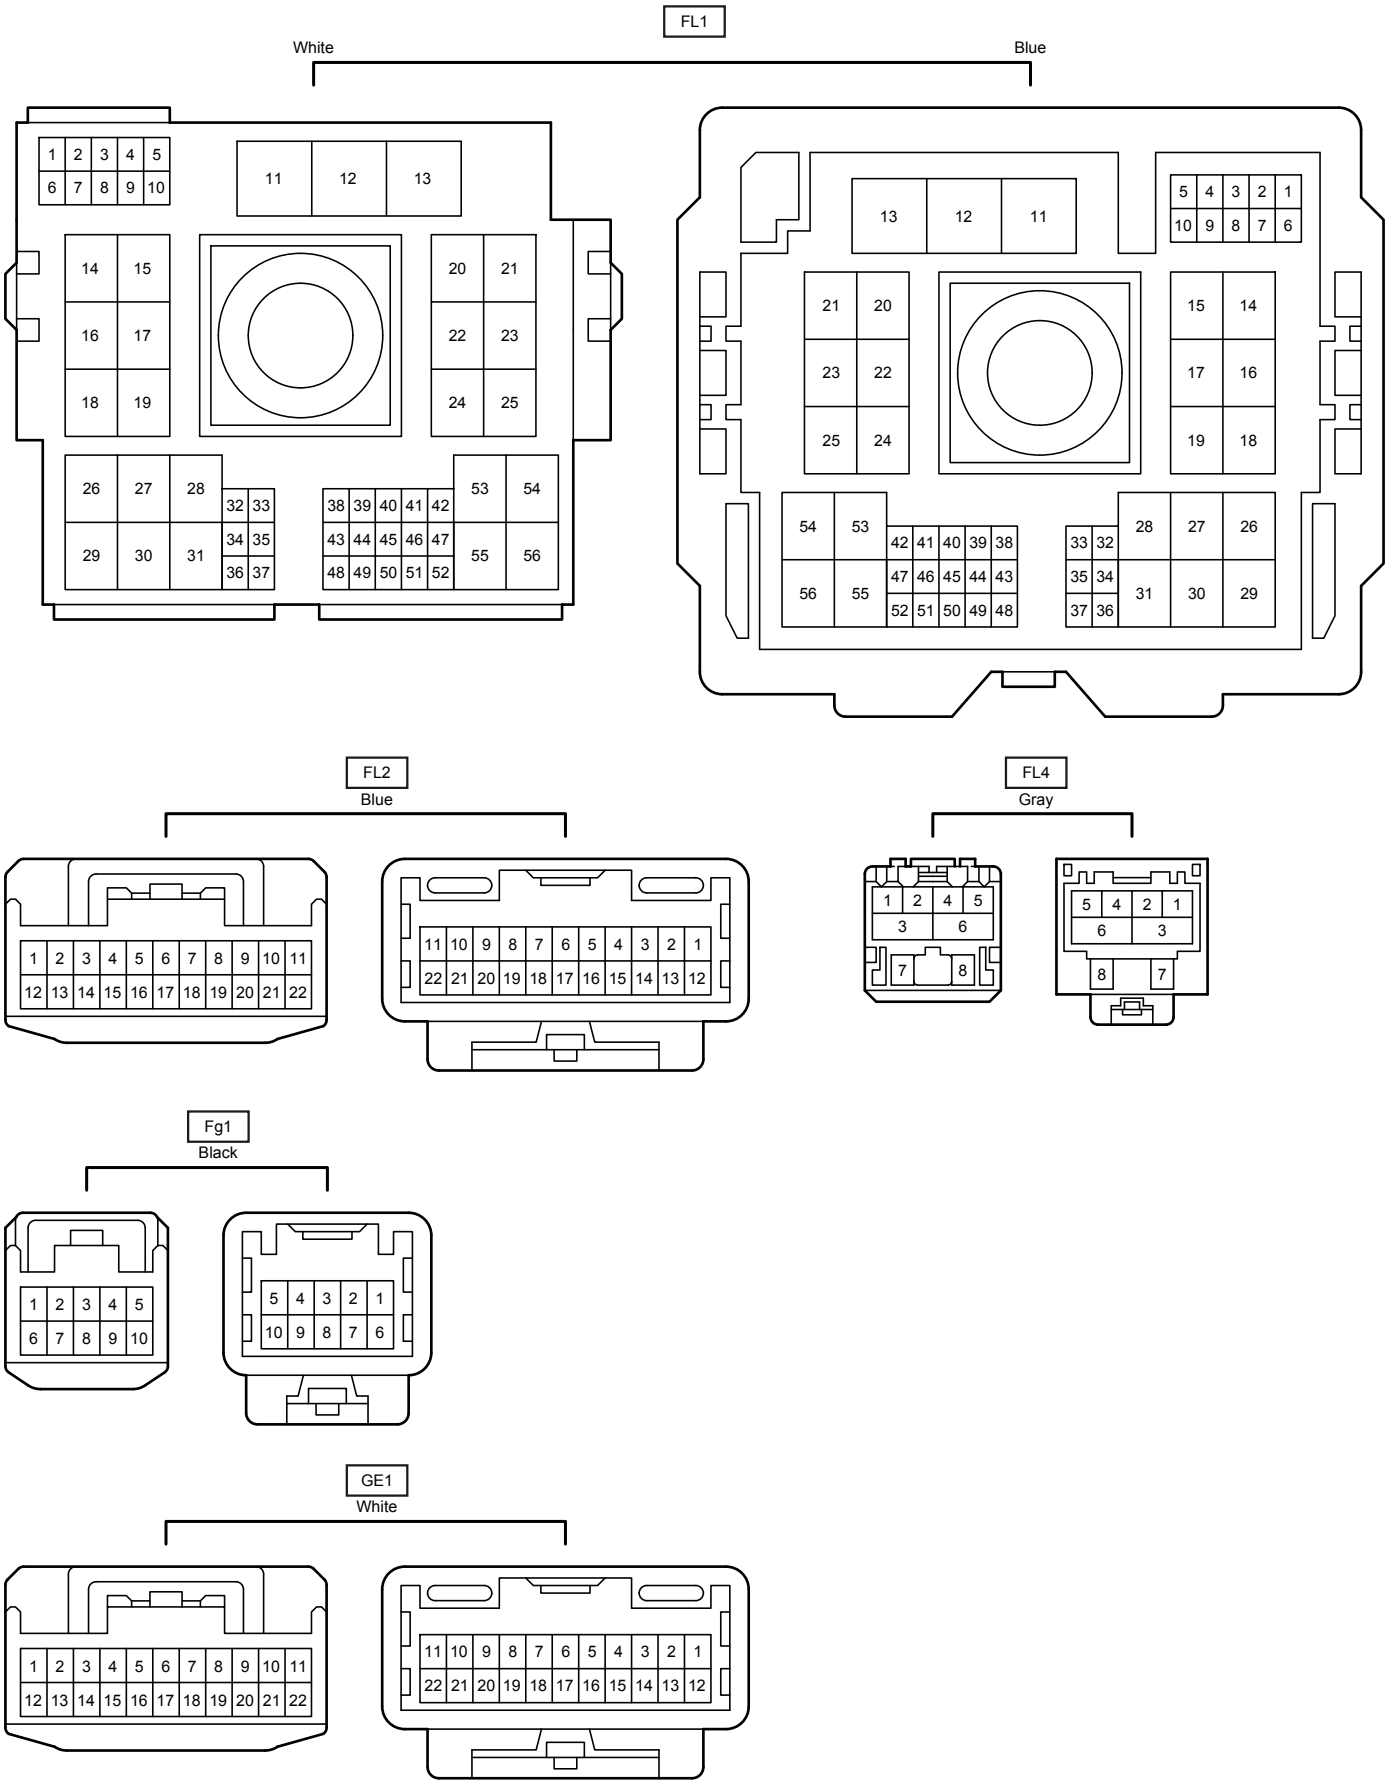
FL1
White
Blue
FL2
Blue
FL4
Gray
Fg1
Black
GE1
White


GE2
White

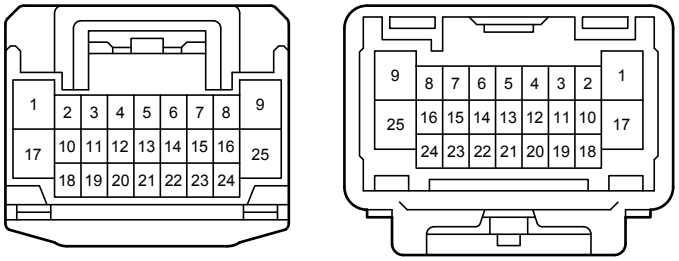


IE1
Gray

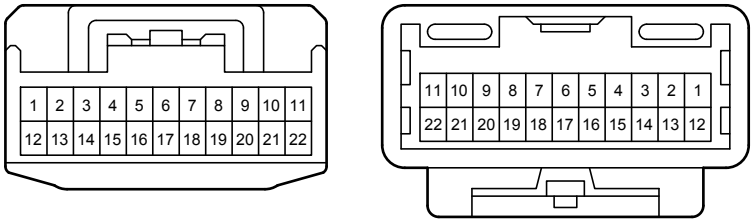


IE2
Blue

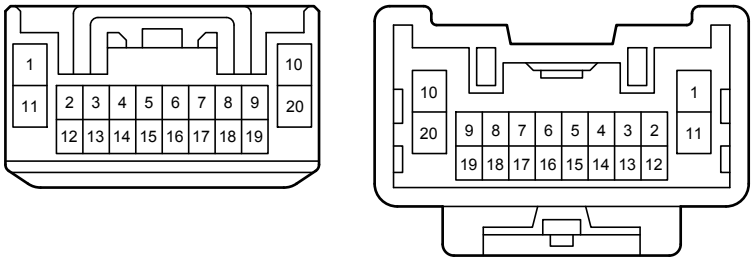


IE3
White

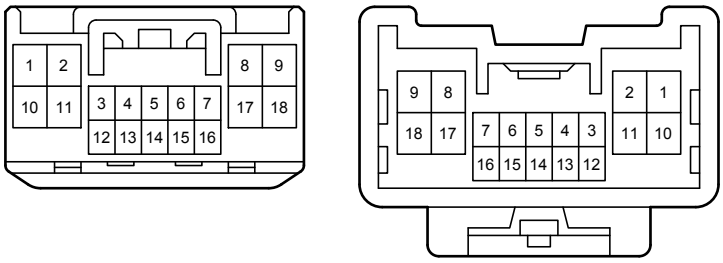


IE4
Gray

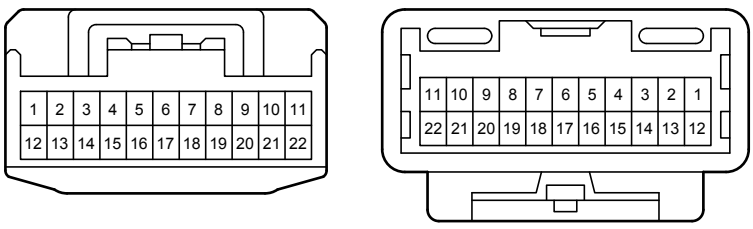


IE5
Blue

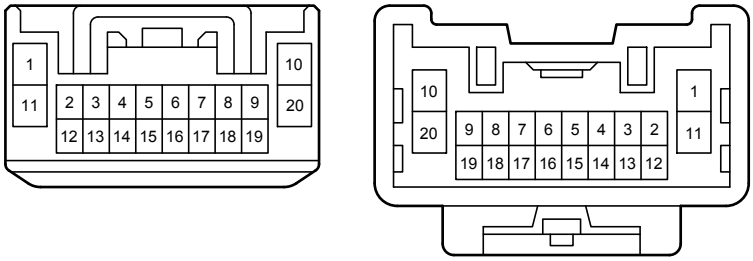


IE6
White

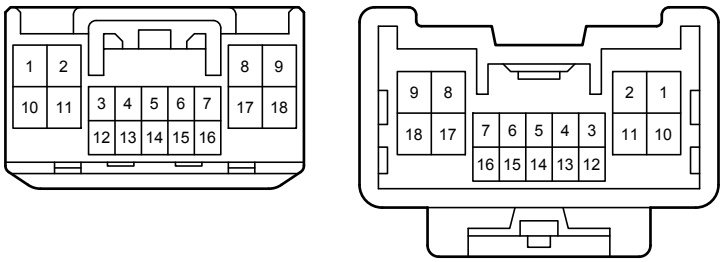


IE7
White

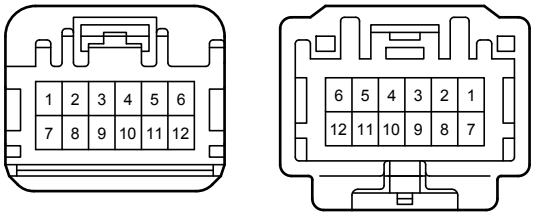


IK1
Yellow

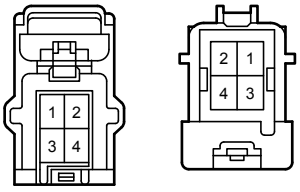


IL1
Yellow

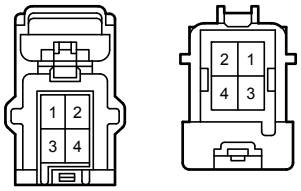


PF1
White

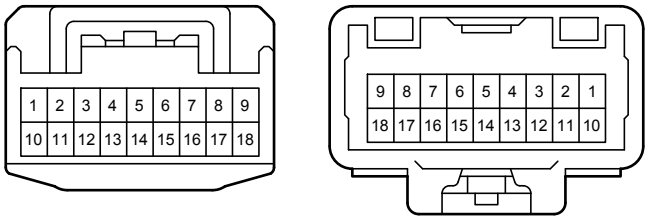


PF2
White

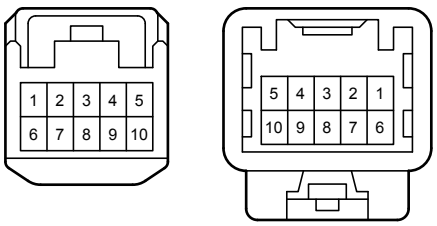


RE1
White

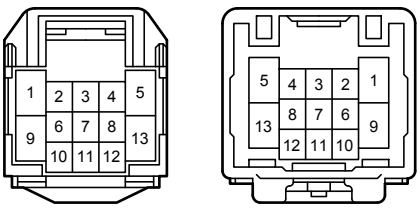


RE2
Blue

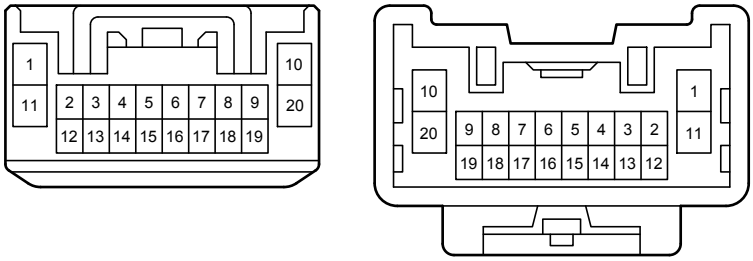


RF1
Gray

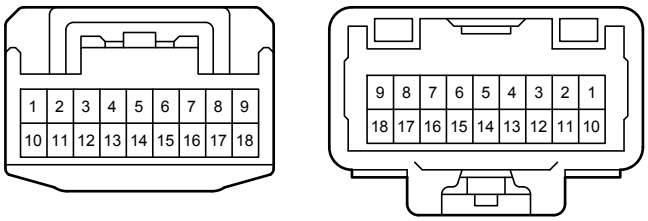


VE1
White

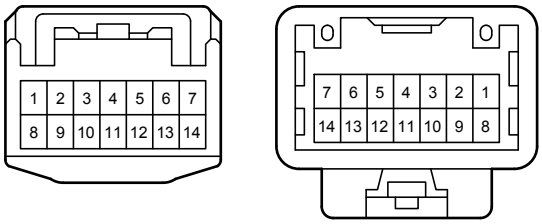


VE2
White

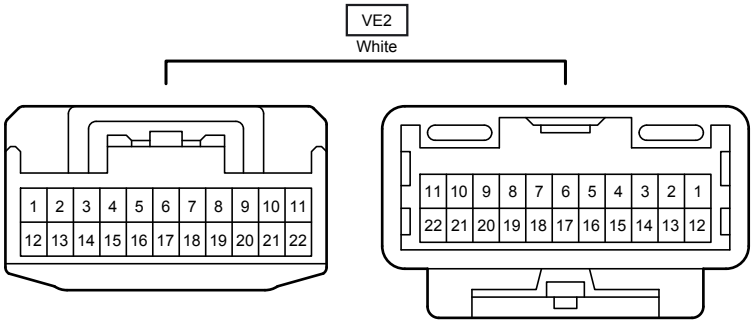



VE3
Gray

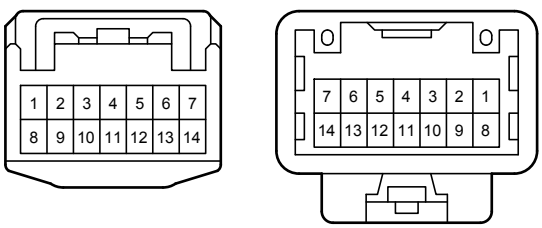

gF1
Black

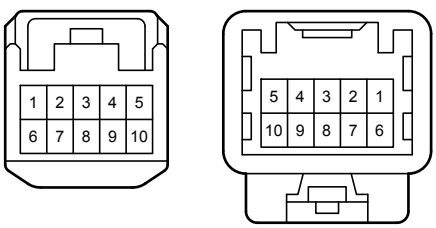


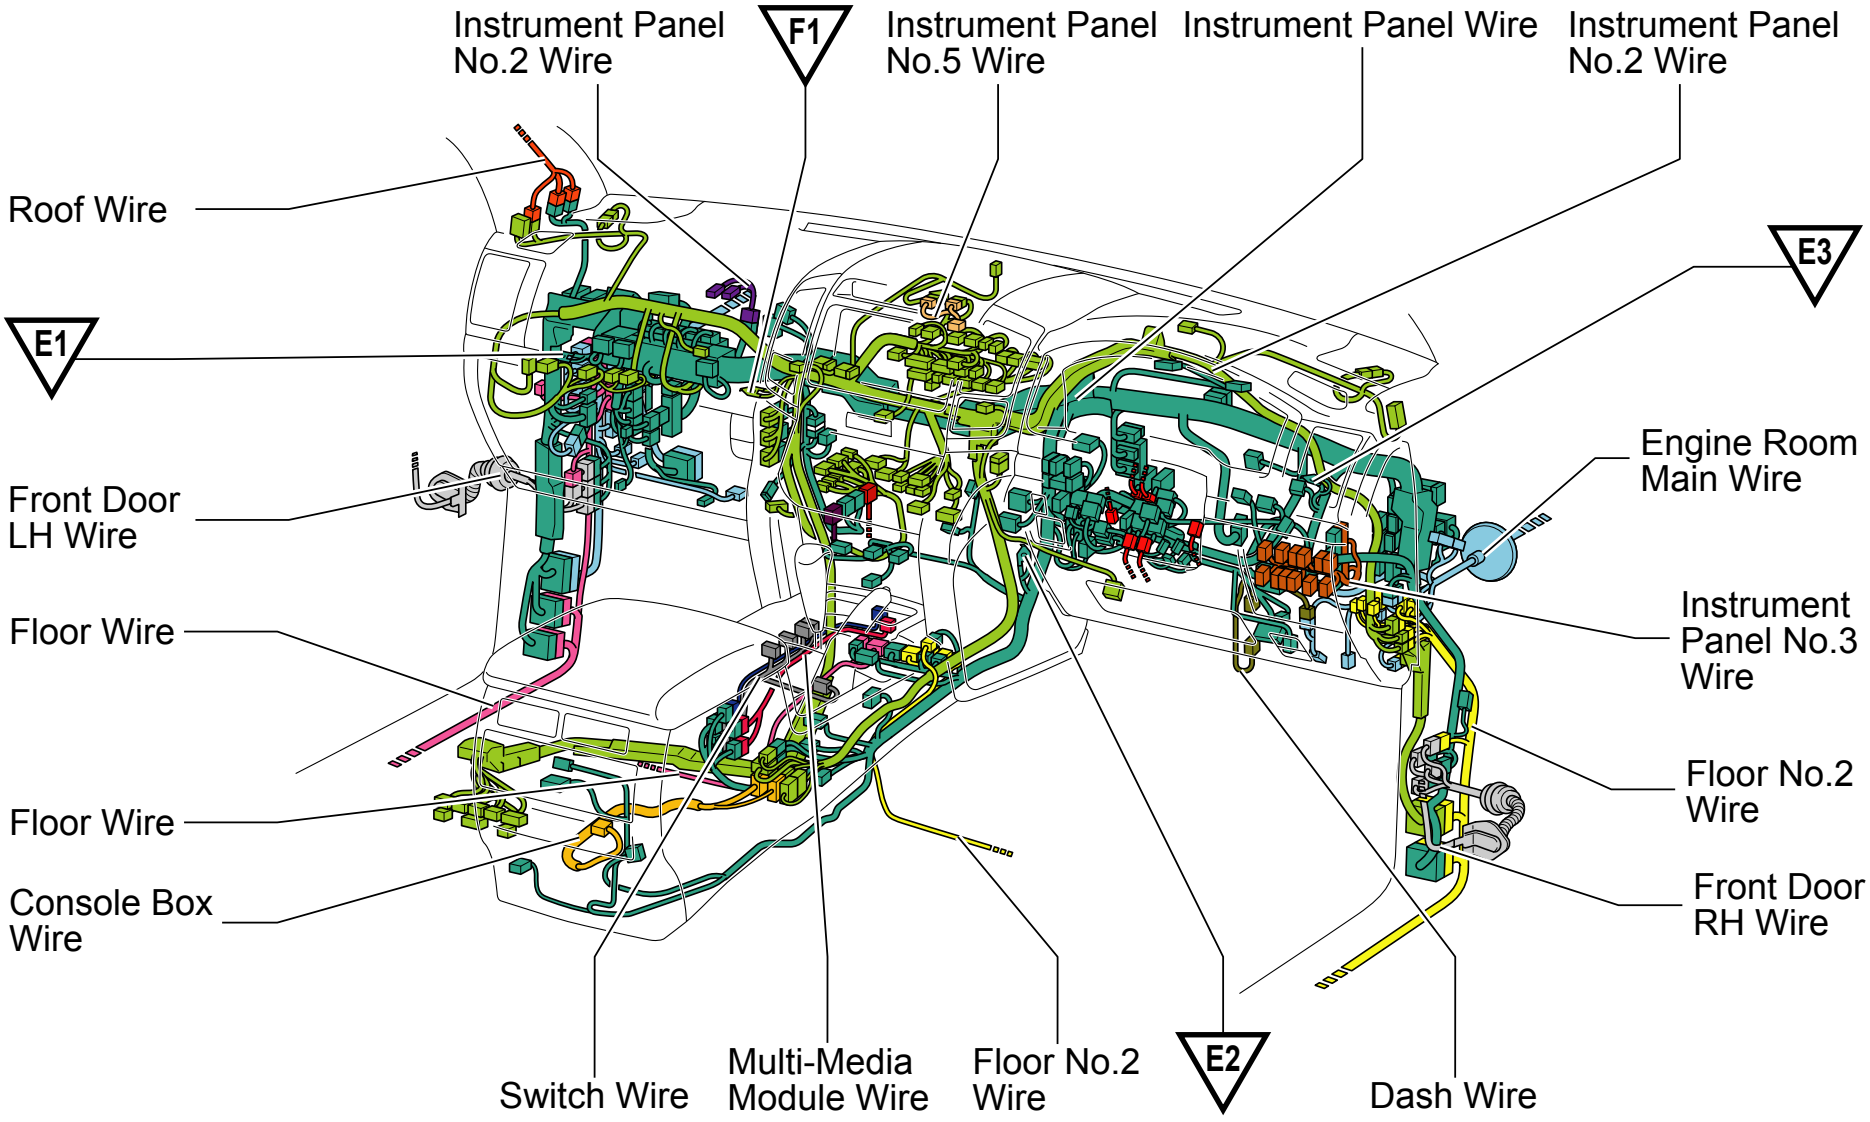
Instrument Panel No.2 Wire
F1
Instrument Panel No.5 Wire
Instrument Panel Wire
Instrument Panel No.2 Wire
Roof Wire
E3
E1
Engine Room Main Wire
Front Door LH Wire
Instrument Panel No.3 Wire
Floor Wire
Floor No.2 Wire
Floor Wire
Front Door RH Wire
Console Box Wire
Switch Wire
Multi-Media Module Wire
Floor No.2 Wire
E2
Dash Wire

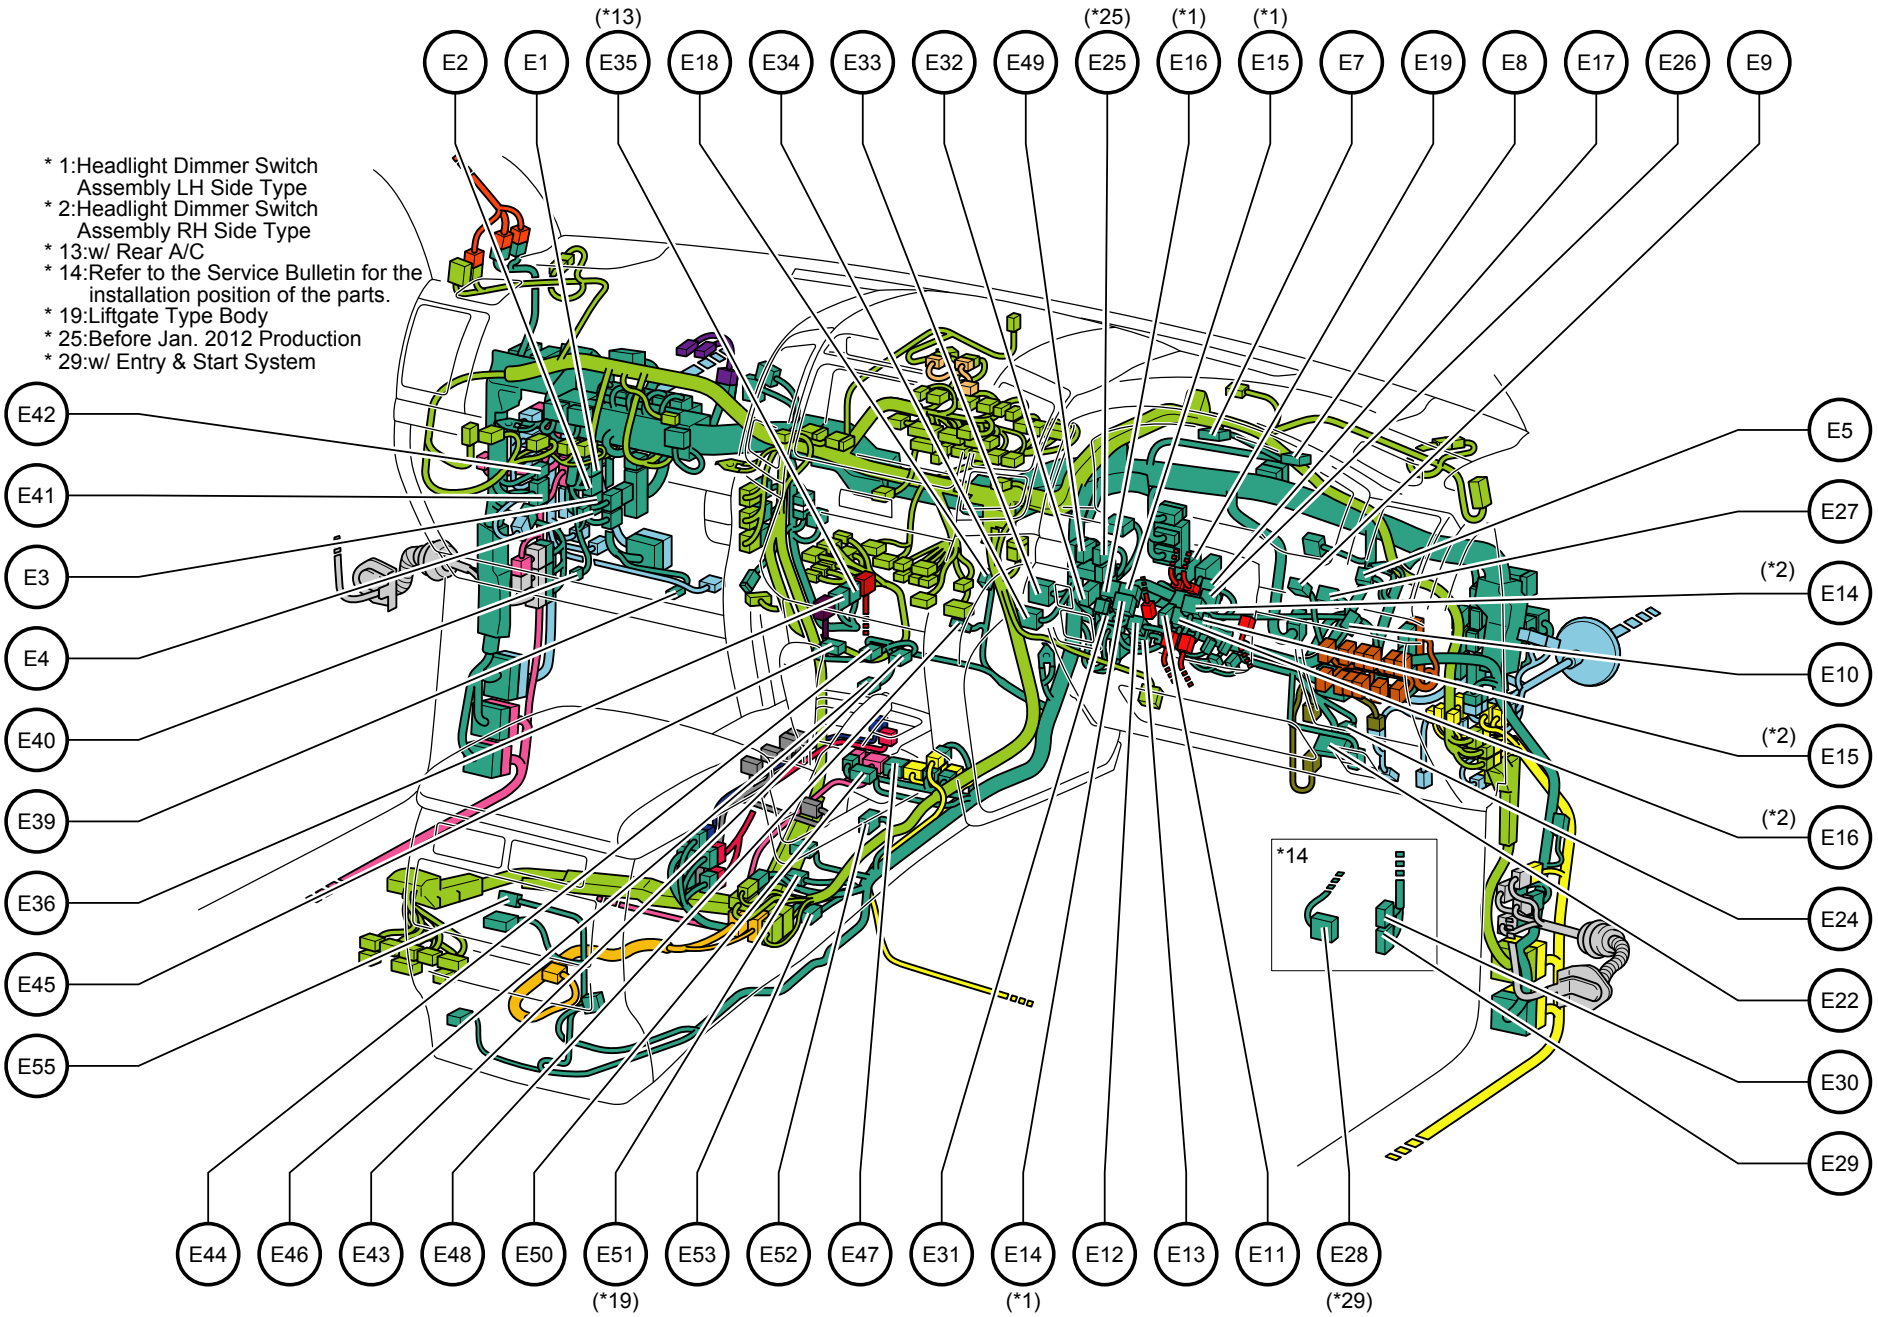

* 1:Headlight Dimmer Switch Assembly LH Side Type
* 2:Headlight Dimmer Switch Assembly RH Side Type
* 13:w/ Rear A/C
* 14:Refer to the Service Bulletin for the installation position of the parts.
* 19:Liftgate Type Body
* 25:Before Jan. 2012 Production
* 29:w/ Entry & Start System
E2
E1
(*13)
E35
E18
E34
E33
E32
E49
(*25)
E25
(*1)
E16
(*1)
E15
E7
E19
E8
E17
E26
E9
E42
E41
E3
E4
E40
E39
E36
E45
E55
E5
E27
(*2)
E14
E10
(*2)
E15
(*2)
E16
E24
E22
E30
E29
*14
E44
E46
E43
E48
E50
E51
(*19)
E53
E52
E47
E31
E14
(*1)
E12
E13
E11
E28
(*29)

E 1 Main Body ECU
E 2 Main Body ECU
E 3 Main Body ECU
E 4 Main Body ECU
E 5 Skid Control Buzzer Assembly
E 7 Combination Meter Assembly
E 8 Combination Meter Assembly
E 9 Light Control Rheostat
E 10 No.1 Clearance Warning Buzzer
E 11 Steering Sensor
E 12 Spiral Cable Sub-Assembly
E 13 Spiral Cable Sub-Assembly
E 14 Headlight Dimmer Switch Assembly
E 15 Windshield Wiper Switch Assembly
E 16 Windshield Wiper Switch Assembly
E 17 Power Tilt Motor
E 18 Engine Switch
E 19 Turn Signal Flasher Assembly
E 22 DLC3
E 24 Lower No.1 Instrument Panel Airbag Assembly
E 25 VSC Off Switch
E 26 Steering Lock Actuator Assembly
E 27 Multiplex Tilt and Telescopic ECU
E 28 ID Code Box
E 29 Certification ECU Assembly
E 30 Certification ECU Assembly
E 31 Network Gateway ECU
E 32 Room Temperature Sensor
E 33 Quick Heater Assembly
E 34 Quick Heater Assembly
E 35 A/C Amplifier Assembly
E 36 A/C Amplifier Assembly
E 39 Glove Box Light Assembly
E 40 Lower No.2 Instrument Panel Airbag Assembly
E 41 Seat Belt Control ECU
E 42 Seat Belt Control ECU
E 43 Cigarette Lighter Assembly
E 44 Cigarette Lighter Illumination Assembly
E 45 Ash Receptacle Light Sub-Assembly
E 46 Front Power Outlet Socket Assembly
E 47 Center Airbag Sensor Assembly
E 48 Transfer Position Switch
E 49 Center Differential Lock Switch
E 50 Yaw Rate Sensor Assembly
E 51 Shift Lock Control ECU Sub-Assembly
E 52 Transmission Control Switch
E 53 Parking Brake Switch Assembly
E 55 No.2 A/C Control Assembly


E 1
White

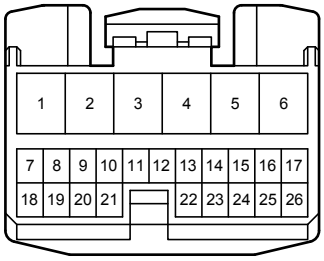


E 2
White

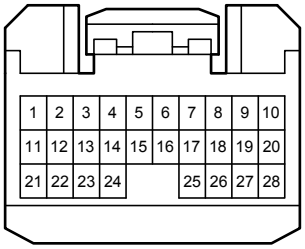


E 3
White

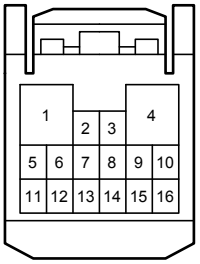


E 4
White

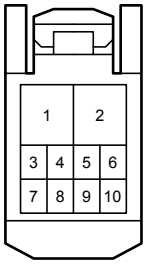


E 5
Blue




E 7
White

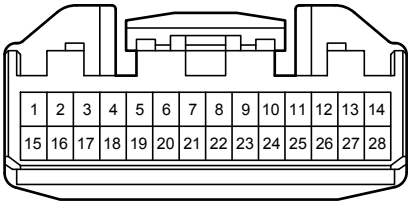


E 8
Black

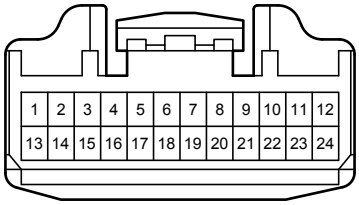


E 9
White

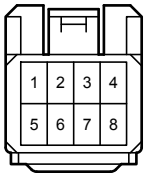


E 10
Black




E 11
Gray

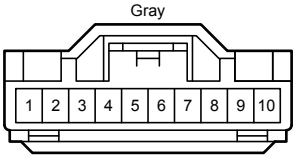


E 12
Black

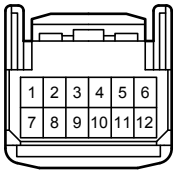


E 13
Yellow

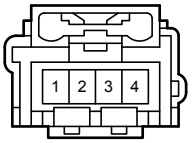


E 14
White

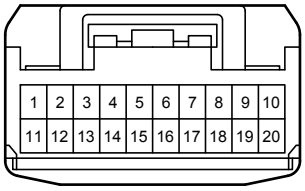


E 15
White

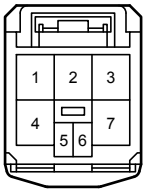


E 16
White

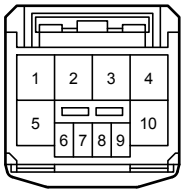


E 17
White

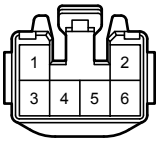


E 18
Black

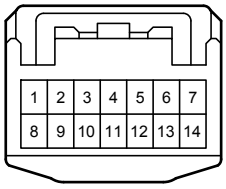


E 19
Black




E 22
White

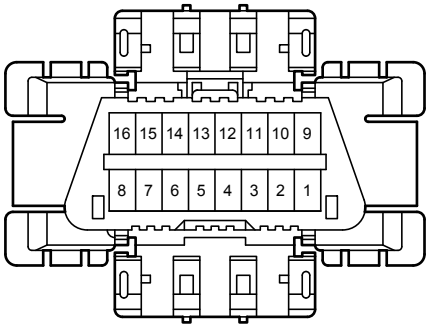


E 24
Black




E 25
Black

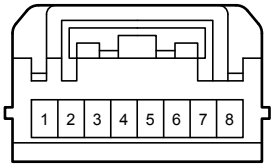


E 26
Black

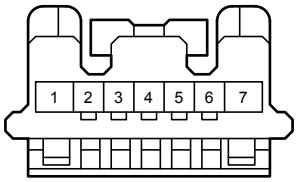


E 27
White

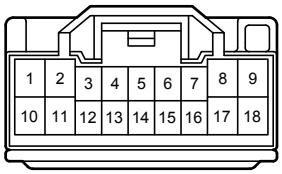


E 28
White

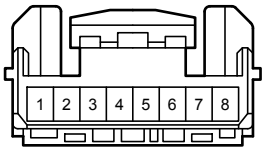


E 29
White

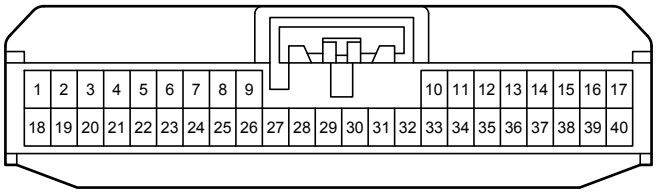


E 30
White

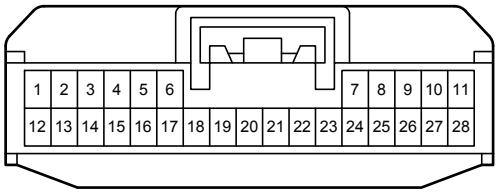


E 31
White

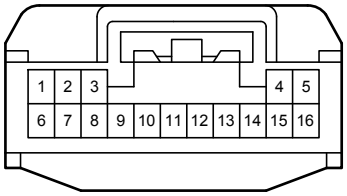


E 32
Black




E 33
White

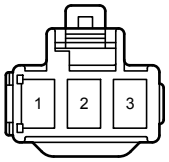


E 34
White

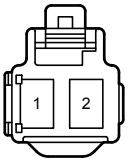

E 35
White

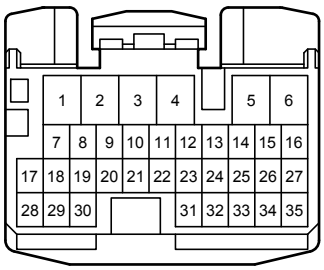


E 36
White

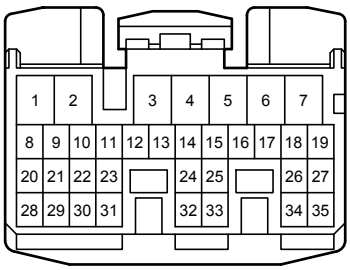


E 39
Black




E 40
Black




E 41
White

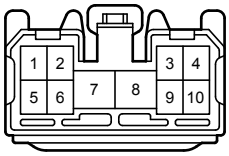

E 42
White

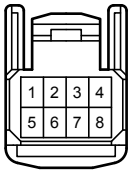


E 43
White




E 44
Gray




E 45
White




E 46
White




E 47
Yellow

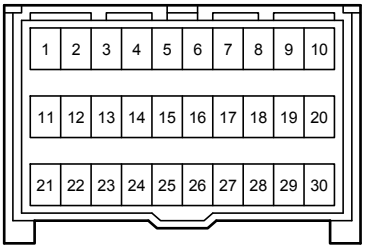


E 48
Black

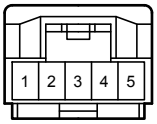


E 49
White

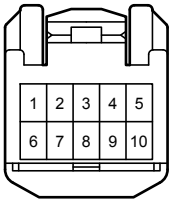


E 50
Black

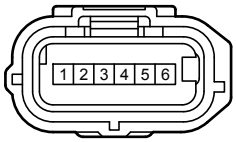

E 51
White

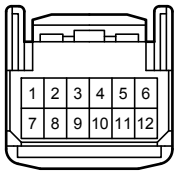

E 52
White

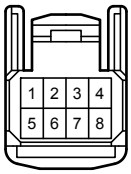


E 53
White



E 55
White




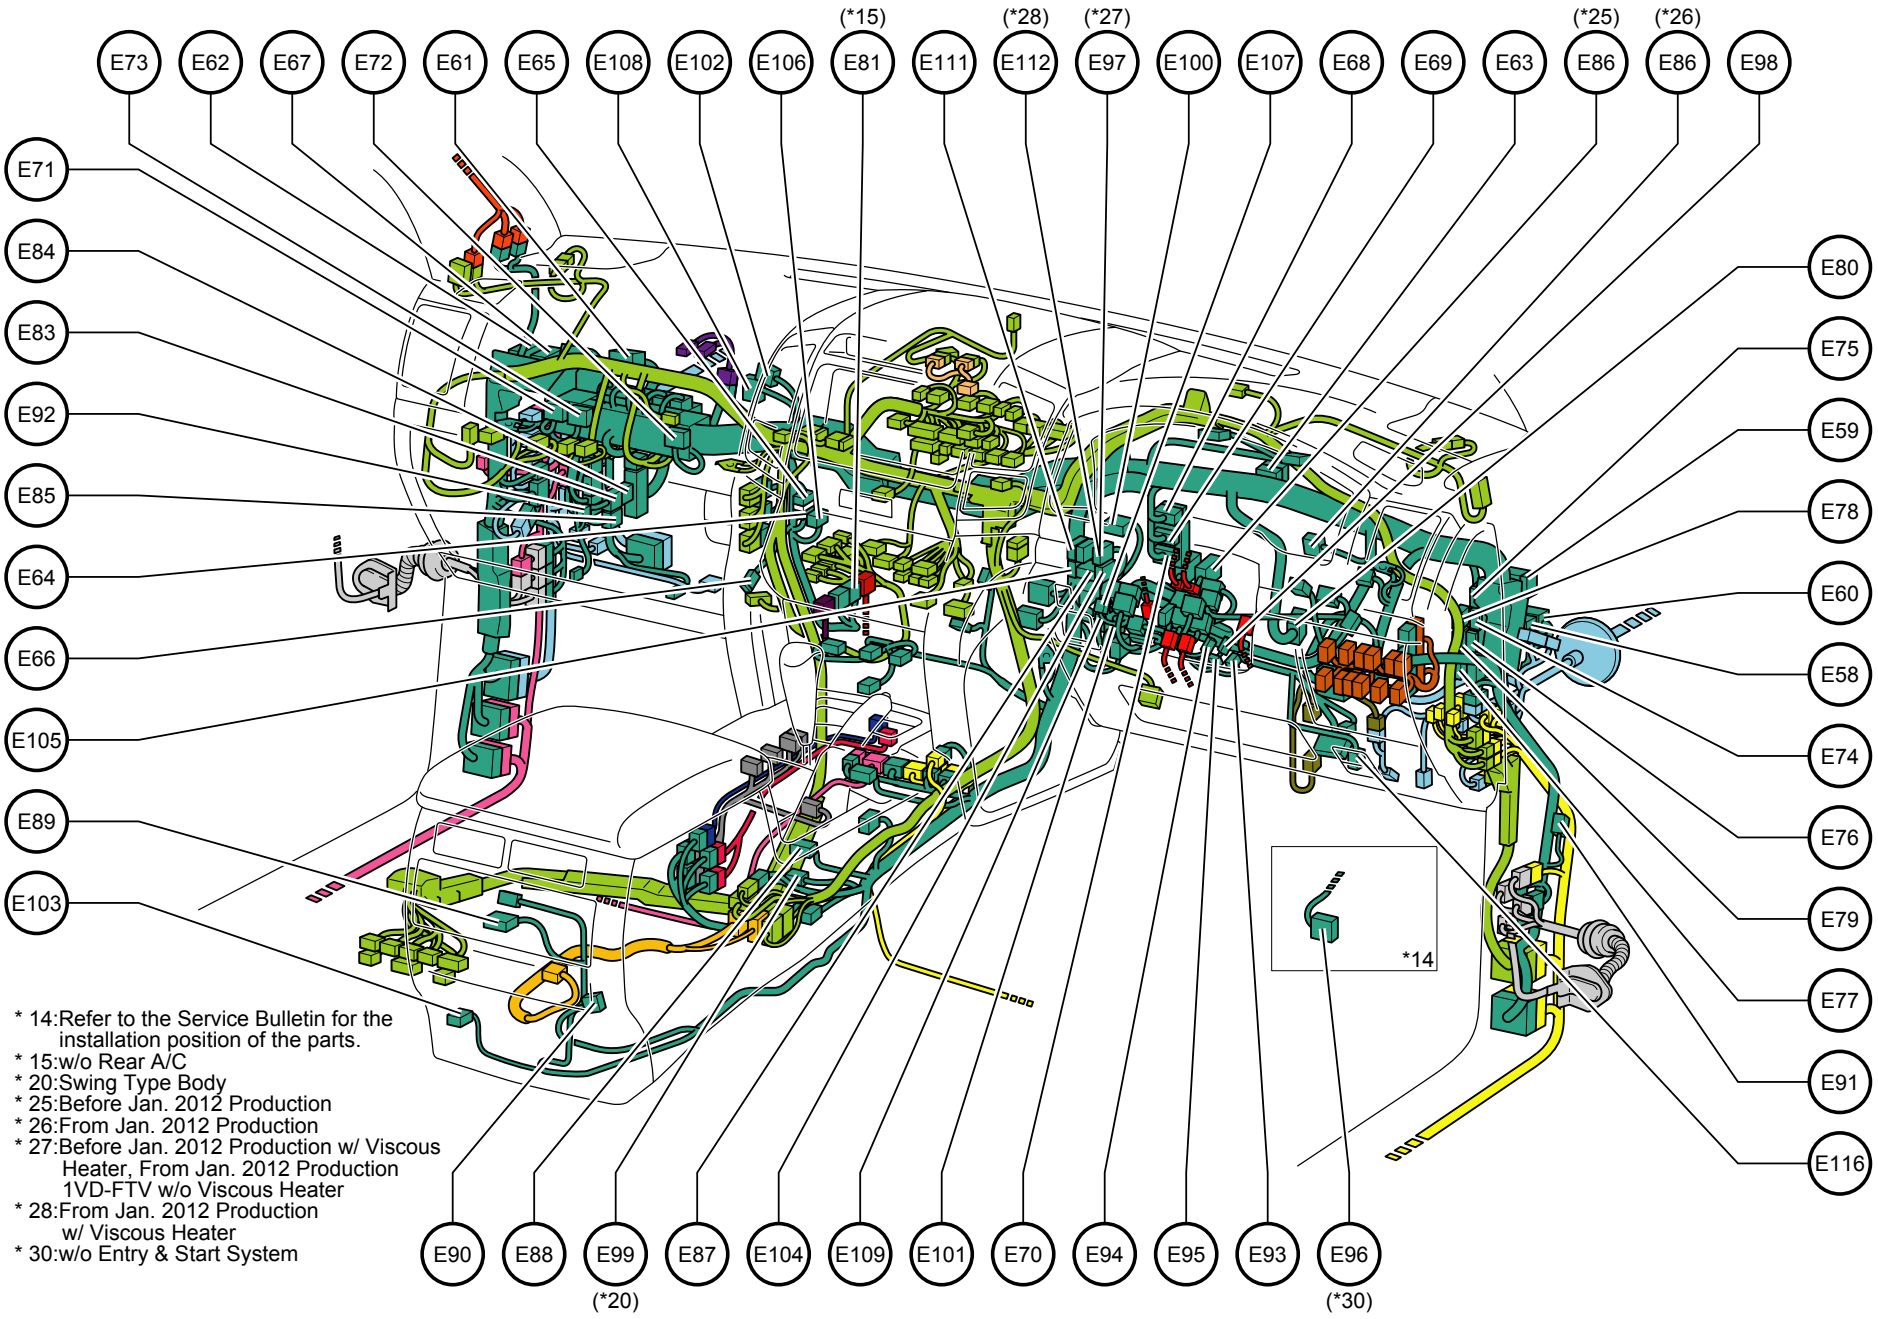


* 14:Refer to the Service Bulletin for the installation position of the parts.
* 15:w/o Rear A/C
* 20:Swing Type Body
* 25:Before Jan. 2012 Production
* 26:From Jan. 2012 Production
* 27:Before Jan. 2012 Production w/ Viscous Heater, From Jan. 2012 Production 1VD-FTV w/o Viscous Heater
* 28:From Jan. 2012 Production w/ Viscous Heater
* 30:w/o Entry & Start System

E 58 Junction Connector
E 59 Junction Connector
E 60 Junction Connector
E 61 Junction Connector
E 62 Junction Connector
E 63 Junction Connector
E 64 Junction Connector
E 65 Junction Connector
E 66 Junction Connector
E 67 Junction Connector
E 68 Junction Connector
E 69 Junction Connector
E 70 Junction Connector
E 71 Junction Connector
E 72 Junction Connector
E 73 Junction Connector
E 74 Junction Connector
E 75 Junction Connector
E 76 Junction Connector
E 77 Steering Control ECU
E 78 Steering Control ECU
E 79 Steering Control ECU
E 80 Steering Actuator Assembly
E 81 A/C Amplifier Assembly
E 83 Windshield Wiper ECU , Short Connector
E 84 Short Connector
E 85 Windshield Wiper ECU
E 86 Double Lock Door Control Relay Assembly
E 87 Differential Lock Switch
E 88 Deceleration Sensor
E 89 Heater Blower Switch
E 90 Cooling Box Assembly
E 91 Option Connector (Parking Assist-Sensor)
E 92 Option Connector (Bus Buffer)
E 93 Ignition or Starter Switch Assembly
E 94 Un-Lock Warning Switch Assembly
E 95 Transponder Key Amplifier
E 96 Transponder Key ECU Assembly
E 97 Idle Up Switch
E 98 Key Inter Lock Solenoid
E 99 Shift Lock Control ECU Sub-Assembly
E 100 Main Switch Assembly
E 101 Headlight Leveling ECU Assembly
E 102 Power Steering ECU Assembly
E 103 Rear Power Outlet Socket Assembly
E 104 Back Door Control Switch
E 105 Power Back Door Main Switch
E 106 Junction Connector
E 107 Spiral Cable Sub-Assembly , Steering Wheel Heater Control Assembly
E 108 Distance Control ECU Assembly
E 109 Headlight Leveling ECU Assembly
E 111 DPF Switch Assembly
E 112 Heater Switch Assembly
E 116 Tire Pressure Warning Reset Switch


E 58

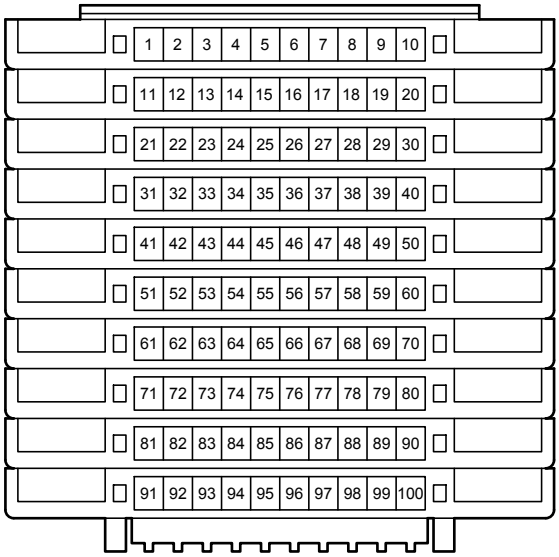


E 59

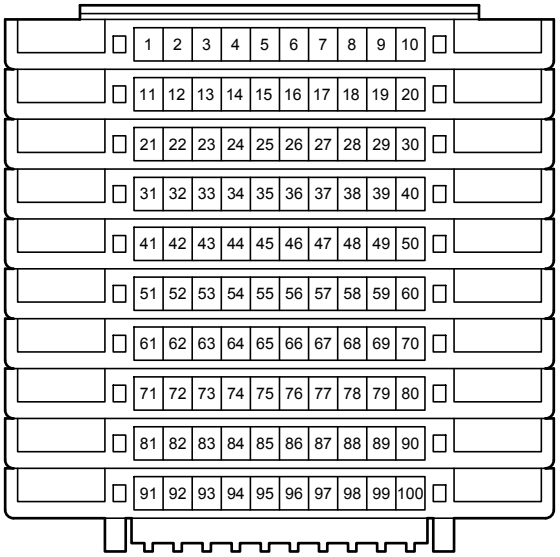


E 60

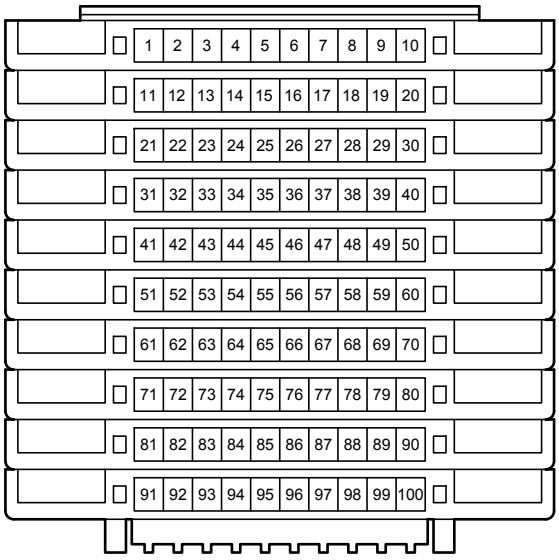


E 61

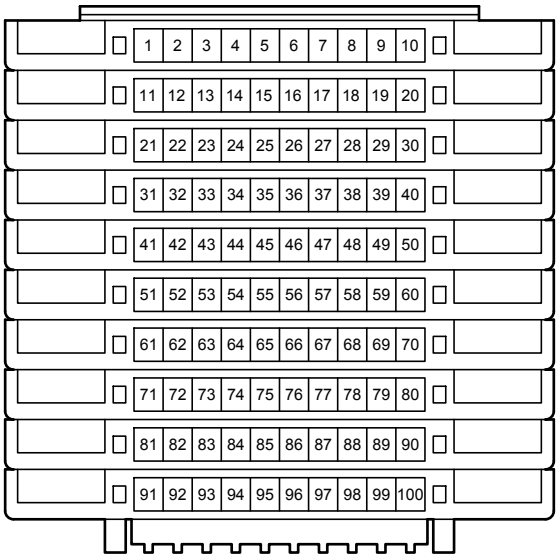


E 62
White

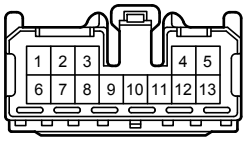


E 63
Gray




E 64
Black

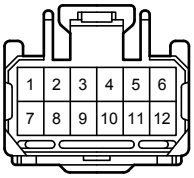


E 65
Black

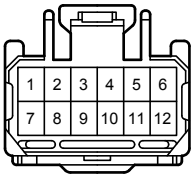


E 66
White

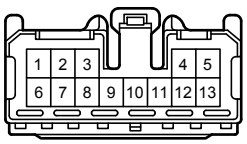


E 67
White

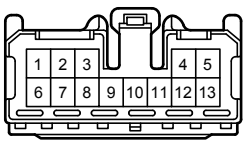


E 68
Gray

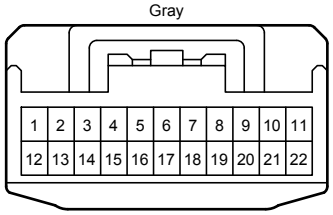


E 69
Gray

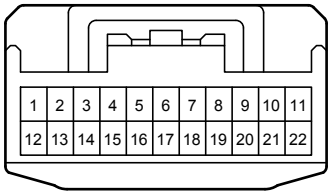


E 70
Gray

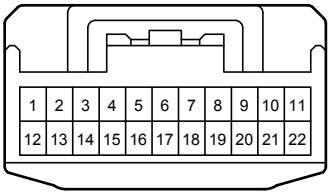


E 71
Gray

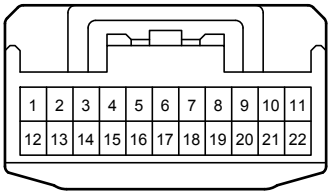


E 72
Gray

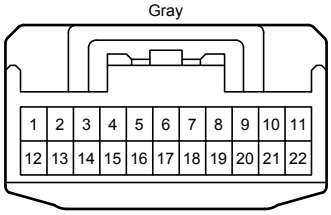


E 73
Gray

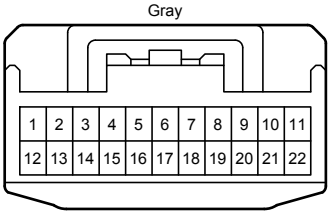


E 74
Gray

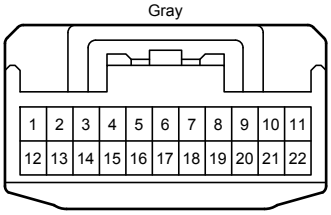


E 75
Gray

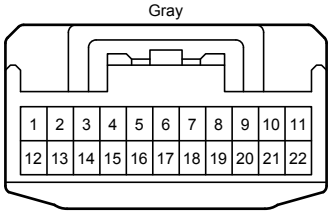


E 76
Gray

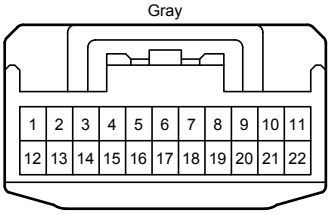


E 77
White

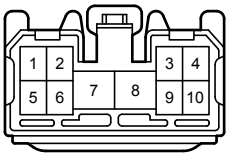


E 78
White

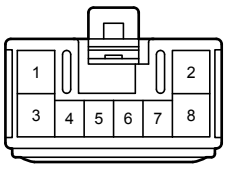


E 79
White

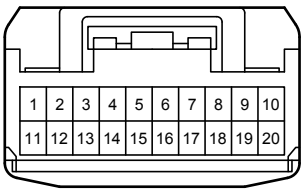


E 80
White

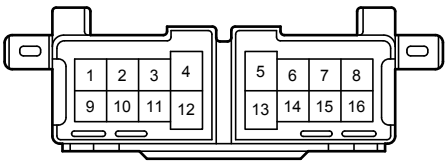


E 81
White

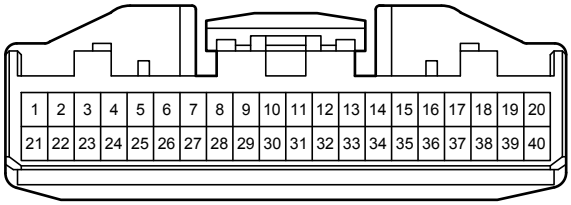


E 83
Blue

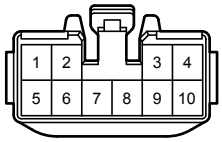


E 84
Blue

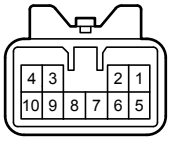


E 85
White

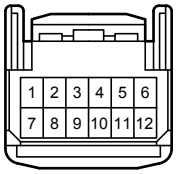


E 86
White




E 87
White




E 88
Black

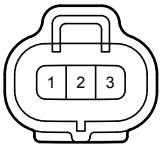


E 89
Black

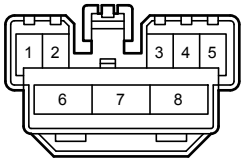


E 90
White




E 91
White

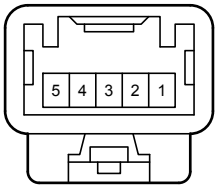


E 92
White

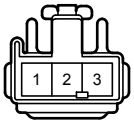


E 93
White

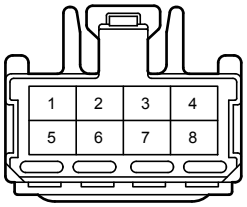


E 94
White




E 95
Black

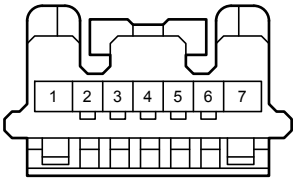


E 96
Black

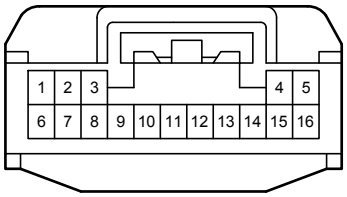


E 97
Black

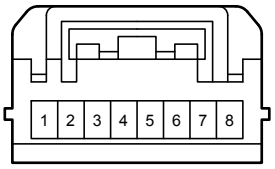


E 98
Black




E 99
White

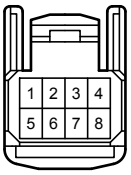


E100
White




E101
White

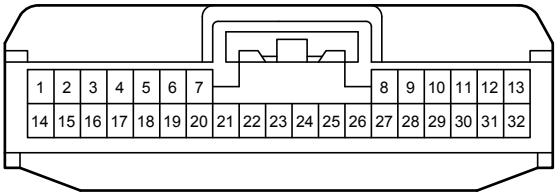


E102
White

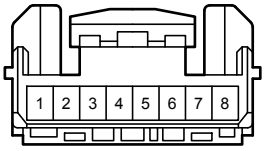


E103
White

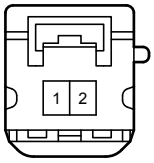


E104
Black

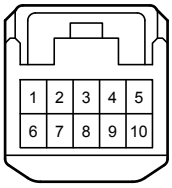


E105
Black

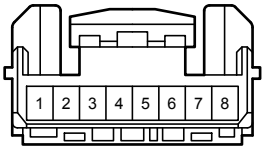


E106
White




E107
Black




E108
White

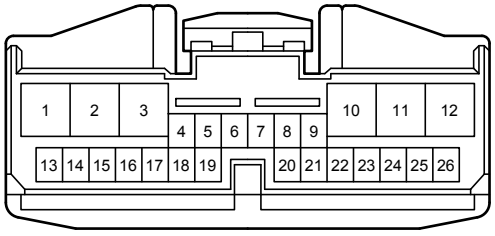


E109
White

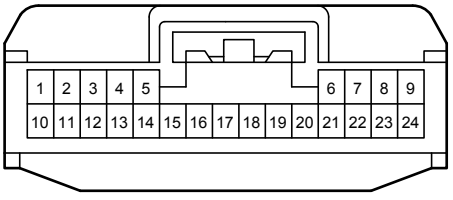


E111
Black

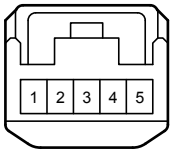


E112
Black

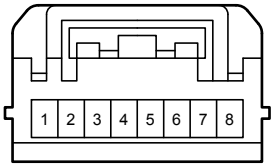

E116
Black



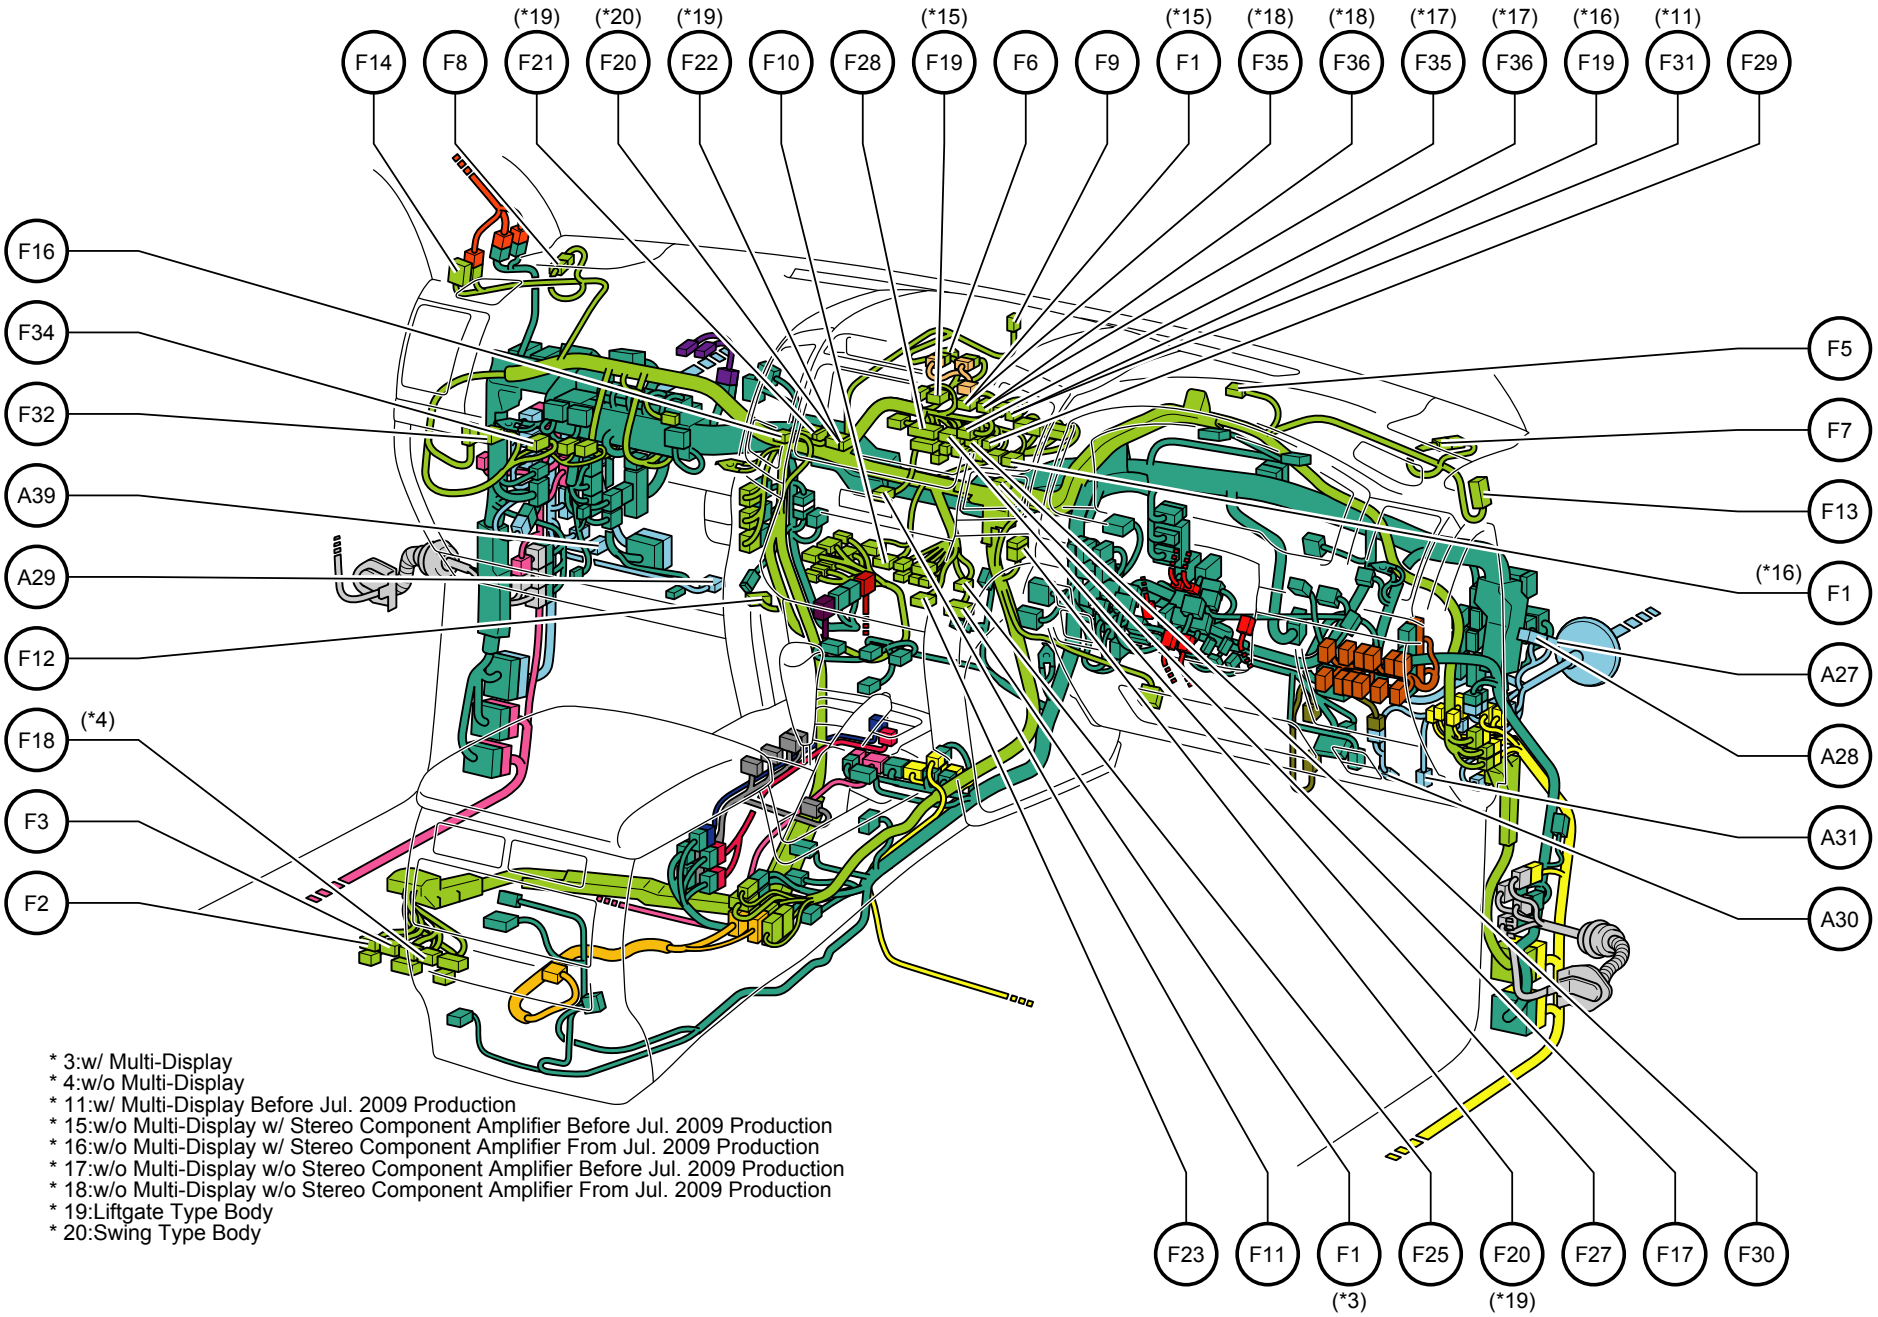


* 3:w/ Multi-Display
* 4:w/o Multi-Display
* 11:w/ Multi-Display Before Jul. 2009 Production
* 15:w/o Multi-Display w/ Stereo Component Amplifier Before Jul. 2009 Production
* 16:w/o Multi-Display w/ Stereo Component Amplifier From Jul. 2009 Production
* 17:w/o Multi-Display w/o Stereo Component Amplifier Before Jul. 2009 Production
* 18:w/o Multi-Display w/o Stereo Component Amplifier From Jul. 2009 Production
* 19:Liftgate Type Body
* 20:Swing Type Body


A 27 Four Wheel Drive Control ECU
A 28 Four Wheel Drive Control ECU
A 29 Front Blower with Fan Motor Sub-Assembly
A 30 Stop Light Switch Assembly
A 31 Accelerator Pedal Sensor Assembly
A 39 Stop Light Control Relay Assembly

F 1 Radio Receiver Assembly
F 2 Stereo Component Amplifier Assembly
F 3 Stereo Component Amplifier Assembly
F 5 Amplifier Antenna Assembly
F 6 Front No.4 Speaker Assembly
F 7 Front No.2 Speaker Assembly RH , Short Connector
F 8 Front No.2 Speaker Assembly LH , Short Connector
F 9 Automatic Light Control Sensor
F 10 A/C Control Assembly
F 11 Hazard Warning Signal Switch Assembly
F 12 Clearance Warning ECU Assembly
F 13 Front No.3 Speaker Assembly RH
F 14 Front No.3 Speaker Assembly LH
F 16 Temperature Control Switch Assembly LH
F 17 Temperature Control Switch Assembly RH
F 18 Stereo Component Amplifier Assembly
F 19 Radio Receiver Assembly
F 20 Junction Connector
F 21 Junction Connector
F 22 Junction Connector
F 23 Radio Receiver Assembly
F 25 Radio Receiver Assembly
F 27 Multi-Display
F 28 Multi-Display
F 29 Multi-Display
F 30 Multi-Display
F 31 Multi-Display
F 32 Navigation ECU
F 34 Navigation ECU
F 35 Radio Receiver Assembly
F 36 Radio Receiver Assembly


A 27
Black

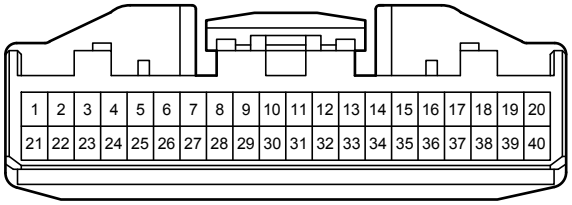


A 28
Black

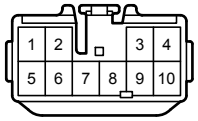


A 29
White

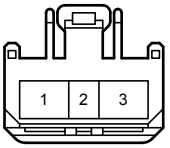


A 30
Gray




A 31
Black

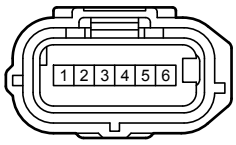


A 39
Black




F 1
White

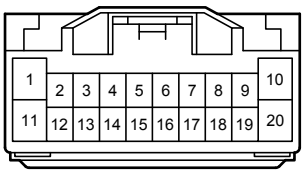

F 2
White

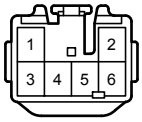


F 3
White

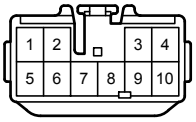


F 5
White




F 6
White




F 7
White




F 8
White




F 9
Black

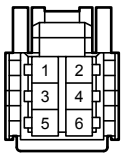


F 10
White

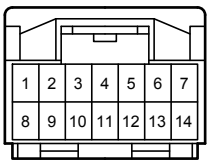

F 11
Gray

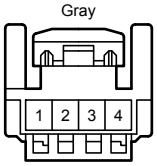


F 12
White

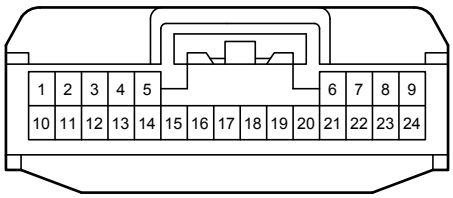


(Before Aug. 2007 Production)

F 12
Gray

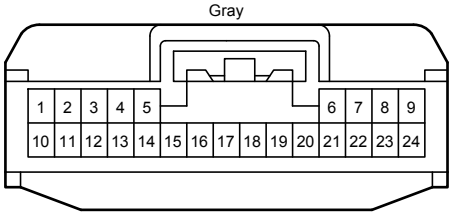


(From Aug. 2007 Production)


F 13
White




F 14
White




F 16
White




F 17
White




F 18
White

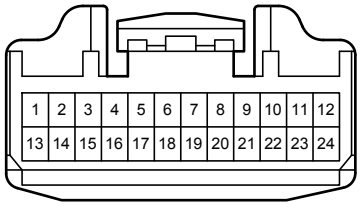


F 19
White

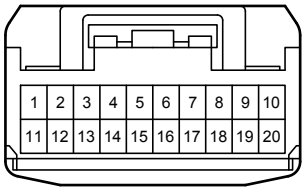


F 20
Gray

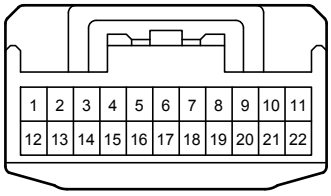


F 21
Black

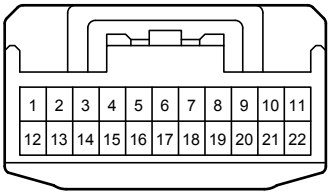


F 22
White

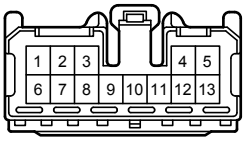


F 23
White

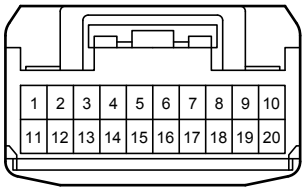


F 25
White

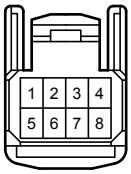


F 27
White

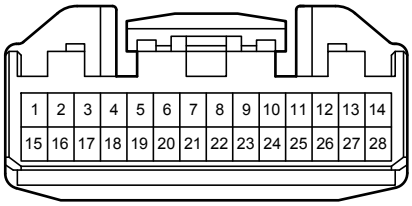


F 28
White

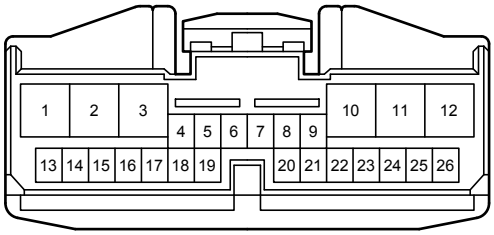


F 29
Blue

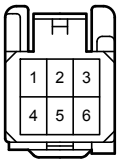


F 30
White

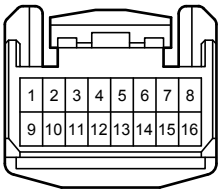


F 31
White

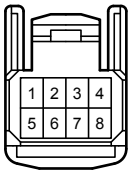


F 32
White

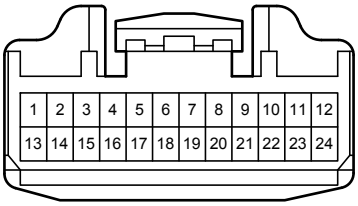

F 34
White

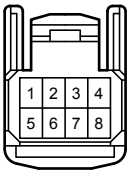


F 35
White

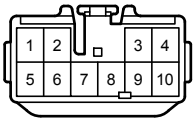


F 36
White

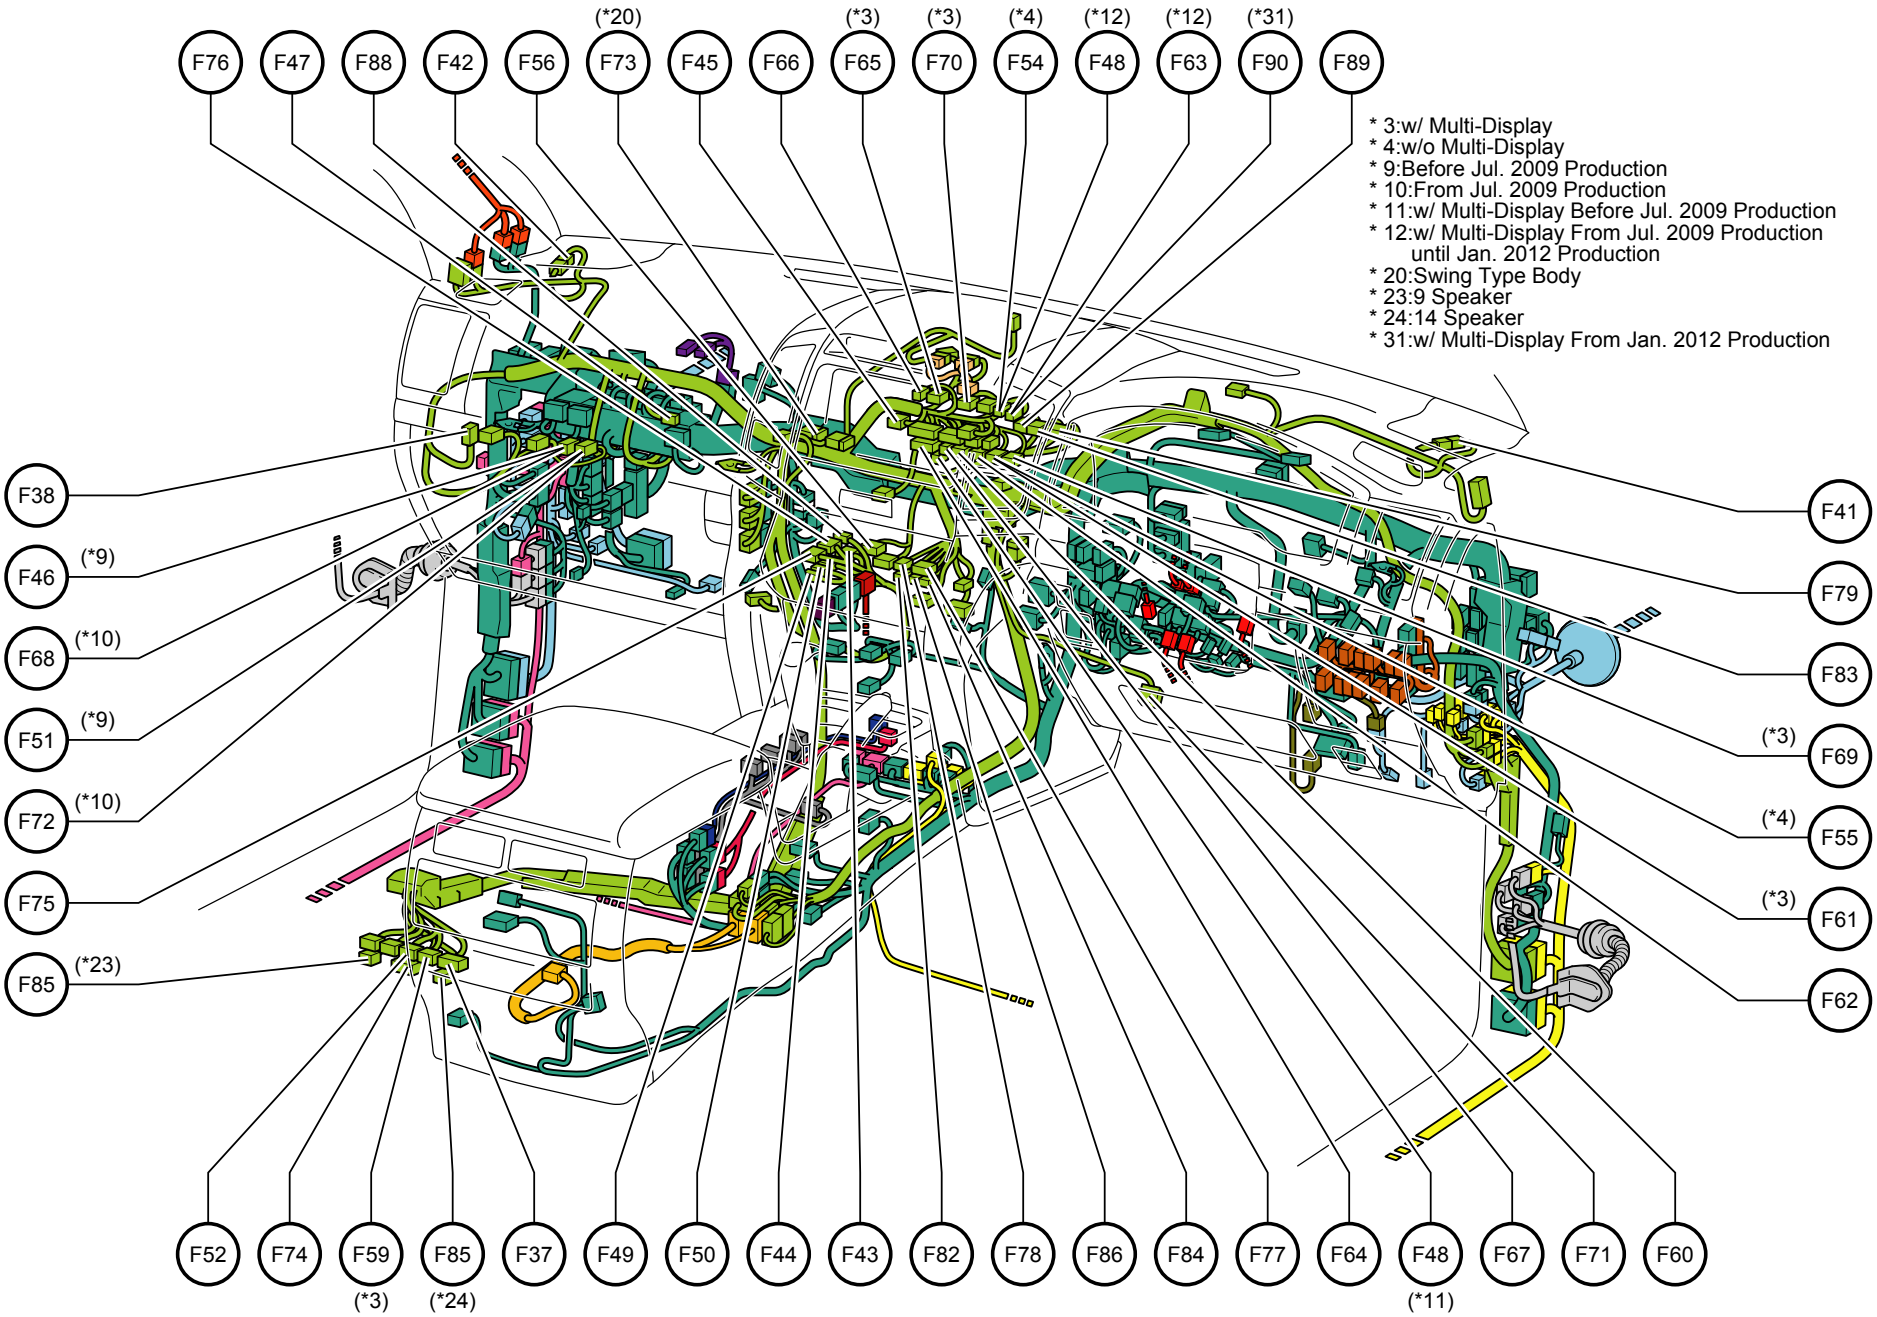


F76
F47
F88
F42
F56
(*20)
F73
F45
F66
(*3)
F65
(*3)
F70
(*4)
F54
(*12)
F48
(*12)
F63
(*31)
F90
F89
* 3:w/ Multi-Display
* 4:w/o Multi-Display
* 9:Before Jul. 2009 Production
* 10:From Jul. 2009 Production
* 11:w/ Multi-Display Before Jul. 2009 Production
* 12:w/ Multi-Display From Jul. 2009 Production until Jan. 2012 Production
* 20:Swing Type Body
* 23:9 Speaker
* 24:14 Speaker
* 31:w/ Multi-Display From Jan. 2012 Production
F38
F46
(*9)
F68
(*10)
F51
(*9)
F72
(*10)
F75
F85
(*23)
F41
F79
F83
(*3)
F69
(*4)
F55
(*3)
F61
F62
F52
F74
F59
(*3)
F85
(*24)
F37
F49
F50
F44
F43
F82
F78
F86
F84
F77
F64
F48
(*11)
F67
F71
F60

F 37 Stereo Component Amplifier Assembly
F 38 Airbag Cut Off Switch Cylinder Sub-Assembly
F 41 Short Connector
F 42 Short Connector
F 43 Parking Assist ECU
F 44 Parking Assist ECU
F 45 Option Connector (Back Guide Monitor)
F 46 Navigation ECU
F 47 Navigation Antenna Assembly
F 48 Multi-Display
F 49 Parking Assist ECU
F 50 Parking Assist ECU
F 51 Navigation ECU
F 52 Stereo Component Amplifier Assembly
F 54 Radio Receiver Assembly
F 55 Radio Receiver Assembly
F 56 Radio Receiver Assembly
F 59 Stereo Component Amplifier Assembly
F 60 Display & Navigation Module Display
F 61 Display & Navigation Module Display
F 62 Display & Navigation Module Display
F 63 Display & Navigation Module Display
F 64 Display & Navigation Module Display
F 65 Display & Navigation Module Display
F 66 Display & Navigation Module Display
F 67 Display & Navigation Module Display
F 68 Multi-Media Module Navigation Assembly
F 69 Display & Navigation Module Display
F 70 Display & Navigation Module Display
F 71 IEEE Connector
F 72 Multi-Media Module Navigation Assembly
F 73 Junction Connector
F 74 Stereo Component Amplifier Assembly
F 75 Parking Assist ECU
F 76 Parking Assist ECU
F 77 Multi-Media Module Receiver Assembly
F 78 Multi-Media Module Receiver Assembly
F 79 Multi-Display Assembly
F 82 Multi-Media Module Receiver Assembly
F 83 Multi-Display Assembly
F 84 Multi-Media Module Receiver Assembly
F 85 Stereo Component Amplifier Assembly
F 86 Multi-Media Module Receiver Assembly
F 88 Parking Assist ECU
F 89 Multi-Display Assembly
F 90 Multi-Display Assembly


F 37
White

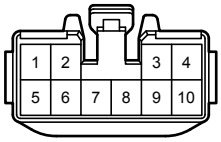


F 38
White




F 41
White




F 42
White




F 43
White

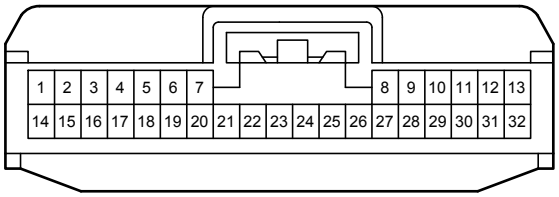


F 44
White

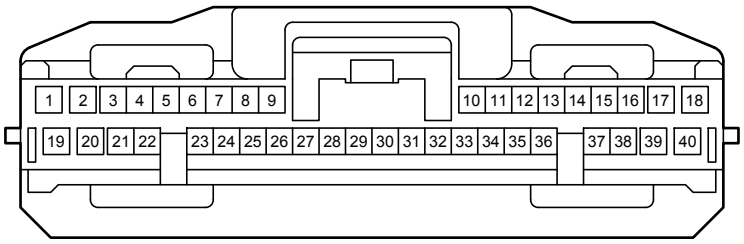

F 45
White



F 46
Gray



F 47
Gray



F 48
Blue



F 49
White




F 50
Blue




F 51
White




F 52
White




F 54
White

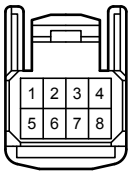


F 55
White

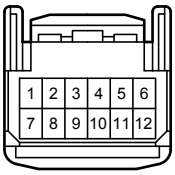


F 56
White

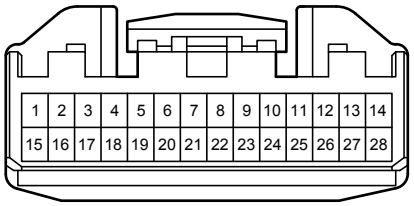


F 59
White

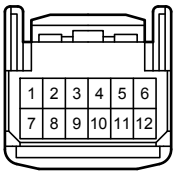


F 60
White

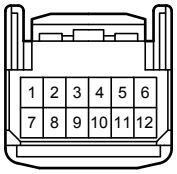


F 61
White

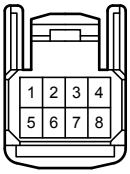


F 62
Blue




F 63
White

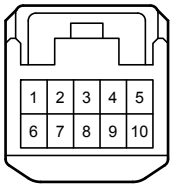


F 64
White

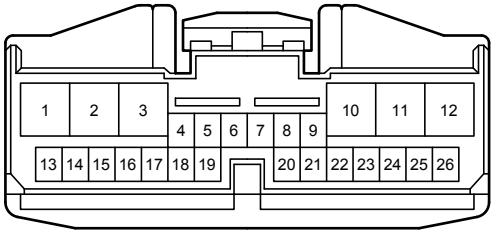


F 65
Black

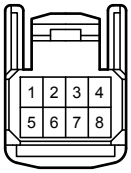


F 66
White

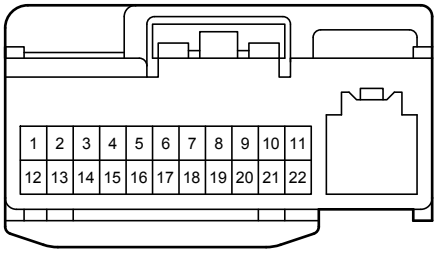

F 67
White



F 68
White

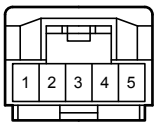


F 69
Brown



F 70
Gray




F 71
Gray

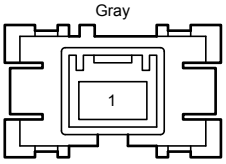


F 72
Gray




F 73
Blue

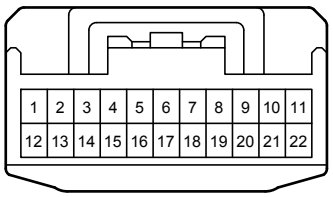


F 74
White

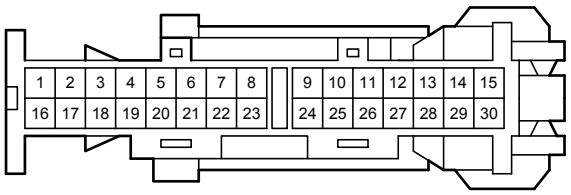


F 75
White

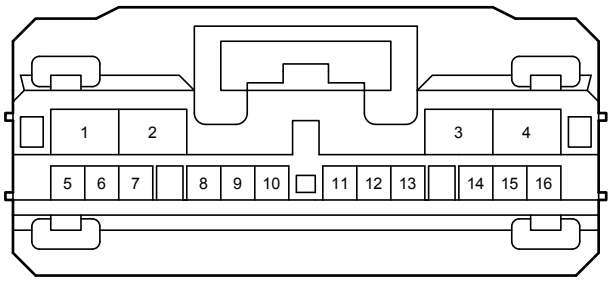


F 76
Black

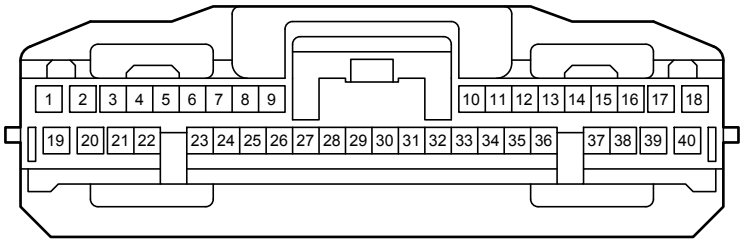


F 77
White

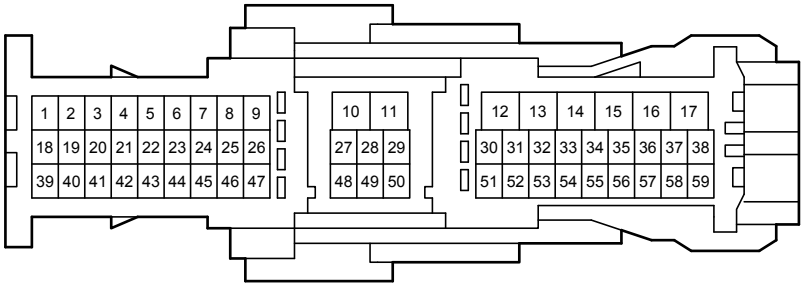


F 78
White

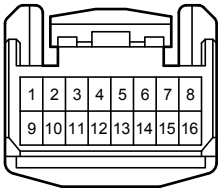

F 79
White

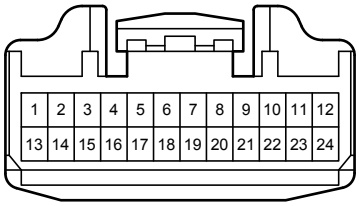


F 82
Blue




F 83
Blue




F 84
White

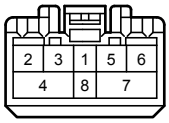


F 85
White

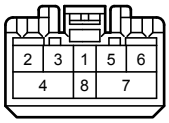

F 86
Gray

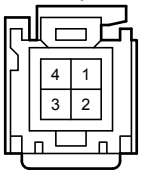


F 88
Gray




F 89
White



F 90
White

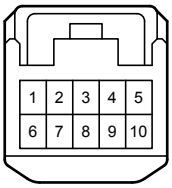

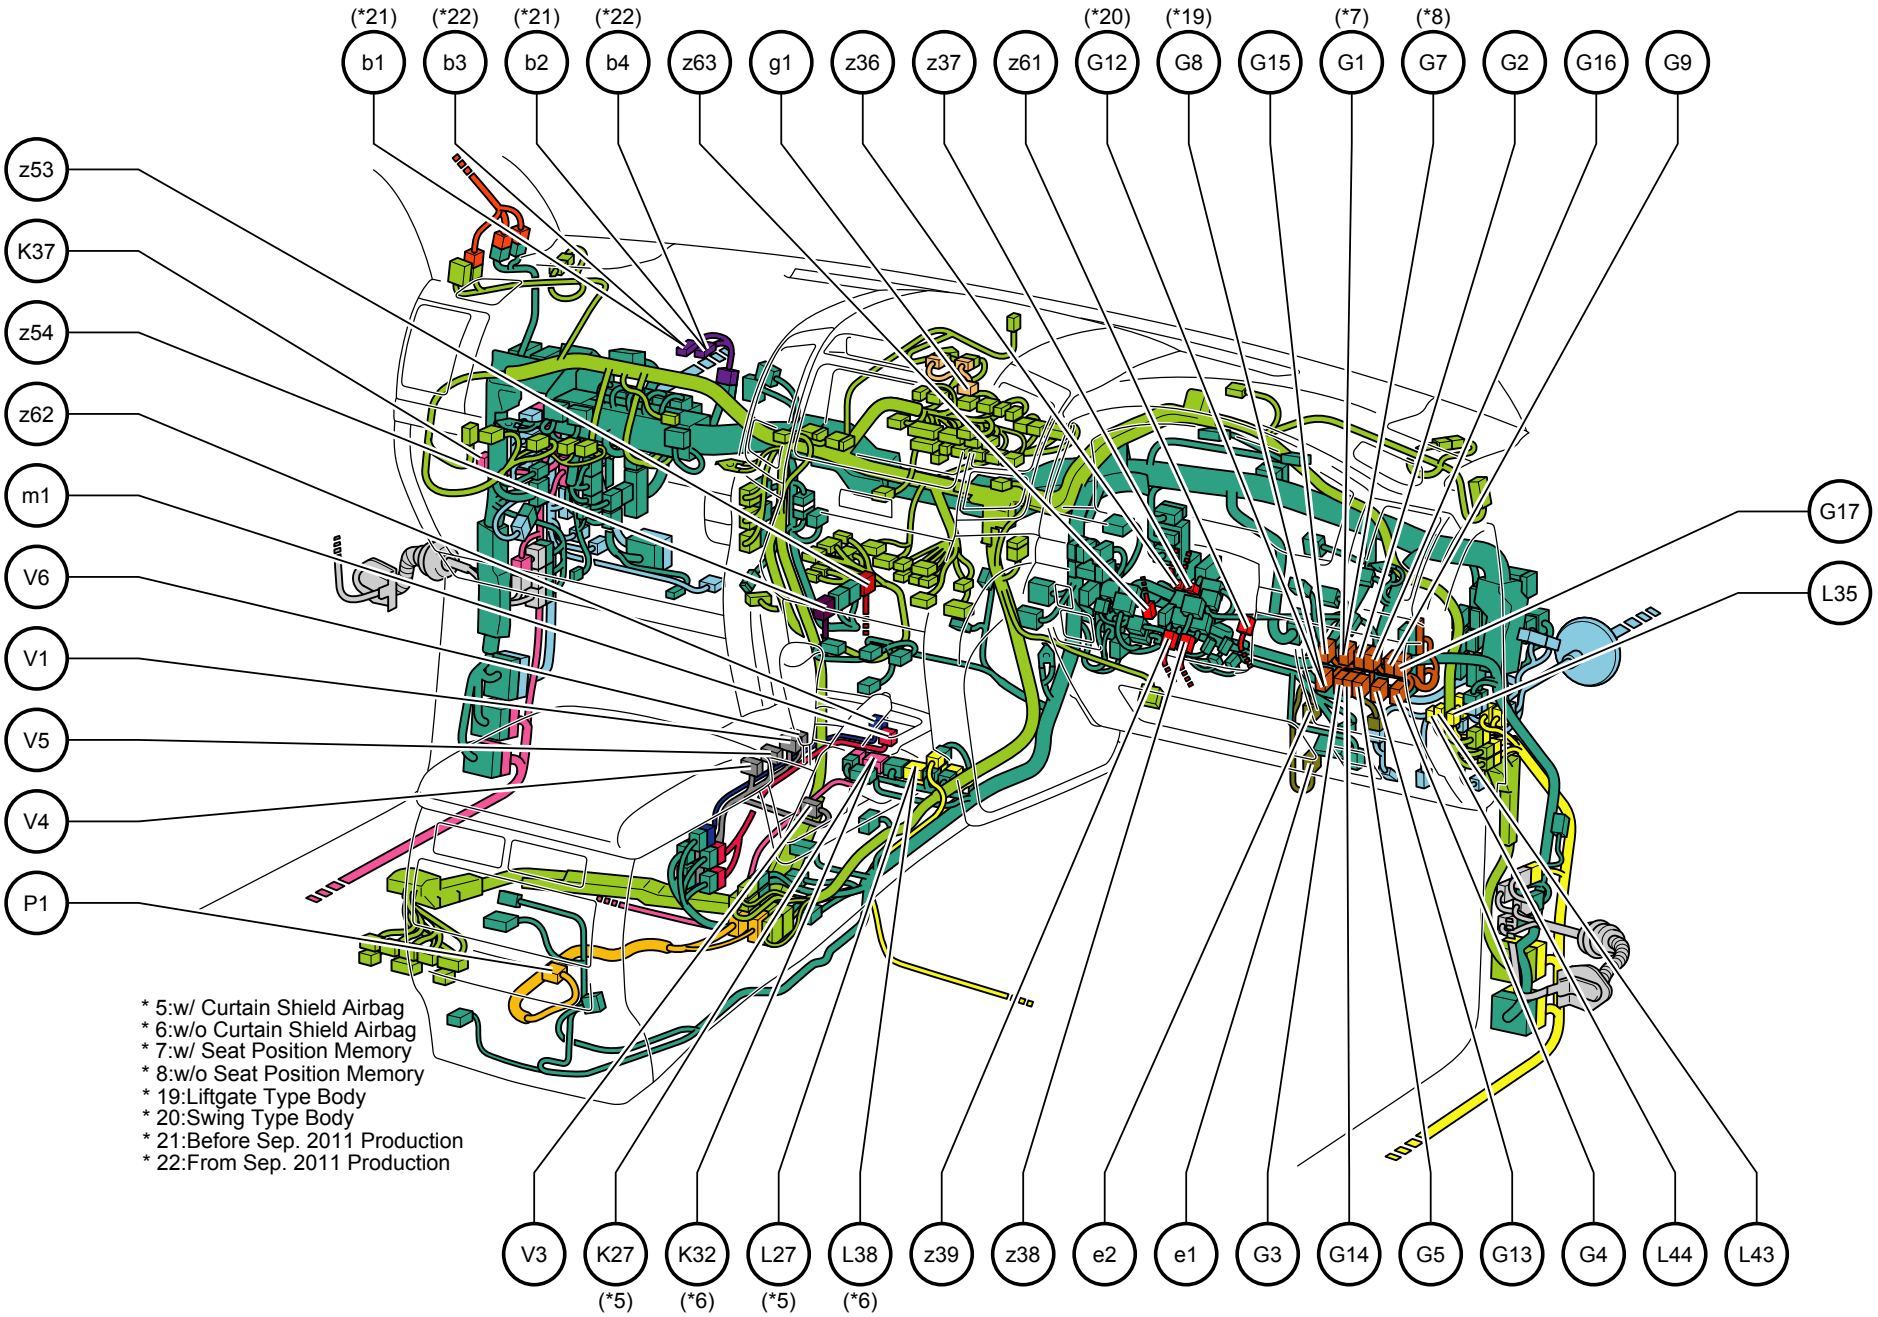
(*21)
b1
(*22)
b3
(*21)
b2
(*22)
b4
z63
g1
z36
z37
z61
(*20)
G12
(*19)
G8
G15
(*7)
G1
(*8)
G7
G2
G16
G9
z53
K37
z54
z62
m1
V6
V1
V5
V4
P1
G17
L35
* 5:w/ Curtain Shield Airbag
* 6:w/o Curtain Shield Airbag
* 7:w/ Seat Position Memory
* 8:w/o Seat Position Memory
* 19:Liftgate Type Body
* 20:Swing Type Body
* 21:Before Sep. 2011 Production
* 22:From Sep. 2011 Production
V3
K27
(*5)
K32
(*6)
L27
(*5)
L38
(*6)
z39
z38
e2
e1
G3
G14
G5
G13
G4
L44
L43

G 1 Outer Mirror Switch Assembly
G 2 Outer Mirror Switch Assembly
G 3 Curtain Airbag Cutoff Switch
G 4 Headlight Cleaner Switch Assembly
G 5 Back Sonar or Clearance Sonar Switch Assembly
G 7 Outer Mirror Switch Assembly
G 8 Idle Up Switch
G 9 Headlight Leveling Switch
G 12 Center Differential Lock Switch
G 13 VSC Off Switch
G 14 Steering Heater Switch
G 15 Back Sonar or Clearance Sonar Switch Assembly
G 16 Outer Mirror Switch Assembly
G 17 Headlight Leveling Switch

K 27 Center Airbag Sensor Assembly
K 32 Center Airbag Sensor Assembly
K 37 Acceleration Sensor LH

L 27 Center Airbag Sensor Assembly
L 35 Acceleration Sensor RH
L 38 Center Airbag Sensor Assembly
L 43 Option Connector (Parking Assist-Sensor)
L 44 Option Connector (Parking Assist-Sensor)

P 1 Headphone Terminal

V 1 Seat Heater Switch
V 3 Front Indoor Electrical Key Oscillator
V 4 Suspension Control Switch
V 5 Suspension Control Switch
V 6 Seat Heater Switch

b 1 Front Passenger Side Squib Circuit
b 2 Front Passenger Side Squib Circuit
b 3 Front Passenger Side Squib Circuit
b 4 Front Passenger Side Squib Circuit


e 1 Clutch Start Switch Assembly
e 2 Clutch Switch Assembly

g 1 Clock Assembly


m 1 No.1 Stereo Jack Adapter Assembly

z 36 Spiral Cable Sub-Assembly , Steering Pad Switch
z 37 Cruise Control Main Switch , Spiral Cable Sub-Assembly
z 38 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
z 39 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z 53 A/C Amplifier Assembly , A/C Blower Assembly
z 54 A/C Amplifier Assembly , A/C Blower Assembly
z 61 Cruise Control Main Switch , Spiral Cable Sub-Assembly
z 62 No.1 Stereo Jack Adapter Assembly
z 63 Steering Wheel Heater Control Assembly


G 1
Black

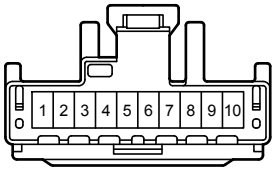


G 2
Black

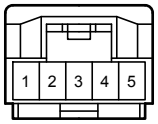


G 3
Gray

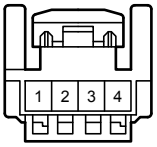


G 4
Black

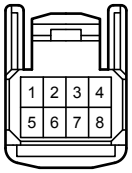


G 5
Black

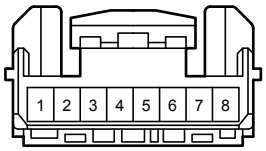


G 7
White

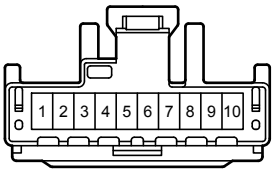


G 8
Black

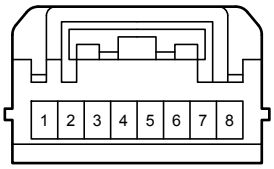


G 9
White




G 12
White

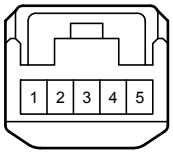


G 13
Black

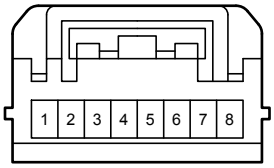


G 14
Black

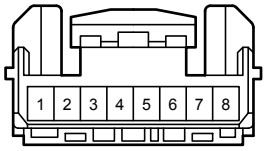


G 15
White

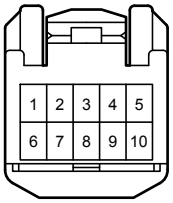


G 16
Black

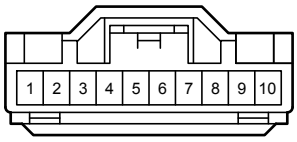


G 17
Black

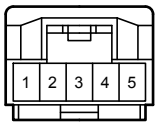


K 27
Yellow

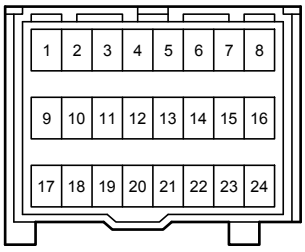


K 32
Yellow

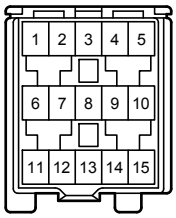


K 37
Black

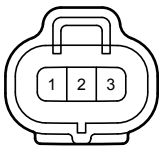


L 27
Yellow

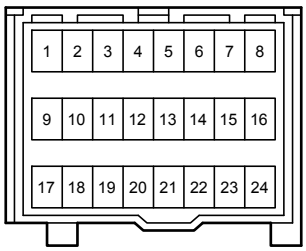


L 35
Black

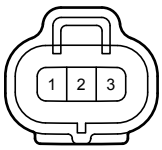


L 38
Yellow

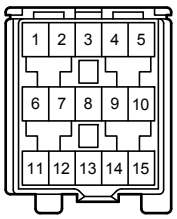


L 43
White

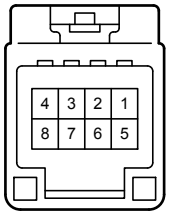


L 44
White

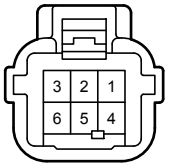


P 1
White

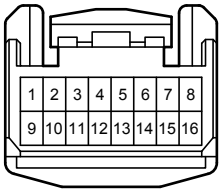


V 1
White

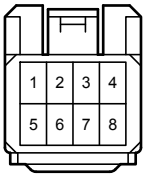


V 3
White

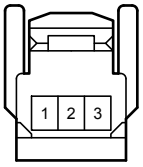

V 4
White

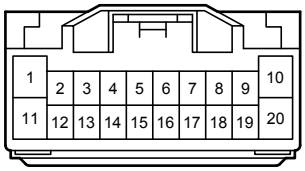


V 5
Gray

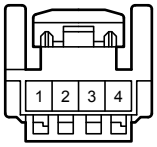


V 6
White




b 1
Orange




b 2
Black




b 3
Orange




b 4
Black




e 1
Black




e 2
White




g 1
White

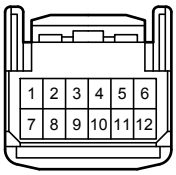


m 1
Black

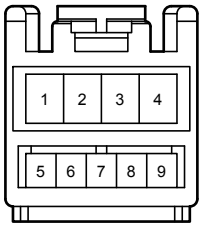


z 36
White

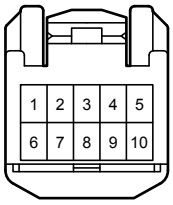


z 37
White




z 38
Black




z 39
Orange




z 53
White

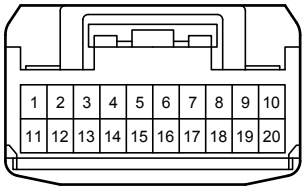


z 54
White

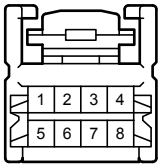


z 61
White

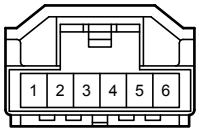


z 62
Black

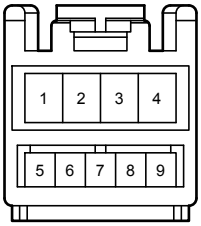


z 63
White




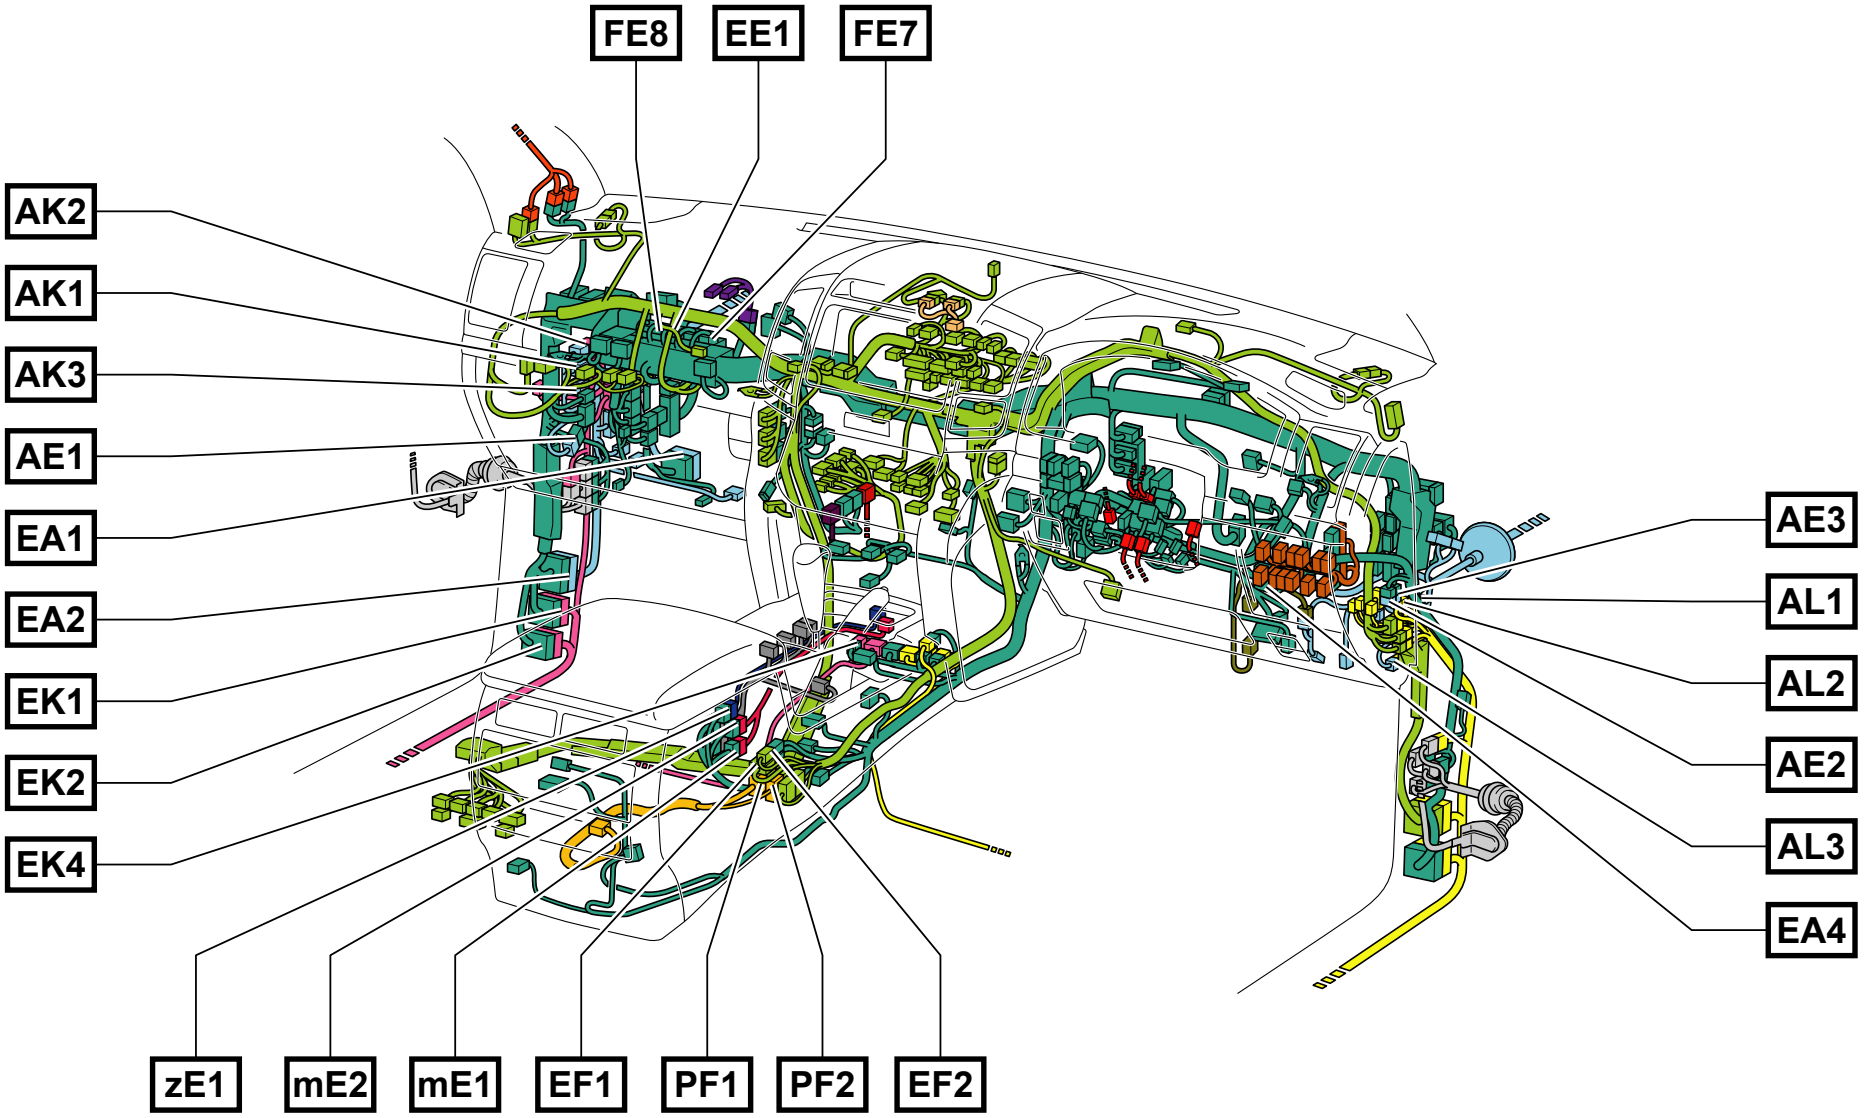
FE8
EE1
FE7
AK2
AK1
AK3
AE1
EA1
EA2
EK1
EK2
EK4
AE3
AL1
AL2
AE2
AL3
EA4
zE1
mE2
mE1
EF1
PF1
PF2
EF2


AE1
Yellow

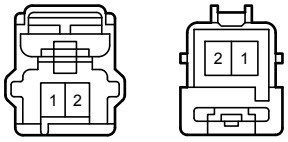


AE2
Yellow

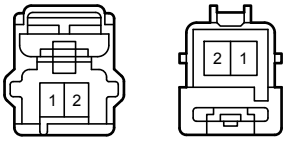


AE3
Gray

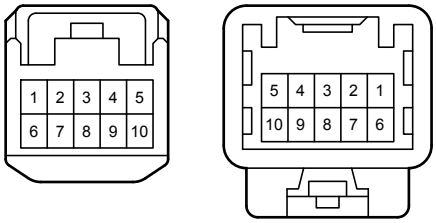


AK1
Blue

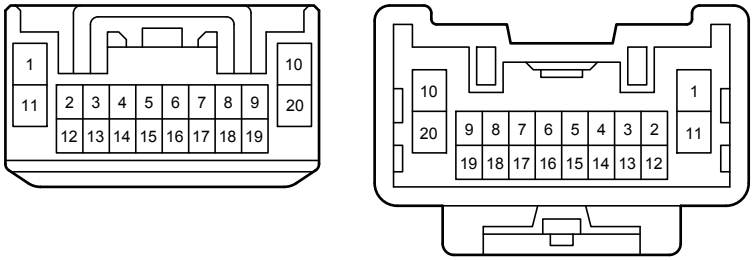


AK2
Gray

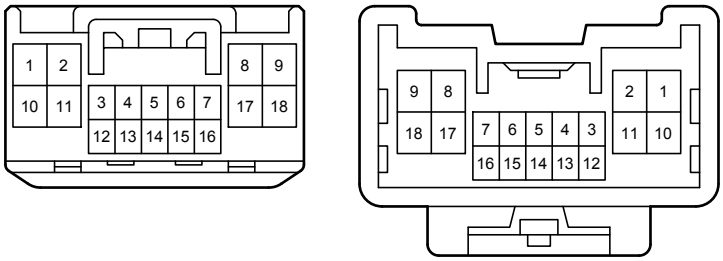


AK3
White

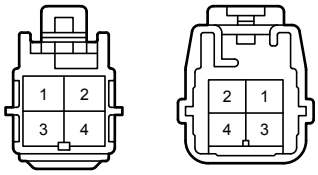


AL1
White

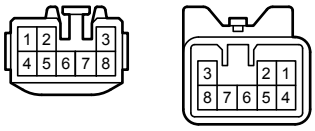

AL2
White

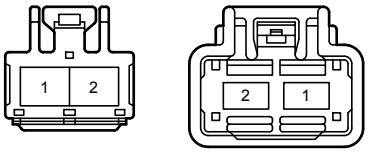


AL3
Blue

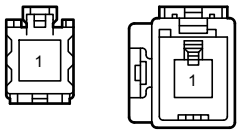

EA1


White

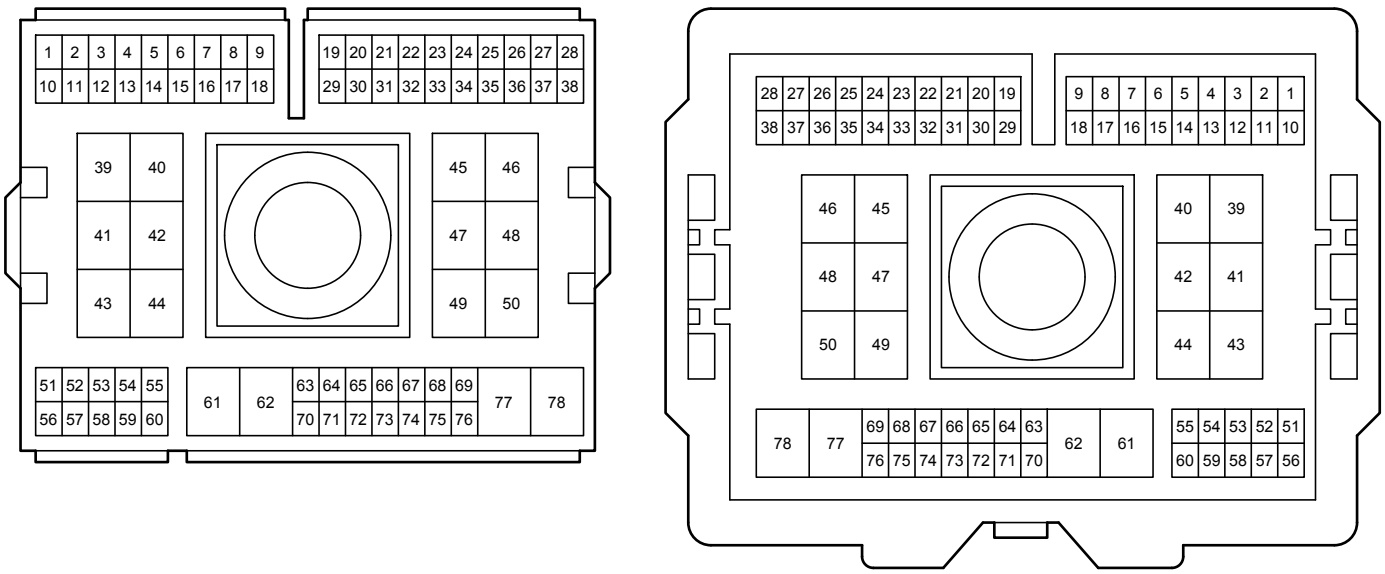

EA2


White


Gray

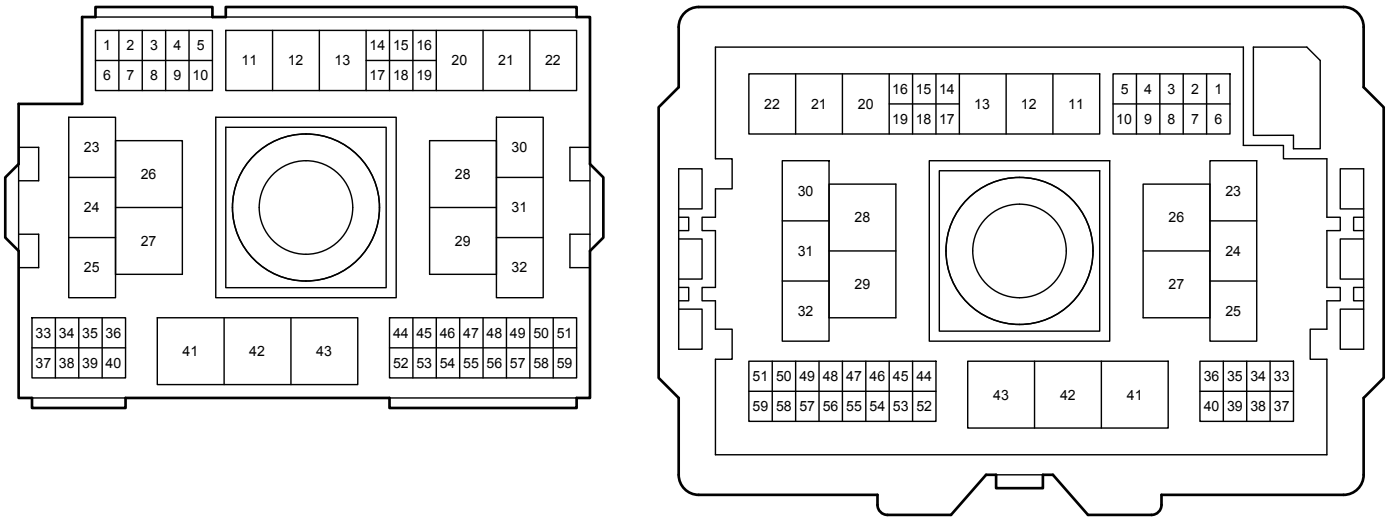



EA4

White

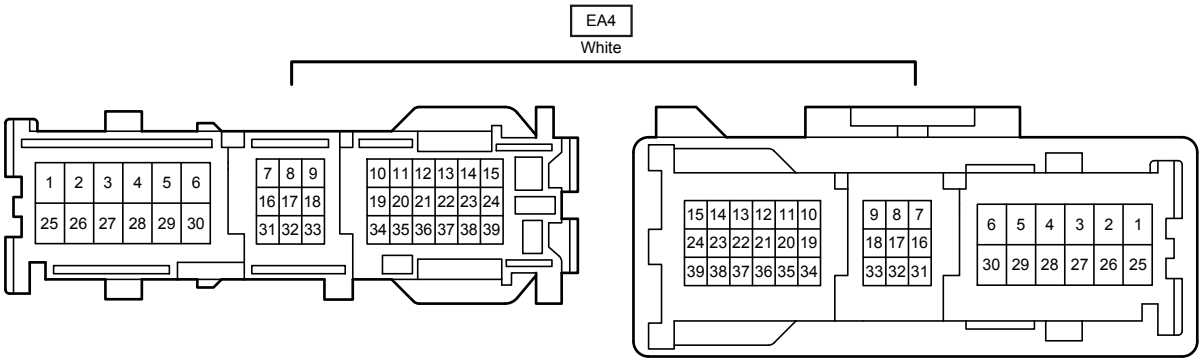


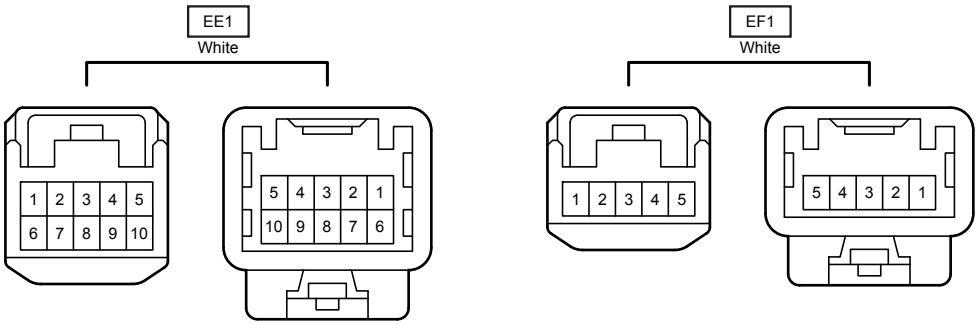
EE1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
EF1
White
1 2 3 4 5
5 4 3 2 1

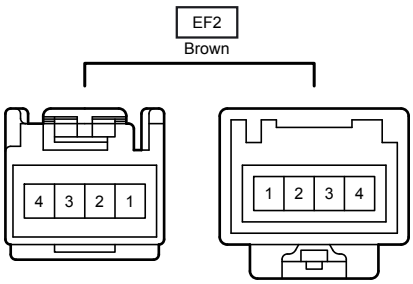

EF2
Brown
4 3 2 1
1 2 3 4

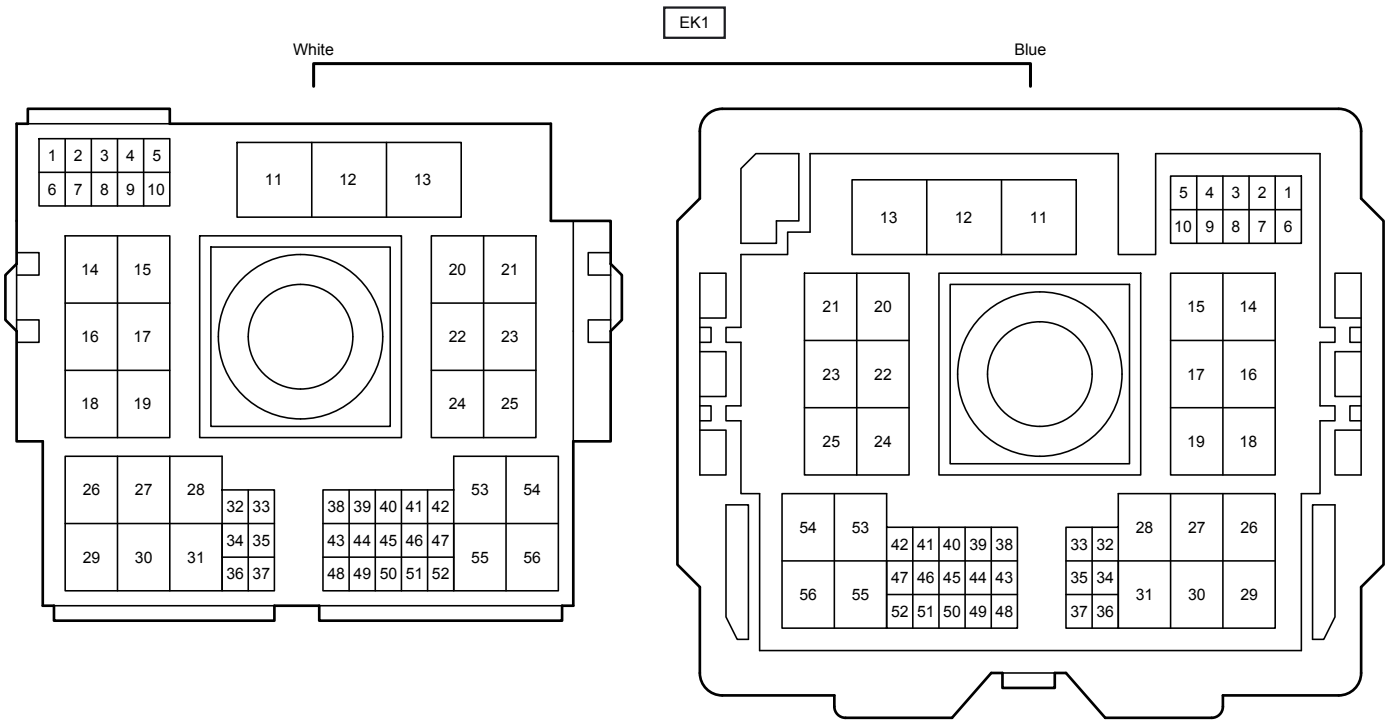
EK1
White
Blue
1 2 3 4 5
6 7 8 9 10
11 12 13
14 15
16 17
18 19
20 21
22 23
24 25
26 27 28
29 30 31
32 33
34 35
36 37
38 39 40 41 42
43 44 45 46 47
48 49 50 51 52
53 54
55 56
13 12 11
5 4 3 2 1
10 9 8 7 6
21 20
23 22
25 24
15 14
17 16
19 18
54 53
56 55
42 41 40 39 38
47 46 45 44 43
52 51 50 49 48
33 32
35 34
37 36
28 27 26
31 30 29


EK2
White

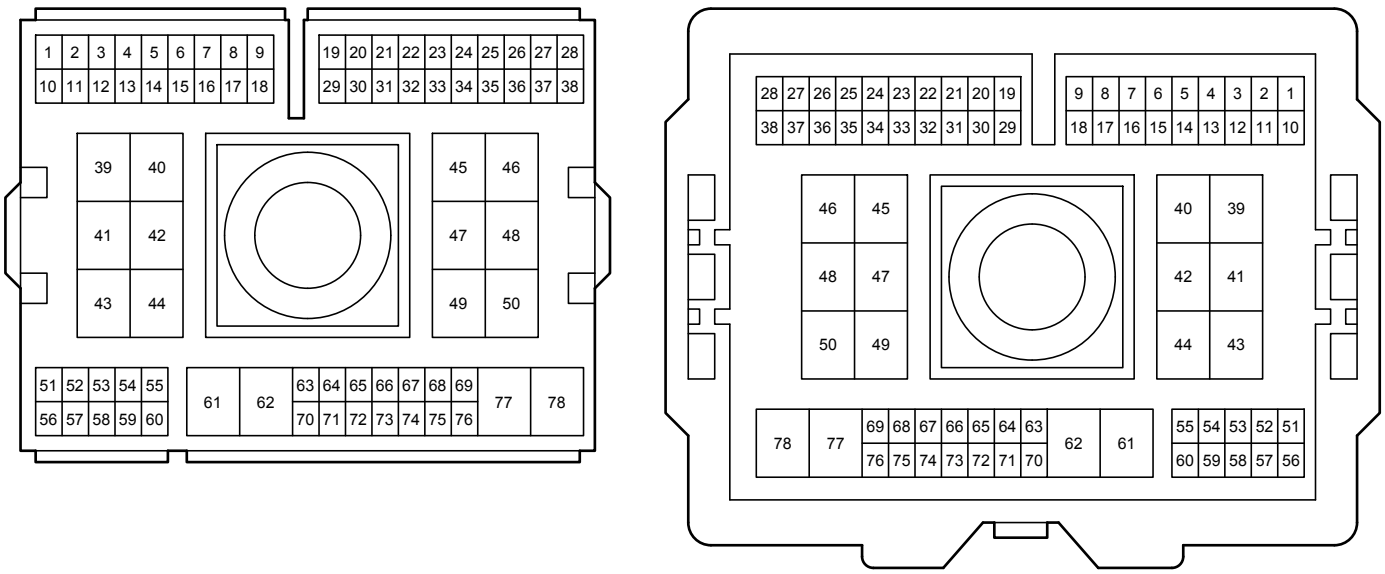


EK4
White

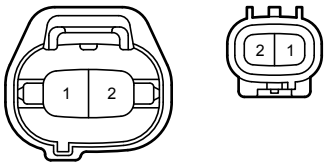


FE7
White

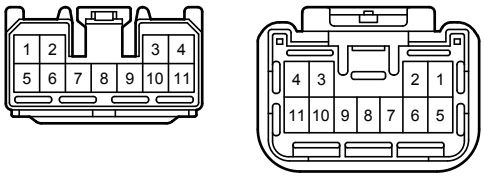


FE8
White

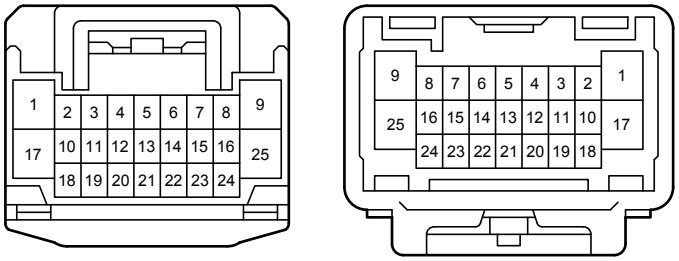



PF1
White

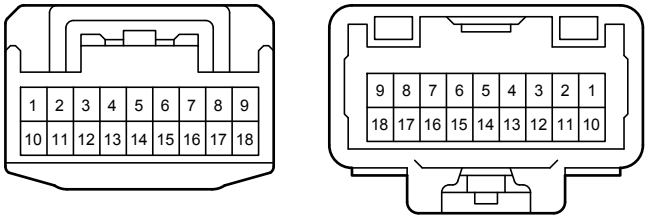

PF2
White

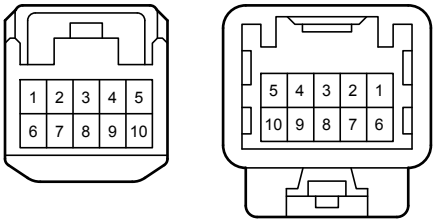


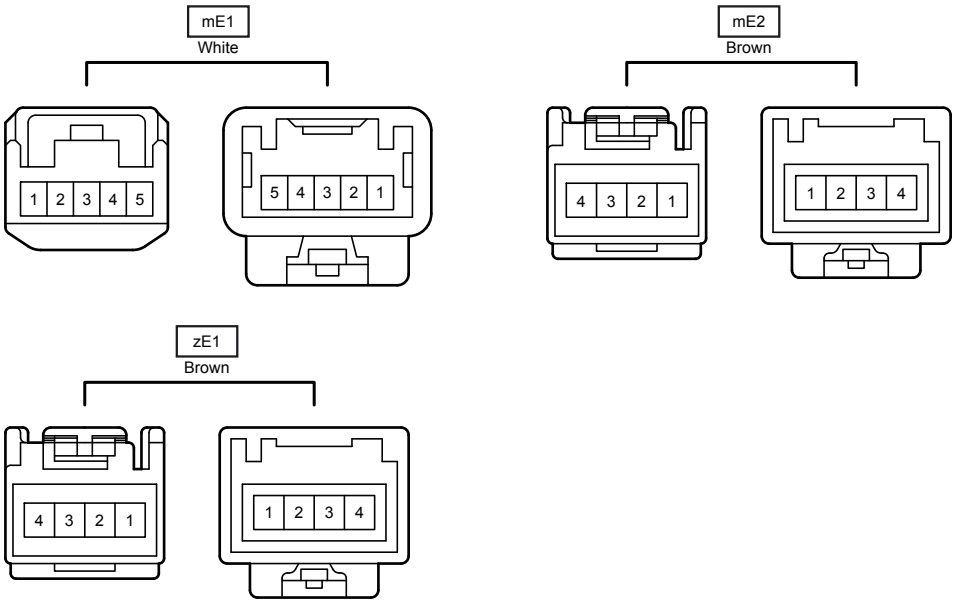
mE1
White
1 2 3 4 5
5 4 3 2 1
mE2
Brown
4 3 2 1
1 2 3 4
zE1
Brown
4 3 2 1
1 2 3 4

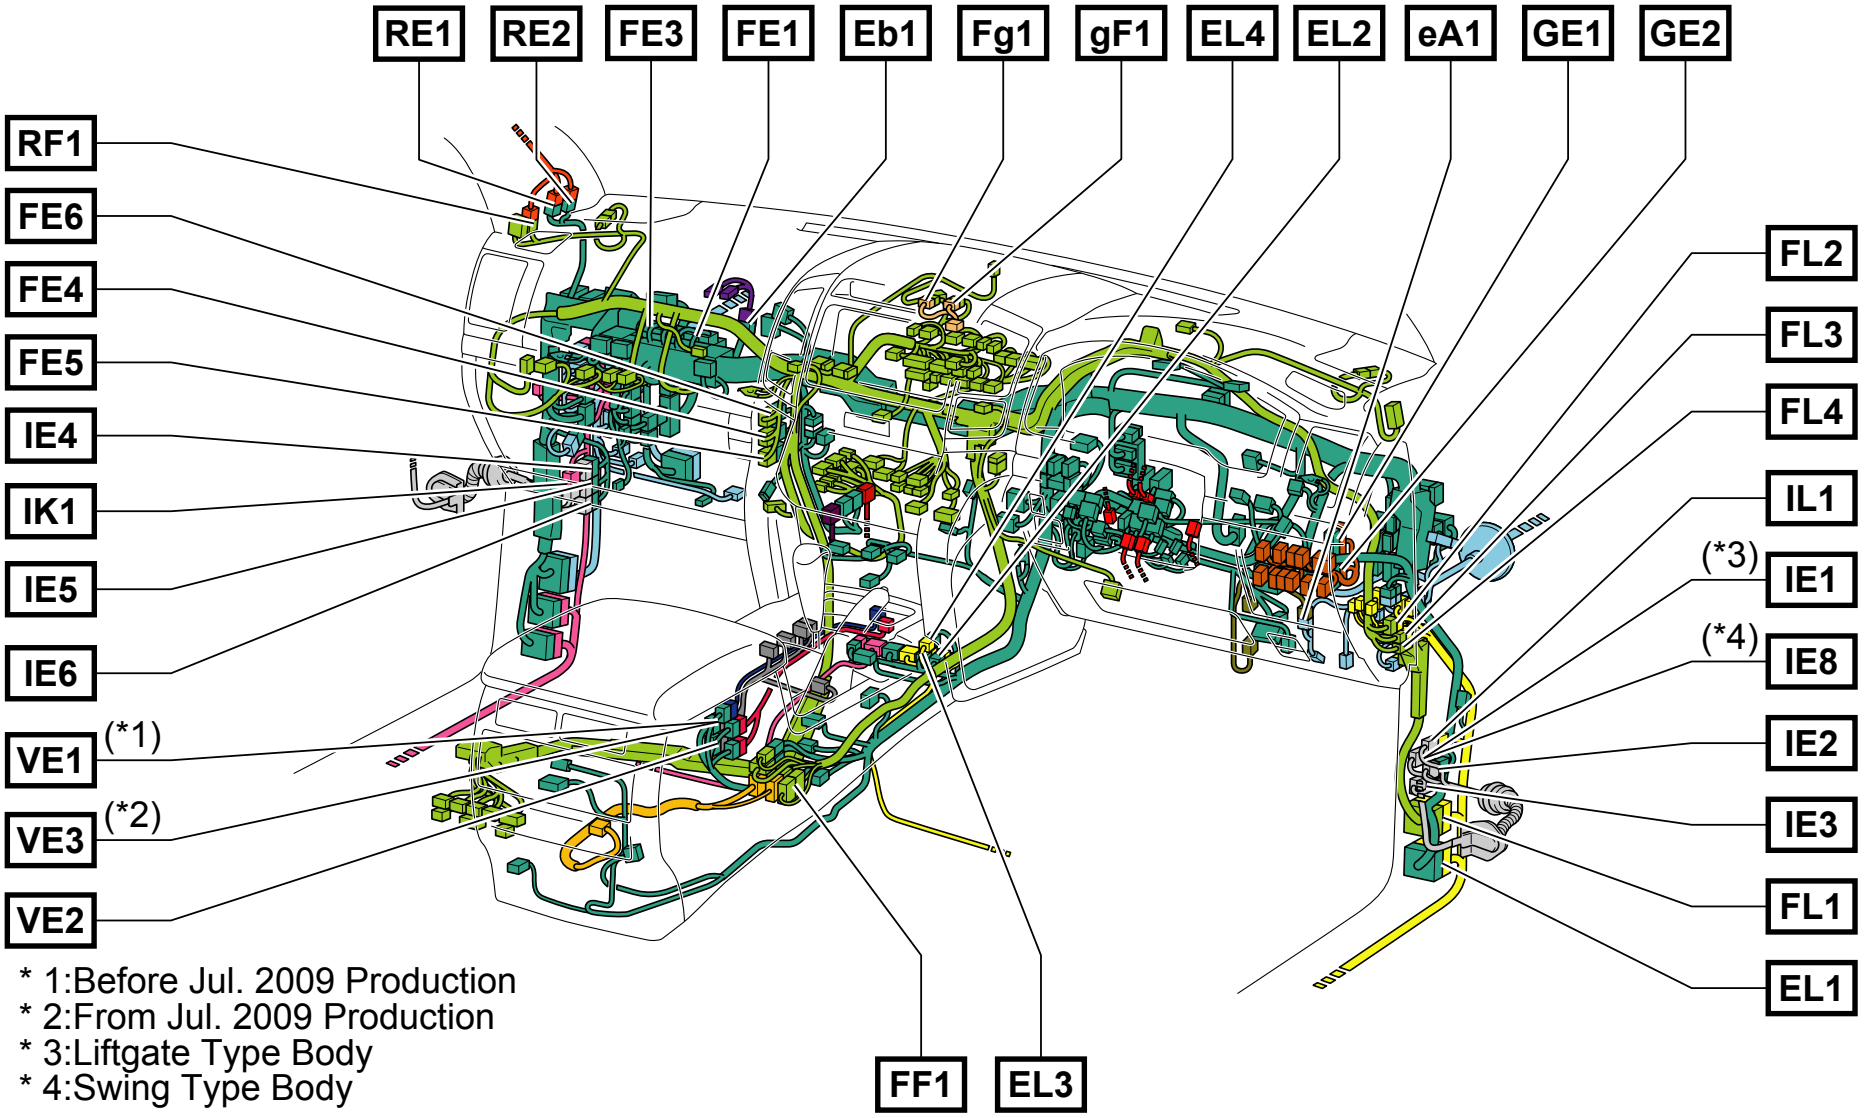


* 1:Before Jul. 2009 Production
* 2:From Jul. 2009 Production
* 3:Liftgate Type Body
* 4:Swing Type Body


EL1
White

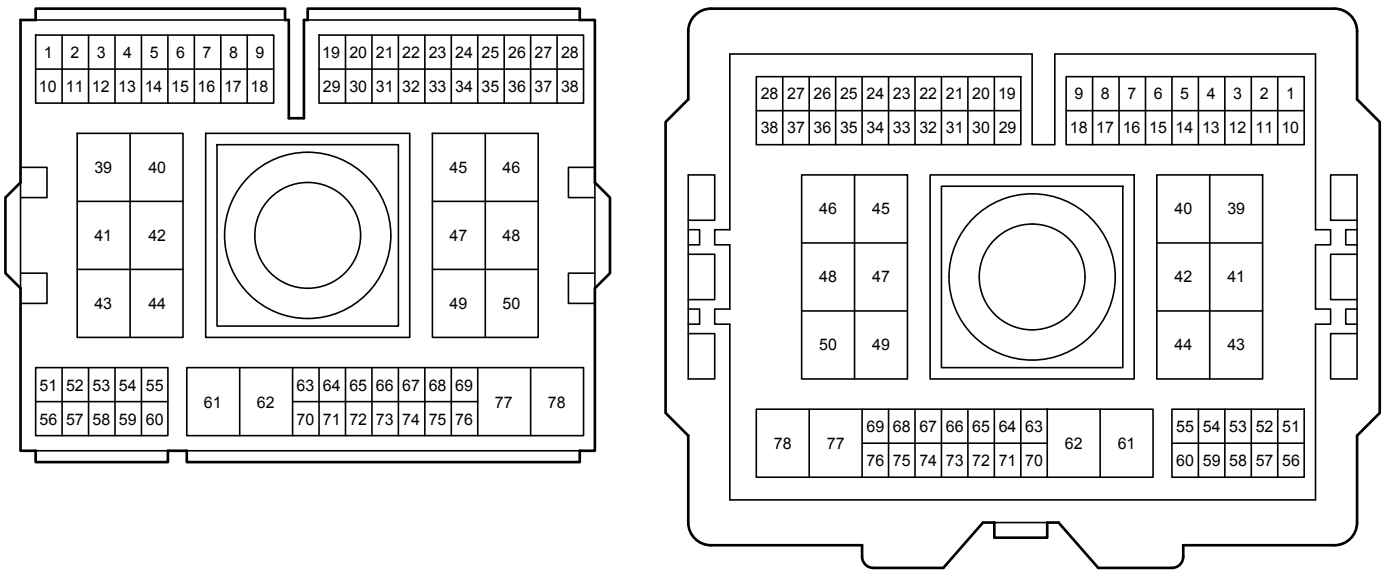


EL2
Gray

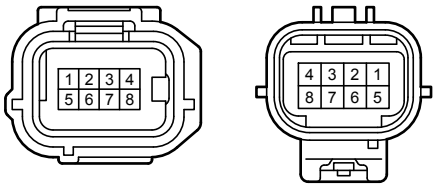


EL3
Brown

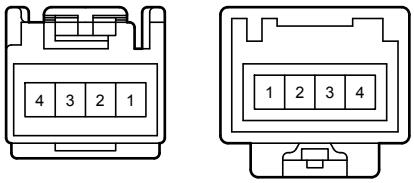


EL4
Brown

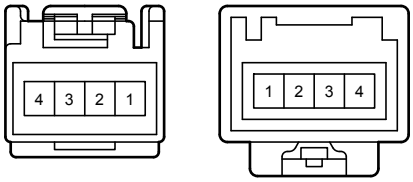



Eb1
Yellow

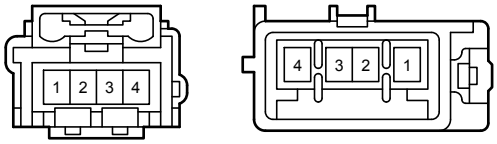



FE1
White

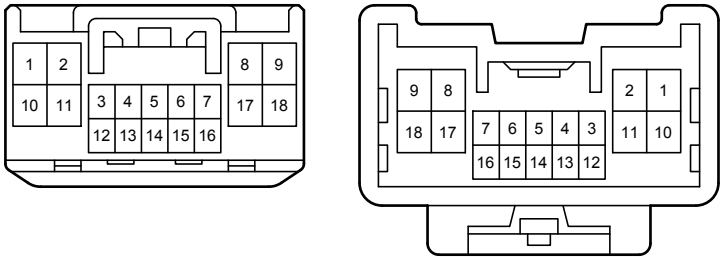


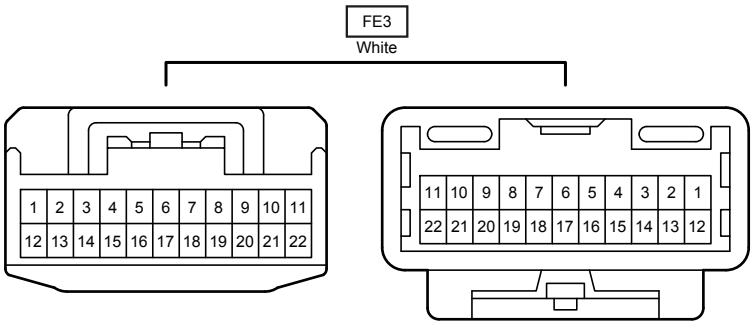

FE3
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12

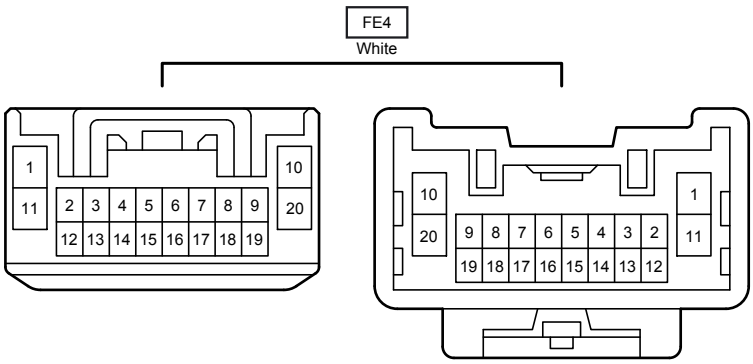

FE4
White
1
11
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
10
20
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12
1
11

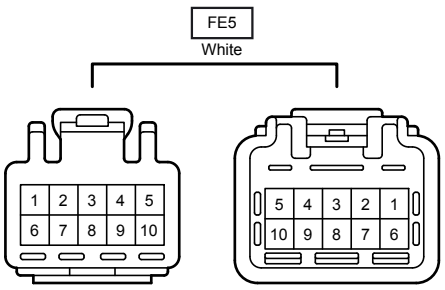

FE5
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

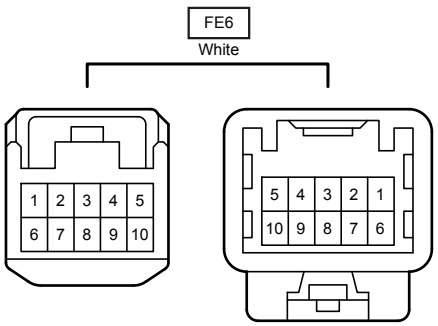

FE6
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

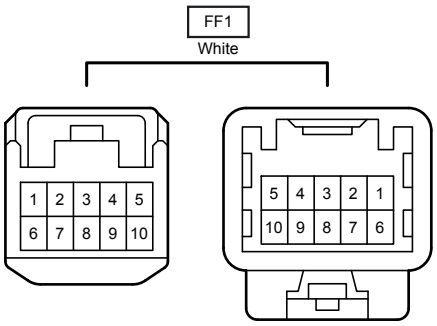

FF1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

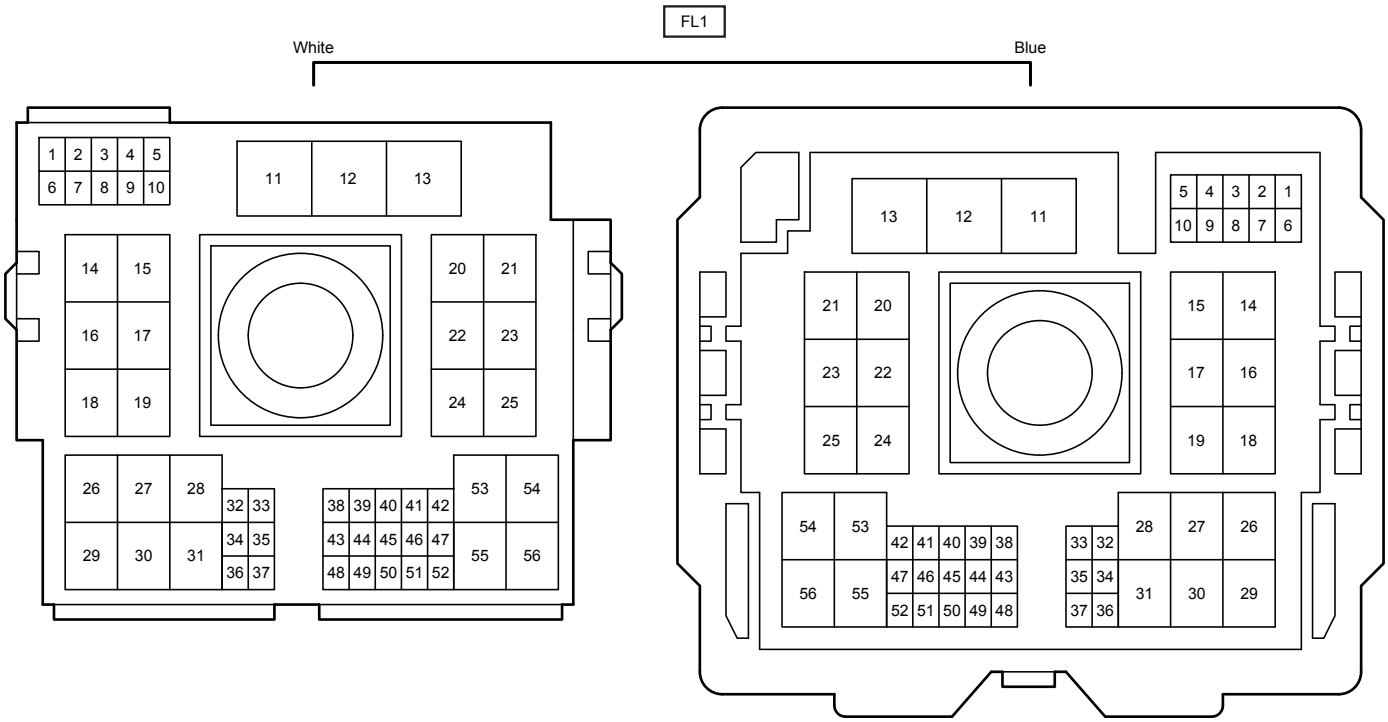

FL1
White
Blue
1 2 3 4 5
6 7 8 9 10
11 12 13
14 15
16 17
18 19
20 21
22 23
24 25
26 27 28
29 30 31
32 33
34 35
36 37
38 39 40 41 42
43 44 45 46 47
48 49 50 51 52
53 54
55 56
13 12 11
5 4 3 2 1
10 9 8 7 6
21 20
23 22
25 24
15 14
17 16
19 18
54 53
56 55
42 41 40 39 38
47 46 45 44 43
52 51 50 49 48
33 32
35 34
37 36
28 27 26
31 30 29

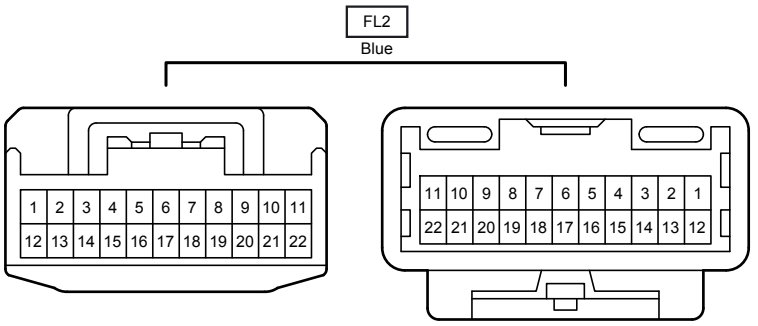
FL2
Blue
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12

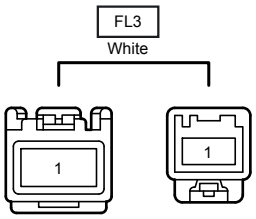

FL3
White
1
1

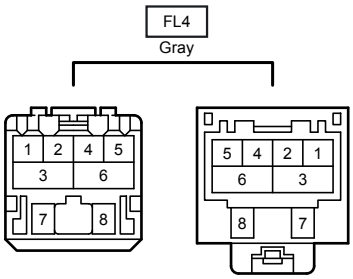
FL4
Gray
1 2 4 5
3 6
7 8
5 4 2 1
6 3
8 7

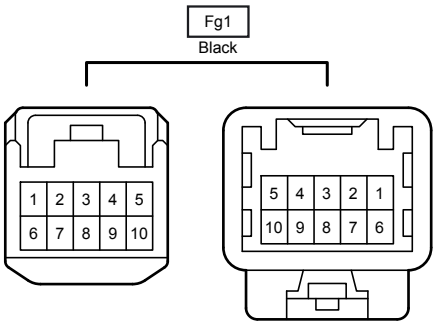

Fg1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

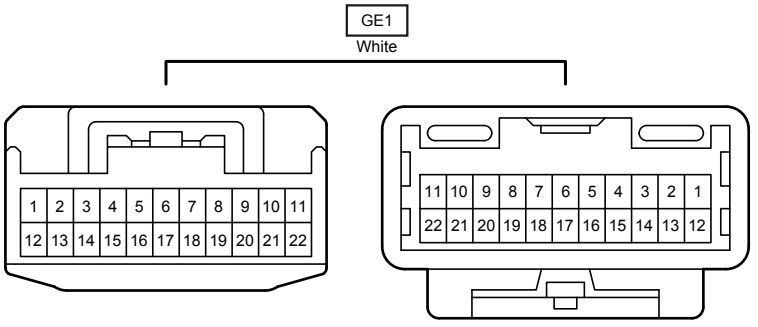
GE1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12


GE2
White

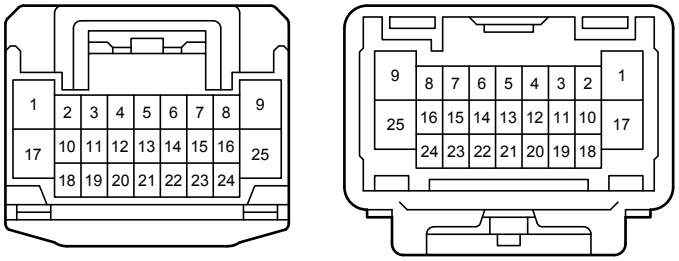


IE1
Gray

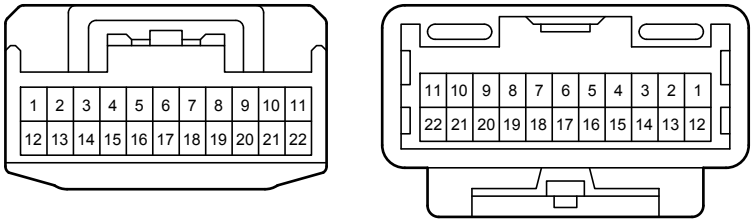


IE2
Blue

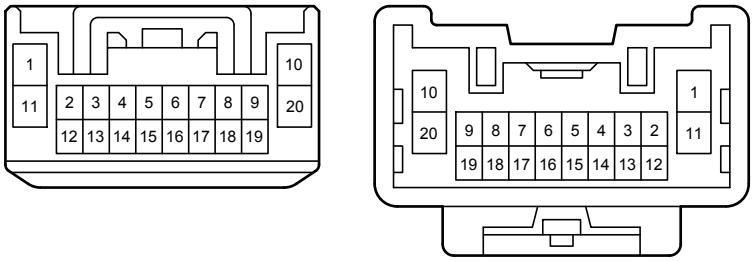


IE3
White

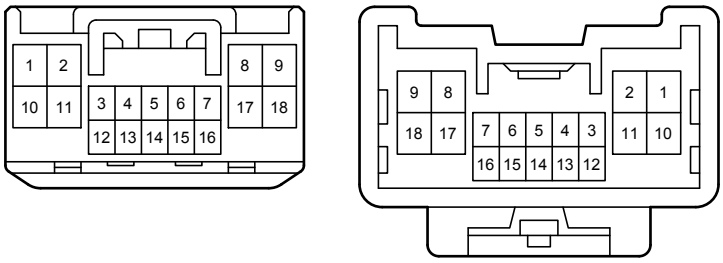


IE4
Gray

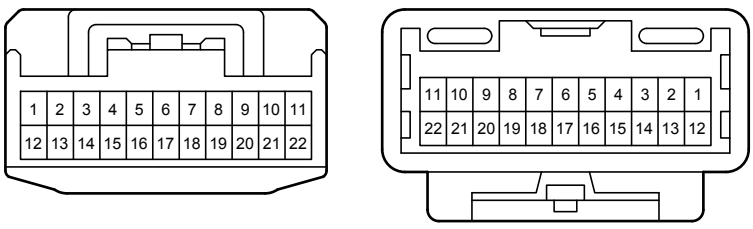


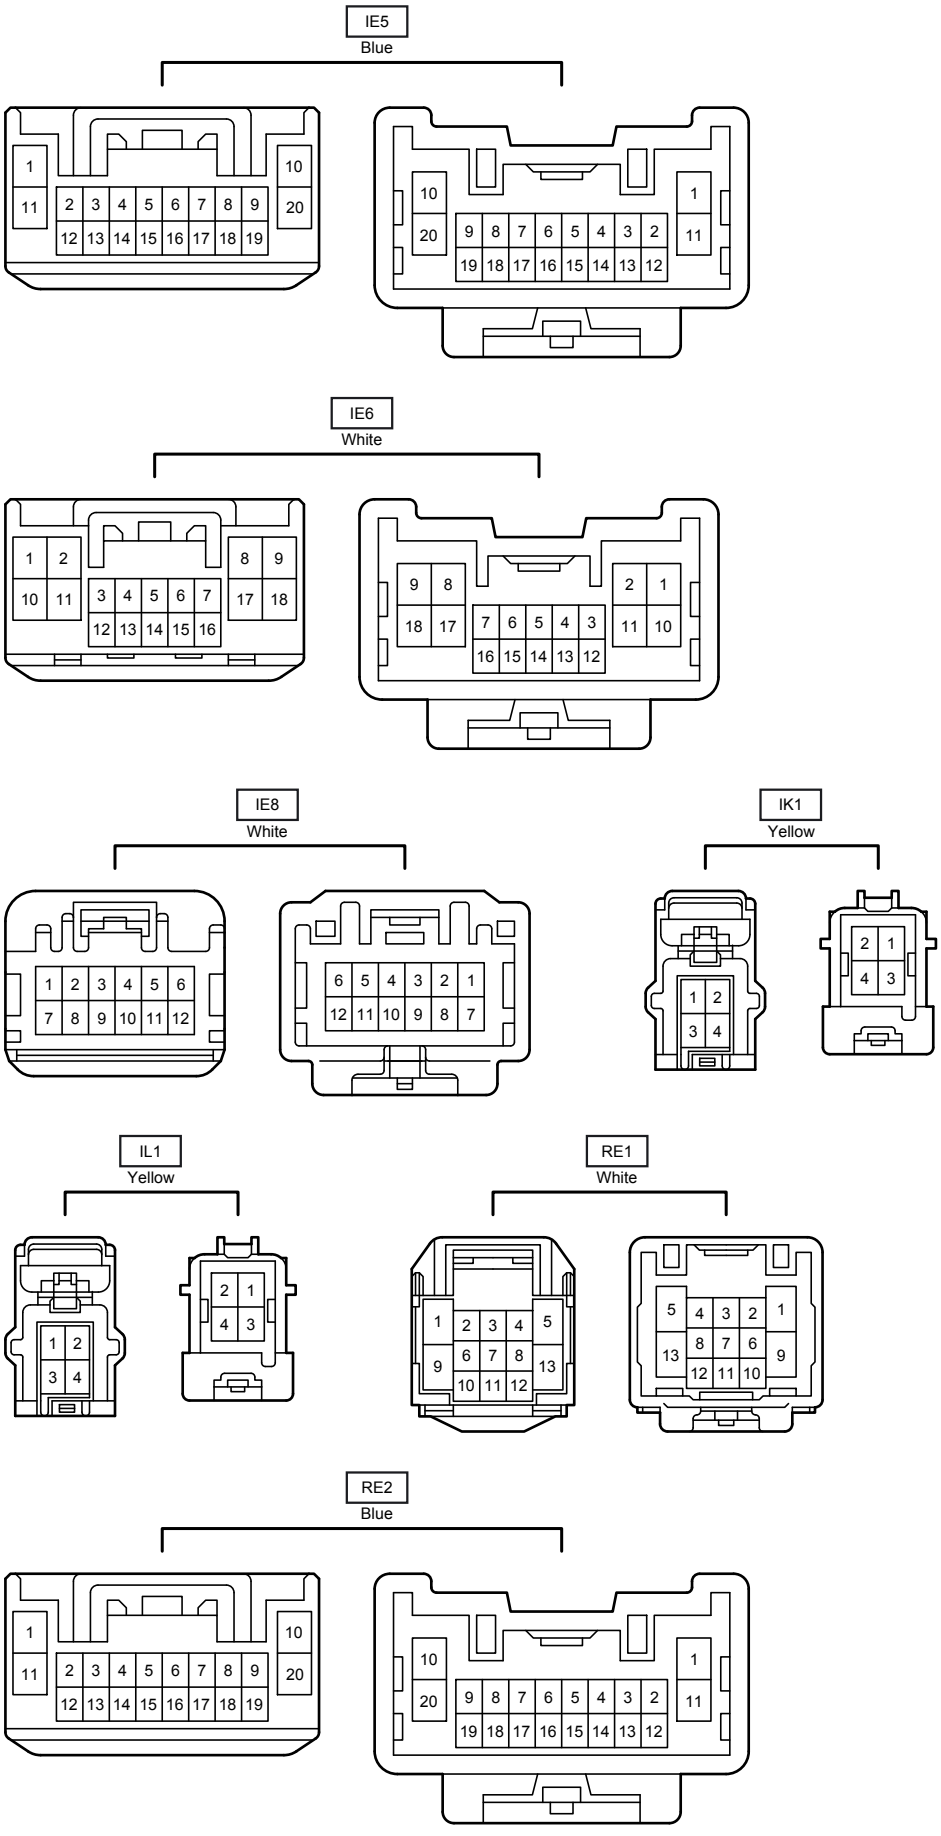
IE5
Blue
1 11 2 3 4 5 6 7 8 9 10 12 13 14 15 16 17 18 19 20
10 20 9 8 7 6 5 4 3 2 1 19 18 17 16 15 14 13 12 11
IE6
White
1 2 10 11 3 4 5 6 7 12 13 14 15 16 8 9 17 18
9 8 18 17 7 6 5 4 3 16 15 14 13 12 2 1 11 10
IE8
White
1 2 3 4 5 6 7 8 9 10 11 12
6 5 4 3 2 1 12 11 10 9 8 7
IK1
Yellow
1 2 3 4
2 1 4 3
IL1
Yellow
1 2 3 4
2 1 4 3
RE1
White
1 2 3 4 5 6 7 8 9 10 11 12 13
5 4 3 2 1 13 8 7 6 9 12 11 10
RE2
Blue
1 11 2 3 4 5 6 7 8 9 10 12 13 14 15 16 17 18 19 20
10 20 9 8 7 6 5 4 3 2 1 19 18 17 16 15 14 13 12 11


RF1
Gray

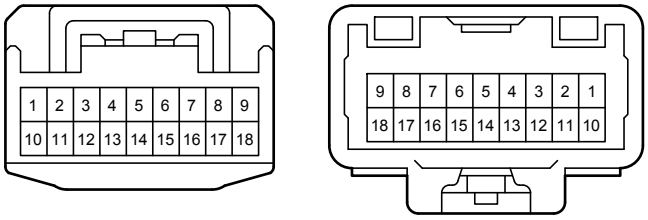


VE1
White

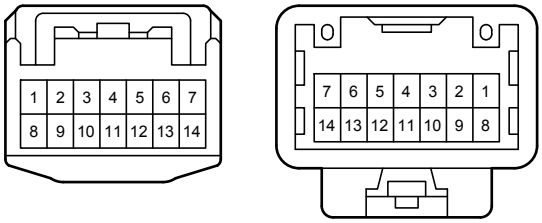


VE2
White

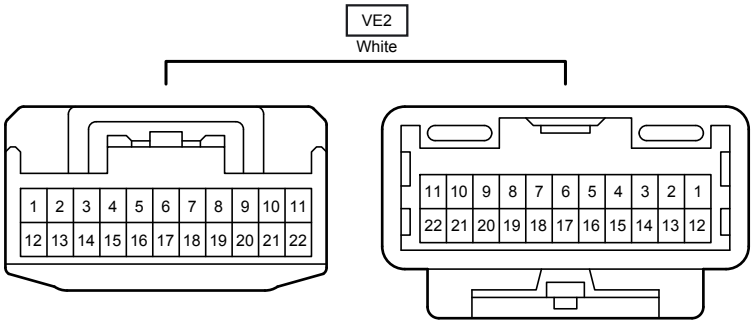


VE3
Gray

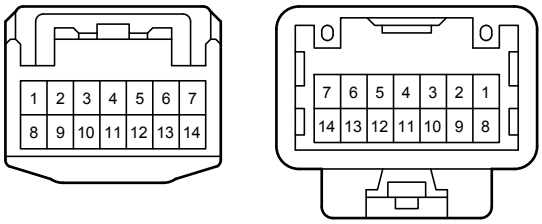



eA1
White

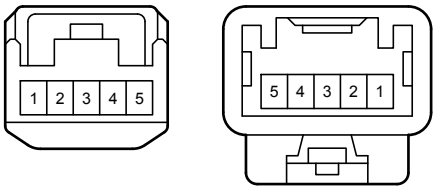



gF1
Black

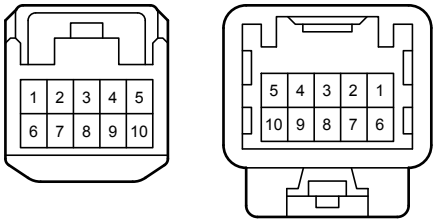

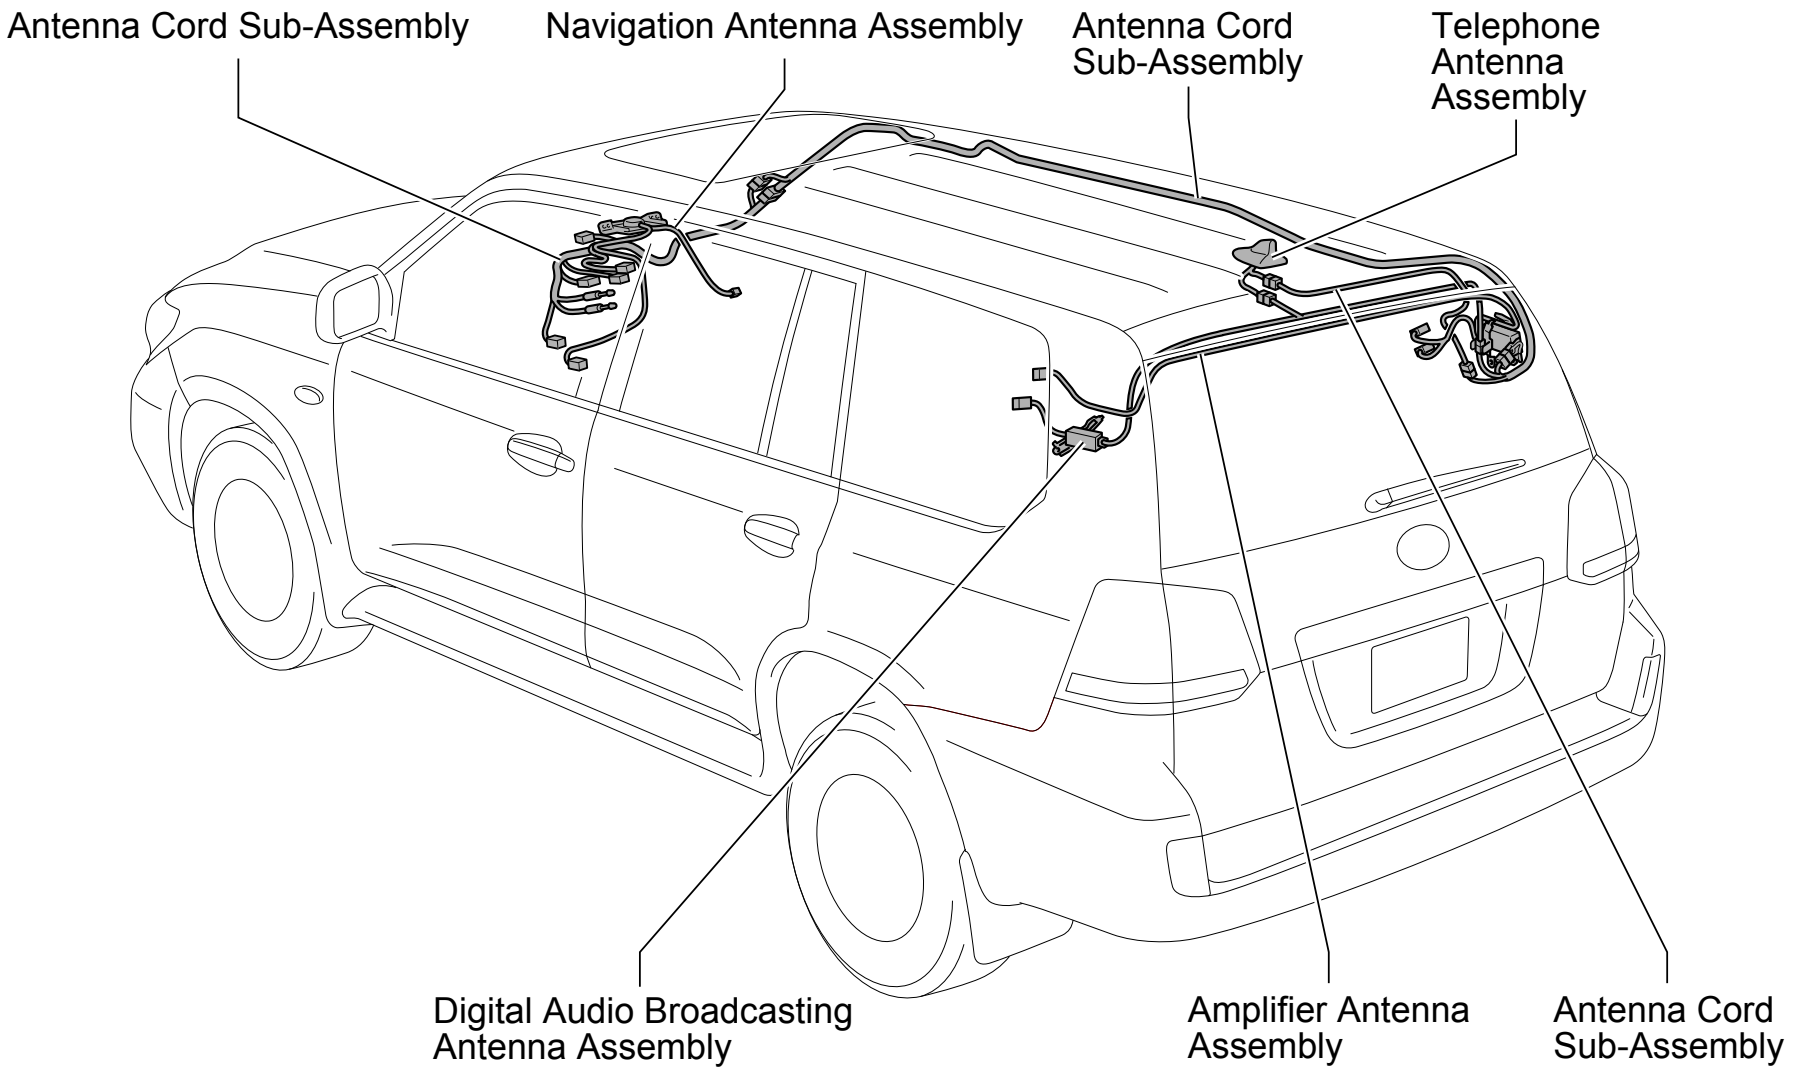
Antenna Cord Sub-Assembly
Navigation Antenna Assembly
Antenna Cord Sub-Assembly
Telephone Antenna Assembly
Digital Audio Broadcasting Antenna Assembly
Amplifier Antenna Assembly
Antenna Cord Sub-Assembly

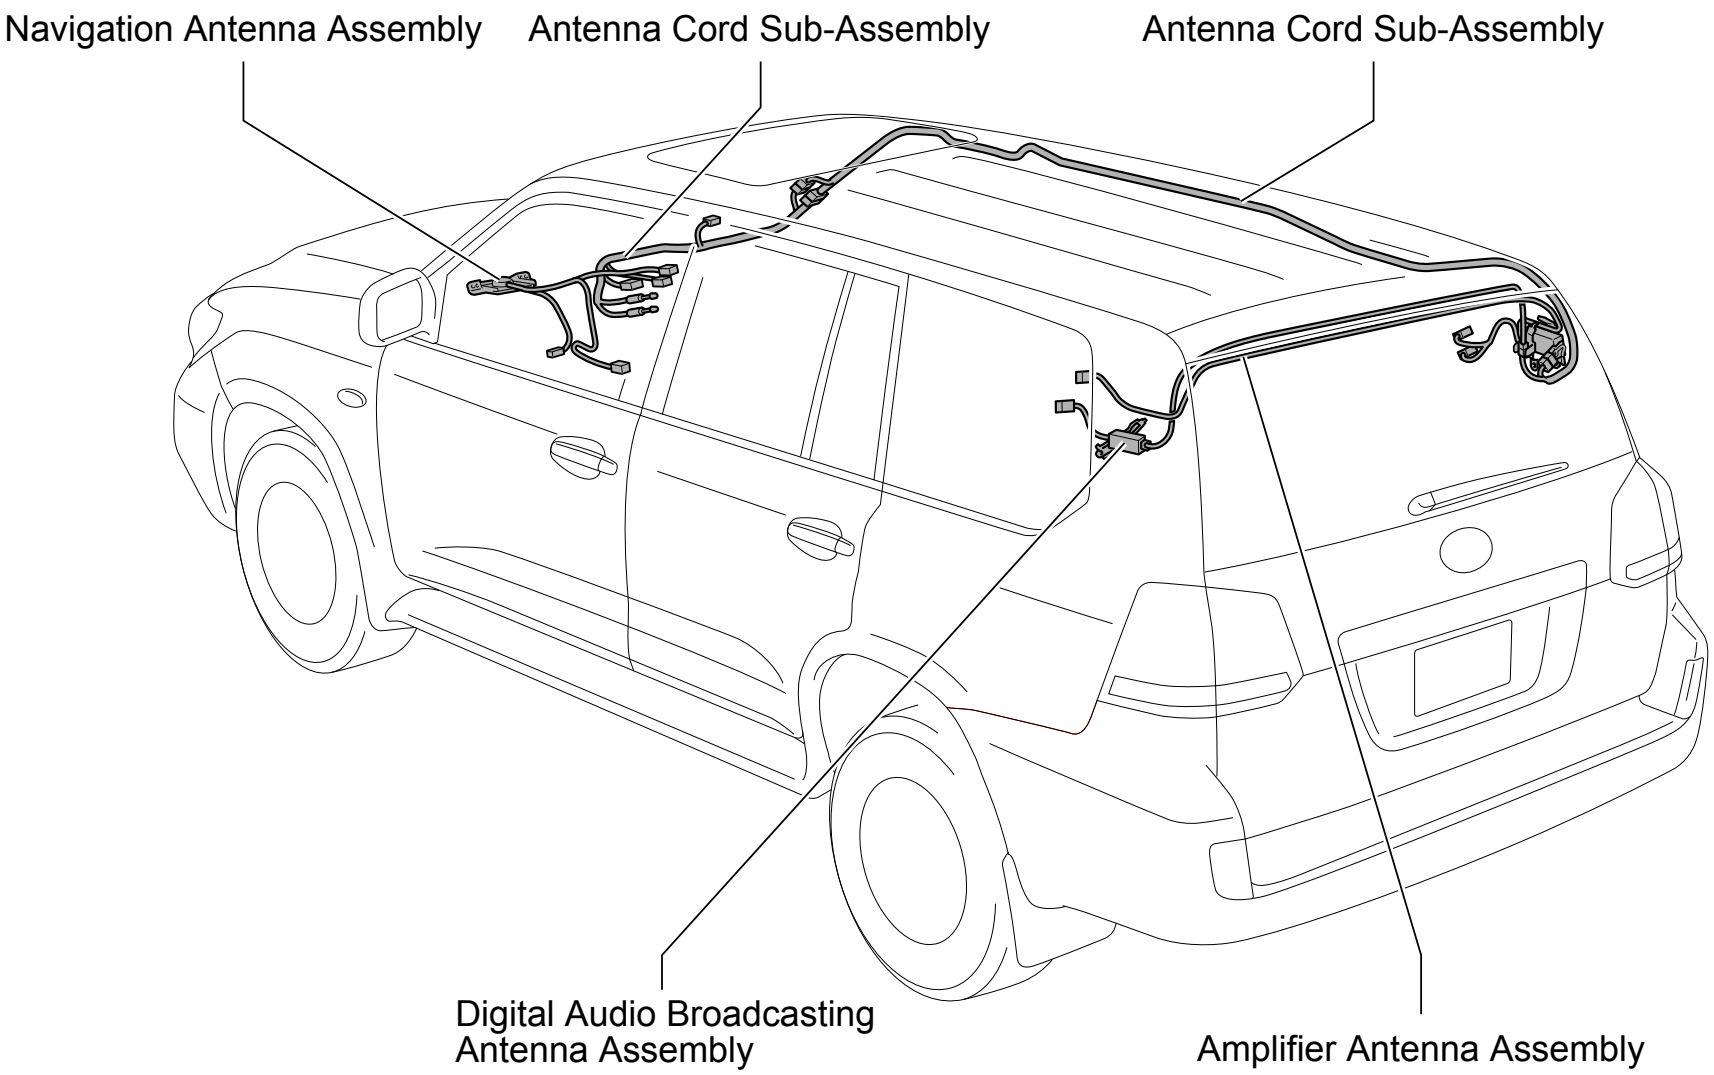
Navigation Antenna Assembly
Antenna Cord Sub-Assembly
Antenna Cord Sub-Assembly
Digital Audio Broadcasting Antenna Assembly
Amplifier Antenna Assembly

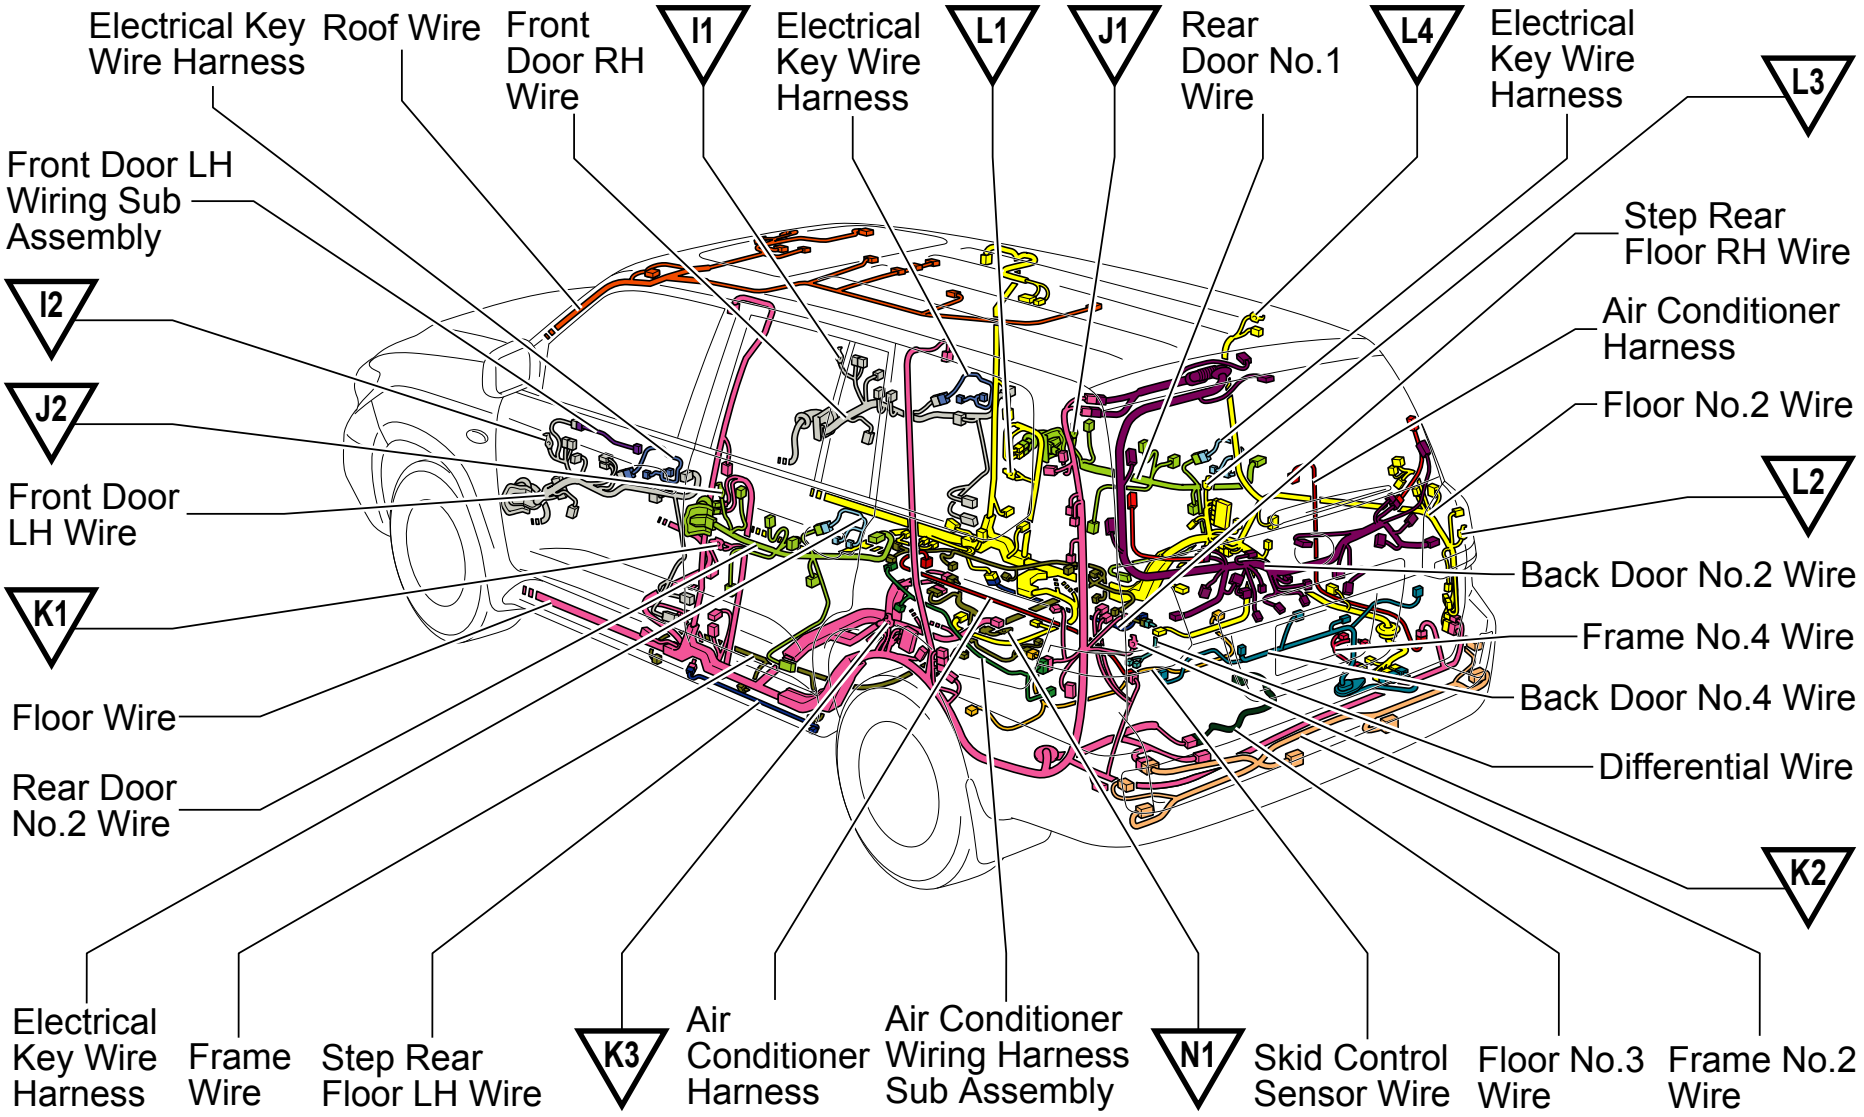
Electrical Key Wire Harness
Roof Wire
Front Door RH Wire
I1
Electrical Key Wire Harness
L1
J1
Rear Door No.1 Wire
L4
Electrical Key Wire Harness
L3
Front Door LH Wiring Sub Assembly
I2
J2
Front Door LH Wire
K1
Floor Wire
Rear Door No.2 Wire
Step Rear Floor RH Wire
Air Conditioner Harness
Floor No.2 Wire
L2
Back Door No.2 Wire
Frame No.4 Wire
Back Door No.4 Wire
Differential Wire
K2
Electrical Key Wire Harness
Frame Wire
Step Rear Floor LH Wire
K3
Air Conditioner Harness
Air Conditioner Wiring Harness Sub Assembly
N1
Skid Control Sensor Wire
Floor No.3 Wire
Frame No.2 Wire

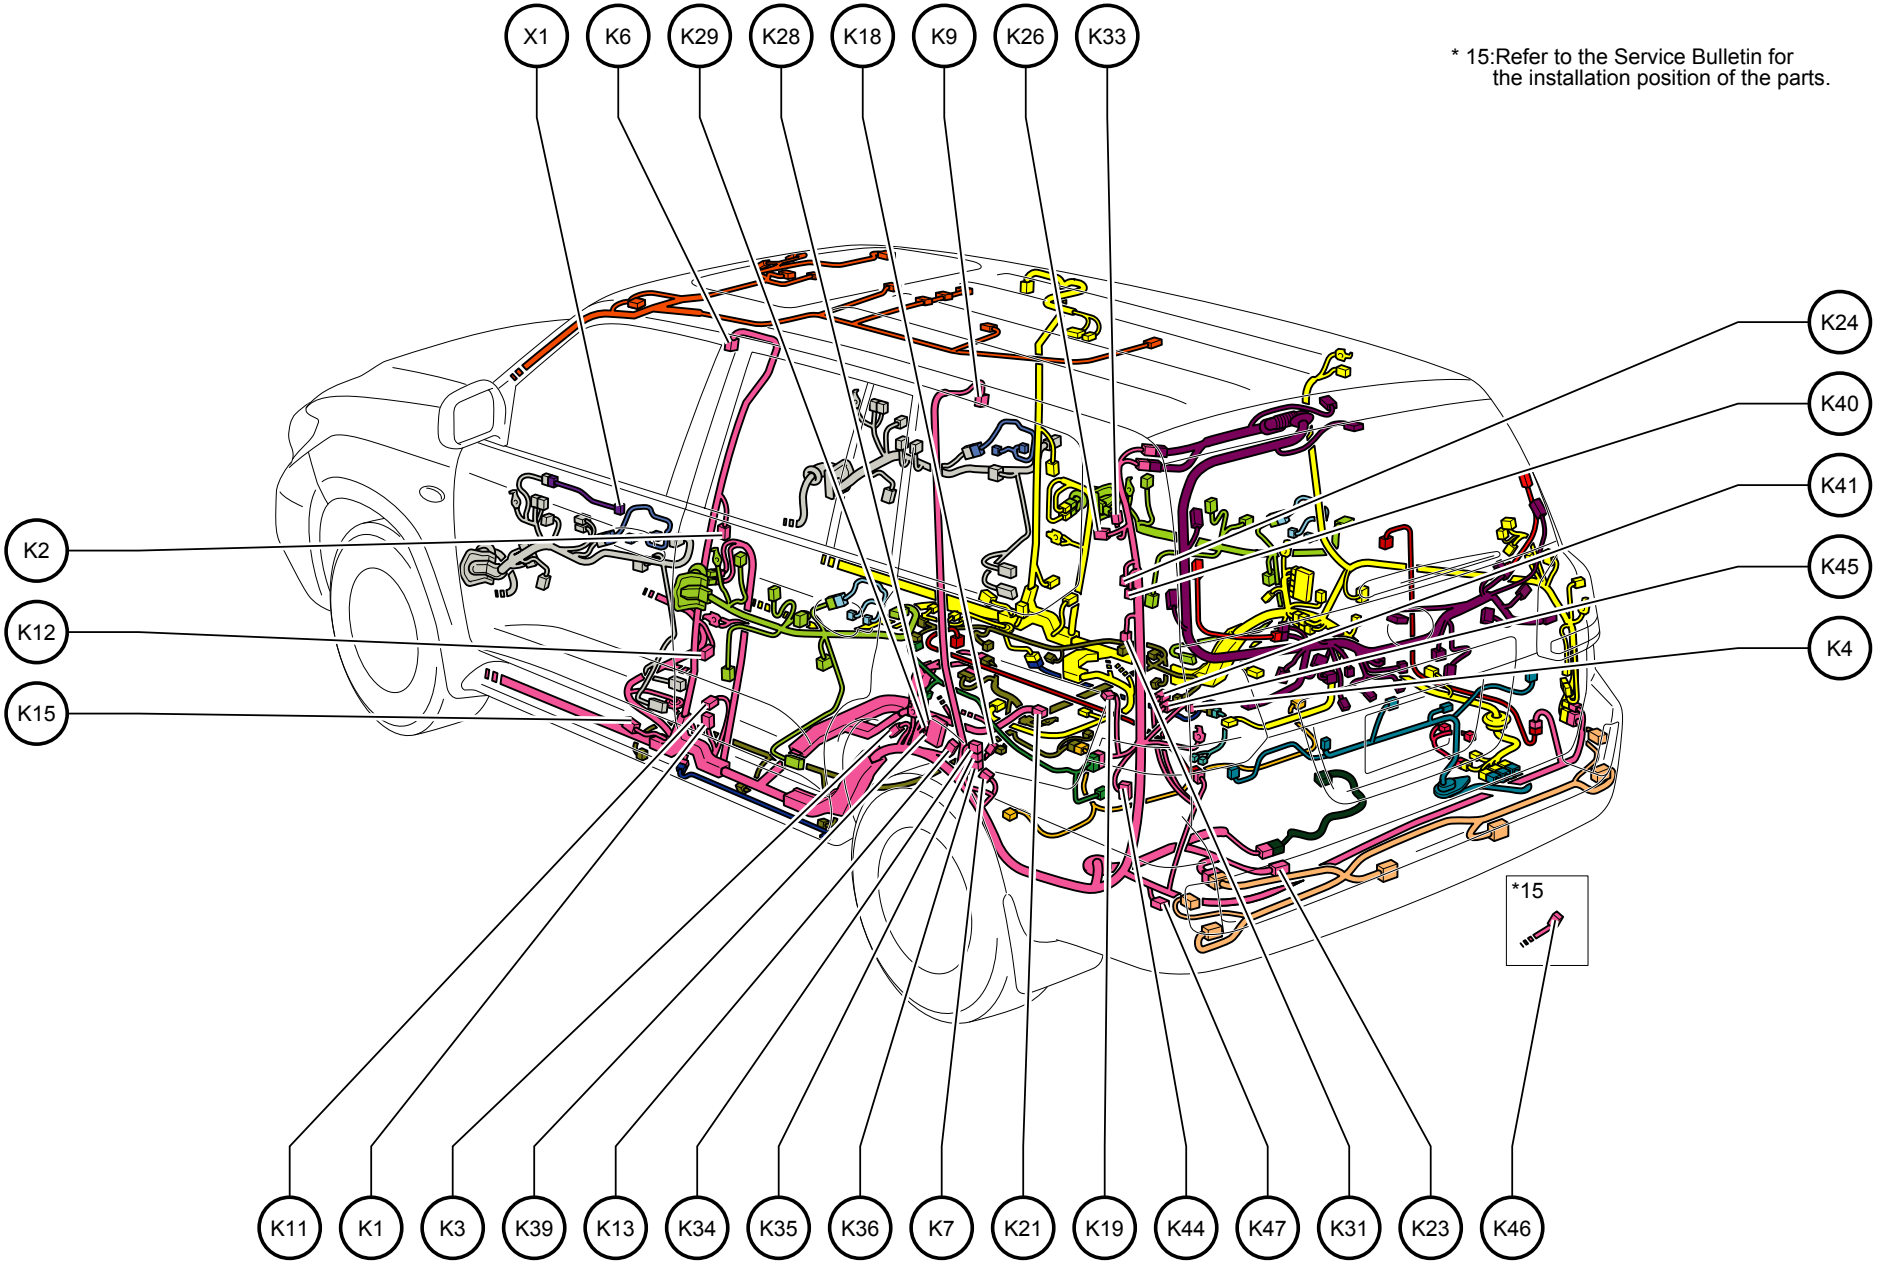


* 15:Refer to the Service Bulletin for the installation position of the parts.

K 1 Front Pretensioner LH
K 2 Front Door Courtesy Light Switch Assembly LH
K 3 Rear Door Courtesy Light Switch Assembly LH
K 4 Rear Combination Light Assembly LH
K 6 Curtain Shield Airbag Assembly Circuit LH
K 7 Rear Side Airbag Sensor Assembly LH
K 9 Curtain Shield Airbag Assembly Circuit LH
K 11 Front Pre-Crash Seat Belt Motor LH
K 12 Front Tension Reducer LH
K 13 Rear Pretensioner LH
K 15 No.2 Interior Illumination Light Assembly
K 18 Theft Warning Siren Assembly
K 19 Rear A/C Blower Assembly
K 21 Cooler Thermistor LH
K 23 Outside Luggage Electrical Key Antenna
K 24 Towing Converter
K 26 Glass Breakage Sensor (Quarter Glass LH)
K 28 Junction Connector
K 29 Junction Connector
K 31 Diode (Rear Cooler)
K 33 Diode (Stop Light)
K 34 Suspension Control ECU
K 35 Suspension Control ECU
K 36 Suspension Control ECU
K 39 Junction Connector
K 40 Towing Converter
K 41 Rear Power Outlet Socket Assembly
K 44 Voltage Inverter Assembly
K 45 Power Outlet Socket Assembly
K 46 Theft Warning Siren Assembly
K 47 Power Back Door Warning Buzzer

X 1 Seat Memory Switch LH

K 1
Yellow

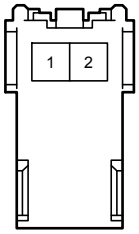


K 2
White




K 3
White




K 4
White

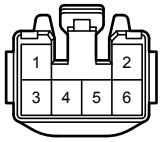


K 6
Black

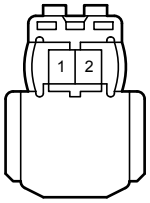


K 7
Yellow

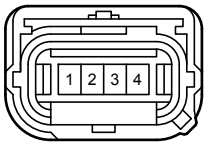


K 9
Black

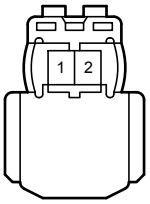


K 11
White



K 12
White




K 13
Yellow

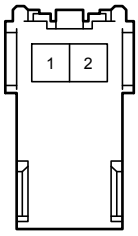


K 15
White




K 18
Gray

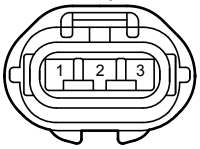


K 19
White

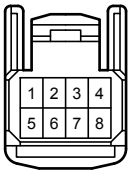


K 21
Black




K 23
White



K 24
White

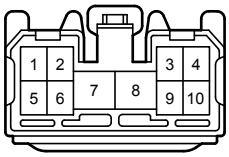


K 26
White



K 28
White



K 29
White




K 31
White




K 33
White




K 34
Black

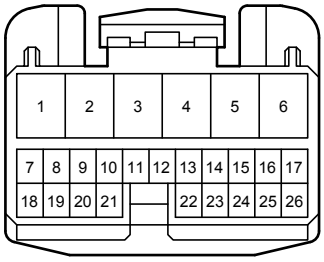


K 35
Black

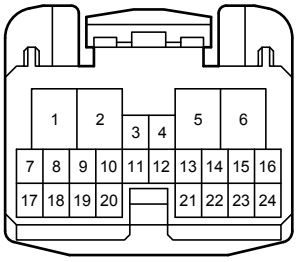


K 36
Black

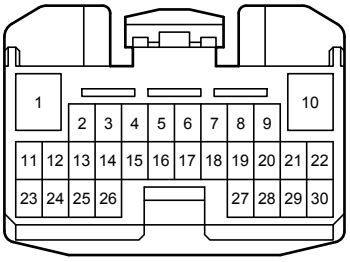


K 39
White




K 40
White




K 41
White




K 44
White

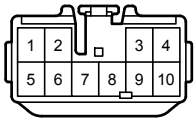


K 45
Black

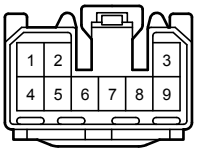


K 46
Black

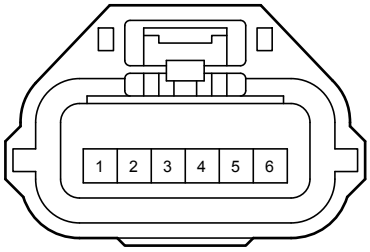


K 47
Black



X 1
Black

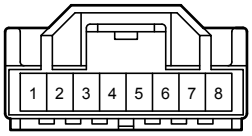

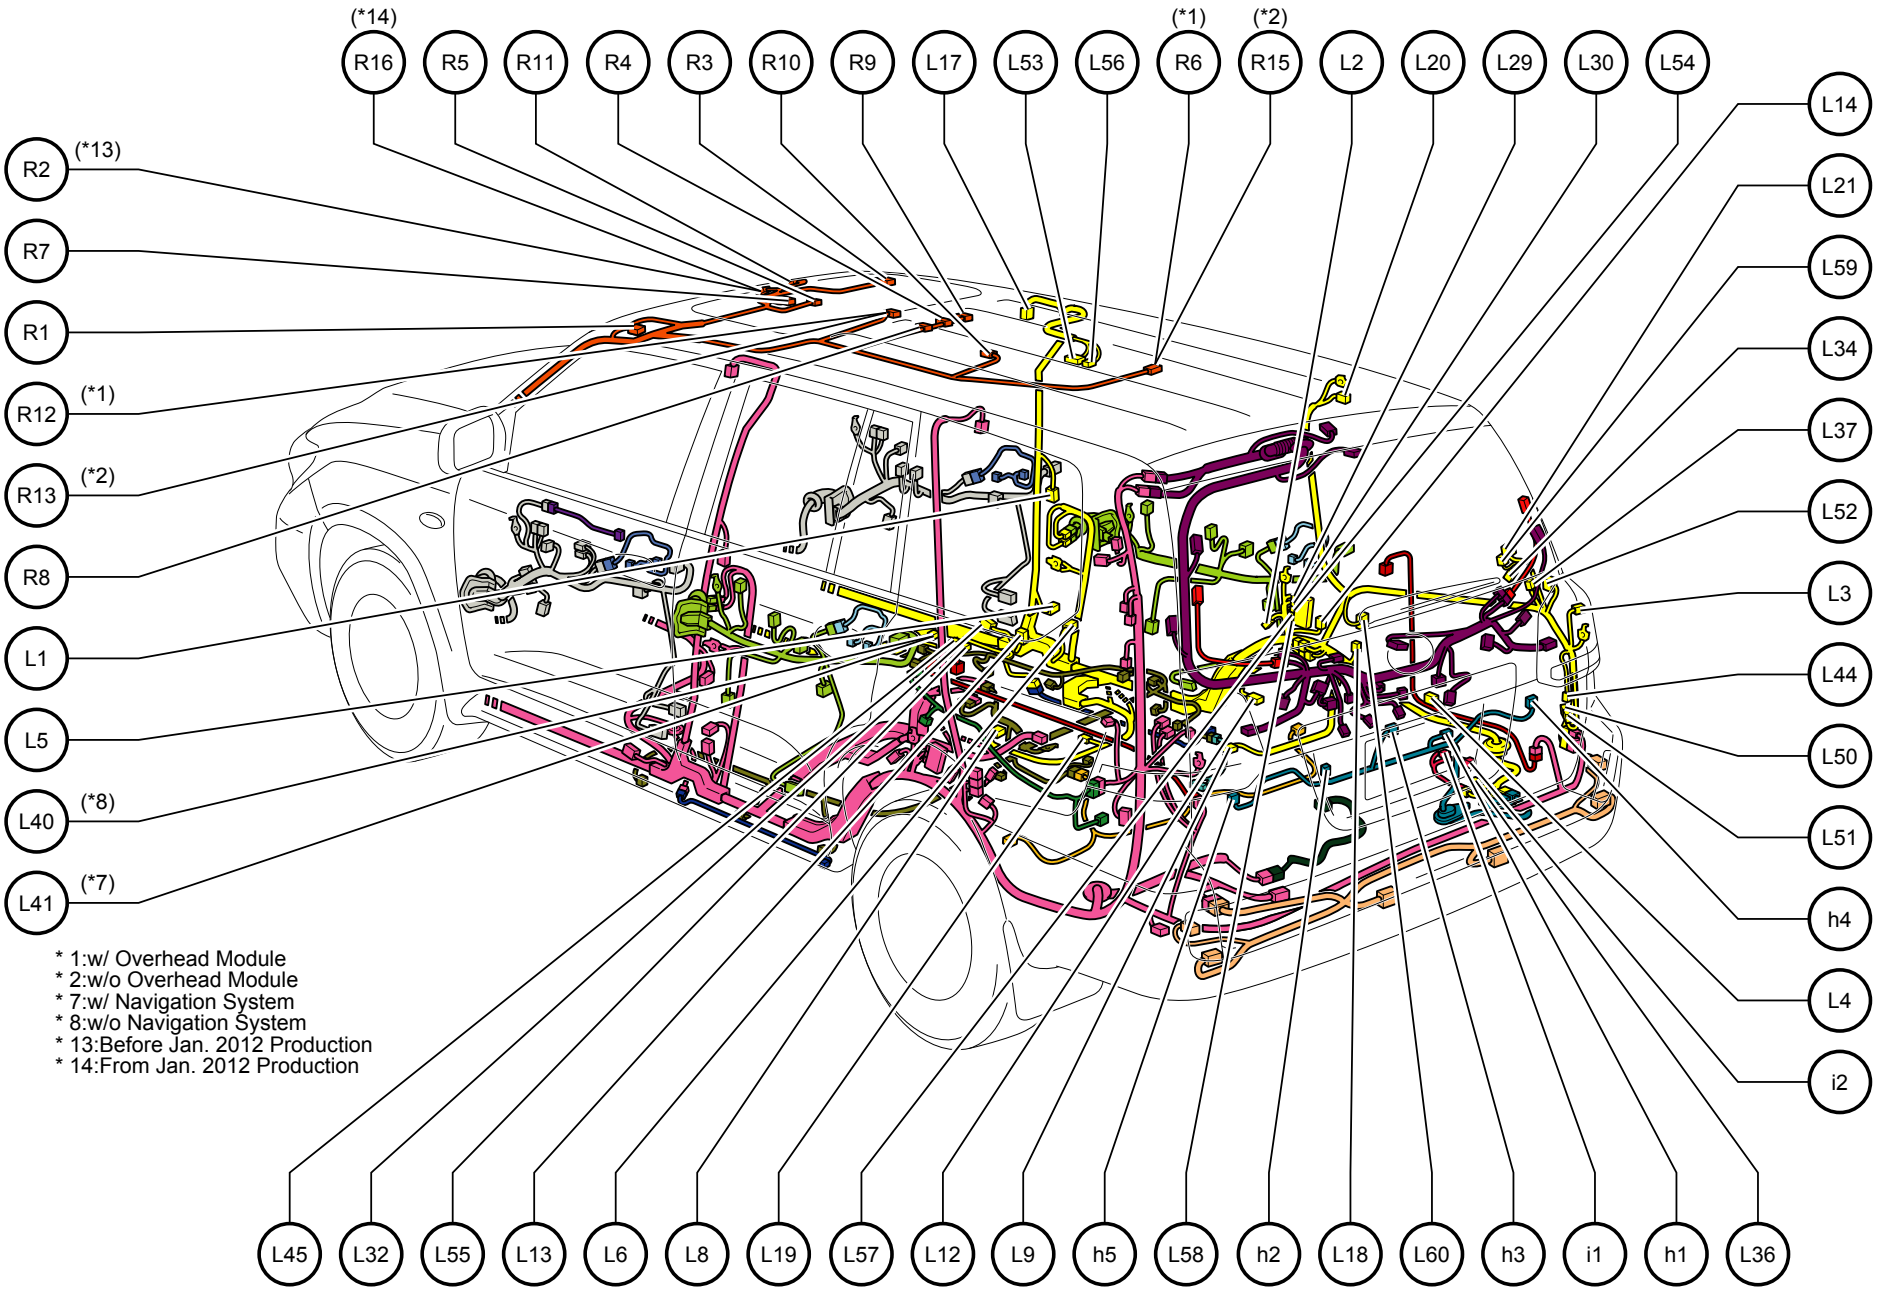

* 1:w/ Overhead Module
* 2:w/o Overhead Module
* 7:w/ Navigation System
* 8:w/o Navigation System
* 13:Before Jan. 2012 Production
* 14:From Jan. 2012 Production

L 1 Front Door Courtesy Light Switch Assembly RH
L 2 Rear Door Courtesy Light Switch Assembly RH
L 3 Rear Combination Light Assembly RH
L 4 No.1 with Box Speaker Assembly
L 5 Front Pre-Crash Seat Belt Motor RH
L 6 Front Tension Reducer RH
L 8 Rear Indoor Electrical Key Oscillator
L 9 Indoor Luggage Compartment Electrical Key Oscillator
L 12 Cooler Thermistor RH
L 13 Front Pretensioner RH
L 14 Rear Pretensioner RH
L 17 Curtain Shield Airbag Assembly Circuit RH
L 18 Rear Side Airbag Sensor Assembly RH
L 19 Rear Floor Side Airbag Sensor
L 20 Curtain Shield Airbag Assembly Circuit RH
L 21 Door Control Receiver
L 29 Junction Connector
L 30 Junction Connector
L 32 No.1 Interior Illumination Light Assembly RH
L 34 Glass Breakage Sensor (Quarter Glass RH)
L 36 Height Control Pump and Motor Assembly
L 37 Option Connector (Theft Warning Radar Sensor)
L 40 Multi-Media Interface ECU Assembly
L 41 Multi-Media Interface ECU Assembly
L 44 Option Connector (Parking Assist-Sensor)
L 45 Multi-Media Interface ECU Assembly
L 50 No.2 Multiplex Network Body ECU
L 51 No.2 Multiplex Network Body ECU
L 52 Power Back Door Unit Assembly
L 53 Television Display Assembly
L 54 Junction Connector
L 55 Multi-Media Interface ECU Assembly
L 56 Television Display Assembly
L 57 Junction Connector
L 58 Junction Connector
L 59 Roof Tire Pressure Warning Antenna
L 60 Tire Pressure Warning ECU and Receiver Assembly

R 1 Visor Assembly LH
R 2 Inner Rear View Mirror Assembly
R 3 Visor Assembly RH
R 4 No.2 Room Light Assembly
R 5 Sliding Roof Control ECU
R 6 No.3 Room Light Assembly
R 7 Overhead Module
R 8 No.2 Room Light Assembly
R 9 No.2 Room Light Assembly
R 10 No.1 Room Light Assembly
R 11 Rain Sensor
R 12 No.1 Room Light Assembly
R 13 No.1 Room Light Assembly
R 15 No.3 Room Light Assembly
R 16 Inner Rear View Mirror Assembly

h 1 Tire Carrier Courtesy Light Switch
h 2 License Plate Light Assembly RH
h 3 Back Door Remote Control Assembly
h 4 Tail Gate Lock Assembly Lower RH
h 5 Tail Gate Lock Assembly Lower LH

i 1 Fuel Temperature Sensor
i 2 Pressure Accumulator Sensor


L 1
White




L 2
White




L 3
White

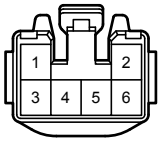

L 4
White




L 5
White




L 6
White




L 8
Black

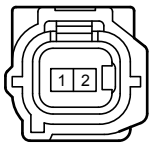


L 9
Black

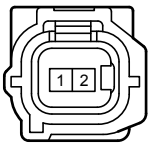


L 12
Black




L 13
Yellow

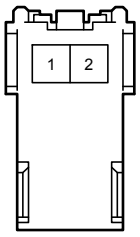


L 14
Yellow

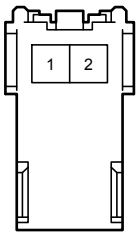


L 17
Black

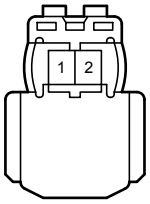


L 18
Yellow

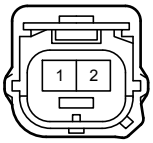


L 19
Yellow

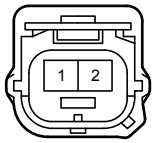


L 20
Black

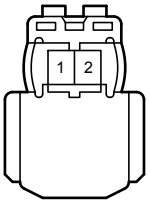


L 21
White

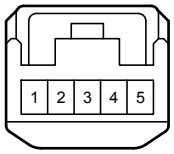

L 29
White



L 30
White




L 32
White




L 34
White




L 36
Black

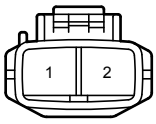


L 37
White




L 40
White

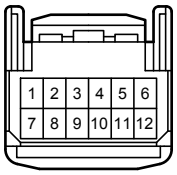


L 41
Black

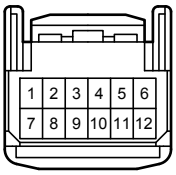


L 44
White

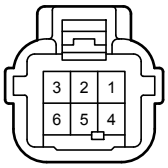


L 45
Brown

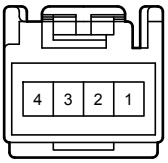


L 50
White

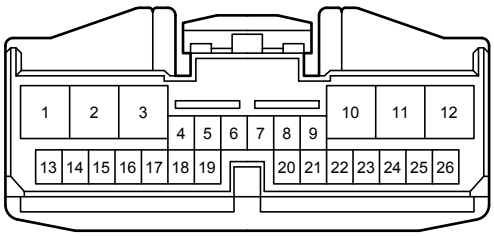


L 51
Blue

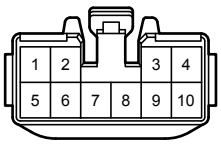


L 52
White

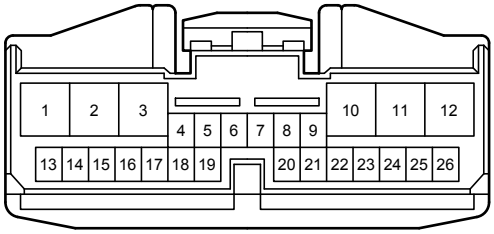


L 53
White

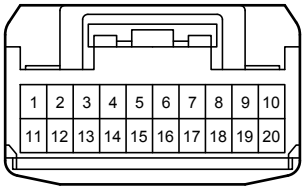


L 54
White




L 55
Brown

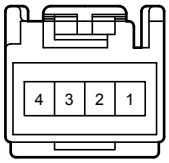


L 56
Brown

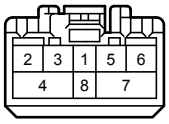


L 57
White




L 58
White




L 59
White




L 60
White

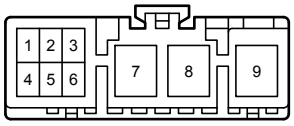


R 1
White

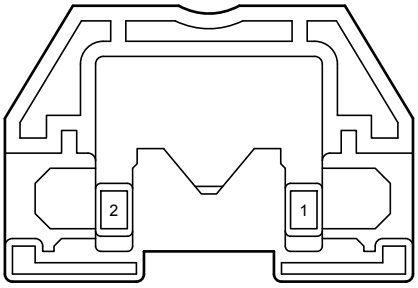


R 2
White

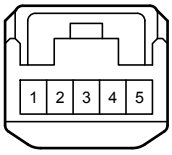


R 3
White

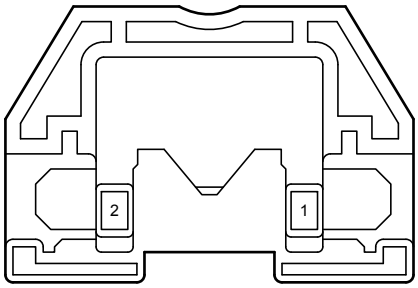


R 4
White

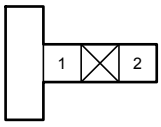


R 5
White

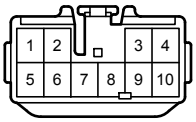


R 6
White




R 7
White

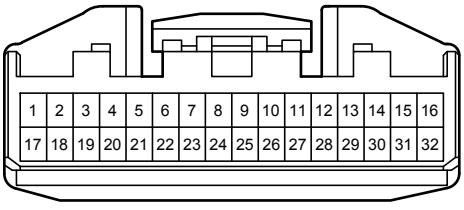


R 8
White




R 9
White




R 10
White

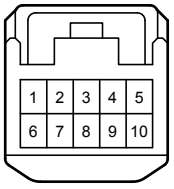


R 11
Black

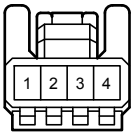


R 12
White




R 13
White



R 15
White




R 16
White

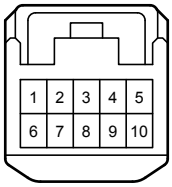


h 1
White




h 2
White




h 3
Black

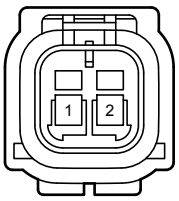

h 4
White

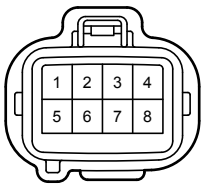


h 5
Gray

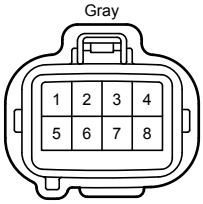


i 1
Gray



i 2
Black

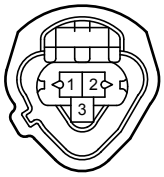

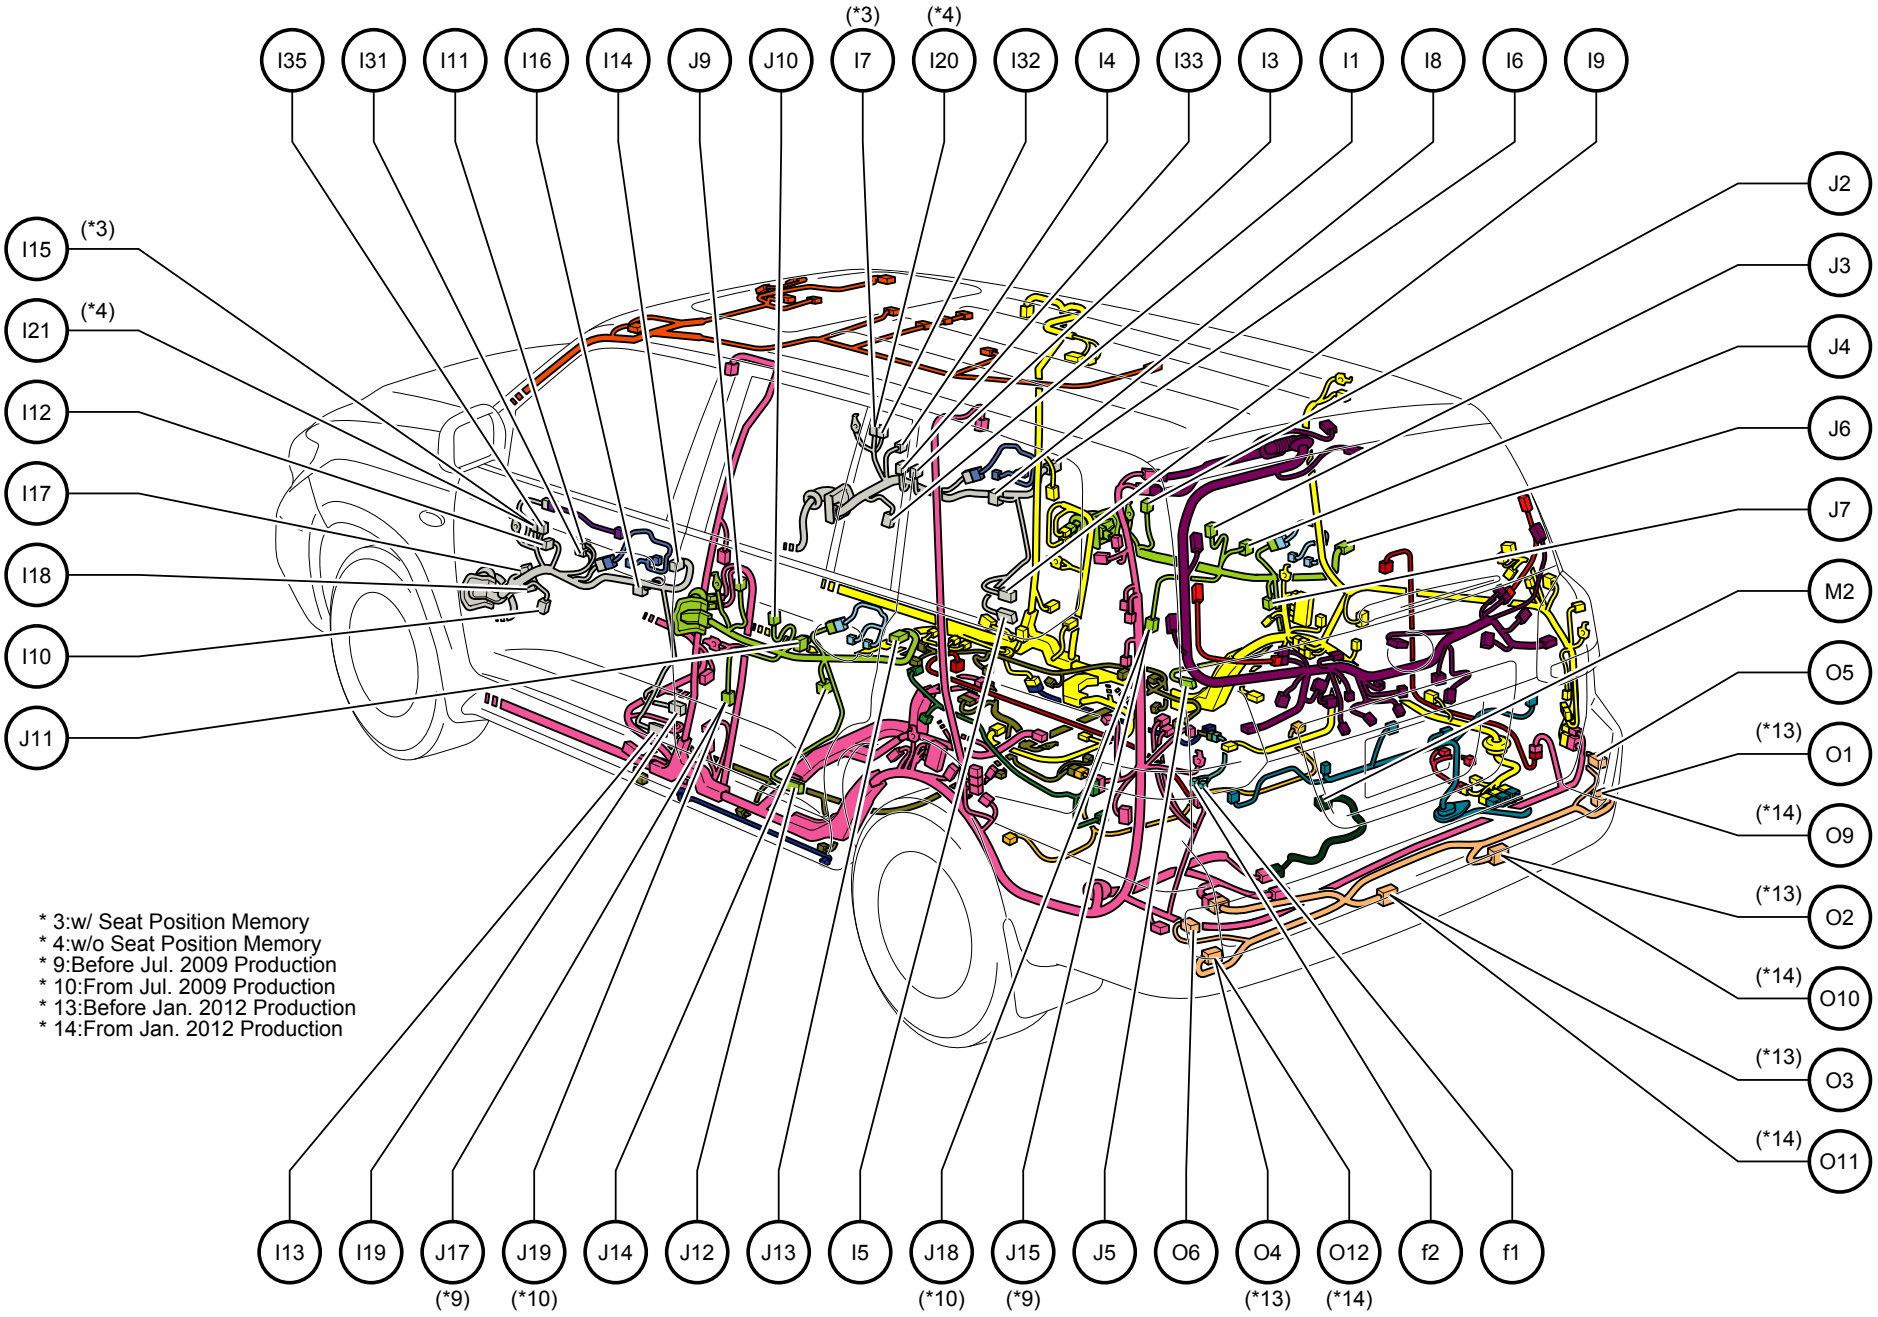

I35
I31
I11
I16
I14
J9
J10
(*3)
I7
(*4)
I20
I32
I4
I33
I3
I1
I8
I6
I9
I15
(*3)
I21
(*4)
I12
I17
I18
I10
J11
J2
J3
J4
J6
J7
M2
O5
(*13)
O1
(*14)
O9
(*13)
O2
(*14)
O10
(*13)
O3
(*14)
O11
I13
I19
J17
(*9)
J19
(*10)
J14
J12
J13
I5
J18
(*10)
J15
(*9)
J5
O6
O4
(*13)
O12
(*14)
f2
f1
* 3:w/ Seat Position Memory
* 4:w/o Seat Position Memory
* 9:Before Jul. 2009 Production
* 10:From Jul. 2009 Production
* 13:Before Jan. 2012 Production
* 14:From Jan. 2012 Production

I	1	Front No.1 Speaker Assembly RH
I	3	Front Power Window Regulator Switch Assembly RH
I	4	Front Power Window Regulator Motor Assembly RH
I	5	Front Door Courtesy Light Assembly RH
I	6	Front Door Lock Assembly RH
I	7	Outer Rear View Mirror Assembly RH
I	8	Diode (Front Door Courtesy Switch RH)
I	9	Front Side Airbag Sensor Assembly RH
I	10	Front No.1 Speaker Assembly LH
I	11	Multiplex Network Master Switch Assembly
I	12	Front Power Window Regulator Motor Assembly LH
I	13	Front Door Courtesy Light Assembly LH
I	14	Front Door Lock Assembly LH
I	15	Outer Rear View Mirror Assembly LH
I	16	Diode (Front Door Courtesy Switch LH)
I	17	Outer Mirror Control ECU Assembly
I	18	Outer Mirror Control ECU Assembly
I	19	Front Side Airbag Sensor Assembly LH
I	20	Outer Rear View Mirror Assembly RH
I	21	Outer Rear View Mirror Assembly LH
I	31	Multiplex Network Master Switch Assembly
I	32	Outer Rear View Mirror Assembly RH
I	33	Front Door Control Switch Assembly RH
I	35	Outer Rear View Mirror Assembly LH
J	2	Rear No.3 Speaker Assembly RH
J	3	Rear Power Window Regulator Switch Assembly RH
J	4	Rear Power Window Regulator Motor Assembly RH
J	5	Rear Door Courtesy Light Assembly RH
J	6	Rear Door Lock Assembly RH
J	7	Diode (Rear Door Courtesy Switch RH)
J	9	Rear No.3 Speaker Assembly LH
J	10	Rear Power Window Regulator Switch Assembly LH
J	11	Rear Power Window Regulator Motor Assembly LH
J	12	Rear Door Courtesy Light Assembly LH
J	13	Rear Door Lock Assembly LH
J	14	Diode (Rear Door Courtesy Switch LH)
J	15	Rear Speaker Set RH
J	17	Rear Speaker Set LH
J	18	Rear Speaker Set RH
J	19	Rear Speaker Set LH
M	2	Fuel Sender Gage Assembly (Sub)
O	1	No.2 Ultrasonic Sensor RH
O	2	No.3 Ultrasonic Sensor RH
O	3	No.3 Ultrasonic Sensor LH
O	4	No.2 Ultrasonic Sensor LH
O	5	Rear Fog Light Assembly RH
O	6	Rear Fog Light Assembly LH
O	9	No.2 Ultrasonic Sensor RH
O	10	No.3 Ultrasonic Sensor RH
O	11	No.3 Ultrasonic Sensor LH
O	12	No.2 Ultrasonic Sensor LH
f	1	Differential Lock Shift Actuator
f	2	Differential Lock Switch


I 1
White



I 3
White

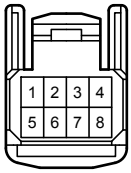


I 4
White

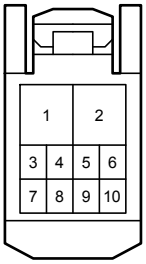


I 5
White



I 6
White

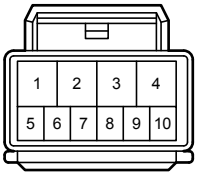


I 7
White

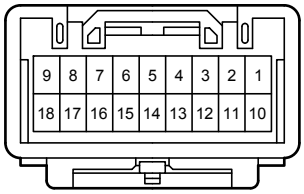

I 8
White




I 9
Yellow

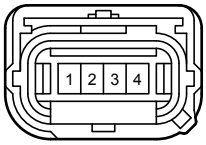


I 10
White



I 11
White

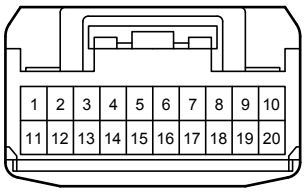


I 12
White

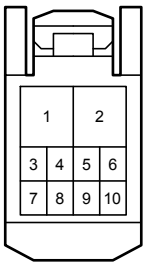


I 13
White



I 14
White

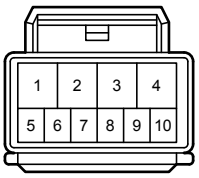


I 15
White

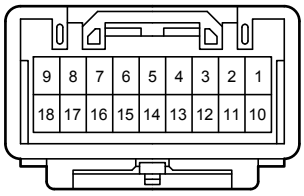


I 16
White




I 17
White

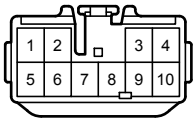


I 18
White

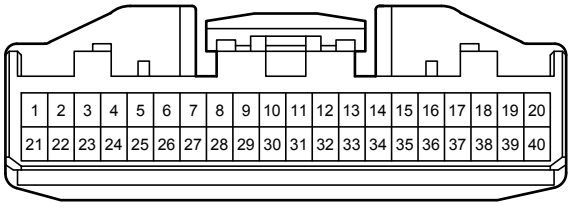


I 19
Yellow

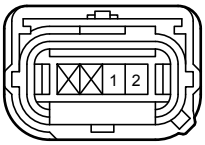


I 20
White

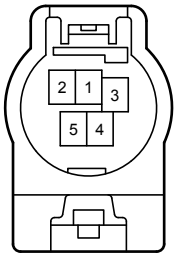


I 21
White

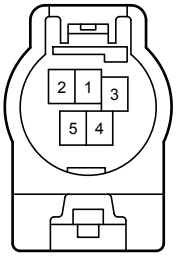


I 31
White

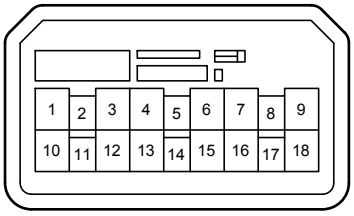


I 32
White

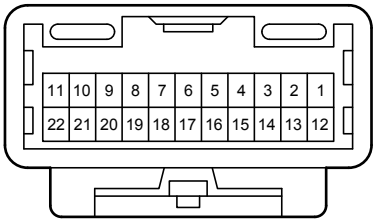


I 33
Blue




I 35
White

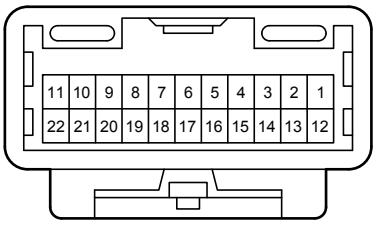


J 2
Black



J 3
White

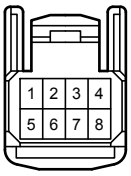


J 4
White

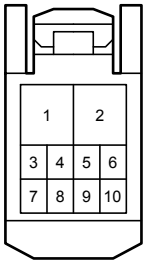

J 5
White




J 6
White

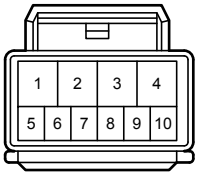


J 7
White




J 9
Black



J 10
White

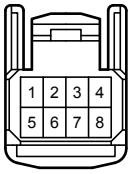


J 11
White

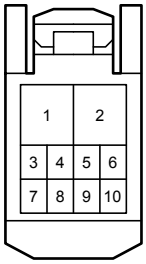

J 12
White



J 13
White

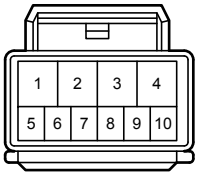

J 14
White



J 15
White



J 17
White



J 18
Black




J 19
Black




M 2
Black




O 1
Black

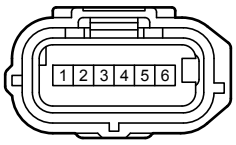


O 2
Black

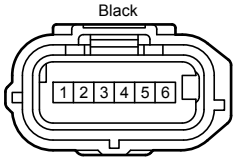


O 3
Black

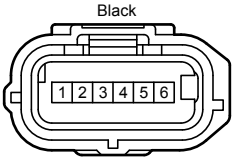


O 4
Black

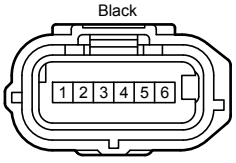


O 5
White

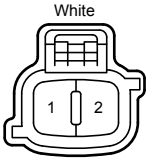


O 6
White

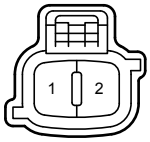


O 9
Black

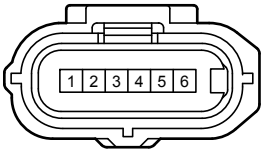


O 10
Black

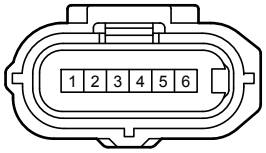


O 11
Black

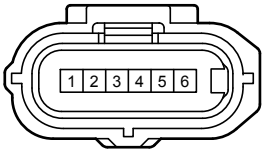


O 12
Black

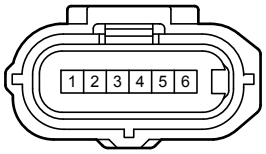


f 1
Gray

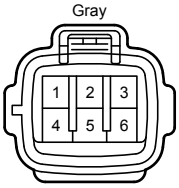

f 2
Blue

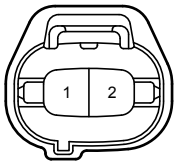

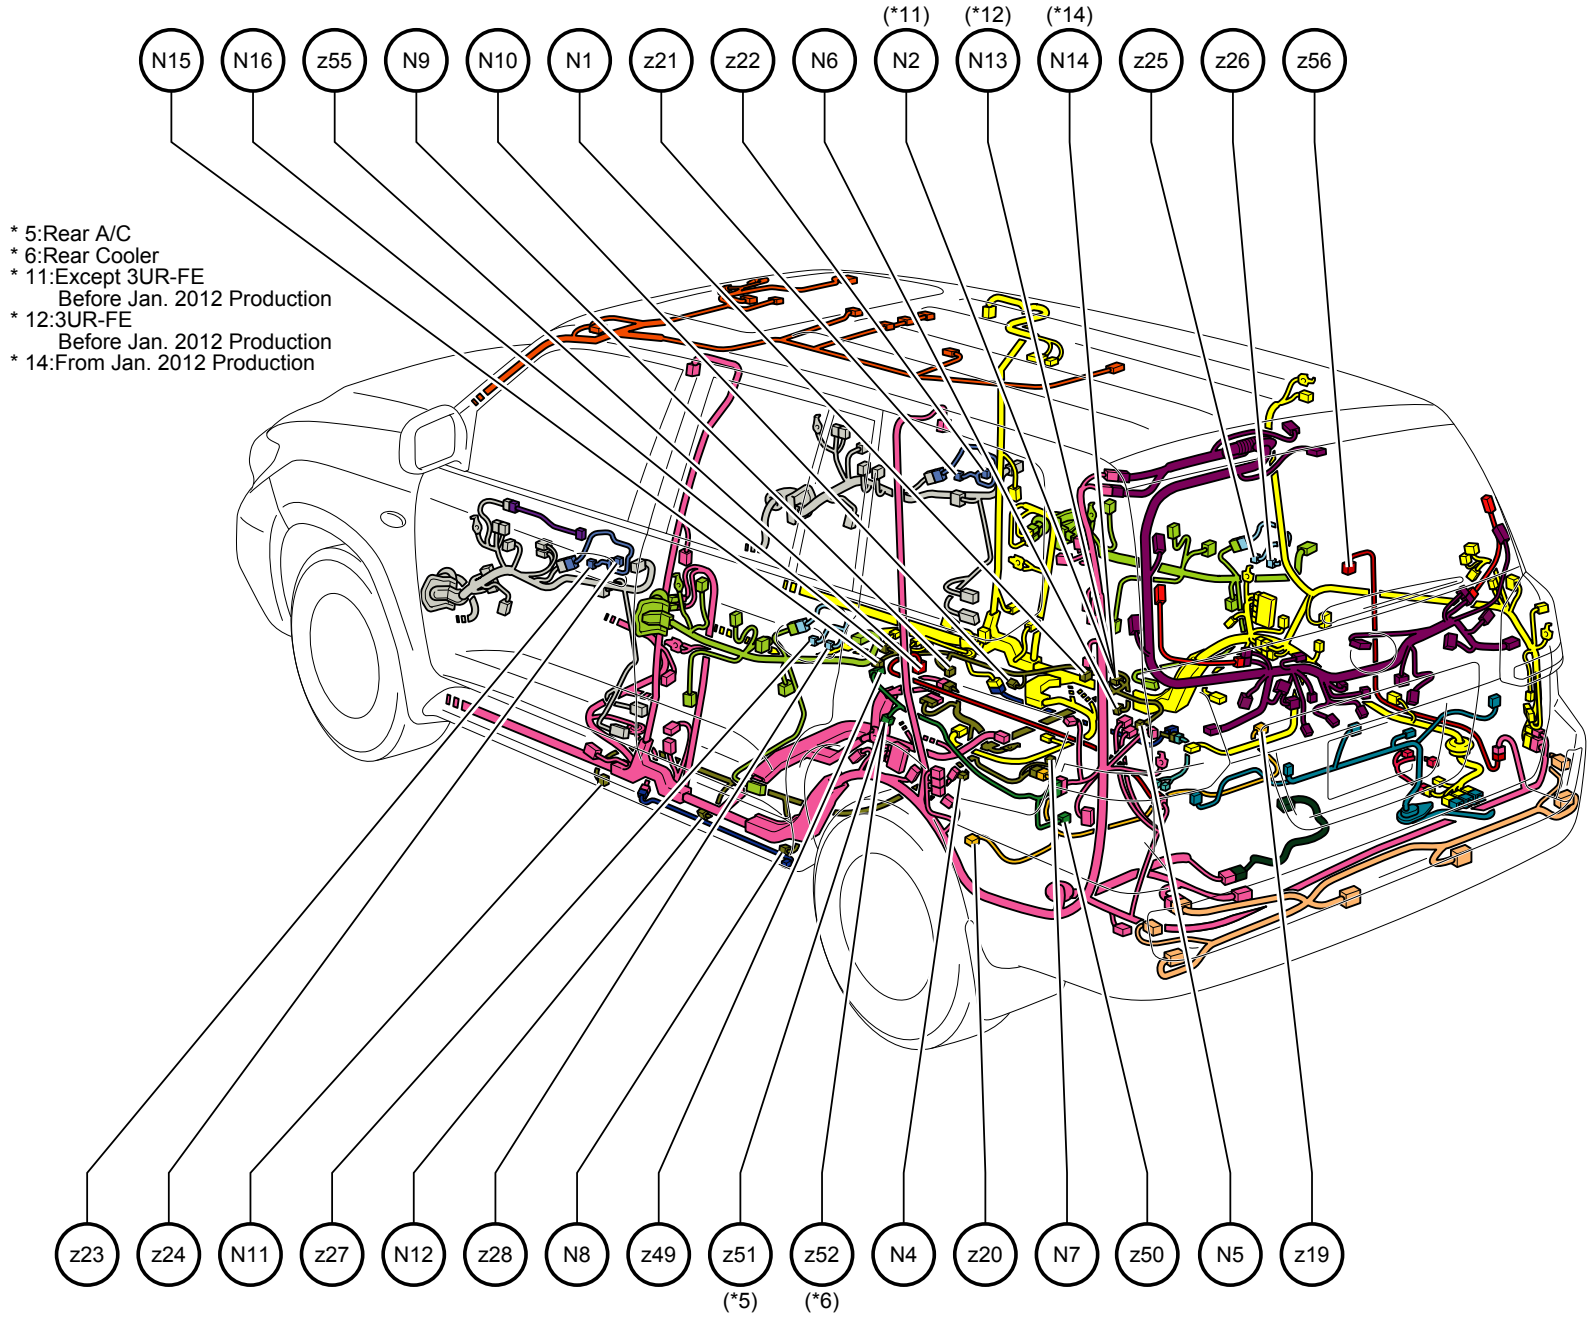
* 5:Rear A/C
* 6:Rear Cooler
* 11:Except 3UR-FE
Before Jan. 2012 Production
* 12:3UR-FE
Before Jan. 2012 Production
* 14:From Jan. 2012 Production
N15
N16
z55
N9
N10
N1
z21
z22
N6
(*11)
N2
(*12)
N13
(*14)
N14
z25
z26
z56
z23
z24
N11
z27
N12
z28
N8
z49
z51
(*5)
z52
(*6)
N4
z20
N7
z50
N5
z19


N 1 Fuel Sender Gage Assembly (Main)
N 2 Fuel Pump Control ECU Assembly
N 4 No.1 Height Control Valve Assembly
N 5 Rear Height Control Sensor Sub-Assembly RH
N 6 Rear Shock Absorber Assembly RH
N 7 Rear Height Control Sensor Sub-Assembly LH
N 8 Rear Shock Absorber Assembly LH
N 9 Front Shock Absorber Assembly RH
N 10 Front Shock Absorber Control Valve Assembly RH
N 11 Front Shock Absorber Assembly LH
N 12 Front Shock Absorber Control Valve Assembly LH
N 13 Fuel Pump Control ECU Assembly
N 14 Fuel Pump Control ECU Assembly
N 15 DPF Temperature Sensor RH (Exhaust Gas Temperature Sensor)
N 16 Differential Pressure Sensor RH

z 19 Rear Speed Sensor RH
z 20 Rear Speed Sensor LH
z 21 Front Door Outside Handle Assembly RH
z 22 Front Door Electrical Key Oscillator RH
z 23 Front Door Outside Handle Assembly LH
z 24 Front Door Electrical Key Oscillator LH
z 25 Rear Door Outside Handle Assembly RH
z 26 Rear Door Electrical Key Oscillator RH
z 27 Rear Door Outside Handle Assembly LH
z 28 Rear Door Electrical Key Oscillator LH
z 49 Rear Blower with Fan Motor Sub-Assembly
z 50 Rear Cooling Unit Expansion Valve
z 51 Blower Motor Control
z 52 Rear Blower Resistor
z 55 Rear No.1 Cooler Thermistor LH
z 56 Rear No.1 Cooler Thermistor RH


N 1
White




N 2
Black

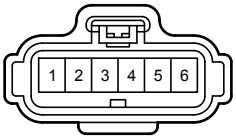

N 4
Black

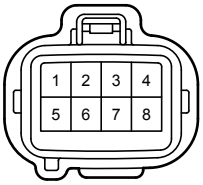


N 5
Black

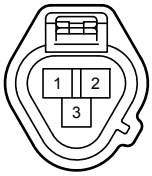


N 6
Gray




N 7
Black

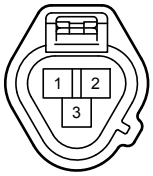

N 8
Gray

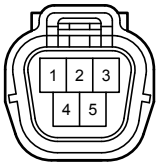


N 9
Gray

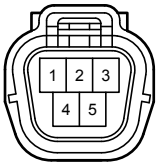

N 10
Gray




N 11
Gray

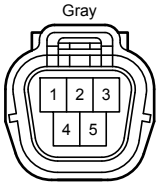


N 12
Gray



N 13
Gray

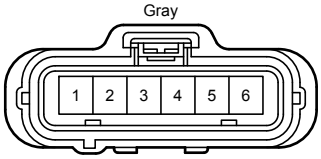


N 14
Black

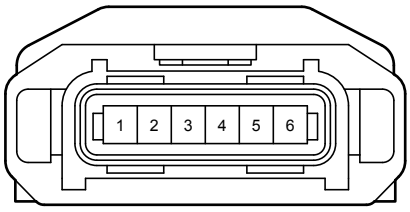

N 15
Gray



N 16
Black

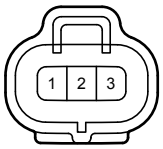


z 19
Black




z 20
Black




z 21
White

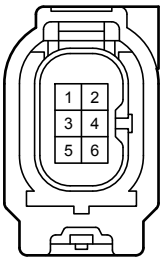


z 22
Black

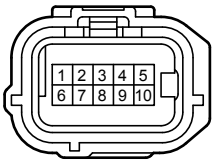


z 23
White

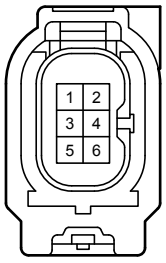


z 24
Black

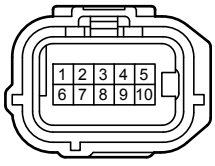


z 25
White

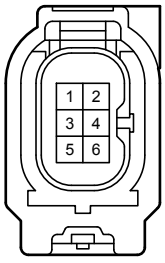


z 26
Black

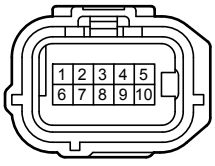


z 27
White

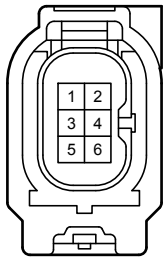


z 28
Black

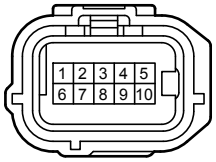


z 49
Black

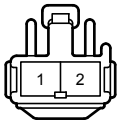


z 50
Black




z 51
Black

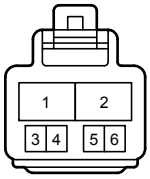


z 52
Black

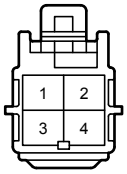


z 55
White



z 56
White



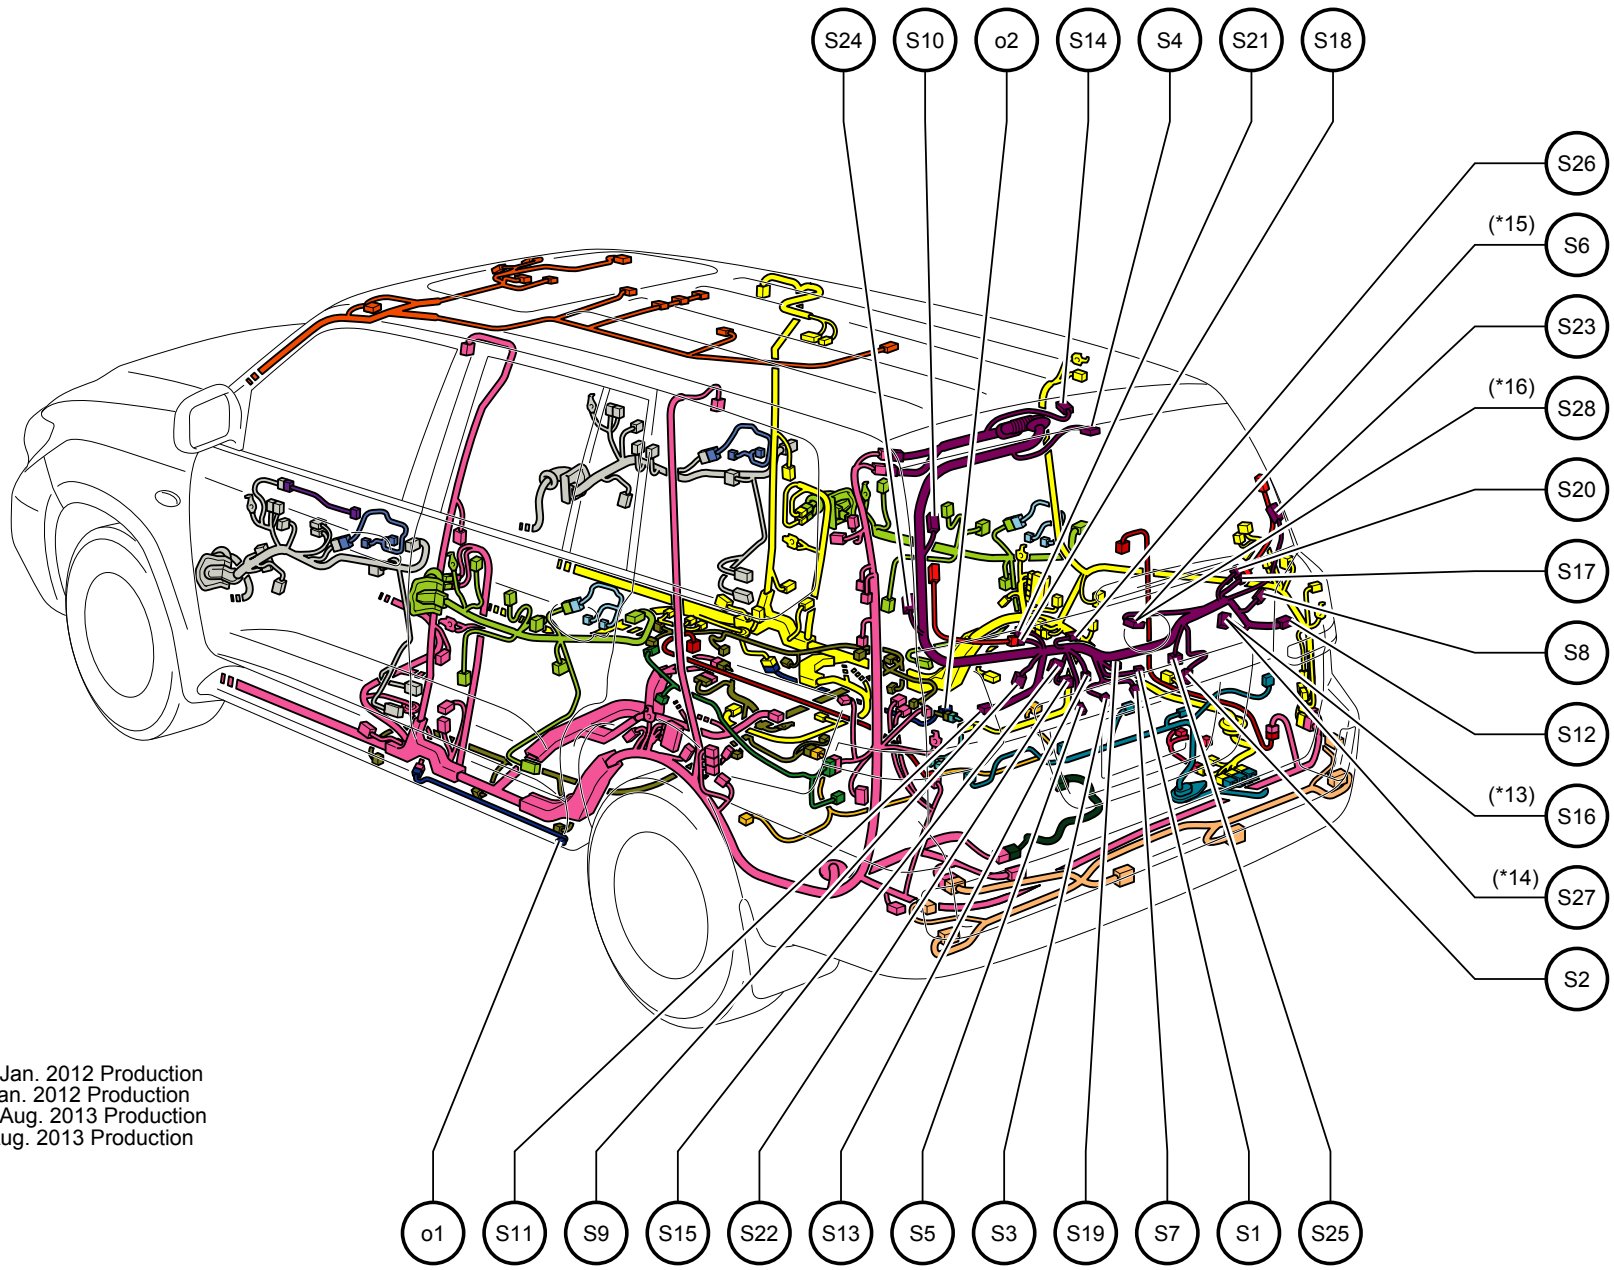


* 13:Before Jan. 2012 Production
* 14:From Jan. 2012 Production
* 15:Before Aug. 2013 Production
* 16:From Aug. 2013 Production

S 1 Back Door Lock Assembly
S 2 License Plate Light Assembly RH
S 3 License Plate Light Assembly LH
S 4 Center Stop Light Assembly
S 5 Rear Television Camera Assembly
S 6 Rear Wiper Motor Assembly
S 7 Back Door Opener Switch Assembly
S 8 Rear Header Speaker Assembly RH
S 9 Rear Header Speaker Assembly LH
S 10 Glass Breakage Sensor (Back Door Glass)
S 11 Rear Light Assembly LH
S 12 Rear Light Assembly RH
S 13 Option Connector (Back Guide Monitor)
S 14 Noise Filter (Rear Window Defogger and Stop)
S 15 Junction Connector
S 16 Junction Connector
S 17 Rear Window Defogger (Back Door Glass)
S 18 Rear Window Defogger (Back Door Glass)
S 19 Power Back Door Main Switch
S 20 Rear Window Defogger (Back Door Glass)
S 21 Rear Window Defogger (Back Door Glass)
S 22 Back Door Lock Assembly
S 23 Power Back Door Sensor Assembly RH
S 24 Power Back Door Sensor Assembly LH
S 25 Door Control Switch
S 26 Diode (Power Back Door)
S 27 Junction Connector
S 28 Rear Wiper Motor Assembly

o 1 Step Light Assembly LH
o 2 Step Light Assembly RH

S 1
Black

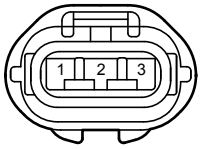


S 2
Gray




S 3
Gray




S 4
Gray




S 5
Black

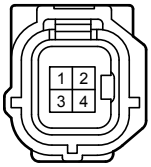


S 6
Black

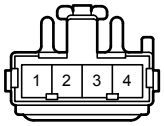


S 7
White

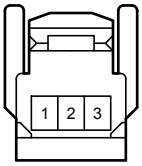

S 8
Black



S 9
Black



S 10
White




S 11
White




S 12
White




S 13
White

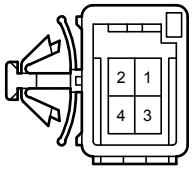


S 14
Black




S 15
White

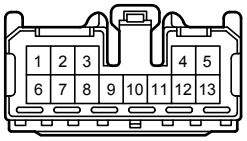


S 16
White

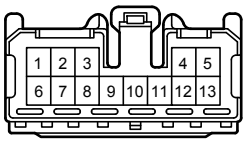


S 17
White

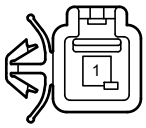


S 18
White

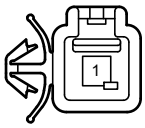


S 19
Blue




S 20
White

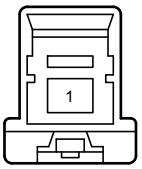


S 21
White

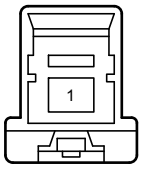


S 22
Black




S 23
White

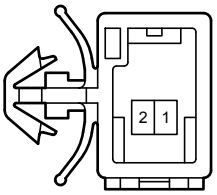

S 24
White

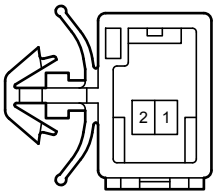


S 25
Black

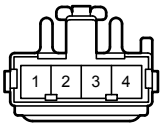


S 26
White



S 27
Dark Gray

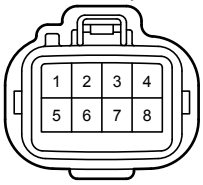

S 28
Black

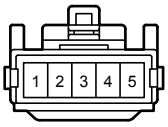


o 1
White




o 2
White

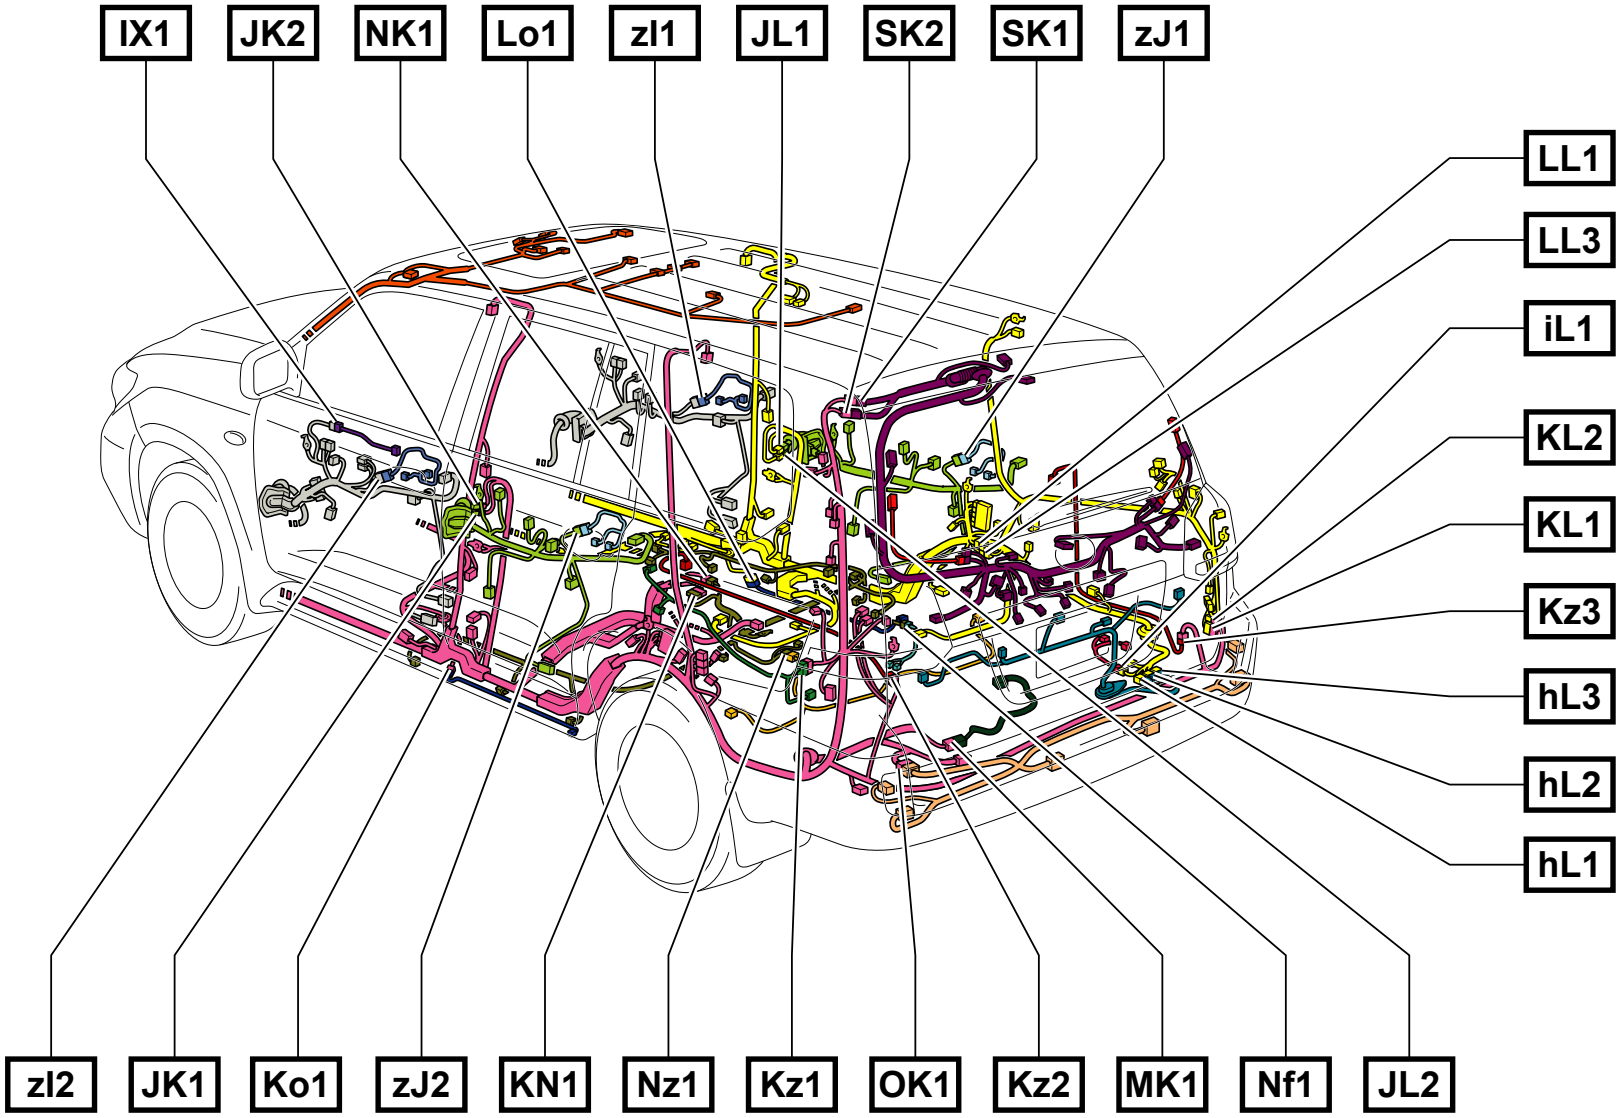



IX1
JK2
NK1
Lo1
zI1
JL1
SK2
SK1
zJ1
LL1
LL3
iL1
KL2
KL1
Kz3
hL3
hL2
hL1
zI2
JK1
Ko1
zJ2
KN1
Nz1
Kz1
OK1
Kz2
MK1
Nf1
JL2


IX1
White

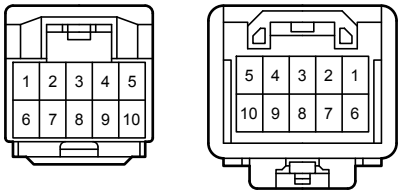


JK1
White

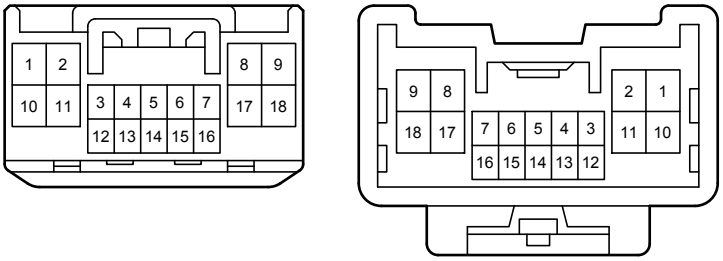


JK2
White

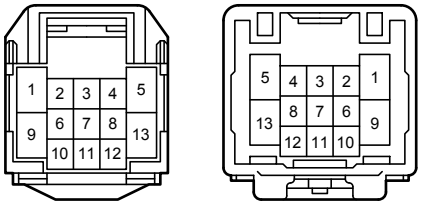


JL1
White

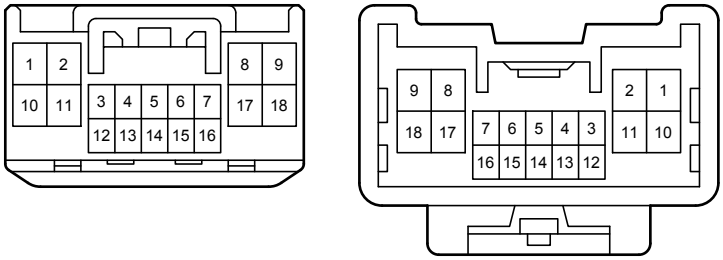


JL2
White

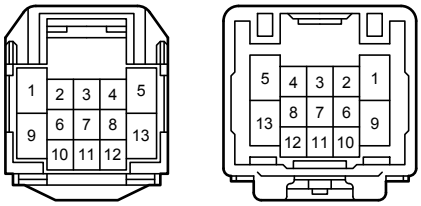


KL1
White

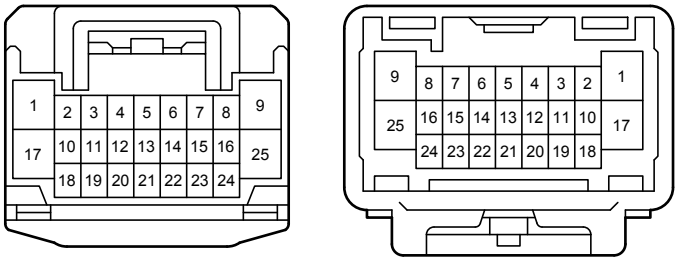


KL2
White

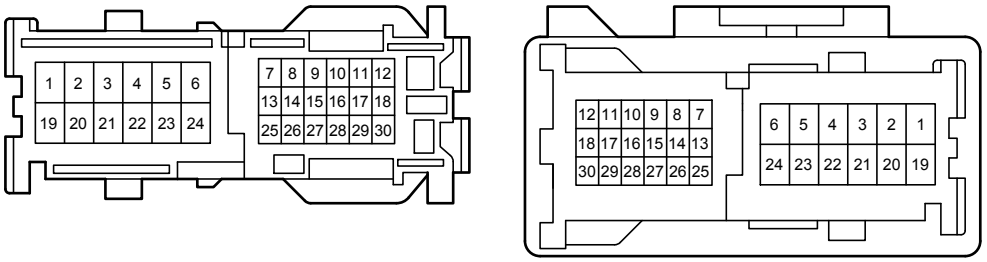


KN1
White

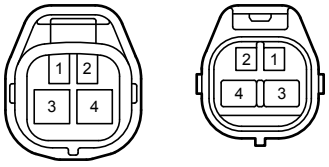


Ko1
Gray White

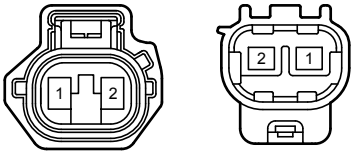


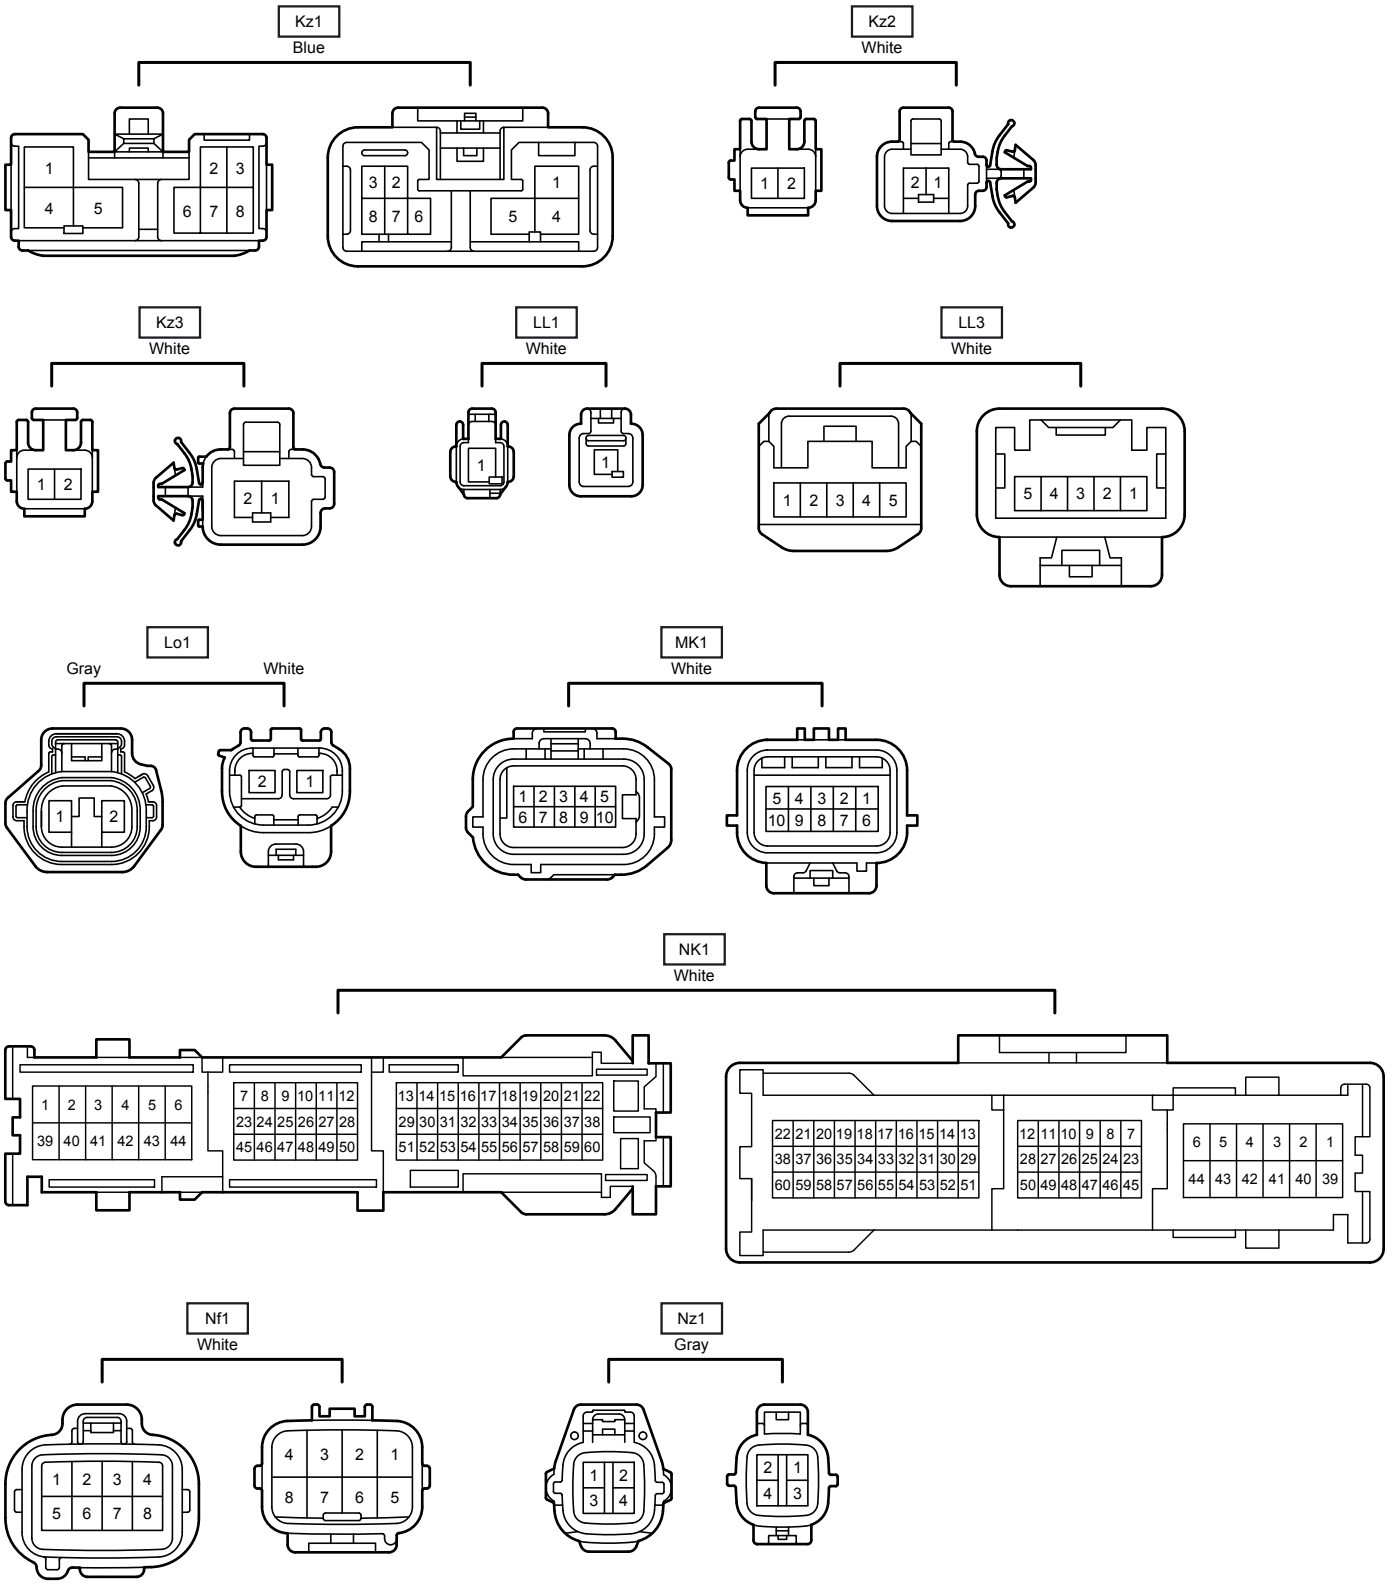
Kz1
Blue
Kz2
White
Kz3
White
LL1
White
LL3
White
Lo1
Gray
White
MK1
White
NK1
White
Nf1
White
Nz1
Gray


OK1
Black

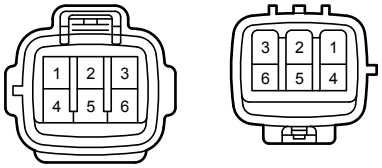


SK1
White

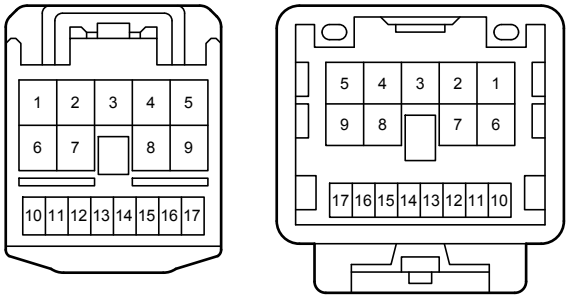


SK2
Blue

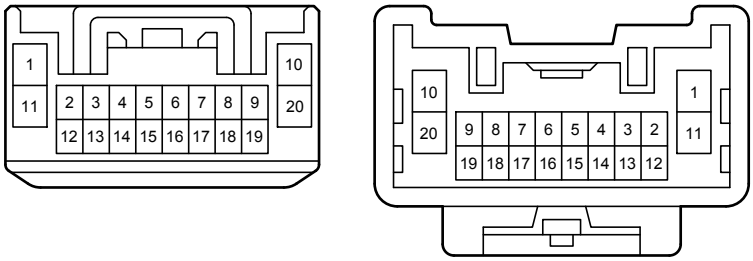


hL1
Black

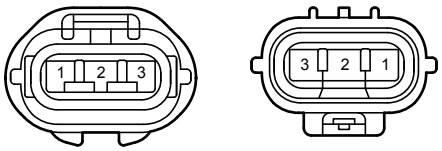


hL2
Gray

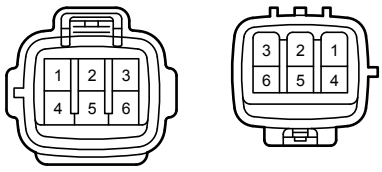


hL3
White

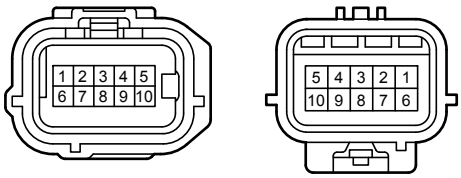


iL1
White

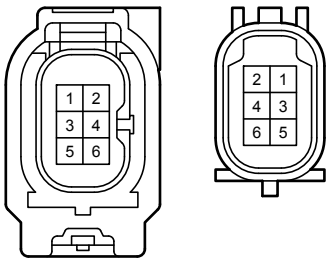



zl1
Blue

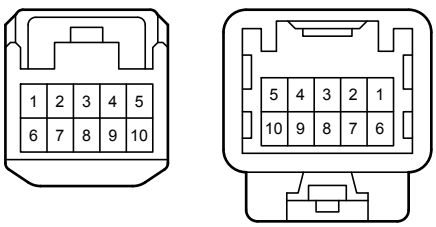


zl2
Blue

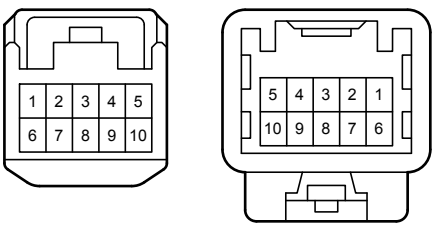

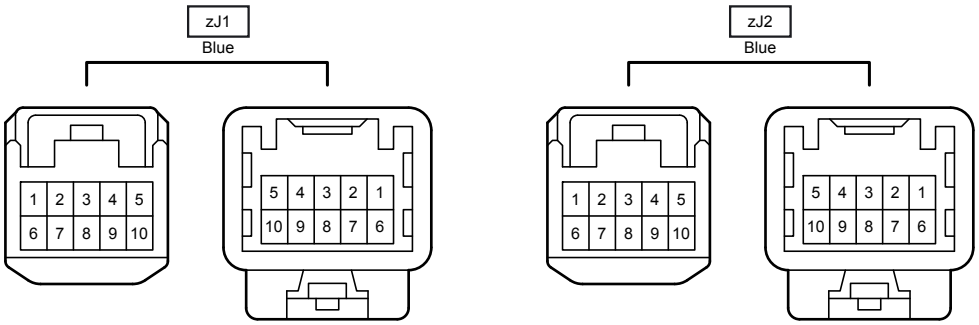
zJ1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zJ2
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

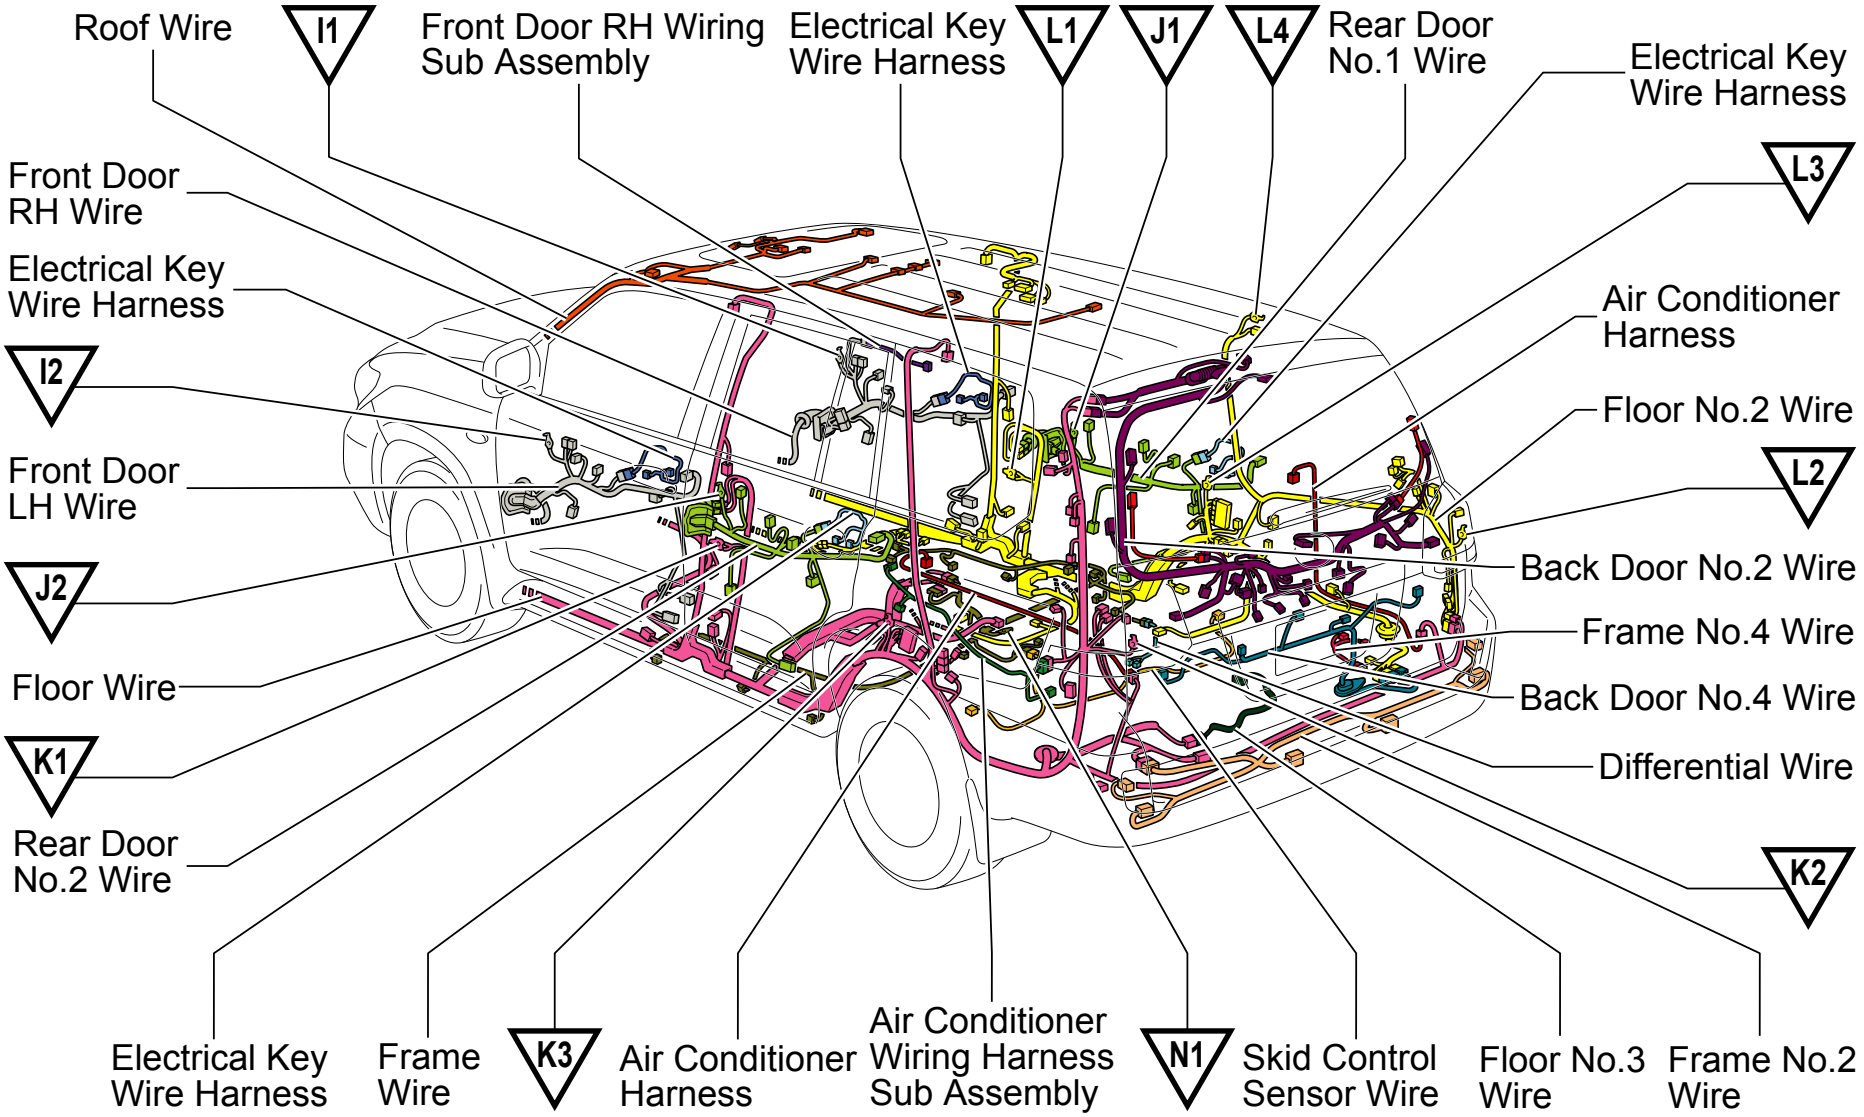
Roof Wire
I1
Front Door RH Wiring Sub Assembly
Electrical Key Wire Harness
L1
J1
L4
Rear Door No.1 Wire
Electrical Key Wire Harness
L3
Front Door RH Wire
Electrical Key Wire Harness
I2
Air Conditioner Harness
Floor No.2 Wire
L2
Front Door LH Wire
J2
Back Door No.2 Wire
Frame No.4 Wire
Floor Wire
Back Door No.4 Wire
K1
Differential Wire
Rear Door No.2 Wire
K2
Electrical Key Wire Harness
Frame Wire
K3
Air Conditioner Harness
Air Conditioner Wiring Harness Sub Assembly
N1
Skid Control Sensor Wire
Floor No.3 Wire
Frame No.2 Wire

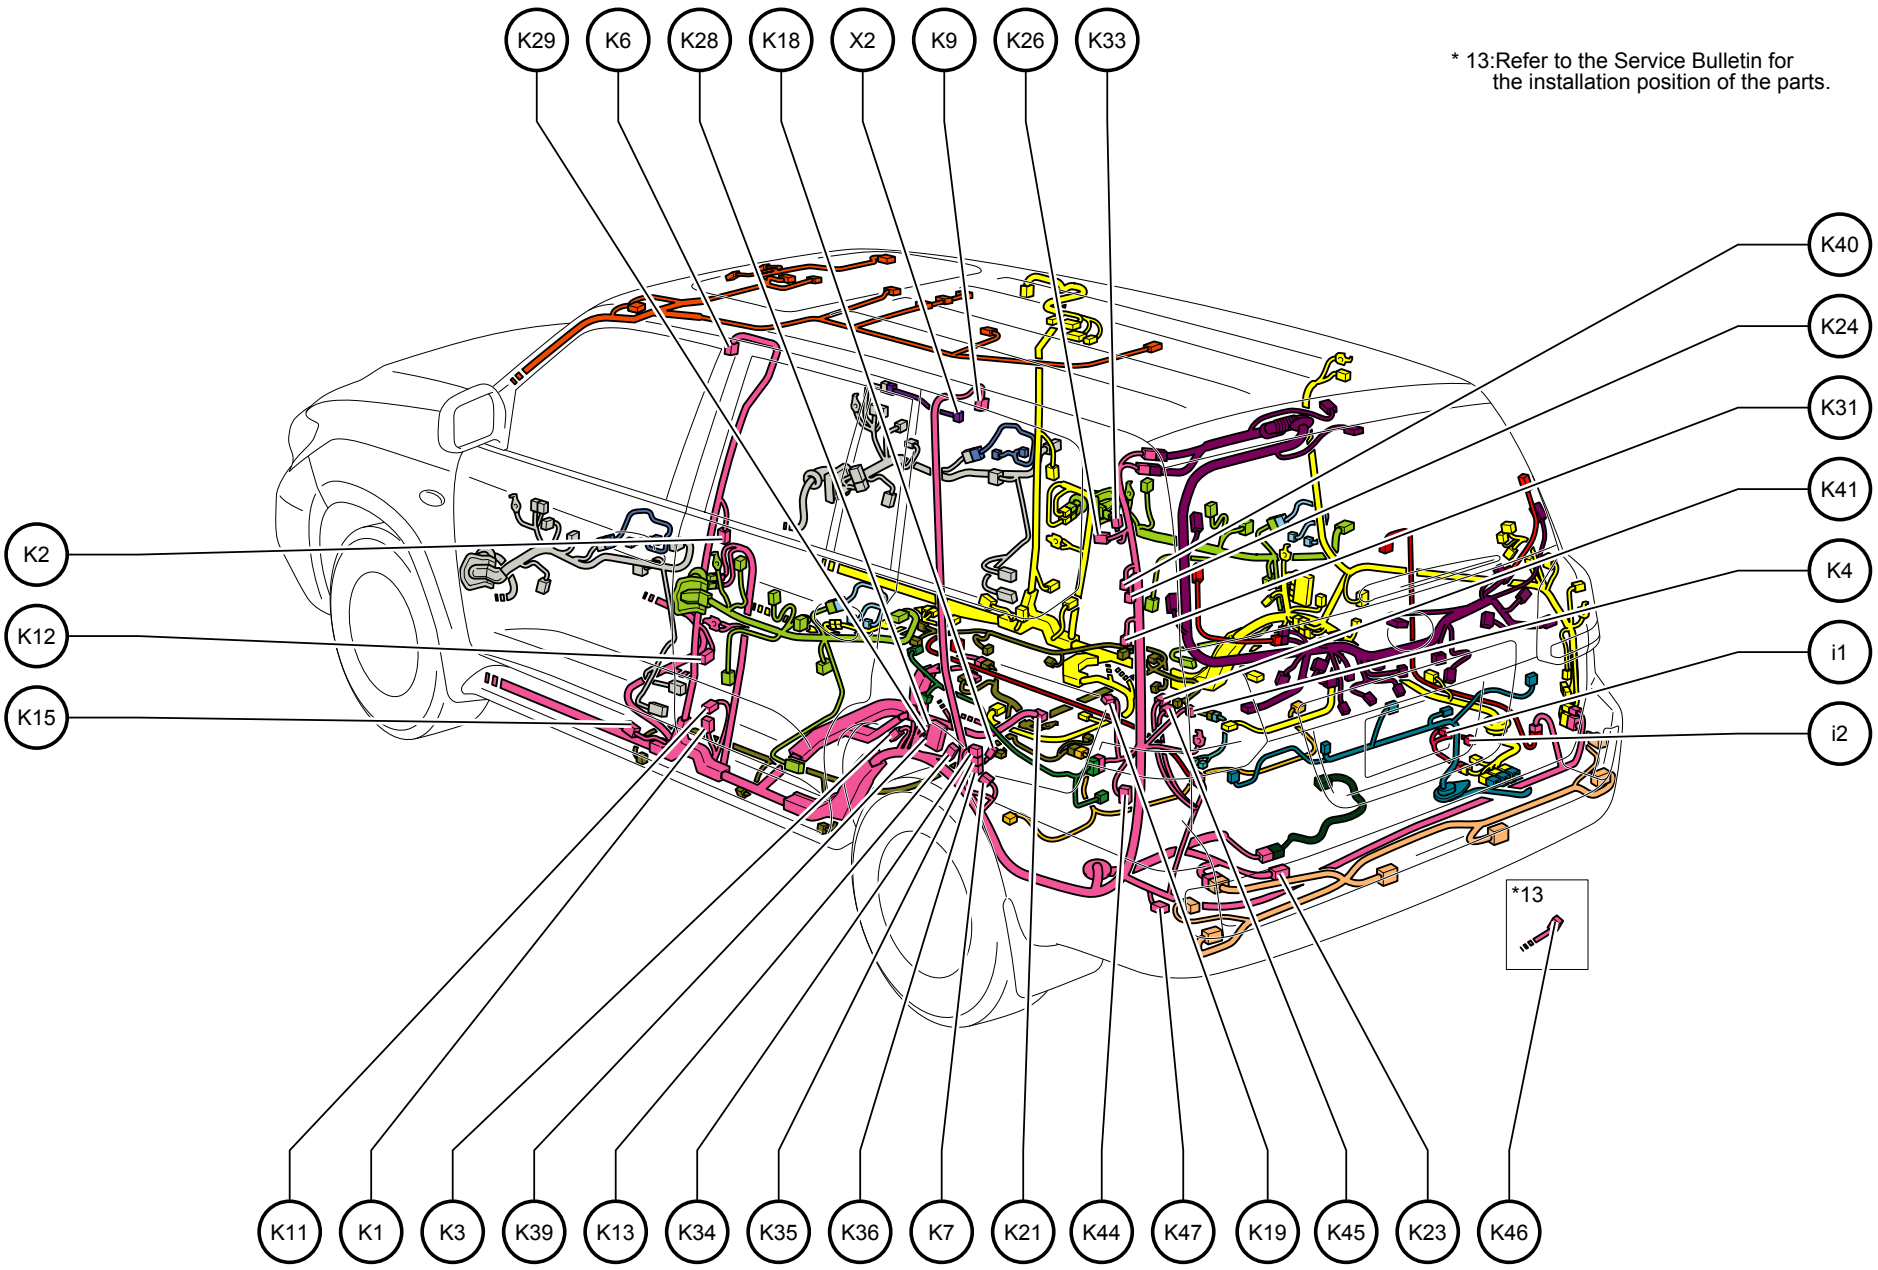

K29
K6
K28
K18
X2
K9
K26
K33
* 13:Refer to the Service Bulletin for the installation position of the parts.
K40
K24
K31
K41
K4
i1
i2
K2
K12
K15
*13
K11
K1
K3
K39
K13
K34
K35
K36
K7
K21
K44
K47
K19
K45
K23
K46

K 1 Front Pretensioner LH
K 2 Front Door Courtesy Light Switch Assembly LH
K 3 Rear Door Courtesy Light Switch Assembly LH
K 4 Rear Combination Light Assembly LH
K 6 Curtain Shield Airbag Assembly Circuit LH
K 7 Rear Side Airbag Sensor Assembly LH
K 9 Curtain Shield Airbag Assembly Circuit LH
K 11 Front Pre-Crash Seat Belt Motor LH
K 12 Front Tension Reducer LH
K 13 Rear Pretensioner LH
K 15 No.2 Interior Illumination Light Assembly
K 18 Theft Warning Siren Assembly
K 19 Rear A/C Blower Assembly
K 21 Cooler Thermistor LH
K 23 Outside Luggage Electrical Key Antenna
K 24 Towing Converter
K 26 Glass Breakage Sensor (Quarter Glass LH)
K 28 Junction Connector
K 29 Junction Connector
K 31 Diode (Rear Cooler)
K 33 Diode (Stop Light)
K 34 Suspension Control ECU
K 35 Suspension Control ECU
K 36 Suspension Control ECU
K 39 Junction Connector
K 40 Towing Converter
K 41 Rear Power Outlet Socket Assembly
K 44 Voltage Inverter Assembly
K 45 Power Outlet Socket Assembly
K 46 Theft Warning Siren Assembly
K 47 Power Back Door Warning Buzzer

X 2 Seat Memory Switch RH

i 1 Fuel Temperature Sensor
i 2 Pressure Accumulator Sensor

K 1
Yellow

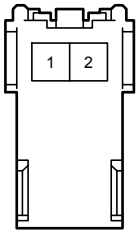


K 2
White




K 3
White




K 4
White

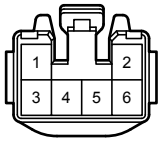


K 6
Black

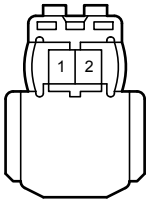


K 7
Yellow

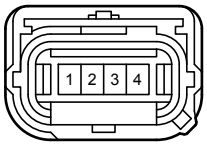


K 9
Black

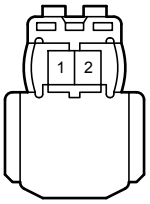


K 11
White



K 12
White




K 13
Yellow

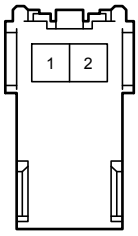


K 15
White




K 18
Gray

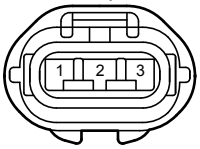


K 19
White

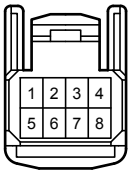


K 21
Black




K 23
White



K 24
White

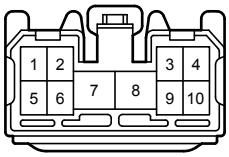


K 26
White



K 28
White



K 29
White




K 31
White




K 33
White




K 34
Black

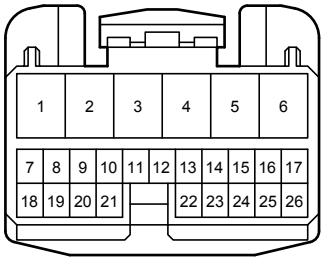


K 35
Black

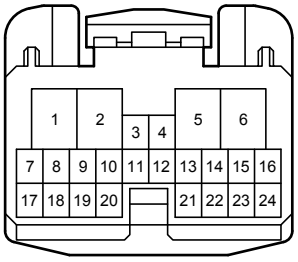


K 36
Black

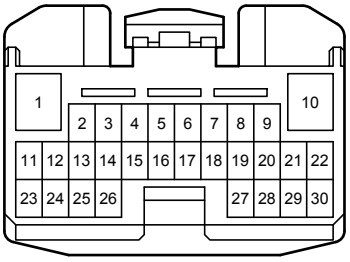


K 39
White




K 40
White




K 41
White




K 44
White

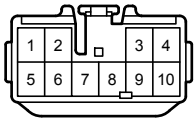


K 45
Black

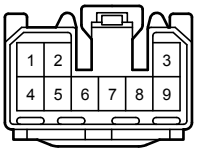


K 46
Black

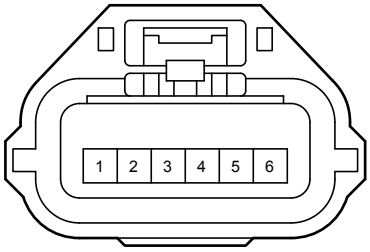

K 47
Black




X 2
Black

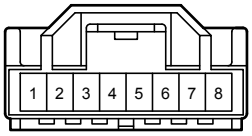


i 1
Gray



i 2
Black

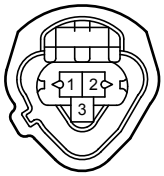

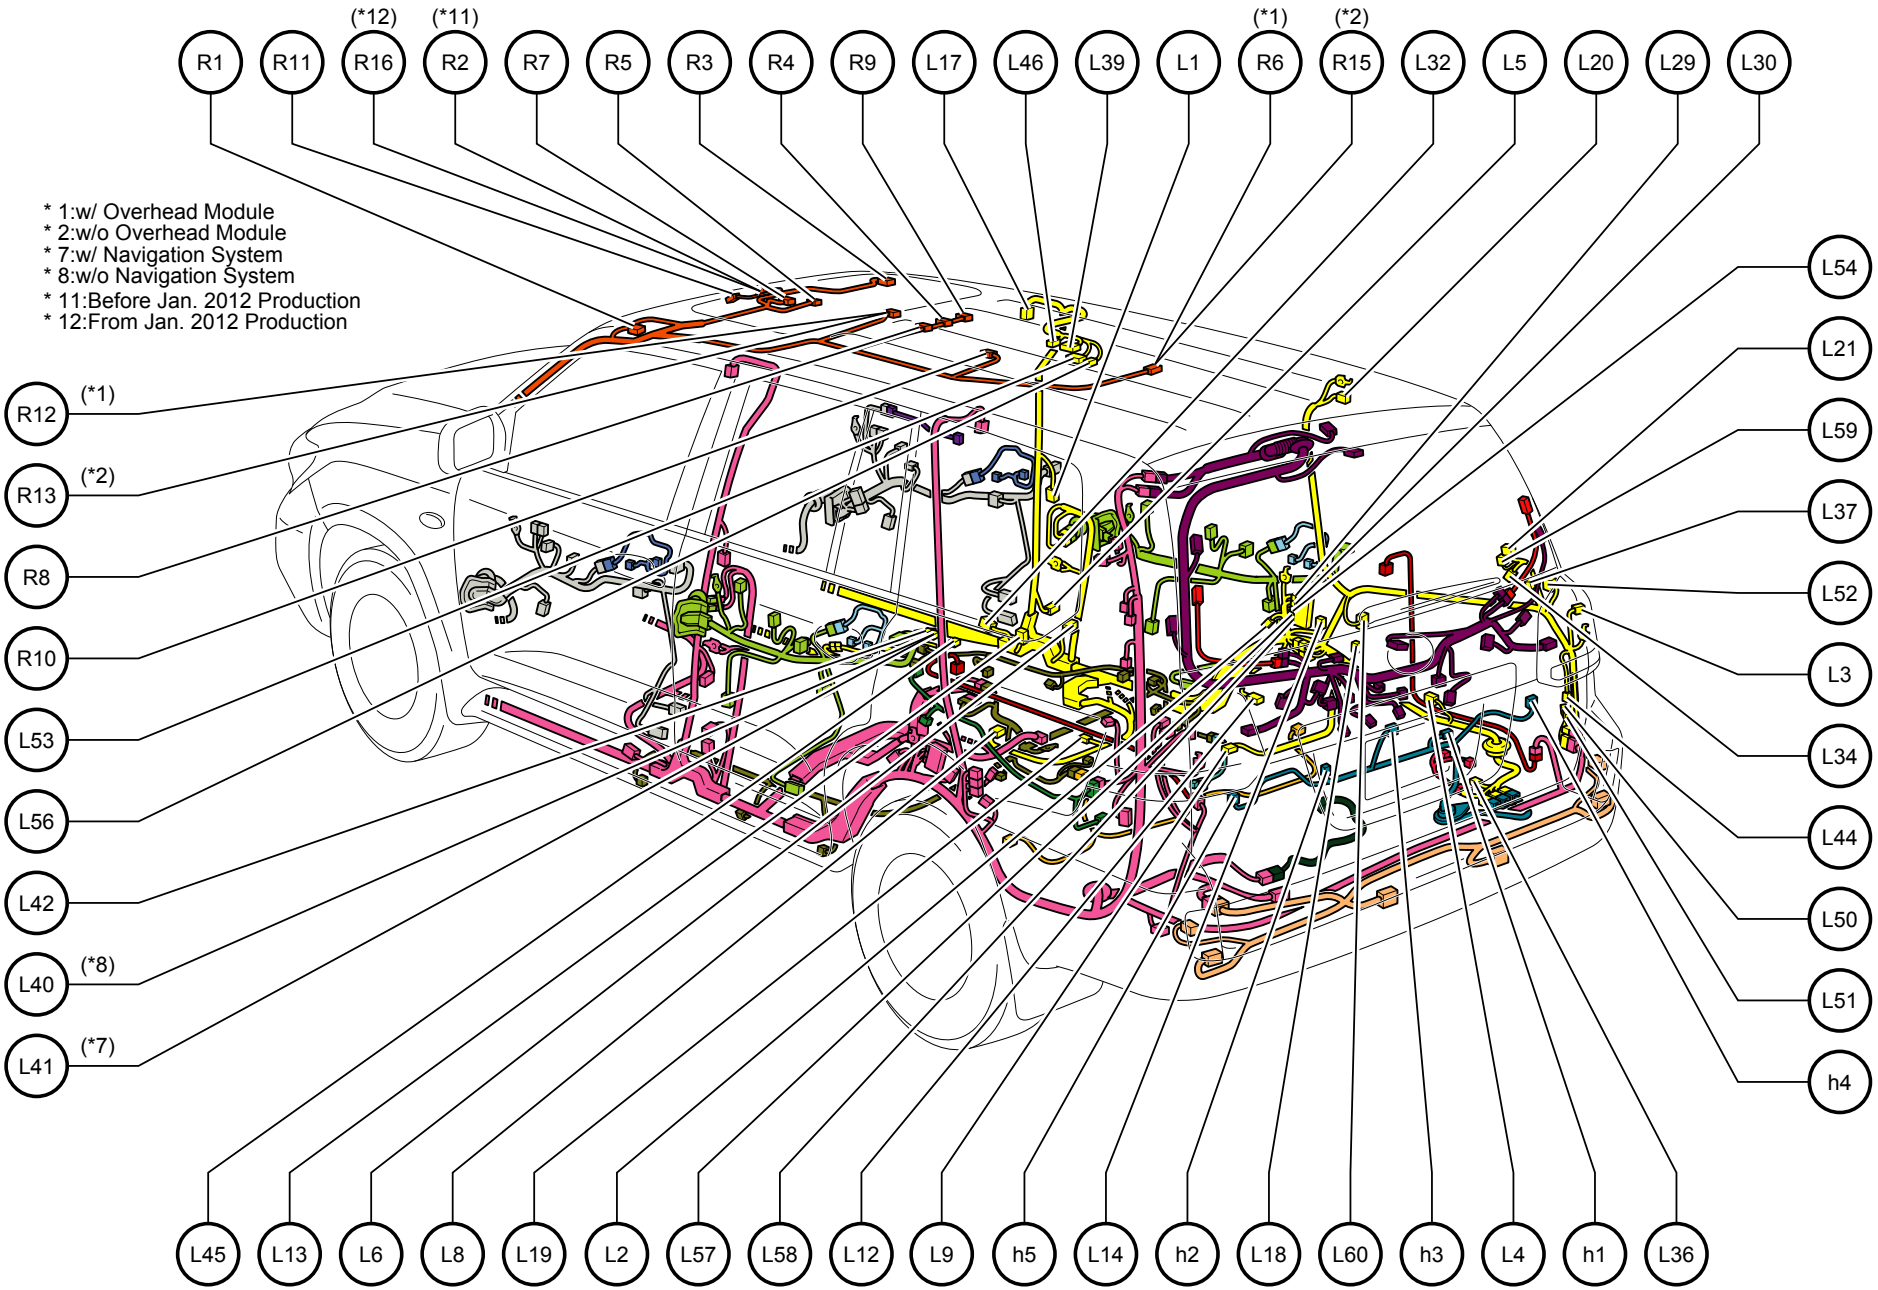
* 1:w/ Overhead Module
* 2:w/o Overhead Module
* 7:w/ Navigation System
* 8:w/o Navigation System
* 11:Before Jan. 2012 Production
* 12:From Jan. 2012 Production
R1
R11
(*12)
R16
(*11)
R2
R7
R5
R3
R4
R9
L17
L46
L39
L1
(*1)
R6
(*2)
R15
L32
L5
L20
L29
L30
R12
(*1)
R13
(*2)
R8
R10
L53
L56
L42
L40
(*8)
L41
(*7)
L54
L21
L59
L37
L52
L3
L34
L44
L50
L51
h4
L45
L13
L6
L8
L19
L2
L57
L58
L12
L9
h5
L14
h2
L18
L60
h3
L4
h1
L36

L 1 Front Door Courtesy Light Switch Assembly RH
L 2 Rear Door Courtesy Light Switch Assembly RH
L 3 Rear Combination Light Assembly RH
L 4 No.1 with Box Speaker Assembly
L 5 Front Pre-Crash Seat Belt Motor RH
L 6 Front Tension Reducer RH
L 8 Rear Indoor Electrical Key Oscillator
L 9 Indoor Luggage Compartment Electrical Key Oscillator
L 12 Cooler Thermistor RH
L 13 Front Pretensioner RH
L 14 Rear Pretensioner RH
L 17 Curtain Shield Airbag Assembly Circuit RH
L 18 Rear Side Airbag Sensor Assembly RH
L 19 Rear Floor Side Airbag Sensor
L 20 Curtain Shield Airbag Assembly Circuit RH
L 21 Door Control Receiver
L 29 Junction Connector
L 30 Junction Connector
L 32 No.1 Interior Illumination Light Assembly RH
L 34 Glass Breakage Sensor (Quarter Glass RH)
L 36 Height Control Pump and Motor Assembly
L 37 Option Connector (Theft Warning Radar Sensor)
L 39 Television Display Assembly
L 40 Multi-Media Interface ECU Assembly
L 41 Multi-Media Interface ECU Assembly
L 42 Multi-Media Interface ECU Assembly
L 44 Option Connector (Parking Assist-Sensor)
L 45 Multi-Media Interface ECU Assembly
L 46 Television Display Assembly
L 50 No.2 Multiplex Network Body ECU
L 51 No.2 Multiplex Network Body ECU
L 52 Power Back Door Unit Assembly
L 53 Television Display Assembly
L 54 Junction Connector
L 56 Television Display Assembly
L 57 Junction Connector
L 58 Junction Connector
L 59 Roof Tire Pressure Warning Antenna
L 60 Tire Pressure Warning ECU and Receiver Assembly

R 1 Visor Assembly LH
R 2 Inner Rear View Mirror Assembly
R 3 Visor Assembly RH
R 4 No.2 Room Light Assembly
R 5 Sliding Roof Control ECU
R 6 No.3 Room Light Assembly
R 7 Overhead Module
R 8 No.2 Room Light Assembly
R 9 No.2 Room Light Assembly
R 10 No.1 Room Light Assembly
R 11 Rain Sensor
R 12 No.1 Room Light Assembly
R 13 No.1 Room Light Assembly
R 15 No.3 Room Light Assembly
R 16 Inner Rear View Mirror Assembly

h 1 Tire Carrier Courtesy Light Switch
h 2 License Plate Light Assembly RH
h 3 Back Door Remote Control Assembly

h 4 Tail Gate Lock Assembly Lower RH
h 5 Tail Gate Lock Assembly Lower LH


L 1
White




L 2
White




L 3
White

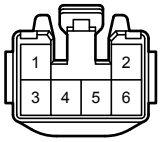

L 4
White




L 5
White




L 6
White




L 8
Black

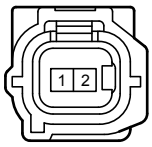


L 9
Black

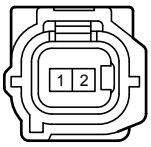


L 12
Black




L 13
Yellow

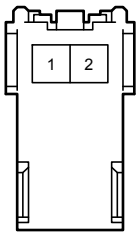


L 14
Yellow

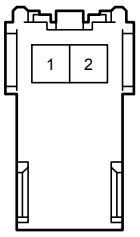


L 17
Black

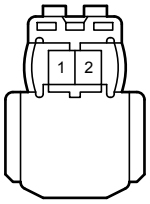


L 18
Yellow

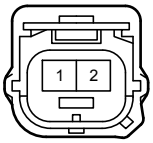


L 19
Yellow

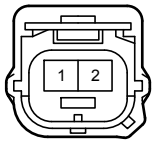


L 20
Black

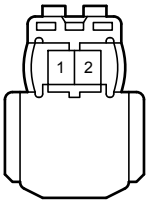


L 21
White

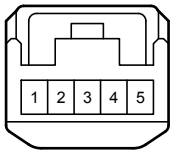

L 29
White



L 30
White




L 32
White




L 34
White




L 36
Black

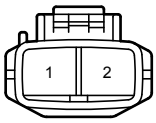


L 37
White




L 39
White

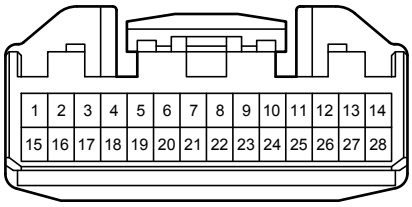


L 40
White

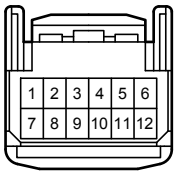


L 41
Black

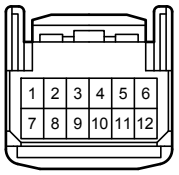


L 42
White

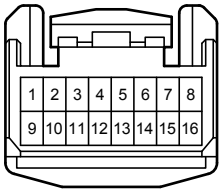

L 44
White

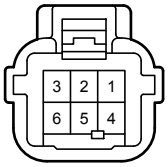


L 45
Brown

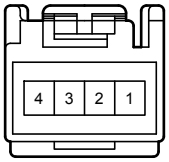


L 46
Blue




L 50
White

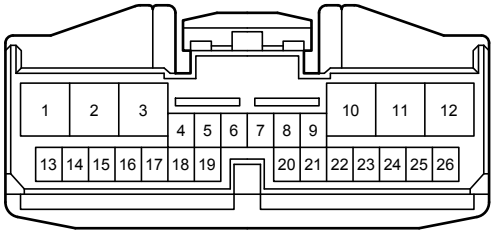


L 51
Blue

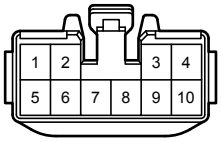


L 52
White

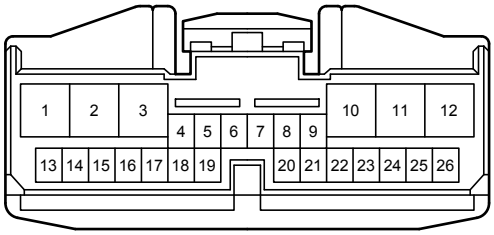


L 53
White

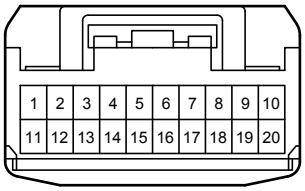


L 54
White




L 56
Brown

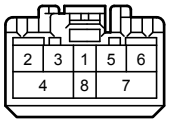


L 57
White




L 58
White




L 59
White




L 60
White

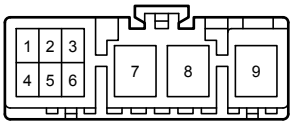


R 1
White

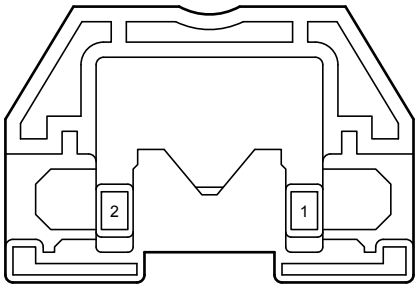


R 2
White

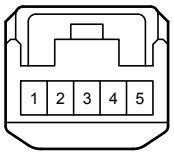


R 3
White

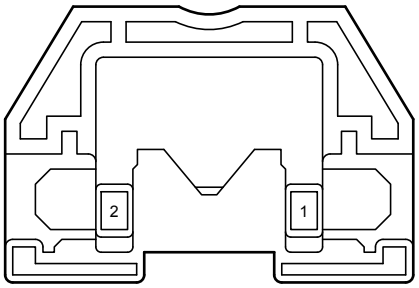


R 4
White

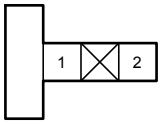


R 5
White

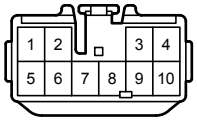


R 6
White




R 7
White

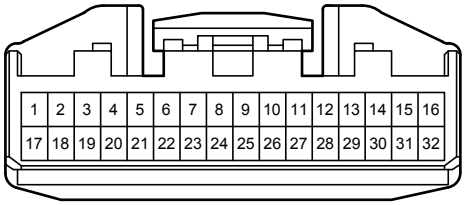


R 8
White




R 9
White




R 10
White

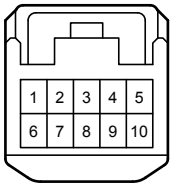


R 11
Black

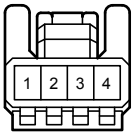


R 12
White




R 13
White



R 15
White




R 16
White

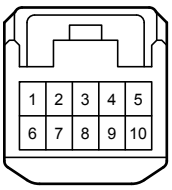


h 1
White




h 2
White




h 3
Black

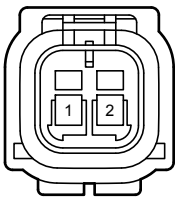


h 4
White

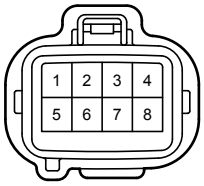

h 5
Gray

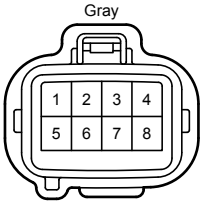

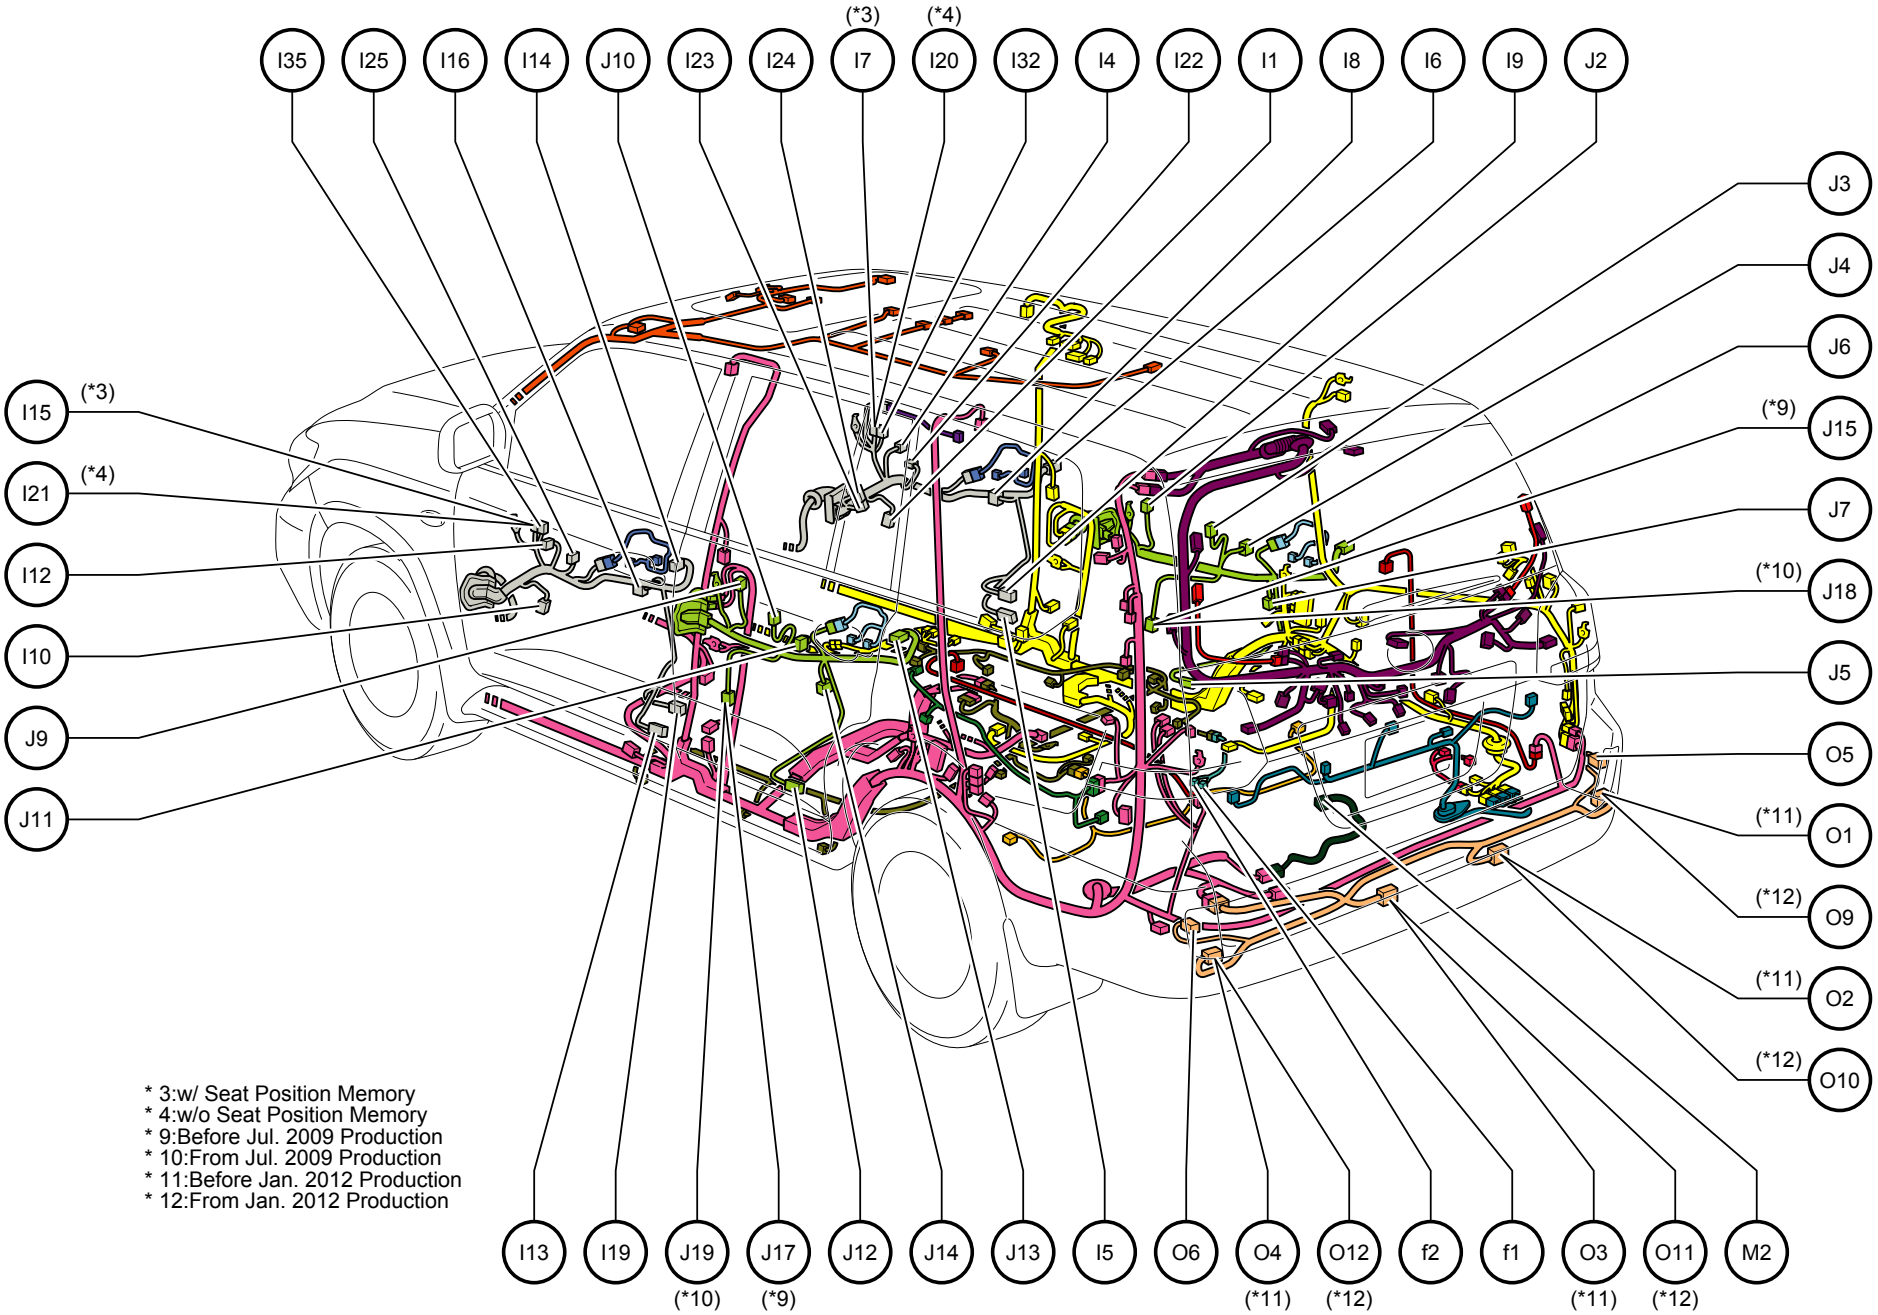

* 3:w/ Seat Position Memory
* 4:w/o Seat Position Memory
* 9:Before Jul. 2009 Production
* 10:From Jul. 2009 Production
* 11:Before Jan. 2012 Production
* 12:From Jan. 2012 Production

I 1 Front No.1 Speaker Assembly RH
I 4 Front Power Window Regulator Motor Assembly RH
I 5 Front Door Courtesy Light Assembly RH
I 6 Front Door Lock Assembly RH
I 7 Outer Rear View Mirror Assembly RH
I 8 Diode (Front Door Courtesy Switch RH)
I 9 Front Side Airbag Sensor Assembly RH
I 10 Front No.1 Speaker Assembly LH
I 12 Front Power Window Regulator Motor Assembly LH
I 13 Front Door Courtesy Light Assembly LH
I 14 Front Door Lock Assembly LH
I 15 Outer Rear View Mirror Assembly LH
I 16 Diode (Front Door Courtesy Switch LH)
I 19 Front Side Airbag Sensor Assembly LH
I 20 Outer Rear View Mirror Assembly RH
I 21 Outer Rear View Mirror Assembly LH
I 22 Multiplex Network Master Switch Assembly
I 23 Outer Mirror Control ECU Assembly
I 24 Outer Mirror Control ECU Assembly
I 25 Front Power Window Regulator Switch Assembly LH
I 32 Outer Rear View Mirror Assembly RH
I 35 Outer Rear View Mirror Assembly LH

J 2 Rear No.3 Speaker Assembly RH
J 3 Rear Power Window Regulator Switch Assembly RH
J 4 Rear Power Window Regulator Motor Assembly RH
J 5 Rear Door Courtesy Light Assembly RH
J 6 Rear Door Lock Assembly RH
J 7 Diode (Rear Door Courtesy Switch RH)
J 9 Rear No.3 Speaker Assembly LH
J 10 Rear Power Window Regulator Switch Assembly LH
J 11 Rear Power Window Regulator Motor Assembly LH
J 12 Rear Door Courtesy Light Assembly LH
J 13 Rear Door Lock Assembly LH
J 14 Diode (Rear Door Courtesy Switch LH)
J 15 Rear Speaker Set RH
J 17 Rear Speaker Set LH
J 18 Rear Speaker Set RH
J 19 Rear Speaker Set LH

M 2 Fuel Sender Gage Assembly (Sub)


O 1 No.2 Ultrasonic Sensor RH
O 2 No.3 Ultrasonic Sensor RH
O 3 No.3 Ultrasonic Sensor LH
O 4 No.2 Ultrasonic Sensor LH
O 5 Rear Fog Light Assembly RH
O 6 Rear Fog Light Assembly LH
O 9 No.2 Ultrasonic Sensor RH
O 10 No.3 Ultrasonic Sensor RH
O 11 No.3 Ultrasonic Sensor LH
O 12 No.2 Ultrasonic Sensor LH

f 1 Differential Lock Shift Actuator
f 2 Differential Lock Switch

I 1
White




I 4
White

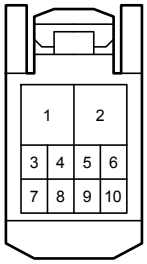


I 5
White



I 6
White

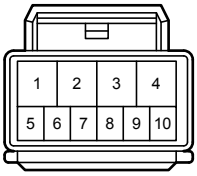


I 7
White

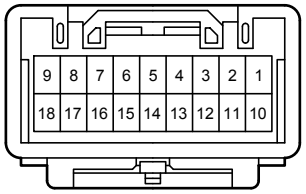

I 8
White




I 9
Yellow

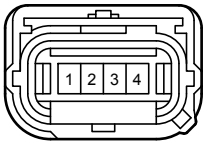

I 10
White




I 12
White

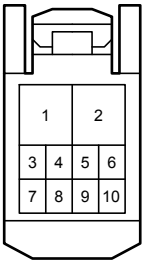


I 13
White



I 14
White

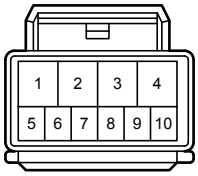


I 15
White

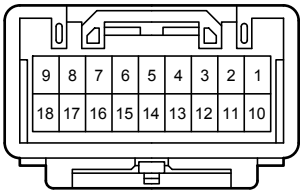


I 16
White




I 19
Yellow

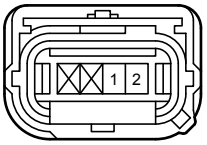


I 20
White

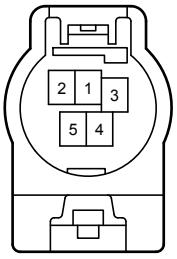


I 21
White

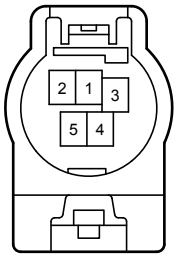


I 22
White

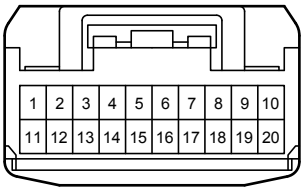


I 23
White

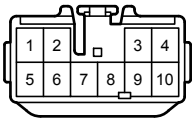


I 24
White

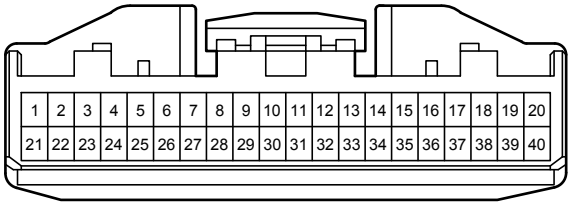


I 25
White

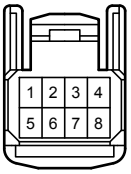


I 32
White

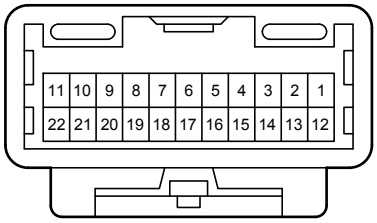


I 35
White

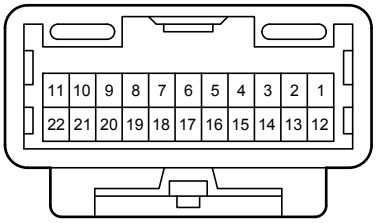


J 2
Black



J 3
White

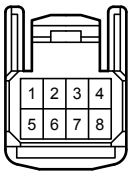


J 4
White

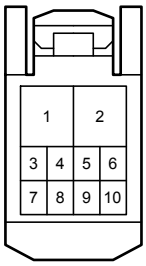

J 5
White




J 6
White

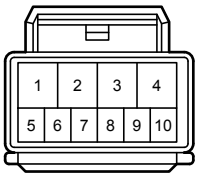


J 7
White




J 9
Black



J 10
White

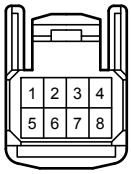


J 11
White

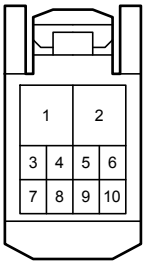

J 12
White



J 13
White

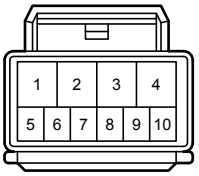

J 14
White



J 15
White



J 17
White



J 18
Black




J 19
Black




M 2
Black




O 1
Black

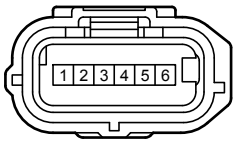


O 2
Black

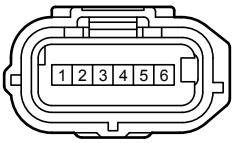


O 3
Black

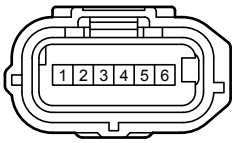


O 4
Black

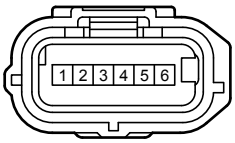


O 5
White

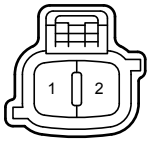


O 6
White

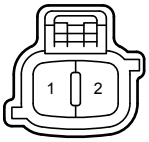


O 9
Black

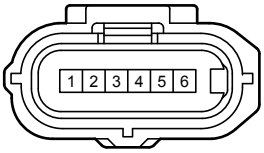


O 10
Black

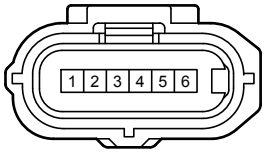


O 11
Black

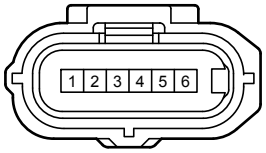


O 12
Black

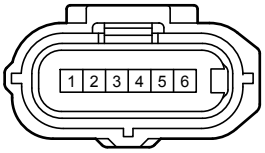


f 1
Gray

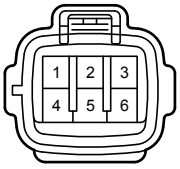

f 2
Blue

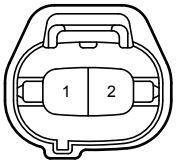

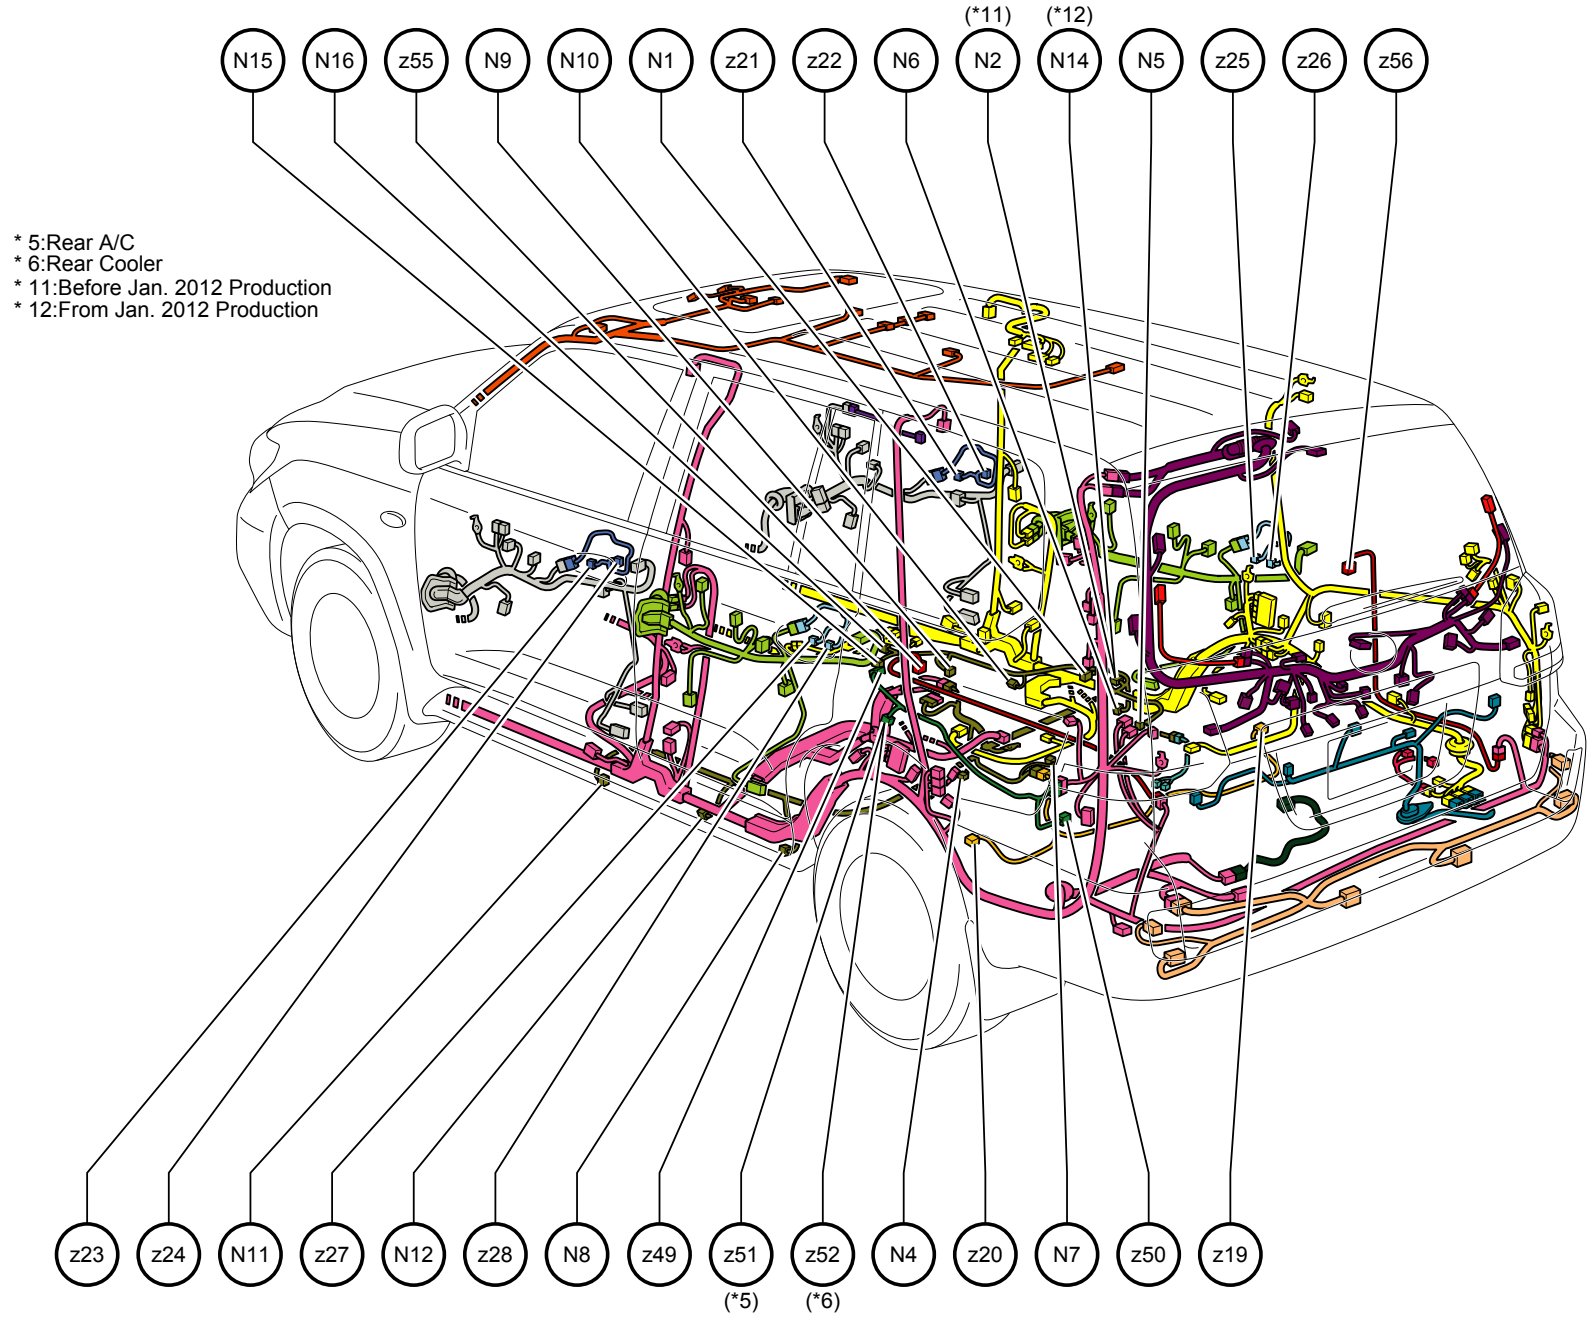
(*11)
(*12)
N15
N16
z55
N9
N10
N1
z21
z22
N6
N2
N14
N5
z25
z26
z56
* 5:Rear A/C
* 6:Rear Cooler
* 11:Before Jan. 2012 Production
* 12:From Jan. 2012 Production
z23
z24
N11
z27
N12
z28
N8
z49
z51
z52
N4
z20
N7
z50
z19
(*5)
(*6)


N 1 Fuel Sender Gage Assembly (Main)
N 2 Fuel Pump Control ECU Assembly
N 4 No.1 Height Control Valve Assembly
N 5 Rear Height Control Sensor Sub-Assembly RH
N 6 Rear Shock Absorber Assembly RH
N 7 Rear Height Control Sensor Sub-Assembly LH
N 8 Rear Shock Absorber Assembly LH
N 9 Front Shock Absorber Assembly RH
N 10 Front Shock Absorber Control Valve Assembly RH
N 11 Front Shock Absorber Assembly LH
N 12 Front Shock Absorber Control Valve Assembly LH
N 14 Fuel Pump Control ECU Assembly
N 15 DPF Temperature Sensor RH (Exhaust Gas Temperature Sensor)
N 16 Differential Pressure Sensor RH

z 19 Rear Speed Sensor RH
z 20 Rear Speed Sensor LH
z 21 Front Door Outside Handle Assembly RH
z 22 Front Door Electrical Key Oscillator RH
z 23 Front Door Outside Handle Assembly LH
z 24 Front Door Electrical Key Oscillator LH
z 25 Rear Door Outside Handle Assembly RH
z 26 Rear Door Electrical Key Oscillator RH
z 27 Rear Door Outside Handle Assembly LH
z 28 Rear Door Electrical Key Oscillator LH
z 49 Rear Blower with Fan Motor Sub-Assembly
z 50 Rear Cooling Unit Expansion Valve
z 51 Blower Motor Control
z 52 Rear Blower Resistor
z 55 Rear No.1 Cooler Thermistor LH
z 56 Rear No.1 Cooler Thermistor RH


N 1
White




N 2
Black

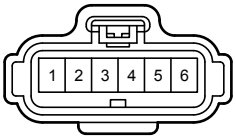

N 4
Black

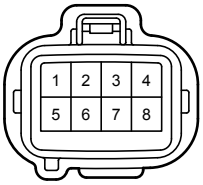


N 5
Black

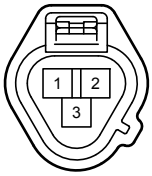


N 6
Gray




N 7
Black

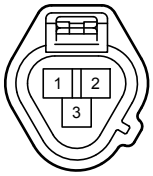

N 8
Gray

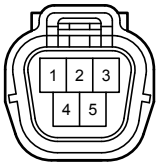


N 9
Gray

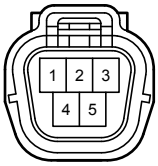

N 10
Gray




N 11
Gray

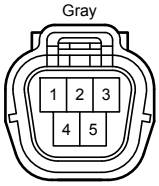

N 12
Gray




N 14
Black

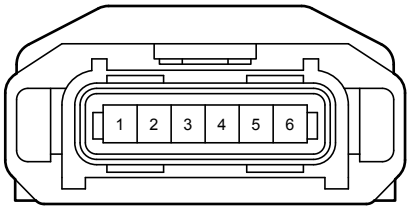

N 15
Gray



N 16
Black

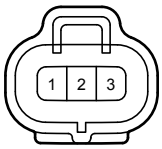


z 19
Black




z 20
Black




z 21
White

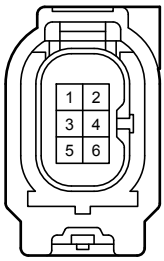


z 22
Black

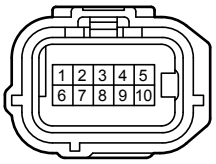


z 23
White

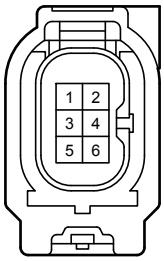


z 24
Black

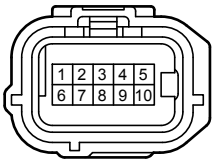


z 25
White

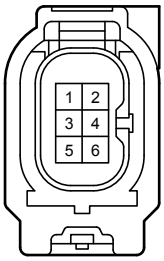


z 26
Black

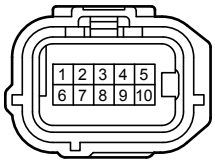


z 27
White

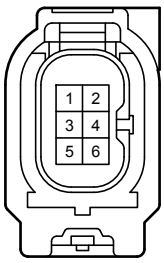


z 28
Black

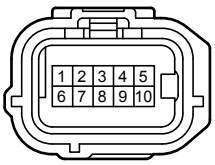


z 49
Black

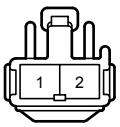


z 50
Black




z 51
Black

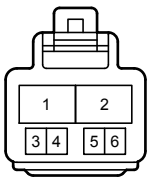


z 52
Black

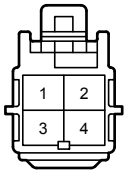


z 55
White



z 56
White




* 11:Before Jan. 2012 Production
* 12:From Jan. 2012 Production
* 16:Before Aug. 2013 Production
* 17:From Aug. 2013 Production

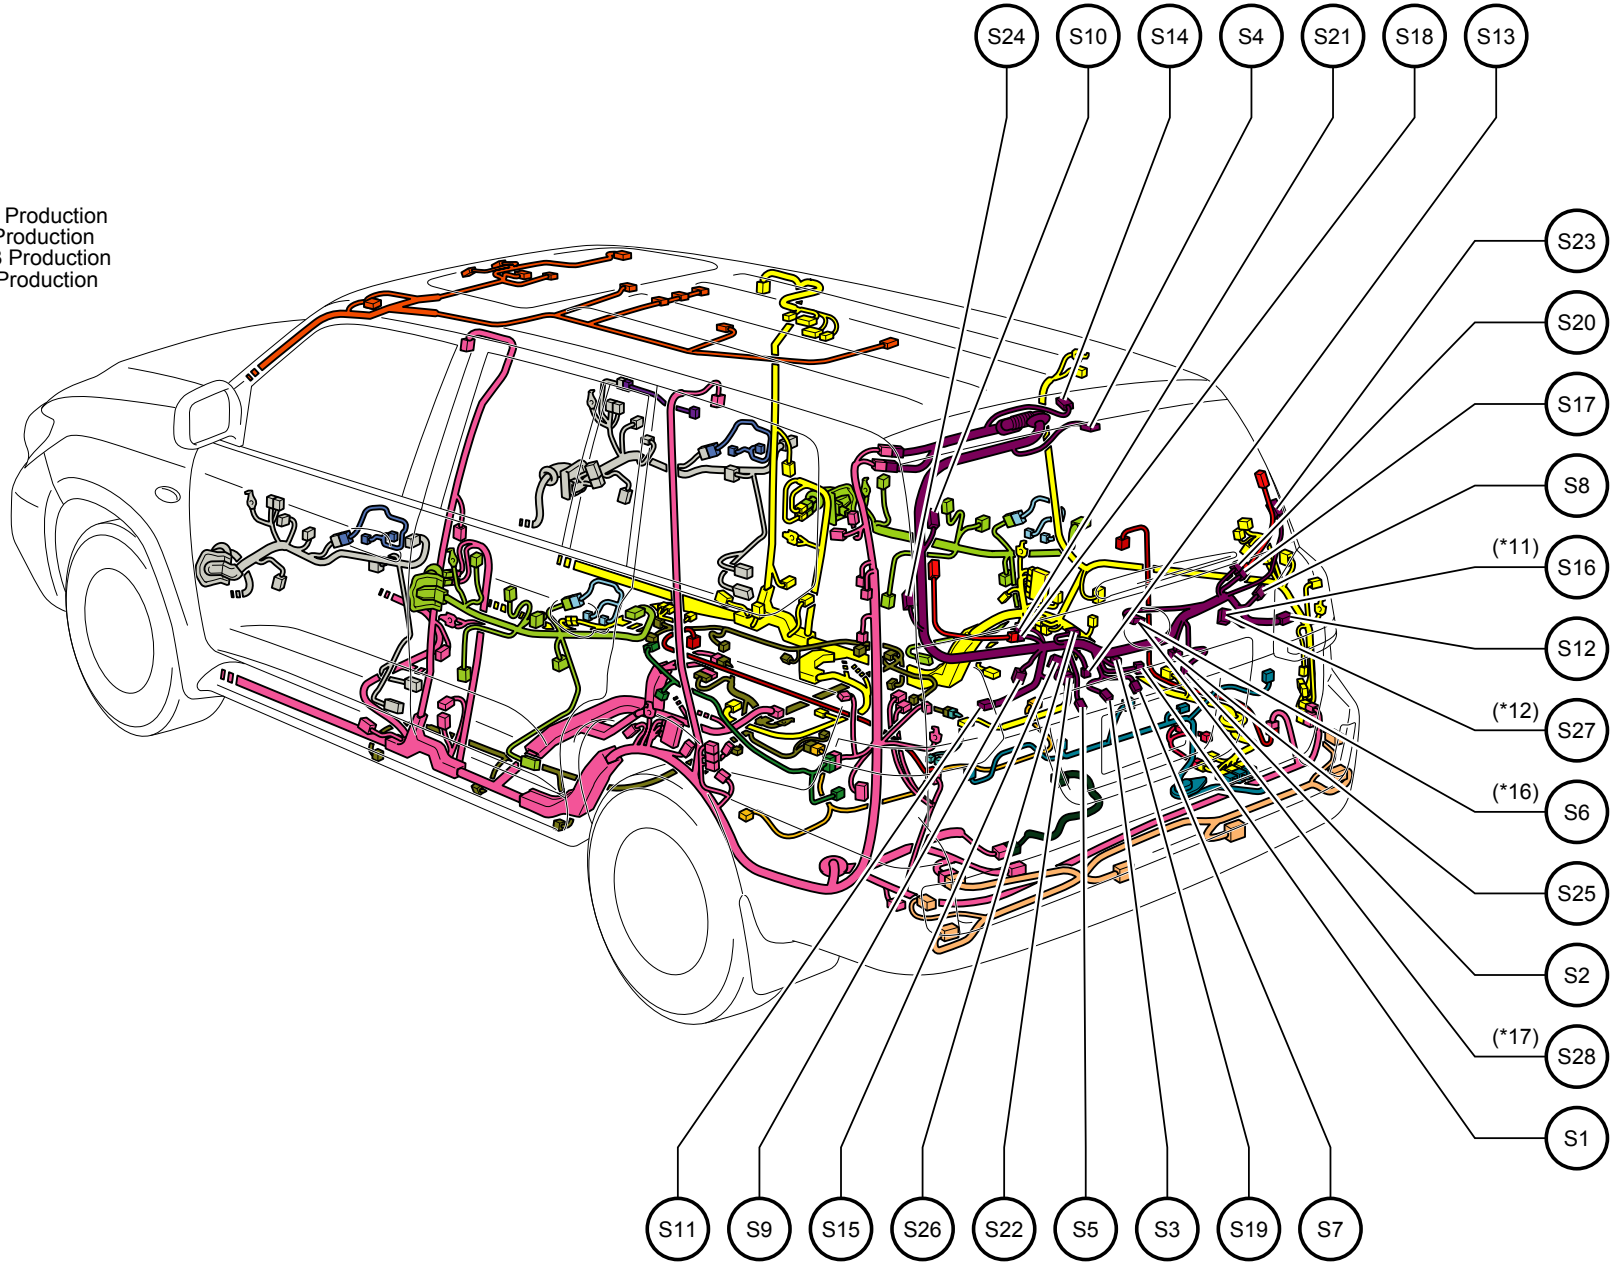

S 1 Back Door Lock Assembly
S 2 License Plate Light Assembly RH
S 3 License Plate Light Assembly LH
S 4 Center Stop Light Assembly
S 5 Rear Television Camera Assembly
S 6 Rear Wiper Motor Assembly
S 7 Back Door Opener Switch Assembly
S 8 Rear Header Speaker Assembly RH
S 9 Rear Header Speaker Assembly LH
S 10 Glass Breakage Sensor (Back Door Glass)
S 11 Rear Light Assembly LH
S 12 Rear Light Assembly RH
S 13 Option Connector (Back Guide Monitor)
S 14 Noise Filter (Rear Window Defogger and Stop)
S 15 Junction Connector
S 16 Junction Connector
S 17 Rear Window Defogger (Back Door Glass)
S 18 Rear Window Defogger (Back Door Glass)
S 19 Power Back Door Main Switch
S 20 Rear Window Defogger (Back Door Glass)
S 21 Rear Window Defogger (Back Door Glass)
S 22 Back Door Lock Assembly
S 23 Power Back Door Sensor Assembly RH
S 24 Power Back Door Sensor Assembly LH
S 25 Door Control Switch
S 26 Diode (Power Back Door)
S 27 Junction Connector
S 28 Rear Wiper Motor Assembly

S 1
Black

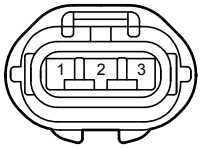


S 2
Gray




S 3
Gray




S 4
Gray




S 5
Black

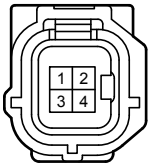


S 6
Black

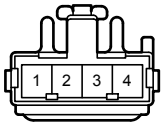


S 7
White

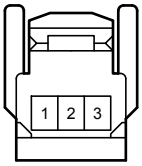

S 8
Black



S 9
Black



S 10
White




S 11
White




S 12
White




S 13
White

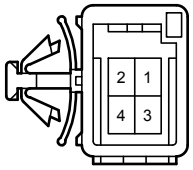


S 14
Black




S 15
White

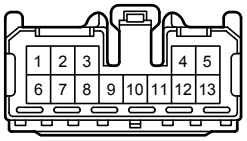


S 16
White

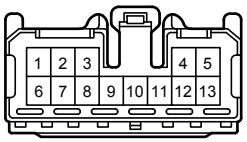


S 17
White

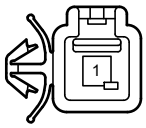


S 18
White

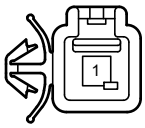


S 19
Blue




S 20
White

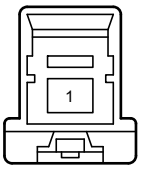


S 21
White

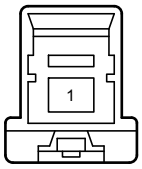


S 22
Black




S 23
White

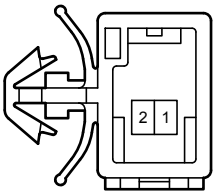

S 24
White

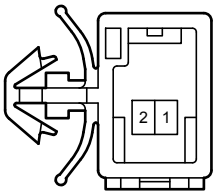


S 25
Black

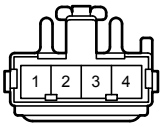


S 26
White




S 27
Dark Gray

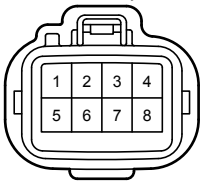


S 28
Black

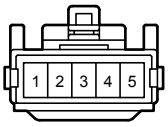


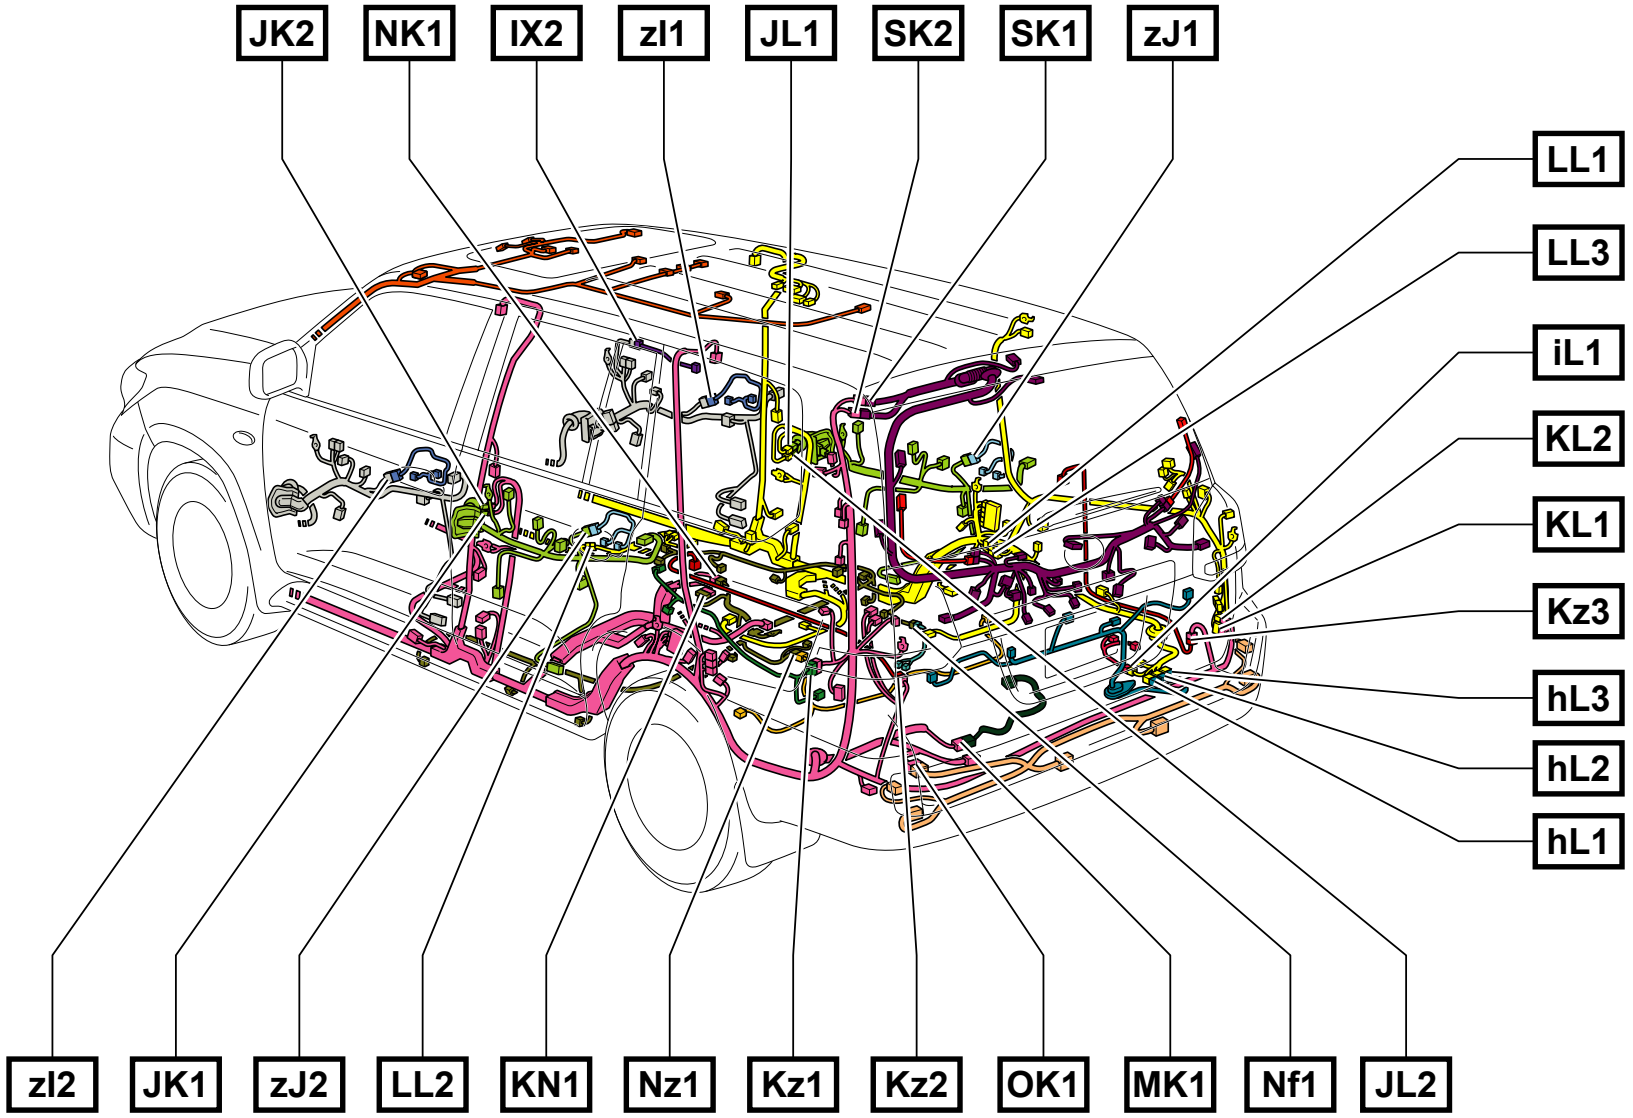
JK2
NK1
IX2
zI1
JL1
SK2
SK1
zJ1
LL1
LL3
iL1
KL2
KL1
Kz3
hL3
hL2
hL1
zI2
JK1
zJ2
LL2
KN1
Nz1
Kz1
Kz2
OK1
MK1
Nf1
JL2


IX2
White

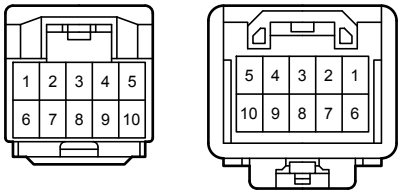


JK1
White

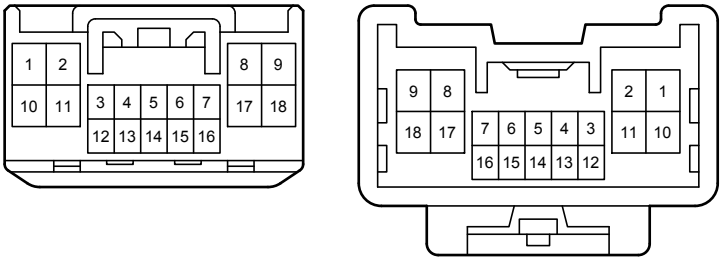


JK2
White

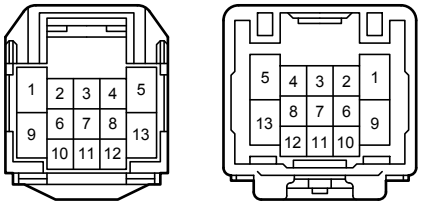


JL1
White

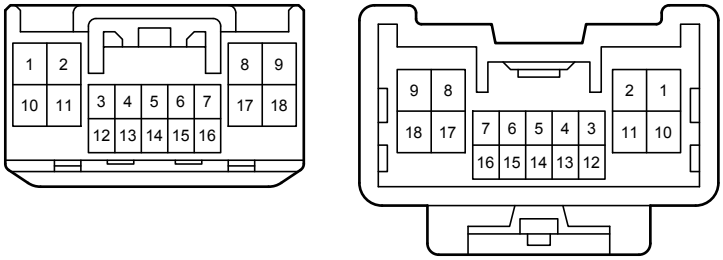


JL2
White

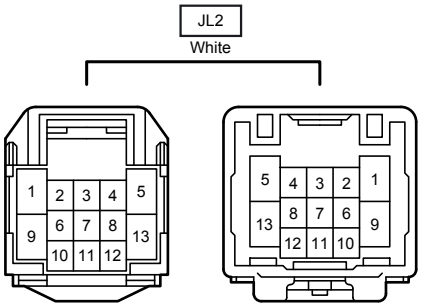


KL1
White

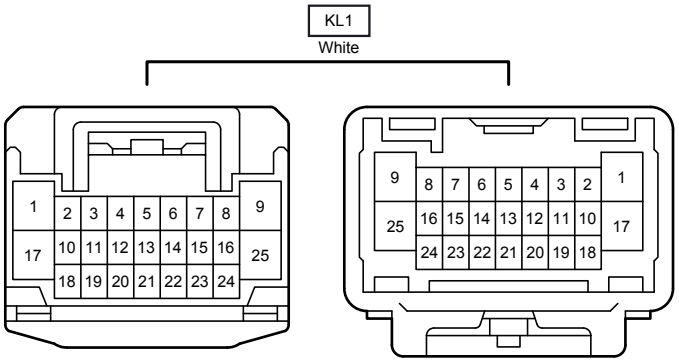


KL2
White

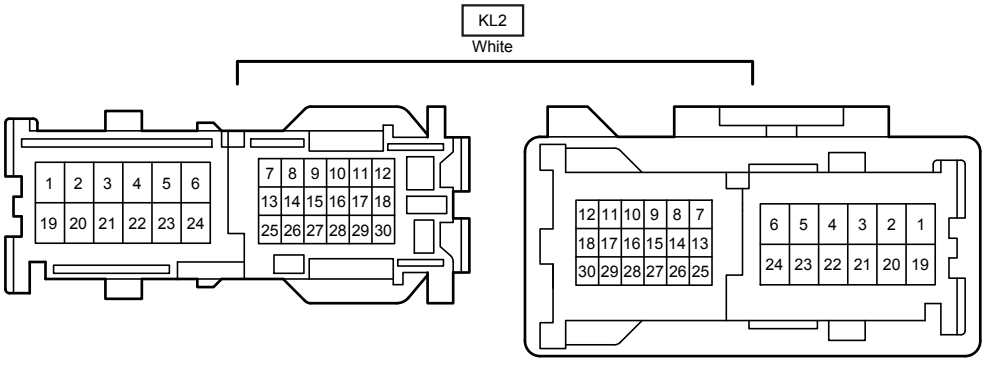


KN1
White

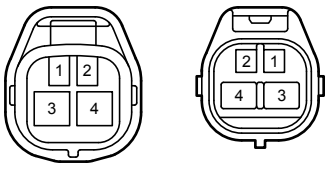


Kz1
Blue

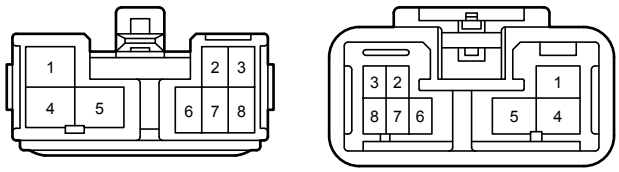


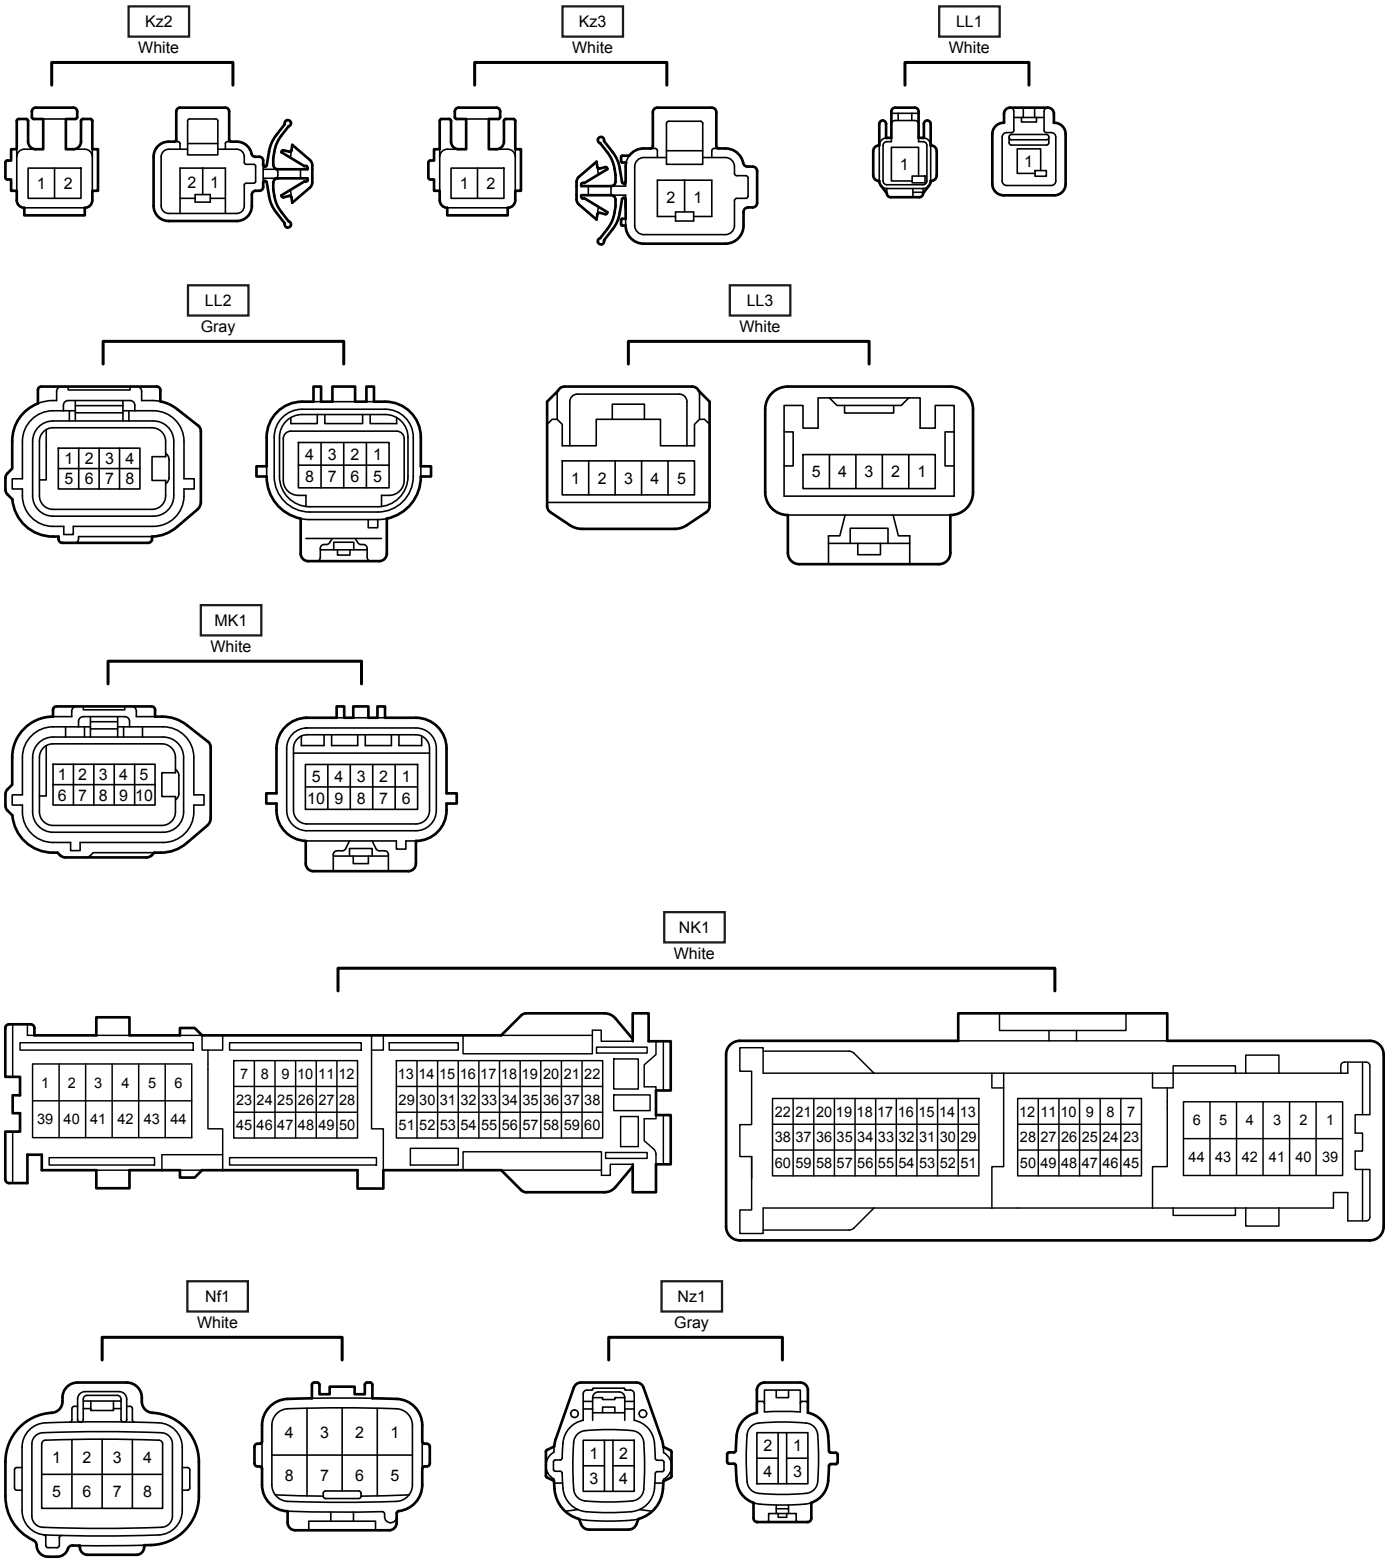
Kz2
White
1 2
2 1
Kz3
White
1 2
2 1
LL1
White
1
1
LL2
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
LL3
White
1 2 3 4 5
5 4 3 2 1
MK1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
NK1
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60
22 21 20 19 18 17 16 15 14 13
38 37 36 35 34 33 32 31 30 29
60 59 58 57 56 55 54 53 52 51
12 11 10 9 8 7
28 27 26 25 24 23
50 49 48 47 46 45
6 5 4 3 2 1
44 43 42 41 40 39
Nf1
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Nz1
Gray
1 2
3 4
2 1
4 3


OK1
Black

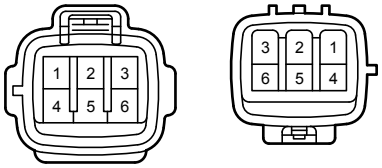


SK1
White

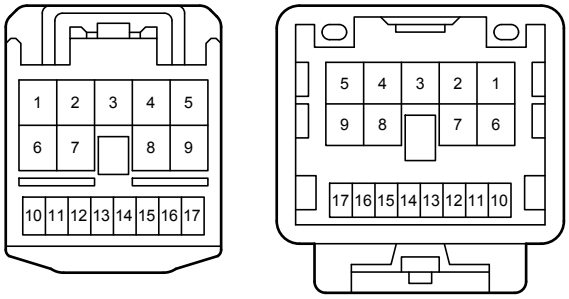


SK2
Blue

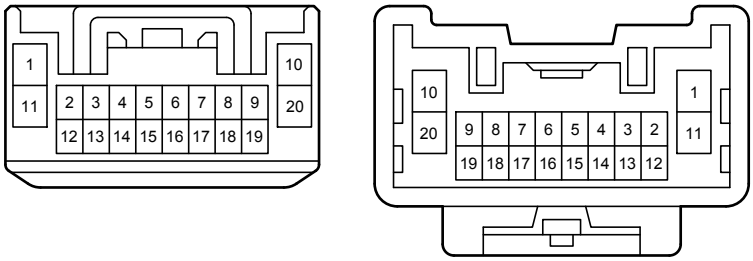


hL1
Black

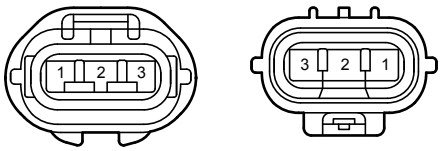


hL2
Gray

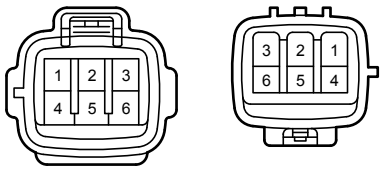


hL3
White

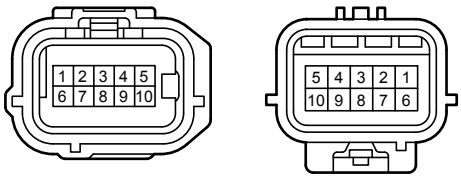


iL1
White

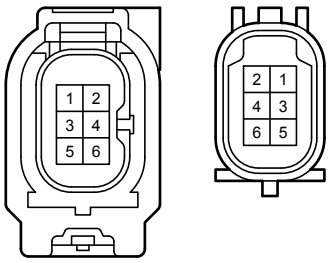



zl1
Blue

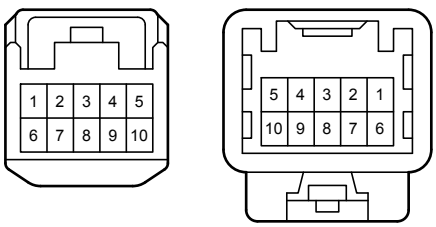

zl2
Blue

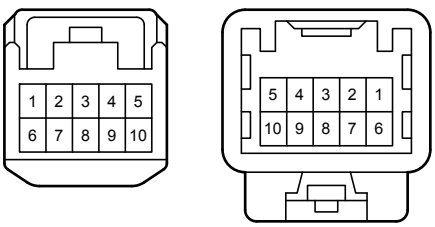

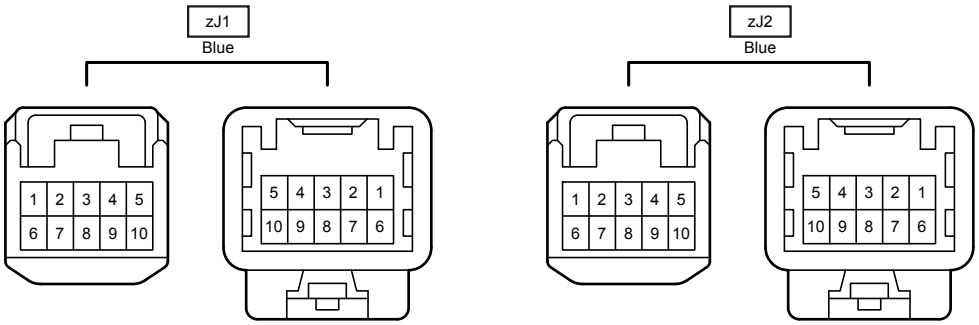

zJ1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
zJ2
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

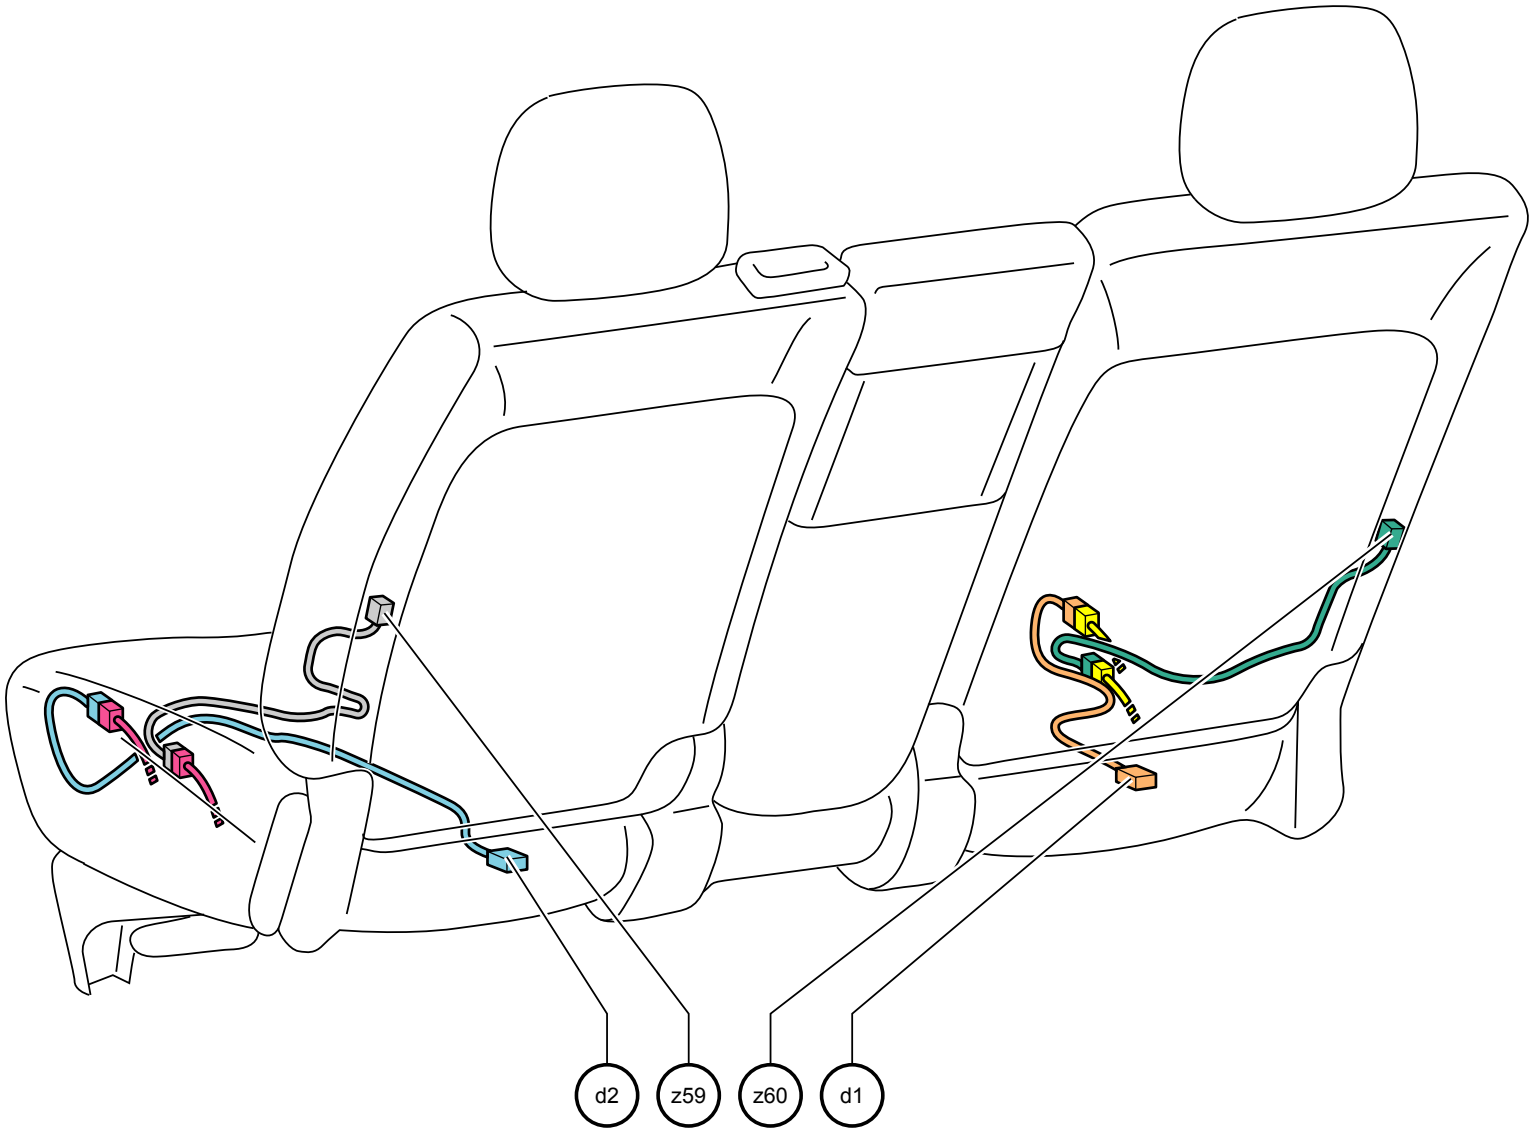
d2
z59
z60
d1


d 1 Rear Seat Heater RH
d 2 Rear Seat Heater LH

z 59 Rear Side Airbag Squib Circuit LH
z 60 Rear Side Airbag Squib Circuit RH


d 1
White

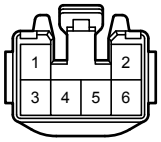


d 2
White

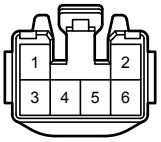



z 59
White




z 60
White



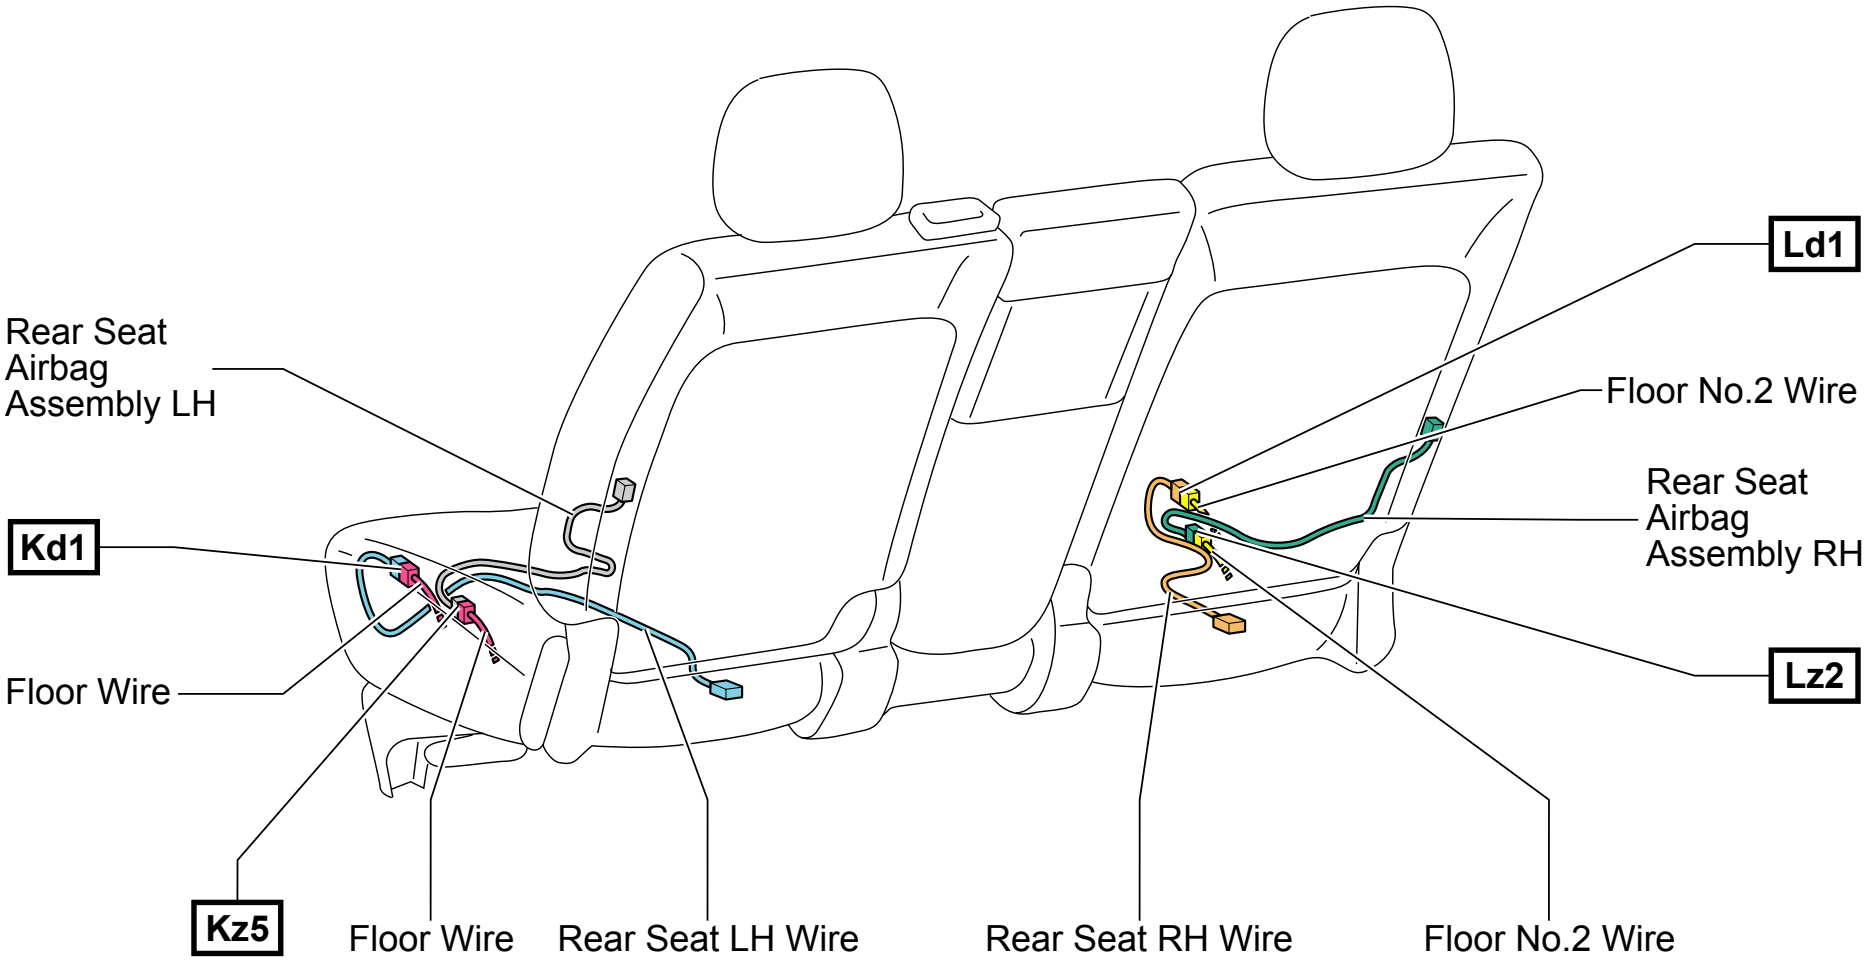
Rear Seat
Airbag
Assembly LH
Kd1
Floor Wire
Kz5
Floor Wire
Rear Seat LH Wire
Ld1
Floor No.2 Wire
Rear Seat
Airbag
Assembly RH
Lz2
Rear Seat RH Wire
Floor No.2 Wire

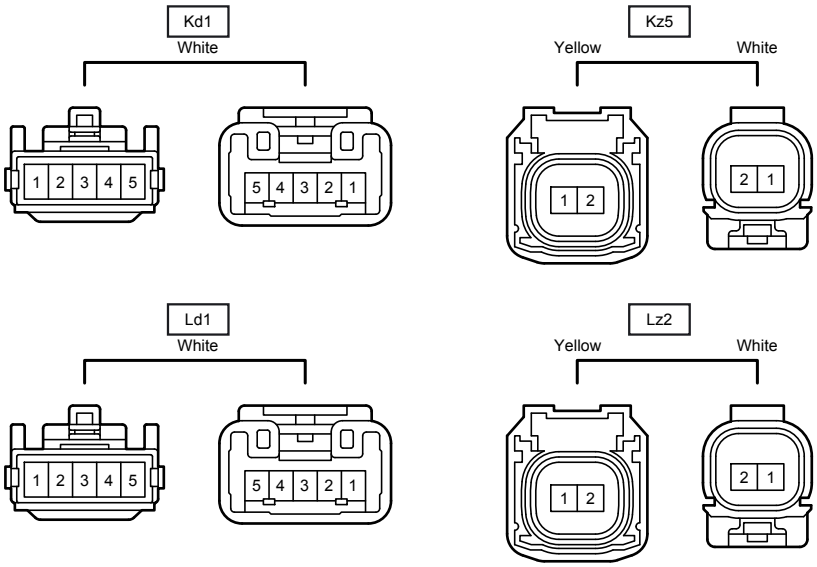

Kd1
White
1 2 3 4 5
5 4 3 2 1
Kz5
Yellow
White
1 2
2 1
Ld1
White
1 2 3 4 5
5 4 3 2 1
Lz2
Yellow
White
1 2
2 1

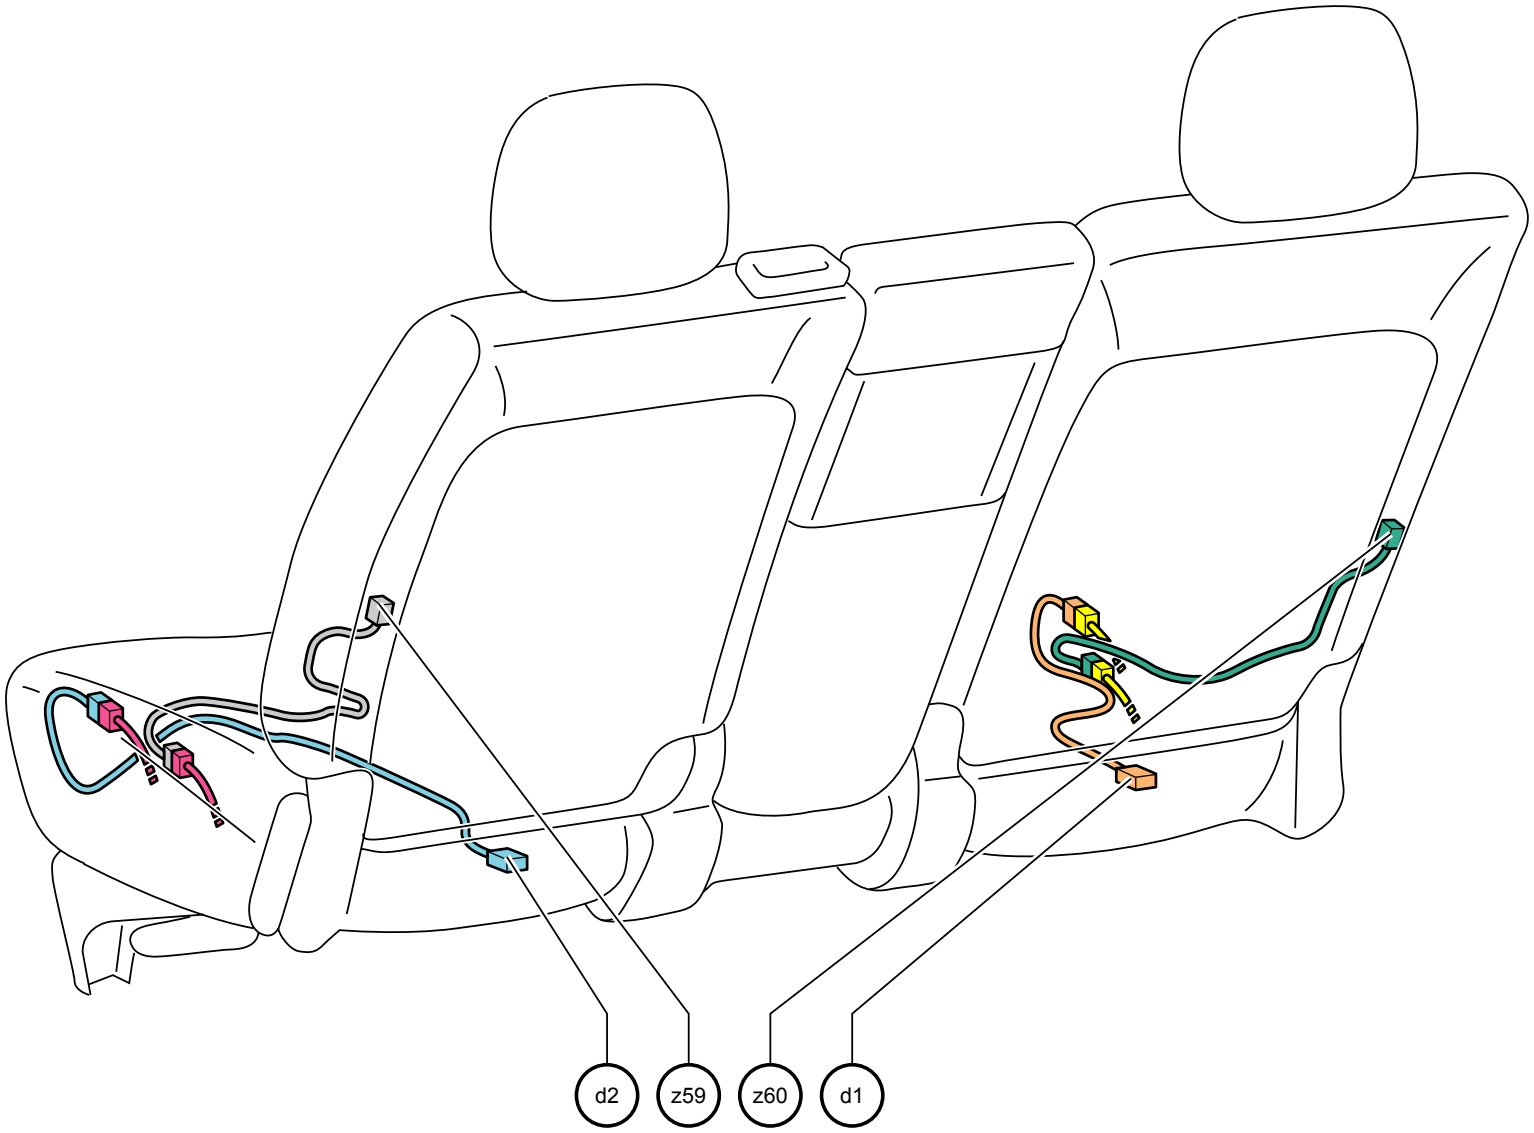
d2
z59
z60
d1


d 1 Rear Seat Heater RH
d 2 Rear Seat Heater LH

z 59 Rear Side Airbag Squib Circuit LH
z 60 Rear Side Airbag Squib Circuit RH


d 1
White

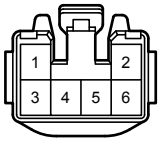


d 2
White

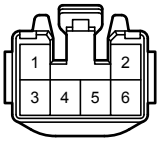



z 59
White





z 60
White




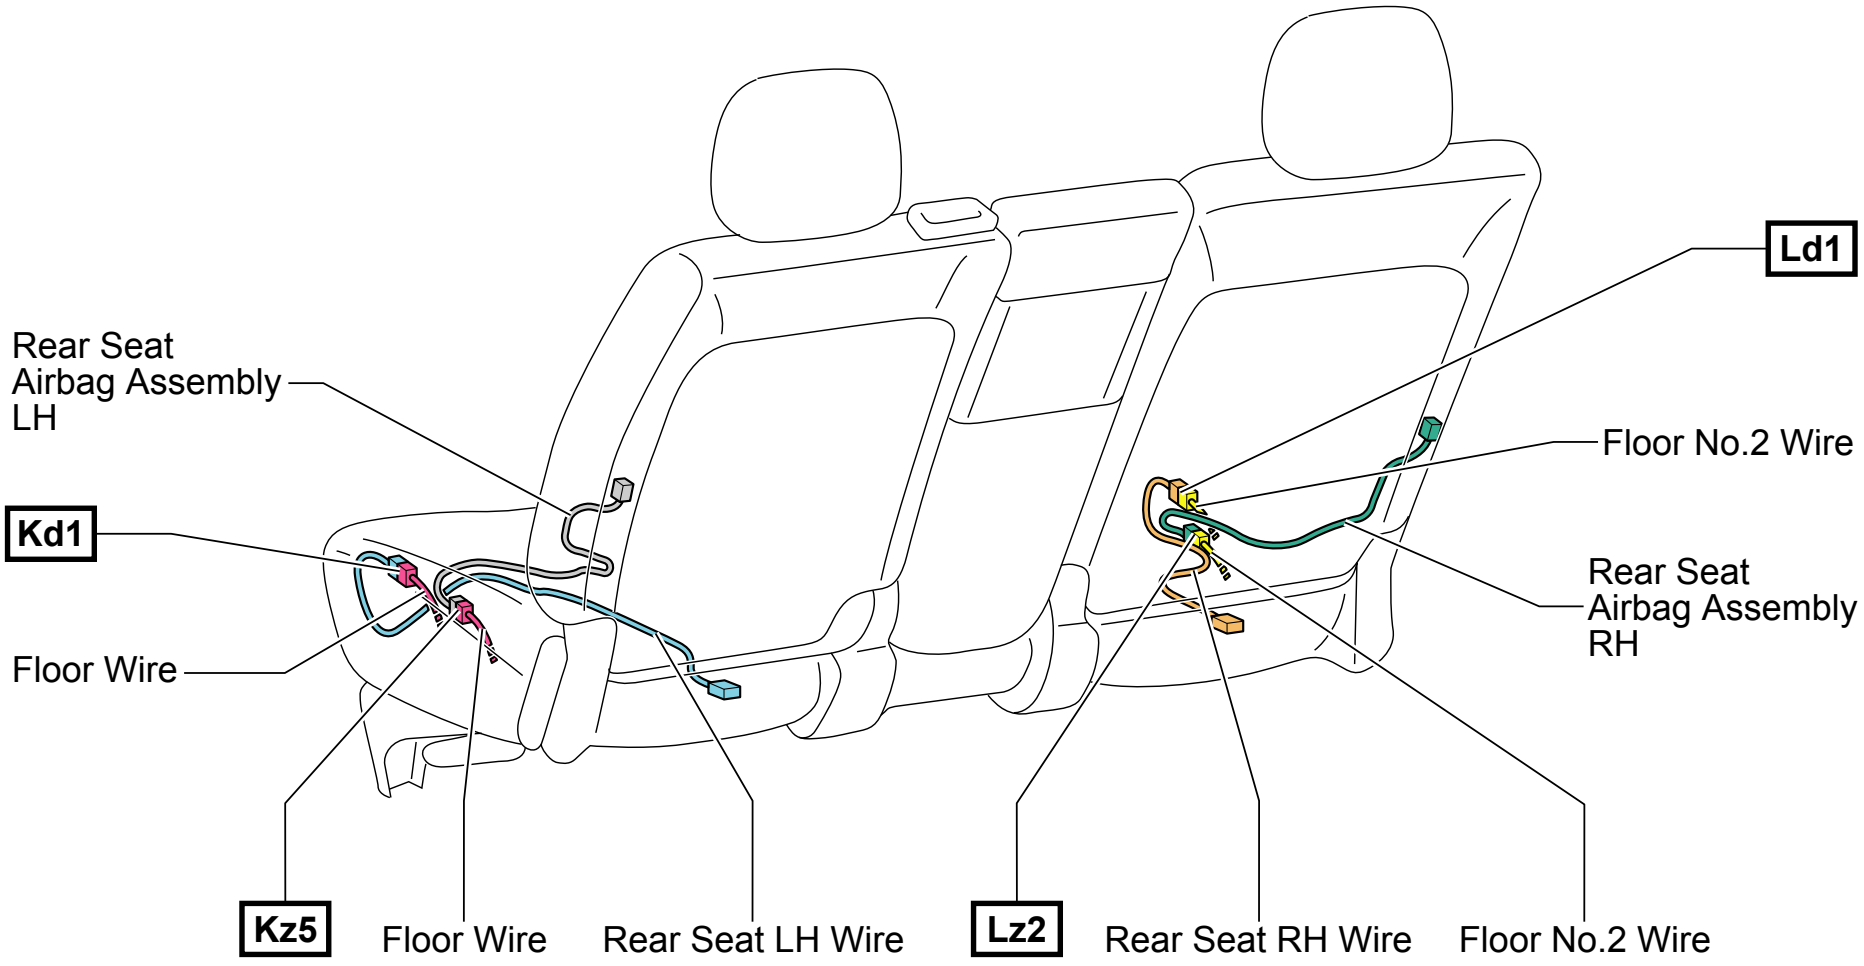

Rear Seat
Airbag Assembly
LH
Kd1
Floor Wire
Kz5
Floor Wire
Rear Seat LH Wire
Ld1
Floor No.2 Wire
Rear Seat
Airbag Assembly
RH
Lz2
Rear Seat RH Wire
Floor No.2 Wire

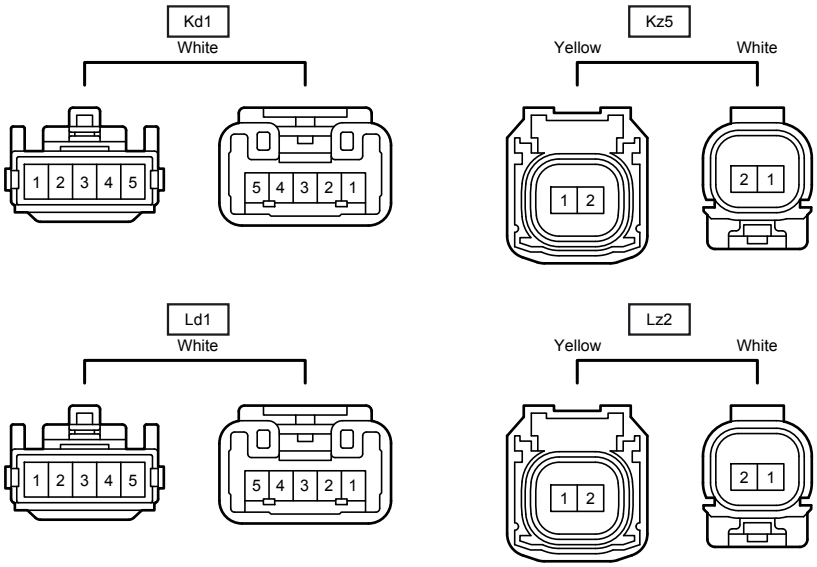
Kd1
White
1 2 3 4 5
5 4 3 2 1
Kz5
Yellow
White
1 2
2 1
Ld1
White
1 2 3 4 5
5 4 3 2 1
Lz2
Yellow
White
1 2
2 1

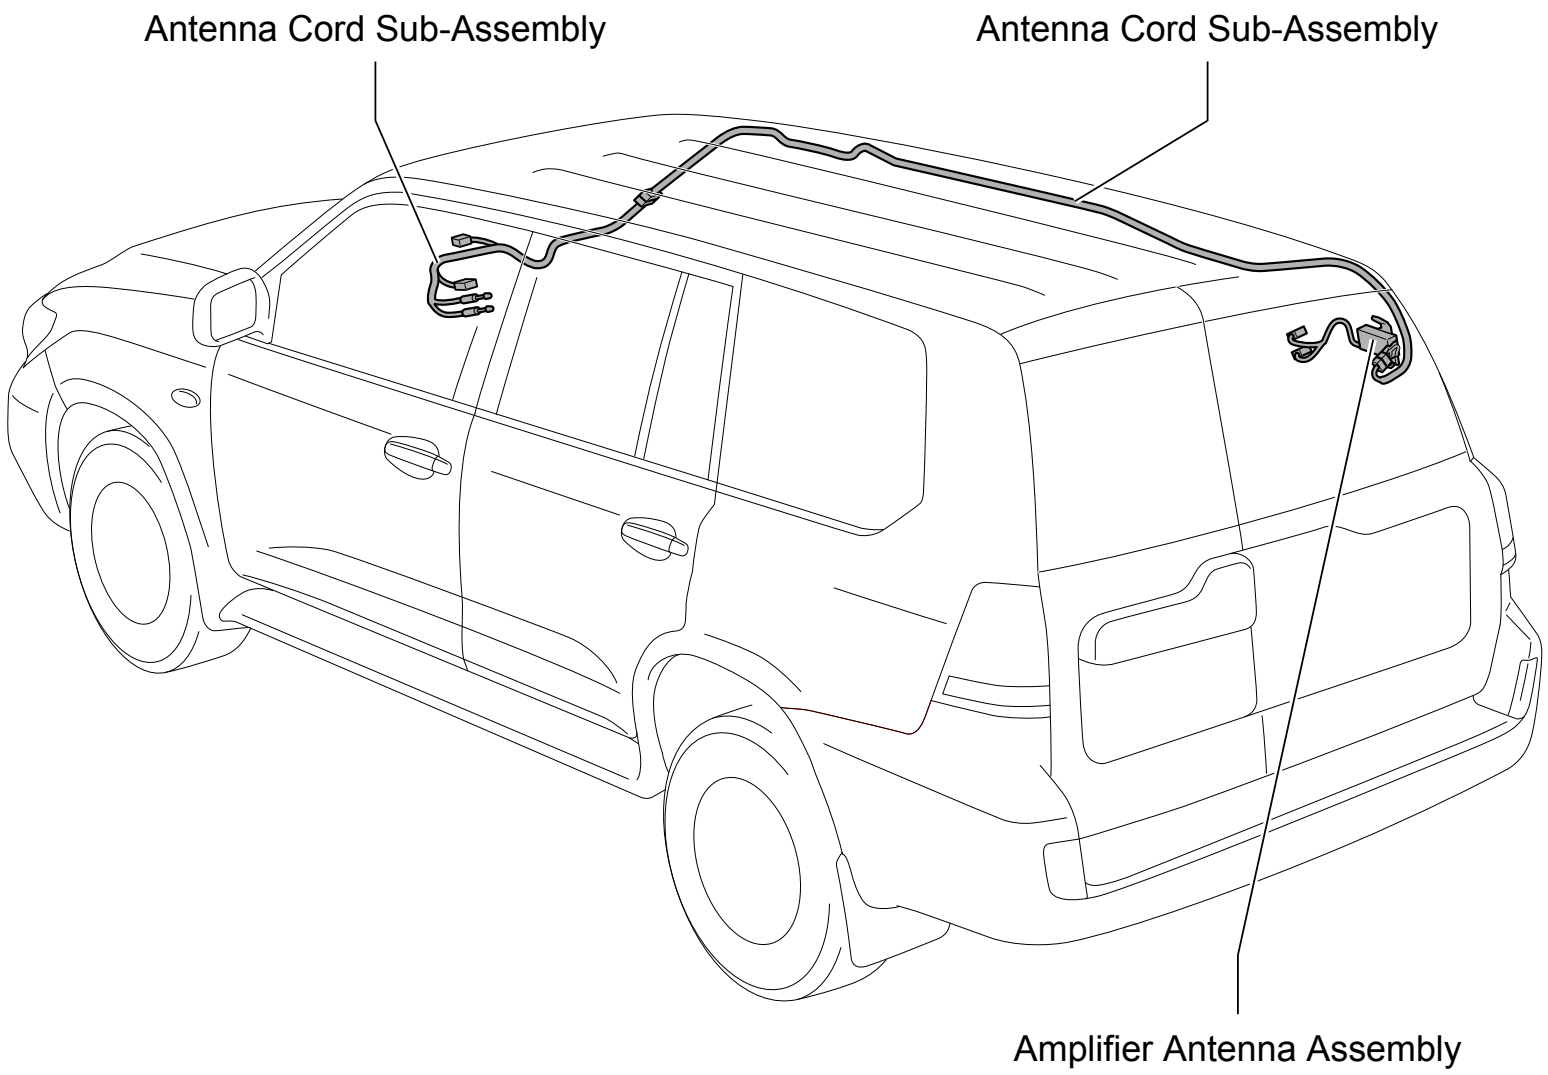
Antenna Cord Sub-Assembly
Antenna Cord Sub-Assembly
Amplifier Antenna Assembly

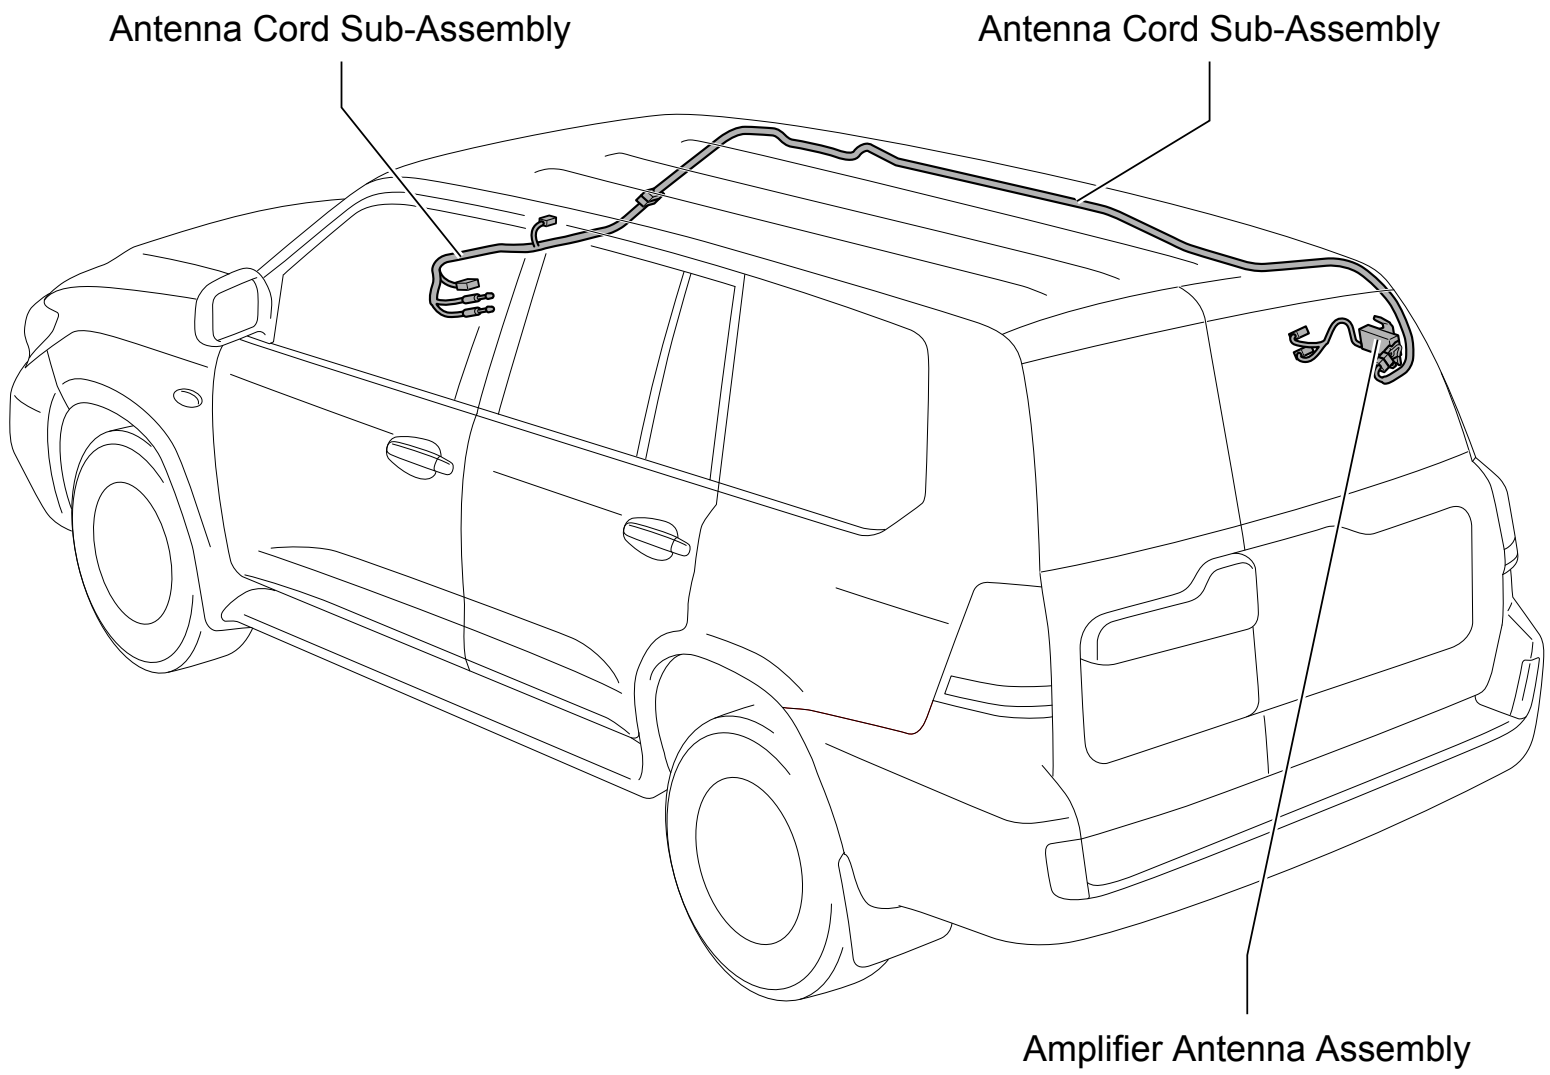

Antenna Cord Sub-Assembly
Antenna Cord Sub-Assembly
Amplifier Antenna Assembly

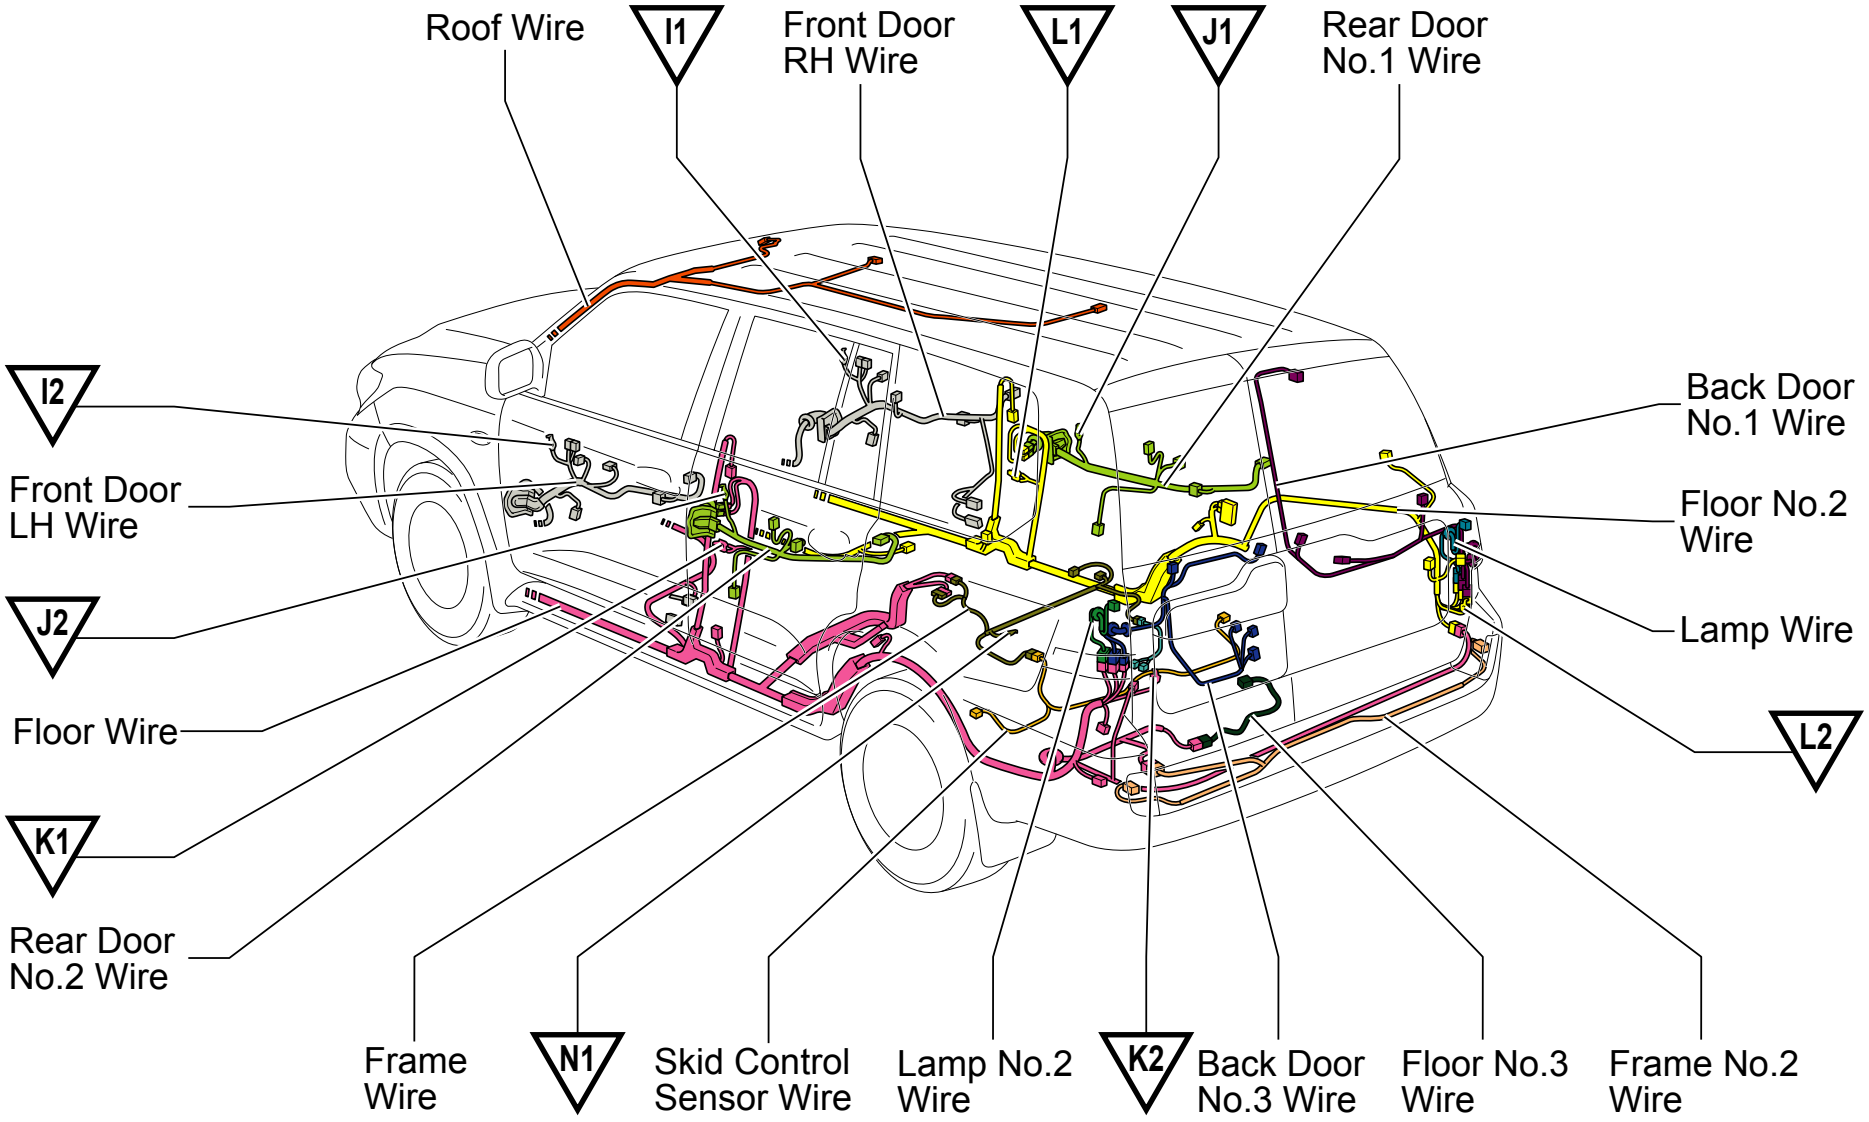
Roof Wire
I1
Front Door RH Wire
L1
J1
Rear Door No.1 Wire
I2
Front Door LH Wire
J2
Floor Wire
K1
Rear Door No.2 Wire
Back Door No.1 Wire
Floor No.2 Wire
Lamp Wire
L2
Frame Wire
N1
Skid Control Sensor Wire
Lamp No.2 Wire
K2
Back Door No.3 Wire
Floor No.3 Wire
Frame No.2 Wire

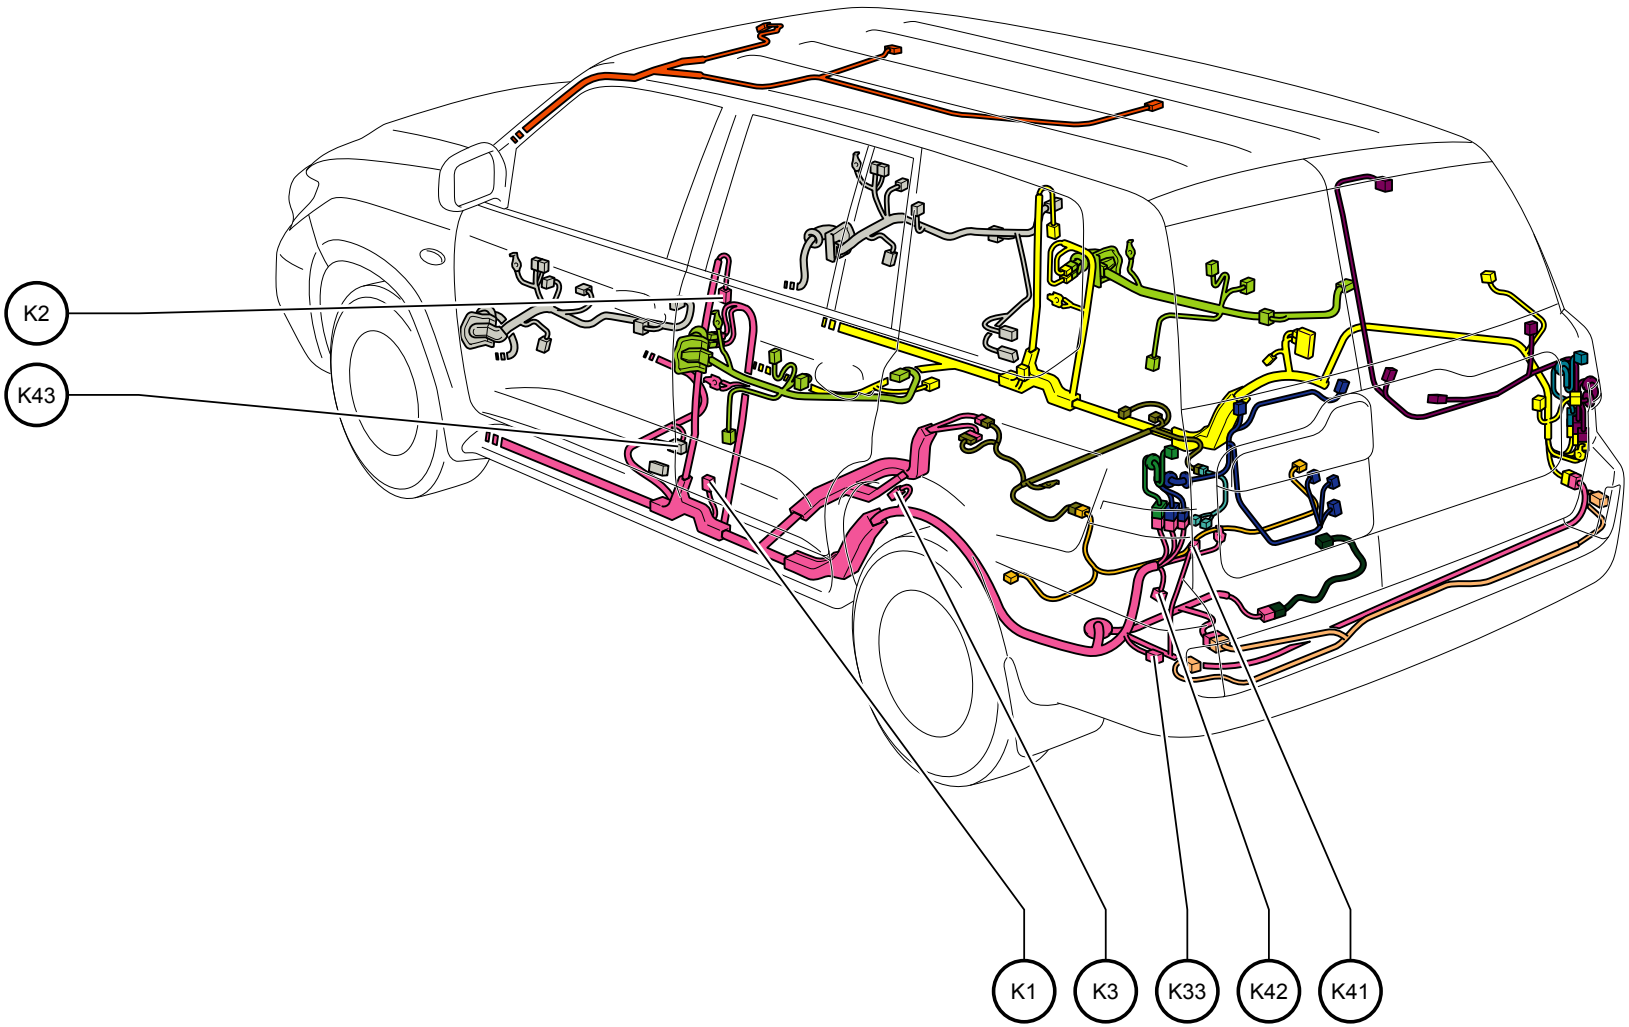
K2
K43
K1
K3
K33
K42
K41

K 1 Front Pretensioner LH
K 2 Front Door Courtesy Light Switch Assembly LH
K 3 Rear Door Courtesy Light Switch Assembly LH
K 33 Diode (Stop Light)
K 41 Rear Power Outlet Socket Assembly
K 42 Noise Filter (Rear Window Defogger LH)
K 43 Front Seat Inner Belt Assembly LH

K 1
Yellow

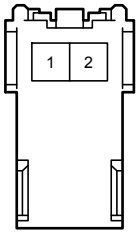

K 2
White




K 3
White




K 33
White




K 41
White




K 42
Black

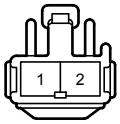

K 43
White

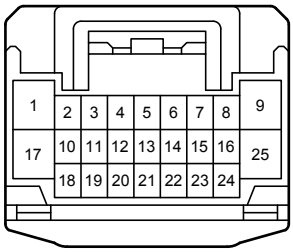

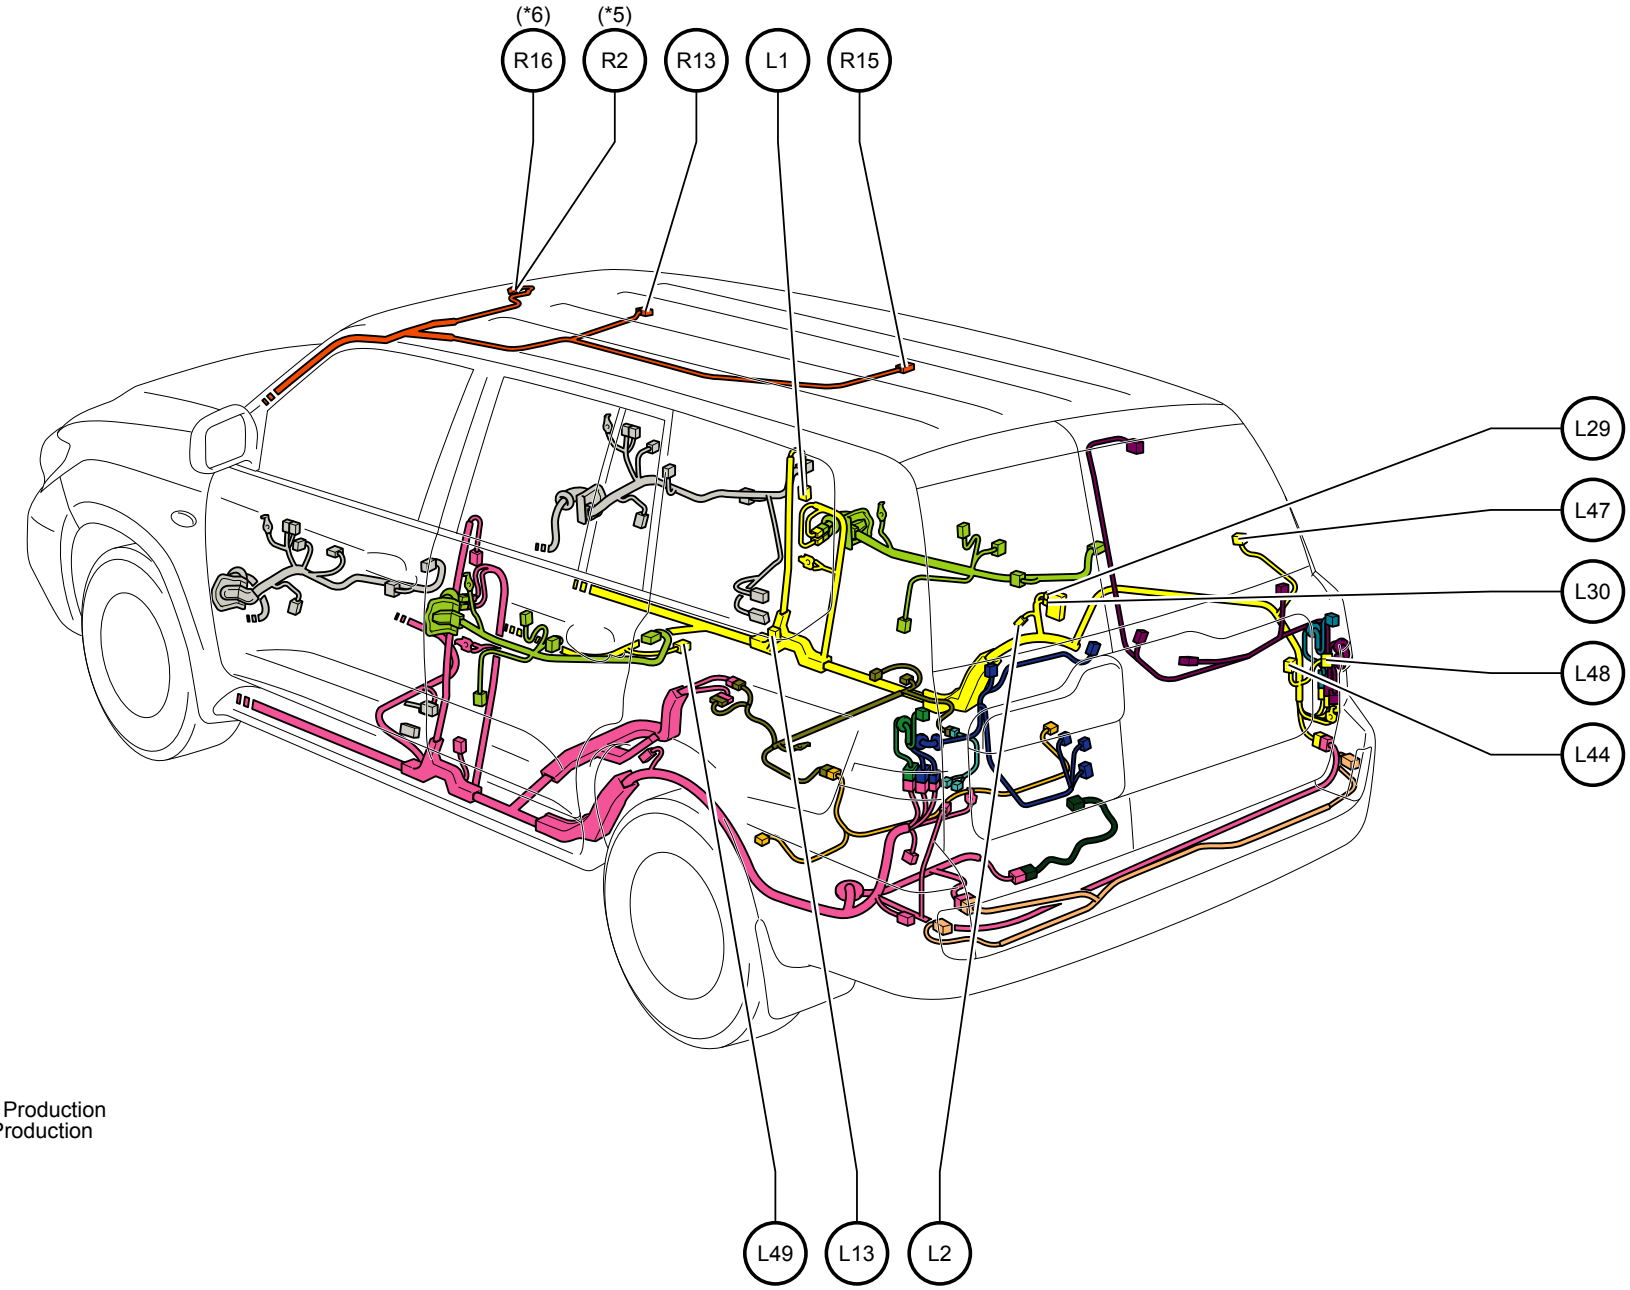

* 5:Before Jan. 2012 Production
* 6:From Jan. 2012 Production

L 1 Front Door Courtesy Light Switch Assembly RH
L 2 Rear Door Courtesy Light Switch Assembly RH
L 13 Front Pretensioner RH
L 29 Junction Connector
L 30 Junction Connector
L 44 Option Connector (Parking Assist-Sensor)
L 47 Door Control Receiver
L 48 Noise Filter (Rear Window Defogger and Stop)
L 49 Front Seat Inner Belt Assembly RH

R 2 Inner Rear View Mirror Assembly
R 13 No.1 Room Light Assembly
R 15 No.3 Room Light Assembly
R 16 Inner Rear View Mirror Assembly


L 1
White




L 2
White




L 13
Yellow

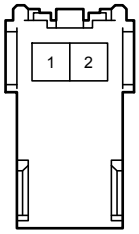


L 29
White




L 30
White




L 44
White

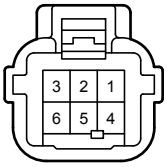


L 47
White

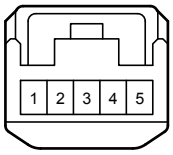


L 48
Black

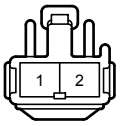


L 49
White

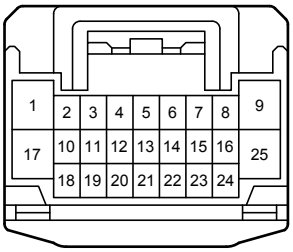


R 2
White

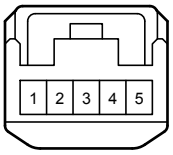


R 13
White




R 15
White



R 16
White

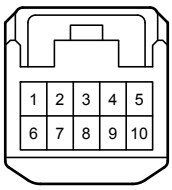

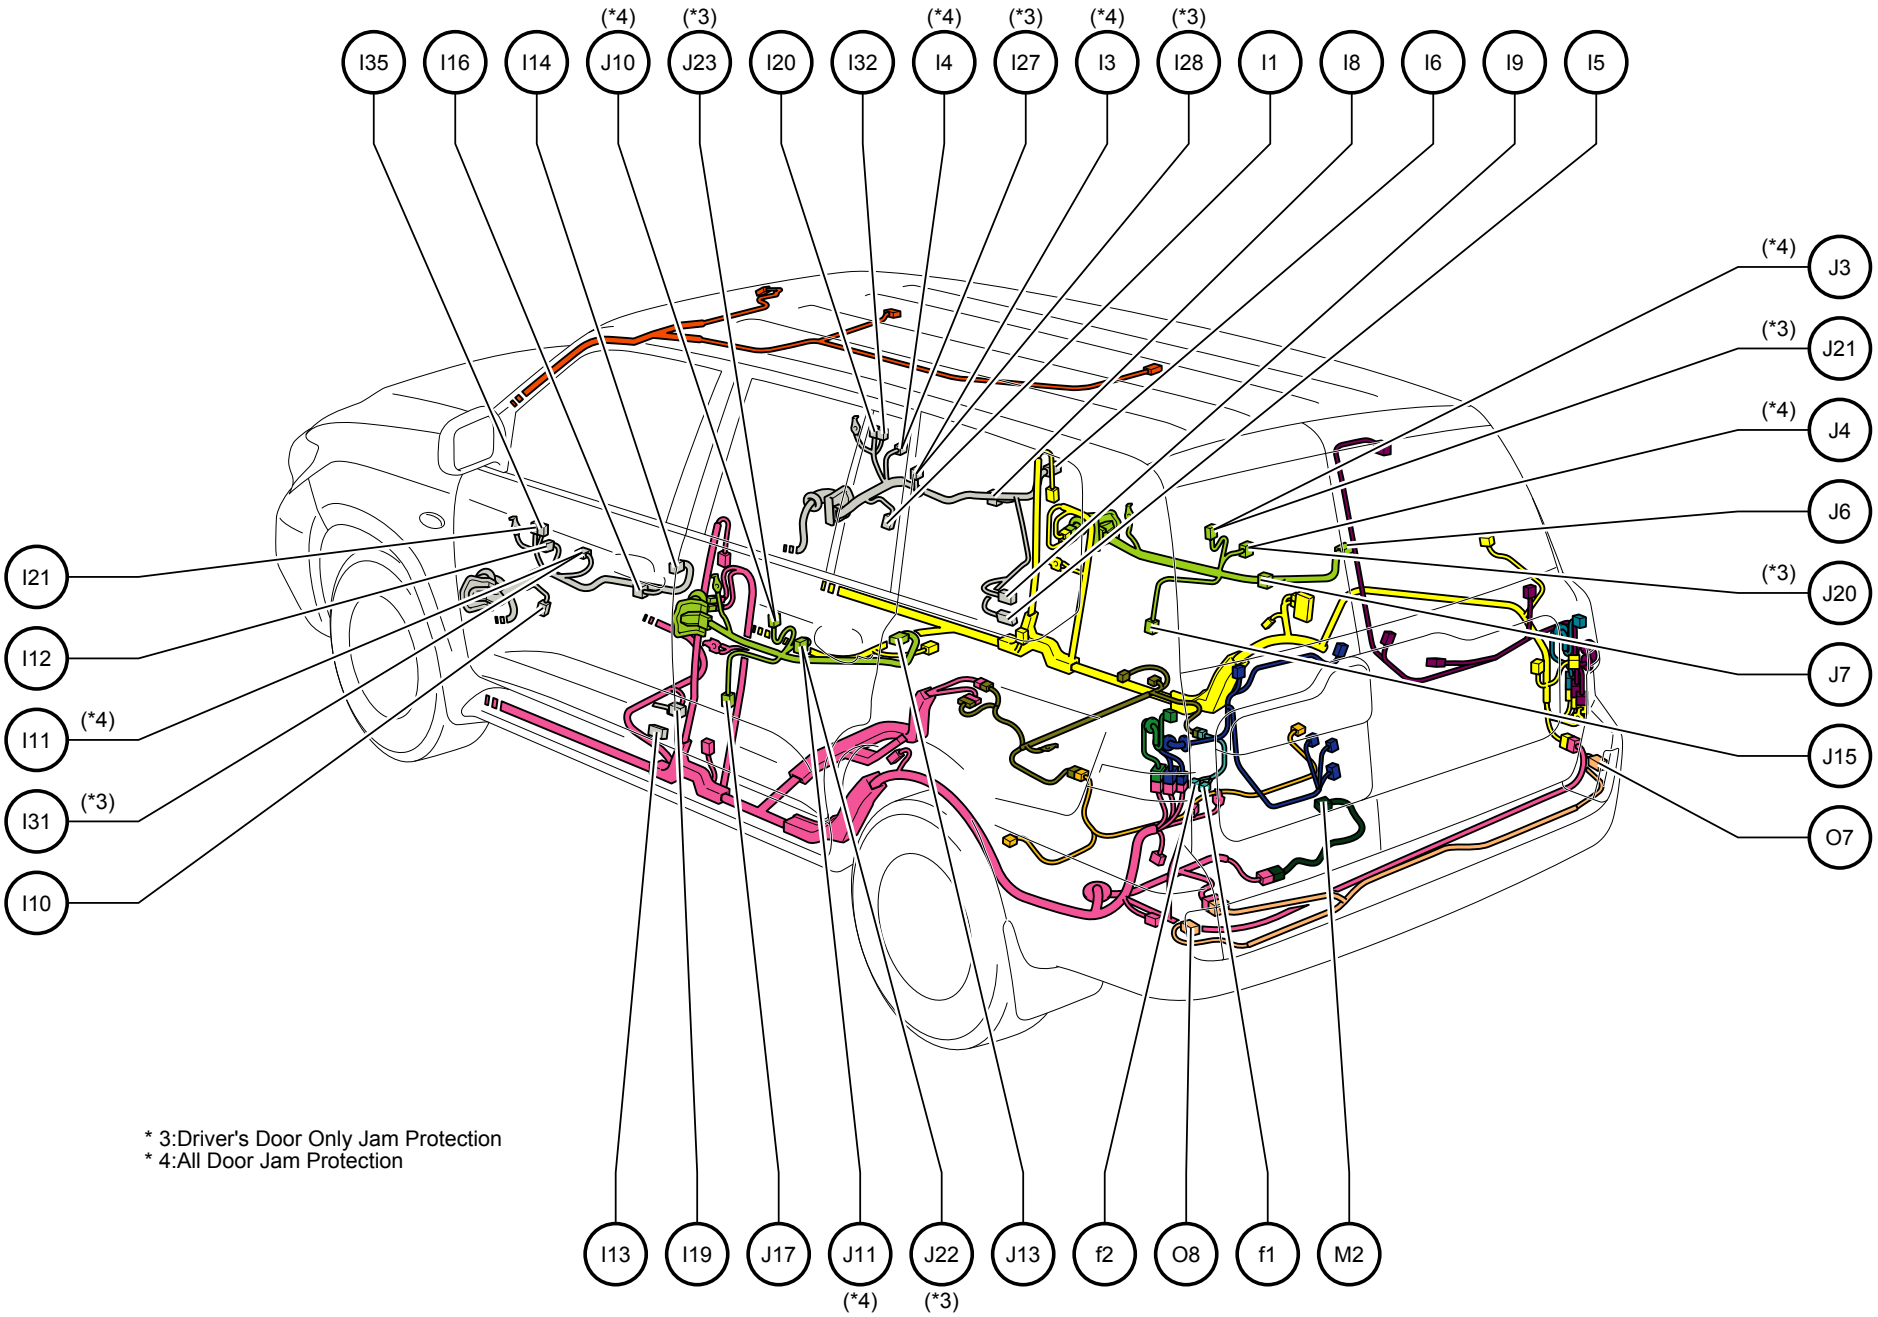

* 3:Driver's Door Only Jam Protection
* 4:All Door Jam Protection

I 1 Front No.1 Speaker Assembly RH
I 3 Front Power Window Regulator Switch Assembly RH
I 4 Front Power Window Regulator Motor Assembly RH
I 5 Front Door Courtesy Light Assembly RH
I 6 Front Door Lock Assembly RH
I 8 Diode (Front Door Courtesy Switch RH)
I 9 Front Side Airbag Sensor Assembly RH
I 10 Front No.1 Speaker Assembly LH
I 11 Multiplex Network Master Switch Assembly
I 12 Front Power Window Regulator Motor Assembly LH
I 13 Front Door Courtesy Light Assembly LH
I 14 Front Door Lock Assembly LH
I 16 Diode (Front Door Courtesy Switch LH)
I 19 Front Side Airbag Sensor Assembly LH
I 20 Outer Rear View Mirror Assembly RH
I 21 Outer Rear View Mirror Assembly LH
I 27 Front Power Window Regulator Motor Assembly RH
I 28 Front Power Window Regulator Switch Assembly RH
I 31 Multiplex Network Master Switch Assembly
I 32 Outer Rear View Mirror Assembly RH
I 35 Outer Rear View Mirror Assembly LH

J 3 Rear Power Window Regulator Switch Assembly RH
J 4 Rear Power Window Regulator Motor Assembly RH
J 6 Rear Door Lock Assembly RH
J 7 Diode (Rear Door Courtesy Switch RH)
J 10 Rear Power Window Regulator Switch Assembly LH
J 11 Rear Power Window Regulator Motor Assembly LH
J 13 Rear Door Lock Assembly LH
J 15 Rear Speaker Set RH
J 17 Rear Speaker Set LH
J 20 Rear Power Window Regulator Motor Assembly RH
J 21 Rear Power Window Regulator Switch Assembly RH
J 22 Rear Power Window Regulator Motor Assembly LH
J 23 Rear Power Window Regulator Switch Assembly LH

M 2 Fuel Sender Gage Assembly (Sub)


O 7 Back-Up Light Assembly RH
O 8 Back-Up Light Assembly LH

f 1 Differential Lock Shift Actuator
f 2 Differential Lock Switch


I 1
White



I 3
White

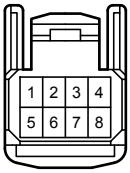


I 4
White

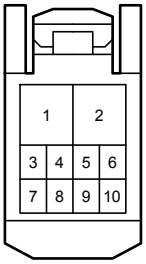

I 5
White




I 6
White

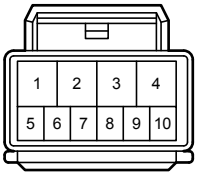

I 8
White




I 9
Yellow

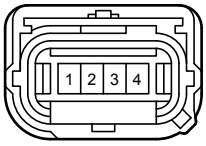


I 10
White



I 11
White

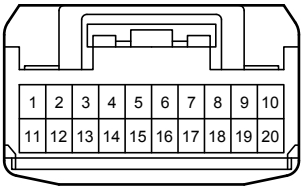


I 12
White

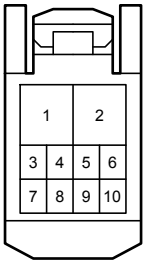

I 13
White




I 14
White

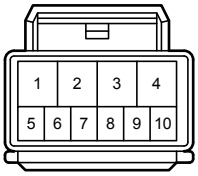


I 16
White




I 19
Yellow

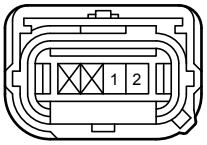


I 20
White

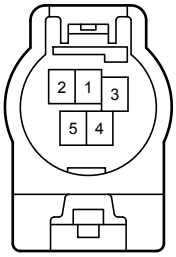


I 21
White

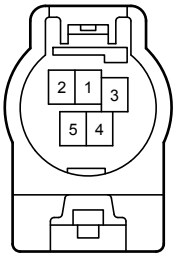


I 27
Black

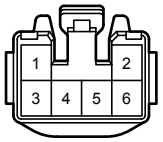


I 28
White

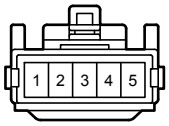


I 31
White

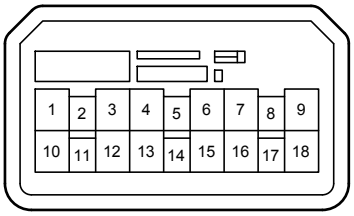


I 32
White

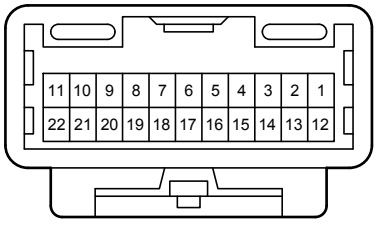


I 35
White

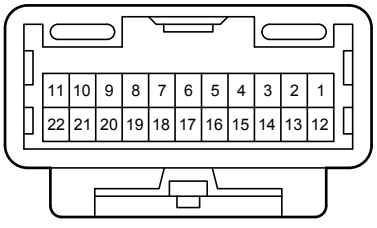


J 3
White

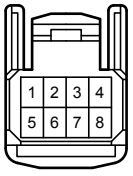

J 4
White

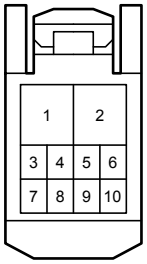


J 6
White

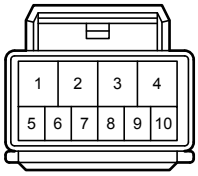


J 7
White




J 10
White

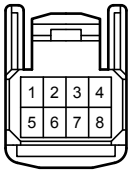

J 11
White

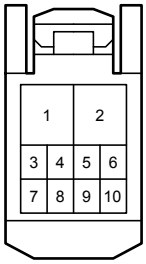

J 13
White

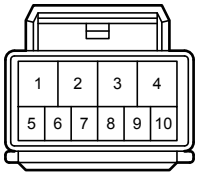


J 15
White




J 17
White




J 20
Black

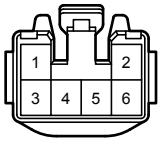


J 21
White

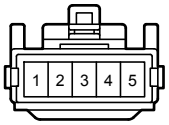

J 22
Black

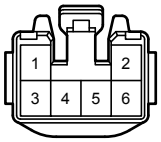

J 23
White

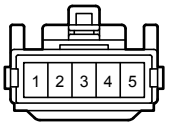

M 2
Black



O 7
Gray




O 8
Gray




f 1
Gray



f 2
Blue

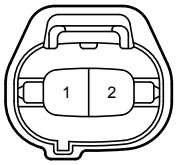

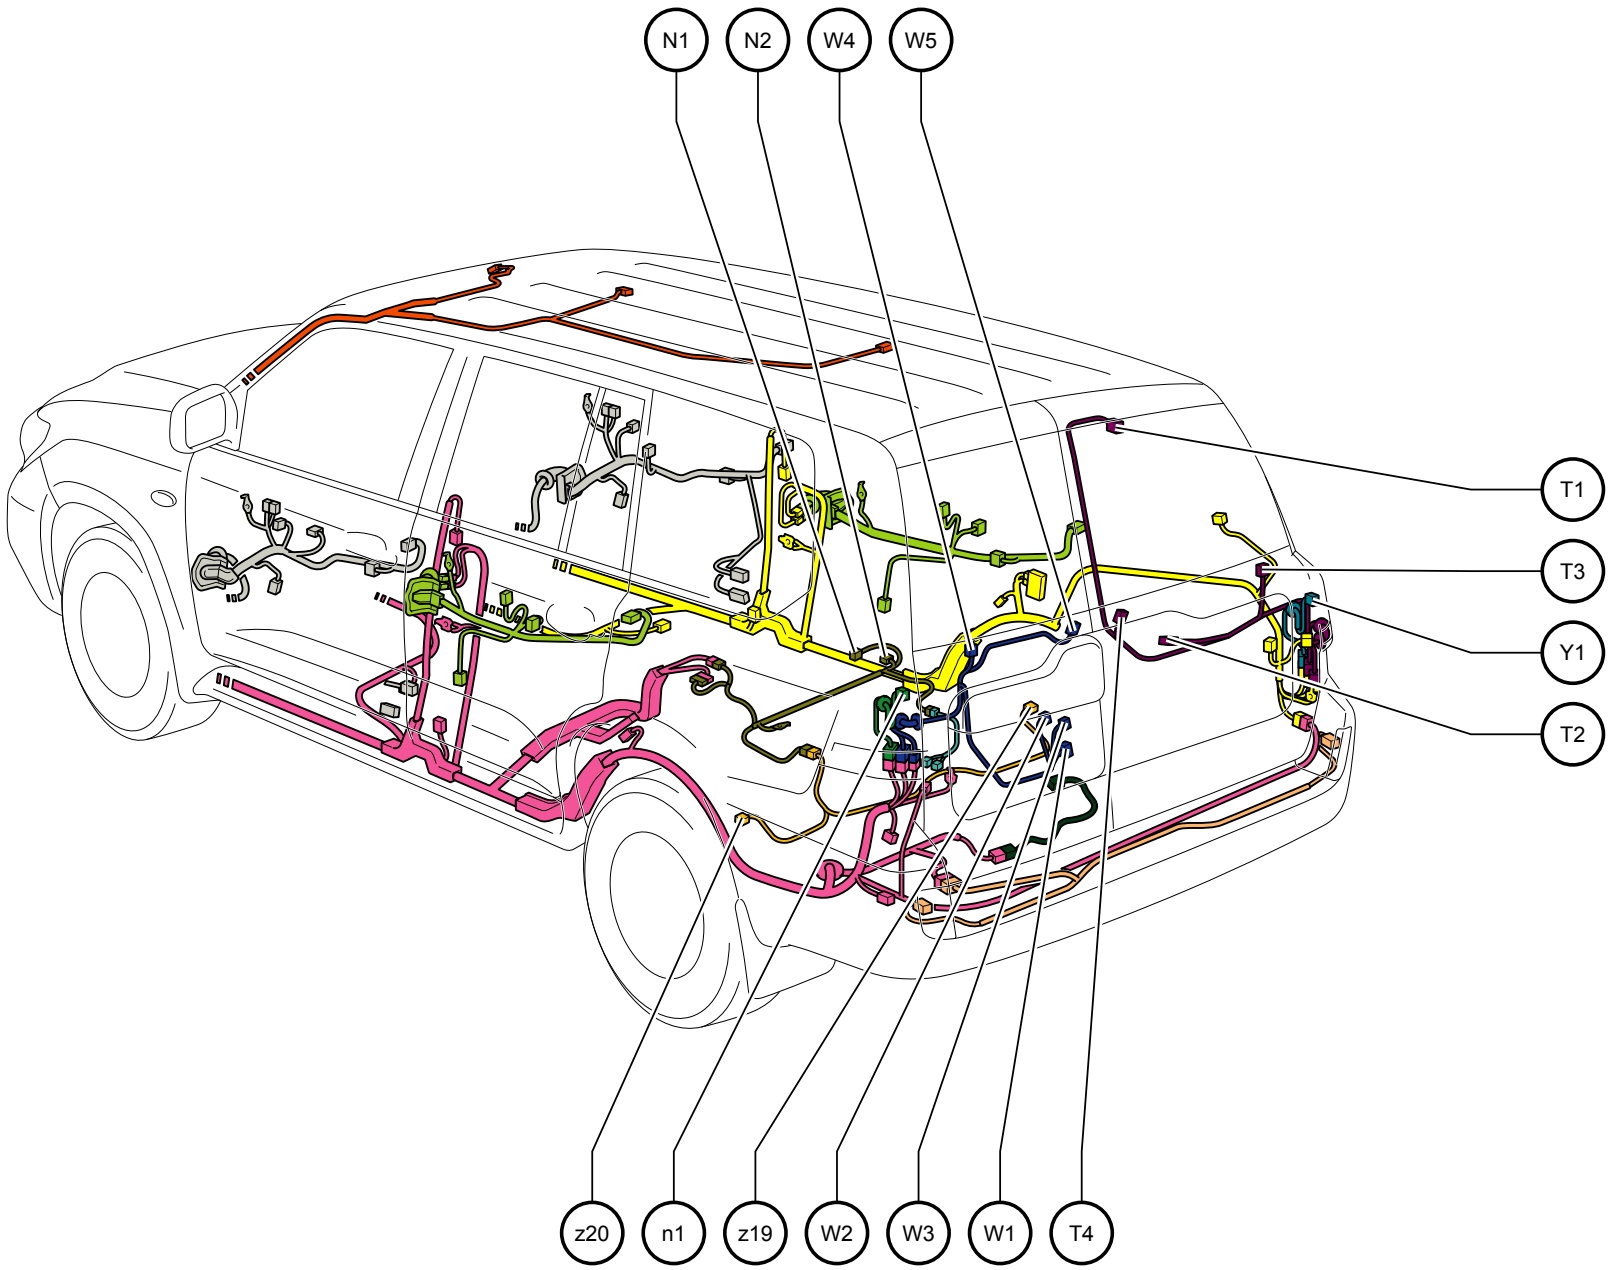
N1
N2
W4
W5
T1
T3
Y1
T2
z20
n1
z19
W2
W3
W1
T4

N 1 Fuel Sender Gage Assembly (Main)
N 2 Fuel Pump Control ECU Assembly

T 1 Center Stop Light Assembly
T 2 Rear Wiper Motor Assembly
T 3 Rear Window Defogger RH (Back Door Glass)
T 4 Rear Window Defogger RH (Back Door Glass)

W 1 Back Door Lock Assembly
W 2 License Plate Light Assembly
W 3 Back Door Courtesy Light Switch Assembly
W 4 Rear Window Defogger LH (Back Door Glass)
W 5 Rear Window Defogger LH (Back Door Glass)

Y 1 Rear Combination Light Assembly RH


n 1 Rear Combination Light Assembly LH

z 19 Rear Speed Sensor RH
z 20 Rear Speed Sensor LH


N 1
White




N 2
Black

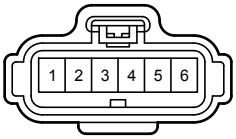

T 1
Gray



T 2
Black

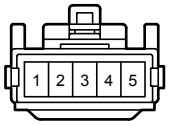

T 3
White




T 4
White




W 1
White



W 2
White



W 3
Blue

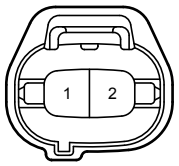

W 4
White




W 5
White



Y 1
Gray



n 1
Gray

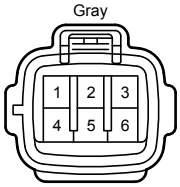


z 19
Black




z 20
Black

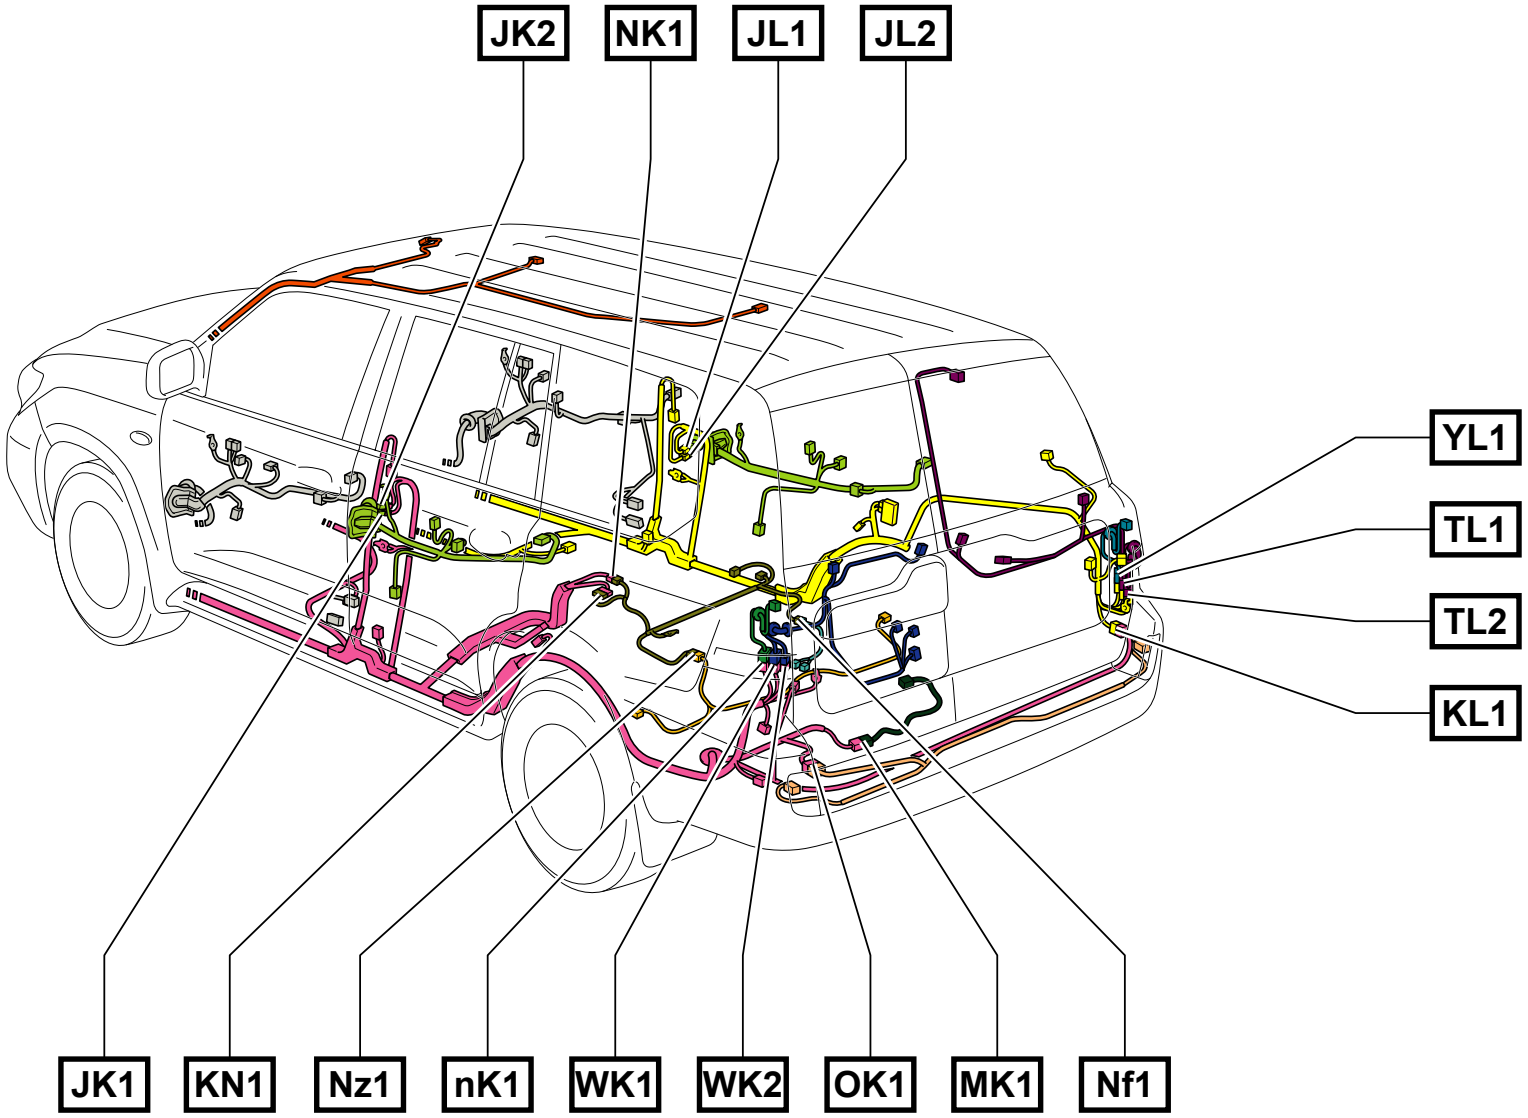



JK2
NK1
JL1
JL2
YL1
TL1
TL2
KL1
JK1
KN1
Nz1
nK1
WK1
WK2
OK1
MK1
Nf1


JK1
White

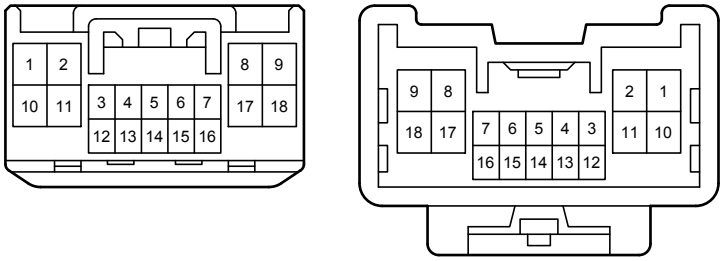


JK2
White

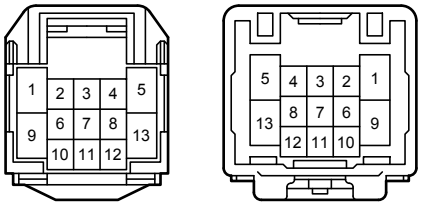


JL1
White

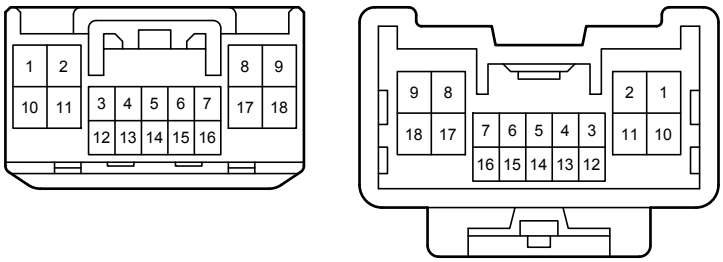


JL2
White

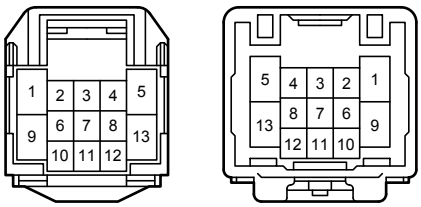


KL1
White

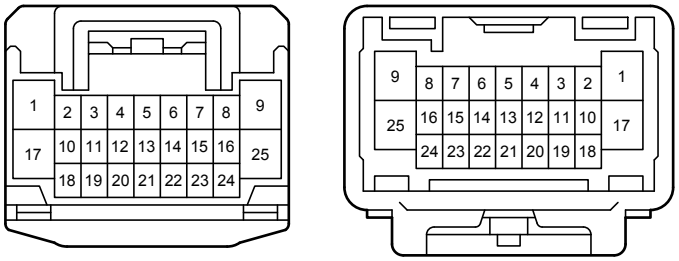


KN1
White

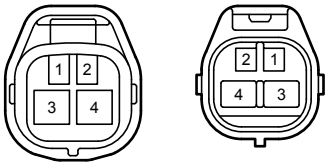



MK1
White

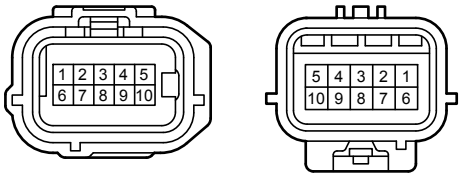


NK1
White

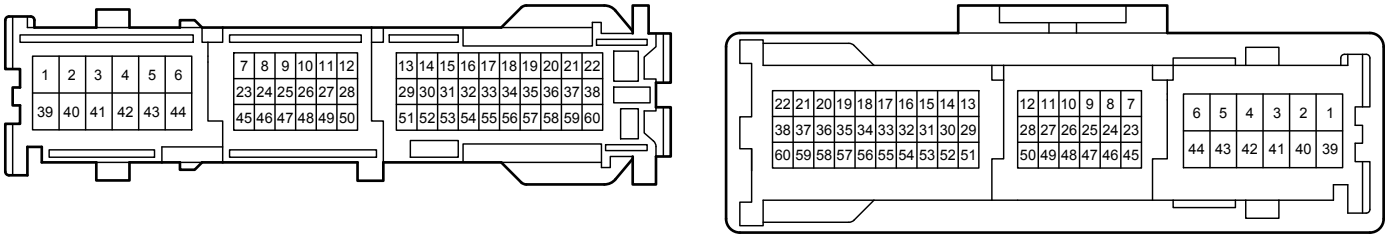

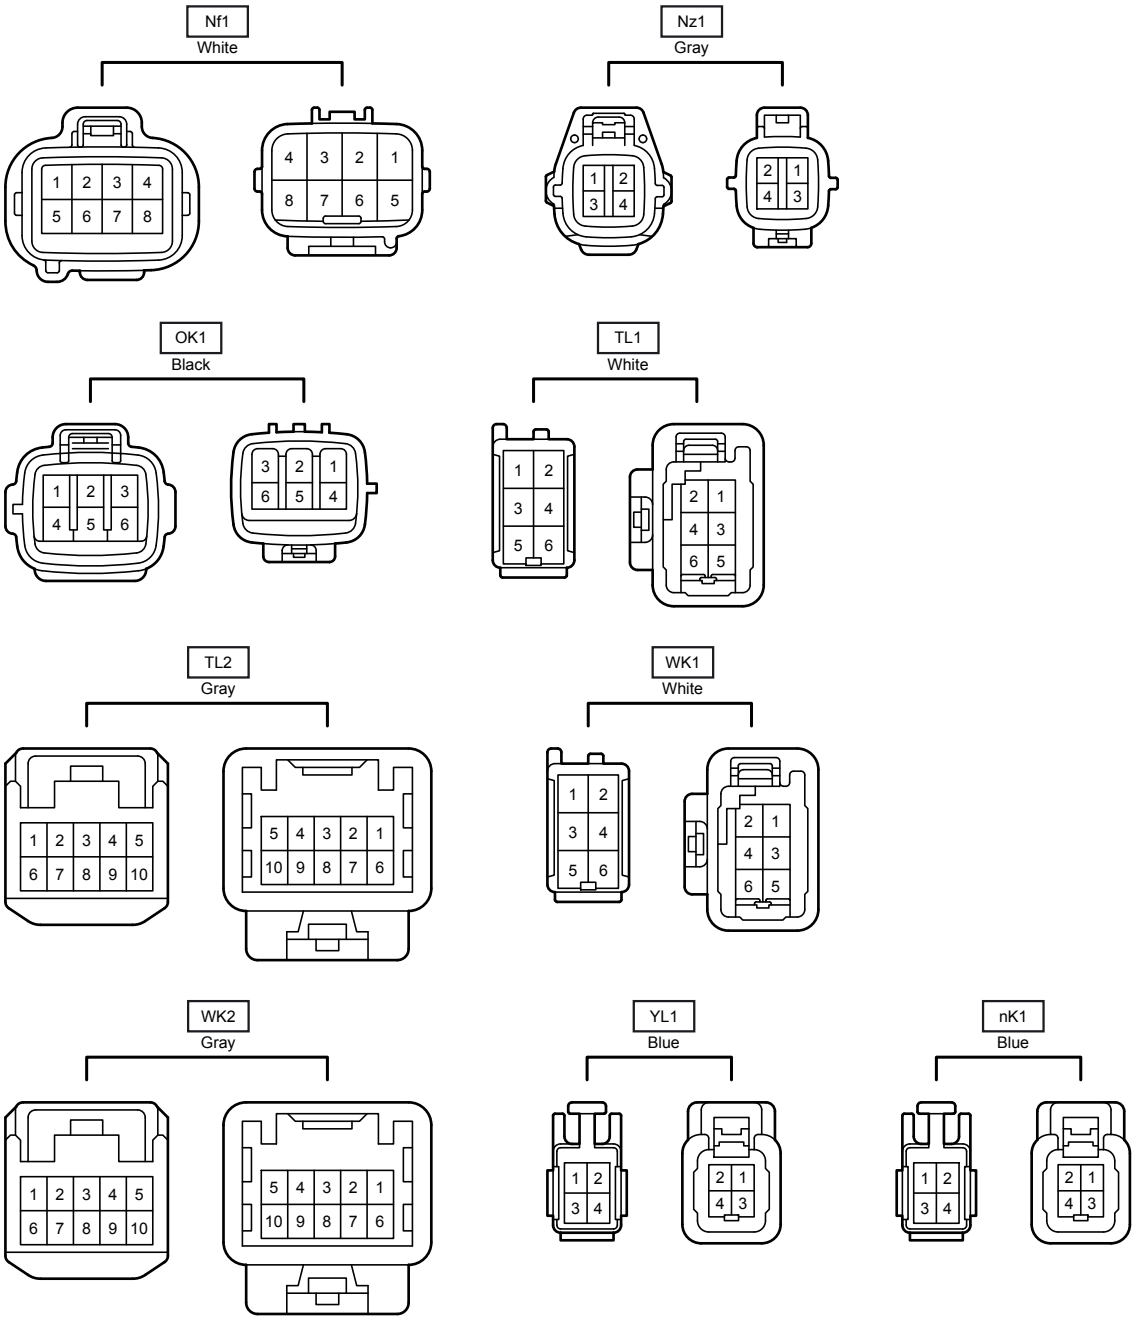

Nf1
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Nz1
Gray
1 2
3 4
2 1
4 3
OK1
Black
1 2 3
4 5 6
3 2 1
6 5 4
TL1
White
1 2
3 4
5 6
2 1
4 3
6 5
TL2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
WK1
White
1 2
3 4
5 6
2 1
4 3
6 5
WK2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
YL1
Blue
1 2
3 4
2 1
4 3
nK1
Blue
1 2
3 4
2 1
4 3

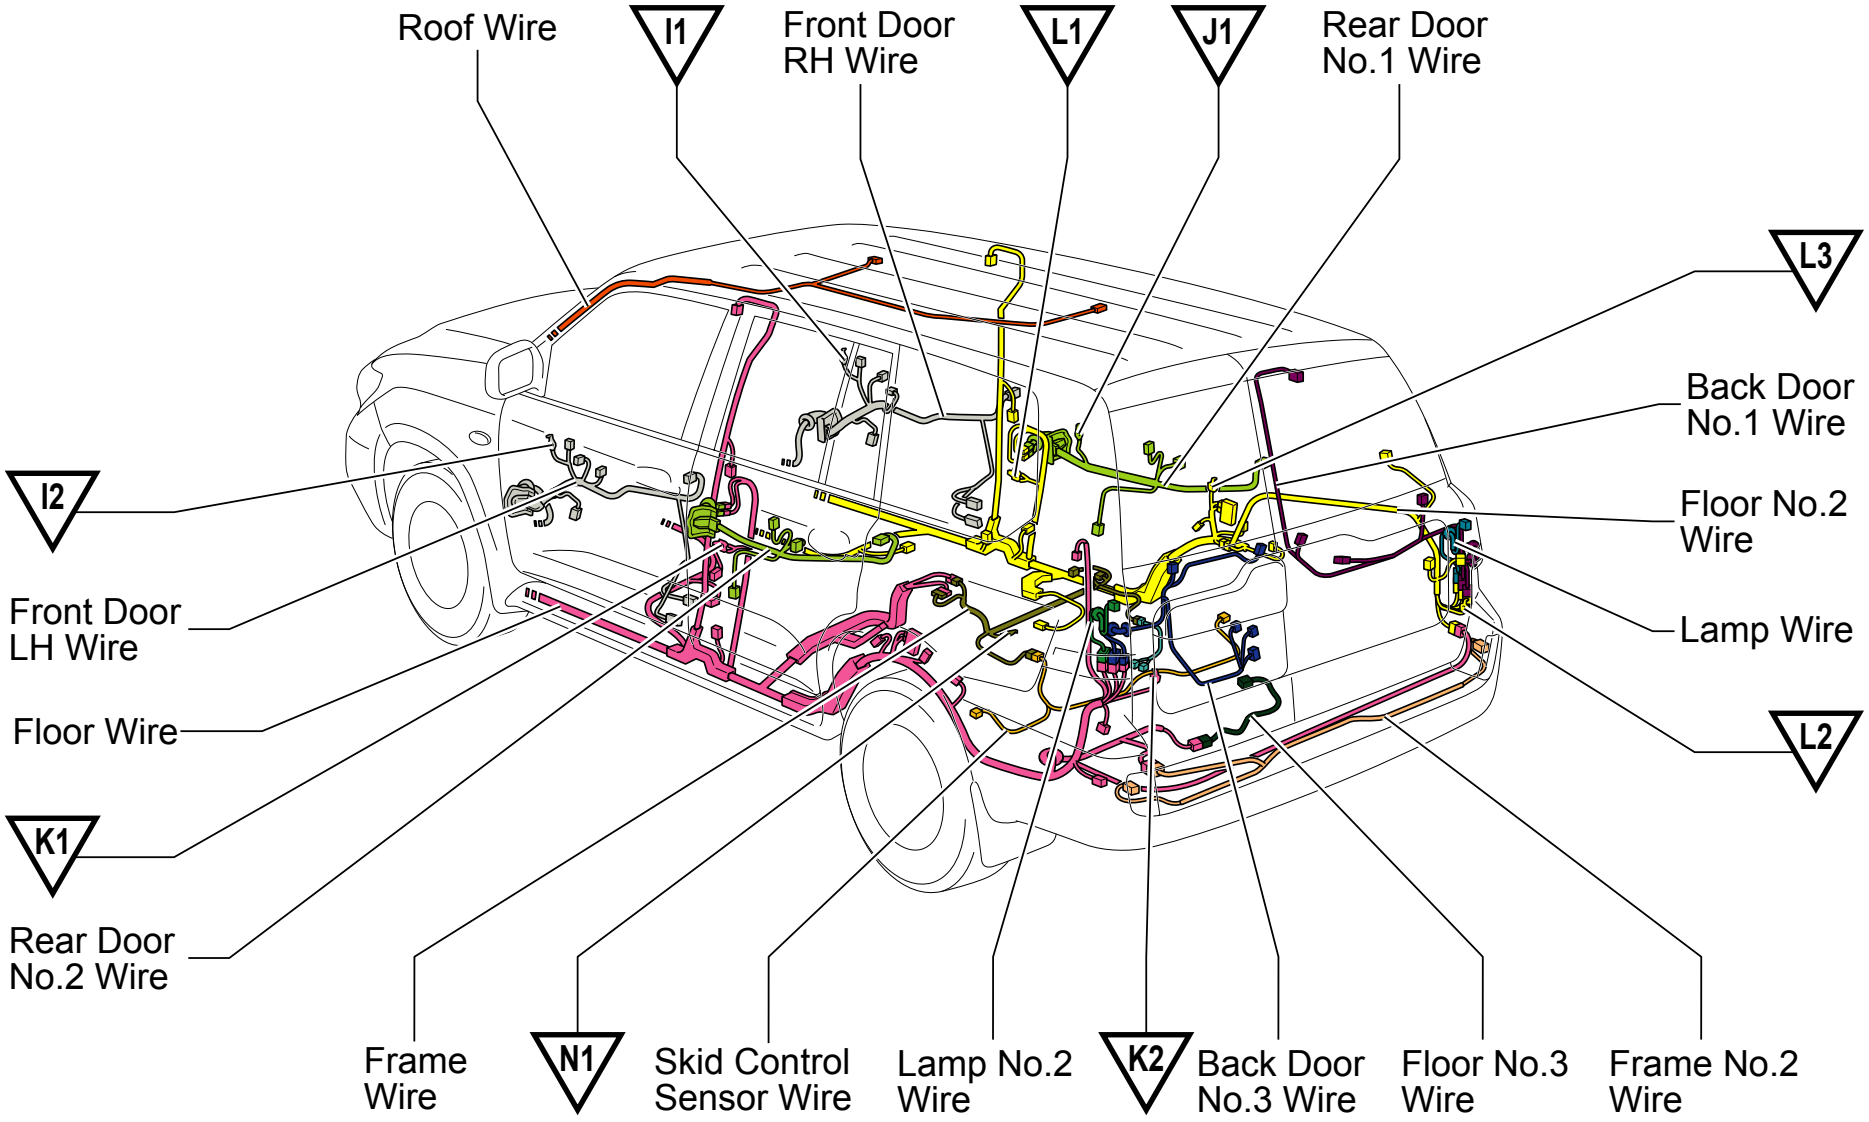
Roof Wire
I1
Front Door RH Wire
L1
J1
Rear Door No.1 Wire
L3
Back Door No.1 Wire
Floor No.2 Wire
Lamp Wire
L2
I2
Front Door LH Wire
Floor Wire
K1
Rear Door No.2 Wire
Frame Wire
N1
Skid Control Sensor Wire
Lamp No.2 Wire
K2
Back Door No.3 Wire
Floor No.3 Wire
Frame No.2 Wire

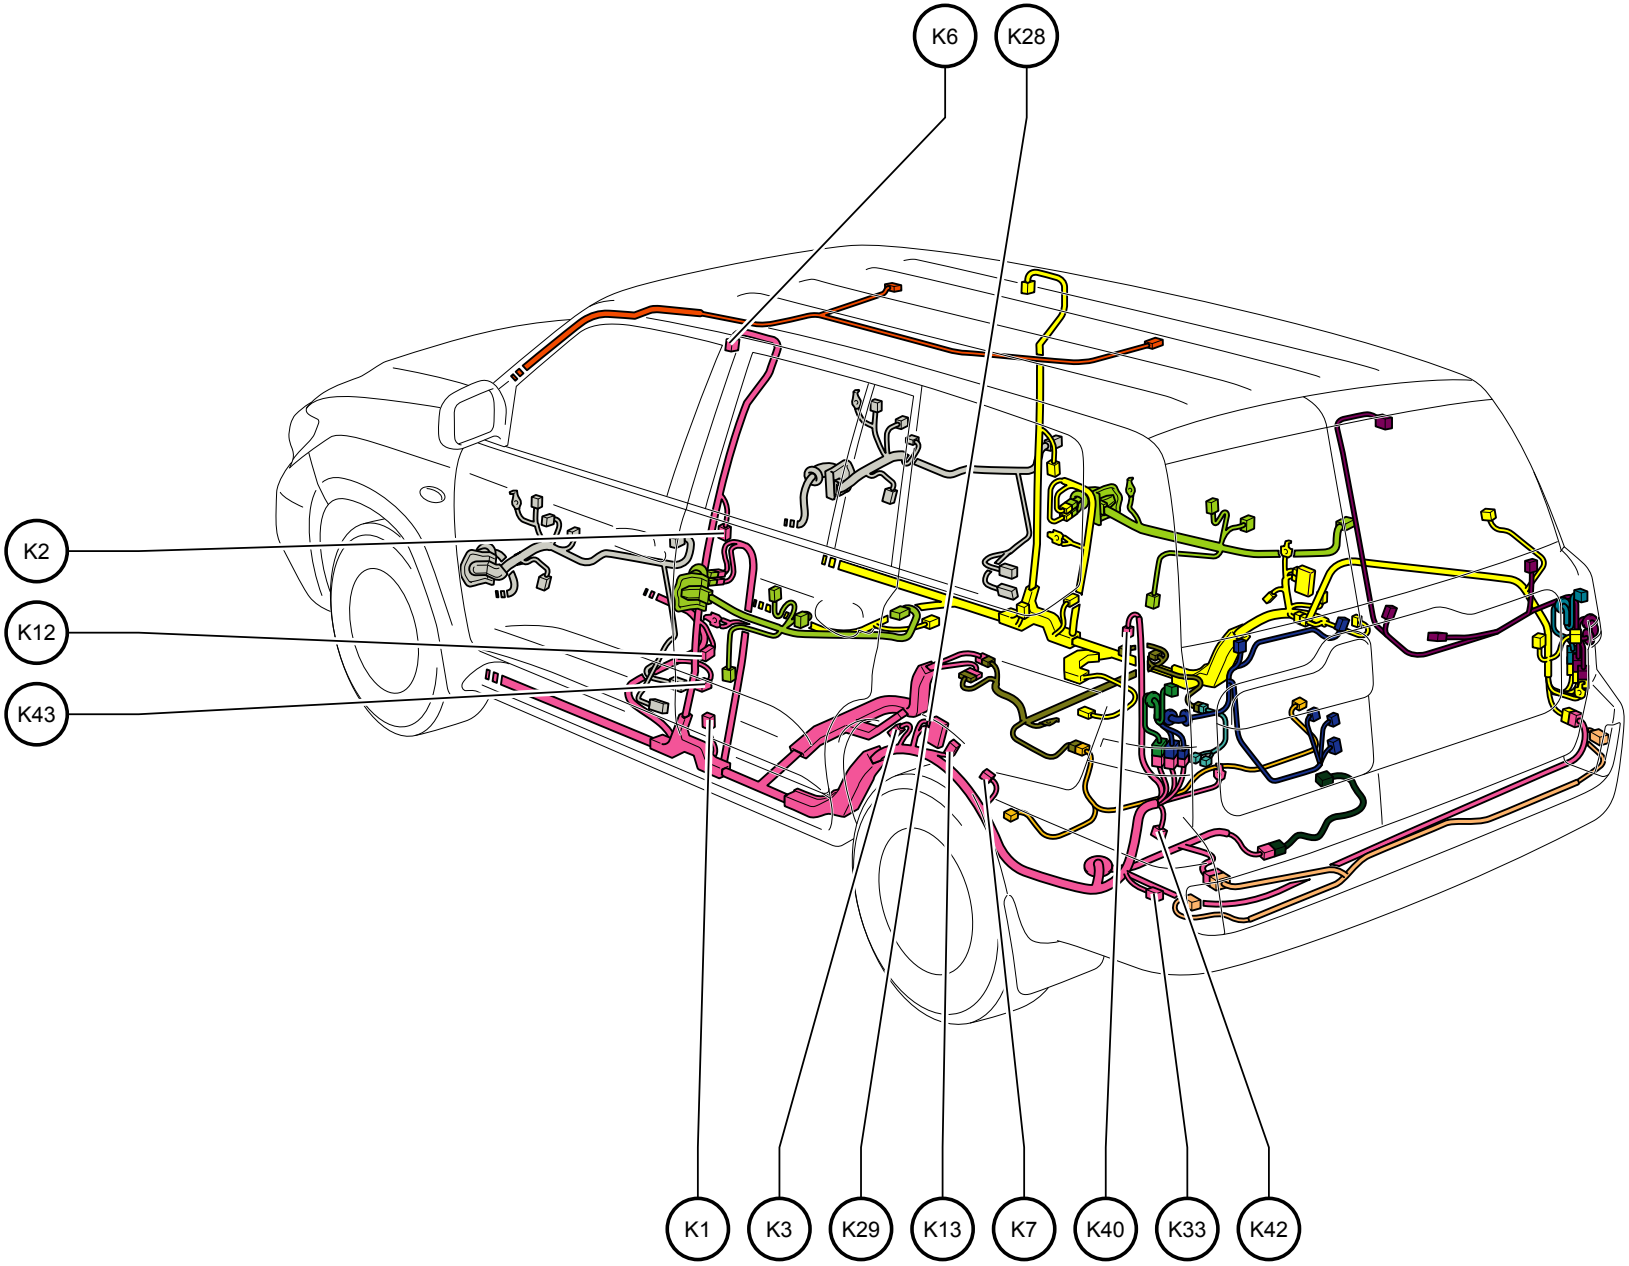
K6
K28
K2
K12
K43
K1
K3
K29
K13
K7
K40
K33
K42

K 1 Front Pretensioner LH
K 2 Front Door Courtesy Light Switch Assembly LH
K 3 Rear Door Courtesy Light Switch Assembly LH
K 6 Curtain Shield Airbag Assembly Circuit LH
K 7 Rear Side Airbag Sensor Assembly LH
K 12 Front Tension Reducer LH
K 13 Rear Pretensioner LH
K 28 Junction Connector
K 29 Junction Connector
K 33 Diode (Stop Light)
K 40 Towing Converter
K 42 Noise Filter (Rear Window Defogger LH)
K 43 Front Seat Inner Belt Assembly LH

K 1
Yellow

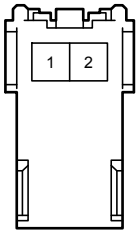


K 2
White




K 3
White



K 6
Black

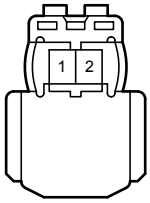


K 7
Yellow

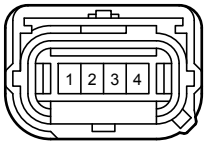

K 12
White




K 13
Yellow

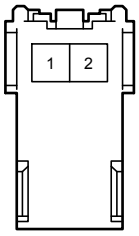

K 28
White




K 29
White




K 33
White




K 40
White




K 42
Black

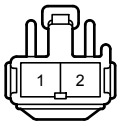

K 43
White

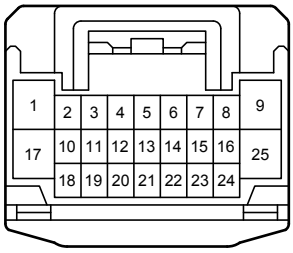

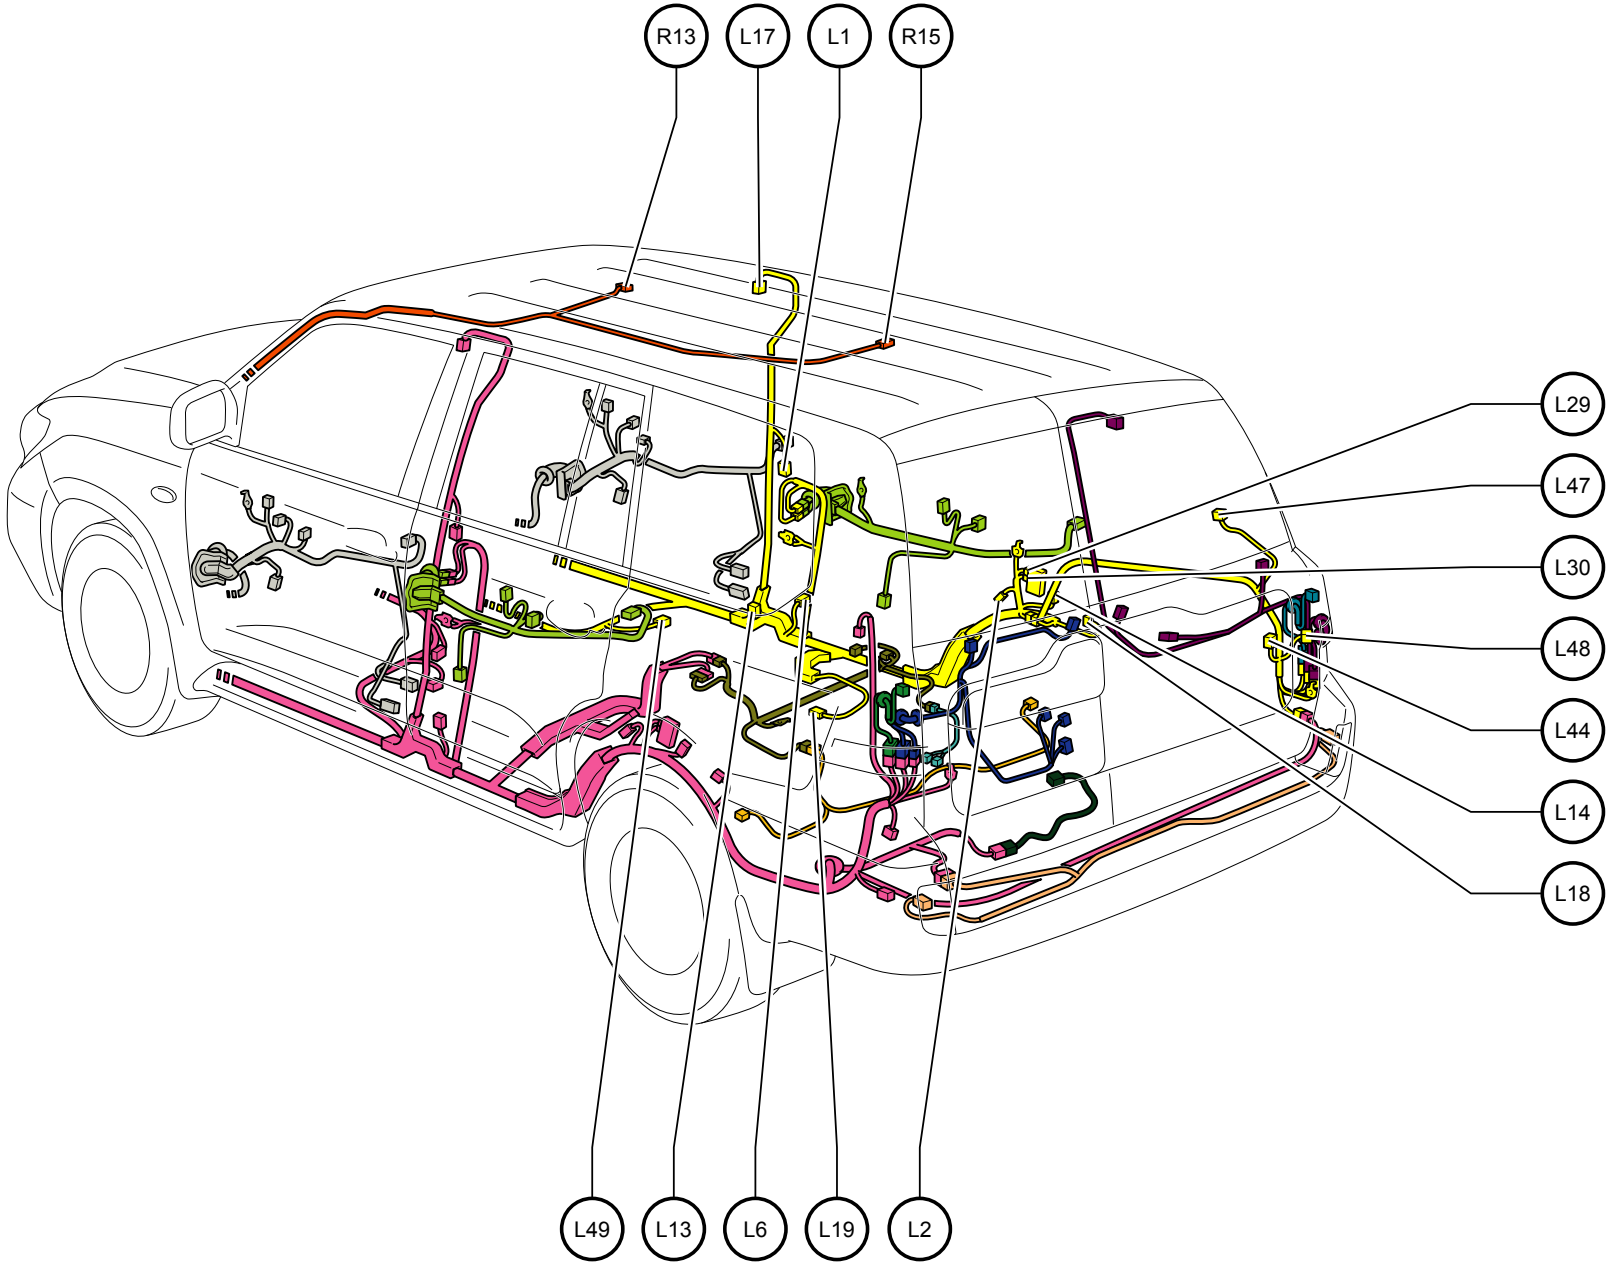
R13
L17
L1
R15
L29
L47
L30
L48
L44
L14
L18
L49
L13
L6
L19
L2

L 1 Front Door Courtesy Light Switch Assembly RH
L 2 Rear Door Courtesy Light Switch Assembly RH
L 6 Front Tension Reducer RH
L 13 Front Pretensioner RH
L 14 Rear Pretensioner RH
L 17 Curtain Shield Airbag Assembly Circuit RH
L 18 Rear Side Airbag Sensor Assembly RH
L 19 Rear Floor Side Airbag Sensor
L 29 Junction Connector
L 30 Junction Connector
L 44 Option Connector (Parking Assist-Sensor)
L 47 Door Control Receiver
L 48 Noise Filter (Rear Window Defogger and Stop)
L 49 Front Seat Inner Belt Assembly RH

R 13 No.1 Room Light Assembly
R 15 No.3 Room Light Assembly


L 1
White




L 2
White




L 6
White




L 13
Yellow

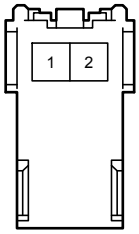


L 14
Yellow

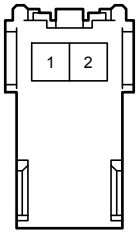


L 17
Black

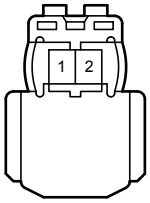


L 18
Yellow

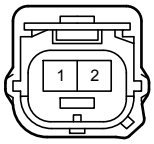


L 19
Yellow

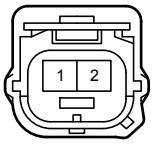


L 29
White




L 30
White




L 44
White

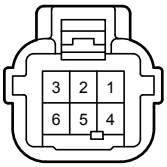


L 47
White

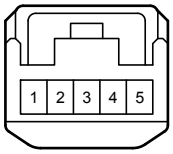


L 48
Black

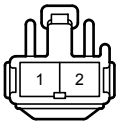


L 49
White

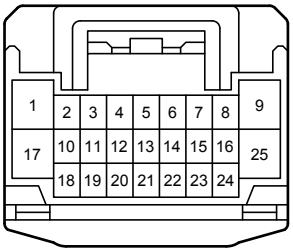


R 13
White



R 15
White



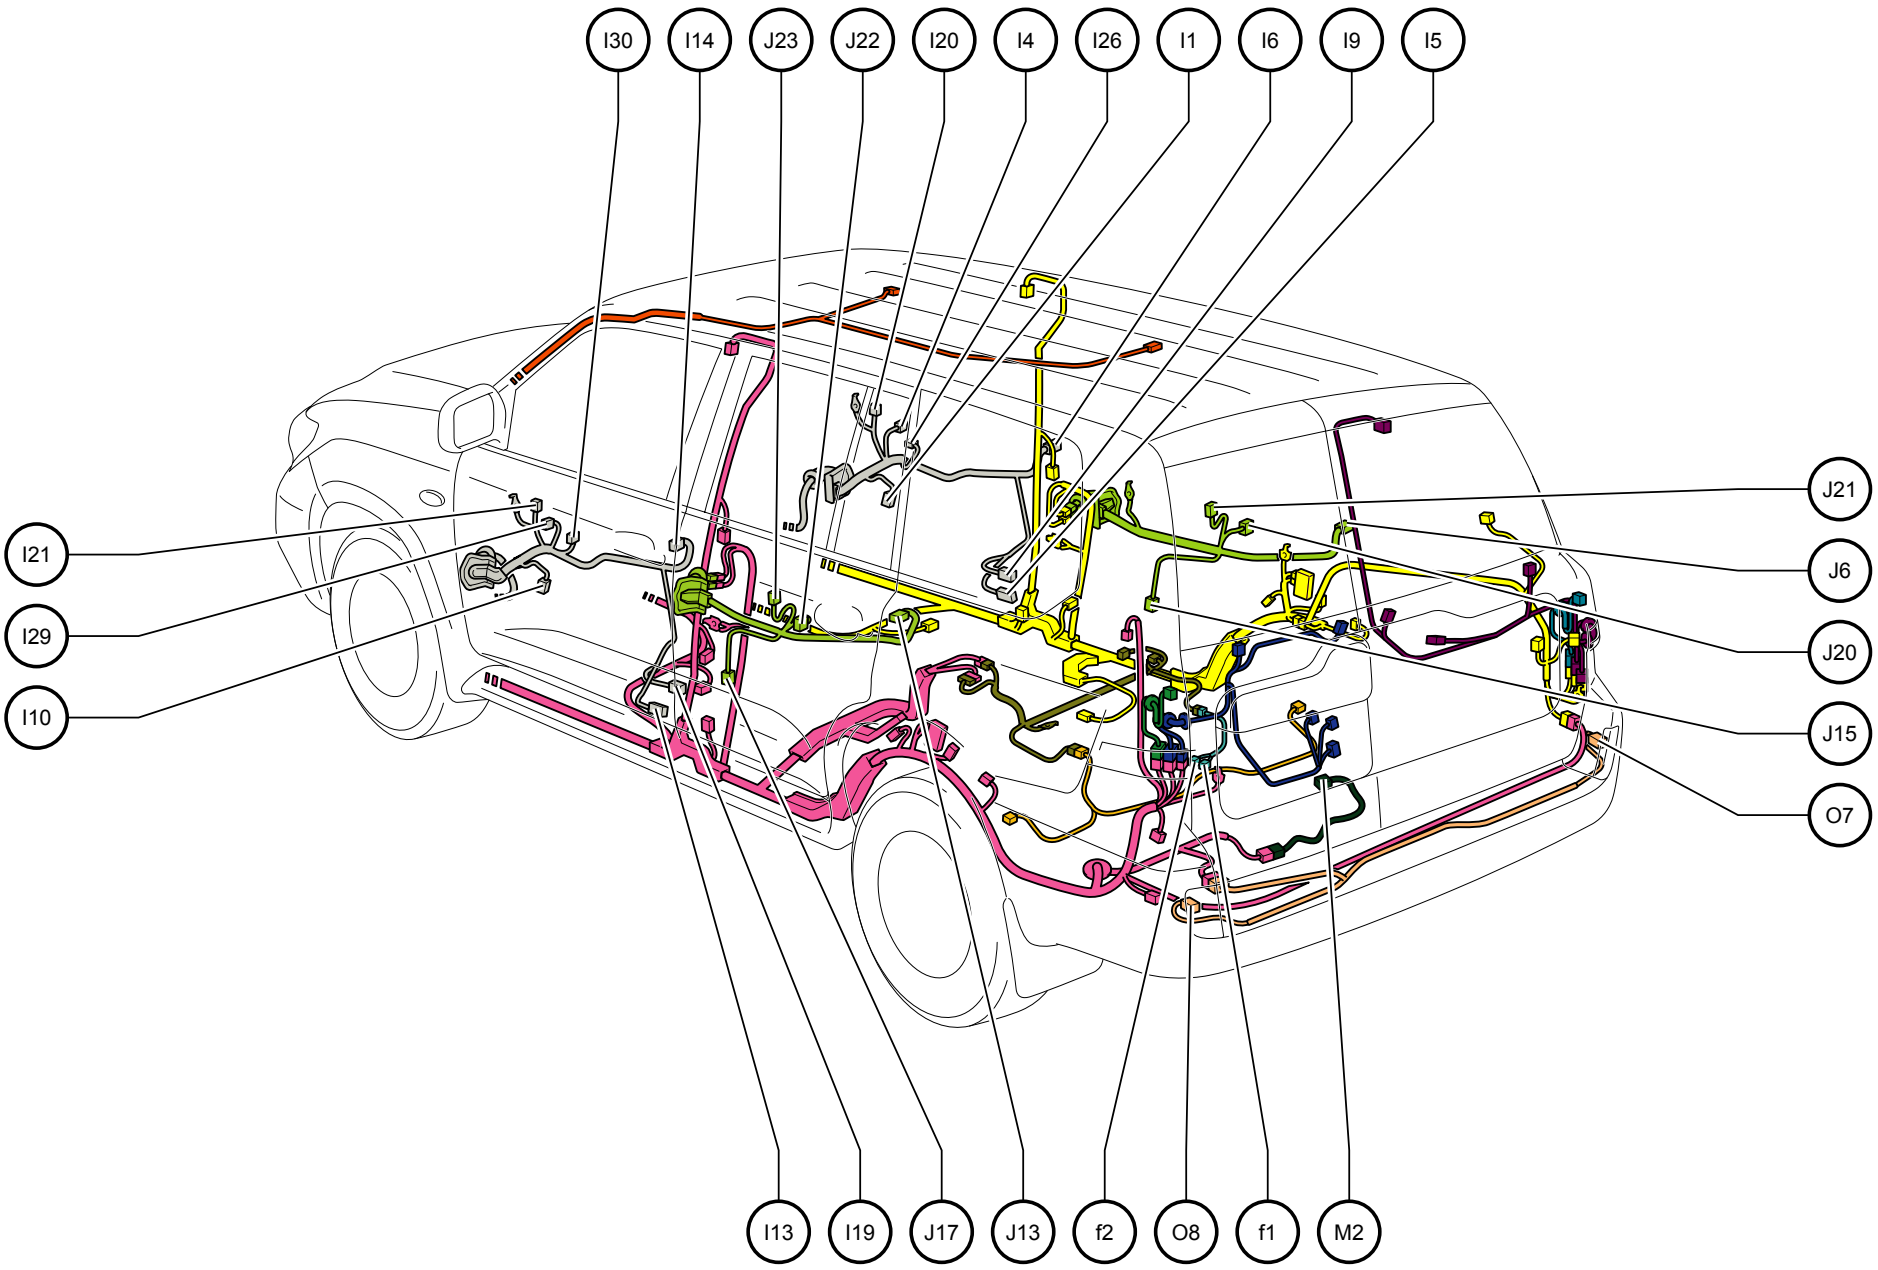

I30
I14
J23
J22
I20
I4
I26
I1
I6
I9
I5
I21
I29
I10
J21
J6
J20
J15
O7
I13
I19
J17
J13
f2
O8
f1
M2

I	1	Front No.1 Speaker Assembly RH
I	4	Front Power Window Regulator Motor Assembly RH
I	5	Front Door Courtesy Light Assembly RH
I	6	Front Door Lock Assembly RH
I	9	Front Side Airbag Sensor Assembly RH
I	10	Front No.1 Speaker Assembly LH
I	13	Front Door Courtesy Light Assembly LH
I	14	Front Door Lock Assembly LH
I	19	Front Side Airbag Sensor Assembly LH
I	20	Outer Rear View Mirror Assembly RH
I	21	Outer Rear View Mirror Assembly LH
I	26	Multiplex Network Master Switch Assembly
I	29	Front Power Window Regulator Motor Assembly LH
I	30	Front Power Window Regulator Switch Assembly LH
J	6	Rear Door Lock Assembly RH
J	13	Rear Door Lock Assembly LH
J	15	Rear Speaker Set RH
J	17	Rear Speaker Set LH
J	20	Rear Power Window Regulator Motor Assembly RH
J	21	Rear Power Window Regulator Switch Assembly RH
J	22	Rear Power Window Regulator Motor Assembly LH
J	23	Rear Power Window Regulator Switch Assembly LH
M	2	Fuel Sender Gage Assembly (Sub)
O	7	Back-Up Light Assembly RH
O	8	Back-Up Light Assembly LH
f	1	Differential Lock Shift Actuator
f	2	Differential Lock Switch

I 1
White




I 4
White

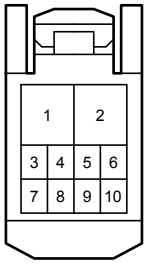


I 5
White



I 6
White

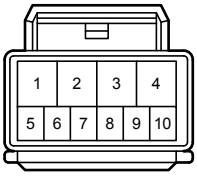

I 9
Yellow

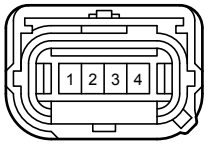


I 10
White




I 13
White




I 14
White

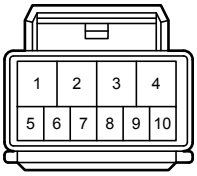


I 19
Yellow

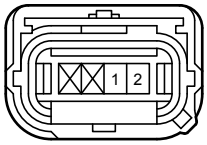


I 20
White

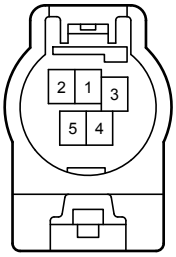


I 21
White

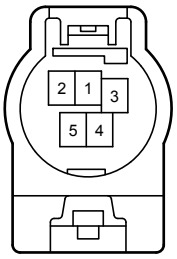


I 26
White

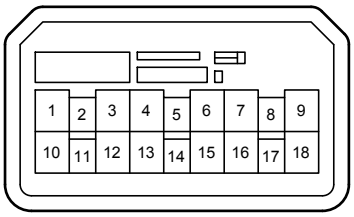


I 29
Black

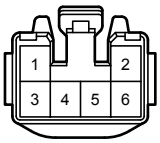


I 30
White

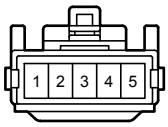

J 6
White

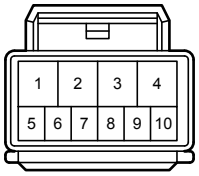

J 13
White

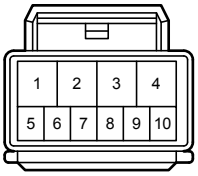


J 15
White




J 17
White




J 20
Black

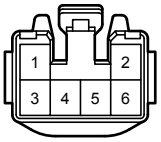


J 21
White

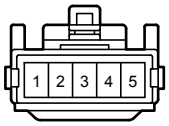

J 22
Black

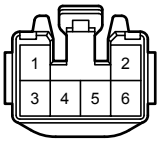

J 23
White

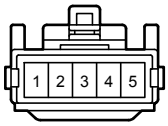

M 2
Black



O 7
Gray




O 8
Gray




f 1
Gray



f 2
Blue

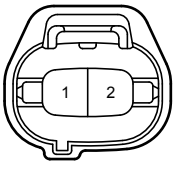

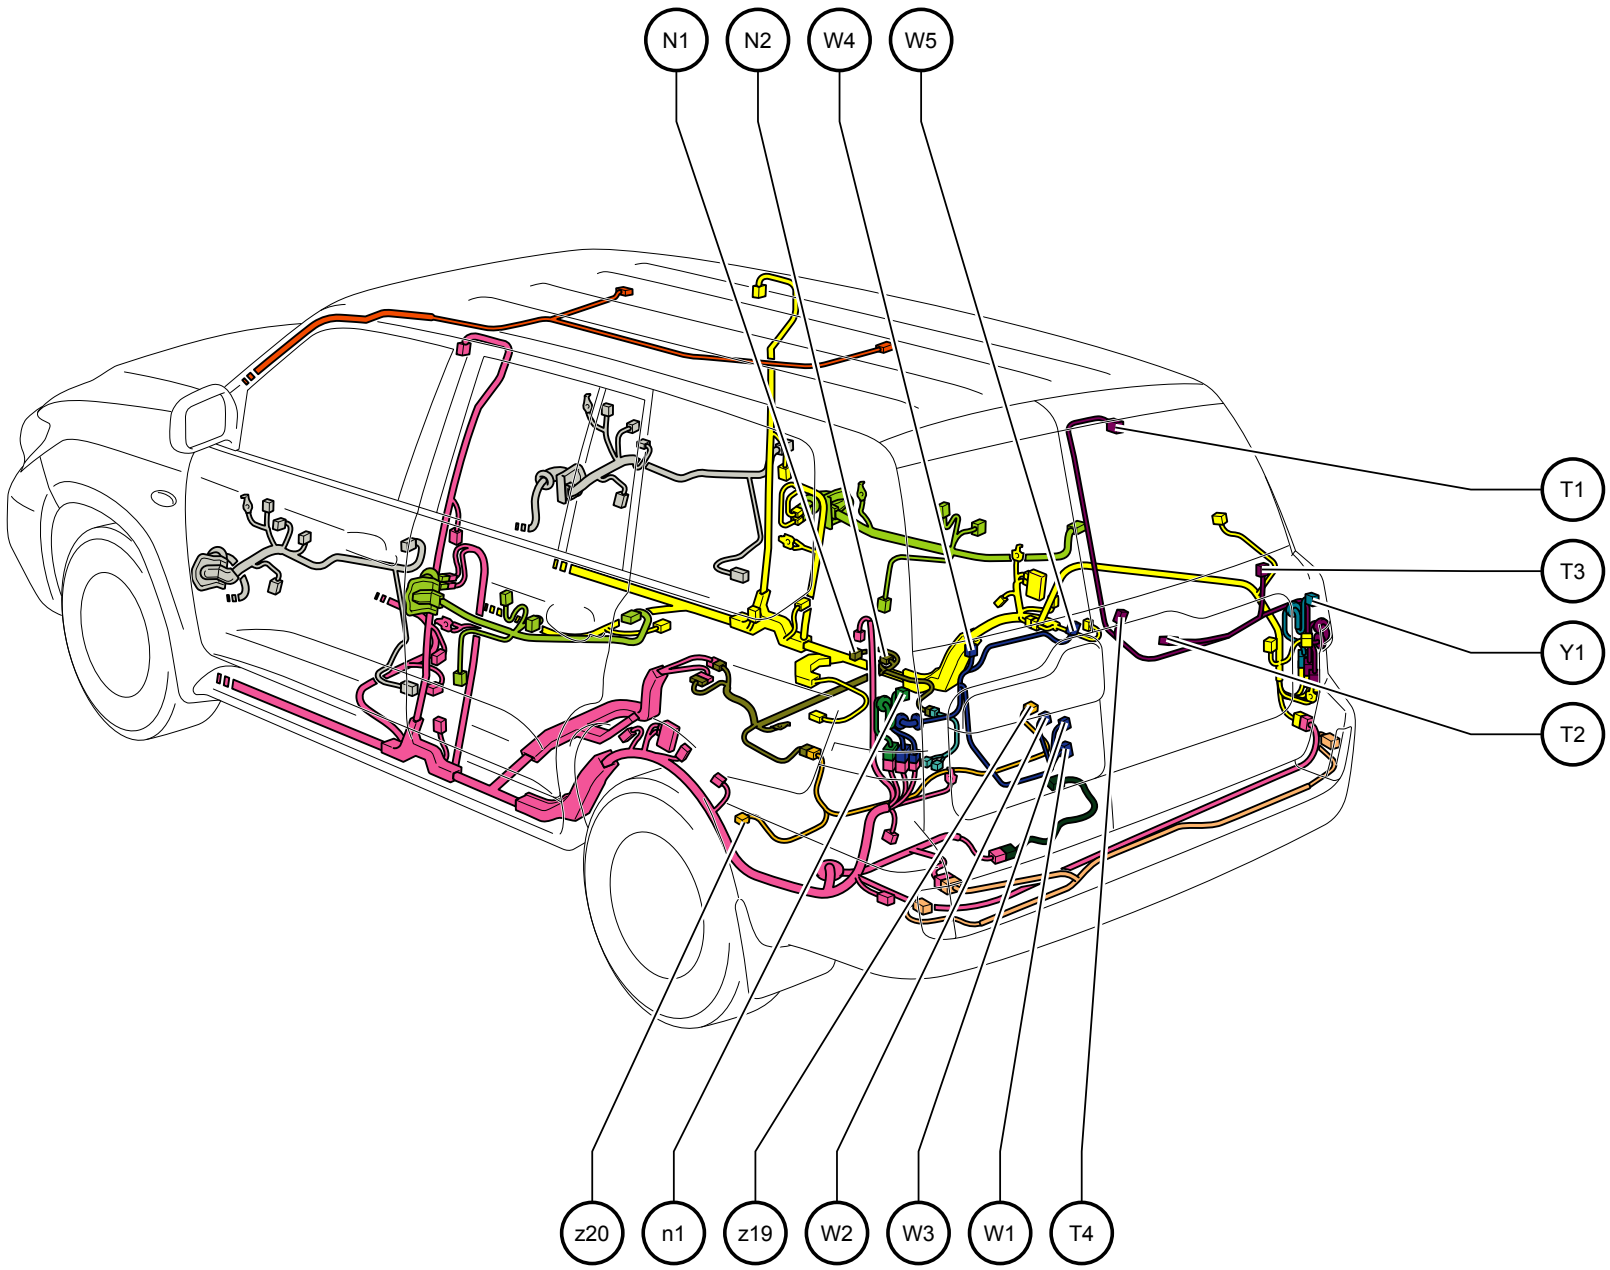
N1
N2
W4
W5
T1
T3
Y1
T2
z20
n1
z19
W2
W3
W1
T4

N 1 Fuel Sender Gage Assembly (Main)
N 2 Fuel Pump Control ECU Assembly

T 1 Center Stop Light Assembly
T 2 Rear Wiper Motor Assembly
T 3 Rear Window Defogger RH (Back Door Glass)
T 4 Rear Window Defogger RH (Back Door Glass)

W 1 Back Door Lock Assembly
W 2 License Plate Light Assembly
W 3 Back Door Courtesy Light Switch Assembly
W 4 Rear Window Defogger LH (Back Door Glass)
W 5 Rear Window Defogger LH (Back Door Glass)

Y 1 Rear Combination Light Assembly RH


n 1 Rear Combination Light Assembly LH

z 19 Rear Speed Sensor RH
z 20 Rear Speed Sensor LH


N 1
White




N 2
Black

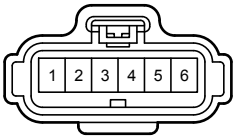

T 1
Gray



T 2
Black

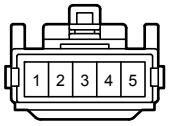

T 3
White




T 4
White




W 1
White



W 2
White



W 3
Blue

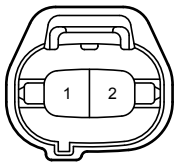

W 4
White




W 5
White



Y 1
Gray



n 1
Gray

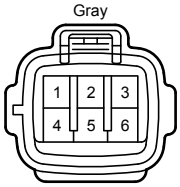


z 19
Black




z 20
Black

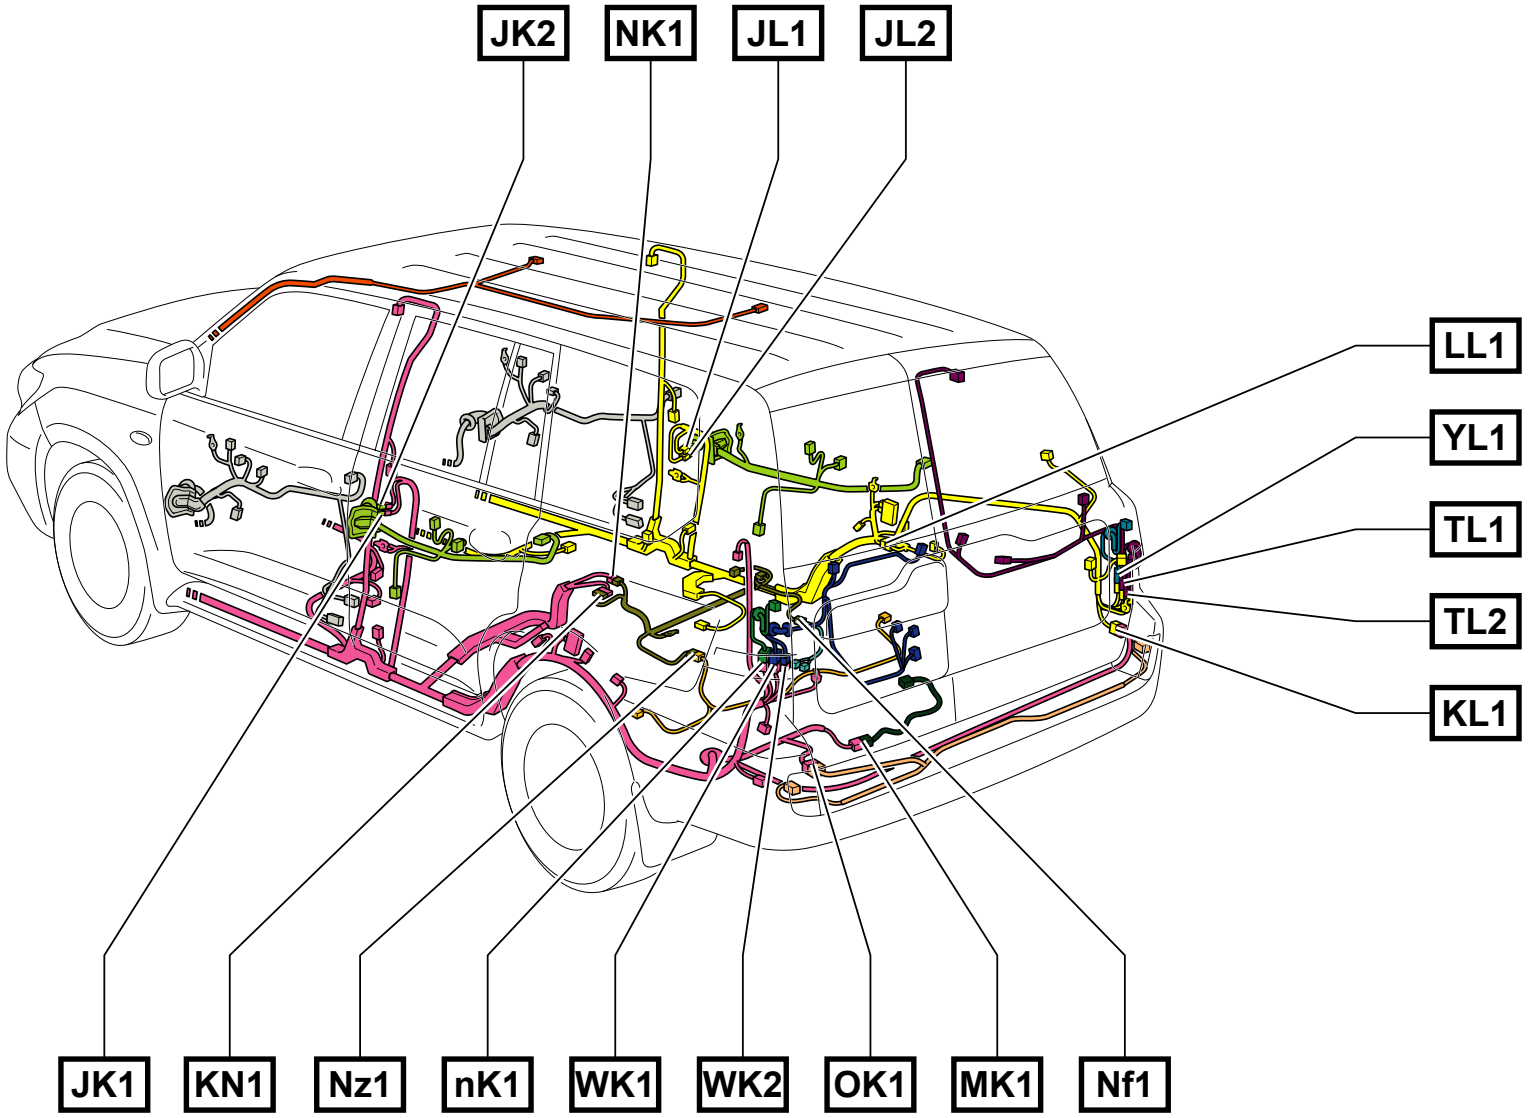



JK2
NK1
JL1
JL2
LL1
YL1
TL1
TL2
KL1
JK1
KN1
Nz1
nK1
WK1
WK2
OK1
MK1
Nf1


JK1
White

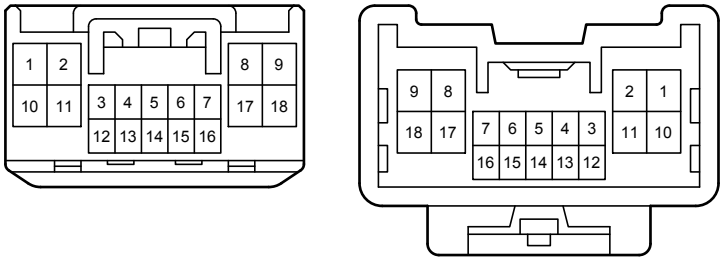


JK2
White

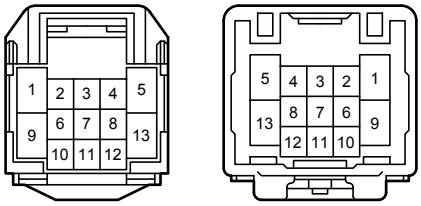


JL1
White

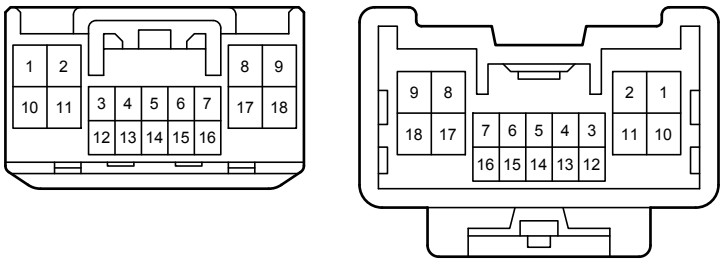


JL2
White

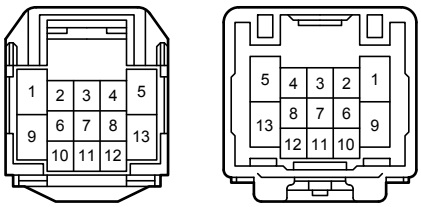


KL1
White

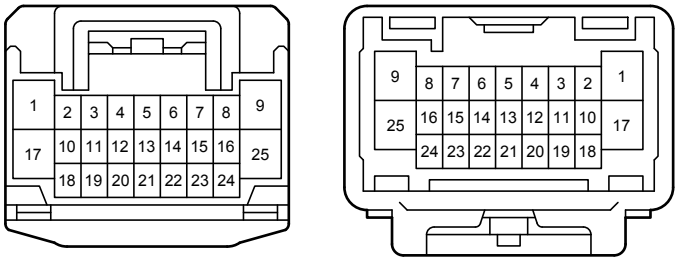


KN1
White

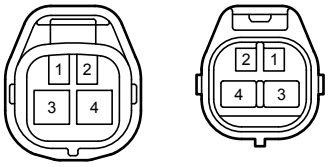


LL1
White




MK1
White

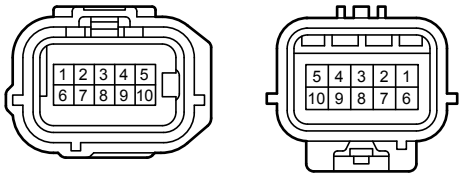

NK1
White

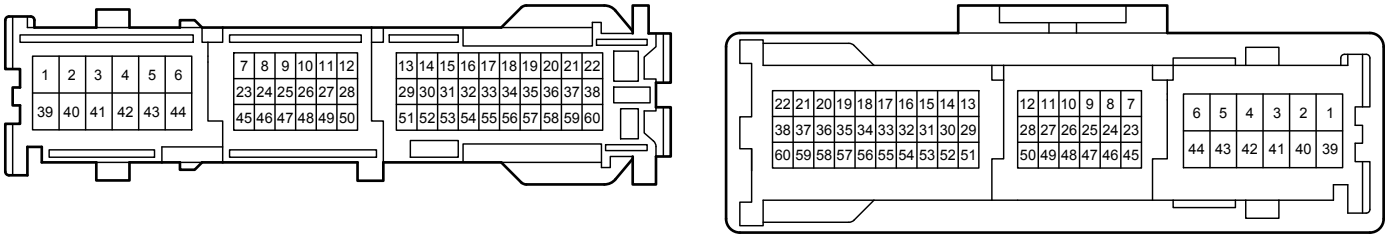

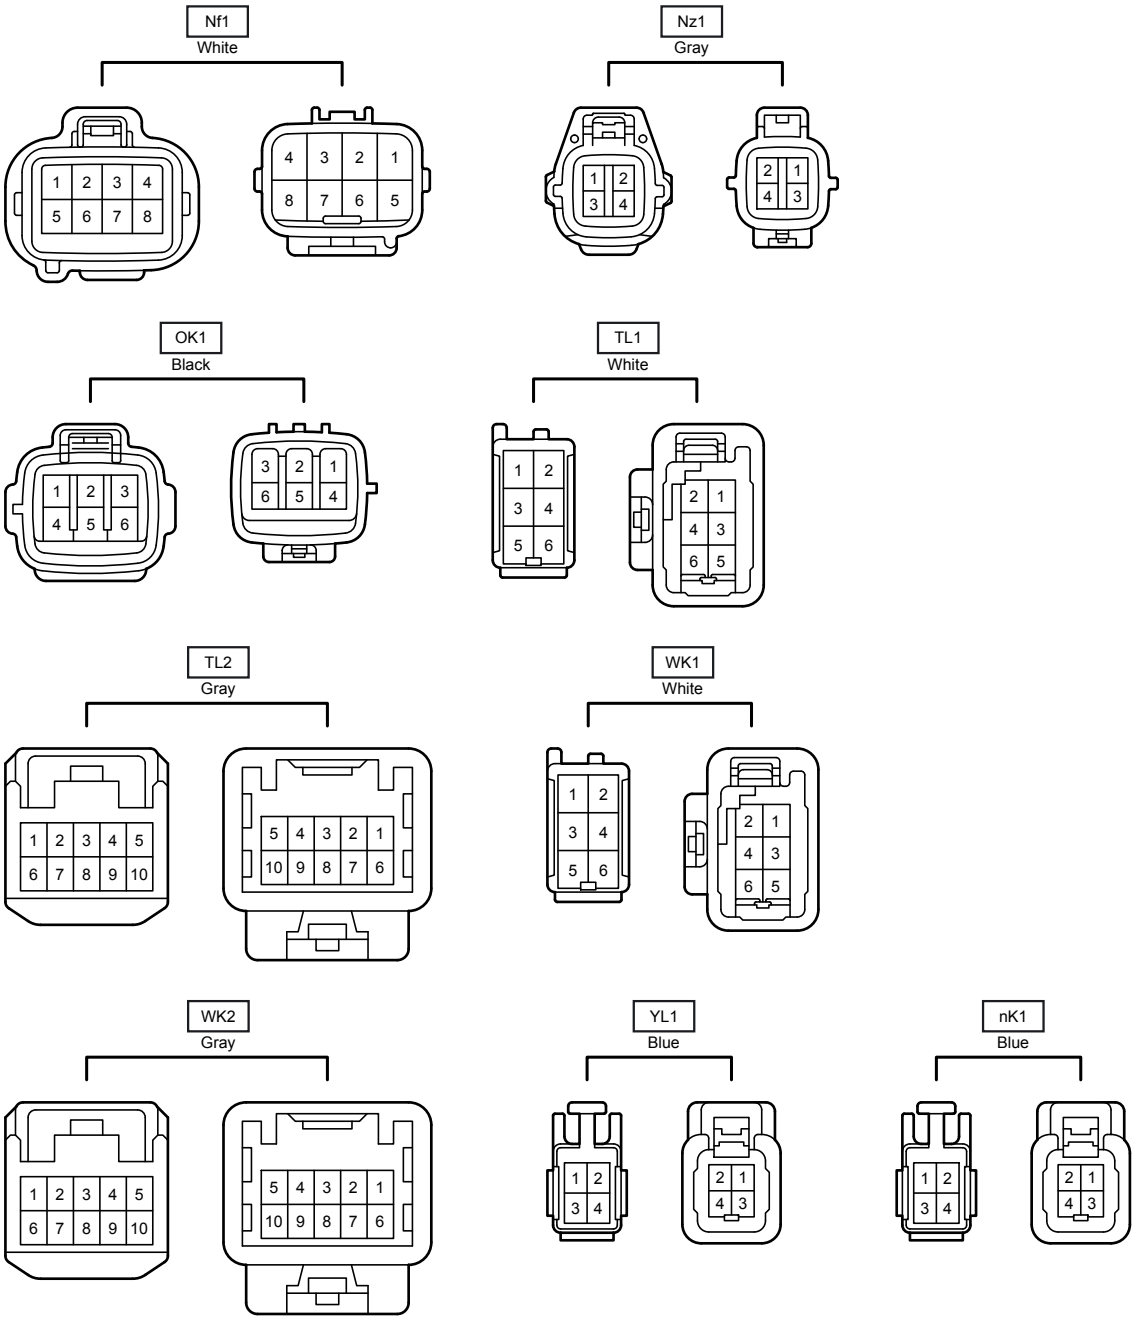
Nf1
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
Nz1
Gray
1 2
3 4
2 1
4 3
OK1
Black
1 2 3
4 5 6
3 2 1
6 5 4
TL1
White
1 2
3 4
5 6
2 1
4 3
6 5
TL2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
WK1
White
1 2
3 4
5 6
2 1
4 3
6 5
WK2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
YL1
Blue
1 2
3 4
2 1
4 3
nK1
Blue
1 2
3 4
2 1
4 3